

Media Player



Media Player	7-2
Downloading Music/Movies	7-3
Downloading Music/Movies	7-3
Saving Music/Movies from PC to Memory Card	7-3
Playing Music	7-3
Media Player Music Window	7-4
Playing Music	7-4
Playing Movies	7-5
Media Player Movie Window	7-6
Playing Movies	7-7
Using Playlist	7-8
Creating Playlist	7-8
Playing Playlist	7-8
Advanced Settings	
Music Playback	7-8
Movie Playback	7-10
Playlist	7-11

Media Player

This handset features a Media Player. Download media files via Yahoo! Keitai or create personal playlists. Learn Media Player basics here.

Playing Media Files



Play music or movies via Media Player (☛P.7-4, P.7-7). Select a music or movie file from folders or playlists.

Downloading Media Files



Access Yahoo! Keitai to download music or movies (☛P.7-3).

Creating Playlists



Add your favorite music or movies to a playlist and create your own music or movie album (☛P.7-8).

Player	File (Extension)
Music	MPEG4 Audio (mp4, m4a, 3gp (sound only))
Video	MPEG4/H.263 (mp4, 3gp)

- To play a music file in a format other than above, select it from **Ring songs · tones** folder in **Data Folder**. Even compatible files must be saved in **Ring songs · tones** folder to play.
- Use Speaker or Earphone Microphone to listen to media files. When using Speaker, remove Earphone Microphone from handset (when playing media with Earphone Microphone connected in Manner Mode, a confirmation window appears if Earphone Microphone is removed from handset).
- Use Earphone Microphone for calls as well as music listening. With Earphone Microphone connected, press Earphone Microphone Switch for 1+ seconds to answer a call.

Note

- Movie files exceeding 176 x 144 in resolution cannot be played.

Downloading Music/Movies

Access Yahoo! Keitai to download music or movies and save them to handset.

Downloading Music/Movies

Access Yahoo! Keitai and download music or movie.

1  → *Media*

2 Download music or movie

■ To download music

Music → *All music* → *Download music* or *Music search*

- Select *Music search* to access site and search music.

■ To download movie

Movie → *All movies* → *Download movies*

Note

- Downloading music or video may incur high Packet Communication charges due to large file sizes.

Saving Music/Movies from PC to Memory Card

1 Insert Memory Card into handset

- Press  → *Data Folder* →  (Memory) to confirm folders are created.

2 Remove Memory Card from handset (⊕P.11-8) and insert into PC

3 Save music/movie file on PC to the specified Memory Card folder

- Save files to the following folders by type:
Music file:PRIVATE/MYFOLDER/My Items/Music
PRIVATE/MYFOLDER/My Items/Sounds & Ringtones
Movie file:PRIVATE/MYFOLDER/My Items/Videos
- After saving files, insert Memory Card and load the files to play.

Playing Music

Folder structure of *Music* is as follows.

Folder	Description
Last played/Now playing	Last played file or current played file
All music	All playable files in <i>Music</i>
Playlists	View playable file on <i>Music</i> in created folders
Recent music	100 recently played files (Most recent played file appears first)
Most played music	100 most frequently played files (Most frequent played file appears first)
Artists	All playable files in <i>Music</i> by Artist
Albums	All playable files in <i>Music</i> by Album
Genres	All playable files in <i>Music</i> by Genre

- Memory Card files may take longer to load.
- Showing/Hiding folders can be set in *Music menu* (⊕P.13-9).

Media Player Music Window



- 1 Copyright protection
- 2 Volume level
- 3 Title (File name when title is unknown)
- 4 Artist's name
- 5 File number/Total number of files
- 6 Playing status: Play/Pause/Stop
- 7 Elapsed playing time
- 8 Repeat section
- 9 Repeat mode
 - ⏮ : Off
 - ⏮ : Repeat one
 - ⏮ : Repeat all
 - ⏮ : Shuffle
- 10 Progress bar
- 11 Total playing time

Shortcut Key Operations

Press the assigned key to perform shortcut.
Available operations vary by playing status and file type.

Key	Description
⏮	Play/Pause
⏭	Next tune
⏪	Previous tune/Beginning of current tune
🔊	Volume up
🔇	Volume down
⏹	Stop
☰	Menu
🔁	Repeat section
1 🔄	Repeat pattern setting
3 🔍	Time search

Playing Music

1 → *Media* → *Music*

2 Play a file

■ To play most recently played file

Last played

■ To select from all files

All music → Highlight a file → (Play)

■ To select from playlist

Playlists → Select a playlist → Highlight a file → (Play)

■ To select from list of recently played files

Recent music → Highlight a file → (Play)

■ To select from list of often played files

Most played music → Highlight a file → (Play)

■ To select from list of Artists

Artists → Select an Artist → Highlight a file → (Play)

■ To select from list of Albums

Albums → Select an Album → Highlight a file → (Play)

■ To select from list of Genres

Genres → Select a genre → Highlight a file → (Play)

- Highlight **All music** or playlist name and press (Play) to play all the appropriate files in list.
- Press (Pause) to pause. To resume playback, press (Play).
- To end playback and return to list window, press (Stop) and press . However, pressing while displaying menu or operating menu closes menu or returns to previous window.
- When Memory Card is inserted, Memory Card files appear in **All music** list with
- If an incoming call arrives while music is playing on Media Player window, playback pauses and ringtone sounds. When the call ends, the playback remains in pause and Music playback window reappears.
- If Alarm is set while a file is playing on Player window, playback pauses, Alarm sounds and indicator appears at the set time. Press any key to stop Alarm and clear the indicator.

Advanced

Advanced Settings P.7-8

- Searching Files by Title or Artist Name
- Adding Files to Playlist
- Sending Files
- Sorting Files
- Purchasing or Acquiring Content Key
- Deleting Files
- Renaming File
- Protecting File to Restrict Changing or Deleting
- Viewing File Details
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist
- Playing from Specified Point
- Connecting to Web Link
- Checking Shortcut Key Assignments

Settings

- Set Repeat mode (P.13-9)
- Adjust Tone volume level (P.13-9)
- Set Music sub folders (P.13-9)

Playing Movies

Folder structure of **Movie** is as follows.


Folder	Description
Last played	Most recently played file
All movies	View all playable files in Movie
Playlists	View playable files in Movie in created folders
Recent movie	100 recently played files (Most recently played file appears first)
Most played movie	100 frequently played files (Most frequently played file appears first)

- Showing/Hiding folders can be set in **Movie menu** (P.13-10).

Note

- Deleting files or changing file settings in **All movies** folder affects folders in **Movie** in **Data Folder**.

Media Player Movie Window

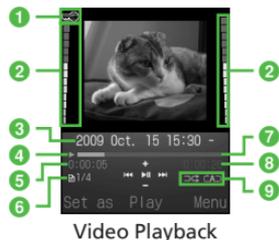

- 1 Copyright protection
- 2 Volume level
- 3 Video title (or file name when title is unknown) and artist's name
- 4 Playing status: Play/Pause/Stop
- 5 Elapsed playing time
- 6 File number/Total number of files
- 7 Progress bar
- 8 Total playing time
- 9 Repeat mode
 - ⏮ : Off
 - ⏮ : Repeat one
 - ⏮ : Repeat all
 - ⏮ : Shuffle

Shortcut Key Operations

Press the assigned key to perform shortcut. Available operations vary by playing status and file type.

Normal Screen Display (Portrait)

Key	Description
	Play/Pause
	Next clip
	Previous clip/Beginning of current clip
	Volume up
	Volume down
	Stop
	Menu
	Repeat section
	Repeat pattern setting
	Full Screen View
	Time search
	Switch display size
	Screen capture
	Play faster
	Play slower

Full Screen View (Landscape)

Key	Description
	Play/Pause
	Volume up
	Volume down
	Next clip
	Previous clip/Beginning of current clip
	Repeat section
	Repeat pattern setting
	Normal screen display
	Screen capture
	Play faster
	Play slower

Playing Movies

1  → **Media** → **Movie**

2 **Play a file**

■ To play most recently played file

Last played

■ To select from all files

All movies → Highlight a file →

 (Play)

■ To select from playlist

Playlists → Select a playlist → Highlight a file →  (Play)

■ To select from list of recently played files

Recent movie → Highlight a file →

 (Play)

■ To select from list often played files

Most played movie → Highlight a file →

 (Play)

- Highlight *All movies* or playlist name and press  (Play) to play all the appropriate files in list.
- Press  (Pause) to pause. To resume playback, press  (Play).
- To end playback and return to list window, press  (Stop) and press . However, pressing  while displaying menu or operating menu closes menu or returns to previous window.
- When Memory Card is inserted, Memory Card files appear in *All movies* list with .

Advanced

Advanced Settings P.7-10

- Searching Files by Title or Artist Name
- Adding Files to Playlist
- Sending Files
- Sorting Files
- Purchasing or Acquiring Content Key
- Deleting Files
- Renaming File
- Protecting File to Restrict Changing or Deleting
- Viewing File Details
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist
- Displaying Video in Full Screen
- Changing Display Size
- Playing from Specified Point
- Capturing Still Image from Video
- Connecting to Web Link
- Changing Playback Speed
- Checking Shortcut Key Assignments

Settings

- Set Repeat mode ( P.13-10)
- Adjust Tone volume level ( P.13-10)
- Set Backlight ( P.13-10)
- Set Video sub folders ( P.13-10)

- Show or hide Video thumbnails ( P.13-10)
- Access or ignore linked information ( P.13-10)

Using Playlist

Create playlist to make your own album.

Creating Playlist

Create up to 20 playlists, containing up to 100 files each.

- 1  → *Media* → *Music* or *Movie* → *Playlists* →  → *Create playlist*
- 2 Enter playlist name
- 3 Select created playlist
- 4  → *Add* → *Files*
- 5 Check files to save →  (Save)

Playing Playlist

- 1  → *Media* → *Music* or *Movie* → *Playlists*
- 2 Highlight a playlist to play →  (Play)

- Playlist cannot be played if included file has been deleted, or file is added from Memory Card and Memory Card is removed. Insert Memory Card and load file to play.

Advanced

 **Advanced Settings**  P. 7-11

- Creating Playlist Including All Files in Existing Playlist

Advanced Settings

Music Playback

Setting Files to Ringtone in Normal Mode

 → *Media* → *Music* → Select a folder → Highlight a file →  (Set as) → Select an item

- Alternatively, pause in Music playback window, press  (Set as).
- This operation is not available for files that cannot be added to ringtone.

Searching Files by Title or Artist Name

 → *Media* → *Music* → *All music* →  → *Search files* → Check items to check → Select Search field → Enter title or artist name →  (Search)

Adding Files to Playlist

 → *Media* → *Music* → *All music*

To add an item

Highlight a file to add →  → *Add to playlist* → *Selected* → Select a playlist

To add multiple items

 → *Add to playlist* → *Multiple* → Check files to add →  (Save) → Select a playlist

Sending Files

■ → **Media** → **Music** → Select a folder → Highlight a file →  → **Send**

■ To send via message

Via message → (ⓧ P.4-4 S! Mail )

■ To send via infrared

Via infrared (ⓧ P.12-3)

Sorting Files

■ → **Media** → **Music** → **All music** →  → **Sort by** → Select an item

- Sorting order is set to default when returning to Standby.

Purchasing or Acquiring Content Key

■ → **Media** → **Music** → Select a folder → Highlight a file →  → **Download Content key**

Deleting Files

■ → **Media** → **Music** → Select a folder

■ To delete an item

Highlight a file →  → **Delete** → **Selected** → **Yes**

■ To delete multiple items

 → **Delete** → **Multiple** → Check files to delete →  (Delete) → **Yes**

■ To delete all items

 → **Delete** → **All** → **Yes**

- To delete all files in **All music** folder, entering Phone Password is required.

Renaming File

■ → **Media** → **Music** → **All music** → Highlight a file →  → **Rename** → Enter file name

Protecting File to Restrict Changing or Deleting

■ → **Media** → **Music** → **All music** → Highlight a file →  → **Lock** or **Unlock**

Viewing File Details

■ → **Media** → **Music** → Select a folder → Highlight a file →  → **Details**

- Alternatively, in Music playback window, press .

Changing Order of Files in Playlist

■ → **Media** → **Music** → **Playlists** → Select a playlist → Highlight a file →  → **Move track in playlist** → Highlight a destination with  →  (OK)

Renaming Playlist

■ → **Media** → **Music** → **Playlists** → Highlight a playlist →  → **Rename** → Enter playlist name

Deleting Playlist

■ → **Media** → **Music** → **Playlists**

■ To delete an item

Highlight a playlist →  → **Delete** → **Selected** → **Yes**

■ To delete all items

 → **Delete** → **All** → Enter Phone Password →  (OK) → **Yes**

Playing from Specified Point

In Music playback window,  → **Time search** → Enter duration →  (Play)

Connecting to Web Link

In Music playback window,  → **Connect web link** → **Yes**

- The files that can be connected to web link, , appears in Music playback window.

Checking Shortcut Key Assignments

In Music playback window,  → **Shortcut**

Movie Playback

Setting Files to Ringtone in Normal Mode

- **Media** → **Movie** → Select a folder → Highlight a file → (Set as) → Select an item
- Alternatively, pause in Video playback window, press (Set as).
 - This operation is not available for files that cannot be added to ringtone.

Searching Files by Title or Artist Name

- **Media** → **Movie** → **All movies** → → **Search files** → Check items to check → Select Search field → Enter title or artist name → (Search)

Adding Files to Playlist

- **Media** → **Movie** → **All movies**
- To add an item**
 Highlight a file to add → → **Add to playlist** → **Selected** → Select a playlist
- To add multiple items**
 → **Add to playlist** → **Multiple** → Check files to add → (Save) → Select a playlist

Sending Files

- **Media** → **Movie** → Select a folder → Highlight a file → → **Send**
- To send via message**
Via message → (P.4-4 S! Mail)
- To send via infrared**
Via infrared (P.12-3)

Sorting Files

- **Media** → **Movie** → **All movies** → → **Sort by** → Select an item

Purchasing or Acquiring Content Key

- **Media** → **Movie** → Select a folder → Highlight a file → → **Download Content key**

Deleting Files

- **Media** → **Movie** → Select a folder
- To delete an item**
 Highlight a file to delete → → **Delete** → **Selected** → **Yes**
- To delete multiple items**
 → **Delete** → **Multiple** → Check files to delete → (Delete) → **Yes**
- To delete all items**
 → **Delete** → **All** → **Yes**
- To delete all files in **All movies** folder, entering Phone Password is required.

Renaming File

- **Media** → **Movie** → **All movies** → Highlight a file → → **Rename** → Enter file name

Protecting File to Restrict Changing or Deleting

- **Media** → **Movie** → **All movies** → Highlight a file → → **Lock** or **Unlock**

Viewing File Details

- **Media** → **Movie** → Select a folder → Highlight a file → → **Details**
- Alternatively, in Video playback window, press .

Changing Order of Files in Playlist

- **Media** → **Movie** → **Playlists** → Select a playlist → Highlight a file to move → → **Move track in playlist** → Highlight a destination with → (OK)

Renaming Playlist

- **Media** → **Movie** → **Playlists** → Highlight a playlist → → **Rename** → Enter playlist name

Deleting Playlist

■ → *Media* → *Movie* → *Playlists*

■ To delete an item

Highlight a playlist to delete →  → *Delete* → *Selected* → *Yes*

■ To delete all items

 → *Delete* → *All* → Enter Phone Password
→  (OK) → *Yes*

Displaying Video in Full Screen

In Video playback window,  → *Full screen view*

Changing Display Size

In Video playback window,  → *Resolution*
→ Select an item

Playing from Specified Point

In Video playback window,  → *Time search*
→ Enter duration →  (Play)

Capturing Still Image from Video

In Video playback window,  → *Capture frame* →  (Save)

Connecting to Web Link

In Video playback window,  → *Connect web link* → *Yes*

- The files that can be connected to web link,  appears on Video playback window.

Changing Playback Speed

In Video playback window,  → *Playback speed* → Select an item

- Sound is muted while changing playback speed.

Checking Shortcut Key Assignments

In Video playback window,  → *Shortcut*

Playlist

Creating Playlist Including All Files in Existing Playlist

■ To create music playlist

■ → *Media* → *Music* → *Playlists* → Select a playlist →  → *Add* → *Playlist* → Select a playlist to add all files

■ To create video playlist

■ → *Media* → *Movie* → *Playlists* → Select a playlist →  → *Add* → *Playlist* → Select a playlist to add all files

