SoftBank 821P

User Guide

SoftBank

Introduction

Thank you for purchasing SoftBank 821P.

- For proper handset use, read User Guide (this manual) and First Step Guide.
- Please keep this manual in a safe place for future reference.
- Accessible services may vary by service area, subscription, etc.

SoftBank 821P is compatible with both 3G and GSM network technologies.

Note

- Unauthorized copying of any part of this manual is prohibited.
- Manual content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this manual. Please contact SoftBank Customer Center, General Information (P.17-40) about unclear or missing information.

User Guide (Japanese), First Step Guide and Raku Raku Start Book (Japanese) are included with 821P. The function of each manual is as follows.

- First Step Guide/Raku Raku Start Book: Basic instructions.
- User Guide: Detailed instructions.
- Tsukaikonashi Dokuhon (Japanese): Online advanced instructions.
 - Tsukaikonashi Dokuhon is available for download: http://www.softbank.jp/mb/t/support/821p/ (PC) http://broadband.mb.softbank.jp/f/manual/821p/ (handset)



Function/Service Name Search		Index	⊡ P.17-32
		Contents	⊈ P.vi
		Objective Search	⊈ P.ii
Objective Search		Index	⊆ P.17-32
Franction Coonst		Overview	≟ P.iv
Function Search		Contents	⊈ P.vi
Using Your Handset	•	Function List	≟ P.17-8
		Display	⊆ P.1-8
Manual Organization	•	Contents	⊈ P.vi
		Section Contents 🗗 Chapter Top Pages	
Solving		Troubleshooting	≟ P.17-15
Problems		Warranty & Service	∟ 2 P.17-39

Getting Started	1
Basic Operations	2
Text Entry	3
Phone Book	4
Video Call	5
Camera	6
Entertainment	7
Managing Files	8
Connectivity	9
Handset Security	10
Tools/Bar Code Reader	11
Messaging	12
Internet	13
S! Appli	14
Communication	15
Settings	16
Appendix	17

Confirming & Using My Number & My Mail Address

My Phone Number

Confirm your phone number on 821P in Standby without navigating menus.

My Number: P.2-11

My Mail Address

Customized address may reduce spam.

Customizing Handset Address: □P.12-4

Customizing 821P Settings

Downloading Tunes & Tones

Download music (Chaku-Uta®/Chaku Uta Full®) files from mobile websites.

Downloading Music: P.7-3

Setting Ringtones

Set Chaku-Uta®, Chaku-Uta Full® or Ringtone Flash® files as ringtones.

Ringtones: P.16-2

Mastering Basics

Learning Your Handset

Learn key assignments, and navigate menus to select & execute functions.

Handset Menus: ☐ P.1-19 Parts & Functions: FP.1-5

Making Mobile Calls

Use voice telephony or enjoy video telephony with compatible mobiles.

Voice Calls: ☐ P.2-2 Video Calls: ☐ P.5-3

Fun Stuff

Media Player

Download music/video files from websites via Media Player directly.

Media Player: ☐ P.7-2



Camera & Video Camera



Pictures: 1 ₹ P.6-6

Sending My Contact Info

Save mail address and other details; send to compatible devices wirelessly.

Account Details: P.4-13

Messaging Multiple Recipients

Enter multiple mail addresses/numbers to send a message to all at one time.

Sending Messages: P.12-4
Adding/Editing Recipients: P.12-15

Sending Files Wirelessly

Send files or your own mail address saved in Account Details wirelessly to other compatible devices.

Sending Account Details: ☐ P.4-13

Customizing Standby Display

Add wallpaper, set clock size/position or set calendar to appear in Standby.

Wallpaper: 🗗 P.8-9 Display: 👉 P.16-4

Customizing User Interface

Download applications that mimic the interface design of previously used handsets.

S! Familiar Usability: 🗗 P.1-21

Using Shortcuts to Functions

Access shortcuts to frequently used functions in Standby.

Standby Window: 🗗 P.1-17

Mastering Text Entry Methods

Enter text for Messaging functions or to add/edit Phone Book entry items.

Text Entry: ☐ P.3-1

Using Messaging Services

Send both short or long text messages. Attach image/sound files, etc. to S! Mail.

Accessing the Mobile Internet

Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.

Yahoo! Keitai: 🗗 P.13-2

Playing Games

Download and install S! Application Games via Yahoo! Keitai.





Getting News (Japanese)

Set up S! Quick News to view a variety of information contents.

S! Quick News: 🗗 P.13-15

821P Features

Simple Mode

Activate Simple Mode for easy operation; increase font size and Earpiece Volume.

□P.1-22

Bar Code Reader

Scan UPC or OR Codes. Access sites or send messages, etc. via QR Codes.

₽P.11-11

SoftBank Mobile **Features**

Yahoo! Keitai

Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.

□P.13-2

Arrange Mail

Create HTML messages; select font color/size, background; insert images.

△P.12-6

Useful Features

S! Addressbook Back-up

Save Phone Book entries: back up handset entries on Server, etc.

₽P.4-10

Feeling Mail

Add Pictographs, matching ringtones, vibration and notification light to messages.

₽.12-6 ₽.12

PC-related **Functions**

PC Site Browser

View PC-based websites on 821P. Select Small Screen or PC Screen.

□P.13-5

Data Back-up/Management

Transfer data between handset and PC for back-up and editing.

Infrared: P.9-2 Bluetooth®: P.9-5 USB: [3 P.9-10

e-Book Viewer/BookSurfing® (Japanese)

Download e-media, like e-books, e-comics, and e-photobooks on 821P.



Near Chat (Japanese)

Exchange text messages with SoftBank handsets via Bluetooth®.



Memory Card

Extend 821P internal memory or back-up handset files, etc.



⊈P.8-15

S! Familiar Usability

Download applications that install previously used handset model interfaces.

௴P.1-21

S! Town & S! Loop (Japanese)

Enjoy these unique SoftBank Mobile communication services on 821P.

1 P.15-2, P.15-3

Calendar & Alarm

Add events by time/date and set Event Alarms to help manage your schedule.

□P.11-2, P.11-6

Media Player

Play 821P/Memory Card music/video files; stream media via Yahoo! Keitai.



Ľ₹P.7-2

Contents

Contents	vi
Package Contents	viii
Using This Manual	
Safety Precautions	
Handling Precautions	
Copyrights and Others	xxiii
Specific Absorption Rate (SA	
40.01.00.1	

1.Getting Started

USIM Card	1-2
Parts & Functions	1-5
About Battery	1-11
Handset Power On/Off	
Information in Standby	1-16
Handset Menus	1-19
Simple Mode	
Passwords	

2.Basic Operations

3.Text Entry

Text Entry	3-2
Entering Characters	
Conversion Methods	
(Japanese)	3-8
Editing Text	3-10
Advanced Features	

4.Phone Book

III III DOUN	
Overview	4-2
Saving to Phone Book	4-3
Editing Phone Book Entries	4-6
Group Settings	4-7
Searching/Using Phone Book	4-8
S! Addressbook Back-up	4-10
Account Details	4-13
Advanced Features	4-14

5.Video Call

Getting Started	5-2
Making Video Calls	
Answering Video Calls	
Video Call Operations	

6.Camera

Before Using Camera Pictures Videos Other Camera Functions	6-6 6-8 6-10
Camera Settings	
Viewing Saved Images	
Advanced Features	0-14
7.Entertainment Media Player	7 7
E-Books (Japanese)	/-10
8.Managing Files	
Data Folder	8-2
Opening Files	8-5
Using Files	
Editing Still Images	
Managing Folders & Files	
Memory Card	
9.Connectivity	
Infrared	9-2

Bluetooth® 9-5 USB (Japanese) 9-10 Location Settings 9-10

10.Handset Security	13.Internet	16.Settings
Changing Handset Code 10-2	Getting Started 13-2	Sound & Vibration 16-2
USIM PINs 10-2	Using Yahoo! Keitai 13-3	Display 16-3
Security Functions 10-4	Using PC Site Browser 13-5	Date & Time 16-6
Reject Incoming Calls 10-5	Basic Operations 13-7	Notification Light 16-7
Secret Mode Setting 10-7	Using Information 13-9	Keypad 16-7
Reset 10-7	Option Menu Items 13-14	Call Settings 16-8
44 = 1 (2 4 1 2 1	S! Quick News (Japanese) 13-15	Mode Settings 16-11
11.Tools/Bar Code Reader	Advanced Features 13-17	Phone Book 16-12
Calendar 11-2	44414	Video Call 16-12
Alarms 11-6	14.S! Appli	Bluetooth® 16-13
Calculator 11-9	Before Using S! Appli 14-2	Messaging 16-14
Memo Pad 11-9	Using S! Appli 14-3	Internet 16-18
Voice Recorder 11-10	Advanced Features14-4	S! Appli 16-22
Bar Code Reader11-11	45.6	47.4
Advanced Features 11-13	15.Communication	17.Appendix
42 Massaulus	S! Town (Japanese) 15-2	Optional Services 17-2
12.Messaging	S! Loop (Japanese) 15-3	Function List 17-8
Basics 12-2	Near Chat (Japanese) 15-4	Troubleshooting 17-15
Sending S! Mail & SMS 12-4		Software Update17-18
Receiving &		Character Code List 17-20
Viewing Messages 12-9		Pictograph List 17-28
Incoming Mail Folder 12-13		Symbol List 17-29
Using Messages12-14		Memory List 17-30
Advanced Features 12-15		Specifications 17-31
		Index 17-32
		Warranty & Service 17-39

Customer Service 17-40

Package Contents

☐ Handset (821P)

□ Battery (PMBAE1)

☐ User Guide (Japanese) ☐ First Step Guide



☐ Raku Raku Start Book (Japanese) ☐ Utility Software (CD-ROM)*









- Use SoftBank specified AC Charger (sold separately) to charge battery.
- For more information about AC Charger and accessories, please contact SoftBank Customer Center, General Information (**⊈**P.17-40).
- Optional battery is available for separate purchase.
- 821P accepts microSD Card (not included). Purchase microSD Card to use related functions.
 - Use microSD Cards up to 2GB (September, 2007). Memory Card compatibility is not guaranteed.
 - microSD Card is referred to as "Memory Card" in this manual.


^{*} Utility Software (Japanese) updates/upgrades may be released on SOFTBANK MOBILE Corp. Website (http://www.softbank.jp) without prior notification. Please check for the newest versions of utility applications and download if required.

Using This Manual

In this manual, SoftBank 821P User Guide, SoftBank 821P is abbreviated as 821P.


Manual Symbols

Press the corresponding key to execute the function or operation indicated at the bottom of Display.

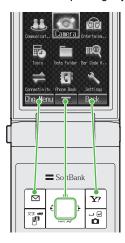



 Use Multi Selector to select items, navigate menus, etc. In this manual, Multi Selector operations are indicated as shown below.



Basic Multi Selector Operations

- 🔄 : Press 🔄 or 💁
- 🚉 : Press 🚉 or 🤹
- 🔟 : Press 💁, 💁, 🏚 or 鎮

Softkeys

In this manual, Softkey operations are indicated as shown below.

Left Softkey ☑[Chg.Menu]

 [Chg.Menu] and [Back] are Softkey label examples; Softkey labels vary by menu.

Right Softkey

Y7 [Back]

Screenshots

Sample screenshots, etc. are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.


Japanese Functions & Services

When "(Japanese)" appears in a title, Japanese ability is required to use full range of the function or service.

Operation Descriptions

Following are examples of operation descriptions. Please note, actual operations may differ.

Basic Operations

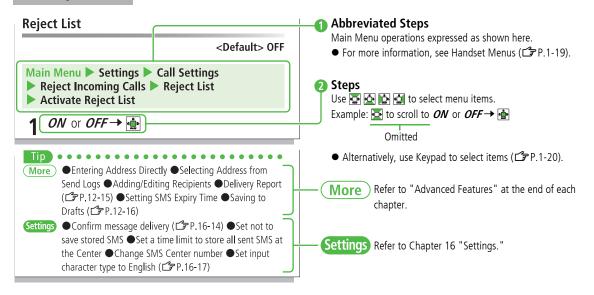

Advanced Operations

More Advanced Features

From Composition Window] [Text Entry Window]
S! Mail: P.12-4, P.12-5/SMS: P.12-8
[Message List Window] [Message Window] P.12-10

Adding Recipients/Attachments

Entering Address Directly [Enter Number or Enter Address]

-(Composition Window) <Add Address> → ♠ → Enter Number or Enter Address → ♠ → Select a SoftBank handset number or mail address → ♠

Selecting Address From Send Logs [Send Logs]

[Composition Window] <Add Address> → ♠ → Send Logs → ♠ → Select a record → ♠ From these windows, proceed to advanced operations.

See indicated pages for preceding steps.

Example: [Composition Window], see P.12-4

② Go to indicated page(s) and follow instructions to open window.

Example: [Composition Window]

3 Proceed from here.

1 In Standby, press and hold

[□]



Settings

Settings Messaging

Universal Settings

Ц	From ▶ Main Menu ▶ Messaging ▶ Settings ▶ Universal Settings		
l	Settings	Operation	Default
	Clamshell Control: Open Incoming Mail folder automatically by opening 821P for new messages*1	Clamshell Control → \bigoplus → ON → \bigoplus	OFF (not open)

Initial steps are described here. Follow these steps then proceed to respective steps (explained in chart, under "Operation").

Tsukaikonashi Dokuhon (Japanese)

Tsukaikonashi Dokuhon provides supplemental information for effective use of 821P.

Download Tsukaikonashi Dokuhon from SOFTBANK MOBILE Corp.

 
Website (☐ Right) and read it using e-Book Viewer.



Scan QR Code shown to the right and download Tsukaikonashi Dokuhon free of charge.



http://broadband.mb.softbank.jp/f/manual/821p/



To download Tsukaikonashi Dokuhon to PC, enter URL below and access the website.

http://www.softbank.jp/mb/r/support/821p/

Safety Precautions

- Before use, read these safety precautions carefully and use your handset properly. Keep this manual in a safe place for future reference.
- ■These safety precautions contain information intended to prevent bodily injury to the user and to surrounding people, as well as damage to property, and must be observed at all times.
- ■These symbols indicate exposure levels to bodily harm from failure to observe cautions or improper usage:

\triangle	Danger	Great risk of death or serious injury from improper use
Ŵ	Warning	Risk of death or serious injury from improper use
<u> </u>	Caution	Risk of injury or damage to property from improper use

■Symbol Explanations

\bigcirc	Prohibited Action	
	Disassembly Prohibited	
8	Avoid Moisture	
	Always Dry Hands First	
0	Compulsory Action	
	Disconnect Power Source	

Handset, Battery & Charger (not included)



Danger



Use specified battery, charger and holder.
The use of devices other than those specified may result in malfunction of handset or battery. Leaking, overheating, explosion or fire may occur.



Do not get handset, battery and charger wet. If liquids such as water or pet urine get into battery and charger, they may cause overheating, electric shock or malfunction. Do not use handset in damp places like bathrooms.



Do not disassemble or modify handset.

May cause accidents such as fire, bodily injury, electric shock or equipment malfunction.



Warning



Do not place handset, battery or charger inside cooking appliances, such as microwave ovens or high-pressure containers.

Battery may leak, overheat, explode or catch fire, and handset and charger may overheat, emit smoke or catch fire. The internal circuit may also be damaged.



Do not throw or otherwise subject to strong force or impacts.

Battery may leak, overheat, explode, catch fire, or cause damage to handset.



Keep handset off and charger disconnected in filling stations or places where flammable gas is generated. Handset use in such areas may lead to fire.



If battery does not charge after specified time, stop charging.

Battery may leak, overheat, explode or catch fire.



Caution



Do not use or leave handset or related hardware in locations subject to high temperatures, such as near an open flame/heater, in sunlight or inside a car on an extremely hot day.

Do not charge, leave, use, or be carrying handset or related hardware in a warm place or where heat collects, such as under a kotatsu (blanketed warming table) or electric blanket, next to a kairo (worn warming patch), etc.

Battery may leak, overheat, explode, or ignite. Handset or related hardware may deform or malfunction. Part of the casing may also become hot and cause burns.



Do not use handset in dusty places. May hinder heat release, or cause burnout or fire.



Keep handset out of the reach of young children. May result in electric shock or bodily injury.



If for use by child, guardian should teach proper handling and ensure handset is used as directed. May result in bodily injury.

Battery



Danger

See battery label to confirm battery type.

Label	Battery Type
Li-ion	Lithium-ion



Do not throw battery into fire.

Battery may leak, overheat, explode or catch fire.



Do not pierce battery with a nail or other sharp object, hit it with a hammer, or step on it. Battery may leak, overheat, explode or catch fire.



Do not use excessive force to attach battery to handset even when you cannot attach it successfully. Battery may be the wrong way around. Battery may leak, overheat, explode or catch fire.



Do not touch terminals with metallic objects or carry/ store battery with metal jewelry, etc. Battery may leak, overheat, explode or catch fire.



If battery fluid gets into eyes, do not rub; flush with clean water and see a doctor immediately. Failure to do so may cause blindness.



Warning



If battery leaks or emits an unusual odor, immediately stop use and move it away as far as possible from any flame or fire.

> Battery fluid is flammable and could ignite, causing fire or explosion.



If battery leaks or emits an unusual odor, immediately remove it away from handset.

Battery may leak, overheat, explode or catch fire.



If battery fluid comes into contact with your skin or clothing, stop using handset immediately and rinse it off with clean water

Battery fluid is harmful to your skin.



Caution



Do not dispose of battery with ordinary refuse. May cause fire and environmental damage. Place tape over the terminals to insulate battery, and take it to a SoftBank retailer or institution that handles used batteries in your area.

Handset



Warning



Do not use handset while driving a vehicle. Doing so may interfere with safe driving and cause an accident. Stop your vehicle to park in a safe place before using handset. Drivers using handsets while driving are subject to prosecution.



Turn off handset near high-precision electronic devices or devices using weak electronic signals. Handset may possibly cause these devices to malfunction.

*Electronic devices that may be affected: Hearing aids, implantable cardiac pacemakers, implantable cardioverter defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices. Persons using an implantable cardiac pacemaker or cardioverter defibrillator, or other electronic medical devices, should consult the device manufacturer or vendor for advice on possible radio wave effects.



Turn off handset where use is prohibited, such as aboard aircraft or in hospitals.

Handset may interfere with the operation of sensitive devices and electronic medical equipment.
Follow the instructions given by the respective medical facilities regarding the use of mobile phones on their premises. In addition, actions such as speaking on a mobile phone aboard aircraft are prohibited and may be punishable by law.



If you are using electronic medical equipment, do not put handset in your breast pocket or in the inside pocket of your jacket.

Using handset in close proximity to electronic medical equipment may cause the equipment to malfunction.



If you have a weak heart, take extra precautions when setting functions such as vibration or ringer volume for incoming transmissions.



Do not aim the infrared port at eyes when using infrared communication.

Doing so may affect eyes. Also, aiming it towards other infrared devices may interfere with the operation of these devices.



In a thunderstorm, immediately turn off handset and seek shelter.

There is a risk of being struck by lightning and suffering electric shock.



Caution



Handset may become hot while in use. Avoid prolonged skin contact that may result in burns.



If handset affects car electronics, stop use. Handset use may affect electronics in some models. In this case, stop use; could impede safe driving.



Do not place your ear too close to the speaker while ringer sounds or sound files play.

May impair hearing.



Do not turn up the volume unnecessarily high when using headphones.

Using headphones with volume turned up for an extended period may impair hearing or injure ears.



Handset use may cause itching, rashes, eczema or other symptoms depending on the user's physical condition. In this case, immediately stop use and seek medical treatment.

Parts	Materials/Surface Finish
Outer case (Main Display side)	PC/Acrylic UV cured coating
Outer case (External Display side)	PC+ABS resin/ Acrylic UV cured coating
Battery side, Battery cover)	ABS resin/ Acrylic UV cured coating
Outer Panel (External Display)	Acrylic resin/ Acrylic UV cured coating

Parts		Materials/Surface Finish
Screw covers (Battery cover side, below display - hinge side)		ABS resin/ Acrylic UV cured coating
Infrared Po		Acrylic resin
Main Display Panel, External Camera Panel (Outer portion)		Base: PC resin Surface: Acrylic resin
External Camera Panel (Lens portion)		Acrylic resin
Keys		PC resin (Outline Panel: PET resin)
Earphone Port cover, External Port cover		PC+ABS resin, Elastomer resin/ Acrylic UV cured coating
Memory Card Slot cover		PC+ABS resin, Elastomer resin/ Acrylic UV cured coating
One-push	Open Button hinge	PC resin/Acrylic UV cured coating
Decorative Panels of the hinge side		Aluminium/Alumite treatment
Side Key		PC resin/Acrylic UV cured coating
Charging Terminals		Phosphor bronze/ Gold plating on nickel plating
Stop pad		Acrylic Urethane resin
Screws (Battery compartment)		SWCH16A (Aluminium killed steel)/ Nickel plating
Battery compartment		Stainless
Battery	Connector	PPS resin
terminals	Battery terminals	Beryllium copper/ Gold plating on nickel plating
	Battery	PC resin (label: PET resin)
Battery	Terminals	Glass fiber reinforced epoxy board/ Gold plating on nickel plating



Do not place a magnetic card near or in handset. The stored magnetic data in cash cards, credit cards, telephone cards and floppy disks, etc. may be erased.



Do not swing handset by its strap, etc.

Handset may strike you or others resulting in injury or damage to handset or other property.



Do not use One-push Open button to open handset near your or another person's face.

Handset may cause accident and injury.



Avoid closing handset on fingers or objects when opening it.

May result in injury or damage to display.



When using One-push Open button, avoid pinching fingers or objects in hinge.

May result in injury or damage to display.

Charger (not included)



Warning



Place charger and Desktop Holder on a stable surface during charging. Do not cover or wrap charger or Desktop Holder.

May cause overheating, fire or malfunction.



Do not handle charger with wet hands. May result in electric shock or malfunction.



Always use the specified power supply/voltage. Using incorrect voltage may cause malfunction/fire.

AC Charger: AC100V-240V In-Car Charger: DC12V, 24V

In-Car Charger: DC12V, 24V (vehicles with a negative earth only)



Do not use handset/charger in thunderstorms.

There is a risk of being struck by lightning and suffering electric shock.



Do not short-circuit charging terminals.

May result in fire, electric shock, equipment malfunction or bodily injury.



Use In-Car Charger in vehicles with a negative (-) earth. Do not use In-Car Charger if vehicle has a positive (+) earth.

May cause fire.



Unplug AC Charger during periods of disuse. May cause electric shock, fire or malfunction.



If In-Car Charger fuse blows, always replace it with specified fuse.

Using the incorrect fuse may cause fire or malfunction. Refer to the respective manuals for information on the correct fuse specifications.



If liquid such as water or pet urine get into charger, unplug it immediately.

May cause electric shock, smoke emission or fire.



Wipe off any dust on the plug. May cause fire.



Caution



Always unplug charger before cleaning it. May result in electric shock.



Pull charger (not cord) to unplug charger.
Pulling on the cord may damage the cord and cause electric shock or fire.



Do not charge battery if it is wet. May cause battery to overheat, catch fire or explode.

Near Electronic Medical Equipment



Warning

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



If you use an implantable cardiac pacemaker or cardioverter defibrillator, keep handset more than 22cm away from the implant at all times. Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.



Observe the following in medical facilities.

- Do not take handset into operating rooms, Intensive Care Units or Coronary Care Units.
- Turn off handset inside hospital wards.
- Turn off handset even outside hospital wards (in hospital lobbies, etc.); electronic medical equipment may be in use nearby.
- Where a medical facility has specific instructions prohibiting the carrying and use of mobile phones, observe those instructions strictly.



Turn off handset in crowded places such as rush hour trains; implantable cardiac pacemakers or cardioverter defibrillators may be in use nearby. Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.



Persons using electronic medical equipment outside medical facilities should consult the vendor about possible radio wave effects.

Handling Precautions

General Notes

- SoftBank is not liable for damages from accidental loss/ alteration of handset/Memory Card information (Phone Book entries, images/sound files, etc.). Back-up important information.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Read Memory Card manual beforehand for proper use.
- Beware of eavesdropping.
 Digital signals reduce interception, however transmissions may be overheard. Deliberate/accidental interception of communications constitutes eavesdropping.
 - "eavesdropping" means radio communication is received by another receiver deliberately or accidentally.

Electromagnetic Waves

 For body worn operation, this mobile phone has been tested and meets RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum 15mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

FCC Notice

- This device complies with part 15 of the FCC Rules.
 Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The standards include a

substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model handset when tested for use at the ear is 0.905 W/kg and when worn on the body, as described in this user guide, is 0.546 W/kg.

Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorisation for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID UCE207003A. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at http://www.phonefacts.net.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.714 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is 0.487 W/kg. As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network. The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

^{*}The tests are carried out in accordance with international guidelines for testing.

^{**} Please see Electromagnetic Waves on page xx for important notes regarding body worn operation.

Declaration of Conformity

C€0168

We, Panasonic Mobile Communications Development of Europe Ltd., declare that SoftBank 821P conforms with the essential and other relevant requirements of the directive 1999/5/EC.

A declaration of conformity to this effect can be found at http://panasonic.co.jp/pmc/products/en/support/ index.html

Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damages.
- Use handset within temperatures of 5°C to 35°C and humidity 35% to 85%. Avoid extreme temperatures/direct sunlight.
- Handset may become warm during use or charging. This is not malfunction.
- Exposing lens to direct sunlight may damage color filter and affect image color.
- Soiled terminals may cause poor connection. If the terminals are dirty, use a dry cloth or cotton swab to wipe them clean.
- Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.

- Avoid forceful rubbing or scratching handset displays.
- 821P is not water-proof. Avoid exposure to liquids and high humidity.
 - Do not expose handset to precipitation.
 - Air conditioned air may condense causing corrosion.
 - Do not put handset in damp places like bathrooms.
 - On the beach, keep handset away from sun and surf.
 - Perspiration in handset may cause malfunction.
- Do not subject handset to excessive force.
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on handset in a bag.
- Do not remove nameplate; doing so invalidates warranty.
- Always turn off handset before removing battery. If battery is removed while saving or sending mail, data may be altered or lost.
- LCD is manufactured with high precision technology, however, some pixels may appear darker/brighter.
- Connect only specified products to Earphone Port.
- Keep USIM Card out of the reach of young children. If swallowed, see a doctor immediately.
- While walking, moderate headphone volume to make sounds around you audible and help avoid accidents.
- When holding handset in use, do not cover Speaker.

Function Usage Limits

These functions are disabled after handset replacement/ upgrade or service cancellation: Camera; Media Player; S! Applications.

After a period of disuse, these functions may become unusable.

Mobile Camera

- Be sure to observe proper etiquette when using the camera.
- Do not expose the camera lens to direct sunlight.
 Concentrated sunlight through the lens may cause the handset to malfunction.
- Be sure to try taking and previewing pictures before using the camera on important occasions like wedding ceremonies.
- Do not commercially use or transfer pictures taken with the camera without the permission of the copyright holder (photographer), except for personal use.
- Do not use the camera in locations where taking photos and recording videos are prohibited.

Copyrights and Others

Right of Portrait

Portrait right is the right of an individual to refuse to be photographed by others and protects from the unauthorized publication or use of an individual's photograph by others. Right of personality is a portrait right applicable to all citizens and right of publicity is a portrait right (property right) designed to protect celebrities' interests. Be careful when taking pictures with the handset camera. Photographing, publicizing and distributing photographs of citizens and celebrities without permission are illegal.

Copyrights

Sounds, images, computer programs, databases, other copyrighted materials, their respective works and copyright holders are protected by copyright laws. Duplicated materials are limited to private use only. If duplications (including conversion of data types), modifications, transfer of duplicates or distribution on networks are made without permission of copyright holders, this constitutes "Literary Piracy" and "Infringement of Copyright Holder Rights" and a criminal action for reparations and criminal punishment may be filed. If duplicates are made using handset, please observe the copyright laws. Materials captured with handset camera are also subject to the above.

This product is licensed under the MPEG-4 patent portfolio license for the personal and non-commercial use of a consumer to

(i) encode video in compliance with the MPEG-4 Visual Standard ("MPEG-4 Video") and/or

(ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider.

No license is granted or implied for any other use. Additional information may be obtained from MPEG LA,LLC. (http://www.mpegla.com)



Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Aplix, microJBlend and JBlend, and all Aplix-or JBlend-related trademarks and logos are trademarks or registered trademarks of Aplix Corporation in the U.S., Japan and other countries.

BookSurfing $^{\textcircled{B}}$ is a registered trademark of CELSYS Inc., Voyager Japan, Inc. and INFOCITY Inc.

QR Code is registered trademarks of DENSO WAVE INCORPORATED in JAPAN and other countries.



microSD Logo is a trademark of the SD Card Association.

Chaku-Uta $^{\otimes}$ and Chaku-Uta Full $^{\otimes}$ are registered trademarks of Sony Music Entertainment (Japan) Inc.

Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations;

4,901,307 5,490,165 5,056,109 5,504,773 5,101,501 5,506,865 5,109,390 5,511,073 5,228,054 5,535,239 5,267,261 5,544,196 5,267,262 5,568,483 5,337,338 5,600,754 5,414,796 5,657,420 5,416,797 5,659,569 5,710,784 5,778,338

Bluetooth°

Bluetooth[®] is a registered trademark of the Bluetooth SIG. Inc.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Mobile Communications Co., Ltd. is under license.

Other trademarks and trade names are those of their respective owners.

Bluetooth QD ID B012255

Powered by MascotCapsule®

MascotCapsule[®] is a registered trademark of HI CORPORATION © 2007 HI CORPORATION. All Rights Reserved.

NetFront Mobile Client Suite



This product contains NetFront Browser Mobile Client Suite of ACCESS CO., LTD.

ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.

NetFront Browser: Copyright© 1996-2007 ACCESS CO., LTD. This software is based in part on the work of the Independent JPEG Group.

NetFront Messaging Client: Copyright@ 2000-2007 ACCESS CO., LTD.



This product contains the Flash® Lite™ technology developed by Adobe Systems Incorporated.

Copyright© 1996-2006 Adobe Macromedia Software LLC. All rights reserved.

Adobe, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

"SOFTBANK," SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.

S! Appli, Input Memory, Near Chat, S! Mail, Arrange Mail, Feeling Mail, S! Town, S! Loop and PC Site Browser are trademarks or registered trademarks of SOFTBANK MOBILE Corp.

Yahoo! and the "Yahoo!" or "Y!" logos are trademarks or registered trademarks of Yahoo! Inc.

This product is manufactured or sold under license from InterDigital Technology Corporation.

The frequency band used for the Bluetooth[®] function of 821P is shared with other industrial, scientific or medical equipment (microwave ovens, etc.), and used at premises radio stations, amateur radio station, etc. (hereinafter "other radio stations").

- 1 Before using the Bluetooth[®] function, visually check that there are no other radio stations sharing the same frequency band nearby.
- 2 Should interference occur between 821P and other radio stations, move to another place or stop the Bluetooth[®] function (stop the transmission) immediately.
- 3 For additional information and support, contact us at the following number.

SoftBank Customer Center;

From a SoftBank handset, call toll free at 157 for General Information.

From landlines, see **P.17-40** "Customer Service".



This radio equipment operates in the 2.4 GHz band using the FH-SS modulation, and its maximum communication distance is 10m.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

The software contained in 821P is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software, and do not separate it from hardware in whole or part.

Specific Absorption Rate (SAR)

821P meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the body, shall not exceed 2 W/kg*. This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

The highest SAR value for 821P is 0.714 W/kg. Tests for SAR are conducted with handset transmitting at its highest certified power level, and follow the testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network.

Additional information on SAR can be obtained on the following Websites:

Ministry of Internal Affairs and Communications (Protection from Radio Wave Environment)
http://www.tele.soumu.go.jp/e/ele/index.htm
Association of Radio Industries and Businesses (ARIB)
http://www.arib-emf.org/index02.html (Japanese only)

* Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

Getting Started 1

USIM Card	1-2
About USIM Card	1-2
USIM Card Installation	1-3
USIM PINs	
Parts & Functions	1-5
Handset	1-5
Quick Keys	1-7
Display	1-8
About Battery	1-11
Before Charging	
Battery Installation	1-13
Charging Battery	1-14
Handset Power On/Off	1-15
Information in Standby	1-16
Information Window	
Standby Window	1-17
Handset Menus	
Main Menu	1-19
Menu Numbers	
S! Familiar Usability	1-21
Simple Mode	1-22
Activating Simple Mode	1-22
Simple Mode Menu	1-23
•	


Passwords	1-24
Handset Code	1-24
Center Access Code	1-24
Call Barring Password	1-24

USIM Card

About USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use 821P or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.

 - Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.



If 821P is dropped/subjected to shock, *Restarting USIM Please wait* may appear; 821P returns to Standby. This is not malfunction. If *Insert USIM* appears, re-insert USIM Card properly then restart 821P.

Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/821P with USIM Card inserted is lost or stolen, contact SoftBank Customer Center or Global Call Center (P.17-40).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Applications (BookSurfing[®], Near Chat, etc.) may be unusable while a different or replacement USIM Card is inserted into 821P.
- Returned USIM Cards are recycled.

 


 
Some downloaded files may be inaccessible after upgrades/ repairs, USIM Card/handset replacement.

USIM Card Installation

● Remove battery (ぱ P.1-13) then follow steps below.

Inserting





- 1 Open USIM Holder
- 2 Insert USIM Card (gold IC facing down) as shown
- **2** Close USIM Holder
 - Press cover until it clicks shut.

Removing

To open Holder, follow Step 1 for inserting
USIM Card (☐ Left), then slide out USIM Card
gently



- Do not force USIM Card into or out of 821P; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.
- Do not open/close USIM Holder by force; doing so may damage USIM Card.

USIM PINs

There are two USIM Card security codes: PIN1 & PIN2.

PIN1

<Default> 9999

4 to 8-digit code used to prevent unauthorized 821P use.

- PIN1 can be changed (☐ P.10-3).
- When PIN Entry is ON (☐ P.10-2), PIN1 entry is required each time 821P is turned on (with USIM Card inserted).



When PIN Entry is **ON**(**I** P.10-2):

- Signal Indicator may take some time to appear in Standby after entering PIN1.
- Enter PIN1 to dial emergency numbers (110, 119, 118).

PIN₂

<Default> 9999

Required to clear All Calls or set Cost Limit and Currency Setting (\square P.16-9).

● PIN2 can be changed (☐ P.10-3).

PIN Lock & Cancellation (PUK)

PIN1 Lock or PIN2 Lock is activated if PIN1 or PIN2 is incorrectly entered three times. Cancel PIN1 Lock or PIN2 Lock by entering the PIN Unblocking Key (PUK/PUK2) (P.10-3).


● For information on PUK, contact SoftBank Customer Center, General Information (☐ P.17-40).




- If PUK is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK.
- For procedures required to unlock USIM Card, contact SoftBank Customer Center, General Information (△₹ P.17-40).

Parts & Functions

Handset

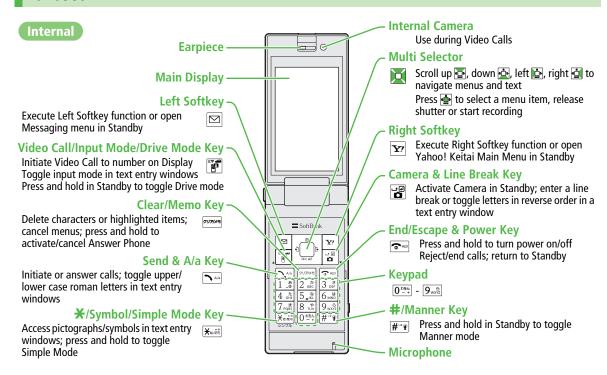

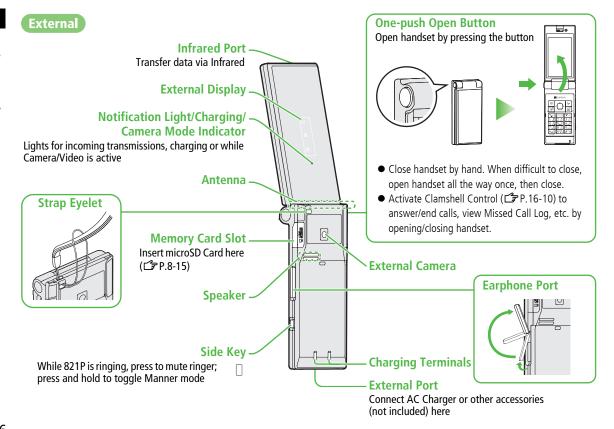

Quick Keys

In Standby

Short Press	•	Open Main Menu/ Unlock Keyguard
		Show/select Standby Window*1
	••	Open Phone Book
		Open Incoming Call Log
	4	Open Outgoing Call Log
		Open Messaging menu list
	Y /	Access Yahoo! Keitai top menu
	~~	Open number entry field*2
	クリアシャモ	Open Answer Phone Message List
	X7 🗬	Open Calendar
	ا ور	Open Camera
	☐ (Side Key)	Toggle External Display while handset is closed

In Standby (continued)


Long Press (more than one second)	4 A	Lock Keyguard
	<u> </u>	Open Volume settings
	(a) NID	Press and hold for a few seconds to turn 821P power off
		Open S! Mail composition window
	Y /	Open Yahoo! Keitai menu list*1
	0 DBA - 9 DBA	Open Phone Book entries on the page assigned to each key
	X 10.409	Activate or cancel Simple mode
	#**¶ / (Side Key)	Activate or cancel Manner mode
	2U 7 /k/4	Toggle Answer Phone ON/OFF
	x ; 	Activate or cancel Drive mode
	J	Open Video Camera

During a Voice Call


Short Press	_ / _	Increase volume
	<u></u> / 🚉	Decrease volume
		Open optional menus
	Y! / 🖜	End a call
	♣ / ☐ (Side Key)	Make voice memo

^{*1} Invalid during Simple mode
*2 Use when making international calls (13 P.2-3, P.2-12)


Display

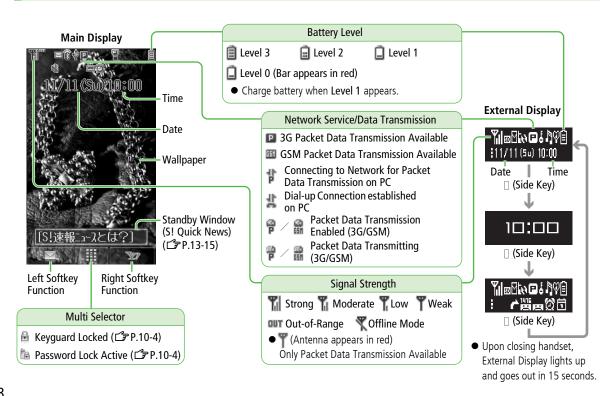

Main Display Indicators

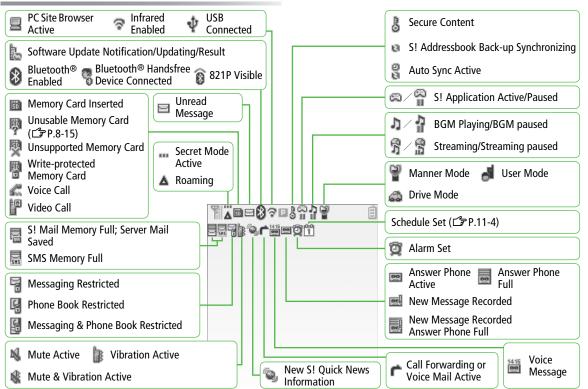

External Display Indicators

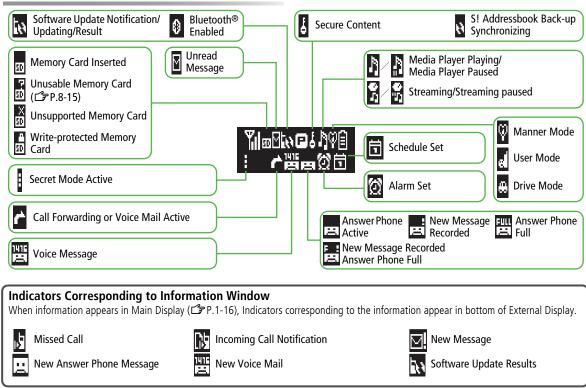

About Battery

Before Charging

Charge battery before use or after a period of disuse. (AC Charger sold separately)

Charging Time & Operating Time Estimates

		3G Mode	GSM Mode
Charging Time		130 minutes*	
Standby Time		400 hours*	300 hours*
Talk Voice Call		200 mi	nutes*
Time	Video Call	100 minutes*	_

^{*} Approximate value

- 3G Mode/GSM Mode: 🗳 P.2-12
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

About Battery

- Clean 821P, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.

Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

Battery Time

- Using handset in poor conditions may shorten battery time.
 - Extreme temperatures
 - Impaired handset, battery or Charging Terminals
 - Signal is weak/handset is out-of-range
 - Playing music or using S! Appli, etc.
- Extending battery time Example:
 - Select shorter display backlight time (☐ P.16-3).
 - Select *Silent* for Key Tone Volume (☐ P.16-3) and *OFF* or shorter time for Keypad Backlight (☐ P.16-7).


When Battery Runs Out

- Unless a Call is in Progress
 A message appears and warning tone sounds. Warning tone ends automatically after two minutes; press , v or , v or cancel warning tone manually. Charge or replace battery.
 - If Manner mode is active/Warning Tone Off, nothing sounds.
 - When 821P is closed, press

 (Side Key) to cancel warning tone.
- During a Call
 A message appears and warning tone sounds via Earpiece or Speaker. After 90 seconds, call ends and 821P shuts down in 30 seconds. Charge or replace battery.


Battery Strength Indicator

 Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (☐FP.1-8) or a message appears on Display.

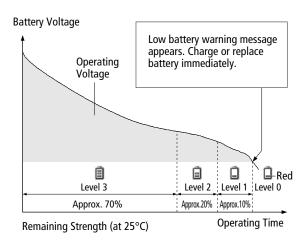


Battery Installation

 - Always turn off handset power before removing battery.
- Slide battery cover, then lift to remove



 Insert Battery Align battery contacts with handset pins.




Remove Battery

Lift battery out as shown.



Replace battery cover

Cover should click into place.

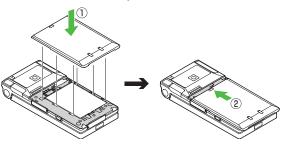




- When battery is removed just after changing handset settings, changes may not take effect.
- Lithium-ion batteries are valuable and recyclable resources.
- Li-ion
- Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
- To avoid fire or electric shock, do not:
 - Short-circuit battery
 - Disassemble battery



Charging Battery

Use only specified AC Charger (sold separately).
Charging Time: Approximately 130 minutes

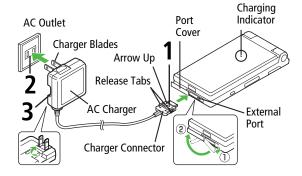

1 Connect AC Charger to handset

Lift right side of Port Cover, and rotate 180° downward. Insert Charger Connector (printed side up) into External Port.

7 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts. When charging is complete, Charging Indicator goes out.

When charging is complete, unplug AC Charger, then disconnect handset


Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.



Note For details, read AC Charger instructions.

Handset Power On/Off

Press One-push Open Button to open (**⊈** P.1-6).

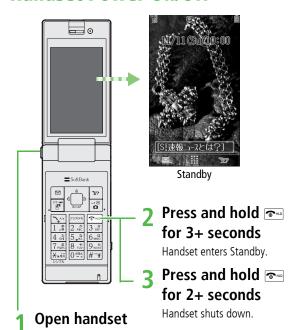

The First Time 821P Powers Up...

Setup window appears; enter date and time.

Enter date \rightarrow \triangle \rightarrow Enter time (24 hours) \rightarrow \triangle

Day of the week is set automatically.

• If unentered, 2007/01/01 00:00 is set by default.



- Standby Display may take a few moments to appear.
- If *Insert USIM* appears, clean and properly re-insert USIM Card then restart 821P.
- After a period of inactivity, Display turns off.



 Enter PIN1 each time handset is turned on to verify user (**⊈** P.10-2)

Settings ● Change date and time (P.16-6)

Retrieving Network Information

 
When ♠, ☑ or ☑ is pressed for the first time, 821P initiates Network Information retrieval; ♠ to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: Main Menu
 - ▶ Connectivity ▶ Retrieve NW Info

Information in Standby

Information Window

In Standby, Information window opens for missed calls, messages, Answer Phone messages, etc.






Events

Call	Missed calls (⊈ P.2-9)	
Message	Received messages (P.12-9) When Feeling Mail is received, a pictograph that shows emotion set by sender, and sender name, mail address or phone number appear	
Answer Phone	Recorded caller messages (ピテP.2-7)	
Voice Mail	Unanswered call forwarded to Voice Mail Center (⊈ P.17-5)	
Missed Call	If Missed Call Notification is active, Information window opens for calls missed while handset is off, out-of-range, engaged, etc. (ピアP.17-5)	
Update Results Received software update results (ピアP.1		

 ● To close Information window: 🖘, 🛂 [Exit] or



Standby Window

Set Standby Window to appear at bottom of Display. Customize Standby Window by setting Shortcuts and/or S! Quick News to appear. By default, Standby Window is ON and set to S! Quick News.

Show/hide Standby Window manually



S! Quick News

- (⊈P.16-4).
- S! Quick News: 🗗 P.13-15

Changing Templates

<Default> S! Quick News

Ticker (selected item) changes color.



3 Shortcuts & S! Quick News, Shortcuts or S! Quick News → ♠



Shortcuts & S! Quick News



Shortcuts

Transparency

Set transparency level of Standby Window.

When Standby Window is Set to ON (Manually)

When Standby Window is set to *ON (Manually)* (P.16-4), press to show/hide Standby Window. Press to show Standby Window when hidden. Press to deselect a shortcut icon or ticker

Accessing Functions from Shortcut Icons

1 to select Standby
Window, then to select
an icon



The selected function name appears at top of panel.

- To deselect: 🖘 or 🕬
- **1** to access function

Adding Shortcut Icons

<Default> Panasonic Site, Sound Settings, Display Settings, Pictures (Data Folder), Alarms, Calculator Add frequently used functions to Shortcuts.

- 2 Applications, Bookmarks or Phone Book
 → •
- 3 Select a function or entry → **[Entry]**

Moving Icons

Select an icon to move in Step $1 \rightarrow \square[Menu] \rightarrow Move \rightarrow \bigoplus$ $\rightarrow \square$ to select a position $\rightarrow \square$

Deleting Icons

Select an icon to delete in Step 1 \rightarrow \square [Menu] \rightarrow Remove \rightarrow \square

Adding Content & Changing Settings

Add or Set S! Quick News in Standby Window.

- 1 \bigcirc to select ticker \rightarrow \bigcirc [Menu]
- Add S! Quick News → → S! Quick

 News or S! Loop → → Select a content →
 → •

Settings

S! Quick News Settings → ♠ → Auto
Refresh or Display Setting → ♠

Go to P.16-21 and follow steps.

For *Display Settings*, perform from *Standby Window Display*.

Handset Menus

Main Menu



Settings ● Change Main Menu theme ● Change Main Menu background ● Change Main Menu icons (ピラ P.16-5)

Main Menu Icons


Messaging Create new/view received messages	Yahoo! Keitai Enjoy Mobile Net & PC Site browsing	S! Appli Download, set and use S! Applications
200	O O	(D)
Communication Access S! Town, S! Loop, Near Chat	Camera Capture images or record video clips	Entertainment Use Media Player & E-Books
Tools Set Alarm or save Calendar entries	Data Folder Open files saved on 821P/Memory Card	Bar Code Reader Use Bar Code Reader
	{ C	2
Connectivity Use Infrared, Bluetooth®, etc.	Phone Book Save entries to call or send messages	Settings Adjust/customize handset settings

Menu Numbers

Use keypad to select functions or menu items.


Unnumbered Menu Items

When numbers do not appear, select items as shown. Example 1: 1.3 to select *Messaging* from Main Menu

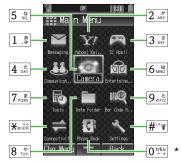

Main Menu Item Key Assignments

Example 2: 0 to select **Settings** after Example 1

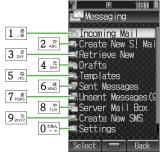

Messaging Menu Item Key Assignments

Numbered Menu Items

Press keys to select corresponding menu items.

Example 1: In Display Settings, 5 to select *Themes*



^{*} Press or to open Account Details. To open Phone Book top menu, press to select *Phone Book*, then press .

S! Familiar Usability

Download S! Familiar Usability applications that mimic the interface design of other handsets.

Downloading S! Familiar Usability

Download S! Familiar Usability applications from websites.

Main Menu ▶ Data Folder ▶ S! Familiar Usability

1 Download S! Familiar Usability → ♠
821P connects to the Network, and the website providing S! Familiar Usability applications appears.

 
Follow onscreen instructions.

 To manage S! Familiar Usability applications in Data Folder: ☐ P.8-8

Setting S! Familiar Usability

- 1 In Standby, 🚉
- 2 ⊠[Chg.Menu] →

 S! Familiar Usability →
- 3 Select a theme $\rightarrow \square[Set]$ $\rightarrow \bigoplus$







- S! Familiar Usability does not completely remake handset.
- Alternatively, Main Menu ➤ Settings
 - Display Settings Change Menu Theme
 - S! Familiar Usability.

Simple Mode

Activate Simple Mode to limit menu options to basic ones. Enlarge fonts in Messaging, Phone Book, Call Log and Browser menus, and maximize volume.

- Handset is limited to basic operations (☐ P.1-23).
- Font size cannot be changed.
- To change volume: (🗗 Right)



Font Size: Large Earpiece Volume: Volume 6

Activating Simple Mode

- In Standby, press and hold 🖼 → 🛖
 - To cancel: Press and hold 🖼 → 💁 again.

Changing Earpiece Volume

In Standby, press and hold or definition or the contract of th

Positioning Clock in Standby

In Simple Mode, Main Menu ▶ Settings

► Standby Display Clock ► Lower Center Setting/Canceling from Main Menu

- Normal Mode: Main Menu ▶ Settings ▶ Phone Settings
 - ► Change Simple Mode →
- Simple Mode: In Standby, → Change to Normal Mode
 → → →



- While switching between modes, other functions are not available. For approximately 30 seconds after mode switching is complete, all calls/messages are blocked.
- Turning off the power does not cancel Simple Mode.
- Standby Window (☐ P.1-17) is not available in Simple Mode.

Simple Mode Menu

In Standby, press 🖢 to open Simple Mode Menu.

Simple Mode Menu List

		T
	View Phone Book	⊈ P.4-9
	Create New Entry	⊈ P.4-4
Phone	Call Log	⊈ P.2-9
Tilone	Message List	⊈ P.2-7
	Voice Mail	⊈ P.17-4
	Account Details	⊈ P.4-13
	Incoming Mail	⊈ P.12-9
	Create New S! Mail	⊈ P.12-4
	Drafts	⊈ P.12-18
Messaging	Retrieve New	⊈ P.12-17
	Sent Messages	⊈ P.12-14
	Unsent Messages	⊈ P.12-14
	Create New SMS	⊈ P.12-8
	Take Photos	⊈ P.6-7
Camera	View Photos	⊈ P.6-14
Camera	Record Movies	⊈ P.6-9
	View Movies	⊈ P.6-14

	Calendar	⊈ P.11-2	
	Alarms	⊈ P.11-6	
Tools	Bar Code Reader	⊈ P.11-11	
10015	Calculator	⊈ P.11-9	
	Memo Pad	⊈ P.11-9	
	Voice Recorder	⊈ P.11-10	
	Ringer Volume	⊈ P.16-2	
	Assign Ringtone	⊈ P.16-2	
Settings	Vibration Alert	⊈ P.16-2	
settings	Wallpaper	⊈ P.16-3	
	Standby Display Clock	⊈ P.1-22	
	Date & Time	⊈ P.16-6	
	Pictures	⊈ P.8-5	
	Videos	⊈ P.8-5	
	Ring Songs&Tones	⊈ P.8-5	
Data Folder	Amusement (S! Appli/ Music/Flash(R)/Books/ Templates)	≟ P.8-5	
	S! Familiar Usability	△ P.1-21	
	Other Documents	⊈ P.8-5	
	Memory Status	Tsukaikonashi Dokuhon (Japanese)	
Change to Normal Mode	-	≟ P.1-22	

Passwords

Handset Code, Center Access Code and Call Barring Password are needed for 821P use.

Handset Code

<Default> 9999

Required to use/change some handset functions.

- X appears for each digit entered.
- Handset Code can be changed on 821P (ピアP.10-2).
- If Handset Code is incorrectly entered three times, warning message appears. Turn off handset and retry to enter.

Center Access Code

4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.

 Do not attempt to change Center Access Code. For details, contact SoftBank Customer Center, General Information (P.17-40).

Call Barring Password

4-digit number specified at initial subscription, required to restrict handset services (\$\subseteq P.17-6\$).

- If entered incorrectly three times, Call Barring settings lock; Call Barring Password & Center Access Code must be changed. Reach SoftBank Customer Center, General Information (☐ P.17-40) for details.
- Call Barring Password can be changed on 821P (🗲 P.17-7).



- Write down Handset Code, Center Access Code and Call Barring Password.
- Do not reveal Handset Code, Center Access Code and Call Barring Password. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Customer Center, General Information (☐ P.17-40).


Basic Operations

Making Voice Calls	2-2
Calling within Japan	2-2
Calling from Outgoing Call Log	2-3
Calling Abroad from Japan	2-3
Emergency Calls (110, 119, 118)	2-4
Answering Voice Calls	
Calling from Incoming Call Log	2-6
Answer Phone	
Activating/Canceling Answer Phone	2-6
Answer Time	
Playing Messages	2-7
Engaged Call Operations	2-8
Earpiece Volume	2-8
Handsfree Conversations	
Voice Recorder	
More Engaged Call Operations	2-8
Call Log	2-9
Viewing Call Logs	2-10
Using Call Log Records	2-10
My Number	
Calling while Abroad	
Network Mode	
Making Calls while Abroad	2-12

2-13
2-13
2-13
2-14
2-14
2-15

Making Voice Calls

Calling within Japan

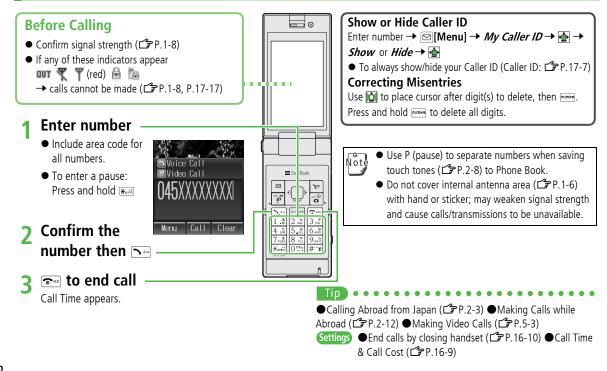

Calling from Outgoing Call Log

Up to 50 records appear in Outgoing Call Log. Call numbers directly from Call Log records.

- Call Log Status Indicators (☐ P.2-9)
- 1 In Standby, Records appear newest first. If number is saved in Phone Book, name appears.
- 2 Select a phone number →
 - To make Video Calls/ international calls, or to show/ hide Caller ID: ☐ From Step 2 on P.2-10





- When the same number is called more than once, only the most recent record appears.
- Call Log records remain after 821P is turned off.
- When 50 records are saved, oldest is deleted first.

Calling Abroad from Japan

- Requires separate subscription; contact SoftBank Customer Center, General Information (□ P.17-40).
- Call SoftBank handsets without entering country number.
- To make calls while abroad: 🗁 P.2-12
 - Enter a phone number
- 3 Select a country → •• → ¬¬¬¬

Enter Country Number Directly

► → Press and hold o to enter + (International Code) → Enter country number → Enter number (omit first 0) → ►

- International Code is set to 0046010 by default. Change as required (☐ P.16-8).
- Do not omit leading **0** to call to Italy (country number: 39).

Add to Country Number List

In Step 3, \bigcirc [Menu] \rightarrow Add \rightarrow \bigcirc \rightarrow Enter country name \rightarrow \bigcirc \rightarrow Enter country number \rightarrow \bigcirc .

Emergency Calls (110, 119, 118)

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

Emergency Numbers are Invalid When

- Offline mode is active (☐ P.2-14)
- PIN Entry window appears (PIN1 Entry is *ON*) (**□** P.10-2)
- USIM Card is not inserted.

Emergency Positioning Request


When an emergency call is made from a mobile phone, location is reported to first response agencies such as the police.

- Location information may be inaccurate due to location or signal conditions. Describe location or nearby landmarks.
- Base Station Positioning System is accurate within 100 meters to 10 kilometers. Location information from distant base stations may be inaccurate.
- Function available where first response agencies have completed system installation.
- Dialing 184 before 110, 118 or 119, cancels location report. However, first responders may obtain location information for immediate and serious threats to life.
- Not available for international roaming.
- Requires no separate subscription or communication fees.



Emergency numbers may not be dialable outside Japan depending on the network available or handset settings.

Answering Voice Calls

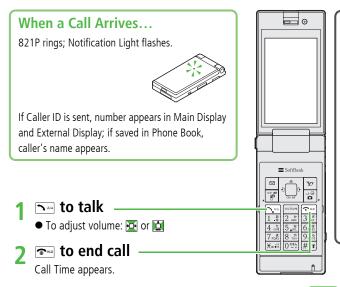

Place a caller on hold when you cannot answer (Hold)

When a call arrives, press <u>►</u>. Hold guidance is sent to the caller. To answer the call, press **[Accept]**.

• Call charges apply while on hold.

Forwarding Calls

Activate Call Forwarding (P.17-2) beforehand to automatically forward incoming calls to a preset number. When a call arrives, press [Forward]. If Call Forwarding is not active, call is rejected.

Rejecting Calls

When a call arrives, press **Y**/[**Reject**].

Mute Ringer

While ringing, press \P [Mute] or \square (Side Key) to mute ringer.

Note When Caller ID is not sent, Withheld appears.

пр

● Rejecting Specific Calls (P.10-5) ● Rejecting Specific Numbers (P.10-6)

Settings Make multiple keys valid to answer calls Answer calls by opening handset (₱ P.16-10)

Basic Operations

Calling from Incoming Call Log

Up to 50 records appear in Incoming Call Log. Call numbers directly from Call Log records.

- Call Log Status Indicators (☐ P.2-9)
- In Standby, 🚉 Records appear newest first. If a number is saved in Phone Book. name appears.
- Select a phone number or name → ¬~
 - To make Video Calls/ International calls, or to show/ hide Caller ID: From Step 2 on P.2-10





- Call Log records remain even if 821P is turned off.
- When 50 records are saved, oldest is deleted first.

Answer Phone

Record up to eight voice messages on 821P.

- When Answer Phone is active, 🖭 appears in Standby.
- Unavailable when: handset is off or Offline; **QUT** appears. Use Voice Mail (☐ P.17-4).

Activating/Canceling Answer Phone

<Default> OFF

- In Standby, press and hold
 - To cancel: Press and hold pumme again.



Redirecting a Call to Answer Phone

When a call arrives while Answer Phone is not active, press press to activate Answer Phone. Recording starts. Answer Phone remains active.



- Alternatively, activate/cancel from Main Menu
 - ► Tools ► Answer Phone ► Settings ► ON/OFF.
- When full, new messages cannot be recorded even if Answer Phone is activated. Delete old messages.
- Answer Phone does not respond to Video Calls.

Answer Time

<Default> 18 seconds

Set time before which call is redirected to Answer Phone.

Main Menu ► Tools ► Answer Phone ► Settings
► Answer Time

1 Enter answer time → ••••

Answer Time Priority

- When Answer Phone and Voice Mail or Call Forwarding are both active, function with shorter answer time takes priority.
 For example, if Answer Phone Answer Time is 18 sec and Optional Service is 20 seconds, Answer Phone responds first. (Priority may change due to signal conditions.)
- Even if Answer Phone takes priority, call is forwarded to Voice Mail or forwarding number when Answer Phone is full.

Playing Messages

When a new message is recorded, Information window opens (☐FP.1-16) and ■ appears in Standby.

- 1 In Information window, *Answer Phone* → •••
- Select a message → ••••

 Playback starts.

After playback ends, Information window and **disappea**.



Calling Sender

Select a message $\rightarrow \square[Menu] \rightarrow Call \rightarrow \bigoplus$

Deleting Messages

Select a message → ☑ [Menu] → Delete or Delete All → ♠
→ ☑ [YES] → When selecting Delete All, enter 4-digit

Handset Code (☐ P.1-24) → 📥

Saving to Phone Book

Select a message → [Menu] → Add to Phone Book → •

→ (**I**From Step 1 on P.4-4)



Alternatively, in Standby, press or Main Menu

Tools Answer Phone Message List.

Engaged Call Operations

Show operations during Voice Calls.

● Video Call Operations: 🗳 P.5-5



During a call, Display turns off after approximately one minute to reduce power consumption. When Display Backlight is off, press to end a call. Press any other key to activate Display Backlight (must be on to use engaged call operations).

Earpiece Volume

<Default> Volume 4

- 1 During a call, 🔁 or 🚉 to adjust the volume
 - New setting remains valid after call ends or 821P is turned off.



To change Earpiece Volume in Standby, press and hold or to open Earpiece Volume window.

Handsfree Conversations

Hear the other party's voice via Speaker.

- **1** During a call, **□**[**Menu**] → **Speaker ON** → **• •** Talk handsfree.
 - To cancel: [Menu] → Speaker OFF → 🏰



To change modes while using a Bluetooth® device:

Voice Recorder

Record up to 60 seconds of a call.

- **1** During a call, ♠ or ☐ (Side Key) Recording starts after a tone.
- **2** or (Side Key) to stop recording .amr file is saved to Ring Songs&Tones (Data Folder).



More Engaged Call Operations

Sending Touch Tones

During a call, use keypad to send touch tones for Voice Mail or other touch tone activated services.

1 During a call, $0^{\frac{p+q}{-}}$ - 9_{wx7} , x_{wx8} or x_{xx8}

Opening Phone Book

 
Open Phone Book during a call.

Phone Book opens.

Placing Call on Hold


When a call is put on hold, caller is informed.

- Call Waiting or Multiparty Call subscription required to use Hold.
 - 1 During a call, \(\sigma_{\text{\colored}}\)
 The call is put on and the caller is informed.
 - To cancel: 🔼 again



Call Log

Incoming and outgoing call records appear here.

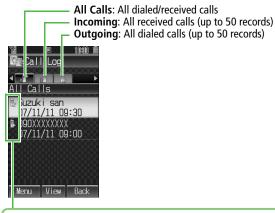

Status Indicators

Answered Voice Call

Missed Voice Call

🐚 Rejected Voice Call

Dutgoing Voice Call

Answered Video Call
Missed Video Call
Rejected Video Call

Dutgoing Video Call

Viewing Call Logs

- 1 In Standby, 📺 → Select a Call Log
- **2** To see record details, \mathbf{N} to select one \mathbf{N}

Deleting Call Log Records

Select a record in Step 2 $\rightarrow \bowtie$ [Menu] \rightarrow *Delete* $\rightarrow \bigoplus$ \rightarrow *One* or $AII \rightarrow \bigoplus$ $\rightarrow \bowtie$ [YES] \rightarrow When selecting AII, enter 4-digit Handset Code (\square P.1-24) $\rightarrow \bigoplus$



- When a number is called more than once, only last record appears.
- Call Log records remain even if 821P is turned off.
- When the maximum number of records are saved, oldest is deleted first.
- Call Log can also be opened from Main Menu
 ▶ Phone Book ▶ Call Log.

Using Call Log Records

Making Calls

- 1 is to select a Call Log
- 2 \longrightarrow to select a record \longrightarrow \bigcirc [Menu] \longrightarrow *Call* \longrightarrow
- **3** *Voice Call, Video Call* or *International Call* → ♠
- 4 If *International Call* is selected in Step 3, select a country → ♠ → ♠

Show or Hide Caller ID

In Step 3, **Show Number** or **Hide Number** $\rightarrow \bigoplus \rightarrow$ \bowtie [Menu] \rightarrow **Call** $\rightarrow \bigoplus \rightarrow$ **Voice Call** or **Video Call** $\rightarrow \bigoplus$

Creating Messages

- Available when messaging to SoftBank handset numbers.
 - 1 in to select a Call Log

 - 3 S! Mail or SMS → ♠ → Create message (S! Mail: ☐ From Step 4 on P.12-5/ SMS: ☐ From Step 4 on P.12-8)

Saving to Phone Book

- 1 in to select a Call Log
- 2 ★ to select a record → ► [Menu] → Add to Phone Book → ♠
- **3** *Create New Entry* or select an existing entry

 → ♠ → (👉 From Step 1 on P.4-4)

My Number

Confirm handset phone number in Account Details (☐F P.4-13). Also confirm data saved in Account Details: name, mail address, etc.

1 In Standby, ••• OTEA Account Details appears.



Calling while Abroad

Make Voice Calls while outside Japan.

• Before leaving Japan, sign up for Global Roaming Service. Details and applications are available online: http://mb.softbank.ip/mb/en/global_service/

Network Mode

<Default> Automatic

Adjust Network mode for current country or region.

3G/GSM	3G/GSM service area in Japan or abroad. 821P selects an available network automatically using area (network condition).
3G 3G service area in Japan or abroad.	
GSM GSM service area abroad. Unavailable in	
Automatic	3G/GSM service area in Japan or abroad. 821P selects 3G service area in Japan, and selects available network automatically using area (network condition) abroad.

Main Menu ► Settings ► Call Settings

- Optional Services International Setting
- Select Network
- 3G/GSM, 3G, GSM or Automatic → •

Making Calls while Abroad

Calling Other Countries from Abroad

- In Standby, → Press and hold 0*** + (International Code) appears.
- Enter a country number, area code (excluding **0**) and a phone number → •
 - Do not omit leading **0** to call to Italy (country number: 39).

International Code is set to **0046010** by default. The number can be changed if required (P.16-8).

Calling Domestic Landlines & Mobiles Abroad

In Standby, enter a phone number → ••••









● Add/delete country number ● Select operator ● Set operator priority for automatic search (P.16-8)

Manner Mode

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner-related Features

Manner Mode (☐ P.2-14) Press Manner key to mute 821P tones activate vibration for incoming transmissions and Answer Phone.		
Vibration Mode (⊈P.16-2)	Activate in public places, meetings, etc. for silent call/message alerts.	
Ringer Volume Mute call/message tones (☐ P.16-2) S! Appli sounds (☐ P.16-22).		
Offline Mode (⊈ P.2-14)	Suspend all 821P transmissions; when active, all calls/messages and incoming information are temporarily blocked.	
Answer Phone (⊈P.2-6)	Use to handle incoming calls when inappropriate/unsafe to answer.	
Drive Mode (⊈ P.2-15)	While driving, press Drive Mode key to handle incoming calls and activate Answer Phone.	

Activating Manner Mode

Press one key to mute 821P tones, activate Answer Phone and vibration for incoming transmissions.

- Manner mode settings can be changed (☐ P.16-11).
- When Manner mode is active, 💡 appears.
 - In Standby, press and hold # or □ (Side Key)
 - To cancel: Press and hold #** or ☐ (Side Key) again





- ◆ Alternatively, Main Menu
 ▶ Settings ► Mode Settings ► Manner.
- Shutter click, Auto Answer tone, and incoming tone via Earphone (Volume 1) sound even in Manner mode.
- Media Player files are initially muted in Manner mode; adjust volume in Playback window.
- When Alarm Priority is set to *Alarm prioritized* (P.11-6), Alarm sounds even if Manner mode is active.

Activating Offline Mode

<Default> OFF

Temporarily suspend all 821P transmissions; when active, all calls/messages and incoming information are blocked.

• When Offline mode is **ON**, \P appears.

Main Menu ► Settings ► Call Settings ► Offline

ON or *OFF* → 💼





- **Offline** disables Infrared/Bluetooth® transmissions.
- Bluetooth[®] devices are unusable in Offline mode.
- Emergency numbers (110, 119, 118) cannot be dialed.

Activating Drive Mode

While driving, press Drive Mode key to handle incoming calls and activate Answer Phone.

- Drive mode settings can be changed (P.16-11).
- When Drive mode is active, 🙈 appears.
 - 1 In Standby, press and hold
 - To cancel: Press and hold ****** again.





Alternatively, Main Menu ► Settings

► Mode Settings ► Drive.

3

Text Entry

Text Entry	3-2
Text Entry Window & Character Input Modes	
Key Assignments	
Entering Characters	
Entering Kanji, Hiragana & Katakana	
Entering Alphanumerics	
Pictographs & Symbols	
Conversion Methods (Japanese)	
Predictive Conversion	3-8
User's Dictionary	
Editing Text	3-10
Deleting & Replacing	
Copy/Cut & Paste	3-11
Advanced Features	
Text Entry Features	3-11
·	

Text Entry


Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

Help

Help describes details of text entry operations.

In text entry window, \square [Menu] \rightarrow Help \rightarrow $\stackrel{.}{•}$ \rightarrow Select an item \rightarrow $\stackrel{.}{•}$

Text Entry Window & Character Input Modes

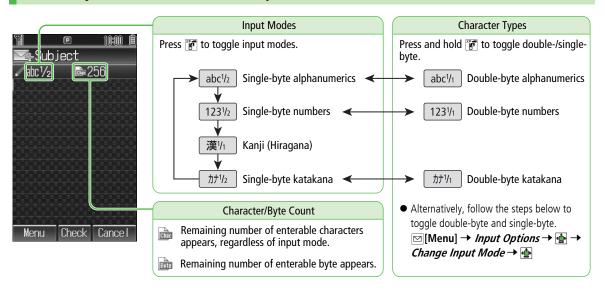

Key Assignments

Multiple characters are assigned to each key.

- For input modes and character types: 🗗 P.3-2
- Press and hold numeric keys (emercial to enter single-byte numbers assigned to each key, regardless of input mode. To enter +, press and hold one in single-byte number mode.

		Input	Modes	
Key	Kanji (Hiragana) [Double-byte]	Katakana [Double-/Single-byte]	Alphanumerics [Double-/Single-byte]	Numbers [Double-/Single-byte]
1 .8	あいうえおぁぃぅぇぉ 1	アイウエオァィゥェォー	@ _ / : ~ 1	1
2 ABC	かきくけこ2	カキクケコ2	a b c A B C 2	2
3 oer	さしすせそ3	サシスセソ3	d e f D E F 3	3
4 & GHI	たちつてとっ4	タチツテトッ4	g h i G H I 4	4
5 ta	なにぬねの5	ナニヌネノ5	jkIJKL5	5
6 MNO	はひふへほ6	ハヒフへホ6	m n o M N O 6	6
7 _{PQRS}	まみむめも7	マミムメモ7	pqrsPQRS7	7
8 TW	やゆよゃゅょ8	ヤユヨャュョ8	t u v T U V 8	8
9 _{wxxz}	らりるれろ9	ラリルレロ9	w x y z W X Y Z 9	9
0	わをんゎー (Single-byte Space) 〇	ワヲンヮ *1 — (Single-byte Space) 〇	(Single-byte Space) 0	0 [Press and hold] + *2

^{*1 ¬} is available only in double-byte katakana mode.
*2 + is available only in single-byte number mode.

	Input Modes			
Key	Kanji (Hiragana) [Double-byte]	Katakana [Double-/Single-byte]	Alphanumerics [Double-/Single-byte]	Numbers [Double-/Single-byte]
	Pictograph List/Symbol List	٧ ٥	Pictograph List/Symbol List*3	*
* mich	[Press and hold] Memo Pad List [Press and hold] Mail Address & URL List*4		[Press and hold] P (pause) *5	
#**•	、。·!? ,!?¥&() ★ #"'=^+;		#-,!?¥&()"'=^+;	
½ ∓ 40	Toggle input modes			
		[Press and hold]	Toggle double-byte and single	-byte characters
9	Line Break/Scroll Backward*6 Line Break			Line Break
→ A0	Toggle upper and lower case characters*7			
2177/AT	Delete one character after cursor (Delete one character before cursor when cursor is at the end of a sentence)			
	[Press and hold] Delete all characters after cursor (Delete all characters before cursor when cursor is at the end of a sentence)			

^{*3} In single-byte alphanumerics mode, single-byte symbol list appears first.
*4 Parts of mail addresses or URLs appear

^{*5} Pause can be entered only when entering phone numbers in Phone Book.

^{*6} Toggle characters in reverse order (When cursor is at $\mathbf{c}: \mathbf{c} \to \mathbf{b} \to \mathbf{a} \to 2 \ldots$) *7 Toggle upper and lower case characters at cursor

Entering Characters

Entering Kanji, Hiragana & Katakana

Example: Enter 鈴木

1 In alphanumerics mode, Framework two times to switch to kanji (hiragana) mode



す: 3 . three times

 $\vec{\sigma}$: \mathbf{g}^* : \mathbf{g}^* three times \mathbf{g}^*

き: 2点 two times

* When the next character is on the same key, press differst to move cursor.

- **7** to enter Forecast List
 - To change word before converting, press [727924].
 - There are three types of word suggestion list: Forecast, Normal and Prediction (☐ P.3-8)
- **3** I to select 鈴木 → 🖆



Toggling Assigned Characters in Reverse

Example: When cursor is at **c**, press $\stackrel{\text{def}}{=}$ to toggle as follows: $c \rightarrow b \rightarrow a \rightarrow 2...$

Entering Katakana

- To switch to single-byte Katakana: In kanji (hiragana) mode, 🗃
- To switch to double-byte Katakana: In katakana mode, press and hold m
- To enter katakana in kanji (hiragana) mode: 🗗 P.3-6

Small Kana (つ,ッ, etc.)

Example: Enter small hiragana \supset

Step	1	2
Key	4 . (3 times)	~ A/a
Display	つ	つ

- Press to fix the word.
- Alternatively, press a key repeatedly to enter an assigned small kana.

Adding * or *

Example: Enter hiragana ば or ぱ

Step	1	2	3	4
Key	6 MNO	★ m/255	★ n/255	★ ************************************
Display	は	ば	ぱ	は

- Press to fix the word.
- In single-byte katakana mode, " and are counted as one single-byte katakana.

Line Break

to insert line breaks in text

Space

Single-byte space at the end of text	•1
Single-byte space within text	Press o repeatedly until single-byte space appears* → ♠

- * open press count differs by input mode.
- Alternatively, use symbol list for double-byte or single-byte space (⊈ P.3-7).
- Space cannot be entered within text in number mode by following the steps above. Use symbol list (P.3-7).

Converting Hiragana to Katakana/ **Alphanumerics**

Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

Example 1: Enter OK

Step	1	2	3	4
Key	(3 times)	(twice)	Y /[E-1-Kana]	X
Display	131	ふに	Suggestion List	OK

• Press • after selecting **OK**.

Example 2: Enter 10:30 or 10/30

• To enter : or /, enter • by pressing #**.

Step	1	2	3	4	5
Key	1 .8 0 **	#***	3 of 0 to 6.	127 [E-1-Kana]	Ĭ
Display	あわ	あわ、	あわ、 さわ	Suggestion List	10:30 or 10/30

• Press • after selecting 10:30 or 10/30.

Entering Alphanumerics

Enter double-byte or single-byte alphanumerics.

• For input modes and character types: 🗗 P.3-2 Example: Enter Call in alphanumerics mode

Step	1	2	3	4	5	6
Key	(3 times)	1	2 450	(3 times)	*	(3 times)
Display	С	C	Ca	Cal	Cal	Call

* When the next character is on the same key (example: entering a then b), press diffirst to move cursor.


Pictographs & Symbols

- Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail addresses.
 - 1 In kanji (hiragana) or alphanumerics mode, 🛌 SoftBank pictograph list appears.
 - to toggle pictograph list and symbol list. Log List may appear first.
- 2

 or symbol →
 int to select a pictograph or symbol →
 - Pictograph List: 🗗 P.17-28
 - Symbol List: 🗗 P.17-29
 - Alternatively, press or to toggle lists.
 - To enter same pictograph/symbol repeatedly: Select a pictograph/symbol → \(\noting\)[Besides] → \(\noting\)

Alternatively, follow the steps to access pictograph or symbol: $\square[Menu] \rightarrow \textit{Pictograph}$ or $\textit{Symbol} \rightarrow \boxdot$

Entering Cross-carrier Pictographs $\[oxtimes \]$ [Menu] $\ \rightarrow \ Pictograph \ \rightarrow \ oxtimes \]$ $\ \rightarrow \ Common,\ DoCoMo \]$ or $au \ \rightarrow \ lacktriangle$

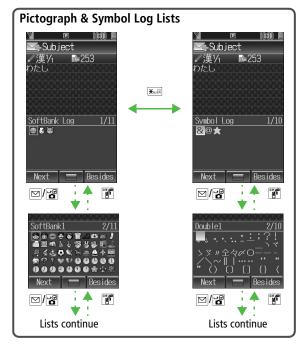



Conversion Methods (Japanese)

Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

While Enterin	While Entering Text		
Forecast	Show candidates likely to convert (Predictive Candidates) and matching candidates (Normal Candidates) Example for Predictive Candidates: わ → 私 , わたし , etc. Example for Normal Candidates: わ → 和 , 輪 , etc.		
Normal Show matching candidates Example: わ → 和 , 輪 , etc.			
After a Word is Fixed			
Prediction Candidates likely to follow entry Example: 私 is fixed → です, の, は, et			

- The order in the list changes by entering words.
- Press
 □[Forecast]/[Normal] to toggle Forecast List and Normal List.

Using Predictive Conversion

Example: Enter 私の鼻

1 In kanji (hiragana) mode,

わ is entered and Forecast List appears.



私 is entered and Prediction List appears.

3 \longrightarrow to select \mathcal{O} in Prediction List \rightarrow \bigcirc

 \mathcal{O} is entered and Prediction List appears.



はな is entered and Forecast List appears.

Normal List appears.



6 to select 鼻 in Normal List



If the Word is not Listed

Press return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か , then convert to 春香

- 1. Move cursor to a , then convert はる to a
- 2. Convert か to 香 → 💁

Using Previously Entered Words

Enter the first one or two hiragana to access previously entered words in the list.

Entering Alphanumerics in Kanji (Hiragana) Mode Enter hiragana and press 🔄 to open Forecast List.

Example: To enter a, $2 \rightarrow \bigcirc$ to open Forecast List $\rightarrow \bigcirc$ to select $a \rightarrow \bigcirc$

User's Dictionary

Save frequently used words/phrases (up to 100 entries). Assign a reading (keyword) in hiragana to each entry. In text entry windows, enter a reading and convert. Saved words/phrases appear among word suggestions.

Adding Entries

- 1 In a text entry window, ☑ [Menu] → Input
 Options → ♠ → User's Dictionary → ♠
- 2 Menu] → Create → •••
 - When no entries exist: [Create]
- 3 Enter a word/phrase → •••
- Enter symbols and pictographs.
- **4** Enter a reading → •

Editing User's Dictionary

1 In a text entry window, **[Menu]** → *Input*Options → • → User's Dictionary → •

2 Select an entry → [Menu] → Edit → •••

3 Edit word → • Dedit reading → • Dedit readi

Deleting Entries

In Step 2, \square [Menu] \rightarrow *Delete* \rightarrow $\stackrel{\bullet}{•}$

- To delete multiple entries, *Selected Words* → \bigoplus → (Select words → \bigoplus)* → \bowtie [**OK**] → \bigoplus
- * When selected, appears. Repeat as required. (To cancel, press again.)



Editing Text

Deleting & Replacing

Delete Characters within Lines

Place cursor before a character → ₽07954

A character after cursor is deleted.

• Press and hold me to delete all characters after cursor.

Delete Characters from the End of Text

Place cursor at the end of text → 2075×4

A character before cursor is deleted.

- Press and hold me to delete all characters before cursor.
- **2** Enter another character

Copy/Cut & Paste

Copy or cut text and paste it into text entry windows.

- 1 In a text entry window, $oxed{oxed{oxed}[Menu]} o Copy$ or Cut o lacktriangle
- **7** Select Text to Copy/Cut

Place cursor before (or after) text to copy/cut →

→ Place cursor after (or before) text to copy/

cut → 🚉

Select All

 \mathbf{Y} [AII] \rightarrow

3 Place cursor at target location to paste text → [Menu] → *Paste* → [♣]

More Advanced Features

From [Text Entry Window]
Access Text Entry Window from each function.
Example: For S! Mail, see Step 5 on P.12-5

Text Entry Features

Emoticons [Emotions]

[Text Entry Window] $\[\]$ **[Menu]** → **Emotions** → Select an emoticon → $\[\]$

Mail & Web Extensions

[**Text Entry Window**] In alphanumerics mode, press and hold ★★ → Select an extension → ♠

Copying from Phone Book [Insert: Phone Book Data]

[Text Entry Window] $\[\]$ [Menu] → Insert → $\[\]$ → Phone Book Data → $\[\]$ → Select a Phone Book entry → $\[\]$ → Select an item → $\[\]$

Copying from Account Details [Insert: Account Details]

[Text Entry Window] $\[\]$ [Menu] → Insert → $\[\]$ → Account Details → $\[\]$ → Select an item → $\[\]$

Memo Pad [Insert: Memo Pad]

[Text Entry Window] $\[\] \[\] \[\] \] \rightarrow Insert \rightarrow \[\] \] \rightarrow Memo$ $Pad \rightarrow \[\] \] \rightarrow Select \ a \ memo \ pad \rightarrow \[\] \]$

- To save new text: 🗗 P.11-9

Character Code [Input Options: Kuten Code]

[Text Entry Window] $\[\]$ [Menu] → Input Options → $\[\]$ → Kuten Code $\[\]$ → Enter 4-digit Kuten Code ($\[\]$ P.17-20) → $\[\]$

Phone Book

Overview	4-2
Saving to Phone Book	4-3
Phone Book Entry Items	4-3
Create New Entry	4-4
Editing Phone Book Entries	4-6
Correction/Change	4-6
Deleting Phone Book Entries	
Group Settings	
Changing Group Name	4-7
Setting Ringtones/Notification Light to Groups	4-7
Searching/Using Phone Book	
Phone Book Search Method	4-8
Making Calls from Phone Book	4-9
Sending Messages from Phone Book	
S! Addressbook Back-up	4-10
Backing up Phone Book	4-11
Synchronization	
Viewing Sync Log	4-12
Account Details	4-13
Viewing Account Details	4-13
Editing Account Details	
Sending Account Details	4-13
Advanced Features	
Phone Book Entry Functions	4-14

Overview

Save frequently used phone numbers and mail addresses to Phone Book.

Supplement phone numbers and mail addresses with birthday, street address, an image or notes.









Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect data recovery. SoftBank is not liable for damages from lost/altered entries.

S! Addressbook Back-up

Back up Phone Book entries on the network server; restore Phone Book after accidental loss/alteration.



●Phone Data Backup (ピアP.8-17)

Saving to Phone Book

Phone Book Entry Items

Save up to 1000 entries in Phone Book. Save phone numbers or mail addresses etc. in USIM Card Phone Book (maximum number of savable entries varies by card).

Item	Description	821P	USIM Card
Last Name/ First Name	Enter last name and first name. When saving to USIM Card, enter both last name and first name in <i>Name</i> .	0	0
Reading	Automatically entered when <i>Last Name</i> and <i>First Name</i> are entered. Reading can be edited. Search Phone Book by Reading.	0	0
Phone Number	Save up to three entries in Phone Book; two in USIM Card Phone Book. Emergency numbers (110, 119, 118) cannot be saved in Phone Book.	0	0
Email Address	Save up to three entries in Phone Book; one in USIM Card Phone Book	0	0
Birthday	Enter birth date	0	-
Address	Enter postal code, country, state/province, city, street address, additional information	0	-
Note	Enter up to 32 characters	0	-
Voice Call Ringtone	ne Set incoming Voice Call ringtone		-
Video Call Ringtone	Video Call Ringtone Set incoming Video Call ringtone		-
Message Ringtone	Message Ringtone Set incoming message ringtone		-
Notification Light	Set incoming call/message light color	0	-
Picture	Picture Save a still image to appear for incoming calls (Saved still image may not appear while using other functions)		-
Group	Sort Phone Book entries by groups, and set ringtones/notification lights (P.4-7).		0
Secret Setting	Restrict access to Phone Book entries by saving them as Secret Mode entries. When Secret Setting is set to <i>Hide</i> , activate Secret Mode to open Secret Mode entries (P.10-7).	0	-

Create New Entry

Phone Book Entries

Main Menu ▶ Phone Book ▶ Create New Entry

1 Select an item → •

7 Follow the steps below

2 □	Last Name*1	Enter up to 25 characters → •
2 E	First Name*1	Enter up to 25 characters → 🐏
20	Reading	Entered automatically (up to 25 characters). To edit: Edit Reading → ♠
	Phone Number 1-3* ¹	Enter up to 40 digits* ² each → ♠ → Select an icon → ♠
	Email Address 1-3* ¹	Enter up to 60 alphanumerics each → → Select an icon →

3	Birthday	Enter birth date → 🛖
愈	Address	Postal Code, Country, State, City, No./street or Additional Info→
	Note	Enter up to 32 characters → 🎃
Bo	Voice Call Ringtone	Follow General Setting * ³ → •
	Video Call Ringtone	Or Select a folder in Data Folder →
5	Message Ringtone	
	Notification Light	Follow General Setting *4 or select a color →
	Picture	Pictures → ♠ → Select a file → □ [Set] Or Take Picture → ♠ → ♠ to shoot → ♠ (To delete the image, No Pictures → ♠)
888	Group	Select a Group → 🖆
9	Secret Setting	Show or Hide→ •

^{*1} To save an entry, enter at least one of the fields

^{*2 41} digits when including + (International Code)

^{*3} P.16-2 "Ringtones"

^{*4 🗗} P.16-7 "Notification Light"

3 ⊠ [Save]

USIM Card Phone Book Entries

• Set Save Settings to USIM or Ask Each Time beforehand (☐FP.16-12).

Main Menu ► Phone Book ► Create New Entry (USIM)

Select an item → 🐏



7 Follow the steps below

	<u>a</u>	Name*1	Enter up to 25 characters → 🐏
	20	Reading	Entered automatically (up to 25 characters). To edit: Edit Reading → ษ
•		Phone Number 1-2*1	Enter up to 40 digits* ² each → •
		Email Address* ¹	Enter up to 60 alphanumerics →
		Group	Select a Group → 🎃

^{*1} To save an entry, enter at least one of the fields

⊠[Save]



Settings ● Change save location for new entry (1 P.16-12)

^{*2 41} digits when including + (International Code) Depending on USIM Card, it may be 20 digits (21 digits when including +)

Editing Phone Book Entries

Correction/Change

- 1 In Standby, ♠ → Select an entry → [Menu] → Edit → ♠
- 2 Select an item → ♠ → Edit → ♠
 Repeat this step to edit other items.
- 3 ⊠[Save] The entry is overwritten.

Deleting Birthday

In Step 2, select Birthday field $\rightarrow \square[Menu] \rightarrow \textit{Clear Birthday}$ $\rightarrow \square$

Deleting All Items in Address

Deleting Picture

In Step 2, select Picture field \rightarrow $\stackrel{\bullet}{•}$ \rightarrow *No Pictures* \rightarrow $\stackrel{\bullet}{•}$

Deleting Phone Book Entries

Deleting One by One

- **1** In Standby, <u>♠</u> → Select an entry
- $2 \ \square[\mathsf{Menu}] \to \mathit{Delete} \to \underline{•} \to \underline{•}$

Deleting All Entries

Main Menu ► Phone Book ► Memory Manager
► Delete All (Phone) or Delete All (USIM)

1 [Yes] → Enter 4-digit Handset Code → • Handset Code: □ P.1-24

Group Settings

Change Group names or set ringtones/notification lights.

- Phone Book or USIM Card Phone Book Groups appear according to *Change View* setting (☐ P.16-12).
- Assign Phone Book entries to Groups (

 P.4-4); otherwise, entries will be automatically assigned to Ungrouped.

Switching Between 821P & USIM Card

When *Change View* is set to *Phone & USIM* (13 P.16-12), follow these steps to switch view.

Main Menu ► Phone Book ► Group

Changing Group Name

• *Ungrouped* cannot be renamed.

Main Menu ▶ Phone Book ▶ Group

- 1 Select a group → ☑[Menu] → Rename →
 - When Change View is set to USIM (☐ P.16-12):
 Select a group → ☑ [Rename]
- **2** Enter a Group name → •••

Setting Ringtones/Notification Light to Groups

- Ringtones/Notification Light cannot be set to USIM Card Phone Book Groups.
- Ringtone/Notification Light settings for each Phone Book entry take priority.

Main Menu ► Phone Book ► Group

- Select a group → ☑ [Menu] → Sound & Notification Light → ♠
- **7** Set Ringtone

Voice Call Ringtone, Video Call Ringtone
or Message Ringtone → ♠ → Follow
General Setting or select a folder in Data
Folder → ♠ → Select a file → ▷ [Set]

 Follow General Setting depends on Ringtone settings (☐ P.16-2).

Set Notification Light

Notification Light \rightarrow $\stackrel{...}{•}$ \rightarrow Follow General **Setting** or select a color \rightarrow $\stackrel{...}{•}$

 Follow General Setting depends on Notification Light settings (☐ P.16-7). **Searching/Using Phone Book**

Phone Book Search Method

Phone Book opens in A-KA-SA-TA-NA search mode by default.



Changing Phone Book Search Method

<Default> A-KA-SA-TA...

Search for an entry using one of these search methods: A-KA-SA-TA-NA, Reading or Group.

Main Menu ▶ Phone Book ▶ Settings ▶ Search Method

1 A-KA-SA-TA..., Reading or Group → •

Searching Entries by Reading

In Standby, ♠ → Enter a Reading → Select an entry

• Entries beginning with designated character appear.



Searching Entries by Group

In Standby, $\stackrel{\bullet}{ riangle}$ \rightarrow Select a Group \rightarrow $\stackrel{\bullet}{ riangle}$

- → Select an entry
- To change Group names: 🗳 P.4-7



Making Calls from Phone Book

- To change search mode: ☐ P.4-8
- In Standby, 💁
- to select a page of the required reading
 - Alternatively, move to another page by entering initial letter. (Example: 3 of to move to "SA" page)
- **3** Select an entry → •
- **∆** Select a number → ••••

Opening Entry on Required Page from Standby (Quick Phone Book Search)

In Standby, press and hold or to open search window assigned to key.

Example: "NA" page: Press and hold 5 x

• When pressing key for page without any entry, next page with entries appears.



Settings ● Select USIM Phone Book to open (P.16-12)

Sending Messages from Phone Book

Use Mail Address

In Step 4 on left, select a mail address → • Use Phone Number

In Step 4 on left, select a phone number* → ✓

 \rightarrow Create Message \rightarrow $\stackrel{.}{•} \rightarrow$ S! Mail or *SMS* → •

- * SoftBank handset numbers only
- Create message and send (S! Mail: 🗗 From Step 4 on P.12-5/SMS: ☐From Step 4 on P.12-8)



- Note

 ◆ Alternatively, in Step 3 on left, select a recipient → \square [Menu] \rightarrow Create Message \rightarrow $\stackrel{\bullet}{\square}$ \rightarrow S! Mail or $SMS \rightarrow \bigoplus \rightarrow Select an address \rightarrow \bigoplus$.
 - Alternatively, in Step 1 above, select a mail address → \square [Menu] \rightarrow Create Message \rightarrow $\stackrel{\bullet}{\blacksquare}$ \rightarrow S! Mail \rightarrow ٠.

S! Addressbook Back-up

Back up Phone Book entries on the network server; synchronize handset Phone Book with Server Phone Book; restore Phone Book after accidental loss/alteration.

- Separate subscription is required for this service.
- See URL below for details on S! Addressbook Back-up http://mb.softbank.jp/mb/en/service/advanced/sab/index.html

Notes

- Fully charge battery beforehand () appears).
- Transmission fees apply to synchronization, backup and restoration.
- Restoration cancels these Phone Book settings: Ringtone, Notification Light, Picture, Secret setting
- Server Phone Book entries are deleted upon contract termination.

Timing & Direction

- When no Phone Book entries exist, selecting Synchronize, Sync from Phone or Backup to Server deletes all S! Addressbook Back-up entries.
- When no S! Addressbook Back-up entries exist, selecting Synchronize, Sync from Server or Restore from Server deletes all Phone Book entries.

Capacity Disparities

 When the number of savable items varies between Phone Book and S! Addressbook Back-up entries, Synchronization reflects lower limit.

Transfer to New Handsets

- S! Addressbook Back-up-compatible 3G Handsets: Data remains.
- Other 3G Handsets: Service subscription and data remains, but data is not accessible via handset (accessible via PCs).
- V3/V4/V5/V6/V8 Series: Service subscription is terminated and data is deleted.

Backing up Phone Book

Backing up Phone Book to Server

Main Menu ▶ Phone Book ▶ S! Addressbook Back-up ▶ Start Sync

- 2 Backup to Server → ♠
 821P connects to Server and Backup starts.
 When complete, details appear.

Loading Phone Book from Server

Main Menu ► Phone Book
► S! Addressbook Back-up ► Start Sync

- 2 Restore from Server → • 821P connects to Server and loading starts. When complete, details appear.

Synchronization

Manual Synchronization

Main Menu ▶ Phone Book ▶ S! Addressbook Back-up ▶ Start Sync

- 1 → Enter 4-digit Handset Code →

 Handset Code:

 Pandset Cod
- **2** Select a sync mode → 💼
- 821P connects to Server and synchronization starts.
 When complete, details appear.

<Default> ON/OFF: OFF

Main Menu ▶ Phone Book
▶ S! Addressbook Back-up ▶ Auto Sync Settings

1 Enter 4-digit Handset Code →

• Handset Code: P.1-24

2 Activate/Deactivate Auto Synchronization ON/OFF → ♠ → ON or OFF → ♠

3 Set Start Time

Start Time → ••• → Enter time → •••

4 Set Repetition Type

Repetition → → Select a type → →

Once	Once at specified time		
Daily	Daily at specified time		
Weekly	Weekly on specified day-of-the- week Select a day → •		
Monthly	Monthly at specified time/date Enter date → •		
After Modification of Phone Book	After ten minutes every time setting is changed		

5 Set Sync Mode

Sync Mode → •• → Select a mode → •• →

••

6 □[Save]

Viewing Sync Log

Main Menu ▶ Phone Book
▶ S! Addressbook Back-up ▶ Sync Log

1 Select a log → ••••

Account Details

Save phone number, mail address, street address, etc. in Account Details.

Viewing Account Details

1 In Standby, 🗓 📆



Editing Account Details

- Phone Number 1 cannot be edited or deleted.
- 1 In Account Details window, \square [Menu] \rightarrow Edit \rightarrow $\stackrel{\bullet}{\blacksquare}$
- **7** Edit → **□**[Save]

Deleting Items Except Phone Number 1 In Step 1, \square [Menu] \rightarrow Reset \rightarrow $\textcircled{\tiny $\underline{\bullet}$}$ \rightarrow $\textcircled{\tiny $\underline{\bullet}$}$.

Sending Account Details

Send your contact information via Infrared or Bluetooth®.

- In Standby, 녪 🕬
- 2 Menu] → Local Connectivity → ♣ → Infrared or Bluetooth → ♣
 - Images cannot be sent.
 - Infrared: 🗳 P.9-2
 - Bluetooth®: ⊈ P.9-5

More Advanced Features

Phone Book Entry Functions

Saving from Call Log

In Standby, \square \rightarrow Select a Call Log \rightarrow \square to select a record \rightarrow \square [Menu] \rightarrow Add to Phone Book \rightarrow $\stackrel{\blacksquare}{\bigoplus}$ \rightarrow Create New **Entry** or select an existing entry $\rightarrow \bigoplus \rightarrow$ Add name, etc. \rightarrow

Saving from Received Messages

In Standby, \square \square \square \square \square \square \square \square Select a folder \rightarrow \blacktriangleright Select a message \rightarrow \bowtie [Menu] \rightarrow Add sender to entry $\rightarrow \stackrel{\bullet}{\blacksquare} \rightarrow Add$ name, etc. $\rightarrow \square[Save]$

Phone Book Memory Status

Main Menu ▶ Phone Book ▶ Memory Manager Memory Status

5

Video Call

Getting Started	5-2
Note	5-2
Video Call Window	5-2
Making Video Calls	5-3
Answering Video Calls	5-4
Video Call Operations	
Earpiece Volume	
Speaker	5-5
Image & Sound Settings	
Camera Priority	5-6
Image Priority	

Getting Started


Exchange video/sound with video call-compatible mobiles.

• Send Outgoing Image via External Camera.

Note


- Only available within 3G network coverage.
- 821P is 3G-324M compliant; calls connected via different systems may be disconnected (charges apply).
- Increasing Speaker volume may cause interference. Decrease volume.
- Handset may become warm during Video Call. This is not malfunction.

Video Call Window

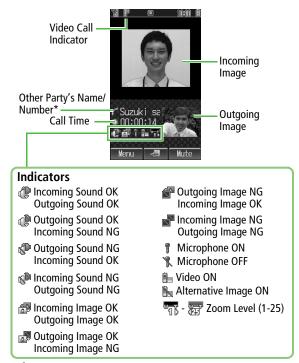

^{* 🜆} appears during a Bluetooth® handsfree call

Making Video Calls

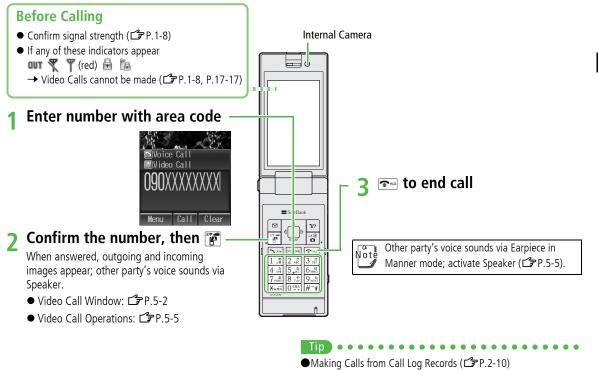

Answering Video Calls

When a Video Call Arrives...

Caller's phone number or name appears in External Display and Main Display.



1 A/a Or F

7 Send Outgoing Image

☑[YES]

Internal Camera Image is sent.



Send Alternative Image

Y/[NO]

Alternative Image is sent.



3 **●** to end call

Placing an Incoming Call on Hold

Press while receiving a Video Call. The other party's image appears and Alternative Image is sent. To answer, press [Accept].

Forwarding Calls

Activate Call Forwarding (> P.17-2) beforehand to automatically forward incoming Video Calls to a preset number. When a call arrives, press [Forward]. If Call Forwarding is not active, call is rejected.



Rejecting Calls

When a call arrives, press \mathbf{Y} [Reject].

Mute Ringer

While ringing, press $\textcircled{\blacksquare}$ [Mute] or \square (Side Key) to mute ringer.



- When no image is selected, Alternative Image is sent.
- Other party's voice sounds via Earpiece in Manner mode; activate Speaker (☐ P.5-5).



Settings ● Change Alternative Image to send (ピア16-12)

Video Call Operations

Adjust settings during Video Calls.

● For more Video Call settings: 🖙 P.16-12

Earpiece Volume

<Default> Volume 4

Adjust volume (Volume 1-6).

1 During a call, (increase) or (decrease) Volume level appears in lower left corner.

Speaker

Switch Speaker ON and OFF.

1 During a call, **□[Menu]** → *Speaker ON* or *Speaker OFF* → •



Image & Sound Settings

<Default> Send Voice & Video

Change outgoing image and sound settings.

1 During a call, 🐽



2 Select an item → •

Send Voice & Video	Send live video image and sound			
Alternative Picture	Send Alternative Image and sound			
Mute Voice	Send live video image only			
Alt. Picture & Mute Voice	Send Alternative Image only			

Camera Priority

<Default> Internal Camera

Toggle Internal Camera and External Camera.

During a call, 📅


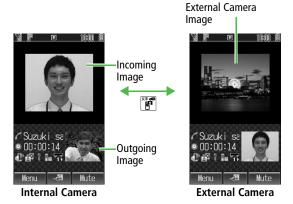


Image Priority

<Default> Priority Incoming

Toggle incoming image and outgoing image.

- During a call, \square [Menu] \rightarrow *Image Priority*
- **Priority Incoming** or **Priority Outgoing**→

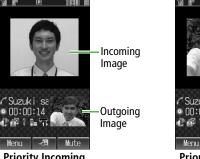





Priority Outgoing

Camera

Be ⁻	fore Using Camera	6-2
li	mage File Formats	6-2
N	lotes	6-2
	xternal & Internal Camera	
	Camera Display Indicators	
	tures	
	- 	
	Capturing Still Images	
	leos	
	/ideo Camera	
F	Recording Videos	6-9
	her Camera Functions	
	Auto Focus Lock	
	Continuous Shooting	
	self-Timer	
Ca	mera Settings	6-12
	ewing Saved Images	
	vanced Features	
	ending Images/Videos	

Before Using Camera

821P features Two Mega Pixel CMOS Auto-focus Camera capable of capturing still images and videos. Send still images/videos via S! Mail, or use still images as wallpaper.

Image File Formats

Image Type	File Format	Save Location		
Still images	JPEG (.jpg)	Data Folder (Pictures)		
Videos	MPEG-4 (.3gp)	Data Folder (Videos)		

Tip

● Save images directly to Memory Card [Save to] ● Confirm memory [Available Memory] (ピア P.6-12)

Notes

- Remove dust/debris from lens cover with a soft cloth.
- Handset movement may blur images; hold 821P firmly.
- Capturing/saving images immediately after 821P has been left in a hot place may affect image quality.
- Exposing lens to direct sunlight may affect image quality.
- While Camera/Video Camera is active, Camera Mode Indicator flashes and cannot be deactivated.

Shutter Click

• Shutter click sounds at fixed volume even in Manner mode.

Incoming Calls/Alarm/Low Battery while Using Camera

- Camera is not available when battery is low.
- Incoming calls, Alarm and low battery cancel Camera. Captured images are saved.

Auto Shut-off

 When left in preview window for three minutes, Camera is canceled and previous window returns.

Tip


●Change shutter click sound (ピアP.6-12)

External & Internal Camera

Activating Camera/Video

In Standby, activate Camera or Video Camera with a single press.

• Press 🔀 to toggle Camera and Video Camera.

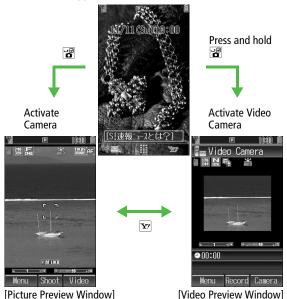




Internal Camera/External Camera


Take pictures using Internal Camera or External Camera.

• Press 🕝 to toggle Internal Camera and External Camera.

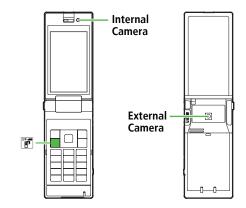


- Internal and External Camera cannot be active simultaneously.
 - Alternatively, \square [Menu] → Switch Camera → \blacksquare .

Camera Display Indicators

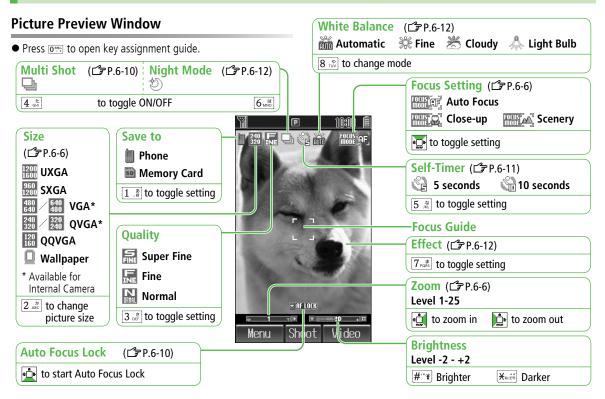

Video Preview Window

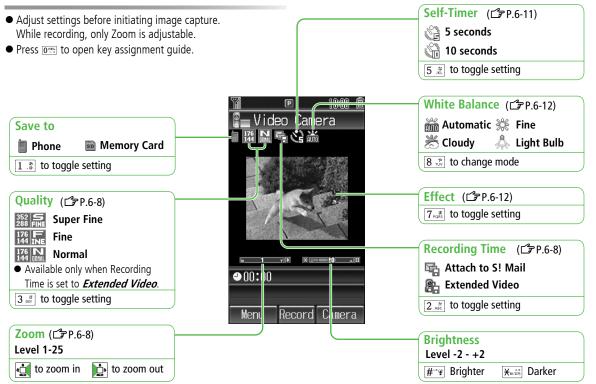

Pictures

Camera

Select Picture size, Zoom Level, etc. for camera use.

	Picture Size (Dots)	Zoom		Ovality	Focus	A44	File	C+
		Level	Ratio*1	Quality	Setting	Attachment	Format	Storage
External	UXGA (1200x1600)	-	-	Super Fine /Fine /Normal	Auto Focus/ Close-up/ Scenery*2	Available (Up to 290 KB)	JPEG (.jpg)* ³	Approx. 1000*4
	SXGA (960x1280)	1 - 2	1.25x					
	VGA (480x640)	1 - 25	2.5x					
	QVGA (240x320)	1 - 25	5.0x					
	QQVGA (120x160)	1 - 25	10.0x					
	Wallpaper (240x400)	1 - 25	4.0x					
Internal	VGA (640x480)	-	-					
	QVGA (320x240)	1 - 2	2.0x					

^{*1} All Zoom Ratio values are approximates.

^{*4} Number of images captured in default settings (Picture Size: QVGA/Quality: Fine) and saved to 821P.



- Activate Night Mode when shooting in low light (☐ P.6-12).
- Pictures folder shares memory with Videos, Ring Songs&Tones, S! Appli, etc. in Data Folder. Saved videos, S! Applications, etc. reduce available memory for still images.
- The number of images that can be saved to Memory Card depends on the capacity of the card in use.


^{*2} Focus Setting is available for External Camera only.

^{*3} Files saved to 821P are automatically named "yy-mm-dd_001.jpg", "yy-mm-dd_002.jpg", etc. unless changed. (yy: year, mm: month, dd: day)

Capturing Still Images (Focus Setting)

Bring Camera into focus to capture still images by using Auto Focus function. Optimum settings for the subject can be selected. Use Close-up mode for subjects at a short distance, and Scenery mode for landscapes (P.6-4).

Capturing Still Images

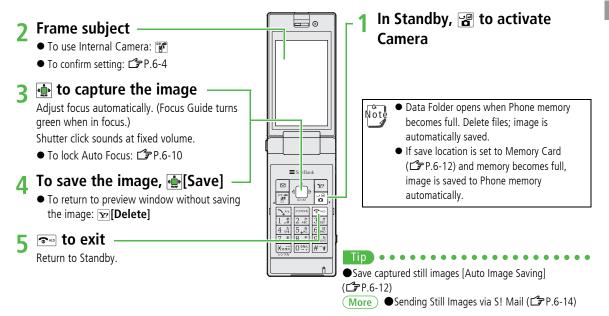

Videos

Video Camera

Record longer clips (maximum size depends on Memory Card capacity) or short clips for S! Mail attachments.

		Recording Time*1			Zoom		File	Storage
	Setting	Handset	Memory Card	Quality (Dots)	Level	Ratio*2	Format	Capacity
	Attach to S! Mail	30 seconds	30 seconds	Normal (176x144)	1 - 25	6.8x	MPEG-4 (.3gp)* ³	Approx. 140* ⁴
External	Extended Video	160 seconds	60 minutes	Normal (176x144)	1 - 25	6.8x		
External		85 seconds	60 minutes	Fine (176x144)	1 - 25	6.8x		
		30 seconds	45 minutes	Super Fine (352x288)	1 - 25	3.4x		
	Attach to S! Mail	30 seconds	30 seconds	Normal (176x144)	1 - 3	3.3x		
Internal	Extended Video	160 seconds	60 minutes	Normal (176x144)	1 - 3	3.3x		
		85 seconds	60 minutes	Fine (176x144)	1 - 3	3.3x		
		30 seconds	45 minutes	Super Fine (352x288)	1 - 2	1.7x		

^{*1} All Recording Times are estimates

^{*4} Number of video files recorded in default settings (External/Attach to S! Mail) and saved to 821P




- Record video in well-lit conditions.
- Videos folder shares memory with Pictures, Ring Songs&Tones, S! Appli, etc. in Data Folder. Saved still images, S! Applications, etc. reduce available memory for videos.
- The number of files that can be saved to Memory Card depends on the capacity of the card in use.

^{*2} All Zoom Ratio values are approximates

^{*3} Files saved to 821P are automatically named "yy-mm-dd_001.3gp", "yy-mm-dd_002.3gp", etc. unless changed (yy: year, mm: month, dd: day). In Videos folder, "yyyy/mm/dd hh:mm" appears for selected files even if renamed.

Recording Videos

● Confirm battery strength (L F P.1-8) and memory before recording. When battery is low, video cannot be recorded.

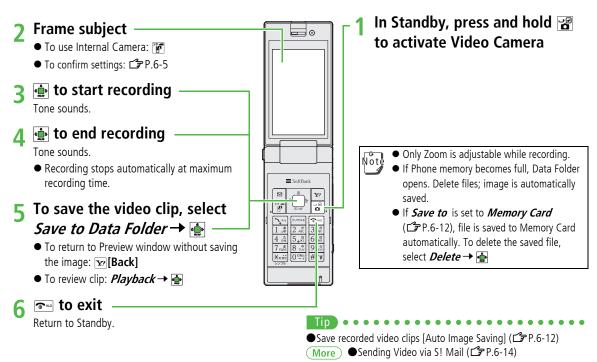

6

Other Camera Functions

Auto Focus Lock

To focus on an off-centered subject, lock focus on the subject and recompose your picture.

- Check if Focus Setting is set to *Auto Focus* (P.6-4).
- Auto Focus Lock is not available for Internal Camera.
- 1 In Picture preview window, adjust Focus Guide to subject



When in focus, handset sounds and Focus Guide turns green.

- To try again: 💁
- **2** Move Camera around to recompose → •••
- 3 to save





Continuous Shooting

Capture a succession of 15 still images automatically with a single press.

- Picture size is fixed to QVGA (240x320).
- When Multi Shot is ON, Night mode is set to OFF automatically.
- 1 In Picture preview window,



2 Frame subject → ♠
A succession of 15 still images are captured.

 To return to preview window without saving the image:

' ' [**Delete**] → Step 1

Image thumbnails appear.



- To view captured images, to select an image → Full-size image appears.
 - 🗖 to toggle full-size images.



✓ When Viewing a Full-size Image

[Save All] or ♠ [Save]

 \bullet Press $\underline{\clubsuit} \textbf{[Save]}$ to save the full-size image.

When Viewing Thumbnailed Images

Self-Timer

- 1 In Picture/Video preview window, 5 . Press 5 . to toggle 5 seconds, 10 seconds and OFF.
- 2 Frame subject → ••• Self-Timer tone sounds. After 5 or 10 seconds, shutter is released and recording starts.
 - To end recording: 💁
- 3 Save a Still Image



Save a Video Clip

Save to Data Folder → •



- When Self-Timer is active, **[Cancel]** to return to preview window without canceling Self-Timer.
- Incoming Calls or Alarm cancel image capture. Self-Timer is canceled and previous menu returns.

Camera Settings

• Select options before capture; use Direct Keys (P.6-4, P.6-5).

Item	Description Default		
iteili	Description	Camera	Video Camera
Switch Camera	Toggle cameras (ピアP.6-3)	External Camera	External Camera
Size	Select image size (☐ P.6-6)	QVGA (240x320)	*
Quality	Select quality. For Video Camera, this setting is available only when <i>Recording Time</i> is <i>Extended Video</i> (P.6-8).	Fine	Normal (176x144)
Focus Setting	Switch settings according to subject (ピアP.6-6)	Auto Focus	*
Recording Time	Select recording time (P.6-8)	*	Attach to S! Mail
Night Mode	Use in low light conditions	OFF	*
Multi Shot	Capture 15 images sequentially (P.6-10)	OFF	*
Effect	Select color for images	Normal	Normal
White Balance	Adjust brightness	Automatic	Automatic
Self-Timer	Set Self-Timer (☐ P.6-11)	OFF	OFF
Shutter Sound	Change shutter click sound ■ Volume is fixed.	Pattern 1	*
Save to	Select a save location (Phone or Memory Card)	Phone	Phone
Auto Image Saving	Select whether to save captured images automatically	OFF	OFF
Available Memory	The number of savable still images at the specified size and quality. For video, total recording time and maximum available recording time for one file at the specified recording time (<i>Extended Video</i> or <i>Attach to 5! Mail</i>) and quality.	-	-
Reset Defaults	Reset current camera/video camera settings to defaults	-	-
Help	Open key assignment guide	-	-

^{*} Not available



Example: Camera

2 Select an item \rightarrow $\stackrel{\bullet}{\blacksquare}$ \rightarrow Follow the steps below

Switch Camera	External Camera or Internal Camera → ∰
Size	Select a size → 🖆
Quality	Super Fine, Fine or Normal→
Focus Setting	Auto Focus, Close-up or Scenery → ••••
Recording Time	Extended Video or Attach to S! Mail → •
Night Mode	ON or OFF→ 🎰
Multi Shot	ON or OFF→ 🎰
Effect	Normal, Sepia, Monochrome or Negative (for External Camera only) →

White Balance	Automatic, Fine, Cloudy or Light Bulb → ♠	
Self-Timer	OFF, 5 seconds or 10 seconds →	
Shutter Sound	Select a pattern → 🎃	
Save to	Phone or Memory Card → •	
Auto Image Saving	ON or OFF→ •	
Available Memory	 to select picture size Press [Quality] to toggle Normal, Super Fine and Fine. (Unavailable for Attach to S! Mail) 	
Reset Defaults	•	
Help	Open key assignment guide	

Viewing Saved Images

Main Menu Data Folder

Open Pictures

Pictures → 🚉

Open Videos

Videos → 🚉

2 Select a file → ••• Selected image appears.



Example: Pictures

Opening Pictures Saved on Memory Card

After Step 1, select *To DigitalCamera* (\blacksquare_{\bullet}) \rightarrow \blacksquare \rightarrow Select a folder \rightarrow \blacksquare

Opening Videos Saved on Memory Card

After Step 1, select *To Video Camera* () \rightarrow PRL folder \rightarrow PRL

Tip

●Edit captured still images (☐ P.8-10)

More Advanced Features

Sending Images/Videos

Sending Still Images via S! Mail

In Standby, $rac{1}{3}$ ightharpoonup Frame subject $ightharpoonup rac{1}{3}$ ightharpoonup Complete and send S! Mail (ightharpoonup From Step 1 on P.12-4)

Sending Video via S! Mail

 Recording time must be set to Attach to S! Mail beforehand (☐ P.6-5).



- Attach up to 290KB. Images over 290KB cannot be attached to S! Mail and saved to Data Folder. Resize still images to attach (☐ P.8-10).
- Images (except for Wallpaper size) captured by External Camera may rotate 90° on cross-carrier handsets or PC.

7

Entertainment

Media Player	7-2
Downloading Music/Video	7-3
Playback Window Indicators	7-4
Playing Music (Audio Player)	
Playing Video (Video Player)	
Playback Window Operations	7-7
Playback Mode	
Playlist	
E-Books (Japanese)	7-10

Media Player

Play music (Audio Player) or video clips (Video Player) saved on 821P/Memory Card.

● Playlist (☐ P.7-9).

Notes

- Files may not play due to file support issues or Memory Card status, etc.
- When battery is low, Media Player cannot play files.
- When playing files, Notification Light flashes.
- Playback stops for incoming calls or Alarm.
- If messages are received while Media Player is active,
 Notification Light flashes with a second of vibration and =
 appears in Playback window, but ringtone does not sound.
- Charging Indicator lights during playback; playback notification light does not light.

Saving Music Files on PCs

When saving music files to Memory Card via PC or other devices for use with 821P, observe the following guidelines:

- Copyrighted Works
 - Do not infringe on third party/intellectual property rights.
 - Memory Card music files are limited to private use.
- Save files to specified Memory Card directory (*\subseteq P.8-20). For more information, see Help on Utility Software CD-ROM.

Downloading Music/Video

Access websites directly from Media Player to download music (Chaku-Uta[®]/Chaku-Uta Full[®]) or video files.

• View details (price, expiry date, etc.) on source website.

Main Menu ► Entertainment ► Media Player

Download Music (Chaku-uta®/Chaku-uta Full®)



Download Video





821P connects to Network and Download site appears.

Follow onscreen instructions to download media files.

Music Search

Search by artist or title to download music files.

Main Menu ► Entertainment ► Media Player
► Audio ► Music Search




 
• Follow onscreen instructions to download music files.

Copy Protected Files

Copy protected files may not play, be saved or forwarded. To play a copy protected file, obtain Content Key (P.8-6). Confirm file expiry date or usage limitations.

Playback Window Indicators

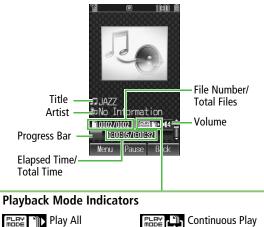





Titles or artist names may not appear depending on files.

Playing Music (Audio Player)

Supported File Formats

File Format		Extensions
	AMR-NB	.3gp .mp4 .m4a
MPEG-4 File	AAC-LC	
	aacPlus	
	Enhanced aacPlus	
	SMC	.smc

- Some files may not play even if format is supported.
- Some copy protected files have extensions different from the ones above.
- Copy protected files do not play after license expiry (Content Key: 🖆 P.8-6).

Main Menu ► Entertainment ► Media Player Audio

Select an item →

All	Select files from 821P & Memory Card
Music	Select files from Music folder
Ring Song	Select files from Ring Songs&Tones folder
Playlist	Select group of files saved to a Playlist

- 🔁 to select files from Memory Card.
- Select a file → 💼 Selected file plays.
 - Playback Window Operations: **1 P** . 7 - 7
- To end playback, 🖘 or \mathbf{Y} [Back] $\rightarrow \mathbf{Y}$ [NO]
 - To return to Playback window:



[Audio Playback Windowl

Changing Playback Mode

Before selecting a file in Step 2 or while playing file, **□**[Menu] → *Playback Mode* → • Select playback mode (P.7-8)

→

Playing SMC Files

Play SMC (Softbank Music Content) files; CD jackets and lyrics appear during playback.

The first jacket appears when playback starts.

- When 🚂 appears, press 🖭 to toggle jacket window and lyric window.
- To view next or previous jacket/lyric window, press *** (forward) or # (backward).

Changing Playback Position

During playback, □ [Menu] → Set Playback Position → •

→ Enter time to start playback → 🐏

Playing Video (Video Player)

Supported File Formats

File Format	Extensions
MPEG-4	.3gp
H.263	.mp4

- 821P supports Sub-QCIF, QCIF, QVGA, CIF and video files recorded by SoftBank handsets to send via S! Mail.
- Playing QVGA video switches display to Full Screen (☐ P.7-7), and image rotates 90°. Press [at the switch to normal Playback window.
- Some files may not play even if format is supported.
- Some copy protected files have extensions different from the ones above.
- Copy protected files do not play after license expiry (Content Key: □ P.8-6).

Main Menu ▶ Entertainment ▶ Media Player ▶ Video

1 Select an item → •

All	Select files from 821P & Memory Card
Video Folder	Select files from Videos folder
Playlist	Select group of files saved to a Playlist

- 🔁 to select Memory Card/Video Camera folder files.
- Select a file → •••

 Selected file plays.
 - Playback Window Operations:☐ P.7-7
- 3 to exit



[Video Playback Window]

Changing Playback Mode

Before selecting a file in Step 2, \square [Menu] \rightarrow Playback Mode $\rightarrow \square$ \rightarrow Select playback mode (\square P.7-8) $\rightarrow \square$

Full Screen Playback

Press on to switch to Full Screen during playback. Playback window rotates 90°.

• To return to Normal Screen, press on again.





- Press 5 元 in Full Screen mode to rotate Playback window 180°. To return to Normal Screen, press 5 元 again.
- Last Playback window selected appears first.

Playback Window Operations

Adjust Volume*1	🔄 (Increase) / 🚣 (Decrease)
Replay Track	<u> </u>
Play Previous	twice (once, within first three seconds of a track)
Play Next	<u></u>
Rewind* ²	Press and hold
Forward* ²	Press and hold 🚅
Pause/Resume	•
Stop	Music: ∑r/ twice or ♠ √r/ Video: ∑r/ or ♠ √r/
View Next Jacket/Lyric*3	#·*@
View Previous Jacket/Lyric*3	X m,∞n
Switch Jacket/Lyric Display*3	0 ***
Show Full Screen*4	0 total
Rotate Playback window 180° in Full Screen mode*4	5 ½

- *1 Media Player activates at last used volume level.
- *2 Available for MPEG-4 files (.3gp, .mp4, .ma4, .smc) (**P P.7-4). However, Rewind/Forward may be unavailable when playing files via other applications.
- *3 Supports during SMC file playback only
- *4 Supports during video playback only

Options

During playback, press **[Menu]** for options.

Playback/Pause	Play or pause music/video files
Playback Mode	Select playback mode (ピアRight)
Display Lyric/ Display Jacket*1	Show lyric or jacket
Next Jacket/ Next Lyric*1	Show next jacket or lyric
Previous Jacket/ Previous Lyric*1	Show previous jacket or lyric
Set Playback Position*2	Start playback from specified point
Full Screen (Video)/ Normal Screen*3	Select display size for video playback
Upside down (Full Screen)*3	Rotate Full Screen Playback 180°
Connect to URL*4	Open site link; music plays as BGM
Property	Show file details
Help	Show Playback window key assignments

Playback Mode

<Default> Play All

 Confirm playback mode settings in Playback window (Playback Mode Indicators: 2 P.7-4).

Main Menu ► Entertainment ► Media Player Audio or Video Playback Mode

Select a mode → 🚉

Play All	Play all files in selected folder/ Playlist
Play Once	Play selected file
Repeat Track	Repeat selected file
Continuous Play	Repeat all files in selected folder/ Playlist
Random Play	Play selected folder/Playlist files randomly




Note Media Player activates in last used mode.

^{*1} Supports during SMC file playback only *2 Supports during MPEG-4 file playback only *3 Supports video playback only *4 May not be available for some files

Playlist

Use Playlists to organize Data Folder video/music files. Select Videos, Ring Songs&Tones or Music folder files to create Playlist links to each file in its original folder.

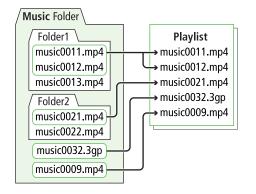



- A single Playlist cannot contain both music and video files, or files from both 821P and Memory Card.
- Some files can not be added to Playlist.

Creating New Playlists

- Create up to 30 Playlists on 821P and Memory Card each.
- Add up to 99 files to a single Playlist.

Main Menu ► Entertainment ► Media Player ► Audio or Video ► Playlist

- **1 □** [Menu] → *Create Playlist* → •••
- 2 Enter a Playlist name → ••• A new Playlist is added to top of list.
- 3 Select a Playlist $\rightarrow \stackrel{..}{•} \rightarrow \stackrel{..}{•}$ \bowtie [Menu] $\rightarrow Add \rightarrow \stackrel{..}{•}$
- Add Files to Music Playlists *Music* or *Ring Song* → ••••

→ Select a file → 🚉

Add Files to Video Playlists

Select a file → 🚉



[Playlists Window]

E-Books (Japanese)

Use BookSurfing® to acquire/view e-books, comics, photo books, etc.), or e-Book Viewer to view XMDF files on 821P. Content Key may be required for access to some e-media.

- Download Content Keys (☐ P.8-6) to read CCF/XMDF files.
- BookSurfing[®] and e-Book Viewer are S! Applications.
- Some copy protected files have extensions different from the ones below.

Application	File Format
BookSurfing [®]	CCF (.ccf)
e-Book Viewer	XMDF (.zbf, .zbk, .zbs)

• Some PC content may not be viewable via e-Book Viewer.

Main Menu ► Entertainment

- **1** BookSurfing or e-Book Viewer →
 - See application Help menu for usage information.



- Launch BookSurfing®/e-Book Viewer via S! Appli, or select a file from Books in Data Folder and press
- Compatible file titles appear in Books; appears next to incompatible files.
- For Option menu details: 🗳 P.8-8
- When purchasing a new handset, move CCF/XMDF files via Memory Card. However, if CCF/XMDF files are copy protected, Content Keys backup may be needed (P.8-18). Some contents require another Content Key after being moved/copied to a new handset or can not be moved/copied at all.

Ω

Managing Files

Data Folder	8-2
Data Folder Structure	8-2
Viewing Data Folder	8-4
Opening Files	8-5
Viewing & Playing Files	8-5
Options	8-7
Using Files	8-9
Wallpaper	
Ringtones	
Editing Still Images	
Resize	
Trimming	8-11
Managing Folders & Files	8-12
Creating New Folders	8-12
Changing Folder & File Names	
Deleting Folders & Files	8-13
Moving & Copying Files	8-14
Memory Card	8-15
Memory Card Installation	8-15
Format Memory Card	8-16
Viewing Memory Card Files	8-17
Phone Data Backup	8-17
PC File Transfers	8-20

Data Folder

Save, play and manage files downloaded from Internet, etc.

• Access websites directly from Pictures, My pictograms, Ring Songs&Tones, S! Appli, Music, Videos, Books, S! Familiar Usability and Templates folders, and download files to 821P.

Data Folder Structure

Folder	Data	File Format	Saved to
Pictures	Still images captured by 821P or downloaded still images, etc.	JPEG (.jpg/.jpeg/.jpe/.jfif), GIF (.gif), PNG (.png), BMP (.bmp), WBMP (.wbmp) JPEG (.jpg) saved in Digital Camera	Phone Memory Card* Digital Camera*
	My Pictograms folder: Downloaded My Pictograms	GIF (.gif), 🚵 GPK (.gpk)	Phone Memory Card*
Ring Songs&Tones	Downloaded sound files or sounds recorded by Voice Recorder	SMAF (.mmf), SP-MIDI (.mid/.midi), Mobile XMF (.mxmf),	Phone Memory Card*
S! Appli S! Applications (🗲 P.14-1)		🦱 Java	Phone Memory Card*
Music	Downloaded music files, etc.	MPEG-4 (.3gp/.mp4/.m4a/.smc)	Phone Memory Card*
Videos	Video clips captured by 821P or downloaded video files, etc.	耐 MPEG-4 (.3gp/.mp4)	Phone Memory Card* Video Camera*

Folder	Data	File Format	Saved to
Books E-comics, etc. CCF (.ccf), XMDF (.zbf/.zbk/.:		CCF (.ccf), XMDF (.zbf/.zbk/.zbs)	Phone Memory Card*
S! Familiar Usability	S! Familiar Usability applications (ピアP.1-21)	UIE (.uie)	Phone Memory Card*
Templates	Templates (☐ P.12-16)	HTML (.hmt)	Phone
Memo Pad	Memo Pad (⊈ P.11-9)	Text	Phone
	Downloaded Flash® image files		Phone
Flash(R)	Flash(R) Ringtones folder: Downloaded Flash® sound files	SWF (.swf)	Memory Card*
Other Documents	Other files	Other format files	Phone Memory Card*

^{*} Can be used when inserting Memory Cards

My Pictograms

Download GIF images via Internet and use them to create Arrange mail (P.12-16).

Flash®

Download Flash $^{\circledR}$ animation (Flash $^{\circledR}$ image files) via Internet; use as Wallpaper (\square P.8-9).

Flash® Ringtones can be set as Ringtones (P.8-10).



- These folders can be opened from other functions.
 - S! Appli: Main Menu ► S! Appli (🗗 P.14-1)
 - Templates: Main Menu ► Messaging ► Templates (P.12-6)
 - Memo Pad: Main Menu ► Tools ► Memo Pad (🗗 P.11-9)
- ullet 821P does not support Progressive JPEG files; files are savable but cannot be viewed on 821P.

8

Using Copy Protected Files

Copying/forwarding/saving may be restricted and Content Key (P.8-6) may be required for usage.

See File Properties to confirm restrictions such as expiry term or usage limitation.

- Sor (Silver) appears for copy protected files requiring Content Keys. (A) files are inaccessible.
- Files downloaded on 821P cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- 821P holds up to 1000 Content Keys. Multiple Keys may be required to use a file. Expired Keys are deleted automatically.

Viewing Data Folder

Main Menu Data Folder

1 Select a folder → ••••

Pictures and Videos appear in Thumbnail view by default.

● To change folder view: 🗗 P.8-5



Pictures (Thumbnail)



Ring Songs&Tones (List)

Changing Memory View

- In List view, press it to switch views, Phone, Memory Card, Digital Camera*¹ or Video Camera*².
- In Thumbnail view, select (Memory Card), (Video Camera)*¹ or (Video Camera)*² and press . To return to handset memory, select (Phone) and press .
- *1 In Pictures folder only
- *2 In Videos folder only

Changing Folder View

<Default> Thumbnail

Select Thumbnail or List for Pictures or Videos view.

Main Menu Data Folder Pictures or Videos

- *Change View* → Thumbnail or List **→**

Opening Files

Viewing & Playing Files

Main Menu Data Folder

- Select a folder → 🚉
 - Folder View: 🗲 P.8-4
- Select a file → File appears/plays.



- Some still images may not appear, or may be reduced in size depending on image or file size.
- 821P supports MPEG-4 and H.263 formats, and Sub-QCIF, QCIF, QVGA and CIF size. Video files that were recorded by SoftBank handsets and can be sent via S! Mail are also supported. Some files may not play even if format and size are supported.

● Playback Window Operations (ピア P.7-7) ● Viewing e-Books & Documents (☐ P.7-10) ●Using S! Appli (☐ P.14-3)

Continuous Playback

Main Menu ▶ Data Folder ▶ Ring Songs&Tones or Music or Videos

Select a file $\rightarrow \square[Menu] \rightarrow Playback$ *Method* → •

Select a method →

Continu	ous Play	Repeat all files in selected folder	
Random	Play	Play all files in selected folder randomly	
Repeat	Track	Repeat selected file	

 Confirm playback method settings in Playback window (Playback Mode Indicators: P.7-4).

When selecting Continuous Play or Random Play, playback starts from the file selected in Step 1.

Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, press [YES]. 821P connects to Content Key site.

- Copy Protected Files: ☐ P.8-4
- 🕨 🤚 or 🔒 (Silver) appear for files requiring Content Keys. 🔒 files are inaccessible. X appears on images in Thumbnail view of expired files.



- Alternatively, obtain Content Key as follows: Select a file $\rightarrow \square$ [Menu] \rightarrow *More* $\rightarrow \square$ \rightarrow *Download Content* $Kev \rightarrow \stackrel{\bullet}{\blacksquare} \rightarrow \stackrel{\bullet}{\blacksquare}$
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved a message appears. Delete old Keys; otherwise downloads may fail (connection fees apply).

● Back up Content Keys to Memory Card (P.8-18)

Options

Highlight a file in Data Folder and press **[Menu]** for the following operations.

Pictures

View	Open file	
Send* ¹	Send files via S! Mail, Infrared or Bluetooth®	
Send S! Mail* ²	Send files via S! Mail	
Set as*1	Set as wallpaper (☐F P.8-9), Phone Book image, Main Menu Icons, etc.	
Edit* ¹	Resize files (ピテ P.8-10), trim files (ピテ P.8-11), rotate files, add frame, clear shadow, etc.	
Rename	Change file names (☐ P.8-12)	
New Folder*1	Create new folders (☐ P.8-12)	
Move	Move files to other folders (☐ P.8-14)	
Сору	Copy files (⊈ P.8-14)	
Delete	Delete files (☐ P.8-13)	
More	Change folder view*1 (ピテP.8-5), obtain Content Key*1 (ピテP.8-6), open Memory Card folder/Phone folder/Digital Camera folder*1, view file properties	

^{*1} Picture files only

Ring Songs&Tones, Music, Videos

Play	Play files	
Send	Send files via S! Mail, Infrared or Bluetooth®	
Set as*1	Set ringtone (Voice Call, Video Call and messages) (ビデ P.8-10) or save to Phone Book	
Playback Method	Select playback method (P.8-6)	
Rename	Change file names (☐ P.8-12)	
New Folder	Create new folders (☐F P.8-12)	
Move	Move files to other folders (☐ P.8-14)	
Сору	Copy files (☐ P.8-14)	
Delete	Delete files (⊈ P.8-13)	
More	Change folder view*2 (

^{*1} Ring Songs&Tones and Music only

^{*2} My Pictogram files only

^{*2} Videos only

∞ Managing Files

Books, S! Familiar Usability

Play* ¹	Play files	
Jump to Web	Connect to website from linked files	
Send	Send files via S! Mail, Infrared or Bluetooth®	
Set*2	Set as Main Menu Theme	
Rename Change file names (☐ P.8-12)		
New Folder*1	Create new folders (☐ P.8-12)	
Move	Move files to other folders (☐ P.8-14)	
Сору	Copy files (⊈ P.8-14)	
Delete	Delete files (☐ P.8-13)	
More	Obtain Content Key (LFP.8-6), open Memory Card folder/Phone folder, view file properties	

Flash(R)

Play	Play files	
Send	Send files via S! Mail, Infrared or Bluetooth®	
Set as wallpaper*1	Set as Wallpaper (ピテP.8-9)	
Set as*2	Set ringtone (Voice Call or Video Call) (P.8-10) or save to Phone Book	
Rename	Change file names (☐ P.8-12)	
New Folder	Create new folders (☐ P.8-12)	
Move Move files to other folders (☐ P.		
Сору	Copy files (⊈ P.8-14)	
Delete	Delete files (⊈ P.8-13)	
More	Obtain Content Key (** P.8-6), open Memory Card folder/Phone folder, view file properties	

^{*1} Books only *2 S! Familiar Usability only

^{*1} Flash® image files only *2 Flash® sound files only

Other Documents

Rename	Change file names (☐ P.8-12)	
New Folder	Create new folders (☐ P.8-12)	
Move	Move files to other folders (☐ P.8-14)	
Сору	Copy files (⊈ P.8-14)	
Delete	Delete files (☐ P.8-13)	
More	Open Memory Card folder/Phone folder, view file properties	

Using Files



Copy Protected Files

- When set as Wallpaper or Ringtones, license expiry or inserting a different USIM Card may reset default.
- Limited use files cannot be set as Wallpaper or Ringtones.

Wallpaper

Main Menu ▶ Data Folder ▶ Pictures or Flash(R)

Select a file $\rightarrow \square$ [Menu]

Select from Pictures

Set as → • Wallpaper → •

Select from Flash(R)

Set as wallpaper → •

Ringtones

Main Menu Data Folder

- Select from Ring Songs&Tones or Music
 - *Ring Songs&Tones* or *Music* → •

Select from Flash(R)

$$Flash(R) \rightarrow \stackrel{\bullet}{\longrightarrow} \rightarrow Flash(R) Ringtones \rightarrow \stackrel{\bullet}{\Longrightarrow}$$

- **2** Select a file $\rightarrow \square[Menu] \rightarrow Set \ as \rightarrow \stackrel{\bullet}{\blacksquare}$
- **3** *Voice Call Ringtone, Video Call Ringtone* or *Message Ringtone* → ♠
 - When selecting a SMC file, select a Play Point and press **□[Set]**.
 - Flash® Ringtones cannot be set as Message Ringtone.

Editing Still Images

Resize

Change still images to QQVGA(120x160), Wallpaper or Main Menu Icon size.

Main Menu ▶ Data Folder ▶ Pictures

- 1 Select a file $\rightarrow \bowtie$ [Menu] \rightarrow Edit \rightarrow \rightleftharpoons \rightarrow Resize \rightarrow \rightleftharpoons
 - 2 Select an image size → ••••
 Resized image appears.
 - To start over: [Y/ [Back]



Example: QQVGA

8

Trimming

Crop still images for size.

Trim to Preset Size

Crop still images for QQVGA (120x160), Wallpaper or Main Menu Icon size.

Main Menu ▶ Data Folder ▶ Pictures

- 1 Select a file $\rightarrow \square[Menu] \rightarrow Edit \rightarrow \stackrel{.}{\blacksquare} \rightarrow Trimming \rightarrow \stackrel{.}{\blacksquare}$
- **2** *QQVGA (120x160), Wallpaper (240x400)* or *Main Menu Icon 80x76* → ♠

Rectangle appears on the image.

- - To start over: [Y7] [Back]
- **4**

 → Enter a new file name

 → •••

Image is saved to Data Folder.



Example: QQVGA

Trim to Free Size

Main Menu ▶ Data Folder ▶ Pictures

- 1 Select a file $\rightarrow \square[Menu] \rightarrow Edit \rightarrow \square \rightarrow$ Trimming $\rightarrow \square \rightarrow Free Size \rightarrow \square \rightarrow$
- 2 ★ to move ← → ♣ Rectangle appears.



- - To start over: [Y/[Back]
- 4 → Enter a new file name

Image is saved to Data Folder.



Managing Folders & Files

Creating New Folders

Create new folders within Pictures, Ring Songs&Tones, Music, Videos, Books, Flash(R) and Other Documents.

- Create up to ten new folders in Pictures, Ring Songs&Tones, Music, Videos, Books, Flash(R) or Flash(R) Ringtone folders, up to 100 new folders in Other Documents folder.
- Files in a folder cannot have the same name.
- Digital Camera, Video Camera, S! Appli, Memo Pad, My Pictograms, S! Familiar Usability and Templates do not support new folders.

Main Menu Data Folder

- **1** Select a folder → ••••
- $\mathbf{2} \ \ \underline{\hspace{1cm}} \ \ [\mathsf{Menu}] \rightarrow \mathit{New Folder} \rightarrow \underline{\clubsuit}$
- **3** Enter a new folder name → ••••

Changing Folder & File Names

- Only names of created folders and files can be changed.
- Files in a folder cannot have the same name.
- Digital Camera, Video Camera and S! Appli folder names are fixed.

Main Menu ▶ Data Folder

- **1** Select a folder → 💼
- 2 Select a folder or file → [Menu] → Rename → •••
- **3** Enter a new folder or file name \rightarrow $\stackrel{\bullet}{•}$

Deleting Folders & Files

- Only created folders can be deleted.
- Some files may not be deleted.
- Folders including undeleted files cannot be deleted.
- ② appear by copy protected files and indicate that 821P holds Content Keys required to use the files. When deleting ③ files or folders containing ③ files, corresponding Content Keys are also deleted, and other files requiring deleted Content Keys may become unusable. When confirmation appears, press ☑ [NO] to keep Content Keys.
- Multiple folders cannot be selected.

Main Menu Data Folder

- **1** Select a folder → •
- 2 Select a folder or file → [Menu] → Delete

 → •••
- **2** Delete a Folder or File

$$One \rightarrow \bigcirc \rightarrow \square$$
 [YES]

Delete Multiple Files

Selected Files → $\textcircled{\tiny }$ → (Select a file → $\textcircled{\tiny }$)*

→ \boxtimes [Menu] → Delete → $\textcircled{\tiny }$ → \boxtimes [YES]

- **→** [YES]
- ullet If confirmation appears, press ${f ldotspace}[{\bf YES}]$ or ${f yr}[{\bf NO}]$.
- * Checkmarks ☑ indicate files are selected. Repeat the step as required. (To release checkmark, press 👜 again.)

Delete All the Folders/Files in a Folder

 $A// \rightarrow \bigcirc \rightarrow \square$ [YES] $\rightarrow \square$ [YES] or \square [NO]

- → Enter 4-digit Handset Code → 🐽
- Handset Code: 🗗 P.1-24

Moving & Copying Files

- Copy/forward protected files cannot be copied.
- Some pre-installed S! Applications cannot be moved.
- Only JPEG files saved in handset memory can be moved/ copied to Digital Camera folder.
- Only Video files saved in handset memory can be moved/ copied to Video Camera folder.
- In Other Documents folder, copy protected files can be copied, but 821P does not recognize copyright.
- Files may not be forwarded/copied depending on file format or data.
- Forward protected files may be moved to other folders by retrieving Network information (☐ P.1-16).

Main Menu Data Folder

- **1** Select a folder → •
- 2 Select a file → [Menu] → Move or Copy

 → •••

3 Move/Copy a file

One →

Move/Copy Multiple Files

Selected Files $\rightarrow \textcircled{1}$ \rightarrow (Select a file $\rightarrow \textcircled{1}$)*

- $\rightarrow \square[\mathsf{Menu}] \rightarrow \mathit{Move} \text{ or } \mathit{Copy} \rightarrow \underline{\clubsuit}$
- * Checkmarks ☑ indicate files are selected. Repeat the step as required. (To release checkmark, press 💁 again.)
- - CHECK AII OF ORCHECK AII

Move/Copy All the Files in a Folder

A//→ •••••

- **4** Select a folder →
 - When selecting Selected Files or All in Step3, confirmation appears. Press

 [YES].



After being copied/moved between 821P and Memory Card, some files may be unusable on other SoftBank handsets or PCs, etc.

Memory Card

821P is compatible with microSD Card.

- microSD Card is referred to as Memory Card.
- 821P is compatible with up to 2GB Memory Cards.
 (Compatibilities of Panasonic 2GB, Toshiba 2GB and SanDisk 2GB Memory Cards tested and confirmed as of September 2007). Memory Card compatibility is not guaranteed.
- Format new Memory Cards for use with 821P (P.8-16).



 
- SoftBank is not liable for damages from accidental loss/ alteration of Memory Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.
- Actual Memory Card capacity is lower than indicated due to system files and temporary files.

Memory Card Installation

• Turn off handset before inserting/removing Memory Card.

Inserting

1 Open cover. Insert Memory Card until it clicks



7 Close cover

 Slide cover in and press until it clicks shut.



 
Memory Card Check

When Memory Card is installed correctly,
appears. If
appears, Memory Card cannot be used. Remove Memory Card
from handset, and re-insert it. If
does not disappear, execute
Memory Card Check or format Memory Card (
P.8-16).

(Display Indicator:
P.1-9)

Removing

- 1 Open cover and gently push Memory Card in
 - Memory Card pops out with a light push.



7 Remove card and close cover

● To close cover: 🚅 P.8-15



- Do not remove Memory Card or battery while flashes. Memory Card may be damaged or files lost.
- Memory Card may pop out when inserting/removing it.

Format Memory Card

• Formatting Memory Card deletes all saved files/data.

Main Menu ► Settings ► Memory Card Manager ► Format Memory Card

- 1 $\stackrel{\bullet}{\blacksquare}$ \rightarrow Enter 4-digit Handset Code \rightarrow $\stackrel{\bullet}{\blacksquare}$
- Handset Code: 🗗 P.1-24



- Do not remove Memory Card or battery while formatting; may damage handset or Memory Card.
- Memory Cards formatted on other devices may not be used. Format Memory Card on 821P before use.
- 821P cannot format Incompatible Memory Cards.
- If format fails, turn power off and remove Memory Card from 821P. Reinsert Memory Card and format it again.

Viewing Memory Card Files

View files in Memory Card from Data Folder. To toggle memory views, see "Viewing Data Folder" (☐F P.8-4).



- View up to 1000 Memory Card files/folders on 821P. To view hidden Memory Card files/folders, delete files, then turn 821P power off and restart it. Previously hidden files appear in equal number to those that were deleted.
- Files with names over 32 alphanumerics/extensions over six alphanumerics cannot be viewed.
- Unsupported files cannot be viewed.

Phone Data Backup

Back up Phone data to Memory Card; restore Phone data after accidental loss/alteration.

Backup Files

Phone Book	Back up Phone Book. ■ All Phone Book entries can be saved regardless of Secret mode settings. ■ Settings such as Ringtone, Notification Light, Picture cannot be backed up/restored.
Messages	Back up messages in Incoming Mail, Draft, Sent/ Unsent Messages folders. The initial portion of S! Mail messages are restored as complete S! Mail messages, and complete message retrieval is invalidated. Mail Delivery Rule can not be backed up/ restored in Incoming Mail. All restored messages from Memory Card are stored to Received folder.

Calendar	Back up Schedule entries. Settings such as Schedule Tone, Notification Light cannot be backed up/restored. Schedule entries that cannot be saved on handset (☐ P.11-3) cannot be restored. Schedule entries that date/time are not specified cannot be restored.
Bookmarks	Back up Yahoo! Keitai and PC Site Browser bookmarks.
Content Keys	Back up downloaded Content Keys. Content Keys with expiration dates or usage limits cannot be moved to Memory Card. Some applications are made for use on specific models. Contact SoftBank Customer Center, General Information (☐ P.17-40) for more information. USIM Card inserted when Content Keys were moved to Memory Card must be inserted to move Content Keys from Memory Card. After moving Content Keys to Memory Card, files requiring Content Keys cannot be opened. Move Content Keys from Memory Card to use them. Content Keys are backed up after the previous back up file is deleted. To back up Content Keys obtained after the first backup, perform <i>Move to Phone</i> before the second backup.

Notes

- Backup is not available when battery is low. Change/charge battery before backup.
- Backup/restoration activates Offline mode. When backup/ restoration starts in Offline mode, Offline mode is not canceled automatically even when backup/restoration is complete.
- When restoring files other than Content Keys from Memory Card, the same type files are all deleted from handset before restoration. Back up files saved on 821P beforehand.
- Depending on contents, Phone Book/Schedule entries, messages or bookmarks may not be backed up/restored, or may be altered beyond the parameters.
- Backup files created on other SoftBank handsets may not be restored or usable on 821P.

Backup/Restore

Check memory beforehand.

Main Menu ► Settings ► Memory Card Manager ► Memory Card Backup

- 1 Enter 4-digit Handset Code
 → ••••
 - Handset Code: 🗗 P.1-24
- **2** Select an item →
 - For *Messaging*, select a Mailbox → ♠



 
3 Backup

Copy to Memory Card or Move to Memory Card $\rightarrow \stackrel{.}{•} \rightarrow \stackrel{.}{•} \rightarrow \stackrel{.}{•}$

 Move to Memory Card appears for Content Keys backup.

Restore

Overwrite to Phone or Move to Phone →



- *Move to Phone* appears for Content Keys restoration.
- Backup date serves as file name.
 Example: "07121500.vcf" indicates that the file was backed up on 15 December 2007.

Deleting a Backup File

In Step 3, select *Overwrite to Phone* $\rightarrow \bigcirc$ \rightarrow \rightarrow Select a file to be deleted $\rightarrow \bigcirc$ [Menu] \rightarrow *Delete* \rightarrow \bigcirc

 \bullet Content Key backup files cannot be deleted.

PC File Transfers

Files moved or copied from 821P to Memory Card are managed as shown below:

● To use files saved on Memory Card via PCs, save files in folders in PRIVATE - MYFOLDER - My Items, by file type. See "Using Files" (□ P.8-9) to learn how to use files on 821P.

DCIM					Still images saved to Memory Card Still images moved/copied to Digital Camera folder
PRIVATE MYFOLDER		Utility	Calendar	Calendar.BCK	Schedule Backup files
			Contacts	Contacts.BCK	Phone Book Backup files
		Rights		Content Key Backup files	
			Drafts	Drafts.BCK	Drafts Backup files
		Mail	Inbox	Inbox.BCK	Incoming Mail Backup files
		IVIdII	Outbox	Outbox.BCK	Unsent Messages Backup files
			Sent Messages	Sent Messages.BCK	Sent Messages Backup files
	My Items	Book		E-comics, etc.	
		Bookmarks	Bookmarks.BCK	Bookmarks Backup files	
		Custom Screens	ı	S! Familiar Usability applications	
		Flash(R)		Flash® image files	
		Flash(R) Rington	es	Flash® sound files	
		Games and More		S! Applications	
		Music		Sound files with .3gp/.mp4/.m4a/.smc	
		Other Document	S	Other files	
			Pictograms		My Pictograms

PRIVATE MYFOLDER My Items			Pictures	Still images moved/copied to Main Folder in Memory Card
	My Items	Sounds & Ringtones	Sound files with .3gp/.mp4/.m4a/.mid/.midi/.amr/ .mmf/.mxmf	
		Videos	Videos moved/copied to Main Folder in Memory Card	
			Virtual Space	S! Applications for S! Town
SD_VIDEO				Videos saved to Memory CardVideos moved to Video Camera folder



- 821P temporary files are saved in Memory Card PRIVATE MEIGROUP PMC FS_TEMP folder. All files in this folder are deleted each time Memory Card is inserted into 821P; do not save PC files/folders in this folder.
- Folder layers recognizable in handset are limited to the first layer of each folder (such as, Music folder) in PRIVATE MYFOLDER My Items
- When multiple folders/files with same numbers exist in DCIM folder, the folders/files cannot be viewed on 821P.
- Some copy protected files have extensions different from the ones above.
- Images (except for Wallpaper size) captured by External Camera may rotate 90° on cross-carrier handsets or PC.

q

Connectivity

Infrared	9-2
Before Using Infrared	9-2
One File Transfer	9-3
All Phone Book Transfers	
Bluetooth®	9-5
Before Using Bluetooth®	
Bluetooth® File Transfers	
Connecting Bluetooth® Devices	
USB (Japanese)	
Location Settings	

Infrared

Before Using Infrared

Transfer Phone Book/Schedule entries, messages, bookmarks and Data Folder files wirelessly between 821P and compatible devices, including PCs and other mobiles.

 821P infrared function is based on IrMC1.1, however, some IrMC1.1-based device transmissions may not be transmitted/ received within specification.

Transferable Files

Phone Book Entries	Transfer one entry at a time or all at once ■ Ringtone, Notification Light, Picture and other entry settings are lost in transfers. Group, Secret Setting and other entry settings are also lost when one entry is transferred.
Schedule Entries	Transfer one entry at a time Schedule Tone, Alarm, Notification Light and other entry settings are lost in transfers. Entries with date/time that cannot be set on 821P are not saved (☐ P.11-3). Entries without specified date/time cannot be received.
Data Folder Files	Transfer one file at a time ■ Copy protected files may not transfer.


Messages	Transfer one message at a time ● Messages in Incoming Mail, Draft, Sent Messages and Unsent Messages folders can be transferred.
Bookmarks	Transfer one bookmark at a time



- Depending on their content, some incoming Phone Book/ Schedule entries, messages or bookmarks may not be received, or may be altered beyond the parameters listed left
- If memory becomes full, remaining entries are truncated. (Memory List: P.17-30)
- Images (except for Wallpaper size) captured by External Camera may rotate 90° on cross-carrier handsets or PC.

Notes

- Debris may inhibit infrared transfers; clean infrared ports with a soft cloth beforehand.
- Direct sunlight/fluorescent light may inhibit transfers.
- Infrared transfers are disabled while sending/receiving messages or using Internet.
- When data transfer is interrupted, it may take some time for process to complete.
- Align infrared ports within 20 cm of one another and make sure no object are placed between them. Do not move the devices until transfer is complete.

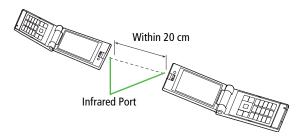

One File Transfer

Transferable Files: ☐ P.9-2

Sending

- 1 Select an item → [Menu] → Send or Local Connectivity → •
- **2** Prepare recipient device
- 3 Infrared → •••

 Transfer starts.

Receiving

Main Menu ► Connectivity ► Infrared ► ON

- When receiving transfer request from sender, confirmation appears

 File name and size appear.
- 3

Receive Data Folder Files

Phone or Memory Card → •

Transfer starts.

Receive Phone Book/Schedule Entry



Receive Messages/Bookmarks

Messages are saved in Mail Boxes, and bookmarks added to Bookmark List automatically.



- 821P receives files only in Standby.
- Infrared is canceled if no transmission is made within three minutes or handset power is turned off.

All Phone Book Transfers

Sending

Main Menu ▶ Phone Book ▶ Memory Manager
▶ Send All Phone Book via Infrared

- - Handset Code: 🗗 P.1-24
- 2 Enter Passkey → ••• Recipient must enter the same Passkey to start transfers.

Receiving

Main Menu ► Connectivity ► Infrared ► ON

- 1 to return to Standby
 - appears. Acquire signal within three minutes.
- When receiving transfer request from sender, confirmation appears
- $\mathbf{3}$ $\mathbf{\dot{\oplus}}$ to accept connection request $\mathbf{\rightarrow}$ $\mathbf{\dot{\oplus}}$
- **4** Enter 4-digit Handset Code →
 - Handset Code: 🗗 P.1-24
- 5 Enter Passkey → ♠
 Transfer starts. Phone Book entries are saved in Phone Book automatically.

Infrared Passkey

Infrared Passkey (4 digits) is required for all data transfers via Infrared. Sender and receiver must input the same Passkey to complete transfers.

Bluetooth®

Transfer Phone Book/Schedule entries, messages, bookmarks and Data Folder files wirelessly between 821P and Bluetooth® compatible devices, including PCs and other mobile handsets. Use Bluetooth® compatible handsfree devices with 821P. Connect PC to the Internet using 821P as an external modem.

Before Using Bluetooth®

Bluetooth® Specifications

Version	Bluetooth® specification Ver. 1.2
Supported Profiles*1	HSP (Headset Profile) HFP (Hands-Free Profile) OPP (Object Push Profile) SPP (Serial Port Profile) DUN (Dial-up Network Profile)
Output	Bluetooth® Power Class2
Frequency Bands*2	2.4 GHz (2.402GHz - 2.480GHz)
Communication Distance*3	Approximately ten meters

- *1 Bluetooth® connections are available with compatible devices supporting the same profile.
- *2 Bluetooth® operates in the 2.4 GHz unlicensed frequency band. Depending on other devices in use in the spectrum, Bluetooth® connection may slow down/terminate, or range may decrease.
- *3 Affected by distance between devices, obstructions, signal conditions, handset status, etc.

To View Bluetooth®-related properties

Main Menu ► Connectivity ► Bluetooth ► Details

Transferable Files

Phone Book Entries	Transfer one entry at a time ■ Ringtone, Notification Light, Picture, Group and other entry settings are lost in transfers.
Schedule Entries	Transfer one entry at a time Schedule Tone, Alarm, Notification Light and other entry settings are lost in transfers. Entries with date/time that cannot be set on 821P are not saved (☐ P.11-3). Entries without specified date/time cannot be received.
Data Folder Files	Transfer one file at a time ■ Copy protected files may not transfer.
Messages	Transfer one message at a time ● Messages in Incoming Mail, Draft, Sent Messages and Unsent Messages folders can be transferred.
Bookmarks	Transfer one bookmark at a time




- Depending on their content, some incoming Phone Book/ Schedule entries, messages or bookmarks may not be received, or may be altered beyond the parameters listed above.
- If memory becomes full, remaining entries are truncated (Memory List: 🚅 P.17-30).
- Images (except for Wallpaper size) captured by External Camera may rotate 90° on cross-carrier handsets or PC.

Notes

- 821P may not be able to establish a Bluetooth® connection with some Bluetooth® devices.
- Establish connections with certified Bluetooth® devices that meet the specification standards developed by Bluetooth SIG.
- Due to the unique characteristics/specifications of a certified Bluetooth® device, connections or transfers may fail; procedures, displayed results or operations may vary from those described in the manual.
- When data transfer is interrupted, it may take some time for process to complete.
- Noise may interfere with wireless or handsfree conversations depending on the status of connected devices or signal conditions.
- appears when communicating with handsfree devices. However, there are no icons indicating that 821P is communicating with other Bluetooth® devices.
- For details about headset/handsfree devices, see the device manuals.

Bluetooth® Connection

Activate Bluetooth® on recipient device. Connection completes when a connection request is authorized at recipient. Bluetooth® Passkey may be required. Connection Flow Example:

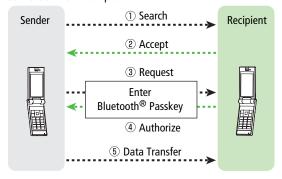

Bluetooth® Passkey

Bluetooth® Passkey (4 to 16 digits) is required to connect Bluetooth® devices; sender and receiver must input the same code to complete file transfers.

• Bluetooth® Passkey are not necessary for paired devices.

Activating Bluetooth®

<Default> OFF

Activate Bluetooth® to receive file transfers or connect a handsfree device, etc.

• 🛭 appears when Bluetooth® is *ON*.

Main Menu ► Connectivity ► Bluetooth ► Settings ► ON/OFF

1 *ON* or *OFF* → •••••

Searching & Pairing Devices

Search and connect other Bluetooth® devices. Paired devices automatically appear in Paired Device list.

- Bluetooth® Passkey are not necessary for paired devices.
- Search up to 20 Bluetooth[®] devices at one time; pair with up to ten Bluetooth[®] devices.
- Activate Bluetooth[®] before pairing.

Main Menu ► **Connectivity** ► **Bluetooth**

1 Add New Device → •

Device search starts and names of found devices appear.

Device Indicators



- To search again: [Menu] → Search → •
- **7** Select a device → ••••
- 3 Enter Bluetooth® Passkey (4-16 digits) →
 - Recipient must enter the same code within 30 seconds to complete pairing.
 - For handsfree devices, enter specified Bluetooth[®]
 Passkey.

Device Indicator like \blacksquare appears when pairing is complete.

Deleting a Device from Paired Device List

Select a device $\rightarrow \square[Menu] \rightarrow \textit{Delete} \rightarrow \stackrel{\bullet}{\underline{\bullet}} \rightarrow \stackrel{\bullet}{\underline{\bullet}}$

Accepting Connection Unconditionally with Trusted Devices

- Device Indicator appears with check (example: **\rightarrow**).
- When receiving data from the trusted device, receive confirmation appear without connection request.

Checking Paired Device List

Main Menu ► Connectivity ► Bluetooth

Paired Devices

Options

Select a device in Paired Device list and press **□**[**Menu**].

Add New Device	Search for Bluetooth® devices
Make Trust/ Make Untrust	Accept or unaccept connection unconditionally with selected device
Connect/ Disconnect	Connect or disconnect selected device
Rename	Rename selected device in Paired Device list
Delete	Delete selected device from Paired Device list
Supported Profile	View selected device properties

Bluetooth® File Transfers

● Transferable Files: 🗗 P.9-5

Sending

1 Select an item → ☑ [Menu] → Send or Local Connectivity → ♠ → Bluetooth →



Paired Device list opens. If Paired Device list is empty, device search starts.

- **2** Prepare recipient device
- 3 Select a device → •••

 Transfer starts

Receiving

Main Menu ► Connectivity ► Bluetooth ► Settings ► ON/OFF ► ON

1 to return to Standby appears.

- When sender starts transfers, connection request appears
- **3** ••• to accept connection request File name and size appear.
- ▲ in to start transfers
- **5** Receive Data Folder Files

Phone or **Memory Card** → •••

Transfer starts.

Receive Phone Book/Schedule Entry

☑[Save]

Receive Messages/Bookmarks

Messages are saved in Mail Boxes, and bookmarks added to Bookmark List automatically.



- Confirm Visibility setting if 821P cannot be searched or paired with by senders (2 P.16-13).
- When receiving data from the trusted device (☐ P.9-8), connection request does not appear.
- 821P receives files only in Standby; even in Standby, when Password Lock is active or Software Update is being performed, 821P does not receive files.

Connecting Bluetooth® Devices

Connecting Handsfree Devices

● Pair with handsfree devices beforehand (P.9-7).

Main Menu ► Connectivity ► Bluetooth ► Paired Devices

- **1** Select a device → ♠ [Conn.] When connected, Device Indicator appears.
 - To disconnect: ♠ [Disc.]



- In Standby, make calls from a handsfree device.
- Accessing the Internet on PC or PDA via 821P may incur high packet communication charges.

Settings

Settings ● Activate Auto Answer when using handsfree devices
(□ P.16-10) ● Use handset to operate any call initiated
via handset while handsfree device connected
(□ P.16-13)

USB (Japanese)

Connect 821P to a PC via USB cable for these functions.

	Back up 821P Phone Book, music files or still
Data Turnefor	images to PC. Transfer still images edited/ created on a PC to 821P.
Data Transfer	● Savable File Format: 🗗 P.8-2
	 Copy protected files may not transfer.
Data Communication	Use 821P as a modem for Internet access. ■ To set up Internet access, see Help on Utility Software CD-ROM (Japanese). ■ Terminate all 821P applications before Data Communication starts. ■ Accessing the Internet on PC or PDA via 821P may incur high packet communication charges.

- First, install "820P_821P USB-Handset Manager" and USB driver on a PC before connecting 821P to the PC via USB cable. For PC hardware requirements or installing procedures, see Setup Guide on Utility Software CD-ROM (Japanese).
- Power up 821P before connecting to PC via USB cable.
- Bluetooth®/Infrared unavailable during USB connection.

Location Settings

Retrieve 821P Location Information.

• Only available within 3G network coverage in Japan.



Emergency Positioning Request

When an emergency call is made from 821P, location detected by nearby base station is reported to Emergency response agencies such as the police (\square P.2-4).

10

Handset Security

Changing Handset Code	10-2
USIM PINs	10-2
PIN Entry	10-2
Changing PIN	
PIN Lock & Cancellation (PUK)	
Security Functions	10-4
Keyguard	10-4
Password Lock	10-4
Secure Remote Lock	
Reject Incoming Calls	10-5
Rejecting Specific Calls	
Rejecting Specific Numbers	10-6
Secret Mode Setting	
Reset	10-7
Reset Settings	10-7
All Reset	10-8

Note

Changing Handset Code

<Default> 9999

Change Handset Code as required.

● For Handset Code details: 🗗 P.1-24

Main Menu ▶ Settings ▶ Security ▶ Change Password

1 Enter current 4-digit Handset Code → •••

2 Enter new 4-digit Handset Code → •

3 Reenter new Handset Code → •••

If Handset Code is incorrectly entered three times, warning message appears. Turn off handset and retry to enter.

USIM PINs

● For more information about PINs: 🗗 P.1-4

PIN Entry

<Default> OFF

Activate to require PIN entry each time 821P is turned on.

Main Menu ► Settings ► Security ► PIN1 ON/OFF

1 *ON* or *OFF* → ••••

2 Enter PIN1 → ••••

When PIN Entry is **ON**:

• Signal Indicator may take some time to appear in Standby after entering PIN1.

• Enter PIN1 to dial emergency numbers (110, 119, 118).

Changing PIN

<Default> 9999

Change PIN1 or PIN2.

● Activate PIN Entry before changing PIN1 (P.10-2).

Main Menu ► Settings ► Security ► Change PIN1 or Change PIN2

- 1 Enter current PIN1/PIN2 → •
- **2** Enter new PIN1/PIN2 → •••
- **3** Reenter new PIN1/PIN2 → ••••

PIN Lock & Cancellation (PUK)

PIN1 Lock or PIN2 Lock is activated if PIN1 or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering Personal Unblocking Key (PUK1/PUK2).

- For information about PUK, contact SoftBank Customer Center, General Information (☐ P.17-40).
 - In PIN lock mode, enter PUK → 👍
 - **2** Enter new PIN1/PIN2 → •••
 - **3** Reenter new PIN1/PIN2 → 🐽



- If PUK is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK.
- For procedures required to unlock USIM Card, contact SoftBank Customer Center, General Information (P.17-40).

Security Functions

Keyguard

Lock handset keys to prevent accidental operation.

While locked, appears in Standby.

Lock Keyguard

In Standby, press and hold





Unlock Keyguard

When \bigcirc appears in Standby, \bigcirc \longrightarrow \square [YES]





- ◆ Alternatively, Main Menu
 ▶ Settings ▶ Phone Settings ▶ Keyguard.
- Emergency numbers (110, 119, 118) are dialable even if Keyguard is locked (number does not appear on Display). To correct misentries, press , then re-enter number.
- If Keyquard is locked, 821P will not power down. Unlock Keyguard then press and hold ...

Password Lock

<Default> OFF

Set Password Lock to require Handset Code after 821P powers up, or after two minutes of inactivity in Standby.

- While Password Lock is set, 🔓 appears in Standby.
- Handset Code: T P 1-24

 
Main Menu ► Settings ► Security **Password Lock**

- *ON* or *OFF* → ••••
 - For *ON*, press •
- Enter 4-digit Handset Code → 💼

Temporary Unlock

Note

When 🔓 appears in Standby, enter 4-digit Handset Code → 📥



- Emergency numbers (110, 119, 118) are dialable even when Password Lock is active.
- If Keyquard is locked and Password Lock active. Keyguard takes priority. If Keyguard is canceled, Password Lock activates after two minutes of inactivity in Standby.

Secure Remote Lock

If handset is lost or stolen, lock handset by remote operation using a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp) or My Softbank.
- Accessing My SoftBank

Main Menu ▶ Yahoo! Keitai ▶ Yahoo! Keitai ▶ メニューリスト ▶ My SoftBank ▶ English

Follow onscreen instructions.

Reject Incoming Calls

Rejecting Specific Calls

<Default> OFF

Reject calls from unknown numbers (numbers not saved in Phone Book, blocked Caller ID, pay phones, etc.).

Main Menu ► Settings ► Call Settings ► Reject Incoming Calls

- **1** *Unknown, Withheld, Payphone* or *Unavailable* → ♠
- **2** *ON* or *OFF* → ••••

Rejecting Specific Numbers

Add numbers to Reject List to reject specific incoming calls. Then set *Activate Reject List* to *ON*.

Add Numbers to Reject List

Main Menu ► Settings ► Call Settings

- Reject Incoming Calls Reject List
- Edit Reject List

Editing/Deleting a Number in Reject List

Select a number in the list $\rightarrow \square[Menu] \rightarrow \textit{Edit}$ or $\textit{Delete} \rightarrow \square$

Reject List

<Default> OFF

Main Menu ► Settings ► Call Settings

- ► Reject Incoming Calls ► Reject List
- Activate Reject List
- **1** *ON* or *OFF* → ••••

Calls from Rejected Numbers

Handset does not ring/vibrate, but Information window appears. Press 👚 to confirm.

 If call is rejected because Caller ID was not sent (Withheld), caller is instructed via Voice Message or Picture to send ID.

Set 821P to reject all incoming calls or incoming calls while abroad (Call Barring: 1) P.17-6).

Secret Mode Setting

<Default> OFF

Activate Secret Mode to use Secret Phone Book entries. When Secret Mode is active *** appears in Standby.

● Saving to Phone Book (P.4-3)

Main Menu ► Settings ► Security ► Secret Mode

- **1** *ON* or *OFF* → ••••
- 2 Enter 4-digit Handset Code →

 ⊕ Handset Code: P.1-24
- When Secret Mode is *OFF*, only numbers/mail addresses appear for incoming communications from Secret entries.

Reset

Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset ► Reset Settings

- 2 Enter 4-digit Handset Code → ♠ 821P automatically turns off and restarts.

 Handset Code: P.1-24
- ote Some default settings may not be restored.

All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu ► Settings ► Security ► Reset ► All Reset

- 2 Enter 4-digit Handset Code → ♠
 821P automatically turns off and restarts.
 - Handset Code: 🗗 P.1-24
- 3 Enter Date $\rightarrow \stackrel{\bullet}{•} \rightarrow$ Enter Time $\rightarrow \stackrel{\bullet}{•}$



- Charge battery fully (i appears) before All Reset.
- Handset Code is reset to default.
- USIM Card/Memory Card files are not affected.
- Non-restorable items deleted by All Reset:
 - Customized settings, call logs, downloaded S! Applications, etc.
 - User-downloaded S! Town data
- Pre-installed S! Applications, Flash[®] or e-Book files deleted by user are not recovered by All Reset.

Tools/Bar Code Reader

Calendar	
Opening Calendar	11-2
Creating Calendar Events	11-3
Editing Calendar Events	11-5
Deleting Calendar Events	
Alarms	11-6
Setting Alarm	
Canceling & Reactivating Alarm	11-8
Calculator	11-9
Memo Pad	
Saving a New Memo	
Editing a Memo	11-10
Voice Recorder	11-10
Bar Code Reader	
Scanning Barcodes	
Using Barcode Data	11-12
Viewing Saved Data	
Advanced Features	
Calendar Memory Status	
Memo Pad Functions	
Bar Code Reader Functions	

Calendar

View by day, week or month; set Alarms for events.

Opening Calendar

- 1 In Standby, F
 - When a date with schedule events is selected, up to five events appear.



[One Month Window]

Month View Key Assignments

Operation	Assigned Key
Move Cursor	X
Show Previous Month	X7-A
Show Next Month	•



Switching to Week View

<Default> One Month

Select One Week view to see daily schedules.

- 1 In One Month window, ⊠[Menu] → View
 Format → •••
- 2 One Week → •



[One Week Window]

Week View Key Assignments

Operation	Assigned Key
Move Cursor	
Scroll Up/Down	
Show Previous Time Block	X*-
Show Next Time Block	D.

Creating Calendar Events

Save up to 100 entries.

Item	Description	
Note	Enter a content	
Category	Select an event type; icon appears in Standby	
Start	Set date and time the calendar event starts	
End	Set date and time the calendar event ends	
Repetition	Set entry to appear again at regular intervals	
Reminder	Set alarm time	
Location	Enter location	
Schedule Tone	Set schedule alarm ringtone	
Schedule Volume	Set schedule alarm volume	
Notification Light Set schedule alarm notification ligh		



Schedule events between 00:00 on 2007/01/01 and 23:59 on 2099/12/31 can be saved on 821P.

- In Standby, 📅
- to select a date → **Image** [Menu] → *New Entry* **→**
- Select an item → 💼



4 Set the following as required

	Note	Enter title → ♠ Select category → ♠ Enter date → ♠ → Enter time →	
1	Category		
	Start		
	End	-	
7	Repetition	Select a repeating type → ♠ → Enter repeating time → ♠	
ĝ	Reminder	OFF, Start Time or 5-90 min. ahead → 🎰	
A	Location	Enter location → •	

J	Schedule Tone	Schedule Tone → ♠ Or Ring Songs&Tones or Music → ♠ → Select a file → ☑[Set]		
	Schedule Volume	Adjust volume by □ → ⊕		
	Notification Light	Select color or <i>OFF</i> →		

5 □[Save]

Schedule Icon

Selected icons in Category appears in Standby.

Example: 🎤 (Meeting), 🎬 (Anniversary), 🚜 (Birthday)

• If nothing selected, 👸 appears.



Copy Protected Files

- When set as Alarm Tone sound, license may expire, or inserting a different USIM Card may reset default.
- Limited use files cannot be set as Alarm Tone sound.

Viewing Calendar Event Details

- In Standby, 🗗 → Select a date → 👜
- Select a schedule → 🚉 Detailed schedule appears.
 - 🕍 to switch Schedule tab and Note tab.
- [Back] to exit



[Event Details Windowl



More

●Viewing Calendar Memory Status (ピアP.11-13)

At Reminder Time

If Reminder is set, Schedule Tone sounds and Notification Light flashes.

- 1 When Schedule Tone sounds, Schedule Tone stops and Calendar List appears.
- 2 🎃 to view details

Canceling Schedule Tone

- 🖦 to return to Standby.
- **[Stop]** to return to previous menu.
- Press any key except for ¬, ¬, ¬, ¬, □, [View] or ⊕ to cancel Schedule Tone without returning to Standby. Press ⊕ to view detailed schedule.



Schedule Tone does not sound in the following cases:

- During a call (Notification appears and 821P vibrates)
- In Manner mode (Manner settings take priority)
- When handset power is turned off
- For entries invalidated by Time Correction

Editing Calendar Events

- In Standby, 📅
- **2** Select a date → 💼
- Select a calendar event $\rightarrow \square[Menu] \rightarrow \textit{Edit}$
- **∆** Select an item \rightarrow ♠ \rightarrow Edit
 - To edit a calendar event: 🗗 P.11-3
- **5 □**[Save] to end

Deleting Calendar Events

Deleting a Calendar Event

- 1 In Standby, 📅
- **2** Select a date → 💼
- 3 Select a calendar event → [Menu] → Delete → → •

Deleting Multiple Calendar Events

 When deleting the events on scheduled date or in the past, repetitive entries cannot be deleted.

1 In Standby, 🗗

2 Select a date $\rightarrow \square[Menu] \rightarrow \textit{Delete} \rightarrow \textcircled{+}$

3 Delete Events on Scheduled Date

Delete Events before Current Date

 $Past \rightarrow \begin{bmatrix} \bullet & \bullet & \bullet & \bullet \\ \bullet & \bullet & \bullet & \bullet \end{bmatrix} \rightarrow \begin{bmatrix} \bullet & \bullet & \bullet \\ \bullet & \bullet & \bullet & \bullet \end{bmatrix}$

Delete All Events

 $A// \rightarrow \bigcirc \rightarrow \bigcirc [YES] \rightarrow \text{Enter 4-digit Handset}$ Code $\rightarrow \bigcirc \bigcirc$

● Handset Code: 🗗 P.1-24

Alarms

Setting Alarm

Set up to five alarms. Alarm Tone sounds at the specified time once, everyday or weekly as set.

• gappears in Standby when Alarm is set.

Item	Description	
Alarm ON/OFF	Activate or cancel Alarm	
Time	Set Alarm time	
Repetition	Select repetition	
Alarm Tone Set Alarm Tone sound		
Set Alarm Snooze	Alarm Tone sounds for 60 seconds, repeating up to five times at specified intervals	
Alarm Volume	Set Alarm Tone volume	
Pictures	Select image to appear	
Set Alarm Vibration	Select Vibration type	
Notification Light	Select Notification Light color	
Set Alarm Priority	Set Manner mode or Alarm priority	

Main Menu ► Tools ► Alarms

Select an alarm → 🚉

Select an item → 💼



Set the following as required

Q/ ©	Alarm ON/ OFF	ON or OFF→ ∰		
	Time	Enter time → 🎂		
7	Repetition	Once, Everyday or Weekly →		
J	Alarm Tone	Alarm Tone → Or Ring Songs&Tones or Music→ → Select a file* → [Set]		

Q	Set Alarm Snooze	enter interval → ♠ Adjust volume by ♠ Select a still image → ♥ [Set] Select pattern or OFF → ♠ tion Select color or OFF → ♠		
	Alarm Volume			
	Pictures			
	Set Alarm Vibration			
	Notification Light			
24	Set Alarm Priority			

^{*} When selecting a SMC file, select a Play Point and press **□**[Set].

⊠[Save]

- **Copy Protected Files**
 - When set as Alarm Tone sound, license may expire, or inserting a different USIM Card may reset default.
 - Limited use files cannot be set as Alarm Tone sound.

At Alarm Time

Alarm Tone sounds, Notification Light flashes, 821P vibrates, etc. as set.

Press any key

Alarm stops and confirmation window appears. (When pressing , confirmation does not appear.)

• Stops automatically after 60 seconds of inactivity.

Snooze Function

If **ON**, press any key except **,**; confirmation appears. To cancel Alarm, **[Stop]**.

 When pressing to stop alarm, confirmation does not appear. (Snooze function is still active.)



Alarm Tone does not sound in the following cases:

- During a call (notification appears and 821P vibrates)
- In *Manner Mode Prioritized* (Manner settings take priority)
- When handset power is turned off
- For entries invalidated by Time Correction

Canceling & Reactivating Alarm

Activate a canceled Alarm to apply previous settings.

Main Menu ► Tools ► Alarms

- $2 \ \ {\boxtimes} [\mathsf{Menu}] \to \mathit{Alarm ON}$ or $\mathit{Alarm OFF} \to {}_{\textcircled{\tiny 1}}$



Calculator

Complete basic mathematical calculations up to ten digits.

Main Menu ► Tools ► Calculator

Assigned key
0 total - 9 wxxz
•
Qb
Y? / 247964
#·*@

 


Entering Negative Numbers

Enter a number then press #** to toggle negative/positive value.

■ Example

-17+28.5=11.5



Memo Pad

 
Saving a New Memo

Main Menu Tools or Data Folder Memo Pad

- \square [Menu] \rightarrow *New* \rightarrow \blacksquare
- Enter text →

New memo is added to the top of the list.

• Up to 64 characters can be entered.



[Memo Pads Window]

Editing a Memo

Main Menu ► Tools or Data Folder ► Memo Pad

- **1** Select a memo → •
- 2 Edit text → ••• Edited memo is overwritten.

Deleting Memos



More ● Viewing Details (🖆 P.11-13)

Voice Recorder

Record voice memos of up to 60-seconds.

● Recording during a call: 🗗 P.2-8

Main Menu ► Tools ► Voice Recorder

- 1
- Recording starts.
- 2 to stop recording
 To play:



Bar Code Reader

Scan barcodes (JAN) or QR Codes with built-in camera. Access websites, send messages, etc. from QR Codes.

- Handset automatically detects code type.
- Up to ten items can be saved.
- For split data, up to 16 QR Codes can be scanned at a time and saved as one item.



- 821P cannot read barcodes other than JAN codes.
- QR Code is a two-dimensional bar code containing information.



- Scan may fail if barcodes are dirty or unclear.
- Scan one code at a time; otherwise scan may fail.

Scanning Barcodes

Main Menu ▶ Bar Code Reader ▶ Scan Barcodes

- **1** Frame barcode in the center of Display
 - To adjust display brightness: ★ or #**
 - To zoom: <a>Image: <
 - To use Focus Lock: 💁
- 2

Scanning starts, and scanned results appears when completed.

- For split data, → Repeat Step 1 and 2
- **3 Y**['][Save]



[Scanned Results Window]



- If recognition stalls, adjust display brightness and retry.
- Brightness can be adjusted while scanning; however, zoom level can not be changed.
- When memory is full, warning appears. Delete old data.

Using Barcode Data

Select URLs, mail addresses or phone numbers in scanned data and press •; operations below are available.

URL (http:// or https://)	Connect to websites; add to Bookmarks (☐ P.13-9)		
URL (rtsp://)	Streaming; add to Bookmarks		
Mail Address	Create new S! Mail messages (ピアP.12-4); save to Phone Book (ピアP.4-4)		
Phone Number	Make calls; create messages* (S! Mail: ピアP.12-4/SMS: ピアP.12-8); save to Phone Book (ピアP.4-4)		
Phone Book Data (MEMORY: text)	Save to Phone Book ■ Save <i>MEMORY:</i> text only ■ Saved to <i>Phone</i> regardless of <i>Save Settings</i> selection		

^{*} SoftBank handset numbers only

●Inserting Scanned Text into Messages ●Copying Text More from Scanned Results (P.11-14)

Viewing Saved Data

Main Menu Bar Code Reader Saved Data List

- Select data → 💼
 - Saved items are automatically named "yymmdd_hhmmss" unless changed. (yy: year, mm: month, dd: day, hh: hour, mm: minute, ss: second)



[Saved Data List Window]

Changing Data Titles Select data $\rightarrow \square[Menu] \rightarrow Rename \rightarrow \stackrel{\bullet}{\blacksquare} \rightarrow Edit title \rightarrow \stackrel{\bullet}{\blacksquare}$ **Deleting Data** Select data $\rightarrow \square[Menu] \rightarrow Delete \ One \rightarrow \triangle \rightarrow \triangle$

More Advanced Features

Calendar Memory Status

In Standby, $\mathbb{F} \rightarrow \square[Menu] \rightarrow Memory Status \rightarrow \mathbb{F}$

Memo Pad Functions

From [Memo Pads Window] P.11-9

Viewing Details [Property]

[Memo Pads Window] Select a memo → [Menu] → Property → •

Bar Code Reader Functions

From [Scanned Results Window] P.11-11

Inserting Scanned Text into Messages [Paste Data & Create Mail]

[Scanned Results Window]

[Menu] → Paste Data & *Create Mail* \rightarrow $\stackrel{\bullet}{\blacksquare}$ \rightarrow *S! Mail* or *SMS* \rightarrow $\stackrel{\bullet}{\blacksquare}$

Copying Text from Scanned Results [Copy]

Copy All Text

[Scanned Results Window] \square [Menu] \rightarrow Copy \rightarrow $\stackrel{.}{•}$ \rightarrow

 \mathbf{Y} [All] $\rightarrow \mathbf{\Phi}$

Copy Selected Text

[Scanned Results Window] \square [Menu] \rightarrow Copy \rightarrow $\stackrel{.}{•}$ \rightarrow Place cursor before (or after) text to copy $\rightarrow \blacksquare \rightarrow$ Place cursor after (or before) text to copy \rightarrow \clubsuit

12

Messaging

Available Entry Items & Character Entry Limits Messaging Folders & Memory Status Customizing Handset Address Sending S! Mail & SMS Sending S! Mail Sending SMS Messages	512-2 12-3 12-4 12-4
Receiving & Viewing Messages	12-9
Opening New Messages	12-9
Window Description	12-10
Retrieving Complete S! Mail	12-11
Opening & Saving Attachments	12-11
3D Pictograms	12-12
Viewing Server Mail	
Incoming Mail Folder	
Mail Delivery Rule	
Renaming Folders	
Using Messages	12-14
Checking Messages in Messaging Folders	
Replying to Messages	
, , ,	

Advanced Features	12-15
Adding Recipients/Attachments	12-15
Delivery Functions	12-15
Arrange Mail Functions	12-16
Manually Retrieving Messages/	
System Message	
Message Display	
Organizing Messages	12-17
Using Messages	12-18

Basics

Send messages via S! Mail or SMS.

S! Mail [Separate subscription required]	Exchange text messages with SoftBank or e-mail compatible handsets, PCs, etc.; attach image or sound files etc. • 821P is compatible with Arrange Mail (1 P.12-6) and Feeling Mail (1 P.12-6).		
SMS	Exchange short text messages with SoftBank handsets.		

• For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Available Entry Items & Character Entry Limits

	lte	m	S! Mail		SMS	
		E-mail Address	0	Up to 246 single- byte alphanumerics /Up to 20 recipients	×	-
	Address	Phone Number *1	0		0	Up to 20 single-byte alphanumerics /ten recipients
	Subject O		Up to 256 double-/ single-byte alphanumerics	×	•	

Item	S! Mail		SMS	
Text	0	30 KB* ²	0	Up to 70 double-/ single-byte alphanumerics *3
Attachment	0	Up to 20 files	×	-


- *1 SoftBank handset numbers only
- *2 S! Mail Entry Limit decreases when mail attachments exceed 260 KB.
- *3 When text entry mode is set to single-byte alphanumerics (⊈ P.16-17), up to 160 single-byte alphanumerics can be entered.



- Send up to 300 KB including subject, message text and attachment via S! Mail. Message text character limit differs by attachment size.
- SMS messages can be converted to S! Mail, but not in the following cases:
 - S! Mail memory is full (☐ P.12-3)
 - During a call (S! Mail messages cannot be created during a call)
- S! Mail cannot be converted to SMS.

Messaging Folders & Memory Status

Messages are organized in folders by message type.

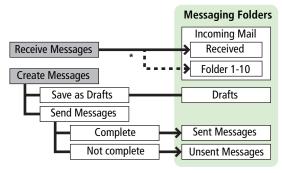

^{*} Set Mail Delivery Rule (P.12-13) to sort received messages automatically.

Deleting Messages Automatically

When memory for Drafts/Sent Messages/Unsent Messages is low, old Messages in Sent Messages folder are automatically deleted one by one. Protect important messages from unintentional deletion (P.12-17). Messages other than sent messages are not deleted automatically.

When Messaging Memory is Full

Received Full) or (SMS Memory Full) appears in Standby and no more new incoming messages are received. Delete old messages in Incoming Mail folder (P.12-17). Retrieve new messages after deleting some S! Mail (P.12-17).

 


●Mail Security Setting (ピアP.16-14) ●Set not to store sent SMS (ピアP.16-17)

12

Customizing Handset Address

Change your handset mail address (alphanumerics before @) to reduce the risk of receiving spam. Default account name is random alphanumerics.



- For details, contact SoftBank Customer Center, General Information (P.17-40).
- Handset mail address cannot be changed in Offline mode.
- For operations while using Internet: ☐ P.13-7
 - $\square[\square] \rightarrow Settings \rightarrow \dot{\blacksquare}$
 - Custom Mail Address → 821P connects to the Network.

Follow onscreen instructions.

Sending S! Mail & SMS

Sending S! Mail

Example: Select a Phone Book entry to send S! Mail.

In Standby, press and hold \square




<Add Address> → 🚉 → Phone Book → •



3 Select a Phone Book entry → → Select a SoftBank handset number or mail address → •••



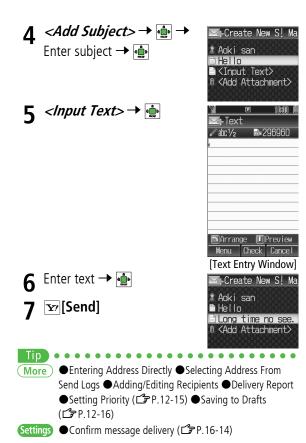

Adding Attachments

Example: Attach Picture files to S! Mail.

After Step 6 (△FLeft) < Add *Attachment>* → •••



Select a folder in Data Folder → • Select a file →

⊠[Set]

Y/ [Send]





- Some files can not be attached depending on the file format or size.
- Some copy protected files can not be sent.



●Adding/Deleting Attachments (ピアP.12-15)

Sending Feeling Mail

Apply Feeling Mail setting to S! Mail; recipient handset responds according to link to Feeling settings.

- Send Feeling Mail to compatible SoftBank handsets only.
- Ringtone, vibration and notification light settings vary depending on Feeling Expression of recipient handset (☐FP.16-16).
 - After Step 6 on page 12-5,

 [Menu] → Sending

 Options → → Feeling

 Expression → •
- 2 Select an item → ♠ →
 Select an icon → ♠
 Selected icon appears in Subject field.
- **3 ∑**⁄⁄ [Send]





Arrange Mail

Create HTML messages; select font color/size, background color, or insert images, etc.

Example: Use various Templates to create Arrange Mail.

- Change font size
- Scroll text
 - - To preview the template: Select a template → ♠ → [Fack]
- 2 Select Text field → → Edit the template field









- 4 Select Font size → ••• →
 Enter text → •••

- 7 Start Scrolling → → □ [Close]
- **8** ☐ (Side Key) to preview → **Y**/[**Back**]
- $9 \stackrel{\bullet}{•} \rightarrow \boxed{\text{Y'}}[\text{Send}]$

Reset Operations

- To cancel previous operation: Close Arrange Palette →
 [Menu] → Undo →
- To reset all Arrange operations: ¬→ Reset All Arrange →
 → ♠







Note

In Simple Mode, text in composition window appears in Large Size regardless of Font Size setting. When placing cursor at text, Font Size icon (: Large Size, : Small Size) appears. (When Normal Size is selected, Font Size icon does not appear.)

In preview window, text appears in selected font size.

More ● Using Other Arrange Settings ● Saving Templates ● Downloading Templates via Internet (□ → P.12-16)

Sending SMS Messages

Example: Select a Phone Book entry to send SMS.

In Standby, \square \square \square Create New SMS → •



[Composition Windowl



Select a Phone Book entry → • Select a SoftBank handset number → •

<Add Address> → ••• → Phone Book → •••



- <Input Text>→ 🚉
- Enter text → ••••
 - When entered text exceeds entry limit, S! Mail conversion option message appears.
- 🛂 [Send]



 
[Text Entry Window]

Manual Mail Conversion

In SMS composition window, \square [Menu] \rightarrow Switch Message *Type* → •••

aiT

(More ■Entering Address Directly ■Selecting Address from Send Logs ● Adding/Editing Recipients ● Delivery Report (☐ P.12-15) ● Setting SMS Expiry Time ● Saving to Drafts (☐ P.12-16)



Receiving & Viewing Messages

Opening New Messages

When a new message is received,

appears and Information window opens in Standby.

● Auto Download retrieves complete messages and any attachments.

Transmission fees are incurred; adjust to use. (To cancel Auto Download:

□ P.16-15)

 


Receiving Feeling Mail

Ringtone, vibration and notification light respond according to emotion settings, and Information window opens.



1 Message → 🎃



? Select a folder → ••••

■ Received (1/5)
■ 07/09/05 10:00
■ Hello
■ 0800XXXXXXX
■ A Kato san

[Message List Window]

3 Select an unread message →



[Message Window]

Note

When receiving messages while out of Standby, Message tone may not sound and Notification Light may not flash.
☐ flashes for new messages instead. During a call, two beeps sound from Earpiece.

More


● Retrieve Messages Manually (🖆 P.12-17)

Settings

● Change ringtone ● Change ringer volume ● Change ringtone duration (P.16-2) ● Set Notification Light for incoming messages (P.16-7) ● Open Incoming Mail folder each time 821P is opened after receiving new message (P.16-14) ● Feeling Mail Settings (P.16-16)

Window Description


Messaging Folder Contents

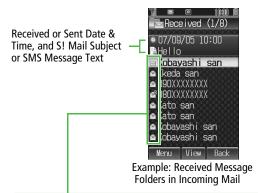

Message Type/Status



Message Contents

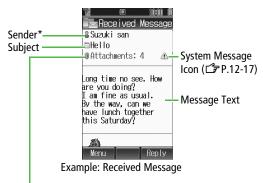

Number of Attachments

The number of files (images, sounds, videos, text, etc.) appears.

* For Sent Message, recipient appears



- Status icons for protected/forwarded/replied SMS messages saved in USIM Card do not appear.
- After retrieving complete messages, S! Mail Notice icons with **\(\subseteq \)** (Forwarded) or **\(\infty \)** (Replied) change to **\(\infty \)** (S! Mail).
- Messages remain protected after complete messages are retrieved via protected S! Mail Notices.



- Sorting Messages Viewing System Messages More
 - Changing Font Size (P.12-17)

Retrieving Complete S! Mail

S! Mail may not be downloaded automatically while out of Standby. When the Center sends the initial portion of Mail, retrieve the complete Mail.

At the end of message text, highlight *There are* sequels → 🏥



Retrieving a Complete Message

In received message list, \square [Menu] \rightarrow Retrieve \rightarrow $\stackrel{\blacksquare}{\blacktriangleright}$ \rightarrow One → 🐽

Retrieving Multiple Complete Messages

In received message list, select S! Mail Notice (a message with \bowtie or \bowtie) $\rightarrow \bowtie$ [Menu] \rightarrow Retrieve $\rightarrow \stackrel{\bullet}{\blacksquare} \rightarrow$ Selected *Messages* → \clubsuit → (Repeat: Select a message → \clubsuit)* →

□ [Retrieve] → •

 
* To cancel selection, press 녶 again.

Opening & Saving Attachments

In Message window, ☑ [Menu] 🛚 → Attachment List → 💼



Y7 [Back]







- When messages are opened, attached image files appear/play automatically.
- (Silver) appears with file requiring a Content Key. If Content Key has expired, warning appears when opening a file. Acquire new Content Key (P.8-6).

File formats Supported by Auto Playback

- Picture files (JPG, GIF, PNG)
- Music files (SMAF, AMR, MIDI, SP-MIDI)



- Settings Set not to open attached image files automatically
 - Play attached music files automatically (P.16-15)

Animate compatible message text, Pictograms and Emoticons.

Incomplete S! Mail text does not appear animated.

1 In Message window,

☑ [Menu]



The first 150 characters of message text appear animated.

- To pause/resume: 🛖
- To cancel: <a> [Stop]



Tip Settings

- ●Enable 3D Pictograms when opening messages
- Change font or background color (ピアP.16-17)

Viewing Server Mail

Retrieve Mail List stored at the Center to view Server Mail.

- 1 In Standby, <a> □ □ → Server Mail Box → □ → Mail List → □
- 2 □ [Update] \rightarrow □

Incoming Mail Folder

Mail Delivery Rule

- Previously received messages are not sorted.
- If the same address or subject is saved in multiple folders, lowest numbered Folder has priority.
- Either address or mail subject can be specified per folder.

Sorting by Sender's Address

- Specify up to ten addresses per folder.
- 1 In Standby, $oxtimes [oxtimes] o Incoming Mail o \dot{\textcircled{1}}$
- 2 Select Folder 1 10 →

 [Menu] → Mail Delivery

 Rule → •



 
- $\mathbf{3}$ \square [Menu] → Add Address → $\stackrel{\bullet}{\blacksquare}$
- - To delete set address: Select an address → ☑[Menu] →
 Delete → ♠



5 [Back]

Sorting by Mail Subject

- Specify up to one subject per folder.
- SMS cannot be sorted.



Renaming Folders

- 1 After Step 1 on left, select Folder 1 10 → [Menu] → Rename → •
- **2** Enter a folder name → ••••



Using Messages

Checking Messages in Messaging Folders

- **1** ⊠[⊠] → Incoming Mail, Drafts, Sent Messages or Unsent Messages →
 - In Incoming Mail folder, select a folder then message.
 - Messaging Folders: 🗗 P.12-3
- **2** Select a message → •

More

● Deleting Messages ● Protecting Messages (P.12-17) ● Forwarding Messages ● Using Messages in Drafts ● Using Linked Information ● Using Sender's/Recipient's Information ● Sending Unsent Messages ● Using Sent Messages (P.12-18)

Replying to Messages

- In Message window,
 [Y/][Reply]
 - Re: appears before Subject of reply.
- 2 Complete message →
 [Yz][Send]



Replying to All Addresses

In Message window, $igotimes [Menu]
ightharpoonup Reply
ightharpoonup rac{1}{2}
ightharpoonup Complete message
ightharpoonup rac{1}{2} [Send]$



- Alternatively, select a message in message list to reply to
 → [Menu] → Reply → ♠ → To Sender or
 Reply to All → ♠.
- When replying/forwarding a message, words used in received message take priority in Forecast list (P.3-8).



●Set not to prioritize words in received message when replying/forwarding (ピア.16-14) ●Quote message text when replying (ピア.16-15)

More Advanced Features

From [Composition Window] [Text Entry Window]
S! Mail: P.12-4, P.12-5/SMS: P.12-8
[Message List Window] [Message Window] P.12-10

Adding Recipients/Attachments

Entering Address Directly [Enter Number or Enter Address]

[Composition Window] <Add Address> → ♠ → Enter Number or Enter Address → ♠ → Select a SoftBank handset number or mail address → ♠

Selecting Address From Send Logs [Send Logs]

[Composition Window] <Add Address> $\rightarrow \bigoplus \rightarrow$ Send Logs $\rightarrow \bigoplus \rightarrow$ Select a record $\rightarrow \bigoplus \bigcirc$

Adding/Editing Recipients

Add Recipient

[Composition Window] Select Address field $\rightarrow \bigoplus \rightarrow \boxtimes$ [Menu] $\rightarrow Add \rightarrow \bigoplus \rightarrow$ Select or enter a recipient $\rightarrow \boxtimes$ [Select]

Edit Recipient

[Composition Window] Select Address field $\rightarrow \bigoplus \rightarrow$ Select an address $\rightarrow \boxtimes$ [Menu] \rightarrow Edit $\rightarrow \bigoplus \rightarrow$ Edit address $\rightarrow \bigoplus \bigcirc$

Delete Recipients

[Composition Window] Select Address field $\rightarrow \bigoplus \rightarrow$ Select an address $\rightarrow \bowtie$ [Menu] \rightarrow Delete $\rightarrow \bigoplus$

Change To/Cc/Bcc (S! Mail only)

[Composition Window] Select Address field $\rightarrow \stackrel{•}{•} \rightarrow$ Select an address $\rightarrow \bowtie$ [Menu] \rightarrow Change To/Cc/Bcc $\rightarrow \stackrel{•}{•} \rightarrow$ To, Cc or Bcc $\rightarrow \stackrel{•}{•} \rightarrow$

Adding/Deleting Attachments

Add Attachments

[Composition Window] Select Attachment field $\rightarrow \stackrel{\bullet}{\bigoplus} \rightarrow \bowtie$ [Menu] $\rightarrow Add \rightarrow \stackrel{\bullet}{\bigoplus} \rightarrow$ Select a folder $\rightarrow \stackrel{\bullet}{\bigoplus} \rightarrow$ Select a file $\rightarrow \bowtie$ [Set]

Delete Attachments

[Composition Window] Select Attachment field $\rightarrow \bigoplus \rightarrow$ Select a file $\rightarrow \boxtimes$ [Menu] \rightarrow Delete $\rightarrow \bigoplus$

Delivery Functions

Delivery Report [Sending Options: Delivery Report]

Setting Priority [Sending Options: Set Priorities]

Setting SMS Expiry Time [Sending Options: Expiry]

[Composition Window] □ [Menu] → Sending Options → Settings Set a time limit to store all sent SMS at the Center (**⊈**P.16-17)

Saving to Drafts [Save as Drafts]

[Composition Window] □ [Menu] → Save as Drafts → •

Arrange Mail Functions

Using Other Arrange Settings

Text Entry Windowl → Select an Arrange item → • → Follow the steps below

Arrange Items

Select Arrange Area	Specify text to be arranged Place cursor before (or after) text → [Start] → Place cursor after (or before) text → [End] → Select an icon → Follow the steps To cancel selection: while highlighted
Font Color	Change color Select a color → •
Start Blink	Flash text
Background Color	Change background color Select color → ♠

Insert Files	Insert images, BGM or Flash® Select File → ♠ → Select a folder → ♠ → Select a file → □ [Set] • To delete BGM, Delete BGM → ♠
Reset All Arrange	Cancel Arrange Mail settings
Font Size	Change font size Select font size →
Alignment	Align text Select alignment → •
Start Scrolling	Scroll text
Start Swing	Swing text
Insert Line	Insert separator line
My Pictograms	Insert My Pictograms Select My Pictograms → ☑[Set]

- One file of BGM or Flash®, and up to 40 types of My Pictograms or images can be inserted per Arrange Mail.
- To delete inserted images, lines, My Pictograms, etc.: Close Arrange Palette → Move cursor before images, etc. → Public

Saving Templates [Save as Template]

[Composition Window]

[Menu] → Save as Template → •

Downloading Templates via Internet

 \square \square \square \square \square \square Templates \rightarrow \square Download Templates \rightarrow \square

Manually Retrieving Messages/ System Message

Retrieve Messages Manually

 \square [\square] \rightarrow Retrieve New \rightarrow $\stackrel{\bullet}{\square}$

 Retrieve S! Mail messages saved on Server while handset is off/ out-of-range.

System Message

⚠ appears for incoming message problem (e.g., Attachments undelivered) right of attachment field in Message window.

In Message window, \square [Menu] \rightarrow System Message \rightarrow $\stackrel{\bullet}{\underline{}}$.

Message Display

Sorting Messages [Sort]

[Message List Window] \square [Menu] \rightarrow Sort \rightarrow \bigoplus \rightarrow Select a sorting method \rightarrow \bigoplus

Changing Font Size [Font Size]

[Message Window] \square [Menu] \rightarrow Font Size \rightarrow \bigoplus \rightarrow Select a size \rightarrow \bigoplus

Organizing Messages

Deleting Messages [Delete]

Delete a Message

[Message List Window] Select a message $\rightarrow \square$ [Menu] \rightarrow Delete $\rightarrow \bigcirc$ \rightarrow One \rightarrow \bigcirc \rightarrow \bigcirc

Delete Selected Messages

* To cancel selection, press 💁 again.

Delete All Messages

[Message List Window] $\[igotimes [Menu]
ightharpoonup Delete
ightharpoonup \[igotimes
ightharpoonup All
ightharpoonup$ $\[igotimes]
ightharpoonup \[Enter 4-digit Handset Code
ightharpoonup \[igotimes] \[igo$

Protecting Messages [Protect]

Protect/Unprotect a Message

[Message List Window] Select a message → ☑ [Menu] → Protect or Unprotect → ♠ → One → ♠

Protect/Unprotect Selected Messages

[Message List Window] Select a message → □[Menu] → Protect or Unprotect → ♠ → Protect Selected Items or Unprotect Selected Items → (Repeat: Select a message → ♠)*
→ □[Execute] → ♠

^{*} To cancel selection, press 🛖 again.

Using Messages

Forwarding Messages [Forward]

[Message Window] $\[\]$ [Menu] \rightarrow Forward \rightarrow $\[\]$ \rightarrow <Add Address> \rightarrow $\[\]$ \rightarrow Select a method \rightarrow $\[\]$ \rightarrow Select an address or enter directly \rightarrow $\[\]$ \rightarrow $\[\]$ \rightarrow $\[\]$ \rightarrow $\[\]$ $\[\]$ Send]

- Fw: appears before Subject and > before quoted message text of forwarded messages.
- Attachments are also forwarded. (Copy protected attachments are not forwardable.)

Sending Drafts [Drafts]

 \square [\square] \rightarrow *Drafts* \rightarrow $\stackrel{\bullet}{\underline{\bullet}}$ \rightarrow Select a message \rightarrow $\stackrel{\bullet}{\underline{\bullet}}$ \rightarrow \square [Send]

Using Linked Information [Using Phone Numbers/Addresses/URLs]

Make Calls

[Message Window] Select a phone number (highlighted) →

→ Call →

→ Voice Call or Video Call →

→

Send Messages

[Message Window] Select a phone number or address (highlighted) → ♠ → Create Message → ♠ → S! Mail or SMS → ♠ → Create a message → ▼[Send]

• Selecting *S! Mail* or *SMS* is not available when using addresses.

Add to Phone Book

[Message Window] Select a phone number or address (highlighted)

→ ♠ → Add to Phone Book → ♠ → Create New Entry or
select an existing entry → ♠ → (♣) From Step 1 on P.4-4)

Access Website

[Message Window] Select a URL (highlighted) → ♠ → Connect to URL → ♠ → ♠

Add to Bookmarks

Using Sender's/Recipient's Information [Using Phone numbers/Addresses]

Make Calls

[Message Window] \square [Menu] \rightarrow Call \rightarrow \bigoplus \rightarrow Voice Call or Video Call \rightarrow \bigoplus

Save to Phone Book

[Message Window] ⊠[Menu] → Add Sender to Phone Book or Add Destination to Phone Book → ♠ → Create New Entry or select an existing entry → ♠ → (☐From Step 1 on P.4-4)

Sending Unsent Messages [Unsent Messages]

✓ [Model of the content of the conten

Using Sent Messages

13

Internet

Getting Started	13-2
Using Yahoo! Keitai	13-3
Opening Yahoo! Keitai Main Menu	13-3
Entering URL	13-4
Using Access Histories	13-4
Exiting Mobile Internet	13-4
Using PC Site Browser	13-5
Opening Menu	13-5
Entering URL	
Using Access Histories	13-6
Exiting Internet	13-6
Basic Operations	13-7
Using Cursor	13-7
Text Entry & Item Selection	13-8
Using Information	13-9
Bookmarks & Saved Pages	
Managing Bookmarks & Saved Pages	
Downloading Images/Sounds to Save	
Using Number, Address or URL	13-12
Streaming	
Option Menu Items	. 13-14

S! Quick News (Japanese)	13-15
Registering S! Quick News Items	13-15
Opening New Information	13-15
Advanced Features	13-17
URL/Access History Functions	13-17
Bookmarks/Saved Pages Functions	13-17
S! Quick News Functions	

Getting Started

Access Yahoo! Keitai Mobile Internet and PC sites. "Yahoo! Keitai" is both a SoftBank Mobile Internet service and the SoftBank Mobile Internet portal. View PC Internet websites via PC Site Browser.

Internet

Yahoo! Keitai

- View Mobile Internet Websites (☐ P.13-3)
- Download image/sound files, etc. (☐ P.13-11)
- Video/Music Streaming (☐ P.13-13)
- Register S! Quick News (☐ P.13-15)

PC Sites

- View PC Sites (☐ P.13-5)
- Download still images (☐ P.13-11)



- Separate subscription is required for Network access.
- For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).
- Video Calls cannot be received while connecting to the Network.

Cache Memory

Retrieved information is temporarily saved in Cache Memory. When full, oldest is deleted first.

- Previously viewed pages may load from Cache Memory. To view the latest, update information (\square P.13-14).
- Cached items with expiry dates are deleted upon expiry.
- Information remains even after 821P is disconnected from the Network or handset power is turned off.



● Delete information held in Cache Memory ● Delete Cookies sent by a server for used ID Initialize Browser (**△** P.16-19)

SSL/TLS

SSL (Secure Socket Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers. Electronic certificates are saved on 821P (P.16-20).

Notes

When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SOFTBANK MOBILE Corp., VeriSign Japan K.K., GlobalSign K.K., RSA Security Inc., Cybertrust Japan Co., Ltd., SECOM Trust Systems Co.Ltd. and Entrust Japan Co., Ltd. cannot be held liable for any damages associated with the use of SSL and TLS.





Settings ● Security Settings (🗗 P.16-20)

Using Yahoo! Keitai

Opening Yahoo! Keitai Main Menu

Select Yahoo! Keitai Main Menu items to access websites.

Main Menu Yahoo! Keitai

- Yahoo! Keitai → 🏥 821P connects to the Network.
- Select a menu item → 💼
 - Repeat Step 2 as required. ● Basic Operations: 🗗 P.13-7
- Shortcut: In Standby, press [\forall].

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites, or open previously viewed pages using URL histories.

• Up to 20 URL histories are stored.

Main Menu ► Yahoo! Keitai ► Enter URL

Enter URL Directly

Direct Entry → •• Enter URL → ••

Use URL History

URL History List → ♠
Select a URL → ♠



[URL History List Window]

Tip More

●Editing URL Histories ●Deleting URL History (ピア1.13-17)

Using Access Histories

Open previously viewed pages using access histories.

 
 Up to 100 access histories are stored. (The number of savable histories varies depending on data amount.)

Main Menu ► Yahoo! Keitai ► History


1 Select a history → ••••



[mstory window]



Exiting Mobile Internet

 

Using PC Site Browser

Opening Menu

View PC websites using PC Site Browser.

- When PC Site Browser is active, \(\begin{aligned} \Boxed{\text{appears}} \end{appears} \)
- Some pages may not be viewable.
- Viewing PC websites may incur high charges.

Main Menu Yahoo! Keitai PC Site Browser

Homepage → 💼

Confirmation appears. Press \square [OK].

- For **Show Every Time**, confirmation appears next time PC Browser is activated.
- Select a menu item → 💼 Repeat Step 2 as required.

Settings

Set not to show warning messages when activating PC Site Browser or switching to Yahoo! Keitai (P.16-18)

Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access PC websites, or open previously viewed pages using URL histories.

Up to 20 URL histories are stored.

Main Menu ► Yahoo! Keitai ► PC Site Browser **Enter URL**

Enter URL Directly

Direct Entry → • Enter URL → •

Use URL History

URL History List → 👜 → Select a URL → 🐽



[URL History List Window]

■Editing URL Histories ■Deleting URL History More (**△** P.13-17)

Using Access Histories

Open previously viewed pages using access histories.

• Up to 100 access histories are stored. (The number of savable histories varies depending on data amount.)

Main Menu ► Yahoo! Keitai ► PC Site Browser History

Select a history → 🚉



[History Window]







More Deleting Access Histories (⊈ P.13-17)

Exiting Internet







Note Closing 821P does not affect active browser.

13 Internet

Basic Operations

Using Cursor

Moving Cursor	Use cursor to select underlined menu items. to move right to move left to move to previous line to move to next line
Scrolling Pages	Scroll bar appears on right side or at bottom of Display when page content continues beyond view. Scroll up/down scroll left/right scroll page up by a screenful To scroll continuously, press and hold above keys.
Moving to previous page/ next page	Previously viewed pages are temporarily saved in Cache Memory (☐ P.13-2). [Back]: Return to previous page [Menu] → Forward → [: View next page Some web pages may not appear after performing the steps above.

Web Page Sound Volume

- When Manner mode is active or Voice Call Ringer Volume set to *Silent*, web page sounds are muted.
- Sound volume cannot be adjusted while viewing web pages. Adjust Voice Call Ringer Volume beforehand (P.16-2).
- If activated, Media Player sound volume is adjustable.
- Incoming message tone does not sound while Yahoo! Keitai is active regardless of Mode or message ringtone settings.

Opening Secure Pages

Confirmation appears for SSL/TLS pages. Press **□[YES]** to open the secure page.

When Authentication is Required

Some pages require user authentication for access.

If required, enter user ID or password \rightarrow $\stackrel{\bullet}{\blacksquare}$.



- Settings Change character size Select scroll unit Do not show images ● Do not retrieve sounds (P.16-18)
 - Delete user ID or password entered when authentication is required (P.16-19)

Text Entry & Item Selection

Enter text or select items to send information.



• Actual web pages may differ in appearance.

Text Entry Field	Highlight field $\rightarrow \bigoplus \rightarrow$ Enter text $\rightarrow \bigoplus$
Menu List	Highlight field → ♠ Menu list appears. Highlight an item → ♠ Selected items are highlighted.
Radio Button	Highlight ○ → ♠ When selected, ● appears.
Check Box	Highlight □ → ♠ When selected, ■ appears.
Command Button	Highlight the button → ♠ Corresponding command is executed.



Using Information

Bookmarks & Saved Pages

Bookmark websites or save page content to Saved Pages.

• Some copy protected materials cannot be saved.

Bookmarks	Save links to websites. 821P connects to the Network to open the link. Create folders to organize Bookmarks.
Saved Pages	Save page content. 821P opens saved pages without connecting to the Network.

Saving Web Pages

- Open a web page → [Menu] → **Bookmarks** or **Saved Pages** → ••••
- **?** *Add* → •••
- **Save Bookmarks**

Select title \rightarrow $\stackrel{\bullet}{\blacksquare}$ \rightarrow Edit title \rightarrow $\stackrel{\bullet}{\blacksquare}$ \rightarrow

⊠[Save]

- To save to folders: Select Folder* → ♠ folder → 💼
 - * Not selectable when no folders exist in Bookmarks.

Save Saved Pages

Edit title → 👜

Viewing Bookmarks & Saved Pages

Main Menu ► Yahoo! Keitai (► PC Site Browser)

Bookmarks or **Saved Pages** → ••••

Example: Yahoo! Keitai Browser





[Saved Pages List Window]

? Select an item → 💼



● Saving URLs to Bookmarks ● Opening Bookmarks & Saved Pages while Online (☐ P.13-17)

Managing Bookmarks & Saved Pages

Follow the steps below to open Bookmarks or Saved pages list:

Yahoo! Keitai

Main Menu Yahoo! Keitai

Bookmarks or **Saved Pages**

PC Site Browser

Main Menu Yahoo! Keitai PC Site Browser

Bookmarks or **Saved Pages**



- Panasonic site bookmark cannot be edited/deleted.
- When a different USIM Card is inserted, Saved Pages do not appear or title name cannot be changed.

Creating New Bookmark Folders

- Folders cannot be created within existing folders.
 - In bookmark list, \square [Menu] \rightarrow Create \rightarrow $\stackrel{\bullet}{\blacksquare}$ *→ Folder →*
- **2** Enter title → •

Moving Bookmarks to Folder

Select a bookmark in Step 1 $\rightarrow \square[Menu] \rightarrow Move to \rightarrow \stackrel{\bullet}{\blacksquare}$

→ Select a folder → 🖦

Editing Folder Title

Select a folder in Step 1 $\rightarrow \square$ [Menu] $\rightarrow Edit \rightarrow \stackrel{\bullet}{\longrightarrow} \rightarrow Edit$ folder title → 🖆

Editing Bookmark Titles/URLs

- Select a bookmark in Bookmark List Window →
- Select a title or URL → 🐽
- **2** Edit Bookmark titles/URLs → [Save]

Renaming Saved Pages

Select an item in Saved Pages List Window → \square [Menu] \rightarrow Rename \rightarrow \blacksquare

Edit a title → 🚉

More)

● Deleting Bookmarks/Folders (🗗 P.13-17) ● Deleting Saved Pages ● Reordering Bookmarks/Folders ● Sending Bookmark URLs Sending Bookmarks via Infrared/ Bluetooth® (☐ P.13-18)

Downloading Images/Sounds to Save

Save images, sounds, etc. to Data Folder.

- For PC Site Browser, only still images can be saved.
 - Open a web page $\rightarrow \square[Menu] \rightarrow Select$ *item* → 🚉
- Select a file → 🏰 File details appear.
- □ [Save]

Phone or **Memory Card** → ••••

Available menu items vary by saved content.

Saving Linked Files

Select linked text $\rightarrow \stackrel{\bullet}{\blacksquare} \rightarrow \square[Save] \rightarrow Phone$ or *Memory* Card → •



- 821P does not support Progressive JPEG files.
- Do not remove Memory Card while saving files to it.
- Do not turn 821P power off while downloading or saving files. Files may be damaged.
- Some copy protected files may not be saved.

Using Number, Address or URL

Use linked numbers, addresses or URLs to make calls, send messages or access websites. Save them directly to Phone Book.

- Available only when number, address or URL is underlined.
 - Open a web page containing phone numbers, mail addresses or URLs
- **Phone Number**

Select a phone number $\rightarrow \bigoplus \rightarrow Voice Call$,

Video Call or **Phone Book** → ••••

To make a call, select **Voice Call** or **Video Call**, then press 👜 .

To save number to Phone Book, select **Phone Book**. Phone Book Entry window appears (P.4-4).

E-mail Address

Select an address → ♠ → S! Mail, SMS or

Phone Book → •

To create message, select **S! Mail** or **SMS** (S! Mail: ☐ P.12-4/SMS: ☐ P.12-8).

To save address to Phone Book, select **Phone Book**. Phone Book Entry window appears (P.4-4).

URL

Select URL → 💼

821P connects to the Network.

Streaming

Enjoy video/sound clips while they download.

- Supported by compatible files on Yahoo! Keitai sites only.
- Streaming files cannot be saved.

Main Menu Yahoo! Keitai Yahoo! Keitai

- Open a web page → Select a file → 👜 Media Player activates and streaming starts.
 - To pause: → → to resume
 - Playback Window Operations: 🗗 P.7-7 (Replay Track, Play Previous and Play Next are Unavailable)
- or [Back] to exit



- Streaming requires a continuous Network connection. (Transmission fees apply.)
- Streaming indicator appears (☐ P.1-9).
- Paused streams may stop after three minutes of inactivity.
- When roaming abroad, streaming may be unavailable or not be performed properly.

Changing Display Size

Press or to toggle Display size while streaming. When switching to Full Screen, Display rotates 90° to the right. To return to Normal Screen, Press on again.

• For key operations while streaming, see Playback Window Operations in Media Player (P.7-7).

Incoming Voice Calls while Streaming

Incoming call pauses an active stream.

Video Calls cannot be received while streaming.

Option Menu Items

In Yahoo! Keitai, press **[Menu]** for these options:

Forward	Go to next page (ピテP.13-7)
Bookmarks	View Bookmarks list or add a one to it
Saved Pages	View Saved Pages list or add a new one to it
Text Copy	Copy page text
Reload Page	Refresh page information
Small Screen/ PC Screen*1	Toggle display size
Page Operation	Frame In/Frame Out: Select full screen frame Jump to Top: Jump to top of page Jump to Bottom: Jump to end of page Zoom In/Out*1: Zoom page in/out
Select item	View, play or save file to Data Folder (☐FP.13-11)
More	Search: Search page text History: Open previously viewed pages Send Bookmark: Send URL via S! Mail/SMS Enter URL: Enter URL directly to open site Property: View page details or electronic certificates for secure pages Flash(R) Menu: Playback/pause Flash® files
To PC Site Browser* ² / Change Browser* ¹	Toggle Yahoo! Keitai/PC site

	Yahoo! Keitai* ² / Homepage* ¹	View top menu
	Settings	Font Size: Change character size Encoding: Change encoding type

^{*1} PC Site Browser only *2 Yahoo! Keitai only

S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List or S! Loop List (☐ P.15-3) to scroll across Standby Window.

- Standby Window: 🗗 P.1-17
- To view information from S! Quick News List or S! Loop List: **⊈** P.13-16



Settings ●Automatically update S! Quick News List/S! Loop List (**□** P.16-21)

Registering S! Quick News Items

- Register up to one News Flash and four general news items.
- Register up to five items in S! Loop List.

Main Menu ► Yahoo! Keitai ► S! Quick News

Register Items in S! Quick News List

S! Quick News List → • Contents List **→** [0,000]

Yahoo! Keitai connects and Contents list appears.

Register Items in S! Loop List

 $S! Loop List \rightarrow \bigoplus \rightarrow S! Loop \rightarrow \bigoplus$

S! Loop connects and page appears.

Select an item → 💼 → 💼

Opening New Information

Viewing New Information in Standby


When new information is received, appears in Standby.

- to select ticker
 - Ticker color changes, and information (up to three lines) appears on top of ticker.
- To check content: Contents display appears.
- Select information → 💼 Details appear.



● Show only unread items in Standby ● Change marquee speed ●Block image data (P.16-21)



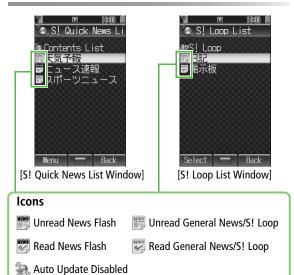

Main Menu ► Yahoo! Keitai ► S! Quick News ► S! Quick News List or S! Loop List

- 2 Select information → ••• Detailed information appears.
- f 3 To connect to the Network, select a title $m \rightarrow$ $m \oplus$





● Deleting Registered Items (ピアP.13-18)

13-16

More Advanced Features

URL/Access History Functions

From [URL History List Window] P.13-4, P.13-5 [History Window] P.13-4, P.13-6

Editing URL Histories [Edit]

[URL History List Window] Select a URL → [Menu] → Edit \rightarrow $\stackrel{\bullet}{\blacksquare}$ \rightarrow Edit the URL \rightarrow $\stackrel{\bullet}{\blacksquare}$

Deleting URL History [Delete]

Delete One URL History

[URL History List Window] Select a URL → [Menu] → $Delete \rightarrow \bigoplus \rightarrow One \rightarrow \bigoplus \rightarrow \square[YES]$

Delete All URI Histories

[URL History List Window] □ [Menu] → Delete → • → All $\rightarrow \blacksquare \rightarrow \square$ [YES]

Deleting Access Histories [Delete]

Delete One Access History

[History Window] Select a URL $\rightarrow \square$ [Menu] \rightarrow Delete $\rightarrow \square$ \rightarrow One \rightarrow $\stackrel{.}{•}$ \rightarrow $\stackrel{.}{•}$

Delete All Access Histories

[History Window] \square [Menu] \rightarrow Delete \rightarrow $\stackrel{.}{•}$ \rightarrow A// \rightarrow $\stackrel{.}{•}$ \rightarrow **[YES]** → Enter 4-digit Handset Code →

Bookmarks/Saved Pages Functions

From [Bookmark List Window] [Saved Pages List Window] P.13-9

Saving URLs to Bookmarks

[Bookmark List Window] \square [Create]* \rightarrow Bookmark \rightarrow $\stackrel{\bullet}{\square}$ \rightarrow <*Title*> \rightarrow $\stackrel{\triangle}{=}$ \rightarrow Enter Title \rightarrow $\stackrel{\triangle}{=}$ \rightarrow <*URL*> \rightarrow $\stackrel{\triangle}{=}$ \rightarrow Enter URL $\rightarrow \bigoplus \rightarrow$ When saving to a folder, select Folder $\rightarrow \bigoplus \rightarrow$ Select a folder $\rightarrow \bigoplus \rightarrow \square[Save]$ * When saved items exist: **Menu** → *Create* → •

Opening Bookmarks & Saved Pages while Online

 \square [Menu] \rightarrow Bookmarks or Saved Pages \rightarrow $\stackrel{\triangle}{\blacksquare}$ \rightarrow View List → 🐽

Deleting Bookmarks/Folders

Delete One Bookmark/Folder

[Bookmark List Window] Select a bookmark or folder → \square [Menu] \rightarrow *Delete* \rightarrow $\stackrel{\bullet}{\square}$ \rightarrow *One* \rightarrow $\stackrel{\bullet}{\square}$ \rightarrow $\stackrel{\bullet}{\square}$

Delete All Bookmarks/Folders

[Bookmark List Window] \square [Menu] \rightarrow *Delete* \rightarrow $\stackrel{\bullet}{\blacksquare}$ \rightarrow *All* → ♠ → ✓ [YES] → Enter 4-digit Handset Code → ♠

Deleting Saved Pages [Delete]

Delete One Saved Page

[Saved Pages List Window] Select an item $\rightarrow \square[Menu] \rightarrow Delete \rightarrow \square \rightarrow One \rightarrow \square \rightarrow \square$

Delete All Saved Pages

[Saved Pages List Window] $\[\]$ [Menu] \rightarrow *Delete* \rightarrow $\[\]$ \rightarrow $All \rightarrow$ $\[\]$ \rightarrow $\[\]$ [YES] \rightarrow Enter 4-digit Handset Code \rightarrow $\[\]$

Reordering Bookmarks/Folders [Reordering]

[Bookmark List Window] Select a bookmark or folder → □[Menu] → Reordering → • □ to select new order → •

Sending Bookmark URLs [Send Bookmark]

[Bookmark List Window] Select a bookmark → □[Menu] → Send Bookmark → ♠ → S! Mail or SMS → ♠

Sending Bookmarks via Infrared or Bluetooth® [Local Connectivity]

[Bookmark List Window] Select a bookmark → □[Menu] → Local Connectivity → • → Infrared or Bluetooth → •

S! Quick News Functions

From [S! Quick News/S! Loop List Window] P.13-16

Viewing Received Date/Time or News Summary [Summary Display]

[S! Quick News/S! Loop List Window] Select an information → [Menu] → Summary Display → •

Deleting Registered Items [Delete]

Delete One Item

[S! Quick News/S! Loop List Window] Select an item \rightarrow \square [Menu] \rightarrow Delete \rightarrow \square \rightarrow One \rightarrow \square \rightarrow \square

Delete All Items

[S! Quick News/S! Loop List Window] \square [Menu] \rightarrow Delete $\rightarrow \bigoplus \rightarrow A// \rightarrow \bigoplus \rightarrow \square$ [YES] \rightarrow Enter 4-digit Handset Code $\rightarrow \bigoplus$

S! Appli

Before Using S! Appli	14-2
Downloading S! Appli	
Using S! Appli	14-3
Activating S! Appli	14-3
Terminate/Suspend & Resume	14-3
Advanced Features	14-4
Managing Applications	14-4
Security Level Functions	14-4

Before Using S! Appli

S! Appli are Java™-based applications designed to run on SoftBank handsets. Download games and other real-time applications for use on 821P.

- Separate subscription required to use downloaded
 S! Applications (not required for pre-installed S! Appli).
- See each pre-installed S! Appli's Help menu for usage.

Note

For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Network S! Applications

Network S! Applications require Network connections.

Connection fees apply.

License Information

Main Menu ► S! Appli ► Information

Downloading S! Appli

Download up to 100 S! Applications to 821P/Memory Card.

Main Menu ► S! Appli ► S! Appli Library

- 1 *Download S! Appli* → ♠ 821P connects to the Network, and download site appears.
- 2 Select an S! Application → •••
 Properties appear.
- **?** Follow onscreen instructions
- 4 Phone or Memory Card → •••
 - Download may take some time.
 - Downloaded S! Application is saved to Data Folder automatically.
- 5 [YES] to activate Downloaded S! Application starts.
 - To exit: [NO]

Using S! Appli

Activating S! Appli

Main Menu ► S! Appli ► S! Appli Library

Select an S! Application →



S! Application starts and appears.

- See application Help menu for usage information.
- Confirmation appears when selecting Network S! Application.
- For a Memory Card S! Application, di to select **Memory Card** tab before Step 1.



[S! Appli Library Windowl



- Activate an S! Application; Main Menu ▶ Data **Folder** ► **S! Appli** ► Select an S! Application
- Incoming transmissions pause S! Applications.
- An error message may appear while an S! Application using Bluetooth® is paused or due to ambient factors. End the application completely then restart it.

Terminate/Suspend & Resume

Terminating/Pausing S! Appli

- While running an S! Application,
- *Terminate* or *Suspend* → •••• appears for a suspended application.

Resuming/Terminating Paused S! Appli

Main Menu ► S! Appli ► S! Appli Library

Resume or **Terminate** → •••• Resumed application starts from paused point.



More

- Moving S! Appli between 821P and Memory Card
- ◆Deleting S! Appli ◆Viewing S! Appli Properties
- Setting Security Level while Running S! Applications (**⊈**P.14-4)

Settings

● Change S! Application volume ● Keep Backlight on/off while S! Application runs

Deactivate Vibration for S! Application ● Suspend S! Application after set period of inactivity Synchronize Memory Card used in another handset etc. to update S! Appli Library (P.16-22)

More Advanced Features

From [S! Appli Library Window] P.14-3

Managing Applications

Moving S! Appli between 821P and Memory Card [Move]

[S! Appli Library Window] Select an S! Application →

[Menu] → Move → []

• Some S! Applications cannot be moved to Memory Card.

Deleting S! Appli [Delete]

[S! Appli Library Window] Select an S! Application →

 \square [Menu] \rightarrow *Delete* \rightarrow $\stackrel{\bullet}{•}$ \rightarrow $\stackrel{\bullet}{•}$

 S! Town, Near Chat, BookSurfing[®], e-Book Viewer and G-GUIDE MOBILE cannot be deleted.

Viewing S! Appli Properties [Property]

[S! Appli Library Window] Select an S! Application →

[Menu] → Property → ♠

Security Level Functions

Setting Security Level while Running S! Applications [Permission]

[S! Appli Library Window] Select an S! Application →

→ Always Allowed, Ask First Time*, Ask Every Time or Not Allowed →

* Confirmation appears the first time application is activated.

Security Items

Network Access	Connect to the Network
Messaging	Send/receive messages
Auto Invocation	Activate S! Applications
Multimedia Recording	Activate Camera
Data Reading Access	Read Phone Book, Calendar events, etc.
Data Rewriting Access	Write/delete Phone Book, Calendar events, etc.
Location Access	Retrieve Location information
Bluetooth	Use Bluetooth®

• Security Level cannot be set for some S! Applications.

<u>15</u>

Communication

S! Town (Japanese)	15-2
Starting S! Town	
S! Town Library	15-3
S! Loop (Japanese)	15-3
Near Chat (Japanese)	
Starting Near Chat	

S! Town (Japanese)

S! Town is an online communication application. Enjoy events or meeting other users in 3D virtual town.

- Requires pre-installed S! Town S! Application.
- S! Town S! Application cannot be deleted.
- Internet connection is required; may incur high packet communication charges.
- S! Town is not available if Internet access is restricted by subscription.



User-downloaded S! Town data are deleted by All Reset. Download S! Town-compatible applications via Yahoo! Keitai as required.

Starting S! Town

• User agreement and registration are required to use S! Town.

Main Menu Communication

1 *5! Town* → 🚉

821P connects to the Network and S! Town starts.

• See S! Town Help for usage information.



- Check registration status or cancel registration via Yahoo! Keitai.
- An upgrade notice may appear when starting S! Town.
 Follow onscreen instructions to upgrade.

S! Town Library

Save S! Town-compatible applications to S! Town Library.

- S! Town-compatible applications must be downloaded.
- Downloaded S! Town-compatible applications are automatically saved in S! Town Library.

Main Menu ► Communication

- 1 *S! Town* $\rightarrow \square$ [Library]
 - S! Town Library opens.

S! Loop (Japanese)

A SoftBank Mobile handset communication service.

Main Menu Communication

- 1 5! Loop →
 - 821P connects to the Network and S! Loop appears.
 - See S! Loop Help for usage information.

Near Chat (Japanese)

Exchange text messages with other SoftBank handsets or compatible devices wirelessly via Bluetooth® within ten meters. Transmission/connection fees do not apply.

- Range may vary with ambient signal conditions.
- Parents who use Near Chat parental control feature should restrict access to Handset Code, which can be used to activate All Reset (☐ P.10-8) which cancels restrictions.



- When Bluetooth[®] is active, compatible Bluetooth[®] device names appear. Unsolicited device connection requests may be received; reject unwanted requests.
- An error message may appear due to ambient conditions, etc. End Near Chat completely, then restart the application.

Starting Near Chat

Main Menu ► **Communication**

1 Near Chat → ••••

Near Chat starts and confirmation appears.

- If Bluetooth® is *OFF*, activation confirmation appears.
- See application Help menu for usage information.
- **2** To end Near Chat, \longrightarrow *Suspend* or *Terminate* \rightarrow $\stackrel{\blacksquare}{\longrightarrow}$
 - To resume: Start Near Chat → Resume →



- Near Chat can be activated from S! Appli.
- Activate Near Chat to receive requests from others.
- If Bluetooth[®] is activated before Near Chat, Visibility is set to *Always On*. After terminating Near Chat, Bluetooth[®] remains active, but Visibility returns to that set before Near Chat was launched.

Settings

Sound & Vibration Ringtones Warning Tone & Key Tone Display Main Display	16-2 16-3
Display	16-4
Main Menu	
Date & Time	
Notification Light	16-7
Keypad	16-7
Call Settings	16-8
International Calls	16-8
Call Time & Call Cost	
Making & Receiving Calls	
Mode Settings	16-11
Phone Book	16-12
Video Call	16-12
Bluetooth®	
Messaging	
Universal Settings	
S! Mail Settings	
Feeling Mail Settings	
3D Pictograms	
SMS Settings	

Internet	16-18
Browser Display Settings	16-18
Memory Manager & Reset	16-19
Security Settings	16-20
S! Quick News	16-21
S! Appli	

Settings Sound & Vibration

Ringtones

Main Menu ► Settings ► Sound Settings From

Settings	Operation	Default
Change ringtone (Voice Call or Video Call)*1 *2 *3	Assign Ringtone → $••$ → Voice Call or Video Call → $••$ → Select a folder in Data Folder → $••$ → Select a tone → $•∞$ [Set]	ブザー .mmf
Change ringtone (Message or S! Quick News)*1 *2	Assign Ringtone → $••$ → Message or S! Quick News → $••$ → Select a folder in Data Folder → $••$ → Select a tone → $•∞$ [Set]	効果音 (キラキラ).mmf
Change ringer volume (Voice Call, Video Call or Message)*4	Ringer Volume → • → Voice Call, Video Call or Message → • → Adjust volume → •	Volume 3
Change ringer volume (S! Quick News)	Ringer Volume → • → 5! Quick News → • Adjust volume → •	Silent
Change ringtone duration (Message or S! Quick News)	Ringtone Duration → ♠ → Message or S! Quick News → ♠ → Enter ring time → ♠	5 seconds
Set vibration alert (Voice Call, Video Call, Message or S! Quick News)*5	Vibration Alert → ♠ → Voice Call, Video Call, Message or S! Quick News → ♠ → Select a vibration pattern → ♠	OFF

^{*1} Some music files cannot be set as Ringtone. (Copy protected files: 🗗 P.8-4)

^{*2} When unique tones for each Phone Book entry or Group are set () P.4-4, P.4-7), Phone Book settings take priority.

^{*3} If a Voice Call is received while streaming/downloading, default ringtone may sound.

^{*4} Voice Call Ringer Volume applies to sounds generated while viewing web pages. When *Escalating Tone* is selected, Volume is set to Volume 6.

^{*5} Avoid placing 821P on unstable surface when Vibration Alert is active/while charging battery; cancel Vibration Alert before charging battery.

Warning Tone & Key Tone

From Main Menu Settings Sound Settings

Settings	Operation	Default
Set warning tone not to sound	Warning Tone → ♠ → OFF → ♠	ON (sound)
Change key tone	<i>Key Tone</i> → \bigoplus → <i>Select Tone Type</i> → \bigoplus → Select a tone → \bigoplus	Tone 1
Change key tone volume	<i>Key Tone</i> → • → <i>Tone Volume</i> → • Adjust volume → •	Volume 1

Settings Display

Main Display

From Main Menu Settings Display Settings

Settings	Operation	Default
Change wallpaper*	Main Display → ♠ → Select a folder in Data Folder → ♠ → Select an image → ☑ [Set]	black-jewel.jpg
Change backlight time	Backlight Time → ♠ → Select a time → ♠	15 seconds
Change Display color scheme	Themes → • → Select a color → •	Black
Change Display brightness	Brightness → • Select a level → •	Level 3

^{*} Some images may not be set or appear properly. (Copy protected files: 🗗 P.8-4)

Display

From Main Menu Settings

Settings	Operation	Default
Set menu language	Phone Settings → • → 言語選択 (Language) → • → English or 日本語 → •	Automatic*
Change clock or calendar in Standby	Display Settings → ♠ → Standby Display → ♠ → Clock/ Calendar Display → ♠ → Select a clock or calendar type → ♠	Large Clock (Upper Center)
Show operator name in Standby	Display Settings → \bigoplus → Standby Display → \bigoplus → Operator Name → \bigoplus → ON → \bigoplus	OFF (hide)
Show/hide Standby Window manually	<i>Display Settings</i> → \bigoplus → <i>Standby Display</i> → \bigoplus → <i>Standby Window</i> → \bigoplus → <i>ON (Manually)</i> or <i>OFF</i> → \bigoplus	ON (Always)
Hide read S! Quick News from Standby Window	Display Settings → ♠ → S! Quick News Settings → ♠ → Unread/Read Setting → ♠ → Unread → ♠	Unread + Read
Change marquee speed	Display Settings → ♠ → S! Quick News Settings → ♠ → Marquee Speed → ♠ → Fast or Slow → ♠	Medium
Hide image data from Standby	Display Settings → ♠ → S! Quick News Settings → ♠ → Image Display → ♠ → OFF → ♠	ON (show)

^{*} Automatic applies USIM Card.

Main Menu

Main Menu ► Settings ► Display Settings From

Settings	Operation	Default
Change Main Menu theme*1	Change Menu Theme → • → Original Menu → • → Select a menu → • →	-
Change to other handset Main Menu*2	Change Menu Theme $\rightarrow \textcircled{\tiny } \rightarrow$ S! Familiar Usability $\rightarrow \textcircled{\tiny } \rightarrow$ Select a content $\rightarrow \boxdot [Set] \rightarrow \textcircled{\tiny } \bigcirc$	-
Change Main Menu background	Main Menu Icons → ♠ → Change Full Image → ♠ → Select a picture → ☑[Set]	-
Change Main Menu icons	Main Menu Icons → ♠ → Change Image → ♠ → (Repeat: Select an icon → ♠ → Select a picture → ☑ [Set])	-
Reset Main Menu image	Main Menu Icons → ♠ → Reset Defaults → ♠ →	-

^{*1} While changing theme, other functions are unavailable. For approximately 30 seconds after process is complete, calls/messages may be blocked.

^{*2} Download S! Familiar Usability applications beforehand (P.1-21).

Settings Date & Time

From Main Menu Settings Phone Settings Date & Time

Settings	Operation	Default
Change date and time*1	<i>Home Clock</i> → \bigoplus → <i>Date & Time</i> → \bigoplus → Enter date → \bigoplus → Enter time → \bigoplus	-
Deactivate automatic time correction via Yahoo! Keitai*2	Time Correction → \bigoplus → Automatic Correction → \bigoplus → OFF → \bigoplus	ON (correct automatically)
Correct time manually	Time Correction → • → Manual Correction → • →	-
Set local time (Home Clock)	<i>Home Clock</i> → $\textcircled{\tiny +}$ → <i>Home Area</i> → $\textcircled{\tiny +}$ → Select a city → $\textcircled{\tiny +}$	Tokyo
Activate Daylight Savings Time (Home Clock)	Home Clock $\rightarrow \bigoplus \rightarrow$ Daylight Savings Time $\rightarrow \bigoplus \rightarrow ON \rightarrow \bigoplus$	OFF
Set time for a second time zone (Away Clock)	<i>Away Clock</i> → \bigoplus → <i>Set Time Zone</i> → \bigoplus → Select a city → \bigoplus	Tokyo
Activate Daylight Savings Time (Away Clock)	Away Clock $\rightarrow \bigoplus \rightarrow$ Daylight Savings Time $\rightarrow \bigoplus \rightarrow ON \rightarrow \bigoplus$	OFF
Display Away Clock in Standby	Select Clock → • → Away Clock → •	Home Clock
Set 12 hour time format	Display Pattern → • → Time → • → 12 hour → •	24 hour
Change date format	Display Pattern → ♠ → Date → ♠ → Select date format → ♠	YY/MM/DD

 $^{^{*}1\,}$ Date & Time Settings effective on 821P: from 00:00 on 2007/01/01 to 23:59 on 2099/12/31 $^{*}2\,$ Time Correction may invalidate Schedule/Alarm entries.

Settings Notification Light

From Main Menu Settings Phone Settings Notification Light

Settings	Operation	Default
Set Notification Light for Voice Calls*	Voice Call → • Select color or OFF → •	Sky Blue
Set Notification Light for Video Calls*	Video Call → ♠ → Select color or OFF → ♠	Sky Blue
Set Notification Light for incoming messages*	Message → • → Select color or OFF → •	Lime
Set Notification Light for Voice Calls in progress	<i>In Conversation</i> → • Select color or <i>OFF</i> → •	Marine Blue
Set Notification Light for S! Quick News	5! Quick News → Select color or OFF →	Lime
Set Notification Light for Clamshell Closing	Clamshell Closing → • Select color or OFF → •	Violet
Turn off Notification Light for Data Transfer	Data Transfer →	ON (Lemon)

^{*} Phone Book entry Notification Light (P.4-4, P.4-7) takes priority over this setting.

Settings Keypad

From Main Menu Settings Phone Settings Key Settings

Settings	Operation	Default
Set Keypad backlight time	Keypad Backlight → • Select backlight time or OFF → •	15 seconds

Settings Call Settings

International Calls

Main Menu ► Settings ► Call Settings ► Optional Services ► International Setting From

Settings	Operation	Default
Change International Code*1	International Code → ♠ → Enter 4-digit Handset Code → ♠ → Enter International Code → ♠	0046010
Edit country number list	Country Number List → ♠ → Select a country → ♠ → Edit country name → ♠ → Edit country number → ♠	-
Add country number	Country Number List → $\textcircled{\tiny }$ → \boxdot [Menu] → Add → $\textcircled{\tiny }$ → Enter country name → $\textcircled{\tiny }$ → Enter country number → $\textcircled{\tiny }$	-
Delete country number	Country Number List → \bigoplus → Select a country → \boxtimes [Menu] → Delete → \bigoplus → \boxtimes [YES]	-
Select operator	Select Operator → • → Select Auto/Manual → • → Manual → • → Select an operator → •	Automatic
Set operator priority for automatic search*2	Select Operator → • → Set Priority → • □ [Menu] → Add, Insert, Edit or Delete → • • Add: new network appears at the end of the list; place cursor at the end of the list beforehand. • Insert: new network appears above selected one.	-

^{*1} In Standby, → Press and hold out (+ appears) to enter International Code automatically. (+ indicates International Code.)
*2 Available operators vary by network conditions.

Call Time & Call Cost

Main Menu ► Settings ► Call Settings ► Call Time & Cost

Settings	Operation	Default
View total call charge for outgoing calls	<i>All Calls</i> → $\textcircled{\tiny }$ (To reset, \rightarrow $\textcircled{\tiny }$ → $\textcircled{\tiny }$ + Enter PIN2 → $\textcircled{\tiny }$)	-
View total call time for outgoing calls*1	<i>Total Call Time</i> → $\textcircled{\tiny }$ (To reset, \rightarrow $\textcircled{\tiny }$ $\textcircled{\tiny }$)	-
Display call charge*2	$Display \ Cost \rightarrow \textcircled{+} \rightarrow ON \rightarrow \textcircled{+}$	OFF (hide)
Set charge limit*3 *4	Set Cost Limit → $\textcircled{+}$ → \boxdot [Menu] → Edit → $\textcircled{+}$ → Enter PIN2 → $\textcircled{+}$ → Enter charge limit → $\textcircled{+}$	-
View remaining cost	Remaining → 🖫	-
Enter currency denomination and price per unit of call time	Currency Setting → $••$ → Enter PIN2 → $••$ → Enter three letter abbreviation for the designated currency → $••$ → Enter value → $••$	-

^{*1} For Multiparty Call, total length of all calls made from 821P remains.

^{*2} Call Cost may not appear depending on subscription.
*3 If charge limit is set below the value set in All Calls, outgoing calls are blocked. Reset All Calls or change charge limit to a higher value.

^{*4} Emergency numbers (110, 119, 118) are available even when the limit is reached.

Settings 16

Making & Receiving Calls

Main Menu ► Settings ► Call Settings From

Settings	Operation	Default
Make multiple keys valid to answer calls*1	Any Key Answer → • ON → •	OFF
Answer calls by opening handset	Clamshell Control → • → Open-to-Answer Call → • → ON → •	OFF (not answer)
End calls by closing handset*2	Clamshell Control → \bigoplus → Close-to-End Call → \bigoplus → ON → \bigoplus	OFF (not end)
Open Incoming Call Log for missed calls by opening 821P*3	Clamshell Control → ⊕ → Open-to-Display Missed Call → ⊕ → ON → ⊕	OFF (not display)
Activate Auto Answer when using handsfree devices*4	Auto Answer $\rightarrow \bigoplus \rightarrow ON \rightarrow \bigoplus$	OFF (not answer automatically)

^{*1} Valid Keys: 🔼, 🖭 - 🖳, 🐷, #, 🎳, 🎉, 💆 (Any Key Answer cannot be used when a call is on hold.)

^{*2} Close-to-End Call cannot be activated during a call using Bluetooth® or Earphone. Yahoo! Keitai cannot be canceled by closing 821P even if Close-to-End Call is active.

^{*3} Available only when the first information received on 821P is Missed Call.

^{*4 821}P beeps and call connects after seven seconds. When Auto Answer and Answer Phone (🗗 P.2-6) are active, one with shorter Answer Time takes priority. When Auto Answer and Voice Mail. *Ringer Off* (P.17-4) are both active. Voice Mail takes priority.

Settings Mode Settings

From Main Menu Settings Mode Settings

Settings	Operation	Default
Change handset mode with a distinct combination of alerts, ringtones, etc.*	Select a mode → When <i>Manner</i> , <i>User mode</i> or <i>Drive</i> is set, an indicator appears in Standby. (P.1-9)	Normal
Personalize individual mode settings	Select a mode $\rightarrow \square[Menu] \rightarrow \textit{Edit} \rightarrow \square$ Select an item $\rightarrow \square$ \longrightarrow Edit $\rightarrow \square$	-

^{*} Manner mode and Drive mode can be switched activated/deactivated in Standby (P.2-14, P.2-15).

Default Settings By Mode

			Manner	Drive	User Mode
Settings		Standard defaults; adjust settings for time/place of usage	Mutes 821P tones, activates vibration and Answer Phone	Activates Drive Mode Answer Phone and mutes all 821P tones	Customize defaults to suit a particular situation or purpose
Assign	Voice Call/Video Call	ブザー .mmf	-	-	ブザー .mmf
Ringtone	Message/S! Quick News	効果音 (キラキラ).mmf	-	-	効果音 (キラキラ).mmf
Ringer	Voice Call/Video Call/Message	Volume 3	-	-	Volume 3
Volume	S! Quick News	Silent	-	-	Silent
Ringtone Duration	Message/S! Quick News	5 sec	5 sec	5 sec	5 sec
Key Tone	Tone Type	Tone 1	-	Tone 1	Tone 1
Key Tolle	Tone Volume	Volume 1	-	Silent	Volume 1
Warning T	one	ON	-	OFF	ON
Vibration	Voice Call/Video Call/Message	OFF	Pattern 1	OFF	OFF
Alert	S! Quick News	OFF	OFF	OFF	OFF
Answer Phone		OFF	ON	*	OFF

^{*} Messages appear in Answer Phone Message List, however, Drive Mode Answer Phone is not affected by Answer Phone setting.

Settings Phone Book

Main Menu ▶ Phone Book ▶ Settings

Settings	Operation	Default
Change save location for new entry (USIM, Phone or Ask Each Time)	Save Settings → • USIM or Ask Each Time →	Phone
Select USIM Phone Book to open*	Change View → • → USIM or Phone & USIM → •	Phone

^{*} Depending on the Save Settings setting (Larabove), selecting Phone or USIM may prompt a Change save location as well? confirmation to appear.

Settings Video Call

Main Menu ► Settings ► Call Settings ► Video Call From

Settings	Operation	Default
Change outgoing image and sound settings*1	Video & Voice Setting→ → Alternative Picture, Mute Voice or Alt. Picture & Mute Voice → ⊕	Send Voice & Video
Change Display backlight brightness during Video Call*1	Display Backlight → ♠ → Brightness → ♠ → Select a level → ♠	Level 3
Change Display backlight duration during Video Call*1	Display Backlight → ♠ → Backlight Time → ♠ → Follow General Setting*2 or Always OFF → ♠	Always ON
Change incoming video image quality*1	<i>Incoming Video Quality</i> → ♠ → <i>Motion Prioritized</i> or <i>Quality Prioritized</i> → ♠	Standard
Change Alternative Image to send	Alternative Picture → ♠ → Select a file → ☑[Set]	TV コール代替画像 .bmp
Switch Speaker ON*1	Louder Speaker → ♠ → OFF → ♠	ON (speaker on)

^{*1} To change settings during a call: *\(\mathbb{F}\) P.5-5
*2 Select *\(\mathbb{F}\) Display Backlight setting.

Settings Bluetooth®

From Main Menu Connectivity Bluetooth Settings

Settings	Operation	Default
Activate Bluetooth®	$ON/OFF \rightarrow \stackrel{\bullet}{\underline{\bullet}} \rightarrow ON \rightarrow \stackrel{\bullet}{\underline{\bullet}}$	OFF (deactivated)
Change device name for handset	Phone Name → • → Enter name → •	821P
Limit 821P visibility to other Bluetooth® devices	Visibility → Activate Temporarily or Always Off →	Always On
Use handset to operate any call initiated via handset while handsfree device connected*	Handsfree Setting → • Private Mode → •	Handsfree Mode

^{*} Any call initiated via a handsfree device is automatically connected in Handsfree Mode.

Settings Messaging

Universal Settings

From ▶ Main Menu ▶ Messaging ▶ Settings ▶ Universal Settings

Settings	Operation	Default
Clamshell Control: Open Incoming Mail folder automatically by opening 821P for new messages*1	Clamshell Control → • → ON → •	OFF (not open)
Change font size*2	Font Size → ♠ → Large or Small → ♠	Normal
Confirm message delivery (Available when messaging to SoftBank handset numbers)	Delivery Report → • → ON → •	OFF (not confirm)
Set Mail Delivery Rule by sender's address	Mail Delivery Rule → ♠ → Select a folder → ♠ → ▷ [Menu] → Add Address → ♠ → Select how to select an address → ♠ → Select an address or enter directly → ♠	-
Set Mail Delivery Rule by mail subject	Mail Delivery Rule → ♠ → Select a folder → ♠ → ☑ [Menu] → Add Subject → ♠ → Enter a subject → ♠	-
Set not to prioritize words in received message when replying/forwarding	Learning from Received Message → • OFF → •	ON (prioritize)
Set to enter Handset Code for opening messaging folders or operating Server Mail	Mail Security Setting → \blacksquare → Enter 4-digit Handset Code → \blacksquare → (Repeat: Select an item → \blacksquare)*3 → \square [OK]	OFF (not set)

^{*1} Available only when the first information received on 821P is Mail.

^{*2} Font size in text entry window does not change. Open preview window to view created messages in selected font size.

^{*3} To cancel selection, press 💁 again.

S! Mail Settings

Main Menu ► Messaging ► Settings ► S! Mail Settings

Settings	Operation	Default
Set not to retrieve complete messages automatically within Japan	Incoming Options → • → Home Auto Settings → • → From Numbers Only or Manual Retrieval → •	Auto Download
Set to retrieve complete messages automatically while abroad	Incoming Options → ♠ → Roaming Auto Settings → ♠ → Auto Download → ♠	Manual Retrieval
Quote message text when replying	Quote Message → ♠ → ON → ♠	OFF (not quote)
Set not to open attached image files automatically	Attachment Auto-play $\rightarrow \bigoplus \rightarrow Images \rightarrow \bigoplus \rightarrow OFF \rightarrow \bigoplus$	ON (open)
Play attached music files automatically*	$Attachment \ Auto-play \rightarrow \textcircled{+} \rightarrow Sounds \rightarrow \textcircled{+} \rightarrow ON \rightarrow \textcircled{+}$	OFF (not play back)

^{*} When multiple sound files are attached, the first file plays.

Feeling Mail Settings

Main Menu ► Messaging ► Settings ► S! Mail Settings ► Feeling Expression From

Settings	Operation	Default
Hide Information	Information Display Settings → • OFF → •	ON (show)
Deactivate Notification Light	Notification Light Patterns $\rightarrow \bigoplus \rightarrow$ Settings ON/OFF $\rightarrow \bigoplus \rightarrow$ OFF $\rightarrow \bigoplus$	ON (activate)
Change Notification Light color	Notification Light Patterns →	-
Deactivate vibration	Vibration Patterns → ♠ → Settings ON/OFF → ♠ → OFF → ♠	ON (activate)
Change vibration pattern	Vibration Patterns → ♠ → Select feeling → ♠ → Select a pattern → ♠	-
Set Message Ringtone to sound	Message Ringtone $\rightarrow \textcircled{\tiny b} \rightarrow \textit{Settings ON/OFF} \rightarrow \textcircled{\tiny b} \rightarrow \textit{ON} \rightarrow \textcircled{\tiny b}$	OFF (not sound)
Change Message Ringtone	<i>Message Ringtone</i> → \blacksquare → Select feeling → \blacksquare → Select a ringtone → \square [Set]	-

Default Settings

Emotion	Notification Light	Vibration	Message Ringtone
Нарру	Violet	Pattern 1	Happy /うれしい .mmf
OK/Good	Lime	Pattern 1	OK / Good.mmf
Sad/Sorry	Marine Blue	Pattern 2	悲しい/ごめんなさい .mmf
NG/Bad	Rose	Pattern 2	NG / Bad.mmf
Notice/Important	Lemon	Pattern 3	注目/重要 .mmf

- When sender is saved in Phone Book, Phone Book settings take priority in the following case:
 - Message Ringtone is set to a ringtone other than *Follow General Setting* (P.4-4)
 - Notification Light is set to a color other than *Follow General Setting* (P.4-4)

3D Pictograms

Main Menu ► Messaging ► Settings ► 3D Pictograms From

Settings	Operation	Default
Enable 3D Pictograms when opening messages	3D Picto Auto Play → ♠ → Always Display or Display only Unread → ♠	OFF
Change font or background color	Color Settings → ♠ → Select color → ♠	White

SMS Settings

Main Menu ► Messaging ► Settings ► SMS Settings From

Settings	Operation	Default
Set not to store sent SMS	Save Sent SMS →	ON (store)
Set a time limit to store all sent SMS at the Center*1	Expiry → ♠ → Maximum (depending on Server setting) or select a limit → ♠	Depends on USIM Card settings
Change SMS Center number*2	Message Center → 🖢 → Enter SMS Center number → ษ	+819066519300
Set input character type to English	Input Character Settings → ☐ → English (160characters) → ☐	Japanese (70characters)

^{*1} When recipient handset is off or out-of-range, SMS are stored at the Center, and delivered when recipient handset detects signal.

^{*2} Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings

Yahoo! Keitai From Main Menu ➤ Yahoo! Keitai ➤ Settings
PC Site Browser From ➤ Main Menu ➤ Yahoo! Keitai ➤ PC Site Browser ➤ PC Site Browser Settings

Settings Operation		Default
Change character size	Font Size → • → Large or Small → •	Normal
Select scroll unit	Scroll Unit → • Whole Screen or Half Screen → •	Single Line
Set not to show images	$Downloads \rightarrow \textcircled{+} \rightarrow Images \rightarrow \textcircled{+} \rightarrow OFF \rightarrow \textcircled{+}$	ON (show)
Set not to retrieve sounds	$Downloads \rightarrow \stackrel{\bullet}{•} \rightarrow Music \rightarrow \stackrel{\bullet}{•} \rightarrow OFF \rightarrow \stackrel{\bullet}{•}$	ON (retrieve)
Set not to show warning messages when activating PC Site Browser or switching to Yahoo! Keitai*	Warning Messages → ♠ → PC Site Browser (when activating) or Yahoo! Keitai (when switching) → ♠ → OFF → ♠	ON (show)

^{*} PC Site Browser only

Memory Manager & Reset

Main Menu ► Yahoo! Keitai ► Settings Yahoo! Keitai From PC Site Browser From Main Menu ► Yahoo! Keitai ► PC Site Browser ► PC Site Browser Settings

Settings	Operation	Default
Delete information held in Cache Memory	Memory Manager → 🕁 → Clear Cache → 🏚 → 🎃	-
Delete Cookies sent by a server for used ID	Memory Manager → • → Delete Cookies → • →	-
Delete user ID or password entered when authentication is required	Memory Manager → • → Delete Certificates → • → •	-
Delete input memory such as entered text	Memory Manager → • → Delete Input Memory → • → •	-
Initialize Browser	Initialized Browser → ♠ → □ [YES] → Enter 4-digit Handset Code → ♠	-
Reset Browser settings	Reset Defaults → \bigoplus → \boxtimes [YES] → Enter 4-digit Handset Code → \bigoplus	-

Security Settings

Yahoo! Keitai	From	Main Menu ➤ Yahoo! Keitai ➤ Settings ➤ Security
PC Site Browser	From	Main Menu ► Yahoo! Keitai ► PC Site Browser ► PC Site Browser Settings ► Security

Settings	Operation	Default
Send handset Manufacture Number automatically for authentication	Manufacture Number → • → ON → •	OFF (not send)
Set not to send referer information	Send Referer → • → OFF → •	ON (send)
Select whether or not to allow Cookies to be stored on 821P	Cookies → • → OFF or Ask Every Time → •	ON (store)
Select whether or not to run scripts in Yahoo! Keitai*1	Script → • → ON, OFF or Ask Every Time → •	Ask before Connect
Select whether or not to run scripts in PC Site Browser*2	Script → • Ask before Connect, OFF or Ask Every Time → •	ON (run)
View electronic certificates issued by Certificate Authorities saved on 821P	Root Certificates → • Select an item → •	-
Select whether or not to retain authentication information	Certificate Retention → • → Always Keep or Not keep → •	Keep while Browsing

^{*1} Yahoo! Keitai Browser only *2 PC Site Browser only

S! Quick News

Main Menu ► Yahoo! Keitai ► S! Quick News ► Settings

Settings	Operation	Default
Automatically update S! Quick News List*1 *2	Auto Refresh → • → 5! Quick News → • → News Flash → • → • → Set update frequency → •	OFF (not automatically update)
Automatically update General News (once a day)*1 *2	Auto Refresh $\rightarrow \bigoplus \rightarrow S!$ Quick News $\rightarrow \bigoplus \rightarrow General \rightarrow \bigoplus \rightarrow ON \rightarrow \bigoplus$	OFF (not automatically update)
Automatically update S! Loop contents (four times a day)*1 *2	Auto Refresh $\rightarrow \bigoplus \rightarrow 5!$ Loop $\rightarrow \bigoplus \rightarrow \bigoplus \rightarrow ON \rightarrow \bigoplus$	OFF (not automatically update)
Show only unread items in Standby	Standby Window Display → ♠ → Unread/Read Setting → ♠ → Unread → ♠	Unread + Read
Change marquee speed	Standby Window Display → ♠ → Marquee Speed → ♠ → Fast or Slow → ♠	Medium
Block image data	Standby Window Display → ♠ → Image display → ♠ → OFF → ♠	ON (show)

^{*1} If Auto Refresh time occurs during a call, Auto Refresh is canceled.
*2 Video Calls are rejected during Auto Refresh.

Settings S! Appli

From Main Menu S! Appli S! Appli Settings

Settings Operation		Default
Change S! Application volume	<i>Volume</i> → ♠ → Adjust volume → ♠	Volume 4
Keep Backlight on/off while S! Application runs	Display Backlight → • Always ON or Always OFF → •	Follow General Setting*
Deactivate Vibration for S! Application	$Vibration$ → $\stackrel{\bullet}{•}$ → OFF → $\stackrel{\bullet}{•}$	ON (activate)
Suspend S! Application after set period of inactivity	Auto Suspend Timer → • Select duration → •	Not Suspended
Synchronize Memory Card used in another handset, etc. to update S! Appli Library	Synchronize Memory Card → •	-

^{*} Display Backlight Time setting (P.16-3) applies

17

Appendix

Optional Services	17-2
Overview	17-2
Call Forwarding	17-2
Voice Mail	
Call Barring	17-6
Caller ID	17-7
Function List	
Troubleshooting	
Warning Signs	
Software Update	
Character Code List	17-20
Pictograph List	
Symbol List	
Memory List	
Specifications	
Index	
Warranty & Service	
Warranty	17-39
After-Sales Service	17-39
Customer Service	

Optional Services

Overview

● For details, contact SoftBank Customer Center, General Information (1 P.17-40).

Call Forwarding (☐ Right)	Forward unanswerable calls to a preset number when 821P is off, out-of-range, etc.
Voice Mail (⊆ P.17-4)	Unanswered calls are forwarded to Voice Mail Center as set or when 821P is off, out-of-range, engaged, etc. • Missed Call Notification
(1.17-4)	Information window appears for calls missed while 821P was off, out-of-range, engaged, etc.
Call Waiting*	Place the current call on hold and answer a second, or alternate between calls.
Multiparty Call*	Call another party during a call and alternate between calls. Add other parties to talk on up to five lines simultaneously.
Call Barring (⊈ P.17-6)	Restrict calls by condition.
Caller ID (⊈ P.17-7)	Show or hide your number when calling.

^{*} Separate subscription required

Call Forwarding

- Voice Mail and Call Forwarding cannot be set simultaneously.
- When forwarding Video Calls, set a destination phone that supports 3G-324M standard video calls. If not, Video Calls are not forwarded.

Activating Call Forwarding

• r appears in Standby when Call Forwarding is active.

Main Menu ► Settings ► Call Settings
► Optional Services ► Voice Mail/Call Forwarding
► Call Forwarding ON ► All Calls, Voice Calls or Video Calls

Forward All Calls without Ringing/Vibrating

Ringer Off → •

Forward Missed Calls

Ringer On → •

•

2 Select From Phone Book

Phone Book → •• Select an entry → •• Select a number → ••

Direct Entry

Direct Entry → $\stackrel{.}{•}$ → Enter a number → $\stackrel{.}{•}$

If *Ringer On* is selected in step 1, select ring time → 💼

Call Forwarding status appears.



When *Ringer On* is set, press to answer calls while 821P is ringing/vibrating. To forward calls immediately while 821P is ringing/vibrating, press [Forward].

Canceling Call Forwarding


Main Menu ► Settings ► Call Settings

- Optional Services Voice Mail/Call Forwarding
 - Cancel All



Checking Current Status



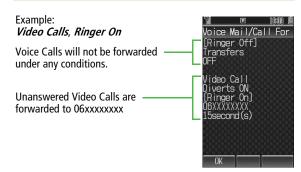

- Toll-free numbers, Public Service numbers, International numbers, etc. cannot be saved.
- When using Call Forwarding together with Answer Phone (P.2-6), the function with shorter ring time has response priority. (Priority may change due to signal conditions.)

Voice Mail

- Calls are forwarded to Voice Mail Center via Call Forwarding function; Voice Mail and Call Forwarding cannot be set simultaneously.
- Voice Mail is not available for Video Calls.

Activating Voice Mail

r appears in Standby when Voice Mail is active.

Main Menu ► Settings ► Call Settings

- Optional Services Voice Mail/Call Forwarding
- Voice Mail On
- Forward All Calls without Ringing/Vibrating

Ringer Off → •

Forward Missed Calls

Ringer On \rightarrow \spadesuit Select ring time \rightarrow \spadesuit Call Forwarding status appears.

Note

- When using Voice Mail together with Answer Phone (P.2-6), the function with shorter ringing time takes priority. (Priority may change due to signal conditions.)
- When *Ringer On* is set, press **\times** to answer calls while 821P is ringing/vibrating. To forward calls immediately while 821P is ringing/vibrating, press [Forward].

Canceling Voice Mail


Main Menu ► Settings ► Call Settings Optional Services Voice Mail/Call Forwarding Cancel All

Checking Current Status

Main Menu ► Settings ► Call Settings

Optional Services Voice Mail/Call Forwarding

Confirm Status

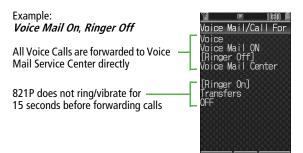

Checking Voice Mail Messages

Information window and His appear in Standby when new messages are recorded.

- Information window: 「→ P 1-16
 - In Information window, Voice Mail → 🛖
 - Follow voice guidance. Information window and disappear after messages are checked. When 🚟 remains, there are unchecked messages at the Center.



Viewing Details

View callers' phone numbers and date/time Voice Mail messages were left before playing messages. to open Incoming Call Log

- \rightarrow Select a Voice Mail notification $\rightarrow \stackrel{\bullet}{\blacksquare} \rightarrow$ View details
- → [Menu] → Listen to Voice Mail → 🚠



Alternatively, follow these steps to check Voice Mail:

Main Menu ► Settings ► Call Settings

- Optional Services Voice Mail/Call Forwarding
- Listen to Voice Mail

Missed Call Notification

When Missed Call Notification function is active, Information window appears for calls missed while 821P was off, out-ofrange, engaged etc.

Available only when Voice Mail is active.

Main Menu ► Settings ► Call Settings Optional Services Missed Call Notification

821P connects to the Network.

When Calls are received while Missed Call Notification is active...

Information window appears for missed calls when 821P is turned on or comes into range. Press 💼 to view Incoming Call Log.

• Voice Mail appears in Information window when Voice Mail messages were recorded (Land Left).



Call Barring

Restrict incoming/outgoing Voice Calls, Video Calls or SMS messages.

• When Call Forwarding or Voice Mail is active, **Bar All** Outgoing Calls or Bar All Incoming Calls is not available. (Call Forwarding or Voice Mail takes priority.)

	Bar All Outgoing Calls	Restrict all non-emergency calls
Outgoing Calls	Bar All International Calls	Allow only domestic calls
	Bar International Calls	Restrict all international calls except to Japan
Incoming	Bar All Incoming Calls	Reject all calls
Calls	Bar All If Roamed	Reject calls when outside Japan

● Call Barring Password specified at initial subscription (ピア.1-24) is required to change Call Barring settings.



- Emergency numbers (110, 119, 118) are available when Call Barring for outgoing calls is active.
- If call is attempted when Call Barring is active, warning message appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.

● Rejecting Specific Calls (P.10-5) ● Rejecting Specific Numbers (**⊈** P.10-6)

Restricting Outgoing Calls

Set or cancel restriction of outgoing calls. Check Call Barring status for outgoing calls.

Main Menu ► Settings ► Call Settings

- Optional Services Call Barring
- Outgoing Calls Bar All Outgoing Calls, Bar All International Calls or Bar International Calls
- \square [Menu] \rightarrow *ON*, *OFF* or *Status* \rightarrow $\stackrel{\bullet}{\square}$ When *Status* is set, current status appears. When **ON** or **OFF** is set, go to Step 2.
- Enter 4-digit Call Barring Password → Current status appears.

Restricting Incoming Calls

Set or cancel incoming call restriction; confirm status.

Main Menu ► Settings ► Call Settings ► Optional Services ► Call Barring ► Incoming Calls Bar All Incoming Calls or Bar All If Roamed

- \square [Menu] \rightarrow *ON*, *OFF* or *Status* \rightarrow $\stackrel{\bullet}{\square}$ When *Status* is set, current status appears. When **ON** or **OFF** is set, go to Step 2.
- Enter 4-digit Call Barring Password → Current status appears.

Canceling All Call Barring

Main Menu ► Settings ► Call Settings ► Optional Services Call Barring Cancel All Barring

Enter 4-digit Call Barring Password → 🐽

Checking Call Barring Status

Main Menu ► Settings ► Call Settings ► Optional Services Call Barring Confirm Status

Bar All Outgoing Calls, Bar All International Calls, Bar International Calls, Bar All *Incoming Calls* or *Bar All If Roamed* → ••••

Changing Call Barring Password

Main Menu ► Settings ► Call Settings Optional Services Call Barring **Call Barring Password**

- Enter current 4-digit Call Barring Password → ••••
- Enter new 4-digit Call Barring Password → •
- Reenter new Call Barring Password → ••••


Caller ID

<Default> Network Set

• **Network Set** Caller ID setting varies by subscription.


Main Menu ► Settings ► Call Settings **Show My Number**

 Select *ON*, *OFF* or *Network Set* → •





Show	1 .8 8 .0 6 MB Or ** 3 MB 1 .8 #**
Hide	1 . 8 . 8 . 9 4 . 6 0

Example: To select *Create New S! Mail* in Messaging menu: 1.∄ (Messaging) → 2.∄ (Create New S! Mail)

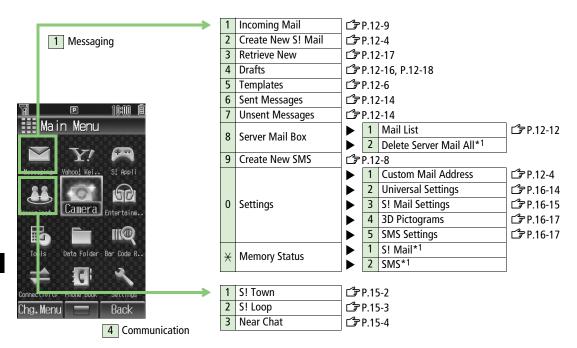



Appendix 17

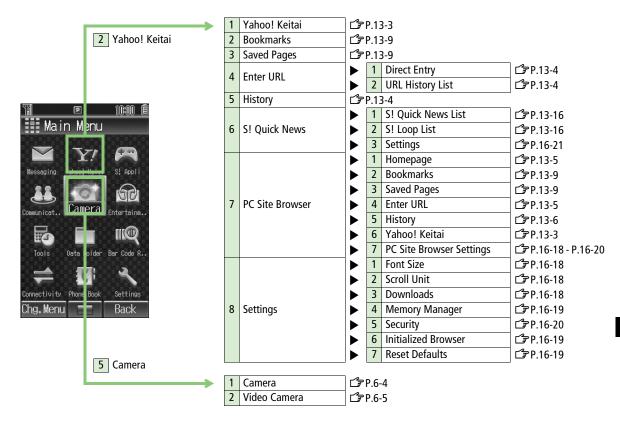


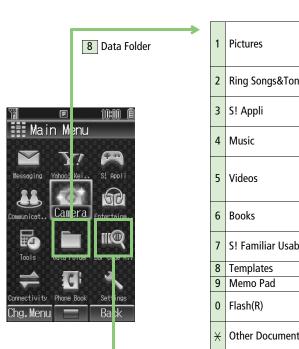

		Tab	1	Phone*2	⊈ P.8-2
1	Pictures	Tab	2	Memory Card*2	⊈ P.8-2
		Tab	3	DigitalCamera*2	⊈ P.8-2
2	Ring Songs&Tones	Tab	1	Phone	⊈ P.8-2
2	King Jongs&Tones	Tab	2	Memory Card	⊈ P.8-2
3	S! Appli	Tab	1	Phone	⊈ P.8-2
,	3: Appli	Tab	2	Memory Card	⊈ P.8-2
4	Music	Tab	1	Phone	⊈ P.8-2
4	IVIUSIC	Tab	2	Memory Card	⊈ P.8-2
		Tab	1	Phone*2	⊈ P.8-2
5	Videos	Tab	2	Memory Card*2	⊈ P.8-2
		Tab	3	Video Camera*2	⊈ P.8-2
6	Books	Tab	1	Phone	⊈ P.8-3
U	DOOKS	Tab	2	Memory Card	⊈ P.8-3
7	CL Familiar Heability	Tab	1	Phone	⊈ P.8-3
′	S! Familiar Usability	Tab	2	Memory Card	⊈ P.8-3
8	Templates		P.8-	-3, P.12-6	-
9	Memo Pad	Î	P.8-	·3, P.11-9	
0	Flash(R)	Tab	1	Phone	⊈ P.8-3
U	i iasii(it)	Tab	2	Memory Card	⊈ P.8-3
V	Other Documents	Tab	1	Phone	⊈ P.8-3
X	Other Documents	Tab	2	Memory Card	⊈ P.8-3
#	Momony Status	•	1	Phone*1	
#	Memory Status	>	2	Memory Card*1	
		7 -			
1	Scan Barcodes		P.11	1-11	

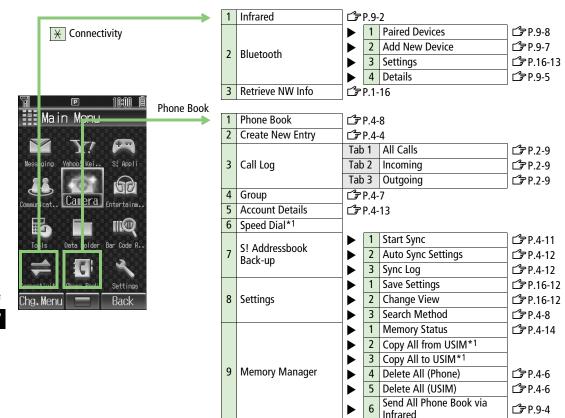

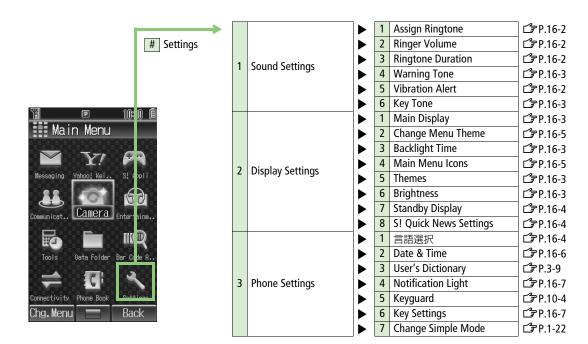

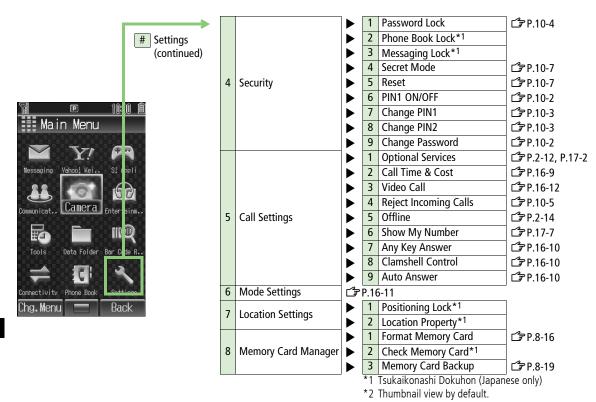

Troubleshooting

Problem	Causes and Remedies
821P does not turn on	Was pressed for more than three seconds? Is battery level sufficient? Is battery inserted properly? (☐ P.1-13)
Handset functions do not work after turning power on	• Does PIN Entry window appear? PIN Entry is <i>ON</i> . Enter PIN1 (1) P.10-2).
Insert USIM or Invalid USIM appears when 821P is turned on or operations attempted	 Is USIM Card inserted correctly? (P.1-3) Unusable USIM Card may be inserted (P.1-2). USIM Card IC chip may be dirty. Wipe with a clean cloth, then insert USIM Card correctly.
Keypad does not respond	 Does appear in Standby? Keyguard is locked (□ P.10-4). Press to unlock it. Does appear in Standby? Password Lock is active (□ P.10-4). Enter 4-digit Handset Code (□ P.1-24) to release it.
Calls or Video Calls cannot be connected or message and Internet connections are not available	 Does dut appear? Is 821P out-of-range or in a location where signal is weak? Move to a location where signal is strong. Are you using handset overseas? You must select an operator and set international settings to use handset abroad (P.2-12). Does appear? (P.2-14) Does appears in red) appear? (P.1-8) Does appear?
Calls or Video Calls cannot be connected	Is area code entered? Is restricting outgoing calls in Call Barring? (□ P.17-6)

Problem	Causes and Remedies
Calls cannot be connected or busy signal sounds after dialing	Did you enter area code?
Calls cannot be made via a Phone Book entry	 Entry may be saved as Secret. Set Secret Mode ON (□ P.10-7). Does □ or □ appear? Phone Book Lock is active. Deactivate Phone Book Lock.
Entry names do not appear in Call Log or message lists even if saved in Phone Book	This may occur just after turning 821P on. Return to Standby and retry later.
Handset does not respond as customized for incoming calls from numbers saved in Phone Book	This may occur just after turning 821P on.
Call is interrupted or disconnected	Does QUT appear? Is 821P out-of-range or in a location where signal is weak? Move to a location where signal is strong.
Cannot charge battery	 Is AC Charger (not included) firmly connected to 821P or Desktop Holder (not included)? (□P.1-14) Is AC Charger securely plugged into an outlet? Is battery installed in 821P correctly? (□P.1-13) Is 821P correctly mounted in Desktop Holder? Make sure 821P, battery, Desktop Holder and AC Charger terminals are clean. Battery may not charge beyond +5°C and +35°C. Battery may need to be replaced.
821P/accessories feel warm	AC Charger/Desktop Holder may warm during charging. 821P may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if 821P is held against skin for long periods.
Battery Operating Time is greatly reduced	Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (P.1-11) and "Battery Time" (P.1-12).



Note If you did not find the remedy to your problem here, please contact SoftBank Customer Center (LFP.17-40).

Warning Signs

Problem	Causes and Remedies
QUT appears	Handset is out-of-range. Move to a location where signal is strong.
appears	Keyguard is locked (≦F P.10-4). Unlock Keyguard to use keys. Answer calls even if Keyguard is locked.
appears	Password Lock is active (FP.10-4). Enter Password/cancel Password Lock to use handset. Answer calls even if Password Lock is active.
Low battery message appears and battery alarm tone sounds	Battery is low (☐FP.1-8). Charge or replace battery.

Software Update

Check for 821P software updates and download as required. Choose to begin update or schedule update.

- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.

Main Menu ► Tools ► Software Update Start Update

Follow onscreen instructions

After download is complete, 821P automatically turns off and restarts before Software Update begins. (This process takes approximately 20 seconds.)

After Software Update is complete, 821P automatically turns off and restarts before information appears for successful update. (This process takes approximately 30 seconds.)



When Already Updated

No update required confirmation appears. Press **□[OK]** and proceed with use of 821P.



Update Results

In Information window, Update Results

- → 🐽
- In Standby, Main Menu Tools Software Update ► Information



Scheduled Update

Follow onscreen instructions for setup. Confirmation appears at scheduled update time. Press • or wait ten seconds for update to start.

• Software Update will not start while 821P is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.





- Software Update failure may disable 821P. Contact SoftBank Customer Center, Customer Assistance (**⊈** P.17-40).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup, as appropriate, of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Update may temporarily unlock Keyguard.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Character Code List

						D: .											D											D				_
First Three Digits		1	0	٦	_ast	Digi	t	7	0	0	First Three Digits		,	0	٦	ast. 4	Digi	t	7	0	0	First Three Digits		,	0		.ast	Digi		7	0	
	0	(C)	2	3	4	5	6	_/_	8				- 1 "	2					/	8			U	+	2	3	4		6	-	8	9
010 011 012	! "	(Space)	°,	°,	· 全	:. 々	· *	-	; =	<u>`</u>	044 045 046	とひぼ	とびぽ	なぴま	にふみ	ぬぶむ	ねぷめ	のへも	はべゃ	ばぺゃ	ぱほゅ	081 082 083	1	† †	- +	F	<u>-</u>	7	_	+	+	T
013 014	- "	<i>'</i> ,	(~	Ī	Ì	 []	· {	}	047 048	ゆゐ	よ ゑ	よを	56	Ď	ã	ň	Ż	ゎ	ħ	130 131	(10)	1	2	3	(4) (14)	(5) (15)	6 16	7	8	9
015 016 017	\ \ \ <u>\</u> \	> - «	±	》 × ♂	 수	=	 ≠ ,	<	°C >	l ≦ ¥	050 051	オ	ァ カ	アガ	イキ	イギ	ゥク	ウグ	エケ	エゲ	オコ	132 133 134	(W)	ا ت	三り	# " "	レヤチャント	くとこれで	グタンドル		VII ボー mm	IX ≩ii cm
018 019	- ★	¢	£	% ◎	#	2	\times	@	§	☆	052 053	ゴゾ	サタ	ザダ	シチ	ジヂ	スッ	ズツ	セッ	/ゼテ.	ソデ	135 136	km	mg	kg	CC 平成	w.		No.	K.K.	TEL	Ð
020 021 022	→	•	1	Ţ	=		\triangle	▼ ∋	* ⊆	∓	054 055 056	トヒボ	ドビポ	ナピマ	フミ	ヌブム	ネプメ	ノヘモ	ハベャ	ハペヤ	パホュ	137 138 139	⊕ ::	⊕	Æ J U	⊕	(株) ∑	(有) √	代)	船∠	址	閊⊿
023 024	<u></u>	\supset	\wedge	$_{\vee}^{\cap}$	_	\Rightarrow		\forall	=	_	057 058	<u> </u>	ヨヱ	э́Э	ミラン	IJ ヴ	ルカ	レケ	Ò	ò	う	160 161			_	娃悪	【 ð 阿 握	5 】 哀 渥	愛旭	挨葦	始芦	逢鯵
026 027	Z S	$_{\infty}^{\perp}$		∂ ∫	∇	=	÷	«		$\sqrt{}$	060 061	K	Α	B M	Γ N	ΔΞΩ	E	Z П	H P	ΘΣ	I T	162 163	葵梓鮎鞍	亜茜圧或	唖穐斡粟	志 扱 袷	婚宛安	産姐庵	心虻按	飴	戸絢案	診綾闇
028 029			А	‰	# (b	Þ	†	‡	9	062 063 064	Υ	Φ,	X	Ψ α λ	β	Y V	δ ξ	ε	ζ π	ηρ	164 164	鞍	杏	以	伊	位位		唐	囲	=	禾
031 032	4	5	6	7	8	9	0	1	2	3	065	σ	l T	K U	Φ	μ X	ψ	ω	0	11	ρ	165 166	威移	尉維	以惟緯	げ意胃		依易衣磯印	偉椅謂	違	夷畏遺溢	委異医
033 034	H		J	A K	B	C M	D N	O X	F P	G Q	070 071	Й	А Й	БКФ	В	М	ДН	E	Ë	ЖР	3	167 168	威移井稲品	尉維亥茨約	惟緯域芋淫陰	意胃育鰯胤	慰萎郁允苡	磯印	咽	壱	溢因	逸姻
035 036 037	R	S	h	U	V	W a k	X b	Y C m	Z d n	e	072 073 074	Ъ	Э	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы	169 170	引	飲院	注陰	隠	蔭韻 [时 5 】				
038 039	p z	q	r	S	ť	u	V	W	Χ	У	075 076	б к	В Л	Г М	Д Н	e 0	ё П	ж р	3 3	И Т	Й У	170 171	迂	雨	卯	鵜	窺	±	右碓	宇臼	烏渦	羽嘘
040 041 042	おご	あかさ	あがざ	いきし	いぎじ	うくす	うぐず	えけせ	えげぜ	おこそ	077 078	ф	Х Я	Ц	Ч	Ш	Щ	Ъ	Ы	Ь	Э	172 173	迂唄云	欝運	蔚雲	鰻	姥【え	厩	浦	瓜	閏	噂
043	ぞ	さた	ざだ	5	ぢ	シ	<u></u>	づ	て	で	080		_		Г	٦	┙	L	H	\top	\exists	173				荏	餌	叡	営	嬰	影	映


First Three Digits				I	_ast	Digi					First Three Digits				L	.ast	Digi	t				First Three Digits				L	ast 4	Digi	t			
		1	2	3	4	<u>5</u>	6	7	8				1	2	3	4	5	6	7	8	9			1	2					7	8	9
271 272 273	鯖惨讃	捌撒替	錆散酸	鮫桟餐	皿 燦 斬	晒珊暫	三産残	傘算	参纂	山蚕	306 307 308	詳丈情	象丞擾	賞乗条	醤冗杖	鉦剰浄	鍾城状	鐘場畳	障壌穣	鞘嬢蒸	上常譲	337 338 339	漕草霜	燥荘騒	争葬像	痩蒼増	相藻僧	窓装	糟走	総送	綜遭	聡鎗
273 274				史	[([ر		仕	仔姉	伺姿	309 310 311	醸蝕	錠拭辱	《嘱植尻	植殖伸	/飾燭信	織侵	朏	色	触	食審	340 341 342	捉卒	脳 東袖	蔵測其	贈足揃	造速存	促俗孫	側属尊	則賊損	即族村	息続孫
275 276	使子施	刺屍旨紫	司市枝	史師止脂	嗣志死至飼	四思氏視歯	士指獅詞	始支祉詩	奶孜私試	妥斯糸誌	312 313	11.1	慎	凡振神進	仲新秦針	晋紳	[存在] 人迅	唇榛芯	娠 浸薪	寝深親塵	中診	343	平 他柁	多	*	汰	記		-	妥	惰	打
277 278 279	紙諮字	紫資寺	肢賜慈	脂雌持	至飼時	視歯	調事	詩似	試侍	誌児	314 315	疹身尋	真辛甚	進尽	針腎	震訊	人迅	仁陣	刃靭	塵	壬	344 345 346	柁岱腿	/舵带苔	流 精 待 袋	陀怠貸	駄態退	騨戴逮	堕体替隊滝	泰	対滞鯛	耐胎代
280 281 282	耳	次自宍	滋蒔	治辞七	爾汐	璽鹿執	痔式生	磁識	示鴫安	而竺菜	315 316 317	須炊	酢睡	図蜘	厨翠	逗	吹	垂酔趨	帥錐	笥推錘	諏水随	347 348 349	台宅諾	大托茸	第択凧	(配拓蛸	題沢只	鷹濯	滝琢	瀧託	卓鐸	啄濁
283 284	軸湿屡社	八漆蕊紗	雫疾縞	質舎謝	叱実写車酌手儒	茶蔀射遮	失篠捨	嫉偲赦邪若狩	鴫室柴斜借寂珠	悉芝煮	318 319	端相	髄菅	粋崇頗	翠嵩雀	衰数裾	遂枢	超	雛	錘据	杉	350 351		100谷探		達鱈	八辰樽淡	奪誰	脱丹炭	巽単短:	竪嘆端	辿坦箪
285 286 287	尺惹	杓主	(編者)り取	爵守	里酌 手	遮 釈 朱 受	捨蛇錫殊		信寂珠	勺弱種	320 320		澄	摺	寸	世	≠ 】 瀬	畝	是	凄	制	352 353 354	棚担綻暖	採耽檀	但狸旦胆段	歎蛋男	誕談	湛鍛	団	湿壇	弾	単断
288 289 290	腫綬	趣需宗	酒囚就	首収州	周		呪给	寿洲	授黍	樹秋	321 322 323	勢栖西	姓正誠	征清誓	性牲請	成生逝戚	政盛醒	整精青	是星聖静析	晴声客	棲製税	354 355	知	池	痴	稚	【を置	5 】 値 致	知蜘	地渥	弛馳	恥筑
291 292	終輯	繍调	習首柔	臭酬汁	舟集	愁蒐醮	拾衆什么	襲住	秀讐充済	蹴十	324 325	脆籍	隻績摂	誓席脊折	明 惜 責 設	成赤窃:	醒斥跡符	青昔蹟	碩	晴声斉石切絶	積拙	356 357	智畜中註	竹仲	筑宙	蓄忠	涿	X 秩屋瀦	蜘窒柱猪	茶	嫡虫著	築着衷貯
293 294 295	従夙述	戎宿俊楯	采淑峻殉		修舟集渋縮瞬準所諸	獣粛竣潤	縦塾舜盾	重熟駿	銃出准巡	叔術循	326 327 328	接蝉扇	仙撰	先栓	千栴	占泉	節宣浅	説専洗	雪尖染	杷川潜	舌戦煎	358 359 360	丁	酎兆帖朝	鋳凋帳	駐喋庁	龍弔	張	彫	~		挑
296 297 298	旬醇署	楯順書	机	淳初藷	準所諸	潤暑助	盾曙叙	純渚女	巡庶序	遵緒徐	329 330 331	煽谣	旋繊遷	穿羨銭	箭腺銑	線舛閃	船鮮	薦前	詮善	賎漸	践然	361 362 363	暢調直	朝諜胀	潮超沈	牒跳珍	町銚賃	眺長鎮	聴頂陳	脹鳥	腸勅	蝶捗
299 300	恕	鋤勝	薯除匠	傷升	償召	哨	※ 商尚	八唱庄		奨	332	選全	遷禅	繕	膳	糎	E]					363		-			[=)		津	墜槻	椎
301 302 303	妾彰松	娼承梢	宵抄樟	将招樵	小掌沼	少捷消	昇	昌	嘗床昭焼	廠晶焦	332 333 334	曽組	楚蘇	狙訴	疏阻	疎遡	噌礎鼠	塑祖僧	岨租創	措粗双	曾素叢	364 365 366	槌漬嬬	追柘紬	鎚辻爪	痛蔦吊	通綴釣	塚鍔鶴	栂椿	掴潰	槻坪	佃壷
304 305	照紹	症肖	省菖	硝蒋	礁蕉	消祥衝	渉称裳	湘章訟	焼笑証	焦粒詔	335 336	倉捜	喪掃	壮挿	· 奏 掻	爽操	鼠宋早	層曹	匝巣	惣槍	想槽	366					[7		亭	低	停	偵

First Three Digits	0	1	2	3	₋ast 4	Digi 5	it 6	7	8	9	First Three Digits	0	1	2	3	ast 4	Digi 5	t 6	7	8	9	First Three Digits	Ω	1	2	3	ast 4	Digi 5	t 6	7	8	9
445 446 447	孟目紋	毛杢門	猛勿欠	盲餅	網	耗	蒙籾	儲貰	木問	黙悶	469 470	漣	煉蓮	簾連	練錬	聯【表	 3]					502 503 504	甸匸卮	匍區夘	匐卆卻	匏卅卷	上世厂	匚卉厖	匣卍) 匯 準 厦	置卞厥	
447 448 449	矢鑓	厄	役	也約	治薬	を訳れ	爺躍	耶靖	野柳	弥薮	470 471 472 473	露牢肋	労狼録	婁篭論	廊老	呂弄聾	魯朗蝋	櫓楼郎	炉榔六	賂浪麓	路漏禄	505 506 507 508 509	厰叭吩咒咥	ム叺吝呻☆	參吁	篡吽咏呶哈咤	雙呀呵咄沒	慢听咎咐	厠曼吭呟咆	燮吼呱哇	叮吮呷咢	叨吶呰咸
449 450 451 452	悠祐	偷諭憂裕	愈輸揖誘	油唯有遊	【癒佑柚邑【	優湧郵よ	勇涌雄	友猶融	宥猷夕	幽由	473 474 475 476 477	枠碗	鷲腕	亙	倭亘	和鰐	話詫	歪藁	賄蕨	脇椀	惑湾	510 511 512 513 514	呸 唔售咯喩	吝呻咬咫哽啜喊喇	呎咀哄哂哮啅喟喨	哈 民啖 雪嗚嗾	咨咾哺啗啾嗅	咼哢唸喘嗟	哘唹唳喞嗄	哥啀啝單嗜	哦啣喙啼嗤	唏啌喀喃嗔
452 453 454 455 456	余揚窯養	与揺羊慾	誉擁耀 抑	輿曜葉欲	預楊蓉沃	傭様要浴	幼洋謡翌	妖溶踊翼	容熔遥淀	予庸用陽	478 479 480 481 482	乖 亟	弌乘士 :	丐亂亢!	丕]亰	个豫亳	丱亊宣:	、舒从:	丼 弐 仍	ノ于仄:	乂亞仆	515 516 517 518 519	嘔嘴嚀嚼囹	喇嗷嘶嚊囁圀	嘖嘲嚠囃囿	嘸嚔囀圄	嗽噫嚏囈圉	嘛噤嚥囎	嗹嘯嚮囑	噎噬嚶囓	"嗤器噪嚴口	順營噶囂囮
456 457 458 458	螺乱	裸卵	来嵐	菜欄	頼濫【!	雷藍	洛蘭	絡覧	落利	羅酪	483 484 485 486 487 488	仂佝侑俑倅偃	仗佗佯俚伜假	仞佇來俐俶會	仅佶侖俤倡偕	仟侈儘俥倩偐	价侏俔倚倬偈	伉侘俟倨俾做	佚佻俎倔俯偖	估佩俘倪們偬	佛佰俛倥倆偸	520 521 522 523 524 525	圷坿埔堡墟壗壻夭奢	圈址垉埒塢壿壙壼夲奠奸妍婬嫂嬋孑斈寐	國坎垓埓塋塘	圍圻垠堊塰壞壥	圓址垳埖毀墻壜	團坏垤埣塒墸壤	圖坩垪堋堽嶞	嗇埀垰堙塹壅壯	圜垈埃堝墅壓壺	圦坡埆塲墹 _韌
459 460 461 462	履葎隆	李痢掠竜	梨裏略龍:	理裡劉侶	璃里流慮	離溜旅	陸琉虜	律留了	剂 率硫亮瞭緑	立粒僚	489 490 491 492	傀 僮儡	傚僉價儺	傅僊僵儷	傴傳儉嚴	傲僂儁儻	僖儂儿	岡 偽艦兀	. 僥儕兒	僭儔兌	僣儚兔	525 526 527 528 529 530	^娅 儘壻夭奢	^厚 壙壺夲奠	坎垓埓塋墺壘壽夸奧妁姙	^该 壥夂夾獎妝姚	"壜 文 竒 奩 佞	夐 奕	堋堽墮壟夛奐	梦奎	夥奚	壑壹夬奘
463 464 465 466	両糧厘 瑠	凌良林 塁	寮諒淋 涙	料遼燐 累	深量琳【類	旅涼陵臨	猟領輪	療力隣	瞭緑鱗	稜倫麟	493 494 495 496 497	兢冏ン几刎	競冑决處刧	兩冓冱凩刪	兪冕冲凭刮	兮[冰凰刳	冀冤况凵糾		囘冢凅刄剄	册冩凉刋剋	冉冪凛刔剌	530 531 532 533 534	姜婀嫋嬌孀學寔	奸妍婬嫂嬋	妁姙婉媽嬖孕	妝姚娵嫣嬲	娥娶嫗	侫娟婢嫦嬷	妣娑婪嫩媳	妲娜媚嫖嬾	姆娉媼嫺孃	姨娚媾嫻孅
466 467 468	福衛齢	全恰曆	<i>床</i> 玲歴	礼列		1】 令鈴烈	伶隷裂	例零廉	冷霊恋	励麗憐	498 499 500 501	列 動	別剱辧勦	剪劈劬飭	引剴劑劭勠	列剩辨劼勳	刹剳 券勵	放剿 勁勸	剽勍	剋劍 勗匆	刺劔 勞匈	535 536 537 538	炯孀學 寔寳	7子 字 寐 尅	安孕孺寤將	깨 子 〔實專	嫐孛它寢對	嬪孥宦寞尓	嬶孩宸寥尠	州孰冤寫	爆孳寇寰尨	瀬孵 寉寶 尸

First Three Digits	0	1	2	3	ast 4	Digi 5	t 6	7	8	9	First Three Digits	0	1	2	3 3	ast 4	Digi 5	t 6	7	8	9	First Three Digits	0	1	2	3	.ast 4	Digi 5	t 6	7	8	9
650 651 652	瓷甦	弧 甄 甬	瓣甃		瓩 甌 畍	瓮甎畊	瓲甍畉) 超甕畛		- 瓸甞畚	687 688 689	給 粽 糲	粢 糀糴	- 粫糅糶	粡糂糺	- 粨糘紆	粳糒	粲糜	粱糢	粮鬻	粹糯	724 725 726	幕菻蒂	- 莨葭葩	菠萪葆	菲萼萬		范蒄葹	萠葷萵	莽葫蓊	萸蒭葢	菱葮蒹
653 654 655		:時靈疵		畫疔疽	[畭疚疼	騎疝疱	當疥痍	疆疣痊	疇痂	B畴疳痙	690 691 692	紵	紂絆綉	紜絳絛	紕絖綏	紊絎絽	絅絲綛	絋絨綺	紮絮綮	継 機	紿絣綵	727 728 729	: 蒿蒡蓼	1蒟蔡蕀	蓙蓿蕣	『蓍蓴蕘	蒻蔗蕈	蓚蔘	蓐蔬	蓁蔟	蓆蔕	麓蔔
656 657 658	痣瘋瘰	痞瘍瘻	痾瘉癇	痿瘟癈	痼瘧癆	瘁瘠癜	痰瘡癘	痺瘢癡	痲瘤	麻瘴癨	693 694 695	經緇緘縡	綽緝縒	綫緤縱	總緞縟	綢緻縉	綯緲縋	緜緡縢	綸縅繆	綟縊繦	綰縣縻	730 731 732	薨藉	蕁蕭薺	藥薔藏	蕋 薛 薹	蕕 藪 藐	薀薇藕	薤薜藝蘢	薈 蕷 藥		薊 薐藹
659 660 661 662	癩皖盍	癪癲皓盖	癧癶晳盒	癬癸皚盞	癰發皰盡	皀皴	兒皸虜	皈皹盪	皋皺蘯	皎盂肹	696 697 698 699	縵繙辮纎	縹繚繿纛	繃繹纈纜	縷繪纉缸	縲繩續缺	縺繼纒	繧繻纐	繝纃纓	繖緕纔	繞繽纖	733 734 735 736	蘊虍蚋蛔	[蘓乕蚌蛭	蘋虔蚶亞	賴號蚯蛬	藺虧蛄蛟	蘆虱蛆蛛	龍蚓蚰蛯	蘚蚣蛉蜒	縵蚩蠣蜆	蘿蚪蚫蜈
663 664 665	眈眸瞎	眇睇瞋	眄睚瞑	眩睨瞠		盥眞睛瞰	盧眥睥瞶	眦睿瞹	眛睾瞿	一眷睹瞼	700 701 702	罟靐	罅罠羌	罌罨羔	磐 罩羞	罎槑羝	罐罸羚	网羂羣	罕羆羯	罔羃羲	罘 羈羹	737 738 739	蜀蜷蝴	蛞蜃蜻蝗	蛩蜕蜥蝨	蜑蜩蝮	蜉蜚蝙	蛛蜍蝠	蛹蝟	蜊	蜴蝌	蜿蜴
666 667 668	瞽砌碚	瞻砒碌	矇礦碣窟	矍砠碵	矗礪碪	矚硅碯	矜 碎 磑	矣硴磆	矮碆	矼硼磔	703 704 705	奏 朝耙	羶 翩 耜	羸翳耡	ii 翹耨	翅飜耿	翠耆耻	翊耄聊	翕耋聆₽	翔耒聒	翡 耘 聘	740 741 742	螽蟯	輸蜂品	蝣蟐蟠	場雖蠏	蠅 螫蠍	螢蟄蟾?	螟螳蟶	螂臺蟷	螯蟆蟒	蟋螻蟒鬟
669 670 671 672	碾礫潮	碼磧祀禝	磅磚祠禧	磊磽祗齋	磬磴崇禪	礇祚禮	礒祕禳	礑祓禹	礙祺禺	礬祿秉	706 707 708 709	聚聿胛脛	智肄胥脩	聢肆胙脣	聨肅胝脯	聳肛胄腋	聲肓胚	聰肚胖	聶肭脉	聹冐胯	聽肬胱	743 744 745 746	蠑衄衵袍	蠖衂衽茅	蠕衒袵袰	蠢衙衲社	蠡衞袂袱	蠱衢 袗裃	蠶衫袒裄	蠹袁袮裔	: 蠹衾 袙逑	蠻袞袢裙
673 674 675	禊粃稟穢	 	紀和稱龝	尿秡稻穰	秣稾穹	程 程 程		棋穗窗	種羅窕	不稠穡窘	710 711 712	腦膣	隋腴腟		肥胖膈膩		腑膀膵	胼膂膾	腱膠膸	腮膕膽	腥膤臀	747 748 749	袍裝褓褸	袤裹襃禪	褂褞禅	袿裼褥襠	裴褪襞	裨褫	裲強	複襄	裘褌褻	福褶
676 677 678	窖竊竦	窩針蝎	竈竏竰	塞 纷 筑	窶竓笏	竅站笊	竄竚笆	窿並笳	邃竡笘	竇竢笙	713 714 715	臂臠舍	膺臧舐	臉臺舖	臍臻舩	臑臾舫	臙舁舸	臘香舳	臈舅艀!	腫與艙!	臟舊艘	750 751 752	覈覺訃	襦覊覽訖	襤覓覿	襭覘觀	襪 覡 觚	襯覩觜!	襴覦觝	襷覬觧!	襾覯觴詁	草 覲觸
679 680 681 682	笞 筧箚	范箧筰箋	笨笄筱箒	笑筍筬箏	筐笋筮筝	筌箝箙	筅箘	筵箟篁	箍	筴箜篏	716 717 718 719	艝艷苣苞	艚艸苟茆	艟艾苒苜	艤芍苴茉	艢芒苳苙	艨芫苺	艪芟莓	艫芻范	舮芬苻	艱苡苹	753 754 755 756	訃詒誨諚	記 抵誡諫	計詈誑諳	江 詼誥諧	訛 詭誦	訝詬誚諱	訥詢誣謔	誅	挑諍	詛誄諂諷
683 684 685	箴簇簟	箋篆簓簷	〒 第 筆 簫	事篩 篷簽	簑簗籌	服簑簍籃	篋篦篶籔	= 篥 簣 籏	作	断簀簪籐	720 721 722	茯茣	茵茫莎		不善荔莊	茲莅荼	茱莚莵	荀 莪 荳	茹莟荵	荐莢莠	苔莖莉	757 758 759	6編 温登	諛鞫譖	謌謦譛	謇謫譚	諤謚謾譫	時 諡 謨	『 謖 譁	品 温 調	諢謗譏	謠譎
686	籘	籟	籤	籖	籥	籬	籵	粃	粐	粤	723	莨	菴	萓	菫	菎	菽	萃	菘	萋	菁	760		譟	譬	譯	譴	譽	讀	讌	讎	讒





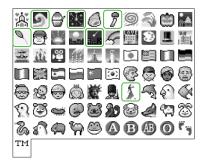

- Pictographs listed here appear on compatible SoftBank handsets.
- Pictographs in are animated.
- Pictographs do not appear in mail or on incompatible SoftBank handsets.
- Pictographs may not appear as depicted in pictograph list on some SoftBank handset models.
- Pictographs may not appear as depicted in pictograph list when viewed on External Display.

Symbol List

Double-byte Symbol List

 $\langle \nabla$ § \ni ヰ Υ Φ Χ Ψ Ω

θ Κ 記 ペー 記 ジ mm cm km mg kg cc ㎡ 邨 No. K.K. Tel 🕒

(有) 1933 大正 1931 N U

Single-byte Symbol List



Memory List

	Up to 1000 items/approx. 37 MB
Data Folder	(One S! Application corresponds to
	three to six items.)

• Shared with S! Appli Library

Schedule (Calendar)	Up to 100 items

Phone Book Up to 1000 items

	Incoming Mail	S! Mail: Up to 700 items/approx. 5MB SMS: Up to 300 items
Messaging	Drafts/ Sent Messages/ Unsent Messages	S! Mail: Up to 300 items/approx. 5MB SMS: Up to 200 items

	Saved Pages	[Yahoo! Keitai] Up to 20 items/750KB [PC Browser] Up to 20 items/1150KB
	Bookmarks	[Yahoo! Keitai] Up to 100 items [PC Browser] Up to 100 items
Yahoo! Keitai	URL History	[Yahoo! Keitai] URL Entry: Up to 20 items URL Access: Up to 100 items* [PC Browser] URL Entry: Up to 20 items URL Access: Up to 100 items*
	Cache	[Yahoo! Keitai] 750KB [PC Browser] 1150KB

^{*} The number of savable items varies depending on URL length.

Specifications

821P

Weight (includ	ling battery)	113 g*
Dimensions (closed)		50 x 104 x 15.9 mm*
Standby Time	3G	400 hours*
(closed)	GSM	300 hours*
	3G	200 minutes*
Talk Time	Video Call	100 minutes*
	GSM	200 minutes*
Charging	AC Charger	130 minutes*
Time	In-Car Charger	130 minutes*
Maximum	3G	0.25 W
Output	GSM	2.0 W

^{*} Approximate value

- Values above were calculated with battery installed.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when a S! Application is active.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	815 mAh
Dimensions	36 x 4.5 x 46 mm*

^{*} Approximate value

• Specifications subject to change without notice.

Index

Numerics

3D Pictograms12-12
3G2-12
Α
AC Charger1-14
Access History
PC Site Browser13-6
Yahoo! Keitai13-4
After-Sales Service17-39
Alarms11-6
Canceling/reactivating11-8
Setting11-6
All Reset10-8
Alternative Picture5-5, 16-12
Answer Phone2-6
Answer Time (Answer Phone) 2-7
Answering Calls
Video Calls5-4
Voice Calls2-5
Any Key Answer16-10
Arrange Mail12-6

Attachment Auto-play16-15
Attachments
Adding/deleting12-15
Opening/saving12-11
Audio Player7-4
Auto Answer16-10
Auto Focus Lock6-10
Auto Save (Camera)6-12
Auto Suspend Timer (S! Appli)16-22
Available Memory (Camera)6-12
Away Clock16-6
В
Backlight
Display16-3
S! Appli16-22
Video Calls16-12
Backup
Memory Card8-17
S! Addressbook Back-up4-10
Bar Code Reader11-11
Basic Operations
Handset [Section Contents]2-1
Handset [Section Contents]2-1 Yahoo! Keitai13-7

Battery Level1	
Bluetooth®	9-5
Bluetooth® Passkey	9-6
Bookmarks	13-9
Books folder	8-3
BookSurfing®	7-10
Brightness	
Camera	6-4
Display	16-3
Video Camera	6-5
Browser (Initializing)	16-19
C	
Cache Memory	13-2
Calculator	11-9
Calendar	11-2
Calendar Events (Schedules)	11-3
Call Barring	17-6
Call Barring Password	1-24
Changing	
Call Cost	
Call Forwarding	
Call Log	

Call Operations	
Video Calls5-	5
Voice Calls2-	8
Call Time 16-	9
Call Waiting 17-	2
Caller ID2-2, 17-	7
Camera [Section Contents] 6-	1
Camera Priority (Video Call) 5-	6
Center Access Code 1-2	4
Certificate Retention 16-2	0
Change View	
Data Folder8-	5
Memory 8-	5
Phone Book16-1	
Character Code (Kuten Code)	
Character Code List 17-2	0
Input Options 3-1	2
Character Input Modes 3-	2
Charging Time1-1	1
Clamshell Control 16-1	4
Close-to-End Call 16-1	0
Content Key 8-	6
Continuous Shooting 6-1	0
Conversion Methods 3-	8

Cookie
Deleting16-19
Settings16-20
Copy Protected Files8-4
Country Number List2-3, 16-8
Customer Service17-40
D
Data Folder8-2
Data Transmission Indicators1-8
Date & Time Settings16-6
Delete
Messages12-17
Phone Book4-6
S! Appli14-4
Schedule11-5
Delivery Report12-15
Display1-8
Display Indicators1-9
Display Pattern (Date & Time) 16-6
Settings16-3

Download
From web pages13-11
Music/Video files 7-3
S! Appli 14-2
S! Familiar Usability 1-21
Templates 12-16
Tsukaikonashi Dokuhonxii
Drafts12-16, 12-18
Drive Mode2-15, 16-11
E
Earpiece Volume
Video Calls 5-5
Voice Calls 2-8
e-Book Viewer 7-10
Effect (Camera)6-4, 6-5, 6-12
Emergency Calls (110, 119, 118) 2-4
Emergency Positioning Request 2-4
E .1
Emoticons 3-11
Emoticons 3-11 Expiry (SMS) 16-17

External Display 1-10

Frailing Madi	H	Income Delegate (Africa Coll)
Feeling Mail	Handset	Image Priority (Video Call)5-6
Creating12-6	Menus1-19	Information Window1-16
Receiving12-9	Parts & Functions1-5	Infrared9-2
Settings12-6, 16-16	Power On/Off1-15	Input Character Settings (SMS) 16-17
Flash(R) folder 8-3	Handset Code1-24	Internal Camera 6-3
Flash [®] 8-3	Changing10-2	International Call
Flash® Ringtones8-3	Handset Security	From abroad2-12
Focus Setting6-6	[Section Contents]10-1	From Japan2-3
Folder/files 8-12	Handsfree Conversations2-8	International Code2-3, 16-8
Font Size	Handsfree Mode16-13	International Setting2-12, 16-8
Internet16-18	Handsfree Setting16-13	Internet [Section Contents] 13-1
Messages16-14	Help	
Full Screen Playback7-7	Camera/Video Camera6-12	K
Function List17-8	Media Player7-8	
	Text Entry3-2	Key Assignments3-3
G	Hold	Key Settings16-7
d	Video Calls5-4	Key Tone16-3
Group Settings4-7	Voice Calls2-9	Keyguard10-4
GSM2-12		Keypad Backlight16-7
	Home Clock16-6	Kuten Code
	HTML Mail12-6	Character Code List

н

L	Memory Manager16-19
anguage	Memory Status Calendar
M	Messaging [Section Contents]12-1 Mode Settings16-11
Nail Delivery Rule12-13	Multi Selectorix
/lain Display1-8, 16-3	Multi Shot6-4
Nain Menu1-19	Multiparty Call17-2
Nain Menu Icons16-5	Music folder8-2
laking Calls	Music Search7-3
International Calls2-3	My Details4-13
Video Calls 5-3	My Number2-11
Voice Calls2-2	My Pictograms8-3
Nanner Mode 2-13, 2-14, 16-11	
Nanufacture Number 16-20	N
ባedia Player 7-2	Near Chat15-4
Лето Pad11-9	
Nemory Card 8-15	Network Indicators1-8
Backup 8-17	Network Information1-16
Formatting 8-16	Network Mode2-12
Cynchronizing 16.22	Network S! Applications14-2

Synchronizing 16-22 Memory List 17-30

New Messages	
Receiving 12-17	
Viewing 12-9	
Night Mode6-4, 6-12	
Normal Mode (Mode Settings) 16-11	
Normal Mode	
(Simple Mode Menu) 1-22	
Notification Light Settings 16-7	
0	
U	
Offline Mode 2-14	
Offline Mode 2-14	
Offline Mode2-14 One-push Open Button1-6	
Offline Mode 2-14 One-push Open Button 1-6 Open-to-Answer Call 16-10	
Offline Mode	

Passkey (Bluetooth®)9-6
Password Lock10-4
Passwords1-24

Playback Mode Indicators	7-4
Playback Position	7-8
Playlist	
Predictive Conversion	3-8
Preview Window	
Camera	6-4
Video Camera	6-5
Private Mode	16-13
PUK 1-4	
Q	
Q QR Code	11-11
QR CodeQuality	
QR CodeQuality	
QR Code Quality Still images	6-4
QR CodeQuality	6-4 6-5
QR Code Quality Still images Videos	6-4 6-5

F

Recipients (Adding/Editing) 1	
Recording Time6-5	6, 6-8
Referer Information1	6-20
Reject Incoming Calls	10-5
Reject List	10-6
Remaining Cost	16-9
Reminder (Schedule Tone)	
Reset	
Browser Settings1	6-19
Camera Settings	6-12
Group Settings	
Main Menu Icons	16-5
Resize (Editing Still Images)	8-10
Restore	
Memory Card	8-17
Retrieve NW Info	1-16
Ring Songs&Tones folder	
Ringtone	
Ringtone Duration	
Roaming	
Root Certificates1	
noot certificates	0 20

S
S! Addressbook Back-up 4-10
S! Appli [Section Contents] 14-1
S! Familiar Usability 1-21
S! Loop
S! Mail 12-2
Creating/sending12-4
S! Mail Notice 12-11
Settings 16-15
Universal Settings 16-14
S! Quick News 13-15
Settings 16-21
S! Town 15-2
Save
Phone Book 4-3, 16-12
Still Images 6-4, 6-12
Videos 6-5, 6-12
Saved Pages 13-9
Schedules (Calendar Events) 11-3
Reminder 11-5
Schedule Icon11-4
Script16-20
Scroll Unit 16-18
Search Method (Phone Book) 4-8
Secret Mode 10-7

Secure Remote Lock10-5
Security Functions10-4
Security Level14-4
Security Settings (Internet)16-20
Self-Timer 6-4, 6-5, 6-11
Server Mail12-12
Settings [Section Contents]16-1
Shortcuts1-17
Shutter Sound6-12
Signal Strength1-8
Simple Mode1-22
SMC files7-5
SMS12-2
Creating/sending12-8
Settings16-17
Universal Settings16-14
Snooze11-6
Softkeysix
Software Update17-18
Sort (Messages)12-17
Speaker
Video Calls5-5
Voice Calls2-8
SSL13-3
Standby Display16-4

Standby Window 1-17
Still Images (Pictures)
Capturing 6-7
Editing 8-10
Streaming 13-13
Symbols 3-7
Symbol List 17-29
System Message 12-17
,
T
Templates
Arrange Mail12-6, 12-16
Standby Window 1-17
Text Entry [Section Contents] 3-1
Themes 16-3
Time Correction 16-6
TLS 13-3
Toggle Camera
External & Internal Camera 6-3
Video Calls5-6
Touch Tones 2-8
Trimming (Editing Still Images) 8-11
Tsukaikonashi Dokuhonxii

Warranty & Service

Warranty

Warranty is provided when you purchase a 821P.

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

SoftBank is not liable for any damage resulting from use of this product.

After-Sales Service

See "Troubleshooting" (P.17-15) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Customer Center, Customer Assistance (P.17-40) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information. For repairs, please call Customer Assistance.

SoftBank Customer Centers

From a SoftBank handset, dial toll free at 157 for General Information or 113 for Customer Assistance

SoftBank Global Call Center

From outside Japan, dial +81-3-5351-3491 (Please take care to dial the correct number. International charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Toll Free Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113

SoftBank 821P User Guide

March 2012, Third Edition **SOFTBANK MOBILE Corp.**

For additional information, please visit a SoftBank shop.

Model: SoftBank 821P

Manufacturer: Panasonic Mobile Communications Co., Ltd.



Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- \bullet Handsets, batteries and chargers submitted for recycling cannot be returned.
- Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.