

# Support

## Customer Service

### SoftBank Customer Centers

From a SoftBank handset, dial toll free at

- 157 (General Information)
- 113 (Customer Assistance)

### SoftBank Global Call Center

From outside Japan, dial

**+81-3-5351-3491**

(International charges will apply.) Call this number immediately if handset/USIM Card is lost or stolen while outside Japan.

## More Information

### Handset User Support

Via Yahoo! Keitai Main Menu: From above search field, select **メニューリスト** → **English** → **User Support**

### Online English Manual

<http://www.softbank.jp/mb/r/support/822t/>

May be unavailable at purchase. Call Customer Service or try later.

### Call these numbers toll free from landlines.

 
Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113

## Emergency Numbers

- Police ..... 110
- Fire & Ambulance..... 119
- Coast Guard ..... 118

# SoftBank 822T

## First Step Guide

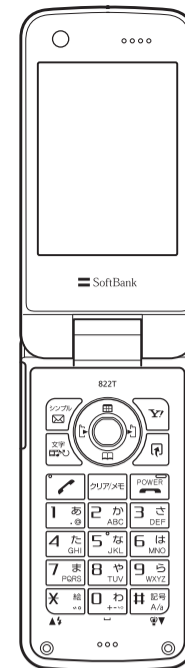

## Customer Service

## More Information

## Emergency Numbers

## Use English Interface

## Make International Calls

## Customize Handset Address

and more...

# General Notes

## Using Your Handset

- The handset employs radio waves. Signals may be disrupted even within service areas if you are indoors, underground, inside a tunnel or inside a vehicle. If you move to a location with poor signal reception, a call may be suddenly cut off.
- When using the handset in public places, take care not to annoy other people around you. Use of the handset is prohibited in some public places such as in theaters or on buses and trains.
- The handset is a radio transceiver under Japanese Radio Law. You may be requested to submit the handset for inspection based on this law.
- Use of the handset near a landline phone, TV or radio may affect the image and sound quality of the equipment.
- The handset employs a digital system to maintain a high level of communication quality even at very low signal levels. However, calls may be suddenly cut off when the signal strength becomes too weak.
- The digital system provides a high level of privacy protection. However, the possibility of someone eavesdropping on your conversation cannot be ruled out as long as radio waves are used.

- The handset is exclusively for use in Japan. It cannot be used outside Japan.
- Data stored on the handset may be corrupted or lost on the following occasions.
  - The handset is used improperly.
  - The handset is exposed to static electricity or electric noise.
  - The handset is turned off during operation.
  - The battery is completely discharged.
  - The handset malfunctions or is sent for repairs.
 SoftBank and Toshiba accept no liability whatsoever for the corruption or loss of stored data. Be sure to keep a separate memo of important data to limit damage caused by data corruption or loss to a minimum.
- Be sure to charge the battery before using the handset for the first time or if the handset has not been used for a long time. When the battery is stored for a long time, it discharges over time even if it is not used.
- Before using a memory card, read the instruction manual of the memory card thoroughly to ensure safe and proper operation.
- When the handset is used for extended periods of time, especially in high temperature conditions, the handset surface could become hot. Please use caution when touching the handset under such conditions.

- When certain items are taken out of the country, documentation may be required to certify that the export of the items is not controlled, prohibited, or restricted by the Export Trade Control Order and Foreign Exchange Order. Basically, no such documentation is required if you take the handset out of the country and bring it back for the purpose of personal use when going on vacations or short business trips. In some cases, however, an export permit may be required if the handset is to be used by or transferred to anyone else. Furthermore, a US government export permit may be required when taking the handset to countries for which the US government has imposed export restrictions (Cuba, North Korea, Iran, Sudan, Syria). For details on export laws, regulations and procedures, refer to the Web page of the Security Export Control Policy Division of the Ministry of Economy, Trade and Industry.
- If you use a hearing aid, handset usage may interfere with hearing aid performance. If there is any interference, consult with the manufacturer or distributor of the hearing aid.

## Inside Vehicles

- Do not use the handset while driving. Use of the handset while driving is prohibited by law. Talking on the handset using Stereo Earphone-Microphone (sold separately) while driving may be subject to penalties in some prefectures.
- Before using the handset, stop the vehicle in a safe area where parking or stopping is permitted.

## Aboard Aircraft

- Do not use the handset on an aircraft. Do not turn the handset on while you are on the aircraft. Use of the handset on an aircraft is prohibited by law.

Read Safety Precautions (page xlii), General Notes (page liv) and End User License Agreement (page lxxv) in the Japanese User Guide, prior to handset use. 822T is waterproof. Read Waterproofing Precautions (pages lix to lxiv) in the Japanese User Guide, prior to handset use.

# Before Using Handset

## Package Contents

- Handset\*1
- Battery (TSBAR1)
- Battery Cover
- Battery Cover Key (TSKBF1)
- Desktop Cradle (TSEBF1)
- Start Book (Japanese)
- User Guide (Japanese)
- First Step Guide
- Utility Software for 822T (CD-ROM)\*\*2,3

\*1 Use SoftBank specified AC Charger (sold separately) and In-Car Charger (sold separately).

 
\*\*2 Complimentary sample not available for purchase.

\*\*3 Utility Software updates/upgrades may become available via SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) without prior notification. Please check for the newest versions of Utility Software and download as required.


## Battery Removal

- 1 Use Key to turn lock (in direction of arrow) and unlock battery cover

Turn the lock until it stops at the pictured position.

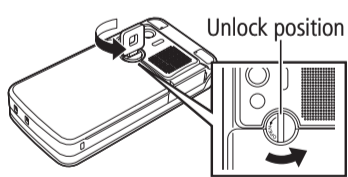


- 2 Lift off the cover

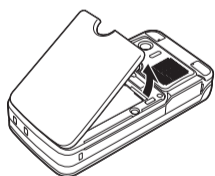 

- 3 Pull the tab above ▲ to remove the battery

 
Removing the battery in any other way may damage the terminals.

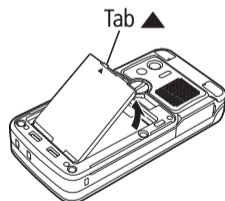

## USIM Card Installation


USIM Card must be inserted to use this handset. Turn handset power off and remove the battery before inserting/removing USIM Card.

 Insert USIM (IC facing down) as pictured

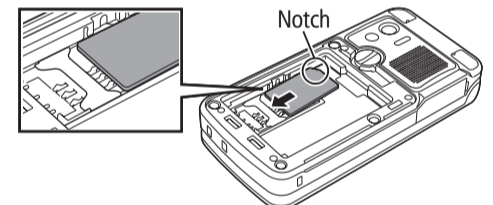


## Battery Installation

 - 1 Align terminals and insert the battery

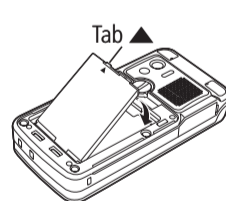


 - 2 Align battery cover lugs to handset grooves and press down the cover tightly

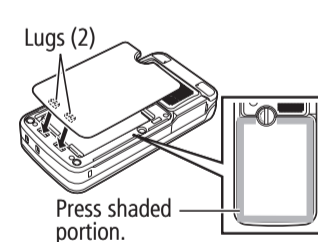

- 3 Use key to turn lock (in direction of arrow) and lock the cover

 Turn the lock until it stops at the pictured position.

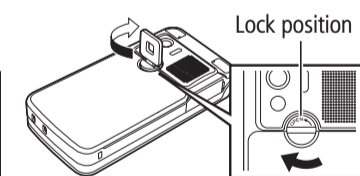

## USIM PINs

### PIN

A four- to eight-digit security code to prevent unauthorized handset use. The default setting is 9999.

### PIN2

A four- to eight-digit security code required to reset **Call Time&Cost**. The default setting is 9999.

### PIN Lock & PUK Codes

PIN Lock or PIN2 Lock is activated when PIN or PIN2 is incorrectly entered three times. PUK (Personal Unblocking Key) codes are required to cancel PIN Lock/PIN2 Lock. For details, contact SoftBank General Information.

## Security Codes

### Handset Code

A four-digit number required to use various handset functions. The default setting is 9999.

### Center Access Code

A four-digit number assigned at initial subscription. Use the code to access Optional Services via landlines or to subscribe to fee-based content.

## Call Barring Service Code

A four-digit number assigned at initial subscription. It is required to set Call Barring. If the code is incorrectly entered three times, Call Barring settings lock. Call Barring Service Code and Center Access Code must be changed. Contact SoftBank General Information for details.

## Internet Security Code

It is required to set Internet security.

## Manner Mode

### Minding Mobile Manners

Please use your handset responsibly. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

 
### Activating/Canceling Manner Mode

Press and hold **Ⓜ** (Manner Mode)

## Charging

- 1 Attach Charger to Desktop Cradle
- 2 Plug Charger into an AC outlet
- 3 Slide handset into Desktop Cradle until it clicks
- 4 Remove handset from Desktop Cradle, then unplug Charger

Charging Indicator lights red while charging; may take up to approximately 130 minutes.

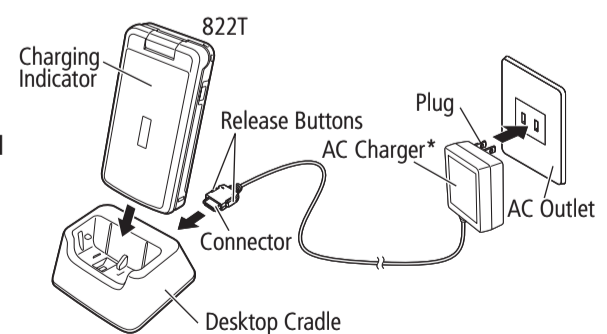

\*AC Charger is sold separately.

## Specifications

Frequency Range	1920 - 2170 MHz
Continuous Talk Time	Approx. 190 min. (Video Call: Approx. 110 min.)
Continuous Standby Time	Approx. 420 hrs
Charging Time	Approx. 130 min.

Dimensions (W×H×D)	Approx. 50×102×19 mm (handset closed)
Maximum Output	0.25 W
Weight	Approx. 127 g (with battery)

# Getting Started

## Display Indicators & Key Assignments

**Signal Strength**  
**Packet Network Range**  
**New S! Mail/SMS**  
**Memory Card Inserted**  
**Manner Mode**  
**Battery Level**  
**Alarm Set**  
**Missed Call(s)/Message(s) Recorded at Voice Mail Center**

**Multi Selector Operations**  
 ○: Press ○ or ○.  
 ○: Press ○ or ○.  
 ○: Press ○, ○, ○ or ○.

**Access Messaging menu. Execute left Softkey functions.**  
**Access Media Player Audio menu. Make/answer video calls.**  
**Delete characters. Return to the previous operation.**  
**Make/answer calls.**  
**Enter phone numbers and characters.**

**Move cursor up, down, left or right.**  
**Access Main Menu. Confirm selection and perform selected operations.**

**Access Yahoo! Keitai. Execute right Softkey functions.**  
**Access Shortcuts menu.**  
**Turn handset power on/off. End calls/operations and return to Standby.**

## Function List

<b>Messaging</b> Message Box Create Msg. Retrieve Msg. Drafts Templates Unsent Msg. Server Mail Settings	<b>BookSurfing</b> Ku-man's Room <b>Communications</b> S! Town S! Loop Friend Status Circle Talk <b>Camera</b> Mobile Digital Video Video Mail Short Video Scan Data <b>S! Appli</b> Library Settings Card Sync Certification Information	<b>Tools</b> Alarms Notepad Calculator Dictionary Tasks Time Table Useful Tools Ichi Navi Update <b>Data Folder</b> Pictures Digital Camera* Ring Song•Tone S! Appli Music Videos Books Templates Flash(R)	<b>Main Menu</b> Gamendeco Keitaideco Other Documents Memory Status <b>Media Player</b> Audio Videos Streaming <b>Calendar</b> <b>Phone Book</b> My Details Phone Book Add New Call Log Group S! Addr. Bkup Settings Memory Status	<b>Settings</b> Sounds Display Phone Settings Security Call Settings Connectivity Location Idle Screen Priority SimpleMode ON Backup Memory * Available only from memory card
--	--	---	--	--

# Handset Functions

## Basic Operations

### Handset Power On/Off

Press and hold

### Network Settings

Before using network-related services, retrieve network information. The first time you press or , a prompt appears.

or → YES →

### Interface Language

→ 設定 → → 一般設定 → → Language → → Select a setting →

自動選択	Language set on USIM Card
日本語	Japanese interface
English	English interface

### My Phone Number

→ Phone Book → → My Details →

### Date & Time

→ Settings → → Phone Settings → → Clock → → Date&Time → → Enter date and time →

## Calls

### Making a Voice Call

1 Enter a phone number →   
 2 to end call

### Redialing

1 → Select a phone number →   
 2 to end call

### Making a Video Call

1 Enter a phone number → →   
 2 to end call

### Making an International Call

First, apply for International Call Service. Details and applications are available online:  
[http://mb.softbank.jp/mb/en/global\\_service/](http://mb.softbank.jp/mb/en/global_service/)  
 822T is not Global Roaming Service eligible.

1 Enter a phone number → → Intl. Calls → → Select a country →

2 to end call

### Answering a Call

1   
 2 to end call

### Answering Machine

#### ■Activating/Canceling

Press and hold

#### ■Playing a Message

→ Select a message →

## Text Entry

### Setting Input Method

In a text entry window, → Customize → → Input Method → → Select T9 or Multi-tap for English entry\* →

\* Select **Standard** or **Beeper** for Japanese entry.

### Switching Text Input Modes

In a text entry window, → Select a text input mode →

T9 abc/T9 Abc/T9 ABC	T9 modes
abc/Abc/ABC	Multi-tap modes
Pict	Pictographs
Numeric	Numbers
My Pictograms	Select pictographs from My Pictograms folder.

Above modes are available with English (T9 or Multi-tap) input methods.

### Text Entry Examples

■Entering "dog" in T9 Mode  
 DEF → MNO → GHI → to scroll suggestions →

■Entering "dog" in Multi-tap Mode  
 DEF → MNO (three times) → GHI

## Messaging

### S! Mail/SMS

#### ■S! Mail

Exchange text messages with SoftBank handsets, e-mail compatible handsets/devices or PCs. Send images, melodies and other files as attachments.

#### ■SMS

Exchange short text messages with SMS compatible SoftBank handsets.

### Customizing Handset Address

Change the account name (alphanumerics before @) of your e-mail address to help reduce spam.

→ Messaging → → Settings → → Mail Address → → Connect → → English → → Follow onscreen instructions

### Sending Text Messages

→ Create Msg. → → Address → → Enter or select an address → → Text → → Enter message → → → OK →

### Receiving Text Messages

→ Message Box → \* → Select a folder → → Select a message →   
 \* When Information Prompt appears, select **New Messages** →

## Phone Book

### Phone Book Entry Items

#### ■Name

Enter Last Name and First Name (16 characters each) to Phone Book and/or USIM Phone Book.

#### ■Phone Number

Save up to five numbers (32 digits each) in Phone Book; One to USIM Phone Book.

#### ■Email

Save up to five addresses (up to 128 single-byte alphanumerics each) to Phone Book; One to USIM Phone Book.

### Creating a New Entry

→ Phone Book → → Add New → → Name → → Last Name → → Enter → → First Name → → Enter → → Select other items → → Enter information → →

### Editing an Entry

→ Select an entry → → Select a field → → Edit field → → → Save or Save as New →

### Dialing from Phone Book

→ Select an entry → → Select a phone number →

## Voice Mail

### Activating

→ Settings → → Call Settings → → Call Services → → Diverting → → Voice Mail ON → → All Calls or No Answer → → (Select a ring time → )\* →   
 \* Perform this step when **No Answer** is selected.

### Playing Messages

→ Settings → → Call Settings → → Call Services → → Diverting → → Listen VM → → Follow voice guidance\*  
 \* To switch to English voice guidance, press while Japanese voice guidance is playing.

## Camera

### Capturing an Image

→ Frame subject → or → or

### Recording a Video

Press and hold → Frame subject → or → or to end and save recording

## Internet

### Accessing Yahoo! Keitai

→ Yahoo! Keitai → → English → → Select a menu item →

### Accessing PC Websites

Press and hold → → Homepage → → Always Ask or Ask Once Only →

## Media Player

### Playing Music

→ All Music\* → → Select a file →

\* Alternatively, select **Disc Search**, **Artist**, **Album** or **Folder** to search by respective categories.

### Creating a Playlist

→ Playlist → → → New Playlist → → Phone Memory or Memory Card → → Enter a Playlist name → → YES → → All Music, Artist or Album → → (Select a file → )\* →   
 \* Repeat this step to select multiple files.

### Using a Playlist

→ Playlist → → Select a Playlist →

## Managing Files

### Opening a File

→ Data Folder → → Select a folder → → Select a file →

### Formatting a Memory Card

→ Settings → → Memory → → Format Card → → Enter Handset Code → YES →

## Software Update

### Precaution

Before updating software, turn handset power off then restart handset.

### Updating Software

→ Tools → → Update → → YES → → Agree → (twice) → Enter Center Access Code → → → Follow onscreen instructions