Using This Manual

Manual Overview	Contents ······ → Chapter Contents: First page of each chapter ····· →	
Function & Service Search	Contents ······· Index: Try searching by various terms. ······	
Objective Search	Objective Search → Index →	
Feature Search	Feature Search	
Display Indicators	Display Indicators ···· → Menu Operations ···· →	
Solving Problems	Troubleshooting ····································	

Getting Started
Basic Operations
Call
Messaging
Internet
TV
Camera/Picture Editing
Media Player/S! Appli
Tools
Communication Services
Security
File Transfer/Backup
Customization
Appendix

Page vi

Page vi Page 14-32

Page ii Page 14-32

Page iv Page vi

Page 1-4

Page 2-2

Page 14-7

Page 14-45

Page 1-1 to 14-1

4

9

10 11

12

13

14

Objective Search

Using Handset Phone Number/Mail Address

Checking Handset Number

Check your phone number on handset.

Checking Your Phone Number ⇒ Page 3-3

Customizing Mail Address

Customizing handset address can help reduce spam.

Customizing Handset Address ⇒ Page 4-3

Customizing Handset

Ringtone

Select a music file, movie file or Chaku-Uta® from ringtone settings.

Ringtone ⇒ Page 13-11

Downloading Chaku-Uta®

Download your favorite songs from the Chaku-Uta® site.

Obtaining Music and Videos ⇒ Page 8-3

Understanding Basics

Basic Operations

Using keys and accessing functions.

Softkeys and Multi Selector ⇒ Page xi Menu Operations ⇒ Page 2-2

Making Calls

Make voice/video calls. Use call functions such as Speed Dial or Answering Machine.

Voice Call ⇒ Page 3-4 Video Call ⇒ Page 3-7

Using Advanced Features

Watching TV

Watch One Seg Digital TV on handset. No additional fees required.

 $TV \Rightarrow Page 6-2$

Listening to Music

Use Media Player to listen to downloaded music.

Media Player ⇒ Page 8-2

Saving Address to Handset

Saving your new address to My Details is convenient for exchanging information with others

My Details ⇒ Page 3-12

Sharing Address with Friends

Share your new address by sending a message to multiple addresses simultaneously.

Sending Messages ⇒ Page 4-4, Page 4-6 Adding Recipients ⇒ Page 4-13

Sharing Address via Infrared

Accessing the Mobile Internet

tailored for SoftBank customers.

Yahoo! Keitai ⇒ Page 5-3

Use Yahoo! Keitai to access Mobile Internet sites

Share your e-mail address by infrared transfer. Save your e-mail address prior to transfer.

Infrared ⇒ Page 12-14

Wallpaper

Set images captured with handset camera as

Wallpaper ⇒ Page 2-7

Changing Font Size

Change font size for menus and web pages. Font color pattern can also be changed.

Setting Font Size ⇒ Page 13-5, Page 13-21

wallpaper.

Text Entry

Enter text when creating Phone Book entries or messages.

Text Entry ⇒ **Page 2-10**

S! Mail/SMS

Select S! Mail or SMS according to your purpose.

S! Mail \Rightarrow Page 4-4 $SMS \Rightarrow Page 4-6$

Using Handset as a Gaming Device

Play preinstalled S! Appli games or download games from Yahoo! Keitai.

S! Appli \Rightarrow Page 8-8

Digital Camera/Digital Video

Shoot pictures and videos with handset camera.

Taking Pictures ⇒ Page 7-3 **Recording Videos** ⇒ Page 7-5

Feature Search

823T/824T Features	One Seg TV Handset supports One Seg Digital TV for mobile phones and information terminals. You can also	Bluetooth [®] Files can be transferred using Bluetooth [®] communication.
	browse data broadcasts and use view timer. →Page 6-2	⇒ Page 12-5
SoftBank Features	Yahoo! Keitai Sites A special portal site for SoftBank handsets is available to enhance your Internet browsing experience.	Graphic Mail/Feeling Mail Send Graphic Mail (HTML mail) or Feeling Mail.
	⇒Page 5-3	⇒Page 4-5
Convenient Features	Phone Book/S! Addressbook Back-up Save contact information to Phone Book and back up data on S! Addressbook Server. ⇒Page 2-16, Page 12-12	Alarm/Event Schedule Use the alarm to wake you in the morning. Save and manage event schedule on Calendar that can be interfaced with phone/mail functions. →Page 9-4, Page 9-14
PC-related Features	PC Site Browser View PC-based websites with PC Site Browser.	Document Viewer Microsoft® Office Word, Excel and PDF files are all viewable on handset. This is especially useful for business people.
	⇒Page 5-4	⇒Page 9-20

1.96 Megapixel Camera

Handset is equipped with a 1.96 megapixel camera.

⇒Page 7-2

microSD Memory Card

Handset supports compact high-capacity microSD memory cards. This makes exchanging files with a PC quick and easy.

⇒Page 2-24

Electronic Books

Use BookSurfing® to read e-books.

→Page 9-21

S! Town/S! Loop/S! Information Channel

These SoftBank-only communication services allow you to enjoy virtual community, exchange information with friends or subscribe to various information services.

⇒Page 9-19, Page 10-2

S! Friend's Status/S! Circle Talk

These two functions facilitate communication. Send your mood/availability to your friends and check their statuses, or talk to a group of people.

→Page 10-3, Page 10-6

S! GPS Navi

Use the GPS function to check your position on a map. This function can also guide you to your destination.

⇒Page 9-10

Barcode Reader

Access a variety of information such as e-mail addresses and URLs using QR codes.

→Page 9-22

Voice Recorder

Use handset as a recorder. Save recordings to microSD memory card.

⇒Page 9-9

Optional Services

A complete line of services, including Call Forwarding and Voice Mail meet your phone needs.

⇒Page 3-10

Card Reader Mode for use with PC

Use the optional USB cable to connect handset to a PC and access microSD memory card data from the PC.

⇒Page 2-24, Page 12-9

Media Player

for use with PC

Use Card Reader mode to transfer music on a PC to microSD memory card in handset. Handset can be used as a portable music player.

⇒Page 8-2, Page 12-8

Contents

Introduction viii Package Contents ix Using This Manual x Safety Precautions xii Trademarks and Patents xxxii SAR xxxv 1 Getting Started	3 Call Making Calls 3-2 Voice Call 3-4 Video Call 3-7 Call Log 3-9 Optional Services 3-10 Advanced Features 3-12	View Timer6-6Advanced Features6-77 Camera/Picture EditingCamera7-2Taking Pictures7-3Recording Videos7-5Camera Functions7-7
Handset Parts & Functions	4 Messaging Messaging4-2	Picture Editing
Power On/Off 1-10	Sending Messages	8 Media Player/S! Appli
Date & Time 1-11	Incoming Messages 4-8	Playing Music and Videos 8-2
About Mobile Manners 1-12	Organizing/Using Messages 4-10	Playlists 8-7
Codes 1-14	Advanced Features 4-13	S! Áppli 8-8
2 Basic Operations	5 Internet	Advanced Features 8-10
Menu Operations 2-2	Internet 5-2	9 Tools
Simple Mode	Yahoo! Keitai 5-3	Tools9-2
Wallpaper/Active Window 2-7	PC Site Browser 5-4	Calendar/Tasks9-4
Text Entry 2-10	Web Page Operations 5-5	Time Table 9-7
Word List (Japanese) 2-15	Bookmarks/Saved Pages 5-6	Notepad 9-8
Phone Book 2-16	Advanced Features 5-7	Voice Recorder 9-9
Data Folder 2-21	6 TV	S! GPS Navi 9-10
Memory Card		Idokoro Mail 9-12
Advanced Features 2-26	TV	
	Watching TV 6-3	World Clock 9-15

Calculator/Dictionary 9-16 Kitchen Timer 9-17 S! Quick News 9-18 S! Information Channel 9-19 Document Viewer 9-20 Electronic Books 9-21 Barcode Reader 9-22 Ku-man's Room (Japanese) 9-23 Advanced Features 9-24	D Irr S M Irr C
10 Communication Services	C
S! Town (Japanese)/S! Loop (Japanese) 10-2 S! Friend's Status	N S R T
11 Security	V
Changing Handset Code11-2Prohibiting/Limiting Use11-3Advanced Features11-5	
12 File Transfer/Backup	В
Infrared	S T S S

Advanced Features 12-14
13 Customization
Display Settings 13-2 Incoming Event Settings 13-9 Sound Settings 13-11 Mail Settings 13-14 Internet Settings 13-19 Call Settings 13-22 Camera Settings 13-25 TV Settings 13-28 Media Player Settings 13-31 S! Appli Settings 13-33 Text Entry/Phone Book 13-33 Text Entry/Phone Book 13-34 File Transfer 13-36 Various Tools 13-38 Communications 13-44
14 Appendix
USIM Card 14-2 Battery 14-4 Software Update 14-6 Troubleshooting 14-7 Text Entry Keys 14-9 Simple Mode Function List 14-11 Specifications 14-17

14-24
14-31
14-32
14-45
14-46

Introduction

Thank you for purchasing SoftBank 823T/SoftBank 824T handset.

- To ensure proper usage, read this manual thoroughly before using SoftBank 823T/824T handset.
- · After reading this manual, retain it for later reference.
- If this manual is lost or damaged, contact SoftBank General Information (page 14-46).
- Accessible services may be limited because of contract conditions.

SoftBank 823T/824T handset is compatible with the 3G system.

Caution

- · Unauthorized copying of any part of this manual is prohibited.
- The contents of this manual are subject to change without prior notice.
- Steps have been taken to ensure the accuracy of descriptions in this manual. If you find inaccurate or missing information, contact SoftBank Customer Center, General Information (page 14-46).

User Guide (Japanese) and Start Book (Japanese) included in the package are also available online from SOFTBANK MOBILE Corp. Website: http://www.softbank.jp/mb/r/support/823t/http://www.softbank.jp/mb/r/support/824t/

Package Contents

Handset

Battery (TSBAV1)

• Battery Cover

Start Book (Japanese)

• User Guide (Japanese)

First Step Guide

- Utility Software for 823T/824T (CD-ROM)*1*2
- *1 Complimentary sample not available for purchase.
- *2 Utility Software updates/upgrades may become available via SOFTBANK MOBILE Corp. Website (http://www.softbank.jp) without prior notification. Please check for the newest versions of Utility Software and download as required.
- Use only SoftBank specified AC Charger (sold separately) to charge battery.
- For information about AC Charger and other accessories, contact SoftBank Customer Center, General Information (page 14-46).
- Battery is available for separate purchase.
- Handset accepts microSD Memory Card (not included). Purchase microSD Memory Card to use related functions.
- microSD Memory Card is referred to as "memory card" in this manual.
- USB cable (not included) can be used with handset. Purchase a SoftBank specified USB cable to use related functions.

Using This Manual

In this manual, SoftBank 823T/824T is referred to as "handset."

Chapters

Chapter 1 "Getting Started": Basic handset information.

Chapter 2 "Basic Operations": Basic handset operations.

Chapters 3 to 12: Handset functions. Each chapter starts with basic operation descriptions, followed by advanced operation descriptions.

Chapter 13 "Customization": Handset settings.

Chapter 14 "Appendix": Default settings, Index, etc.



>0<

Advanced features are listed under this icon. Refer to the indicated page to access "Advanced Features" at the end of the chapter.

Creating Messages

(▶ page 4-13)

 Available settings are listed here. Go to indicated page in Chapter 13 "Customization" for description.

Message Creation Settings

(page 13-14)

Add Recipients to Simple Input List

•

Symbols

⇒ , ⇒ and ▶ navigate you to the next action/item.

Press Center Key 🔳 to confirm your selection. Some operations are described in an abbreviated format.

Screenshots and Keys


Screenshots and key graphics are simplified to facilitate explanation. Actual appearance may differ.

Japanese Functions & Services

When "(Japanese)" appears in a title, Japanese ability is required to use full range of function and service.

Softkeys

Use Softkeys to perform operations indicated at the bottom of Display.

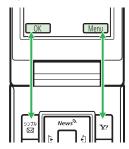

- Press 🖾 to select OK.
- Press 🗹 to access Option menu.
- Softkey operations vary by the current function.
 In this manual, Softkey operations are described as below.
 □ (OK) / → □ / → □

Multi Selector

The following notations are used to indicate Multi Selector operations.

Notation/Operation	Function
Press up	Enables Active Window operations* Increases volume Moves cursor up
Press down	Accesses Phone Book* Decreases volume Moves cursor down
Press left	Accesses Dialed* Moves cursor left
Press right	Accesses Received* Moves cursor right
Press center	Accesses Main Menu Confirms the selected item or performs the selected operation Acts as the camera shutter-release

^{*} Functions accessible from Standby can be changed by changing Multi Selector shortcuts (page 2-3).

Safety Precautions

- To ensure proper usage, be sure to read the Safety Precautions thoroughly before using your handset. Always keep this manual available for future reference.
- Be sure to follow the safety information contained in the instruction manuals and indicated on the product to prevent injury to the user and other persons, as well as damage to property.
- When a child uses handset, it is recommended that a parent or guardian reads the instruction manuals thoroughly and provides proper instructions to the child.
- The following describes the meaning of safety symbols and signal words. Be sure to understand their meanings before proceeding to read this manual.

Pictographs

Pictograph	Meaning	
Danger	Indicates an imminently hazardous operation that could result in death or serious injury¹ of the user.	
Warning	Indicates a potentially hazardous operation that could result in death or serious injury ¹ of the user.	
Caution	Indicates a potentially hazardous operation that could result in minor or moderate injury ² to the user or damage to property ³ .	

1 Serious injury includes loss of sight, wounds, high temperature burns, low temperature burns (burns causing reddish areas, blistering and other damage to the skin as a result of heat exceeding the body temperature contacting your skin for a prolonged time), electric shock, fractures and poisoning requiring hospitalization or long-term medical treatment.

- 2 Injury includes wounds, burns and electric shock not requiring hospitalization or long-term medical treatment.
- 3 Damage to property includes extensive damage to homes and household property, as well as livestock and pets.

Symbols

Symbol	Meaning	
Prohibited	indicates a prohibited action. The prohibited action is indicated graphically or described in text in or near the symbol.	
Compulsory	• indicates a compulsory action that must be carried out. The compulsory action is indicated graphically or described in text in or near the symbol.	

Limitation of Liability

- SoftBank and Toshiba accept no liability whatsoever for any damages arising from natural disasters such as earthquakes, lightning, storms and floods, as well as fires through no fault of SoftBank and Toshiba, acts by third parties, other accidents, improper use by the user, whether intentionally or negligently, or use under other abnormal conditions.
- SoftBank and Toshiba accept no liability whatsoever for incidental damages arising out of the use or inability to use the product, including, but not limited to, corruption or loss of data, lost business revenue or suspension of business operations.
- SoftBank and Toshiba accept no liability whatsoever for any damages arising from improper use not conforming to the instructions in the instruction manuals.
- SoftBank and Toshiba accept no liability whatsoever for any damages arising from malfunctions caused by use in combination with connection equipment or software that is not authorized for use by SoftBank and Toshiba.
- Image data recorded with the camera, downloaded data and other data may be corrupted or lost due to malfunction, repair or other improper handling of the product. SoftBank and Toshiba accept no liability whatsoever for the restoration of corrupted or lost data, as well as any damages or lost revenue and profits.
- SoftBank and Toshiba accept no liability whatsoever for corruption or loss of stored data resulting from failures or malfunctions of the product, regardless of the cause. Be sure to keep a separate memo of important data to limit damage caused by data corruption or loss to a minimum.

⚠ Danger



Do not disassemble, modify or repair handset, battery, charger (sold separately) or Stereo Earphone, Microphone (sold separately)

Doing so may cause overheating, rupturing, fire, electric shock, injury or malfunction. Modification of handset is prohibited by Japanese Radio Law. For repair, contact your nearest SoftBank Shop or SoftBank Customer Assistance (page 14-46).



Do not dispose of handset, battery, charger (sold separately) and Stereo Earphone-Microphone (sold separately) in a fire or expose them to heat If they are exposed to water, do not dry them artificially in heating equipment (microwave oven, etc.)

Doing so may cause overheating, rupturing, fire or malfunction.

No flames

Do not charge, use or leave handset, battery, charger (sold separately) or Stereo Earphone-Microphone (sold separately) in hot places such as near a fire or heater

Doing so may cause overheating, rupturing, fire or malfunction.

A Danger



Do not expose handset, battery, charger (sold separately) and Stereo Earphone-Microphone (sold separately) to fluids such as water, perspiration or seawater

Do not leave them outdoors, in a bathroom or wherever water or any other fluid is used Do not place them near cups, vases or other containers of fluids

Doing so may cause overheating, rupturing, fire, electric shock or malfunction. If handset is dropped accidentally in water or any other fluid, immediately turn off handset and remove the battery. If handset, battery or charger is exposed to fluids such as water during charging, remove the power plug from the outlet immediately. Do not charge the wet battery. If the battery gets wet, contact your nearest SoftBank Shop or SoftBank Customer Assistance (page 14-46).



Do not use excessive force when inserting the battery into handset or connecting handset to the charger (sold separately)

Do not connect any cords with reverse polarity

Doing so may cause the battery to leak, rupture, overheat or catch fire, as well as cause electric shock or malfunction.



Do not touch the battery terminal (metal parts) with any metal objects (necklace, hairpin, etc.)

Doing so may cause the battery to overheat, rupture or catch fire, as well as the metal object to overheat.



Do not use a battery other than one supplied with or designated for handset

Compulsory Do not use the battery for any other handset Doing so may cause overheating, rupturing, fire or malfunction.



Use the charger (sold separately) designated for handset to charge the battery

Compulsory Use the charger (sold separately) only for charging handset's battery

> Failing to do so may cause overheating, rupturing, fire or malfunction.



If electrolyte fluid leaking from the battery comes into contact with your skin or clothes, wash it immediately with Compulsory clean water as this may hurt your body

> And if it gets into your eyes, do not rub them, and have them immediately treated by an ophthalmologist after washing them with clean water

> If the fluid sticks to the equipment, wipe it out without touching it directly

If the fluid is left as it is, your skin may get irritated or there may be fear of losing your sight.



Do not use handset while driving Do not make or receive a call and do not use other functions (messaging, game, camera, TV, video, music, Mobile Light, etc.)

Doing so may cause a traffic accident. Use of handset while driving is prohibited by law. Before using handset, stop the vehicle in a safe area where parking is permitted.



Be sure to turn off your SoftBank handset before entering places such as gas stations where flammable gases may be produced

Also do not charge handset in those places The gases may be ignited.



Do not swing handset by its strap, TV Antenna, USB cable (sold separately), Stereo Earphone Conversion Cable (sold separately) or Stereo Earphone-Microphone (sold separately)

Doing so may cause an injury, accident or damage.



Turn off handset while you are near any precision electronic equipment

Radio waves may adversely affect the operation of electronic equipment. Examples of such equipment: medical electronic equipment such as cardiac pacemakers and hearing aids or fire alarms and automatic doors. If you use medical electronic equipment, consult with the equipment manufacturer or distributor about the influence of radio waves.



Remove the power plug from the outlet if AC Charger (sold separately) is not to be used for a long period of time or before cleaning

Failing to do so may cause an electric shock, fire or malfunction.



Turn off handset wherever its use is prohibited such as on an aircraft

Compulsory Failing to do so may adversely affect the operation of electronic equipment and cause an accident.

Use of handset on an aircraft is prohibited by law.



Check your surroundings to confirm that it is safe to make/receive calls, send/receive messages, take Compulsory pictures, record videos or watch TV

> Failing to do so may cause you to trip over or cause a traffic accident



Do not use handset with any power voltage other than the specified voltage

Compulsory Doing so may cause a fire. The power voltages are 100 to 240 V AC for AC Charger (sold separately) and 12 or 24 V DC (for a negative ground car only) for In-Car Charger (sold separately).



Wipe away any dust on the plug of AC Charger (sold separately) with a dry cloth after removing the plug Compulsory from the outlet

Dust on the plug or outlet may cause a fire.



Follow the instructions below when installing and wiring in-vehicle devices

- Make sure that devices do not interfere with driving and safety equipment such as airbags
- · Make sure that wires are not caught in seatbelt buckles, doors or other moving parts

Any wire caught around a foot, brake pedal, accelerator pedal, etc. may interfere with driving and cause a traffic accident. If any part of an in-vehicle device drops onto the floor, it may startle you into abrupt braking or steering, leading to a traffic accident.



When thunder is heard outside, stop using handset immediately

Turn off handset and do not touch it

Failing to do so may attract lightning and cause electric shock. When thunder is heard, stop using handset and move to a safe place such as inside a building.



If the battery fails to charge in the specified time, stop charging immediately

Compulsory Failing to do so may cause overheating, rupturing or fire. Contact your nearest SoftBank Shop or SoftBank Customer Assistance (page 14-46).



When inserting the plug of AC Charger (sold separately) into an AC household outlet, make sure Compulsory that a metal strap or any other metal object does not

touch the plug

Failing to do so may cause electric shock, short circuit or fire.



If something unusual happens to handset, battery or charger (sold separately); for example, it emits smoke or an unusual odor or is damaged, perform the following steps immediately

- If the battery is charging, unplug AC Charger (sold separately) from the AC household outlet or unplug In-Car Charger (sold separately) from the cigarette lighter socket.
- 2. Make sure that handset is not hot, then turn it off and remove the battery.

Failing to do so and continuing use (charging) may cause the battery to overheat, rupture or catch fire or handset to overheat. If something unusual happens, contact your nearest SoftBank Shop or SoftBank Customer Assistance (page 14-46).



Do not drop handset or battery or subject it to excessive shock

Doing so may cause overheating, rupturing, fire or malfunction.



Do not sit down with handset in your trousers pocket Excess weight may damage Display, battery or other parts resulting in overheating, fire or injury.

Compulsor

If handset is used near an implanted cardiac pacemaker, defibrillator or other electronic medical sory equipment, radio waves may interfere with such a device or equipment

Observe the following guidelines

- If you have an implanted cardiac pacemaker or defibrillator, carry and use handset at a distance of at least 22 centimeters away from the implanted device.
- Turn off handset in crowded places such as packed trains because a person with an implanted cardiac pacemaker or defibrillator may be nearby. Radio waves can interfere with the operation of a cardiac pacemaker or other medical device.
- 3. Follow the precautions below in medical institutions.
 - Do not bring handset into an operating room, intensive care unit or coronary care unit.
 - · Turn off handset in a hospital ward.
 - Turn off handset in a lobby or other location close to medical equipment.
 - Observe the instructions of individual medical institutions and do not use handset in or bring it into prohibited areas.

4. When using electronic medical devices other than an implanted cardiac pacemaker or defibrillator outside of medical institutions (such as at home), consult with the individual medical device manufacturer about the possible influence of radio waves.

The above information conforms to "The Guidelines on Use of Mobile Phones and Other Devices to Prevent Electromagnetic Wave Interference with Electronic Medical Equipment" (Electromagnetic Compatibility Conference Japan), as well as refers to "The Investigative Research Report on the Influence of Electromagnetic Waves on Medical Equipment" (Association of Radio Industries and Businesses, March 2001).



Do not use AC Charger (sold separately) with any power supply other than a 100 to 240 V AC household power supply

Doing so may result in a fire, as well as cause the charger to overheat, catch fire or malfunction.

⚠ Caution



Do not use or leave handset or battery in places where it will be exposed to direct sunlight or in hot places such as inside a car in the sun

Doing so may cause overheating, fire or malfunction.



Keep handset, battery and charger (sold separately) away from infants and small children

Failing to do so may result in the battery or memory card being accidentally swallowed or cause an injury.



Make sure that the terminals (metal parts) of the charger (sold separately) do not come into contact with wires or other metal objects

Failing to do so may cause overheating or burns.



Do not pull the cord when unplugging AC Charger (sold separately) or In-Car Charger (sold separately) from an AC household outlet or socket

Damage to the cord may cause electric shock, overheating or fire. Hold the plug when unplugging the AC Charger (sold separately) or In-Car Charger (sold separately).



Do not pull, bend with excessive force or twist the cords of AC Charger (sold separately) and In-Car d Charger

Do not damage or modify them
Do not place objects on them
Do not apply heat and keep them away from heaters
Damage to a cord may cause electric shock, overheating or fire.



Do not plug or unplug AC Charger (sold separately) with wet hands

Doing so may cause electric shock or malfunction.



Keep magnetic cards away from handset and make sure that a magnetic card is not trapped when closing d handset

Failing to do so may cause the magnetic data on a cash card, credit card, telephone card or floppy disk to be lost.



Do not use handset in a vehicle if it affects in-vehicle electronic devices

d Use of handset in some types of vehicles may, in some rare cases, affect in-vehicle electronic devices and interfere with safe driving.

A Caution



Do not place handset on an unstable or unlevel surface

Doing so may result in handset falling and causing injury or malfunction. Be particularly careful when vibration is set.



Do not dispose of the used battery with ordinary garbage

Insulate the terminal with tape and then dispose of the used battery separately from ordinary garbage or take it to your nearest SoftBank Shop. Be sure to observe local regulations on the separate collection of used batteries, wherever applicable.



Do not touch handset with sweaty hands or place it into a pocket of sweaty clothes

Sweat and humidity may erode the internal components of handset and cause overheating or malfunction.



Do not use In-Car Charger (sold separately) when the car engine is not running

pited Doing so may result in a flat battery.



If the fuse for In-Car Charger (sold separately) blows, replace it with a designated fuse

pulsory Replacing the fuse with other than a designated fuse may cause overheating and fire.

For details on replacing the fuse, refer to the instruction manual of In-Car Charger (sold separately).



Use handset in well-lighted places and with an appropriate distance between your eyes and its

Compulsory screen when you watch TV

Failing to do so may cause decreased vision.



Do not leave TV Antenna extended except when using TV

Compulsory Talking on handset without stowing TV Antenna may cause injury.



If your skin becomes irritated, immediately stop using handset and consult with a dermatologist

The following materials and surface treatments have been used for handset. Some of these materials may cause itching, irritation, eczema, etc. in Compulsory some rare cases depending on the individual's constitution and physical condition.

Dout	Material (Surface Treatment)	
Part	823T	824T
Outer housing (front face of Display side)	Magnesium alloy (acrylic baking coating)	Magnesium alloy (acrylic baking coating)
Outer housing (external side of upper section)	PC resin (discontinuous deposition)	PC resin (deposition, UV cured acrylic coating) (stereoscopic print)
Outer housing (hinge cover)	PC resin (UV cured acrylic coating)	PC resin (deposition, UV cured acrylic coating) (stereoscopic print)
Outer housing (keypad side)	PC resin (UV cured acrylic coating)	PC resin (UV cured acrylic coating)
Outer housing (external side of lower section)	PC resin (discontinuous deposition)	PC resin (UV cured acrylic coating)
Outer housing (external panel of upper section)	PC resin (integral moulding of synthetic leather)	_
Outer housing (battery cover)	PC resin (integral moulding of synthetic leather)	PC resin (UV cured acrylic coating)
Display panel	Tempered glass with polyester film (UV cured acrylic processing)	Tempered glass with polyester film (UV cured acrylic processing)
External Display panel	PC resin (discontinuous deposition)	-
Screw covers (above Display panel)	PET film	PET film
External panel of lower section (battery cover side)	PC resin (UV cured acrylic coating)	PC resin (UV cured acrylic coating)
Clearance retainer on internal face of lower section	Acrylic urethane resin	Acrylic urethane resin
Keypad	PC resin (SUS plate, silicone rubber)	PC resin (SUS plate, silicone rubber)
Side Key	PC resin (deposition)	PC resin (UV cured acrylic coating)
Camera panel	Acrylic resin	Acrylic resin
Infrared Port	Acrylic resin	Acrylic resin

Safety Precautions

⚠ Caution

Part	Material (Surf	Material (Surface Treatment)	
rart	823T	824T	
Memory Card Slot cover	Elastomer resin, PC resin (UV cured acrylic coating)	Elastomer resin, PC resin (UV cured acrylic coating)	
External Device Port cover	Elastomer resin, PC resin (UV cured acrylic coating)	Elastomer resin, PC resin (UV cured acrylic coating)	
Charger Terminals	Stainless steel (gold plating, nickel undercoat)	Stainless steel (gold plating, nickel undercoat)	
Screws	Steel (nickel coating)	Steel (nickel coating)	
TV Antenna fixation tab	POM resin	POM resin	
TV Antenna (top part)	ABS resin (discontinuous deposition)	ABS resin (UV cured acrylic coating)	
TV Antenna (base part)	ABS resin (discontinuous deposition)	ABS resin (UV cured acrylic coating)	
TV Antenna (connection part)	PA resin	PA resin	
TV Antenna (hinge part)	Stainless steel	Stainless steel	
Strap pin	Stainless steel	Stainless steel	

⚠ Caution



Before using handset, make sure that no metal objects (such as pins) are stuck to the earpiece or speaker

Compulsory Failing to do so may result in a metal object causing an ear or hand injury, etc.



If you have a weak heart, be careful with the call vibration and ringtone volume settings

Compulsory Failing to do so may startle you and may be harmful to your heart.



Do not use Mobile Light for purposes other than taking pictures, recording videos or lighting

Doing so may harm the eyes and cause impaired vision or other injury.



Make sure things like paper, cloth and bedding are not placed on handset during a video call or while drarging using a USB connection, In-Car Charger (sold separately), AC Charger (sold separately), etc.

Failing to do so may cause overheating, fire, burns or malfunction.



Do not turn the volume up too high while using Stereo Earphone-Microphone (sold separately)

^{ry} Do not use Stereo Earphone-Microphone (sold separately) continuously for long periods of time

Exposure to high sound levels may impair hearing and prolonged use may cause hearing defect regardless of the volume level. Sound leakage may annoy other people and surrounding sounds may not be heard clearly resulting in an accident.



Do not insert objects other than the memory card into Memory Card Slot

Doing so may cause overheating, electric shock or malfunction. Cover the slot with the cover at times other than when you are inserting or removing the memory card.



Keep your face away from Memory Card Slot when inserting or removing the memory card

d Keep the memory card out of the reach of small children

If the memory card is let go of suddenly, it may fly out and hit your face resulting in injury.



Do not subject the memory card to vibration or shock or remove it from the slot or turn off handset while data is being written to or read from the memory card

Doing so may cause data loss or malfunction.

↑ Caution



Use only the memory card supported by handset

Failing to do so may cause data loss or malfunction. Handset supports memory cards with a storage capacity of up to 2 GB (as of May 2008).



Do not let children use cables such as USB cable (sold separately), Stereo Earphone Conversion Cable (sold separately) and Stereo Earphone-Microphone (sold separately) unsupervised and keep cables out of infant's reach

An injury may be caused if, for instance, the cable is wrapped around a neck



Do not point the infrared beam at anyone's eye during infrared communication

Doing so may cause eve damage.



Do not use Mobile Light close to eyes

Doing so may cause eye damage. Be especially careful not to take pictures or record videos with Mobile Light too close to the eyes of infants



Do not use excessive force when inserting or removing USIM Card

Doing so may cause a malfunction. Be careful not to injure a hand or finger when removing the card.



Use only a USIM Card designated for handset

Failing to do so may cause data loss or malfunction.



Do not bend TV Antenna with excessive force

Doing so may result in damage or distortion of TV Antenna and cause injury.



Be careful not to trap your fingers or objects when closing handset and not to trap your fingers in the Compulsory hinge when opening handset

Failing to do so may cause injury or damage to the LCD Display.

General Notes

Using Your Handset

- Handset employs radio waves. Signals may be disrupted even within service areas if you are indoors, underground, inside a tunnel or inside a vehicle. If you move to a location with poor signal reception, a call or the TV image/sound may be suddenly cut off.
- When using handset in public places, take care not to annoy other people around you. Use of handset is prohibited in some public places such as in theaters or on buses and trains.
- Handset is a radio transceiver under Japanese Radio Law. You may be requested to submit handset for inspection based on this law.
- Use of handset near a landline phone, TV or radio may affect the image and sound quality of the equipment.
- Handset employs a digital system to maintain a high level of communication quality even at very low signal levels. However, calls may be suddenly cut off when the signal strength becomes too weak.
- The digital system provides a high level of privacy protection. However, the possibility of someone eavesdropping on your conversation cannot be ruled out as long as radio waves are used.
- Data stored on handset may be corrupted or lost on the following occasions.
 - · Handset is used improperly.
 - · Handset is exposed to static electricity or electric noise.
 - · Handset is turned off during operation.
 - · The battery is completely discharged.
 - · Handset malfunctions or is sent for repairs.

SoftBank and Toshiba accept no liability whatsoever for the corruption or loss of stored data. Be sure to keep a separate memo of important data to limit damage caused by data corruption or loss to a minimum.

- Be sure to charge the battery before using handset for the first time or if handset has not been used for a long time. When the battery is stored for a long time, it discharges over time even if it is not used.
- Before using a memory card, read the instruction manual of the memory card thoroughly to ensure safe and proper operation.
- When handset is used for extended periods of time, especially in high temperature conditions, its surface could become hot. Please use caution when touching handset under such conditions.
- When certain items are taken out of the country, documentation may be required to certify that the export of the items is not controlled, prohibited, or restricted by the Export Trade Control Order and Foreign Exchange Order. Basically, no such documentation is required if you take handset out of the country and bring it back for the purpose of personal use when going on vacations or short business trips. In some cases, however, an export permit may be required if handset is to be used by or transferred to anyone else.

Furthermore, a US government export permit may be required when taking handset to countries for which the US government has imposed export restrictions (Cuba, North Korea, Iran, Sudan, Syria).

For details on export laws, regulations and procedures, refer to the Web page of the Security Export Control Policy Division of the Ministry of Economy, Trade and Industry.

• If you use a hearing aid, handset usage may interfere with hearing aid performance. If there is any interference, consult with the manufacturer or distributor of the hearing aid.

Inside Vehicles

- Do not use handset while driving. Use of handset while driving is prohibited by law.
- Talking on handset using Stereo Earphone-Microphone (sold separately) while driving may be subject to penalties in some prefectures.
- Before using handset, stop the vehicle in a safe area where parking or stopping is permitted.

Aboard Aircraft

 Do not use handset on an aircraft. Do not turn handset on while you are on an aircraft. Use of handset on an aircraft is prohibited by law.

Handling Basics

- Do not use handset in extreme temperatures, direct sunlight and humid or dusty places.
- Do not drop handset or subject it to excessive shock.
- Synthetic leather on handset (823T) may deform, discolor or deteriorate (i.e. tear, rip, etc), or stain your clothes, etc. depending on storage/usage conditions.
- To clean handset, wipe it with a dry soft cloth. Do not use alcohol, thinner, benzene or other solvents. Doing so may cause discoloration and remove the printed logo.
- Avoid exposing handset to rain, snow or high humidity. Handset, battery, charger (sold separately), Stereo Earphone-Microphone (sold separately) and other optional accessories are not waterproof.
- Do not remove the battery while handset power is on to avoid malfunction

- If the battery has been removed from handset or handset has not been charged for a long time, stored data and settings may be lost or altered. SoftBank and Toshiba accept no liability whatsoever for any damage or loss resulting from such negligence.
- The battery is a consumable item employing lithium ions. Replace the battery with a new one if the operation time becomes extremely short after it is fully charged. Buy a new battery designated for handset.
- Do not dispose of batteries with municipal waste. Insulate the terminal with tape or place the battery in a plastic bag and take it to the nearest SoftBank Shop or recycling center. Be sure to observe local regulations on battery disposal.



Li-ion

- Be sure to use the PULL tab when removing the battery. Removing the battery in any other way may damage the terminals (page 14-5).
- Some handset display pixels may be missing or remain lit. This is not a defect or malfunction. If Display is left on for a long period of time, pictures may be permanently burned into it.
- Make sure Stereo Earphone Conversion Cable (sold separately) or Stereo Earphone-Microphone (sold separately) is securely plugged into Earphone Microphone Jack. Failing to do so may generate noise on the other party's phone during calls.
- Do not turn the volume up too high while using Stereo Earphone-Microphone (sold separately). Exposure to high sound levels may impair hearing and prolonged use may cause hearing damage regardless of the volume level. Sound leakage may annoy other people and surrounding sounds may not be heard clearly when walking, resulting in an accident.
- When Earphone Microphone Jack, External Device Port and Memory Card Slot are not in use, make sure to replace the covers. Otherwise dust or water may enter handset causing malfunction.

- Hold the plug and do not pull the cord when unplugging Stereo Earphone Conversion Cable (sold separately) or Stereo Earphone-Microphone (sold separately). Pulling the cord may cause damage or malfunction.
- Antenna of handset is built into the body and does not protrude. Signal sensitivity may be reduced by touching/ covering Internal Antenna area (page 1-3). Do not cover this area by affixing stickers, or any other items. Doing so may prevent you from making/receiving calls, sending/receiving messages or accessing the Web.
- When you replace handset or send it for repair, messages and other data stored on handset cannot be transferred to another handset.
- Do not drop USIM Card or subject it to excessive shock. Doing so may cause a malfunction.
- Do not bend USIM Card or place a heavy object on it. Doing so may cause a malfunction.
- Do not allow USIM Card to get wet or leave it in places of high humidity. Doing so may cause a malfunction.
- Do not use or leave USIM Card in hot places such as near a fire or heater. Doing so may cause a malfunction.
- Avoid storing USIM Card in direct sunlight or hot and humid places. Failing to do so may cause a malfunction.
- Keep USIM Card out of infants' reach. Failing to do so may result in USIM Card being accidentally swallowed or cause an injury.
- Before using USIM Card, read the instruction manual of USIM Card thoroughly to ensure safe and proper operation.
- Do not put handset into a bag or pocket without stowing TV Antenna. Doing so may apply excessive force on TV Antenna and result in damage.

Functional Limitations

- After handset upgrade or subscription cancellation, the following functions become unavailable on handset:
 - · Camera
 - · Digital TV
 - · Media Player
 - · S! Appli
- Above functions may become unavailable after long periods of not using handset. Contact your nearest SoftBank Shop or contact SoftBank General Information (page 14-46).

Mobile Camera

- Be sure to observe proper etiquette when using the camera.
- Do not expose the camera lens to direct sunlight. Concentrated sunlight through the lens may cause handset to malfunction.
- Be sure to try taking and previewing pictures before using the camera on important occasions like wedding ceremonies.
- Do not commercially use or transfer pictures taken with the camera without the permission of the copyright holder (photographer), except for personal use.
- Do not use the camera in locations where taking photos and recording videos are prohibited.
- Do not block the lens with your fingers, strap or TV Antenna when shooting pictures or videos. Stow TV Antenna in handset when using the camera.

Safety Precautions

Mobile Light

- Do not use Mobile Light in hot, cold or humid places. Doing so may shorten its life.
- Mobile Light has a limited life. Repeated use will decrease the light intensity.

Copyrights

• Copyrighted materials, such as music, images, computer programs and databases, and their respective holders are protected by copyright laws. Duplication of copyrighted materials is permitted only for individual or home use. Making copies (including data conversion), modifications, transfers or network distributions of copies for purposes other than stated above without proper authorization constitutes an infringement of copyrights and moral rights, potentially resulting in claims for reparations or criminal punishment. If you use handset to make copies, observe the copyright laws. Furthermore, recording materials using the camera is also subject to the same laws.

Right of Portrait

 Portrait right is the right of an individual to refuse to be photographed by others and protects from the unauthorized publication or use of an individual's photograph by others. Right of personality is a portrait right applicable to all citizens and right of publicity is a portrait right (property right) designed to protect celebrities' interests. Be careful when taking pictures with handset camera. Photographing, publicizing and distributing photographs of citizens and celebrities without permission are illegal.

End User License Agreement

TOSHIBA CORPORATION

IMPORTANT NOTE: PLEASE READ BEFORE USING YOUR HANDSET

BY ATTEMPTING TO USE ANY SOFTWARE ON THE SUPPLIED HANDSET THIS CONSTITUTES YOUR ACCEPTANCE OF THESE EULA TERMS. IF YOU REJECT OR DO NOT AGREE WITH ALL THE TERMS OF THIS EULA, PLEASE DO NOT ATTEMPT TO ACCESS OR USE THE SUPPLIED SOFTWARE.

End User License Agreement

This End User License Agreement ("EULA") is a legal agreement between you (as the user) and TOSHIBA CORPORATION ("Toshiba") with regard to the copyrighted software as installed in a Toshiba 3G handset supplied to you (the "Handset"). Use or disposal of any software installed in the Handset and related documentations (the "Software") will constitute your acceptance of these terms, unless separate terms are provided by the Software supplier on the Handset, in which case certain additional or different terms may apply. If you do not agree with the terms of this EULA, do not use or dispose the Software.

1. <u>License Grant</u>. Toshiba grants to you a personal, non-transferable and non-exclusive right to use the Software as set out in this EULA. Modifying, adapting, translating, renting, copying, making available, transferring or assigning all or part of the Software, or any rights granted hereunder, to any other persons and removing any proprietary notices, labels or marks from the Software is strictly prohibited, except as expressly permitted in this EULA. Furthermore, you

- hereby agree not to create derivative works based on the Software.
- 2. Copyright. The Software is licensed, not sold. You acknowledge that no title to the intellectual property in the Software is or will be transferred to you. You further acknowledge that title and full ownership rights to the Software will remain the exclusive property of Toshiba, Toshiba's affiliates, and/or their suppliers, and you will not acquire any rights to the Software, except as expressly set out in this EULA. You may keep a back-up copy of the Software only so far as necessary for its lawful use. All copies of the Software must contain the same proprietary notices as contained in or on the Software and are subject to the terms of this EULA. All rights not expressly granted under this EULA are reserved to Toshiba, Toshiba's affiliates and/or their suppliers.
- 3. Reverse Engineering. You agree that you will not attempt, and if you are a business organization, you will use your best efforts to prevent your employees, servants and contractors from attempting to reverse engineer, decompile, modify, translate or disassemble the Software in whole or in part except to the extent that such actions cannot be excluded by mandatory applicable law and only if those actions are taken in accordance with such applicable law. Any failure to comply with the above or any other terms and conditions contained herein will result in the automatic termination of this license and the reversion of the rights granted hereunder to Toshiba.

Safety Precautions

- 4. DISCLAIMER OF WARRANTY. The Software is provided "AS IS" without warranty of any kind. TOSHIBA, TOSHIBA'S AFFILIATES, AND THEIR SUPPLIERS DISCLAIM ALL WARRANTIES, CONDITIONS OR OTHER TERMS (WHETHER EXPRESS OR IMPLIED), INCLUDING BUT NOT LIMITED TO WARRANTIES, CONDITIONS AND TERMS OF SATISFACTORY QUALITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS; AND THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE IS WITH YOU. YOU ACCEPT THAT SOFTWARE MAY NOT MEET YOUR REQUIREMENTS AND NO WARRANTY CAN BE GIVEN THAT OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE.
- 5. LIMITATION OF LIABILITY. TO THE FULLEST EXTENT LEGALLY PERMITTED, IN NO EVENT SHALL TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES FOR (A) LOST BUSINESS OR REVENUE, BUSINESS INTERRUPTION, LOSS OF BUSINESS DATA; OR (B) CONSEQUENTIAL, SPECIAL, INCIDENTAL OR INDIRECT DAMAGES OF ANY KIND (WHETHER UNDER CONTRACT, TORT OR OTHERWISE) ARISING OUT OF: (I) THE USE OR INABILITY TO USE THE SOFTWARE, EVEN IF TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES; OR (II) ANY CLAIM BY A THIRD PARTY. SAVE AS SET OUT IN THIS SECTION, TOSHIBA'S ENTIRE LIABILITY UNDER THIS EULA SHALL NOT EXCEED THE PRICE PAID FOR THE SOFTWARE, IF ANY.

- PLEASE MAKE AND RETAIN A COPY OF ALL DATA YOU HAVE INSERTED INTO YOUR PRODUCT, FOR EXAMPLE NAMES, ADDRESSES, PHONE NUMBERS, PICTURES, RINGTONES ETC, BEFORE SUBMITTING YOUR PRODUCT FOR A WARRANTY SERVICE, AS SUCH DATA MAY BE DELETED OR ERASED AS PART OF THE REPAIR OR SERVICE PROCESS.
- Laws. This EULA will be governed by the laws of Japan.
 All disputes arising out of this EULA shall be subject to the exclusive jurisdiction of the Tokyo District Court.
- 7. Export Laws. Any use, duplication or disposal of the Software involves products and/or technical data that may be controlled under the export laws of applicable countries or region and may be subject to the approval of the applicable governmental authorities prior to export. Any export, directly or indirectly, in contravention of the export laws of applicable countries or region is prohibited.
- 8. <u>Third Party Beneficiary</u>. You agree that certain suppliers of the Software to Toshiba have a right as a third party beneficiary to enforce the terms of this EULA against you as a user.

Declaration of Conformity

€ 0682

TOSHIBA INFORMATION SYSTEMS (U.K.) LTD

Leading Innovation >>>

DECLARATION OF CONFORMITY

Toshiba Information Systems UK (Ltd), Mobile Communications Division We.

Toshiba Court of

Neybridge Business Park Addlestone Road declare under our sole responsibility that the product

823T & 824T

Type (Model) Name is CL6-J01 UMTS

to which this declaration relates, is in conformity with the following standards and/or

EN 301 908-1, EN 301 908-2, EN 301 489-1, EN 301 489-3, EN 301 489-17, EN 301 EN 300 328, EN 300 440-2, EN 50360 and EN 60950

We hereby declare that all essential radio test suites, EMC & safety requirements have been carried out and that he above named product is in conformity to all the essential requirements of Directive (1999/ELC.

The conformity assessment procedure referred to in Article 10(5) and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

Cetecom GmbH, Im Teelbuch 116, 45219 Essen, Germany

Identification mark:

The technical documentation relevant to the above equipment will be held at:

Toshiba Information Systems UK (Ltd), Mobile Communications Division Delta House, The Crescent, Southwood Business Park, Plandpshire, CHJ44 0NL.

Name:- Hidehito Koka

Title:- Deputy Managing Director of TIU General Manager Mobile Communications Division

Signature:-

Trademarks and Patents

Licensed by QUALCOMM Incorporated under one or more the following United States Patents and/or their counterparts in other nations :

4,901,307	5,504,773	5,109,390	
5,535,239	5,267,262	5,600,754	
5,416,797	5,778,338	5,490,165	
5,101,501	5,511,073	5,267,261	
5,568,483	5,414,796	5,659,569	
5,056,109	5,506,865	5,228,054	
5,544,196	5,337,338	5,657,420	
5,710,784			



Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.



microSD Logo is a trademark.

Powered by Mascot Capsule®/Micro3D Edition™ Mascot Capsule® is a registered trademark of HI Corporation © 2002-2003 HI Corporation. All Rights Reserved.



The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. and any use of such marks by TOSHIBA is under license.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG-LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.



T9 Text Input is covered by Japan Pat.No. 特許 3532780,3492981 and other patents pending.

Chaku-Uta®, Chaku-Uta Full® is a registered trademark of Sony Music Entertainment (Japan) Inc.

Copyright © 1998-2003 The OpenSSL Project. All rights reserved.

Copyright © 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

THIS SOFTWARE IS PROVIDED BY THE OPENSSL PROJECT AND/OR BY ERIC YOUNG "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENSSL PROJECT, ERIC YOUNG OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

QR Code is a registered trademark of Denso wave Incorporated.

Sky Mail, S! Mail, S! Appli, S! GPS Navi, S! Information Channel, S! Addressbook Back-up, S! Friend's Status, S! Circle Talk, PC Site Browser, Sha-mail, Movie Sha-mail, Navi appli, S! Quick News, S! Town, S! Loop, Graphic Mail, Feeling Mail, Secure Remote Lock and 3G High Speed are registered trademarks or trademarks of SOFTBANK MOBILE Corp.

Copyright © 1995-2006 Adobe Systems Incorporated. All rights reserved. Macromedia, Flash, Macromedia Flash, and Macromedia Flash Lite are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and other countries.

BookSurfing $^{\circ}$ is a registered trademark of CELSYS, Inc., Voyager Japan, Inc. and INFOCITY, Inc.

"SOFTBANK" SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.

Trademarks and Patents

This product contains NetFront Mobile Client Suite of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.

© 2008 ACCESS CO., LTD. All rights reserved.

This software is based in part on the work of the Independent JPEG Group.





This product uses OKAO $^{\mbox{\scriptsize TM}}$ Vision of OMRON Corporation.

"OKAO" and "OKAO Vision" are registered trademarks of OMRON Corporation in Japan.

Yahoo! and the Yahoo!/Y! logos are trademarks and/or registered trademarks of Yahoo! Inc.

Microsoft, PowerPoint, Excel are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

All other company names and trademarks are the property of their respective

SAR

This 823T/824T mobile phone complies with the technical standards for the absorption of radio frequency (RF) energy as set by the Japanese government. These technical standards, based upon scientific evidence, were established to ensure that RF energy from wireless mobile devices used next to the head do not have a serious effect on human health. The maximum Specific Absorption Rate (SAR), which measures the average radio wave energy absorbed by the human head, set by the Japanese government is 2 W/kg*. This allowed value includes a substantial safety margin designed to assure the safety of all persons, regardless of age and stature. The value corresponds with the international guidelines prescribed by the International Commission on Nonlonizing Radiation Protection (ICNIRP) in cooperation with the World Health Organization (WHO).

All models of mobile phones are required to comply with the technical standards of Japan set forth in the Radio Law before being released for sale. The 823T/824T has received construction design certification under the Radio Law with a SAR value of 0.930 W/kg for 823T and 0.913 W/kg for 824T. This maximum SAR value was determined by TÜV Rheinland Japan, Ltd. (registered certification agency) and the Telecom Engineering Center (measurement agency) at the maximum transmission power of this handset with measurement carried out conforming to the guidelines set by the Japanese government. Depending on the product, there may be minute differences in the SAR. However, they are within the allowed limits. During calling, the actual SAR is lower as handset is designed to use the minimum transmission power necessary to communicate with the mobile network.

Additional information about SAR can be found at the website listed below.

Ministry of Internal Affairs and Communications website:

http://www.tele.soumu.go.jp/j/ele/index.htm

Association of Radio Industries and Businesses (ARIB) website:

http://www.arib-emf.org/initiation/sar.html

SoftBank website:

http://www.softbankmobile.co.jp/corporate/legal/emf/emf03.html Toshiba Mobile Phone website:

http://www.toshiba.co.jp/product/etsg/cmt/

* The technical guidelines are stipulated in the Ministerial Ordinance Related to the Radio Law (Wireless Equipment Regulations, Article 14-2).

About SoftBank's Body SAR Policy

- * Body SAR: Refers to the SAR of the maximum transmission power when continuously talking with handset attached to the body and using an earphone.
- ** Specific Absorption Rate (SAR): Measured value of continuous talking at 6 minute intervals.
 - Our technical standards for body SAR include information from Europe. For details, see "European RF Exposure Information."
- *** Placement on the body: Measurements were taken with the rear of handset facing the body at a distance of 1.5 cm as the normal position of handset. In order to maintain compliance with radio frequency (RF) exposure requirements, use accessories that maintain a 1.5 cm separation distance between the body and the back of handset. Choose accessories, such as belt clips and holsters, that do not contain metallic components.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.


The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.833 W/kg for 823T and 0.833 W/kg for 824T*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. In this case, the highest tested SAR value is 0.499 W/kg for 823T and 0.558 W/kg for 824T.


As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.


The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body. Additional Information can be found on the websites of the World Health Organization (http://www.who.int/emf).

* The tests are carried out in accordance with international guidelines for testing.

Handset Parts & Functions · · · · · · · 1-2
Display Indicators · · · · · · · · 1-4
Display
External Display · · · · · 1-5
Information Prompt · · · · · 1-6
Charging Battery · · · · · · · 1-7
Power On/Off · · · · · · 1-10
Turning Handset Power On · · · · 1-10
Turning Handset Power Off · · · · · 1-10
Date & Time · · · · · · · · · · · · · · · · · · ·
Setting Date and Time · · · · · 1-11
Clock Format (12-hour/24-hour) · · · · · 1-11
About Mobile Manners · · · · · · · 1-12
Manner Mode and Offline Mode · · · · · 1-12
Codes · · · · · · · 1-14
About Codes · · · · 1-14

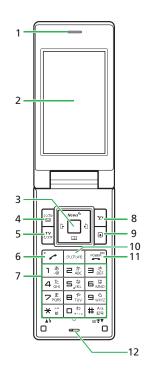


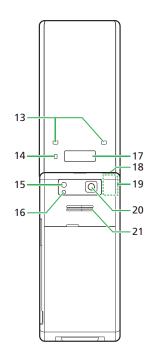

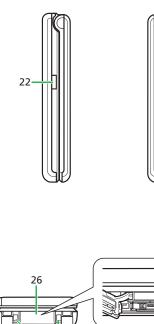

-23

-25

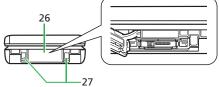

- 1 Earpiece
- 2 Display
- 3 Multi Selector : Move cursor.


Center Key : Open Main Menu/confirm operations.

- 4 Mail Key (Left Softkey) (Open Messaging Menu. (Press and hold): Switch to Simple Mode.
- 5 TV Key :: Activate TV.
- 6 Send Key : Make/answer voice calls.
- 7 **Keypad**: Enter numbers/characters.
 - *:: Turn on Mobile Light (when using camera).
 - (Press and hold): Show My Status.
 - (Press and hold): Set/cancel Manner Mode.
- 8 Yahoo! Keitai Key (Right Softkey) [xr]: Access Yahoo! Keitai.
- 9 Shortcut Key 📵: Open Shortcut Menu.
- 10 Clear/Memo Key : Delete characters/cancel operations.
- (Press and hold): Set/cancel Answering Machine.

 11 End/Power Key : End calls/operations.
- (Press and hold): Power handset on/off.
- 12 Microphone
- 13 External Lights/Twin Illuminations
- **14 Charging Indicator**: Lights during charging and goes out when charging is complete.
- 15 Mobile Light/Penlight
- 16 Camera/Video Indicator
- 17 External Display
- 18 Handstrap Hole
- 19 Internal Antenna
- 20 Camera
- 21 Speaker
- 22 Infrared Port

- 23 Side Key : Activate camera/shutter/toggle External Display views.*
 * Available while handset is closed.
 - (Press and hold in Standby): Activate video camera.
 (Press and hold while handset is closed): Turn on Twin Illuminations, set/cancel Manner Mode, send a Simple Notice, or turn on Penlight (the key function can be set (page 2-4)).
- 24 TV Antenna
- 25 Memory Card Slot
- 26 Earphone Microphone Jack External Device Port
- 27 Charger Terminals
 - Signal sensitivity may be reduced by touching/covering Internal Antenna area. Do not cover this area by affixing stickers, or any other items.
- Use an optional charger-earphone branch cable (sold separately) to connect AC Charger and Earphone-Microphone simultaneously.

Display

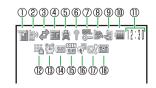

- 1 Signal Strength
 - Moderate Weak Faint
 - Out of Range
 - 1 Offline Mode On
- ② 🎒 / 🚰 Voice/Video Call 🗉 Dial-up Connection
 - Positioning
- 3 Packet Transmission
 - My Status Online
 - Packet Transmission Ready
 - Packet Network Range
- 4 Mon-SoftBank Network Area
 - 3 Network Area
 - ng 3G Network Area While Roaming
- ⑤ 👰 S! Information Channel Updated
 - Reception of Rights Object Indicates the reception of a content key during operation.
 - Message Box Full
 - Message Delivery Failed
 - New Messages
 - Delivery Report
 - New S! Mail/SMS and Delivery Report

- Password Lock Active (appears during TV Timer Viewing.)
 - PC Site Connected
 - S! Quick News Updated
 - Memory Card Inserted
- Web SSL Indicates a connection to a web page with security protection.
 - Security protection:
 (3) / (3) Bluetooth® Connection Established/
 Connection Standby
 - Bluetooth® Connection Established (SCMS-T Device Supported)
 - Some Bluetooth® Connections Lost
 - Bluetooth® Connection(s) Lost
 - Infrared Communication
 - ₱ USB Connection
 - **∜**a Card Reader Mode
- ® 🔊 Software Update
 - External Connection for Data Synchronization
 - / A S! Appli Activated/Paused
 - Playing Music Files
 Music File Playback Paused
 - Playing Video Files
 - Streaming
 - TV Timer Set
- Missed Call(s)
- Manner Mode (Silent)
 - Manner Mode (Alarms)
 - A Manner Mode (Drive)
 - 😭 / 😭 / 😭 Manner Mode (Original 1 to 3)

- 10 m Battery Level
 - Sufficiently Charged
 - Low
 - Very Low
 - Charge Immediately
 - Charging
- ① Clock
- Keypad Lock Active
 - Password Lock Active
- (13) E Alarm Set
- (No Messages)

 - / J / Answering Machine Off (Message(s) Recorded)
- 15 Woice Mail Message(s)
 - Call Forwarding (Ringer Off for Voice Call)
 - Call Forwarding (Ringer Off for Video Call)
 Call Forwarding (Ringer Off for Voice and Video Calls)
- 16 Popen Information Prompt
- ① S! Friend's Status Notification (Invitation)
- Show Secret

External Display



- ① M Signal Strength
 - Strong Moderate Weak Faint
- Tx Out of Range
- ☑ Offline Mode On
- ② I Battery Level
 - Sufficiently Charged
 - Low
 - Very Low
 - Charge Immediately
- Charging
- ③ Message Box Full
 - Message Delivery Failed
 - New Messages
 - Delivery Report
 - New S! Mail/SMS and Delivery Report
 - Keypad Lock Active
 - Password Lock Active
 - Cannot Start Music Player
 - /
 Bluetooth® Connection Established/
 Connection Standby
 - Bluetooth® Connection Established (SCMS-T Device Supported)
 - Some Bluetooth® Connections Lost
 - Bluetooth® Connection(s) Lost

- 4 Missed Call(s)
 - Manner Mode (Silent)
 - Manner Mode (Alarms)
 - Manner Mode (Drive)
 - 🔄 / 🔁 / 🗃 Manner Mode (Original 1 to 3)
- ⑤ W Voice Mail Message(s)
 - Answering Machine On (No Messages)
 - 역 / 역 / 역 / 역 Answering Machine On (Message(s) Recorded)
 - (Message(s) Recorded)
- 6 Clock

Toggle External Display views by pressing
while handset is closed

• See page 2-8 for setting External Display.



Icon & Clock Display



Clock Display



Icon Display



Music Player

Information Prompt

Information Prompt appears to inform you of missed calls, new messages and other information.

Information Prompt appears



2 Select an item⇒■

Information Prompt Items

Missed Calls: Missed call(s)

Missed Calls: New Voice Mail message(s) at Voice Mail Center

Ans Machine: New message(s) recorded New Messages: Unread S! Mail/SMS

Unsent Messages: Unsent S! Mail/SMS

Partly Sent: Unsent S! Mail for some recipients

Delivered: Unread delivery report(s)

Missed CT: Missed S! Circle Talk call(s)

Notification: New S! Friend's Status notification(s)

Info Channel: Content update(s) available

Info Channel: S! Information Channel update failed

Weather Updated: Weather report update available Update Failed: S! Quick News update failed

Stop Snooze: Cancel snooze

Timer Results: TV view timer results

Resume S! Appli: S! Appli paused

Software Update: Software updated


Content Key Memory Full: Content key cannot be saved any more

Charging Battery

- Charging at low temperatures may be ineffective. Charge battery between 5 to 35°C.
- Battery must be installed in handset before charging. Use only specified AC Charger (sold separately), Desktop Cradle (sold separately) and In-Car Charger (sold separately).
- Regularly clean Charger Terminals, battery terminal and External Device Port with a dry cotton swab to avoid contact failure.
- If Please check connection with your charger. appears on Display, clean Charger Terminals, battery terminal and External Device Port with a dry cotton swab and try again.
 - When the message still does not disappear, stop charging immediately, and take the battery to your nearest SoftBank Shop or contact SoftBank General Information (page 14-46).
- Do not charge the battery in humid places.
- Charging is possible while handset is turned on, but takes longer than while handset is turned off.
- When charging while handset is turned on, a appears on Display and turns to when charging is complete.
- Handset and AC Charger may warm during charging. However, if it overheats, stop using immediately. There may be some defect.
- If a call arrives during charging, ringtone sounds/handset vibrates and External Lights flash.

Using AC Charger

Use only specified AC Charger (sold separately).

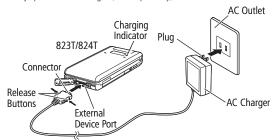


- Connect AC Charger connector to handset
 - Inscription on connector should face down.
- 2 Insert the plug into an AC outlet Charging Indicator illuminates red while charging; may take up to approximately 120 minutes.
- 3 Unplug AC Charger, then disconnect handset
 - Press and hold Release Buttons to remove AC Charger connector from handset.

- AC Charger and Desktop Cradle support a power supply of 100 to 240 V AC.
- AC Charger is exclusively for use in Japan.
- SoftBank is not liable for any problems associated with charging overseas.
- Use an optional charger-earphone branch cable (sold separately) to connect AC Charger and Earphone-Microphone simultaneously.

Using Desktop Cradle


Use only specified AC Charger (sold separately) and Desktop Cradle (sold separately).

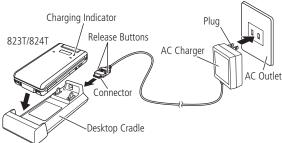

- 1 Attach AC Charger connector to Desktop Cradle
 - Inscription on connector should face up.
- 2 Insert the plug into an AC outlet
- 3 Slide handset into Desktop Cradle until it clicks Charging Indicator illuminates red while charging; may take up to approximately 120 minutes.
- 4 Remove handset from Desktop Cradle, then unplug AC Charger
- 5 Disconnect AC Charger from Desktop Cradle
 - Press and hold Release Buttons to remove the connector.

Using In-Car Charger

Use only specified In-Car Charger (sold separately).

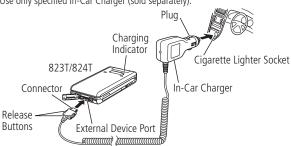

- Tonnect Charger connector to handset
 - Inscription on connector should face down.
- Insert Charger into cigarette lighter socket Charging Indicator illuminates red while charging; may take up to approximately 120 minutes.
- 3 Unplug In-Car Charger, then disconnect handset
 - Press and hold Release Buttons to remove Charger connector from handset

- Do not use In-Car Charger when the car engine is off. Doing so may drain the car battery.
- Unplug In-Car Charger when leaving your car. If Charging Indicator remains on after removing car key, In-Car Charger may drain car battery.
- Use of handset while driving is prohibited by law. Before using handset, stop the vehicle in a safe area where parking is permitted.
- Use an optional charger-earphone branch cable (sold separately) to connect In-Car Charger and Earphone-Microphone simultaneously.

More Features



Charging In Progress Image (Slideshow)

(page 13-7)

Turning Handset Power On

Press and hold



Standby

When Handset Powers On for the First Time

Following appears the first time handset is powered on or after performing *Reset All* or *Reset Setting*.



• Set Date & Time (page 1-11).

Retrieving Network Information

Before using network-related services (Yahoo! Keitai, Messaging or S! Appli), retrieve network connection information.

The first time you press , a prompt appears.

Press I/2/1/2/



2 Select YES⇒ ■

Handset connects to the network and Network Information is retrieved.

- If Network Information is not acquired, some features will be limited.
- After replacing USIM Card, retrieve network information again.
- To retrieve network information from Main Menu:



Turning Handset Power Off

Press and hold

Power-off screen appears and handset powers off.

Date & Time

Setting Date and Time

- The date and time are set for Main City set in the World Clock settings.
- Press ⇒Settings ⇒ ⇒Phone
 Settings ⇒ ⇒Clock ⇒ ■



Clock Menu

2 Select Date&Time ⇒ ■



- 3 Enter the year, month, day and time ⇒
 - Enter a time in the 24-hour system.
 - Use •• to move cursor and to select a number.
 - \bullet Day of the week is automatically set.

Clock Format (12-hour/24-hour)

From Clock Menu (left), select 12hour/ 24hour



2 Select 12 hour or 24 hour ⇒ ■

Manner Mode and Offline Mode

Be careful about disturbing others in public or quiet areas.

- Turn handset off in theaters, museums and other places where silence is the norm.
- Observe signs and instructions regarding handset use aboard trains, etc.
- In airplanes, turn off handset to avoid interference with flight equipment.
- In hospitals, research institutes and other places where handset use is prohibited, turn handset power off to avoid interference with precision apparatus.
- When using handset in quiet places such as restaurants and hotel lobbies, be mindful not to disturb others.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Using Manner Mode

 See the table below for Manner Mode types and descriptions.

Туре	Description		
Silent 😭	No sounds are emitted from the speaker.		
Alarms	Only alarm sounds.		
Drive⇔	Handset tones and sounds are emitted only when earphones are connected. Handset does not vibrate. All incoming calls are answered by Answering Machine.		
Original 1 to 3	Customize following items: Ringtone (Ringtone Volume & Vibration) Alarm (Alarm Volume & Vibration) Calendar (Alarm Volume & Vibration) S! Appli (S! Appli Volume) Sound Volume Effect Sound On/Off Battery Alarm On/Off Answering Machine On/Off		

Press and hold #29



- To cancel Manner Mode, press and hold
 ## AND IN THE MANNER WITH THE WITH THE WITH THE MANNER WITH THE WITH T
- Shutter click and recording start/end tone sound even in Manner Mode.
- S! Circle Talk connects automatically if My Status is set to *Auto Join*. Other party's voice will sound from speaker when connected, if handset is closed, even in Manner Mode.

Using Offline Mode

Use Offline Mode to temporarily suspend all handset transmissions. In Offline Mode, incoming/outgoing calls and network services (e.g. S! Mail/SMS transmission) are blocked.

- Press Settings Call
 Settings
- Select Offline Mode $\Rightarrow \blacksquare$ (twice) \Rightarrow



- To cancel Offline Mode, select OFF.
- The following are unavailable in Offline Mode.
 Emergency calls: 110 (police), 119 (fire and
 - ambulance) and 118 (coast guard)
 - · Bluetooth® and infrared communications

More Features



Manner Mode

(page 13-11)

- Switch Manner Modes
- Customize Original Mode

About Codes

Your Handset Code, Center Access Code, Call Barring Service Code and Internet Security Code are required for some functions and settings.

- Write down those codes. If they are lost, contact SoftBank General Information (page 14-46).
- Do not reveal your codes. SoftBank is not liable for misuse or damages.

Handset Code

Handset Code is a four-digit number. It is required to use various handset functions. Handset Code can be changed (page 11-2).

• The default setting is "9999".

Center Access Code

Center Access Code is a four-digit number assigned at initial subscription. It is required to perform Optional Service operations via landlines or to subscribe to fee-based content on the Internet.

Call Barring Service Code

Call Barring Service Code is a four-digit number assigned at initial subscription. It is required to set Call Barring. The code can be changed (page 3-18).

If the code is incorrectly entered three times, Call Barring settings lock. If this happens, Call Barring Service Code and Center Access Code must be changed. For details, contact SoftBank General Information (page 14-46).


Internet Security Code

Internet Security Code is required to set Internet security. The code can be changed (page 11-5).

Menu Operations

Accessing Handset Functions

Press in Standby to open Main Menu.
Use to select a menu icon and press it to access that menu.

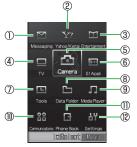

Main Menu

①Messaging

Create S! Mail/SMS messages. Also check received and sent S! Mail/SMS messages (Chapter 4).

2 Yahoo! Keitai

From Yahoo! Keitai menu, access the Mobile Internet to download pictures, melodies and applications. Use PC Site Browser to access websites for PCs (Chapter 5).

3Entertainment

Access latest news, launch BookSurfing® and visit Ku-man's Room (Chapter 9).

4)TV

Watch Digital TV (Chapter 6).

⑤Camera

Take pictures and record videos (Chapter 7).

6S! Appli

Access applications such as games (Chapter 8).

⊘Tools

Access useful functions such as Alarms and Calculator (Chapters 9, 13, 14).

®Data Folder

Save/access files here (Chapter 2).

Play music and video files (Chapter 8).

®Communications

Access Communication Services provided by SoftBank (S! Town, S! Loop, S! Friend's Status, S! Circle Talk) (Chapter 10).

①Phone Book


Save and access Phone Book information (Chapter 2).

®Settings

Modify and confirm handset settings, and perform data communication and backup (Chapters 12, 13).

Operations in Landscape View

Use Multi Selector in Landscape View as follows.

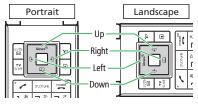

Customizing Main Menu

Customize Main Menu design (icons, font color, focus frame color, etc.).

Press ■ → ▷ → Set Images → ■ →
Options → ■



- Original Default theme.
- Phone Memory Select a Main Menu file.
- Keitaideco Sets the downloaded Keitaideco as Main Menu.

2 Select an item⇒ 🗹



- 3 Select *Icons*⇒ ⇒*Phone Memory* or *Memory Card* ⇒ ⇒*Pictures* ⇒ ⇒
 Select an image ⇒

 - To change the font color:
 Press → Font Color → → Select a color → ■
 - To change the wallpaper:
 Press → Wallpaper → → Phone
 Memory or Memory Card → →
 Pictures or Digital Camera →
 Select an image → →
 - To change the focus frame color:
 Press → Highlight → → Select a color → ■

Numbered Menu Items

Enter the menu item number on handset keypad (\Box_{+}^{5}) to \Box_{+}^{5} , (\blacksquare_{+}^{6}) , (\blacksquare_{+}^{6}) for direct menu access.



Numbers correspond to keypad keys.

Changing Multi Selector Shortcuts

By default, a shortcut is assigned to each Multi Selector key. Switch the assigned shortcuts.

Press ■ ⇒Settings → ■ →Phone Settings → ■



Phone Settings Window

2 Select Navigation Keys →



- Press ■⇒Select the function you want to assign to □⇒■⇒Select the function you want to assign to □⇒ Select the function you want to assign to □⇒■
 - The remaining function is assigned automatically to .

Setting Side Key Function

Set a function to Side Key. Select from Twin Illuminations, Manner Mode, Simple Notice and Torch (Penlight).

To access the set function, press and hold Side Key while handset is closed in Standby.

From Phone Settings Window, select

Side Key⇒ ■⇒Select a function⇒ ■

Sub Menu View

Sub Menu View appears at top of sub menus (press ☑ (Menu) for sub menu access). When multiple sub menu items are available, the two most recently selected items appear in Sub Menu View.

- From Phone Settings Window, select

 Sub Menu View

 ■
- 2 Select *Show* or *Hide* → ■
- This setting is disabled for S! Circle Talk, S! Circle Talk Call Log and S! Friend's Status.

Adding Functions to Shortcuts Menu

Add frequently used functions to Shortcuts Menu for quick and easy access.

Open a function (e.g. open S! Appli Library)→ 🕫



- Press 🗟 (Assign)
 - Assign does not appear when the function is unavailable for Shortcuts Menu.

Using Shortcuts Menu

- 1 Press 🔊 ⇒ Select a function ⇒ 🔳
- Activate up to two functions from Shortcuts Menu

More Features



Menus

(> page 2-26)



Mini Tool Settings

page 13-3)

- · Configure Mini Tool Settings
- Set Wide View
- Set an Animation for Mini Tool

Simple Mode

Using Only Basic Functions

Use Simple Mode to limit menu items. Select from the following menu patterns.

Pattern View	List View	Icon View		
Menu 1	Phone Book Search Message Box Create Message Manner Mode My Number Add to Phone Book Tools Settings Full Menu	Message Box Create Message Mode Add to Phone Book Search Settings My Number Full Menu		
Menu 2	Phone Book Messaging Camera Data Folder My Number Alarms Tools Settings Full Menu	Alarms Camera Data Folder Messaging Phone Book Tools Settings My Number Full Menu		
Menu 3	Phone Book Messaging Yahoo! Keitai Camera My Number Data Folder Tools Settings Full Menu	Yahoo! Keitai Camera Data Folder Messaging Phone Book Tools Settings My Number Full Menu		

- The following items are automatically set in Simple Mode.
 - · Sub Menu View Hide
 - Standby clock (page 2-8): Switches to 1-Line Digit if Mini Clock has been set in normal mode.
- · IdleScreen under Wide View: ON
- · Mini Tool: Giant Date

The above settings are retained after canceling Simple Mode.

Switching to Simple Mode

🚹 Press and hold 🗟



- 2 Select YES⇒ ⇒Select a font size ⇒
 ⇒Select a menu pattern → ■
- To switch to Simple Mode from Main Menu:
 Press → Settings → SimpleMode
 ON → ■

Opening Main Menu

📘 In Simple Mode, press 🔳



Main Menu

• Press (Switch) to toggle between List View and Icon View.


Canceling Simple Mode

- In Simple Mode, press and hold

 →

 YES→

 ■
- To cancel Simple Mode from Main Menu:
 Press → Settings → SimpleMode
 OFF → YES → I
- The font size setting is retained after canceling Simple Mode.

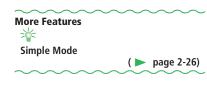

Wallpaper/Active Window

Standby

Wallpaper

- Press ⇒ Settings ⇒ ⇒ Display
 ⇒
 - Janus Screen
 Jidle Soreen
 ZMain Screens
 JMini Tool
 4Caller Details
 5Wide View
 6Font Settings
 Main Display, Ext.
 Display

Display Setting Window

2 Select *Idle Screen* → ■ → *Main Display* → ■ → *Wallpaper* → ■ → *Picture* → ■



3 Select Phone Memory or Memory Card

→ ■ ⇒Select a folder ⇒ ■ ⇒Select an
image ⇒ ■

- 4 Use 🛂 to compose the image

 - To rotate the image:
 Press (Resize) Rotate Image
- 5 Press 🗹 (Cut)⇒ 🔳
- To set the default image: In ③, select *Preset* ⇒ ■ (twice)
- To set Keitaideco:
 In 3, select Keitaideco*
 * Keitaideco must be set in advance (page 2-32).

Animation

A series of images appear as an animation in Standby. Set animation effect and image order.

From Display Setting Window, select

Idle Screen→ ■→Main Display→ ■

→Wallpaper → ■→Photo Album→ ■



- 2 Select $Image \Rightarrow \blacksquare \Rightarrow Images \ List \Rightarrow$
 - Select an image list⇒
 - Save images to an image list first:

 Select an image list → (Edit) → Select an item → Phone Memory or

 Memory Card → Pictures → Select an image → (twice) → (Set)
- 3 Select *Design* → Select an animation effect → (twice)
- 4 Select *Order* → → Select an image order → ■
- 5 Press 🛭 (Set)

- To set images in a folder:
 - In 2. select Select Folder > Select a folder⇒■
- To set preinstalled images:
 - In 2. select **Preset** →

Clock

- From Display Setting Window, select Idle Screen \Rightarrow Main Display \Rightarrow *→Others →* Select a clock type *→*
 - (twice)
 - When you select 1-line Digit, 2-line Digit, World-Digital, or World-Analog, do the following.

External Display

Set Indicators on or off for External Display.

From Display Setting Window, select Idle Screen $\Rightarrow \blacksquare \Rightarrow Ext. \ Display \Rightarrow \blacksquare \Rightarrow$ *Icon+Clock* or *Clock Only* →

Active Window (Japanese)

Save contact information to Members List and make calls, send messages and initiate S! Circle Talk from Active Window. In addition, check the latest information from S! Quick News and Weather Indicator

Operating Active Window

1 Press 🛅

The cursor appears indicating Active Window is enabled.



Shortcut Mode



Communication Mode

• Press 🖾 (Switch) to toggle between Shortcut and Communication Modes.

①S! Quick News

Shows newly received information.

- **②Weather Indicator**
- **3Members List**

Your current status (My Status) is shown on the top. Set an icon or a photo for each member. Save members from S! Friend's Status Members List to view their statuses. Make calls, send messages or initiate S! Circle Talk in Communication Mode.

Saving People to Members List

Add members to Members List from S! Friend's Status Members List or Phone Book. View members' statuses from Active Window

- From Active Window (Communication Mode), select an empty item⇒ (Save)
 - To change members:
 Select an entry⇒ → Change Member
 → YES → ■
- 2 Select *Friend Status* or *Phone Book* ⇒ Select an entry →

Contacting Members

- From Active Window (Communication Mode), use 🐧 to select a member
- 2 Use 🕞 to select a contact method
 - ⇒[■
 - Make a call
 - Create and send a message
 - Make an S! Circle Talk call

Checking S! Quick News Updates

- You must register contents of S! Quick News in advance (page 9-18).
- From Active Window (Shortcut Mode), use (to select S! Quick News→ ■
 - Press (Update) to update information.
 Press (Access) to access selected site.
- If update fails, Information Prompt appears. In News List Window, press we then select **Update** to initiate update.

Checking Weather Forecast

- For details on using Weather Indicator, see page 9-19.
- From Active Window (Shortcut Mode), use ♀️ to select Weather Indicator

More Features



Active Window

(page 2-27)



Active Window Settings

(page 13-8)


- Show All Information or Only Unread One
- Set Ticker Speed
- Show/Hide Images
- Restore Settings and Registered Contents of S! Quick News to Default

2

About Text Entry

There are four kinds of input methods: Standard mode, Beeper mode, T9 mode and Multi-tap mode. Unless otherwise noted, text entry operations are described using Standard mode. For details on entering text in Beeper mode, see page 14-10.

About Text Entry Window

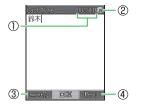

- Number of characters entered/Maximum number of characters allowed. The maximum number of characters allowed varies depending on the function.
- ②Current input mode.
- ③Select a text range and press to copy the text, save it to Word List, etc.
- ④Press w to edit text, create Graphic Mail, etc.

Switching Text Input Modes

- 📘 In a text entry window, press 🖼
 - Unavailable text input modes are not shown.



2 Select a text input mode ⇒ ■
The text input mode is switched.

Text Input Mode Icons

- Kanji (hiragana)
- Single-bye katakana
- Double-byte alphanumerics (upper case)
- Double-byte alphanumerics (lower case)
- Single-byte alphanumerics (upper case)
- a Single-byte alphanumerics (lower case)
- Double-byte numbers
- Single-byte numbers

URL: Enter e-mail address and URL extensions from the address library.

Pict: Enter pictographs.

(^-^): Enter emoticons.

My Pict: Enter pictographs in My Pictograms folder.

Entering Characters

• For text entry key assignments, see page 14-9. Example: Entering 獨本木

(twice) ⇒ (three times) ⇒ × *** ⇒ ≥ **

In a text entry window, enter ###

• Press ■ (three times) → □ →



2 Press 😱



 To exit the suggestion list and enter characters after ###, press 3 Use • to select ৄৄৄৄৄৄ৾৻৵৸ •

類本 is determined.

• To end text entry, press • after determining entered text.

Lower Case (a, つ, etc.)

Except in Numeric input mode, you can change the case of a character selected by the cursor (unconverted character) (compatible characters only).

Example: Changing \$\darkappa\$ to \$\darkappa\$

- 🚺 In a text entry window, press 📆
- Press #♣♣ ■

 # is determined

Adding " or "

In Kanji (hiragana) input mode and Single-byte katakana input mode, you can add " " " (dakuten) and " " " (handakuten) to a character selected by the cursor (unconverted character) (compatible characters only).

Example: Entering #

- In a text entry window, press =™
- 2 Press 📲 ⇒ 🔳

t is determined.

With characters like # to which both "" " (dakuten) and "" " (handakuten) can be added, you can switch between "" " and "" " by pressing * ".

Hiragana to Alphanumerics/Katakana Conversion

Enter alphanumerics and katakana in Kanji (hiragana) input mode.

Example: Entering TOM (single-byte)

- In a text entry window, press the keys corresponding to the characters
- 2 Press 🖾 (Kana)

A suggestion list of roman characters and katakana appears.

- Press (Kana) (Mum.) to switch between roman character/katakana conversion and number conversion
- 3 Use ♣ to select TOM (single-byte) → ■
 TOM (single-byte) is determined.

Toggling Characters in Reverse Order

Except in Numeric input mode, press to toggle unconverted characters on the cursor in the reverse order.

Example: Toggling the characters assigned to

Press
$$\[\] \stackrel{h}{\Rightarrow} \qquad Press \[\] \stackrel{h}{\Rightarrow}$$

Symbols

In a text entry window, press ## 200 The double-byte symbol list opens.



2 Select a symbol⇒ ■

The selected symbol is entered and the symbol list closes.

• To enter symbols continuously, press after selecting each symbol.

Alphanumerics

In a text entry window, press (twice)
The double-byte alphanumeric list opens.

The number of times # And is pressed differs depending on the function.



- 2 Select a number or letter⇒
 - Repeat this step to enter other numbers or letters

Pictographs

- In a text entry window, press *:
 The pictograph list opens.
 - You may be unable to enter pictographs depending on the function.



- 2 Select a pictograph → The selected pictograph is entered and the pictograph list closes.
 - To enter pictographs continuously, press after selecting each pictograph.

Emoticons

- In a text entry window, press ** (twice)
 The emoticon list opens.
 - The number of times * is pressed differs depending on the function.



2 Select an emoticon⇒ ■

The selected emoticon is entered and the emoticon list closes.

• To enter emoticons continuously, press after selecting each emoticon.

E-mail Address and URL Extensions

Example: Entering .co.jp (part of an e-mail address)

In a text entry window, press ## (three times)

The address library opens.

The number of times #** is pressed differs depending on the function.



Editing Text

Correcting Entered Text

- - To delete all characters to the right of the cursor, press and hold [2070st].
 - When the cursor is at the end of text, press and hold with to delete the entire text.
- 2 Enter correct characters

Deleting Multiple Characters

In a text entry window, move cursor to the first character of the text range to delete⇒ (Range•paste)



- 2 Select Start → → Move cursor to the last character → ■
- 3 Select Delete ⇒ ■

Copy/Cut/Paste

- In a text entry window, move cursor to the first character of the text range to copy/cut→圖 (Range·paste)
- 2 Select *Start* → → Move cursor to the last character → ■
- 3 Select *Cut* or *Copy* ⇒ ■

 The selected range of text is stored on the clipboard.
- 4 Position the cursor



5 Press @ (Range•paste)⇒*Paste*⇒■



6 Select the text to paste⇒■

2



Undoing Last Operation

In a text entry window, press $\square \Rightarrow$ $Undo \Rightarrow \boxed{\blacksquare}$



• Once text is reconverted or replaced, undo is unavailable.

More Features



Text Entry



page 2-28)

Text Entry Functions



Text Entry Settings



- · Change Input Method
- Do Not Show Word Suggestions from Entered Text
- Do Not Predict Next Phrase from Entered Phrases
- Set Custom Window
- · Set Text Deletion Method
- Reset Prediction Dictionary/Conversion Dictionary

Word List (Japanese)

Saving Frequently Used Words

In a text entry window, press

Customize→ → Word List → ■



2 Select To Word List ⇒ ■ ⇒Word ⇒ ■
⇒Enter a word ⇒ ■



3 Select *Reading* ⇒ ■ ⇒Enter a reading ⇒ ■



4 Press 🗹 (OK)

Save Words During Text Entry

- During text entry, move cursor to the first character of target word → (Range · paste)
- 2 Select Start → → Move cursor to the last character →
 - 3 Select To Word List ⇒ ■
 - 4 Select *Reading* ⇒ ⇒Enter a reading ⇒ ■
- 5 Press 🗹 (OK)

Edit Saved Entries

In a text entry window, press

Customize

→ Word List

→ Edit Word

■



- 2 Select a word⇒ (Edit)⇒Select the word/reading⇒ ⇒Edit the word/reading⇒ ■
- 3 Press 🗹 (OK)

More Features



Word List

(page 2-29)

Save phone numbers, e-mail address and other contact information to Phone Book.

Phone Book Entry Items—

Contact & Personal Info

Name & Reading

Job Title

Entry Number

Company

Phone Numbers E-mail Addresses Birthday

URI

Picture

Location Information

Group

Note

Address

Settings

External Lights
Ringtone Volume

Ring Time

Ringtone

Message Folder Secret

Vibration

External Display

Access Phone Book information while making calls, writing messages, creating S! Circle Talk groups.

Some Features

Speed Dial

Make calls to people in Phone Book quickly.

Book quickly. Phone Book quickly when writing messages.

S! Addressbook Back-up

Back up Phone Book to server. Sync updates to back up new information.

Reject Calls

Messaging

Specify addresses from

Reject calls from numbers not saved in Phone Book.

• Back Up Important Information

When the battery is exhausted or removed for long periods, Phone Book entries may be lost. Handset damage may also affect handset information recovery. SoftBank is not liable for damages from lost or altered data.

Creating New Entries

Example:

Saving a name, phone number and e-mail address, and specifying a group.

Press ■→Phone Book → ■→New
Entry → ■



Phone Book Entry Window

- 2 Select Name ⇒ ⇒Last Name or First
 Name ⇒ ⇒Enter a last name/first
 name ⇒ ⇒ ᠍ (OK)
 - Characters entered for name (reading for kanji) appear.
 - To correct the reading, select a reading field (last name or first name) and edit the information.
 - When you save to USIM Phone Book, enter both the first name and last name in the *Name* field.



- 3 Select *Phone Number* → → Enter a phone number → → Select a category →



4 Select Email ⇒ ■ ⇒Enter an e-mail address ⇒ ■ ⇒Select a category ⇒ ■



5 Select *No Group* ⇒ ■ ⇒ Select a group



6 Press 🗟 (OK)

2

Setting a Picture

- From Phone Book Entry Window, select
 - 2 Select Phone Memory or Memory Card

 →
 - To capture an image: Select *Take Picture* → ■ → Take a picture → ■
 For details on taking pictures, see page 7-3.
- 3 Select *Pictures* or *Digital Camera* → ■

 ⇒Select a picture → (twice)
 - If the selected picture does not fit in the prescribed frame, adjust the picture size (page 7-9).



• If Details of a picture file (page 2-31) indicate that the file is *Unavailable* for forwarding, the picture file cannot be set as Picture.

Setting Personal Ringtones

- From Phone Book Entry Window, select

 Options

 ■



- 3 Select Phone Memory or Memory Card

 ⇒
 - To set a preinstalled ringtone:
 Select *Patterns* or *Melodies* → →
 Select a ringtone pattern → ■
 - If you select Same as Phone, the ringtone will be the same as the corresponding setting of Sounds.
- 4 Select a folder → → Select a ringtone pattern → (twice)

Secret Entries

Set specific Phone Book entries as secret so other people cannot see them.

- From Phone Book Entry Window, select

 Options → ■
- 2 Select Secret $\Rightarrow \bullet \circ N \Rightarrow \bullet$



- indicates a secret entry.
- To view secret entries, switch Secret Mode (page 11-4) to Show.

Saving Numbers from Call Log

Press 🖭 / 🕒



- To switch between Dialed and Received, press □/□.
- Select a phone number $\Rightarrow To \ Phone$ $Book \Rightarrow \square \Rightarrow Add \ New \Rightarrow \square$
 - To add a phone number to an existing Phone Book entry, select Add and select an entry.

Using Phone Book

Calling from Phone Book

Press 📮



- Press or or to access the previous or next index tab.
- 2 Select an entry→
 ■



- Press or to scroll entries within the same index tab.
- 3 Select a phone number⇒ 🖊

• In Standby, press and hold a number key (13 to 3) to access the corresponding index tab. Then, enter the first character(s) of the name to find an entry.

Changing Search Mode



2 Select a search mode ⇒ ■

• Select from the following search modes. Tab/Reading (default):

Enter reading (or partial reading) to search entries or select tab to scroll through entries.

List View:

Select tab then scroll through entries.

By 1-Touch*:

Search entries by the first letter of names. Press corresponding number key (1 % to 9 5).

By Reading:

Enter reading (or partial reading) to search entries.

By Memory No.:

Search by entry number (Memory Number). Enter target entry number.

By Phone No.:

Search by entering a phone number.

Group Filter:

Search entries by Group.

* 2夕ッチ検索 (By 2-Touch), if 言語選択 (Language) is set to 日本語 (Japanese). In By 2-Touch search, select the first character of a reading (Press a key from to 5), to 5),

More Features



Phone Book Entry Functions

page 2-29)

Customizing by Entry

(page 2-30)

Managing Phone Book

(page 2-30)



Phone Book Settings

page 13-35)

- Change Storage Location
- Prohibit Use of Phone Book

Settings for Phone Book Groups

(page 13-35)

Edit a Group Name/Group Icon

Data Folder

Data Folder Structure

Use Data Folder to save and manage files on handset. Files are saved to folders by file format.

Folders ————————————————————————————————————							
Pictures	Digital Camera*1	Ring Song·Tone	S! Appli	Music			
Picture files including those taken with the camera & My Pictograms folder	Pictures taken in Digital mode	Sound files such as melodies, sounds recorded with Voice Recorder	Downloaded S! Appli	Downloaded music files, Chaku-Uta Full®			
Videos	Books	Templates	Flash(R)	Main Menu*2			
Video files including those recorded with the camera	Electronic comic books, photo albums, etc.	Graphic Mail templates	Flash® image files & Flash(R) Tones folder	Image files for Main Menu			
Gamendeco	Keitaideco	Mini Tool* ²	Other Documents	T			
Icon/image files for screen decoration	Keitaideco files	Mini Tool image files & Mini Photo folder	Files other than those listed above, such as vObjects, document files, etc.				

- *1 Shown only in memory card Data Folder.
- *2 Shown only in handset Data Folder.
- Files saved on handset may be altered or lost by improper use, accidents, or mechanical failure. We recommend that you make backups of your important files.
- 🖺 indicates files requiring content usage rights. Press 🕝 and select *Buy Key* to obtain a content key.

Opening Files

7

Press ■ → Data Folder → ■



2 Select a folder⇒■



3 Select a file⇒■

Using Download Links

Some folders contain a link to Yahoo! Keitai. Use links to access Yahoo! Keitai and download content.

Slideshow

- **1** Open Data Folder*⇒Pictures* ⇒
- 2 Select a file⇒ → Change View → ■



- 3 Select Slideshow⇒■
 - To end slideshow, press

Managing Files and Folders

Creating a Folder

Folders can be created in *Pictures*, *Ring Song* • *Tone*, *Music*, *Videos*, *Books*, *Flash(R)*, *Main Menu*, *Gamendeco*, *Mini Tool* and *Other Documents*.

- ① Open Data Folder⇒Select a folder ⇒ ■
- 2 Press → Create Folder → ■



3 Enter a folder name⇒ ■

Moving Files

- Open Data Folder⇒Select a folder

 →

 ■
- 2 Select a file⇒¬¬Move→■
- 3 Select One⇒■
 - To move multiple files:
 Select Select Multi ⇒ Select files ⇒
 Image: Select files ⇒
 - To move all files:
 Select All → Denter Handset Code



- 4 Select *Phone Memory* or *Memory Card*⇒ ■
- 5 Select a destination folder⇒
 - To move files to a new folder: Press (Create) → Enter a folder name
- When you move a still picture file taken in Digital mode to memory card, or a music file in MPEG-4 format (.3GP, .MP4 and .M4A) to another folder, select the fixed folder first and then select a destination folder.

Setting Folder Security

Set Security Lock to a folder to require Handset Code entry when accessing files in the folder.

- Open Data Folder⇒Select a folder you created⇒ ¬Security Lock⇒ ■
- 2 Enter Handset Code⇒ON⇒■

More Features



Opening Files

(page 2-31)

Using Files

(**>** page 2-31)


Managing Files/Folders

(page 2-33)

Memory Card

Save files to memory cards.

- This manual refers to a microSD memory card as "memory card".
- Handset may not read/write files when battery level is low.
- Never remove memory card or battery while accessing/formatting files. Doing so may damage memory card resulting in lost files.
- Files on memory cards may be altered or lost from improper use, accidents or mechanical failure. Back up important files.
- Do not put labels or stickers on memory cards.
- For details on saving files to a memory card, see the corresponding explanation for each function.
- Handset supports memory cards with a storage capacity of up to 2 GB (as of May 2008). There is no guarantee that all memory cards will work with handset.
- Do not use excessive force to open Memory Card Slot cover. Doing so may damage the cover.

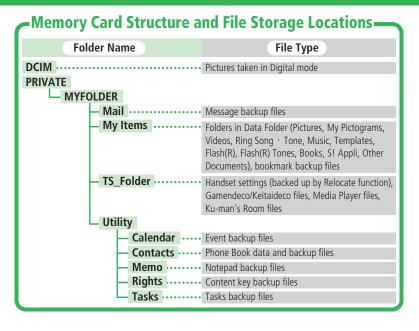

Inserting Memory Card

Insert a memory card after turning off handset. Otherwise, files on the memory card may be lost.





- Pull out TV Antenna (①) and open Memory Card Slot cover (②)
- 2 Insert memory card until it locks into position (gold terminal should face down) (③)
- 3 Close Memory Card Slot cover (4) and stow TV Antenna (5)

Removing Memory Card

Turn handset off and open Memory Card Slot. Gently push to eject card. Slide card out gently.

 A memory card may pop out abruptly when removing it from handset. Be cautious when ejecting a memory card.

Formatting Memory Card

Formatting memory card deletes all data on the memory card.

- If a memory card is formatted on another device, it may not work properly with handset.
- Press ⇒Settings → →Memory



2 Select Format Card ⇒ ■ ⇒Enter Handset Code ⇒ YES → ■

Opening Memory Card Data

Press ■ ⇒Data Folder ⇒ ■ ⇒ □



2 Select a folder⇒
■



3 Select a file⇒

■

More Features



Opening Files



Advanced Features

Display

)

Menus

From Main Menu page 2-2
Phone Settings Window page 2-3

Reset Main Menu (Icons/Wallpaper)

Main Menu \longrightarrow Reset Options \rightarrow \longrightarrow YES \Rightarrow

Reset Multi Selector Assignment

Rename Shortcut Titles

 You cannot edit the titles of preset Shortcut functions.

Customize Shortcuts Menu Icons

Select a function →
 Select a functi

■Setting a Preinstalled Icon

Change Icon → ■ → Preset Icons → ■ → Select an icon → ■

■ Setting an Image in Data Folder/Memory Card

Change Icon → ■ → Phone Memory or Memory Card → ■ → Pictures → ■ → Select an image → ■ → ₹ to compose the image → ■ → ▼

 You cannot change the icons of preset Shortcut functions.

■Moving Icons

Arrange Icons → ■ → Select a destination →

Delete Shortcut Icons

■Deleting One Entry

 $Delete \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

■Deleting All Entries

Delete All⇒ ■ ⇒Enter Handset Code ⇒**YES** ⇒ ■

• You cannot delete Main Menu icon.

Simple Mode

From Main Menu page 2-6

Change Main Menu Pattern

Main Menu ► Menu Patterns ► Select a pattern ►

Show Main Menu Guide

Open Full Menu in Simple Mode

Main Menu **Full Menu** ⇒ ■

Active Window

From Shortcut Mode page 2-8
Communication Mode page 2-8

Always Show Active Window

■ Settings → ■ Display → ■ Idle Screen → ■ Main Display → ■ Active Window → ■ → ON (Always) → ■

 When *OFF* is set, Active Window does not open even by pressing in Standby.

Set Shortcut Mode View

Shortcut Mode

⇒ Settings ⇒ Templates

⇒ Member/News, Member, News or

News: No Image ⇒ □

Edit Members List

Communication Mode $\begin{tabular}{ll} \sim & Edit \ List \end{tabular} \begin{tabular}{ll} \Longrightarrow & Edit \ List \end{tabula$

To add a new member, select *Edit List*, then *Not Registered*, and press

Change Members List Icons

Communication Mode Select a member → → Change Icon → ■ → Phone Book or Icon → ■ → Select an icon → ■

Show/Hide My Status

Communication Mode $\[\] \Rightarrow Edit \ List \Rightarrow \[\] \Rightarrow My$ Status ON or My Status $OFF \Rightarrow \[\] (ON/OFF)$

Check a Member's Status

Text Entry

Insert Line Break

In a text entry window, enter characters and convert properties to insert line break

- To insert line break to the left of a determined character, access line break from the symbol list (page 2-11).
- Line break is unavailable in some text entry windows.

Insert a Space

In a text entry window, 🕒

 To insert a space to the left of a determined character, select a space from the symbol list (page 2-11).

Use Single Kanji Conversion

Example: Entering 🚪 (すずき)

In a text entry window, enter ### (twice)→
Select ## from the suggestion list→
■

 When 學環構 (Single Kanji Conversion List) does not appear in a text entry window, the entered characters cannot be converted with Single Kanji conversion.

Convert a Name One Character at a Time

Example: Entering *亜*線(あかり)

Conversion Prediction/Phrase Prediction

Handset is equipped with MobileRUPO[™], Toshiba's kana-kanji conversion engine.



* MobileRUPO[™] is a trademark of Toshiba Corporation.

■Using Conversion Prediction

Example: Entering お父さん

In a text entry window, $\boxed{1}$ (five times) \Rightarrow $\boxed{4}$ (five times) \Rightarrow $\boxed{4}$ to select $\delta \chi \dot{c} h \Rightarrow$ $\boxed{\bullet}$

■Using Phase Prediction

Example:

Entering the same phrase 液分でライブ that you have entered before

Save Original Emoticons

In a text entry window, $\square \rightarrow (^{-}) \rightarrow \square \rightarrow$ $User\ Created \rightarrow \square \rightarrow Select\ an\ empty\ item \rightarrow$ $\square \rightarrow Create\ an\ emoticon \rightarrow \square$ (twice)

Text Entry Functions

Font Size

In a text entry window, ✓ → Customize → ■

→ Font Size → ■ → Select a font size → ■

Insert Phone Book Information

In a text entry window, w → Insert → ■

■Inserting Phone Book Information

Phone Book → Select a Phone Book entry
→ Select an item → ■

■Inserting Other Information

My Details, Phrases, Emoticon, Signature, Notepad, Message Box of URL History ⇒ ■

Save Text to Notepad

Scroll to beginning of text range > Start >

Move cursor to end of text > To

Notepad > Select an entry | Select an entry > To

• Used entries will be overwritten.

Save Numbers/E-mail Addresses to Phone Book

Scroll to beginning of text range⇒ ⇒ Start ⇒ ■ → Move cursor to end of text⇒ ■ → To Phone Book → ■ → Add New or Add → ■

- See "Creating New Entries" (page 2-17) for entering other items.
- If selected item contains characters or symbols not savable to Phone Book, the entry is not saved.

Reconvert Determined Text

Scroll to beginning of text range⇒
→ Start
→ → Move cursor to end of text→ →

Convert → □

■Converting Hiragana to Kanji

Kana/Kanji → ■ → Select a word from the suggestion list → ■

- ■Converting All into Full/Half Width
 Full Width or Half Width
 ■
- ■Converting All Roman Characters into Upper/Lower Case

Upper Case or *Lower Case* ⇒

Replace Text with Clipboard Entry

Scroll to beginning of text range Sant

Move cursor to end of text

Replace Select text from clipboard

Replace

Word List

Delete All Entries

In a text entry window,

Word List

Delete All

Enter

Handset Code

YES

Phone Book

Phone Book Entry Functions

From Phone Book Entry Window page 2-17

Save Other Information

■Address/Job Title/Company

Phone Book Entry Window Personal Info. → ■ → Select an item → ■ → Enter an item → ■ → 🗟

■Birthday

Phone Book Entry Window **Personal Info.** → ■ → **Birthday** → ■ → Enter birthday → ■ ⇒ 🗟

• Enter four digits for the year and if the month or date is a single digit, prefix it with a 0.

■URL

Phone Book Entry Window $Personal\ Info. \Rightarrow \blacksquare \Rightarrow URL \Rightarrow \blacksquare \Rightarrow Enter\ a\ URL \Rightarrow \blacksquare \Rightarrow Home\ or\ Business \Rightarrow \blacksquare \Rightarrow \boxtimes$

■Note

Phone Book Entry Window *Note* → ■ → Enter a reminder → ■

■Memory Number (Entry Number)

Phone Book Entry Window Select the current entry number → ■ → Enter a new entry number → ■

Set Location Information

Phone Book Entry Window Personal Info. ⇒ ⇒
No Location ⇒ ■

■Setting Your Current Position

 $Position \Rightarrow \blacksquare \Rightarrow Perform positioning \Rightarrow \blacksquare \Rightarrow \boxtimes$

■Setting from Location Logs/My Locations

Location Logs or My Locations

Select location information

Select location

Check Number of Entries

- → Phone Book → → Memory Status →
- Press ☞ (Count) / ☞ (Rate) to switch between the number of entries and the usage rate.
- When Secret Mode is set to Hide, secret entries are excluded from the number of entries.

Customizing by Entry

Ringtone Volume

Phone Book Entry Window Options → ■ → Voice
Call, Video Call, Message, Circle Talk or
Notification → ■ → Ringtone Vol. → ■ →
Options or Same as Phone → ■ → Set
volume level → ■

External Lights/Vibration

■External Lights

ExternalLight → ■ → Select a pattern, **OFF** or **Same as Phone** → ■

■Vibration

Vibration → Select a pattern, *OFF* or *Same as Phone* →

Ring Time for New Message/Notification Ringtone

Phone Book Entry Window Options → ■ →

Message or Notification → ■ → Duration →

■ → Set Duration, 1 Cycle or Same as

Phone → ■ → Enter a ring time → ■

Filter Messages

Phone Book Entry Window *Options* → ■ → *Message* → ■ → *MessageFolder* → ■ →

Select a folder or *None* → ■

Show/Hide Caller/Sender Name (External Display)

Phone Book Entry Window Options ⇒ ■ ⇒Ext.

Display ⇒ ■ ⇒ON, OFF or Same as Phone

⇒ ■

Customize Incoming Event Alerts by Group

 \blacksquare \rightarrow *Phone Book* \rightarrow \blacksquare \rightarrow *Group* \rightarrow \blacksquare \rightarrow Select a group \rightarrow \blacksquare \rightarrow *Options* \rightarrow \blacksquare

• See "Setting Personal Ringtones" (page 2-18) for following operations.

Managing Phone Book

Switch Phone Book (USIM/Handset/ Memory Card)

- The storage location of each Phone Book entry is indicated by the following icons:
 - Handset
 - USIM Card
 - Memory card

Sort Entries

 $\square \Rightarrow \boxtimes \Rightarrow Sort \ by \Rightarrow \square \Rightarrow Alphabet \ or \ Birthday \Rightarrow \square$

 Available when Search Mode (page 2-20) is set to *List View*, *By 1-Touch* or 29ッチ検索 (By 2-Touch).

Edit Entries

 \square Select a Phone Book entry \square Select an item \square Edit the item \square Save or Save as New \square

Copy/Move Entries

■Copying/Moving One Entry

Select a Phone Book entry → Copy or

Move → → One → → Phone Memory,

USIM or Memory Card → ■

■Copying/Moving Multiple Entries

■Copying/Moving All Entries

 The items you can save to Phone Book differ depending on the storage location (handset, USIM or memory card).

Delete Entries

■Deleting One Entry

■Deleting Multiple Entries

 $\bigcirc \longrightarrow \bigvee \Rightarrow Delete \Rightarrow \bigcirc Select \ Multi \Rightarrow \bigcirc \Rightarrow Select \ Phone \ Book \ entries \Rightarrow \bigcirc \Rightarrow YES \Rightarrow \bigcirc \Rightarrow \bigcirc \Rightarrow YES$

■Deleting All Entries

 $\bigcirc \longrightarrow \square \longrightarrow Delete \longrightarrow \square \longrightarrow All \longrightarrow \square \longrightarrow Enter$ Handset Code $\longrightarrow YES \longrightarrow \square$

Data Management

From Data Folder Window page 2-22

Opening Files

Change Data Folder View

File Properties

Data Folder Window Select a folder → Select a file → Details → ■

Check Available Memory (Data Folder/ Memory Card)

Data Folder Window *Memory Status* ⇒ ■

 Press at to toggle between handset and memory card.

Using Files

Picture Files

Access Data Folder from each function*⇒

*Pictures → ■ → Select a file → ■ → to compose the image → □ → ■

- * See the following: Customizing Main Menu icon/wallpaper (page 2-3), setting wallpaper (page 2-7), setting incoming call/message images (page 13-2), setting video call images (page 13-23), setting Phone Book picture (page 2-18)
- For adjusting the picture size, see page 7-9.
- If a GIF animation is selected, only the first frame (still image) is shown.

Melody/Music/Video and Flash® Files

Access Data Folder from each function*⇒**Ring Song*****Tone**, **Music**, **Videos**, **Flash(R)** or **Flash(R) Tones**⇒ ■ → Select a file → ■ (twice)

* See the following: Sound settings (page 13-11), setting wallpaper (page 2-7), setting event/task/Reminder alarm tones (page 9-24), setting alarm tone (page 9-28), setting personal ringtones (page 2-18)

Customize User Interface (Keitaideco)

Data Folder Window **Keitaideco** → Select a file → YES → ■

Wide View is switched to ON in Standby.

v0bjects

- By converting data such as Phone Book entries, Calendar (events) and tasks into vObject file format, you can exchange those data with other vObject compatible SoftBank handsets and PCs.
- vObject compatible software is required to use vObjects on a PC or other device.
- When a vObject includes many characters, some of the data may not be able to be sent or received.
- Depending on the software used, some vObject characters may become illegible.

■Creating a vObject

Open a function: Phone Book (page 2-16)/
Calendar (page 9-4)/Tasks (page 9-5)/Message
(page 4-2)/Bookmarks (page 5-6)/Notepad (page
9-8) Select a file to be saved as vObject Seport One One Phone Memory,
Data Folder or Memory Card Select
a folder

- To save all files, do the following.

 While selecting files to be saved,

 Export

 All

 ■
- ■Importing vObjects into Respective Functions

Data Folder Window Other Documents ⇒ ■ ⇒
Select a vObject ⇒ □ ⇒ To Phone Book, To
Cal./Tasks, To Messages, To Bookmarks or
To Notepad ⇒ ■ ⇒ One ⇒ ■

● To import multiple vObjects, do the following.

Select Multi → ■ → Select vObjects → ■ →

Managing Files/Folders

Change Folder and File Names

■Changing Folder Name

Data Folder Window Select a folder you created → → Rename Folder → ■ → Enter a folder name → ■

 If Security Lock is set to the folder, Handset Code entry is required after selecting *Rename* Folder.

■Changing File Name

Data Folder Window Select a file → ▼ → Rename → Enter a file name → ■

 If you change the file name of a music or movie file, its title will not be changed.

Change File Order

Data Folder Window Select a folder → ■ → Select a file → □ → Change View → ■ → Sort by → ■ → Select a criterion → ■

• Files in the memory card cannot be sorted by title.

Move a Folder

Data Folder Window Select a folder you created → Wove Folder → ■ → Enter Handset Code

When moving a folder created in Ring Song •
 Tone or Music, do the following.
 Phone Memory or Memory Card ⇒ □ ⇒
 Ring Song • Tone or Music ⇒ □

Copy Folders and Files

■Copying a Folder

Data Folder Window Select a folder you created →

✓ → Copy Folder →

→ Enter Handset Code → Phone Memory or Memory Card →

□

 When copying a folder created in Ring Song • Tone or Music, select a destination folder from Ring Song • Tone or Music.

■Copying One File

Data Folder Window Select a folder \Rightarrow \Rightarrow Select a file \Rightarrow \Rightarrow \Rightarrow Celect a file \Rightarrow \Rightarrow \Rightarrow Celect a \Rightarrow \Rightarrow Select a destination folder \Rightarrow \Rightarrow Select a

■Copying Multiple Files

Data Folder Window Select a folder → □ → □ → Copy → □ → Select Multi → □ → Select files → □ → □ → Phone Memory or Memory Card → □ → Select a destination folder → □

■Copying All Files

Data Folder Window Select a folder → □ → □ → Copy → □ → All → □ → Enter Handset Code → Phone Memory or Memory Card → □ → Select a destination folder → □

- If Details indicate that the file is *Unavailable* for forwarding, the file cannot be copied.
- When you copy a still picture file taken in Digital mode to memory card, or a music file in MPEG-4 format (.3GP and .MP4) to another folder, select the fixed folder first and then select a destination folder.

Delete Folders and Files

■Deleting a Folder

Data Folder Window Select a folder you created → Delete Folder → ■ →Enter Handset Code → YES → ■

■Deleting One File


■Deleting Multiple Files

Data Folder Window Select a folder $\Rightarrow \square \Rightarrow \square$ Delete $\Rightarrow \square \Rightarrow$ Select Multi $\Rightarrow \square \Rightarrow$ Select files $\Rightarrow \square \Rightarrow \boxtimes \Rightarrow YES \Rightarrow \square$

■Deleting All Files

Data Folder Window Select a folder $\Rightarrow \mathbb{P} \Rightarrow \mathbb{P}$ Delete $\Rightarrow \mathbb{P} \Rightarrow \mathbb{P}$ Enter Handset Code $\Rightarrow YES \Rightarrow \mathbb{P}$

Making Calls · · · · · · · · · · · · · · · · · ·	3-2
Voice Call·····	3-4
Answering Machine · · · · · · · · · · · · · · · · · · ·	3-6
Video Call · · · · · · · · · · · · · · · · · ·	3-7
Call Log · · · · · · · · · · · · · · · · · · ·	3-9
Viewing Dialed Numbers and Received Calls · · · · · · · · · · · · · · · · · ·	3-9
Optional Services · · · · · · · · · · · · · · · · · · ·	3-10
Overview · · · · · · · · · · · · · · · · · · ·	3-10
Advanced Features · · · · · · · · · · · · · · · · · · ·	3-12

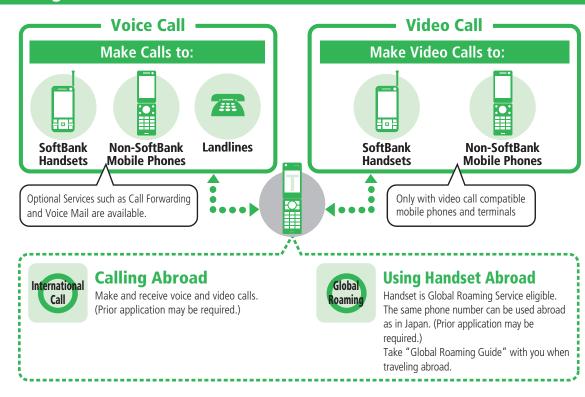

Checking Your Phone Number

Press $\blacksquare \Rightarrow Phone \ Book \Rightarrow \blacksquare \Rightarrow$ My Details ⇒ ■



- Alternatively, press ⇒ □ → My Details
- To check your phone number during a call: Press $\longrightarrow My$ **Details** \Longrightarrow \blacksquare

About Emergency Calls

Emergency calls (110 (police), 119 (fire and ambulance) and 118 (coast guard)) are available, even when Password Lock and/or Call Barring is active.

• If a video call is made to an emergency service, the call becomes a voice call.

Emergency Positioning Request

Caller's location is notified to emergency agencies for emergency calls (110, 119 and 118). Positioning Information uses GPS information, where available, or base station information*.

- * If handset signal is received by a distant base station, Positioning Information may not be accurate
- GPS information is recorded as Location Logs (page 9-27).
- Positioning Information may be inaccurate, depending on the caller's location and signal strenath.
- This system may not operate if the responding agency has not installed the proper system.
- If emergency numbers (110, 118 and 119) are dialed with the 184 prefix, Positioning Information is not provided. However, emergency agencies may retrieve location information in life-threatening cases.
- No application fees or transmission fees apply.
- This system is unavailable while using handset abroad.

More Features



My Details

page 3-12)

Making a Voice Call

🚹 Enter a phone number

- Include the area code for all numbers.
- Press or press and hold to delete the entire number and return to Standby. Press to delete the last number entered.
- For details on making a call from Phone Book, see page 2-19.



Dial Window

2 Press 🖍



Voice Call Window

- Use 🔁 during a call to adjust the earpiece volume.
- 3 Press 🚾 to end the call
- Antenna is built into handset. Signal sensitivity may be reduced by touching/ covering Internal Antenna area (page 1-3).
 Do not cover this area by affixing stickers, or any other items. Doing so may prevent you from making/receiving calls, sending/ receiving messages or accessing the Web.
- TV Antenna is only for receiving television signals. Stow the antenna when TV is not activated
- The orientation and location of handset may affect signal strength.
- When Cost Limit is set and the limit is reached, outgoing voice calls are blocked. If the limit is reached during a call, the call ends.

Answering a Voice Call

When a call arrives, incoming image, External Lights, ringtone and/or vibration notify you.

- Press / when a call is received
 - Use 🚺 to adjust the ringtone volume while receiving an incoming call.
 - To stop the ringtone while receiving an incoming call, press and hold
- Press 🗯 to end the call

3 പ്ല

Speed Dial

Abbreviated dialing is possible for phone numbers saved in handset Phone Book.

- Tenter the last two digits of entry number 0010 to 0099⇒ ✓
 - For entry numbers 0000 through 0009, enter the last digit only and press <a>_.

Calling Abroad from Japan

Make international calls from Japan.

- Prior application may be required.
- Tenter a phone number⇒ → → Intl. Calls → ■



Country Number List Window

- 2 Select a country⇒ ⇒ 🗷
- 3 Press 🖭 to end the call

Calling While Abroad (Global Roaming)

Make international calls from a visiting country.

- From Country Number List Window, select a country → → ✓
- Press re to end the call

Calling within Visiting Country

Do not omit 0 from area code or enter country code.

Manual Entry of Country Codes

- Press
 → Press and hold

 "+" is entered.
- 2 Enter a country code
 - See "Global Roaming Guide" for country codes.
- 3 Enter a number with area code⇒ ✓
 - Omit the first 0 from area code except calls to Italy.
- 4 Press 🗯 to end the call

Answering Machine

Record callers' messages to handset when you are unable to answer voice calls.

Press and hold

Answering Machine is activated.

 When recording capacity becomes full or call ends, recording stops automatically.

• To cancel Answering Machine, press and hold

 Press and hold press or to activate Answering Machine while receiving an incoming call.

 Answering Machine is not available for video calls and Call Waiting.

 When five messages are recorded, Answering Machine is disabled. Delete messages as follows

Press Select a message Delete

 Messages may not be recorded when an S! Appli is set as Screensaver.

 When Manner Mode is set in Drive Mode, you cannot cancel Answering Machine.

 When Manner Mode is set in Original Mode, Answering Machine setting in Original Mode is given priority. To set or cancel Answering Machine while in Original Mode, change the Answering Machine setting in Original Mode.

Playing Messages

Press → Select a message → ■



More Features



Outgoing Call Functions

(page 3-12)

Incoming Call Functions

Functions During Calls

(page 3-13)

Answering Machine Functions
(▶ page 3-13)

,

ilia.

(> page 3-13)

Response Settings for Incoming Calls (▶ page 13-9)

 Answer Incoming Calls by Opening Handset (Open to Talk)

Set Any Key Answer

Answering Machine Settings

(page 13-9)

• Set Answering Machine Response Time

International Call Settings

(> page 13-22)

Change International Code

- Add Country Codes to Country Number List
- Set Operator to Use
- Change Priority Order of Operators
- Add an Operator

Earphone-Microphone Settings

(page 13-24)

- Save a Phone Number for Earphone-Microphone Call
- Set Auto Answer

Video Call

Make video calls to other compatible mobile phones.

 Handset does not send your live image during video calls.

Making a Video Call

📘 Enter a phone number and press 🖼



The other party answers your video call.



Video Call Window

 Use during a call to adjust the speaker (earpiece) volume.

Press re to end the call

 When Cost Limit is set and the limit is reached, outgoing video calls are blocked. If the limit is reached during a call, the call ends.

Video Call Icons

- P Video Call
- Mute My Voice
- Mute All
- Faster Moving Mode
- Standard Mode
- **1** Better Picture Mode
- Handsfree On
- Handsfree (Bluetooth® connection)
- Image Transfer Off
- Sending Picture
- Voice Connection Established
- □ Video Connection Established

Answering a Video Call

When a video call arrives, incoming image, External Lights, ringtone and/or vibration notify you.

Press ✓//• when a video call is received

A confirmation window appears. Select **YES** and press • to send live camera image.

Press real to end the call

Call

3

<u>ല</u>

Outgoing Call Functions

(page 3-12)

Incoming Call Functions

(page 3-13)

Functions During Calls (Voice & Video)

(page 3-13)

Functions During Calls (Video)

(Page 3-15)



Video Call Settings

(page 13-23)

- Set Alternative Picture
- Set Incoming Image Quality
- Add a Phone Number to Auto Answer List
- Set Mute
- Set Audio Output
- Set Hold Image

Call Log

Viewing Dialed Numbers and Received Calls





Call Log Window

- Press \(\bigcup \) / \(\bigcup \) to switch between Dialed (outgoing call log) and Received (incoming call log).
- Press (Lange) to switch between outgoing S! Circle Talk call log and voice/ video call log.
- Press
 (♣/♣) to switch between incoming S! Circle Talk call log and voice/ video call log.

More Features



Call Log Functions

(page 3-15)

Functions for Call Time and Cost

(page 3-16)



Call Cost Settings

(page 13-22)

- Set Currency & Exchange Rate
- Show Call Cost After Each Call
- Set Maximum Cost Limit

- For details, contact SoftBank General Information (page 14-46).
- Operations are unavailable when out of range.

Call Forwarding	Forward calls to a preset phone number.
Voice Mail	Transfer calls to Voice Mail Center when handset is out of range or line is busy. Access messages from handset or touchtone phones (page 3-11).
Call Waiting [*]	Place a call on hold to receive another incoming call (page 3-17).
Multiparty Call*	Make or receive a call during a call and talk to multiple parties simultaneously (page 3-17).
Call Barring	Restrict outgoing/incoming calls and SMS (page 3-17).
Caller ID	Show or hide your phone number when making calls (page 3-12).

^{*} Separate application required.

Activating Call Forwarding

Press $\blacksquare \Rightarrow$ Settings $\Rightarrow \blacksquare \Rightarrow$ Call Settings \rightarrow \blacksquare \rightarrow Call Services \rightarrow \blacksquare



Call Service Settings Menu

2 Select VM/Call Fwd⇒ ■



Voice Mail/Call Forwarding Menu

- Select Call Fwd $ON \Rightarrow \blacksquare \Rightarrow$ Select a type of call⇒ ■
- 4 Select All Calls or No Answer $\Rightarrow \blacksquare \Rightarrow$ Set response time (skip this step for All Calls)⇒ ■
 - All Calls: Forwards calls immediately. No Answer: Forwards calls after set ring time elapses.



- 5 Select Phone Book, Phone Number or $Call \ Log \Rightarrow \blacksquare \Rightarrow Select \ or \ enter \ phone$ number⇒ (twice)
 - Phone Book: Search from Phone Book. Phone Number: Enter number directly. Call Log: Select number from Call Log.
- 6 Connect to the network



7 Press 🔳

Activating Voice Mail

From Voice Mail/Call Forwarding Menu, select *Voice Mail ON* ■



- 2 Select All Calls or No Answer → →
 Set response time (skip this step for
 All Calls) →
 - All Calls: Forwards calls to Voice Mail Center immediately.
 No Answer: Forwards calls to Voice Mail Center after set ring time elapses.
- 3 Connect to the network



4 Press 🔳

- Call Forwarding and Voice Mail cannot be set simultaneously. If one service is activated, the other will be deactivated (Voice Mail is available with Call Forwarding for video calls).
- Receiving Calls After Activating Call Forwarding/Voice Mail

Press while the ringtone is sounding to talk to the caller. If you set *All Calls*, handset does not receive calls, but they are forwarded to the preset phone number or Voice Mail Center.

Voice Mail Service Options
 Access the Personal Options menu from
 Voice Mail Center to set/customize outgoing message. For details, contact SoftBank General Information (page 14-46).

Missed Call Notification

Missed Call Notification informs you of calls missed while handset was powered off, out of range or engaged. Once handset is powered on or in signal range, notification appears in Information Prompt. Activate Voice Mail in advance to use this feature.

- 1 Enter 1414⇒ 🖍
 - Follow the voice prompts.
- From overseas, call +819066514191 (international charges apply).

Checking Messages

- From Voice Mail/Call Forwarding Menu, select Listen VM⇒ ■
- From overseas, call +819066514170 (international charges apply).

Deactivating Call Forwarding/Voice Mail

From Voice Mail/Call Forwarding Menu, select *DeactivateAll* ■ Call Forwarding and Voice Mail are

- If Call Forwarding/Voice Mail is not activated, forward incoming calls as follows.
 - · Voice call: Press (Divert) while handset is ringing/vibrating
- · Video call: Press 🗹 > Divert while handset is ringing/vibrating

More Features

deactivated



Functions for Optional Services



My Details

Save Information to My Details [Save My Details]

■ → Phone Book → ■ → My Details → ■

→ Select an item → \(\times \) → Edit → ■ → Enter information → ■ → \(\times \)

■Entering a Name

■ Phone Book ■ My Details ■ Name ■ Select an item ■ Edit ■ Enter a name ■ ■ Select (twice)

Use Location Information

[Personal Info.]

■ → Phone Book → ■ → My Details → ■ → Personal Info. → ■ → Location Exist → □ → Open Map, Location Mail, Add Location of Delete → ■

 To save a location, select *Personal Info.* and then do the following.

No Location \Rightarrow $x_1 \Rightarrow Add Location \Rightarrow \blacksquare$

Outgoing Call Functions

From Dial Window page 3-4
Voice Call Window page 3-4
Video Call Window page 3-7

Redial

[Dialed Numbers]

 \blacksquare Select an entry \blacksquare \blacksquare to end the call

- To make an S! Circle Talk call, press and hold
 when My Status is *Online* (page 10-4).

Call from Received Calls

[Received Calls]

 \Longrightarrow Select an entry \Longrightarrow \Longrightarrow to end the call

• To make a video call, select an entry and press ...

Show/Hide Caller ID

[Show My ID]

Dial Window ₩ → Hide My ID or Show My ID

Set Earpiece Volume

[Earpiece Volume]

■ → Settings → ■ → Sounds → ■ →
Earpiece Vol. → ■ → Set volume level → ■

Set Caller ID On/Off

[Show My Number]

■ ⇒Settings → ■ ⇒Call Settings → ■ ⇒
Show My Number → ■ ⇒Select Show My
ID, Hide My ID or OFF → ■

- If you select *OFF*, the settings you chose when you subscribed to Caller ID service apply.
- Caller ID setting has the following options, and they are given priority in the order of ① to ③ if they are all set or operated.
 - ① Dial Window → Hide My ID or Show My ID → ■
 - ② Setting for Show My Number
 - $\ensuremath{\mathfrak{G}} \ensuremath{\mathsf{Application}} \ensuremath{\mathsf{for}} \ensuremath{\mathsf{Caller}} \ensuremath{\mathsf{ID}} \ensuremath{\mathsf{service}}$

Make Voice Calls Using Earphone-Microphone

[Earphone-Microphone Call]

- Make one-touch calls from Earphone-Microphone. Before making a call, save a phone number to Earphone-Microphone (page 13-24).
 Insert Earphone-Microphone plug into earphone jack Press and hold the microphone switch to dial the set phone number Press and hold the microphone switch to end the call
- Press and hold the switch again to cancel dialing.
- Press FOWER to end the call.

Incoming Call Functions

Reject an Incoming Call

[Reject Calls]

- when a call is received
- To reject an incoming video call, press w and select *Reject Call*.

Place Incoming Call on Hold

[Hold Answer]

when a voice or video call is received

- The caller is charged for the call while placed on hold.
- Pressing while the caller is on hold terminates the call.

 When you answer a video call that has been placed on hold, the call is connected without the confirmation window asking whether to send the camera image.

Answer Calls with Earphone-Microphone [Earphone-Microphone Answer]

Insert Earphone-Microphone plug into earphone jack Press and hold the microphone switch when a call is received Press and hold the microphone switch to end the call

• Press rower to end the call

Answer Incoming Video Calls Automatically

[Auto Answer]

- When Auto Answer is set to ON, video calls received from phone numbers on Auto Answer List are answered automatically without having to press a key, if handset is open.
- Regardless of Manner Mode setting, the speaker will beep and the video call is automatically connected.

Answering Machine Functions

Delete Recorded Messages

■ \Rightarrow Settings \Rightarrow ■ \Rightarrow Call Settings \Rightarrow ■ \Rightarrow Ans Machine \Rightarrow ■ \Rightarrow Recordings \Rightarrow ■ \Rightarrow Select a message \Rightarrow \Rightarrow Delete \Rightarrow \Rightarrow YES \Rightarrow ■

Functions During Calls

Voice & Video Calls

Mute Audio During a Call

[Mute]

■Voice Calls

■Video Calls

• Press

to cancel mute during a call.

Place a Call on Hold

[Hold Call]

Voice Call Window / Video Call Window → Hold→

 Subscription to Call Waiting (page 3-17) or Multiparty Call (page 3-17) is required to use the Hold feature for voice calls.

Voice Calls

Record Other Party's Voice During a Call [Voice Record During Calls]

Voice Call Window **Y** → Voice Record → ■

- Recording stops when the maximum time is reached or the call ends. To stop recording manually, press
- To play a recording, do the following.
 → Tools → □ → Useful Tools → □ →
 Voice Recorder → □ → Recordings → □
 → Phone Memory or Memory Card → □
 → Select a file → □

Save Number Memo During a Call [Save Number Memo]

Voice Call Window Press keypad keys

- After the call ends, the number memo is automatically saved.
- You can enter the following numbers and symbols.

0 to 9, X, #, +, -, P

● To check a number memo, do the following.

■ → Tools → ■ → Useful Tools → ■ → Number Memo → ■ → Select a number memo → ■

Talk Handsfree

[Handsfree Call]

Voice Call Window

• To cancel handsfree, press 🗟 (HandsfreeOFF).

Send Touch Tones During a Call [Send Touch Tones]

■Manually Entering Touch Tones

Voice Call Window Press a key from □ to □, to □, to □, or □ or □ or □ or □...

■Sending Touch Tone Sequences

 Save touch tone sequences to Phone Book (page 2-17) and remotely access your answering machine or other devices.

Voice Call Window → Phone Book → ■ →
Select a Phone Book entry → ■ → Select a touch
tone sequence (phone number) → □ → Send
Tone → ■

■Adding Pause "P" to Touch Tone Sequence

• Enter a pause "P" to separate touch tones. Example:

To save 03123XXXX3 (phone number), #7777 (answering machine access code), and #1 (answering machine playback command), enter the following in the Phone Number field.

03123XXXX3P#7777P#1

Open the Phone Book entry⇒ ✓ (handset calls phone number before the first "P") ⇒ ■ (handset sends next set of touch tones)

 Repeat this step until all the touch tones have been sent.

Video Calls

Toggle Audio Output (Earpiece/Speaker) [Handsfree On/Off]

Video Call Window

(Handsfree ON/HandsfreeOFF)

Zoom Outgoing Image

[Zoom]

Video Call Window

/ideo Call Window

 Zoom is unavailable when a still picture is set for outgoing image.

Switch Outgoing Image During a Video Call [Switch Outgoing Images]

Video Call Window (Switch)

• Press • to toggle between the alternative picture and camera image.

Switch Outgoing/Incoming Image Windows

[Switch Windows]

Video Call Window → Screen Set. → ■ →
Switch → ■ → In. Prior, Incoming Only,
Out. Prior or Outgoing Only → ■

Set a Still Picture as the Outgoing Image [Send Picture]

Video Call Window Send Picture → → Send Pict. ON → → Phone Memory or Memory Card → → Select a picture → ■

Change Alternative Picture

[Alternative Picture]

Video Call Window \longrightarrow Alt. $Picture \longrightarrow \bigcirc Alt.$ Pic. $ON \longrightarrow \bigcirc$

■Selecting Default Image

Preset⇒ ■

■ Selecting an Image in Data Folder/ Memory Card

Phone Memory or Memory Card ⇒ ■ ⇒ Select an image ⇒ ■

 Handset automatically adjusts the image size.
 Some images may be unavailable depending on the image size.

Change Incoming Image Quality [Image Quality]

Video Call Window

→ Screen Set. →

Image Quality →

Select an item →

Image Quality →

Image Quality →

Select an item →

Image Quality →

Imag

Call Log Functions

From Call Log Window page 3-9

Delete Call Log Records

[Delete/Delete All]

■Deleting a Record

Call Log Window Select a record → ✓ → Delete → → YES → ■

■Deleting All Records

Call Log Window → Delete → Delete All →

Enter Handset Code → YES → ■

Lock Call Log

[Call Log Lock]

Call Log Window ► Call Log Lock ► ► Enter Handset Code ► Lock ► ■

• To cancel the lock, select *Unlock*.

Functions for Call Time and Cost

View Call Time and Cost

[Call Time & Cost]

■ ⇒ Settings ⇒ ■ ⇒ Call Settings ⇒ ■ ⇒ Call Time & Cost ⇒ ■ ⇒ All Calls or Last Call ⇒ ■ ⇒ Time or Cost ⇒ ■

- Use call time/cost indications only as a guide. The actual call cost billed may be different.
- The total call time does not include mail communications, Web browsing, and S! Circle Talk connection and talk time.
- Up to 277 hours 46 minutes and 39 seconds can be counted for the total call time.
- Sum of charges appears for Multiparty Call (page 3-17).
- The total call cost does not include mail/ Internet/S! Circle Talk transmission fees.
- When you make an international call, the call cost is not shown.
- Cost of each call may not be shown depending on your subscription. In this case, the total call cost indication and maximum cost limit are also unavailable.

Reset Total Call Time

■ → Settings → ■ → Call Settings → ■ →
Call Time&Cost → ■ → All Calls → ■ →
Time → ■ → ▼ → Reset → ■ → Enter Handset
Code → YES → ■

Reset Total Call Cost

■ > Settings > ■ + Call Settings > ■ + Call Time & Cost > ■ + All Calls > ■ + Cost > ■ + Enter PIN2 (page 14-2) > ■ + YES > ■

Functions for Optional Services

From Voice Call Window page 3-4
Call Service Settings Menu
Voice Mail/Call Forwarding Menu
page 3-10

Optional Service Setting Status

Check Optional Service Setting Status [Status]

■Call Forwarding/Voice Mail

Voice Mail/Call Forwarding Menu Status →

■ Call Waiting

Call Service Settings Menu Call Waiting → ■ → Status → ■

■Call Barring

Call Service Settings Menu *Call Barring* → *Status* → Select a type of restriction →

Call Waiting

Set Call Waiting

[Call Waiting On/Off]

Call Service Settings Menu $Call Waiting \rightarrow \blacksquare \Rightarrow$ $ON \text{ or } OFF \Rightarrow \blacksquare$

Answer an Incoming Call During a Call [Call Waiting]

During a call, Call Waiting tone is heard → 🗹 → **Answer** → 🔳

Switch Between Two Callers

[Switch Parties]

- Press [→] to switch between parties.
- If a caller terminates a call during Call Waiting, a ringtone sounds and *Holding*. appears.
 Press to start talking with the other person on hold.

Multiparty Call

Call Another Party

[Call During a Call]

Voice Call Window Enter a phone number→

Switch Between Parties

[Switch Parties]

- Press ⁿ/_{ABC} to switch between parties.
- If a caller terminates a call during a call, a ringtone sounds and *Holding*. appears. Press
 to start talking with another person on hold

Talk to Multiple Parties

[Multiparty Call]

Voice Call Window Enter a phone number → ✓ → When the other party answers, ✓ → Multiparty

- \Rightarrow \blacksquare \Rightarrow $Multiparty \Rightarrow$ \blacksquare
- During a multiparty call, press [25] to end the call with all parties simultaneously.
- If one person ends the call during a multiparty call, the other parties remain connected.

• To talk to just one person during a multiparty call:

Select a party to talk with → → *Multiparty*→ Private → ■

Call Barring

Restrict Outgoing and Incoming Calls and SMS Messages

[Call Barring]

Call Service Settings Menu Call Barring

■Restricting Outgoing Calls and SMS

Outgoing Call → ■ → All Outgoings, All

Out-Intl. → ■ → Enter Call

Barring Service Code (page 1-14) → Connect to the network automatically → ■

■ Restricting Incoming Calls and SMS

Incoming Call → ■ → All Incomings or All If Roamed → ■ → Enter Call Barring Service Code → Connect to the network automatically →

■Deactivating Call Barring

Cancel All → ■ → Enter Call Barring Service
Code → Connect to the network automatically →

- After connecting to the network, a setting completed window appears. If the window does not appear, follow the procedure again.
- You can still make emergency calls (110 (police), 119 (fire and ambulance) and 118 (coast guard)) when Call Barring is activated.
- You cannot use All Outgoings and All Incomings if you have started using Call Forwarding or Voice Mail.
- If Call Barring Service Code is incorrectly entered three consecutive times, Call Barring settings are locked. Change Call Barring Service Code and Center Access Code (page 1-14). For details, contact SoftBank General Information (page 14-46).

Change Call Barring Service Code [Call Barring Service Code]

Call Service Settings Menu Call Barring

Security Code

Enter current Call

Barring Service Code

Enter new Call Barring

Service Code

Re-enter new Call Barring


Service Code for confirmation

 After connecting to the network, a setting completed window appears. If the window does not appear, follow the procedure again.

Messaging·····		4-2
Message Types · · · · · · · · · · · · · · · · · · ·		4-2
Customizing Handset Address · · · · · · · · · · · · · · · · · ·		4-3
Sending Messages·····		4-4
Sending S! Mail · · · · · · · · · · · · · · · · · · ·		4-4
Sending SMS · · · · · · · · · · · · · · · · · ·		
Incoming Messages·····		4-8
Opening New Messages · · · · · · · · · · · · · · · · · · ·		4-8
Checking Received Messages · · · · · · · · · · · · · · · · · · ·		4-8
Replying to Messages · · · · · · · · · · · · · · · · · · ·		4-9
Organizing/Using Messages · · · · · · · · · · · · · · · · · · ·	4	-10
Sorting Messages · · · · · · · · · · · · · · · · · · ·	4	-11
Advanced Features · · · · · · · · · · · · · · · · · · ·	4	-13

Message Types


Handset supports S! Mail (MMS) and SMS.

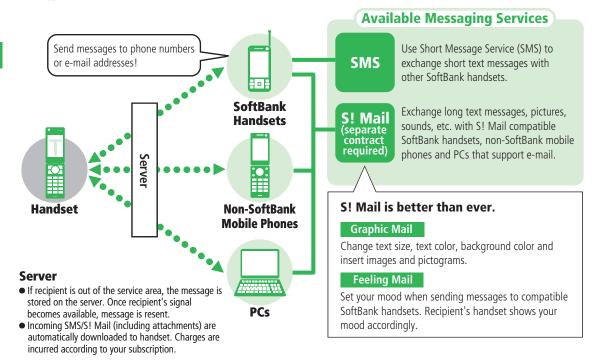

Customizing Handset Address

Change the account name (part before @) of your handset e-mail address.

- _____@softbank.ne.jp
- For details, contact SoftBank General Information (page 14-46).
- This operation uses Yahoo! Keitai access.
- Before using Messaging service, retrieve network connection information (page 1-10).
- A random alphanumeric text string is assigned at the time of contract. Composing a long e-mail address using single-byte alphanumerics and symbols is an effective way for preventing spam.

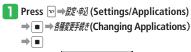



2 Select メール各種設定(オリジナルメール設定)(Mail Settings/Original Mail)⇒■ 4

Sending Messages

Sending S! Mail





Create Message Window

2 Select Address ⇒ ■



Set Address Menu

3 Select *Phone Number* or *Email* ⇒ ■ ⇒ Enter a phone number/e-mail address ⇒ ■



- To select an address from Phone Book: Select Phone Book → → Select an entry → → Select a phone number/ e-mail address → ▼
- 4 Select Subject → → Enter a subject



5 Select Text → **•** → Enter text → **•**



- 6 Press
 (Send)

 OK
 - If you select Notify Only Once in the sending confirmation/completed window, the window will not appear from the next time.

- If you enter an e-mail address or input text that cannot be sent by SMS, the mail type automatically changes to S! Mail.
- S! Mail you send may look different on a receiving handset if it does not support S! Mail.

Attaching Files

Attach an image or melody to an S! Mail.

From Create Message Window, select



Attachments Menu

2 Select Data Folder ⇒ ■ ⇒Phone Memory or Memory Card ⇒ ■



3 Select a folder⇒ ■ ⇒Select a file → ■



 Some files may not be able to be attached to messages. To find out whether a file can be attached or not, check Details of the file (page 2-31).

Feeling Mail

Feeling Mail notifies the recipient of message arrival by special graphics expressing the sender's mood in Information Prompt, as well as by vibration and External Lights.

- Actions when Feeling Mail arrives vary according to the recipient's handset.
- From Create Message Window, select

 Feeling ⇒ ■



2 Select a pictograph⇒■



 If you send a message with Feeling Mail graphics to a handset that doesn't support Feeling Mail, a regular pictograph appears in the subject field on the recipient's handset.

Graphic Mail

Send HTML mail to change font size, font color, background color, add moving text, insert images, etc.

Example:

Changing the font size and background color, and inserting a picture

- From Create Message Window, select

 Text → ■
- 2 Press 🖙 ⇒ Graphic Mail ⇒ 🔳



Graphic Mail Window

 To decorate text using a Graphic Mail template:

Press Phone

Memory or Memory Card

Select a template**

Edit text

**Phone

Memory Card

**Phone

Memory Card

Edit text

**Phone

Memory Card

Edit text

**Phone

Memory Card

Edit text

**Edit

4

3 Select *Font Size* →



4 Select a font size → ■ → Enter text



5 Press ♥ → GraphicMail → ■ →
ScreenColor → ■



6 Select a background color⇒ ■



7 Press → GraphicMail → → Picture
→ → → Phone Memory or Memory

Card → ■



Select a folder⇒ ■⇒Select an image

Sending SMS

Send short text messages to other SoftBank handsets using phone numbers as address.



Create Message Window

000/300K

2 Select $Text \Rightarrow \blacksquare \Rightarrow Enter text \Rightarrow \blacksquare$



3 Select Address ⇒ ■



Set Address Menu

4 Select *Phone Number* ⇒ ■ ⇒Enter a phone number ⇒ ■



- To select a phone number from Phone Book:
 - Select **Phone Book** → Select an entry → Select a phone number → ■
- 5 Press ☑ (Send)⇒OK⇒■
 - If you select Notify Only Once in the sending confirmation/completed window, the window will not appear from the next time.

More Features



Creating Messages

(page 4-13)

Attaching Files

(page 4-14)

Graphic Mail Functions

(page 4-15)

Outgoing Message Functions

(page 4-15)



Message Creation Settings

(page 13-14)

- Add Recipients to Simple Input List
- Set Groups
- Set a Signature
- Set Default Mail Type
- Show/Hide Notification When Mail Type is Switched

Outgoing Messages

(page 13-15)

- Show/Hide Sending Confirmation Window
 Sat Vibratian Wilder Confirmation Confirmation
- Set Vibration When Sending is Confirmed
- Check Delivery
- Set Server Storage Period of Sent Messages
- Set Message Priority
- Set Time for Delivering Messages to Recipients
- Save a Reply Address
- Edit SMS Center Number (+819066519300)

4

Opening New Messages

When a message arrives, ringtone sounds and animation plays. Incoming messages are saved to **Received**.

Check any unread messages from Information Prompt.

- By default, S! Mail retrieval is set to *Immediate*. The complete incoming message and attachments are automatically downloaded. Change settings to *Phone # Only* (autodownload messages from SoftBank handsets) or *Deferred* (select messages to download) (page 13-16).
- When there are several unread Feeling Mails, graphics expressing the sender's mood of the most recently received Feeling Mail appear in the background of Information Prompt.
- Information Prompt appears



2 Select New Messages ⇒ ■

3 Select a folder⇒ ■ ⇒Select a message





- To retrieve new messages from the server: Press **Press Press Pr**
- If Priority is set to Pause, incoming messages are notified by a confirmation window during handset use (except in Standby). Select Read Now or Later. To delete a message without reading it, select Delete.
- While watching TV, if a confirmation window appears to notify of an incoming message, select *Read Now* or *Later*. When *Later* is selected, handset receives the message after ending TV.

Checking Received Messages

Press
→ Message Box → ■ → Received



- 2 Select a folder → → Select a message → ■
- It may be impossible to open/play a file unless you obtain a content key (content license) depending on the file.

Replying to Messages

Create Message Window opens and the recipient's address is automatically set.

 When replying to an S! Mail, the subject to which Re: is prefixed is automatically inserted in the subject field.

Example: Replying by creating new text

- Press

 → Message Box →

 → Received
- 2 Select a folder⇒ ⇒ Select a message





3 Select *Blank* ⇒ ■



- To reply to the sender of a message with multiple addresses, select *To Sender* or *To All*.
- To reply by quoting the received message text, select With Text; to reply by referring to the received text, select Refer.

More Features



Receiving Messages

(page 4-16)

Server Operations

(page 4-16)



Display Settings

(page 13-15)

- Set Font Size
- Set Scroll Unit
- Show/Hide Address and Subject When Sending/Receiving Messages

Incoming Messages

(page 13-16)

- · Set New Message Retrieve Mode
- Set Automatic Display of Picture Files
- Set Automatic Playback of Sound Files
- Set Spam Filter

3D Pictograms

(page 13-16)

- Set Automatic Playback of 3D Pictograms
- Set Font and Background Colors for 3D Pictograms

Received and sent messages are saved to the **Received** and **Sent** message folders respectively. Unsent draft messages are saved to **Drafts**, and undelivered (delivery failed) messages are saved to **Unsent**.

About Auto-delete

If Message Box memory is full, the oldest message is deleted when receiving/sending a new message. Set Protect (page 4-17) to save important messages. Alternatively, set Auto-delete (page 13-17) to *Do not Set*. However, when memory is full, a warning and

□ appear on Display. Delete unnecessary messages to receive new messages (page 4-18).

 When unable to receive S! Mail notifications due to insufficient memory, delete unnecessary messages. Once memory space becomes available, S! Mail notifications are redelivered by Retry function. Alternatively, retrieve Mail List (page 4-16) to receive notifications. For details on redelivery of S! Mail notifications, contact SoftBank General Information (page 14-46).



Message Box Window

2 Select *Received* or *Sent* ⇒ Select a folder ⇒ ■



Message List Window

①Message Status

UMessage Status		
\vee	Unread Message	
	Read Message	
	Unread Message with Attachments	
	Replied Unread Message	
	Forwarded Unread Message	
	Replied & Forwarded Unread Message	
	Unread S! Mail Notification	
	Read S! Mail Notification	
	Replied Unread S! Mail Notification	
	Forwarded Unread S! Mail Notification	
₽	Replied & Forwarded S! Mail Notification	
3	Sent Message with Unread Delivery Report	
3	Sent Message with Delivery Being Confirmed	
	Sent Message without Delivery Confirmed	
	Forwarded Sent Message without Delivery Confirmed	
	Sent Message of Which Delivery to Some Recipients is Failed	
	Forwarded Sent Message of Which Delivery to Some Recipients is Failed	
¥	Unsent Message with Delivery Failed	
	Unsent Message Waiting for Delivery	
000	Message Being Sent	
	Draft Message	

②S! Mail/SMS

\checkmark	S! Mail
SYE	SMS
4	SMS on USIM Card

③Priority/Protection

9	High/Protected
0	High/Not Protected
	Normal/Protected
0	Low/Protected
0	Low/Not Protected

Sorting Messages

Received and sent messages can be sorted into folders under **Received** and **Sent** of Message Box according to the conditions you set.

① Open Message Box⇒Select a folder⇒

Y Sort Setting ■



- 2 Select a criterion → → Specify conditions →
 - Select **Person** to set an individual entry in Phone Book as the sorting condition.
 - Select *Group* to set a Group entry in Phone Book as the sorting condition.
 - Select Address to set the specified addresses, regardless of whether they are saved to Phone Book, as the sorting condition
 - Select *Phone Book* to set those addresses that are either saved or not saved to Phone Book as the sorting condition.
 - Select *Ku-man* to set messages from Ku-man as the sorting condition.
 - Select *Idokoro* to set Departure Mail, Arrival Mail, and Simple Notice as the sorting condition.

More Features



Organizing Messages

(page 4-17)

Using Messages

(page 4-18)

Message Box Settings



(page 13-17)

- Do Not Auto-delete Old Messages
- Switch Between Folder View and All Message View
- Switch Between Mixed View and Separate View

Message List View Settings

(page 13-17)

- Switch Message List Views
- Split Message List Window

Message List Window Settings

(page 13-18)

- Filter Messages
- Create a New Phone Book Entry with a Phone Number/F-mail Address
- Add a Phone Number/E-mail Address to a Phone Book Entry
- Switch Between Unread and Read
- Switch All Messages in a Folder Between Unread and Read

Mini Tool Setting in Message List Window (page 13-18)

• Set Mini Tool in Message List Window

Advanced Features

Sending Messages

Creating Messages

From Create Message Window page 4-4
Set Address Menu page 4-4

Specify Recipients Quickly

[Simple Input]

 You can select addresses that you have saved to Simple Input list (page 13-14) and enter them.

Set Address Menu **Simple Input** → Select an entry →

Send a Message from Sent Log/Received Log

[Sent Log/Received Log]

Set Address Menu **Sent Log** or **Received Log** → Select an entry → ■

Send a Message to a Group

[Group]

• You can select addresses saved to a group (page 13-14).

Set Address Menu **Group** → Select a group →

Insert Your Name and Other Information Automatically

[Insert]

Create Message Window Text → □ → □ → Insert → □ → Phone Book, My Details, Phrases, Emoticon, Signature, Notepad, Message Box or URL History → □ → Do the respective operations

Add Recipients

[Add Address]

Create Message Window Select the address field → Add Address → Select an address → Se

• For details on how to enter addresses, see page 4-4.

Delete Recipients

[Delete/Select Multi/Delete All]

■Deleting One Entry

Create Message Window Select the address field

Select an address

Delete

Delete

Select an address

One⇒ ■

■Deleting Multiple Entries

■Deleting All Entries

Create Message Window Select the address field→

Delete All →

Output

Delete All →

Ou

Save a Recipient's Address to Phone Book [To Phone Book]

Create Message Window Select the address field →
Select an address → Save Sender →

Add New or Add →

• See "Creating New Entries" (page 2-17) for entering other items.

Set To/Cc/Bcc

[To/Cc/Bcc]

Create Message Window Select the address field → Select an address → → To/Cc/Bcc → ■ → To, Cc or Bcc → ■ → 👸

- To: The recipient's address.
- Cc: Copies of a message sent to the address in the To field are sent to other addresses.
 Addresses entered in the Cc (carbon copy) field are revealed to other recipients.
- Bcc: Addresses entered in the Bcc (blind carbon copy) field are not revealed to other recipients.

Save All Addresses to a Group

[To Group]

Create Message Window Select the address field → To Group → (twice) → Select a group → Enter a group name → ■

4

Edit Text

[Edit Text]

Create Message Window Select the text > Edit the text > E

Delete Text

[Clear Text]

Create Message Window Select the text→

Clear Field →

Clear Fiel

Change Mail Type

[Mail Type]

■Switching to SMS

Create Message Window *Type* → ■ → *SMS* → ■

 If a message contains something that cannot be sent by SMS, a confirmation window appears. The contents which cannot be sent will be deleted if you select *Change*.

- If the text exceeds the maximum number of characters allowed in SMS, a confirmation window appears. If you select *Cut to Fit SMS* after selecting *Change*, the maximum amount of text from the beginning is remained and the excess is deleted.
- If you change the mail type to SMS, the following items are deleted.
 E-mail address, Cc and Bcc setting, Subject, Attached file, Graphic Mail template and settings, Feeling Mail setting

■Switching to S! Mail

Create Message Window $Type \rightarrow \blacksquare \Rightarrow S! Mail \Rightarrow \blacksquare$

- By performing the following operations, you can also change the mail type from SMS to S! Mail automatically. If these items are deleted, the mail type returns to SMS automatically.
 Add an e-mail address, Set Cc/Bcc, Enter subject, Attach a file, Set Feeling Mail
- If you press ☑ and select *Templates* or *GraphicMail* while entering text, or if you enter text that exceeds the maximum number of characters allowed in SMS and press ☑, a confirmation window telling the message cannot be sent as SMS appears. Select *Change to S!Mail, Cut to Fit SMS*, or *Edit Message*.

Attaching Files

From Create Message Window page 4-4

Attachments Menu page 4-4

Shoot Picture or Video Attachments [Take Picture/Record Video]

■Picture

Attachments Menu *Take Picture* Frame subject in Display (twice)

■Video

Attachments Menu **Record Video** → Frame subject in Display → (three times)

Set an Attachment to Open Automatically (Recipient's Handset) [Auto Play]

• If there are more than one attached file, you can set just one to play back.

Create Message Window Attachments → ■ →
Select an attached file → □ → Auto Play → ■
→ ON/OFF → ■ → ON → ■ → Display or
Do not Display → ■

• To put a caption to the attached file, select **Display** and enter a caption for the file.

Graphic Mail Functions

From Create Message Window page 4-4
Graphic Mail Window page 4-5

Other Decorations

[Graphic Mail]

■Changing Font Color

Graphic Mail Window *Font Color* → Select a color → Enter text

■Blinking/Scrolling/Swinging Text

Graphic Mail Window Blink, Telop or Swing → Enter text

■Aligning Text

Graphic Mail Window *LineUp* → Select a character position → Enter text

■Inserting a Line in Text

Graphic Mail Window *Partition* ⇒ ■

■Inserting Sound

Graphic Mail Window Sound → ■ → Phone

Memory or Memory Card → ■ → Select a sound file → ■

■Inserting My Pictograms

Graphic Mail Window *MyPictograms* → Select a My Pictogram → ■

■Deleting One Decoration

Graphic Mail Window $Cancel \rightarrow \blacksquare \rightarrow Delete \ by$ $Each \rightarrow \blacksquare \rightarrow Select \ a \ decoration \rightarrow \blacksquare \rightarrow \boxdot$

■Deleting All Decorations

Graphic Mail Window $Cancel \Rightarrow \blacksquare \Rightarrow Delete \ All \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

Change Decorations [Change/Delete Graphic Mail Settings]

Create Message Window Select text → ■ ⇒Enter text → ⑥ → Start → ■ ⇒Select the end → ■ → Graphic Mail → ■ ⇒Set/delete decorations

Insert a Graphic Mail Template [Switch Templates]

Create Message Window Select text ⇒ ¬ Switch

Templ. → □ → Switch → □ → Phone

Memory or Memory Card → □ → Select a

template → □ → Edit text → □

Save Graphic Mail Templates [Save Template]

Create Message Window Select text⇒¬¬Save

Template→¬¬Enter a title→¬¬Phone

Memory or Memory Card →¬¬

• Templates can only be saved when the text has been decorated with Graphic Mail settings.

Outgoing Message Functions

Save without Sending

[Save to Drafts]

Check Preview

[Preview]

Create Message Window or ► Preview ■

Specify Server Storage Period

[Expiry Time]

Create Message Window *Options* → Expiry

Select an expiry time → ■

Check Delivery

[Delivery Check]

Create Message Window *Options* → → **DeliveryCheck** → ■ → **ON** → ■

Specify Message Delivery Time [Delivery Time]

Create Message Window *Options* → **Delivery**

Time → Select a delivery time →

• This procedure is only available with S! Mail.

4

Messaging

Set Message Priority

[Priority]

Create Message Window *Options* ⇒ *Priority* → Select a priority → ■

• This procedure is only available with S! Mail.

Activate Reply to Function

[Reply to]

Create Message Window *Options* → Reply to \Rightarrow \blacksquare \Rightarrow $Activate <math>\Rightarrow$ \blacksquare

- Save a Reply address in advance (page 13-15).
- This procedure is only available with S! Mail.

Delete a Sent Message Checked on the **Recipient's Side Automatically** [Self-delete]

Create Message Window *Options* ⇒ = ⇒

 $Self-delete \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare$

• This procedure is only available with S! Mail.

Incoming Messages

Receiving Messages

Manually Retrieve Complete S! Mail [Retrieve Mail]

Select S! Mail notification → ■ → Retrieve *Mail*⇒ ■

Forward Continuation of S! Mail [Forward Mail]

Select S! Mail notification ⇒ ¬ Divert ⇒ $\blacksquare \Rightarrow$ Server Mail $\Rightarrow \blacksquare \Rightarrow$ Keep or Do not **Keep** → ■ → Enter an address → 🗟

• For details on how to enter addresses, see page 4-4.

Server Operations

Use Mail List

[Update Mail List/Retrieve Mail]

Server Mail ⇒ ■

Retrieving and Updating Mail List

 $\square \Rightarrow Update \Rightarrow \blacksquare$

■Receiving Messages on Mail List

Select a message $\Rightarrow r \Rightarrow Retrieve \Rightarrow \bullet \Rightarrow One$, Select Multi or All ⇒ ■

• When you select Select Multi, do the following. Select messages → ■ → 🖀

Forward Server Messages [Forward Server Mail]

Server Mail → Select a message $rac{}\Rightarrow Divert \Rightarrow \blacksquare \Rightarrow Keep \text{ or } Do \text{ not } Keep \Rightarrow$ ■ ⇒Enter an address ⇒ □

- When **Do not Keep** is selected, the forwarded message is deleted from the server.
- For details on how to enter addresses, see page 4-4.

Delete Server Messages [Delete/Select Multi/Delete All]

Server Mail ⇒ ■

■ Deleting One Message

Select a message $\Rightarrow PP \Rightarrow Delete \Rightarrow One \Rightarrow$ ■ ⇒ Server Mail or Notif./Server ⇒ ■ ⇒ YES⇒ ■

■Deleting Multiple Messages

▼ ⇒ Delete → ■ ⇒ Select Multi → ■ ⇒
Server Mail or Notif./Server → ■ ⇒ Select
messages → ■ ⇒ ≅ ⇒ YES → ■

■Deleting All Messages

■ Delete ■ All Read Mail or All ⇒ Server Mail or Notif./Server ⇒ ■ ⇒ Enter Handset Code ⇒ YES ⇒ ■

Check Server Status

[Mailbox Volume]

 \Rightarrow Server Mail \Rightarrow \bigcirc \Rightarrow \bigvee \Rightarrow Mailbox Vol. \Rightarrow \bigcirc

- To update the amount of server space, press (Update).
- If the server usage exceeds 80%, a warning window appears. Retrieve messages stored on the server (page 4-16) or delete them (page 4-16).

Organizing/Using Messages

From Message Box Window page 4-10
Message List Window page 4-10

Organizing Messages

Set Security to Message Box

[Security Lock]

Set Folder Security

[Security Lock]

 Set to require Handset Code entry to view messages in the selected folder. However, folder security cannot be set to *General* folder.

| Message Box Window | Select a folder → ¬ → Security Lock → ■ → Enter Handset Code → Lock → ■

Edit a Folder Name

[Rename Folder]

Message BoxWindow Select a folder → ♥ → Rename Folder → ■ → Enter a folder name →

Protect Messages [Protect/Select Multi/Protect All]

■Protecting One Message

■Protecting Multiple Messages

■Protecting All Messages

Message List Window $Protect \rightarrow All \rightarrow Protect \rightarrow I$ (twice)

Delete Messages [Delete/Select Multi/All in Folder/ Delete All]

■Deleting One Message

Message List Window Select a message → ₩ → Delete → ■ → One → ■ → YES → ■

■Deleting Multiple Messages

■Deleting All Messages in a Folder

Message Box Window \Rightarrow \Rightarrow Delete \Rightarrow \Rightarrow All in Folder \Rightarrow \Rightarrow Enter Handset Code \Rightarrow YES \Rightarrow

■Deleting All Received/Sent Messages

Message Box Window → **Delete** → **All** → **Enter Handset Code** → **YES** →

Using Messages

Forward Messages

[Forward Mail]

 When forwarding an S! Mail, the subject to which Fw: is prefixed is automatically inserted in the subject field.

Message List Window Select a message → 🗹 → **Divert** → 🔳

Call Sender/Recipient

[Call Sender/Call Address]

Message List Window Select a message → ✓ Call Sender or Call Address → •

Check Delivery Report

[Check Delivery Report]

Use Links

[Call/Create Message/Save Sender/ Start Navi Appli/Access URL]

Message List Window Open a message that has a link⇒Select a link⇒■

- Available links are shown in blue.
- **■**Calling a Phone Number

Voice Call ⇒ ■ ⇒ ✓

- ■Making a Video Call to a Phone Number Voice Call ⇒ ⇒ ¬ Video Call ⇒ ■
- ■Making an S! Circle Talk Call to a Phone Number

Voice $Call \Rightarrow \blacksquare \Rightarrow \trianglerighteq Circle \ Talk \Rightarrow \blacksquare \Rightarrow \trianglerighteq$

■Sending a Message to a Phone Number/ E-mail Address

Create Mail $\Rightarrow \blacksquare \Rightarrow$ Create $\Rightarrow \blacksquare \Rightarrow$ Create Message Window opens

■ Saving a Phone Number/E-mail Address to Phone Book

Save Sender → ■ → Add New or Add → ■

→ Phone Book Entry Window opens

- See "Creating New Entries" (page 2-17) for entering other items.
- ■Starting Navi Appli from Location Information

 $Navi\ Appli \Rightarrow \blacksquare \Rightarrow Launch \Rightarrow \blacksquare$

■ Saving Location Information to My Locations

To Locations ⇒ ■

- See "Save Location Information to My Locations" (page 9-27) for following operations.
- ■Accessing the Internet

By Yahoo! Keitai or By PC Browser ⇒ ■

Save Attached Files

[Save Attachments]

Message List Window Open a message that has an attachment ⇒ Select a file ⇒ ■ → Save ⇒ ■ ⇒ Enter a file name ⇒ ■ → Phone Memory or Memory Card ⇒ ■ → Select a folder ⇒ ■

- Some files cannot be saved depending on the file type.
- To open/play an attached file, select a file and select View or Play. Some files may not be shown/played properly on handset.
- When a received message has more than 20 attached files, all files after the 20th file cannot be opened/played.

Edit and Send Unsent Messages [Edit Unsent Messages]

• Press (OK) after editing the address.

Change Order of Messages

[Sort by]

Message List Window → Sort by → Select a criterion → ■

Copy Text

[Text Copy]

Message List Window Open a message → ¬Text

Copy → ■ → Move cursor to one end of the

text range to copy → Specify the range →

Move SMS Messages to USIM Card or Handset

[Move]

Message List Window Open a message → → → Move → → To Folder, To Phone or To USIM → ■

Check Message Details

[View Details]

Message List Window Open a message → View → View Details → •

Move Messages to a Different Folder [Move Folder]

■Moving One Message

Message List Window Select a message → → → Move Folder → ■ → One → ■ → Select a destination folder → ■

■Moving Multiple Messages

Message List Window → Move Folder → ■

Select Multi → ■ → Select messages →

Select a destination folder → ■

■Moving All Messages in a Folder

Message List Window → Move Folder → ■


All → ■ > Select a destination folder → ■

Internet · · · · · · · · · · · · · · · · · · ·	-2
About the Internet · · · · · 5	-2
Yahoo! Keitai ······5	-3
Accessing Yahoo! Keitai 5	
PC Site Browser · · · · · 5	-4
Accessing PC Sites · · · · · 5	-4
Web Page Operations · · · · · · · 5	-5
Bookmarks/Saved Pages · · · · · · 5	-6
Bookmarks·····5	-6
Saved Pages·····5	-6
Advanced Features · · · · · · 5	- 7

5

About the Internet

Access the Mobile Internet via Yahoo! Keitai (SoftBank's mobile portal site). Also browse the Internet using PC Site Browser.

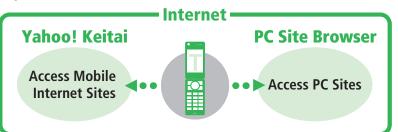

About Security

Handset uses SSL/TLS (a protocol for sending encrypted data) to protect against dangers on the Internet such as eavesdropping, tampering and spoofing. Root certificates necessary for SSL/TLS are saved on handset

- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of SSL/TLS usage.
- SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd. and Secom Trust Systems Co., Ltd. cannot be held liable for any damages associated with the use of SSL/TLS.
- In a 3G High Speed area, you can receive at a maximum speed of 3.6 Mbps and send at a maximum speed of 384 kbps. Note that transfers of large files may result in high transmission fees.

More Features



Security Settings



- Send/Block Manufacture Number
- Configure Send Referer Setting
- Enable/Disable Cookies
- Configure Script Settings
- Check Root Certificates
- Set Authentication
- Set SSL Communication

Yahoo! Keitai

Accessing Yahoo! Keitai

Press 🛂

• To disconnect during communication, press [\$\frac{1}{2}\right] (Cancel).



Web Page

- 2 Select an item ⇒ ■
- To stop viewing the web page, press $PYES \Rightarrow PYES \Rightarrow$

Accessing Web Pages from History

Press and hold 🗹 ⇒ History ⇒ 🔳



History Menu

2 Select a title ⇒ ■

Accessing Web Pages by Entering URLs

Press and hold $\square \rightarrow Enter\ URL \rightarrow \blacksquare$



2 Select *Direct Entry* → ■ → Enter a URL → ■ (twice)

More Features



Connecting/Browsing

(page 5-7)



Universal Settings for Yahoo! Keitai and PC Site Browser

(page 13-20)

- Clear Cache
- Delete All Cookies
- · Clear Authentication Info
- Return Browser Settings, Bookmarks, and Saved Pages to Default
- Restore Settings and Stored Information to Default

Yahoo! Keitai Settings

(page 13-20)

Set Storage Location of Downloaded Contents

Accessing PC Sites

Press and hold 🗹 ⇒ 🖾 (💻)



PC Browser Menu

- 2 Select *Homepage* \Rightarrow $\blacksquare \Rightarrow Always Ask$ or Ask Once Only⇒ ■
 - If you select Ask Once Only, the confirmation window about display and transmission fees will not appear from the next time



Web Page

Accessing Web Pages from History

From PC Browser Menu, select History \Rightarrow



History Menu

2 Select a title $\Rightarrow \blacksquare \Rightarrow Always \ Ask \ or \ Ask$ Once Only⇒ ■

Accessing Web Pages by Entering URLs

From PC Browser Menu, select Enter *URL*⇒ ■



URI Window

- 2 Select *Direct Entry* → → Enter a URL \Rightarrow (twice) \Rightarrow Always Ask or Ask Once Only⇒ ■
- Some websites may not be shown correctly or it may take time to open depending on the site.

More Features



Connecting/Browsing

page 5-7)

PC Site Browser

page 5-7)



Universal Settings for Yahoo! Keitai and PC Site Browser

page 13-20)

- Clear Cache
- Delete All Cookies
- Clear Authentication Info
- · Return Browser Settings, Bookmarks, and Saved Pages to Default
- Restore Settings and Stored Information to Default

PC Site Browser Settings

(page 13-20)

Do Not Show Alert When Switching Browsers

Web Page Operations

Scrolling Pages

When the whole page is not shown on the browser screen, the scroll bar appears on the right or bottom of the screen. View the remaining part using []/ • to scroll the screen.

Moving Cursor


To select items, use []/ • to move cursor.

Going to Previous Page/Next Page

Websites you have retrieved are temporarily stored. Press (Back) to return to the previous page. Press and select *Forward* to go to the next page.

Text Entry & Item Selection

When there are entry fields and selectable items on the screen, operate as follows.

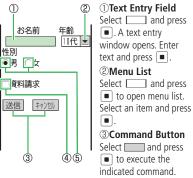

(4)Checkbox

Select
☐ and press
■. The checkbox changes to , indicating that the item is selected.

(5) Radio Button

Select one from a range of items. Select ○ and press . The radio button changes to . indicating that the item is selected.

• The above screenshot is an example image.

More Features



Using Web Pages

page 5-7)



Web Page Settings



- Change Font Size
- Change Scroll Unit Change Text Encoding Type
- Adjust Sound Playback Volume
- Do Not Download Images and Melodies from Web Pages
- Set Security Lock

Bookmarks/Saved Pages

Bookmarks

If you bookmark frequently accessed pages, you will be able to access them quickly and easily.

Saving a Bookmark

- 1 Open a page $\Rightarrow \neg Bookmarks \Rightarrow \blacksquare$
- 2 Select Save⇒
 - If you are not editing the title or URL, press (Save).
- 3 Press
 (Edit)
 Select the title field **⇒ = ⇒**Edit the title **⇒ =**



- 4 Press 🖾 (OK) ⇒ 🔳
 - Select a folder when adding the bookmark to one of folders you created.

Using Bookmarks

- Press and hold ¬¬Bookmarks →
 - To access a web page from a PC site bookmark: Press and hold ☞⇒(厘)⇒



Bookmarks List Menu

2 Select a title ⇒ ■

Saved Pages

If you save frequently accessed information (pages) to Saved Pages, the information can be viewed without accessing the Internet later.

Saving Pages

- Open a page ⇒ Saved Pages ⇒ 🔳
- 2 Select Save → ⇒Enter a title → ■
- Some pages may not be saved because of copyright restrictions, etc.
- If you save a page with the same URL as a page already saved in Saved Pages, it is saved as a different page.

Viewing Saved Pages

- - To view saved pages of PC sites: Pages ⇒ ■



Saved Pages List Menu 2 Select a title ⇒ ■

More Features



Bookmarks and Saved Pages

(page 5-9)

Advanced Features

Internet

Connecting/Browsing

Delete Records from History
[Delete/Select Multi/Delete All]

■Deleting One Record

■Deleting Multiple Records

History Menu
$$\longrightarrow$$
 $Delete \longrightarrow \bigcirc$ \Rightarrow $Select Multi$ \longrightarrow \bigcirc \Rightarrow $Select records \bigcirc \bigcirc \Rightarrow $YES \rightarrow$ $\bigcirc$$

■Deleting All Records

History Menu \longrightarrow **Delete** \longrightarrow **All** \longrightarrow Enter Handset Code \longrightarrow **YES** \longrightarrow

Use Once Entered URLs

[URL History]

Switch Browsers

Web Page → Change View → ■ → Current
Page or Linked Page → ■ → Always Ask or Ask
Once Only → ■

• If you select *Ask Once Only*, the confirmation window will not appear from the next time.

PC Site Browser

From Web Page page 5-4

Switch Screens

[PC Screen/Small Screen]

Web Page $\longrightarrow Tool \rightarrow \blacksquare \rightarrow PC$ Screen or Small Screen $\rightarrow \blacksquare$

Enlarge/Reduce a Page

[Zoom]

Web Page

→ Tool → ■ → Zoom → ■ →

Select a magnification/shrinkage percentage →

■

View Pages in Landscape or Portrait [Landscape/Portrait]

Web Page \longrightarrow **Tool** \Longrightarrow **Landscape** or **Portrait** \Longrightarrow

Using Web Pages

Refresh

[Reload Page]

Web Page ► Reload Page - ■

Copy Text

[Text Copy]

Web Page

→ Text Copy → → Move cursor to one end of the text range to copy → → Specify the range → ■

Only characters and pictographs can be copied.

Send a URL Link via Mail

[Send URL]

Web Page ► Tool → Send URL →

Search Text in Web Pages

[Page Search]

Web Page $\begin{tabular}{ll} $\mathbb{W} = Tool \Rightarrow \blacksquare \Rightarrow Page \ Search \Rightarrow \blacksquare \Rightarrow Enter \ \text{text} \Rightarrow \blacksquare \Rightarrow \text{Select a search method} \\ $\Rightarrow \blacksquare \Rightarrow Up \ \text{or} \ Down, \ \text{or} \ ON \ \text{or} \ OFF \Rightarrow \blacksquare \Rightarrow \blacksquare \\ $\blacksquare = \blacksquare \Rightarrow DF \ \end{tabular}$

Use Files

[File Playback/Save File/File Details]

Open a page that has a file → Saving

Mode → ■ → Select a file → ■

■Playing/Opening a File

Play/View ⇒ ■

• Some files may not be played/shown properly on handset.

■Saving a File

Save → Phone Memory or Memory

Card → Select a folder →

- Some files may not be saved because of copyright restrictions, etc.
- **■**File Properties

File Details ⇒ ■

Use Files from Links in Web Pages [File Playback/Save File/File Details/ Set Ringtone/Set Wallpaper]

Open a page that has a file ⇒Select a link ⇒■

■Playing/Opening a File

Play/View ⇒ ■

• Some files may not be played/shown properly on handset

■Saving a File

Save⇒ ■

- See page 4-19 for how to save files.
- Some files may not be saved because of copyright restrictions, etc.

■File Properties

File Details ⇒ ■

■Saving and Setting a File as Ringtone

Set Ringtone → Select a type of incoming event → (twice)

Saving and Setting a File as Wallpaper

Set Wallpaper ⇒ Select a folder ⇒ ■

Use Text in Web Pages [Use Phone Number/E-mail Address/URL]

- Only underlined items are available.
- Making a Call/Adding to Phone Book

 Web Page Select a link ■ Call or To Phone

Book → ■

■Sending a Message/Adding to Phone Book

Web Page Select a link → ■ → As Mail or To

Phone Book → ■

■Accessing a Website

Web Page Select a link ⇒ ■

Save a Page to Event

[To Event]

Web Page \longrightarrow **Tool** \longrightarrow **To Event** \longrightarrow Save the event (page 9-4)

Save a Page to My Locations

[To Locations]

Web Page

→ Tool → ■ → To Locations →

Save the location information (page 9-27)

View Page Properties

[Page Details]

Check Server Certificate for a Page [Session Info.]

Web Page
→ Tool → Details → →

Session Info. →

Jump to Top or End of a Page

[Jump]

Web Page $\longrightarrow Tool \longrightarrow \bigcirc Jump \longrightarrow To$ Top or To End $\longrightarrow \bigcirc$

Search for a Page by Keyword [Web Search]

Web Page

→ Tool →

→ Web Search →

→ Enter a keyword →

→ (twice)

View a Frame in Whole Screen

[Frame In]

Web Page Select a frame $\Rightarrow v \Rightarrow Tool \Rightarrow \bullet \Rightarrow$

■Returning to All-Frames Screen

 $r \Rightarrow Tool \Rightarrow \blacksquare \Rightarrow Frame\ Out \Rightarrow \blacksquare$

Bookmarks and Saved Pages

From Bookmarks List Menu page 5-6
Saved Pages List Menu page 5-6

Delete Bookmarks/Saved Pages [Delete/Select Multi/Delete All]

■ Deleting One Entry

Bookmarks List Menu / Saved Pages List Menu Select a title > Delete > One > One > YES > One

■Deleting Multiple Entries

Bookmarks List Menu / Saved Pages List Menu ♥

Delete ■ Select Multi ■ Select
titles ■ WES ■

■Deleting All Entries

Bookmarks List Menu / Saved Pages List Menu

Delete

All

Enter Handset Code

YES

■

Change Titles

[Edit Title]

■Changing a Bookmark Title

Bookmarks List Menu Select a bookmark $\Rightarrow v_2 \Rightarrow$ $Edit \Rightarrow \blacksquare \Rightarrow$ Select the title field $\Rightarrow \blacksquare \Rightarrow$ Edit the title $\Rightarrow \blacksquare \Rightarrow \boxtimes$

■Changing Title of a Saved Page

Saved Pages List Menu Select a saved page → → → Rename → ■ → Edit the title → ■

Create a Folder to Organize Bookmarks [Create Folder]

Bookmarks List Menu

→ Create Folder →

Enter a folder name →

■

Move Bookmarks to a Specified Folder [Move/Select Multi/Move All]

■Moving One Bookmark

Bookmarks List Menu Select a bookmark → ₩ → Move → ■ → One → ■ → Select a folder → ■

■Moving Multiple Bookmarks

Bookmarks List Menu → Move → ■ → Select

Multi → ■ → Select bookmarks → ■ → ≦ →

Select a folder → ■

■Moving All Bookmarks

Bookmarks List Menu → Move → All → Select a folder → ■

Send a Bookmark via Mail

[As Mail]

Bookmarks List Menu Select a bookmark → ► → As

Mail → ■

V · · · · · · · · · · · · · · · · · · ·	6-2
About TV · · · · · · · · · · · · · · · · · ·	6-2
/atching TV · · · · · · · · · · · · · · · · · ·	6-3
Channel Setup · · · · · · · · · · · · · · · · · · ·	6-3
Watching TV · · · · · · · · · · · · · · · · · ·	6-4
iew Timer · · · · · · · · · · · · · · · · · · ·	6-6
Setting View Timer · · · · · · · · · · · · · · · · · · ·	6-6
dvanced Features · · · · · · · · · · · · · · · · · · ·	6-7

About IV

Handset supports One Seg Digital TV for cellular phones and information terminals. For more information on One Seg services, visit the Association for Promotion of Digital Broadcasting Website:

http://www.dpa.or.jp (PC)

http://www.dpa.or.jp/1seg/k/ (Mobile Site) (Japanese)

 Digital TV supports reception in Japan only. Other countries use different broadcast systems and frequencies, and so Digital TV reception is not possible outside of Japan.

One Seg

One Seg is a digital TV broadcasting service for mobile devices. It uses one segment of the terrestrial digital band to allow you to watch TV and data broadcasts you enjoy at home on your handset.



Enjoy watching TV in widescreen.

Data Broadcasts

Enjoy data broadcasts along with watching programs. You can access related information and even participate in programs.

View Timer

Use the timer to book programs you want to view. Use Program Guide to set the timer.

Precautions

- Never use TV while riding a bicycle or motorcycle, or while driving a car. Doing so can make it difficult to hear sounds around you, or TV image and audio may distract you creating a risk of accident. Even while walking, pay attention to the traffic around you when using TV. Be especially careful in the vicinity of railway crossings and pedestrian crosswalks.
- TV image and audio may be affected if messages are received while you are using TV.
- SoftBank is not liable for any loss or alteration of data or settings saved by you due to accident, malfunction or repair of handset.
 When handset is replaced for repair or changed to a new model, captured pictures, TV links and other information saved on handset cannot be transferred.
- You cannot watch TV if your handset does not have a USIM Card installed or if your contract with SoftBank expires.
- Channels allocated by channel settings are based on information as of April 2008.
 Whenever there is a change in the regional broadcasting channels, use *Scan* to update the channel settings.

6 -

Watching TV

Channel Setup

Because the channels that can be received depend on your location, the first thing you should do before using TV is to configure its reception channel settings.



2 Select *Manual* ⇒ ■



• To automatically configure channel settings:

Select *Scan* ⇒ ■

3 Select an area ⇒ ■ → Select a prefecture ⇒ ■



 For some prefectures, select a regional subdivision as well. If you select Hokkaido for the area, select a city.

Broadcast Signals

Image/audio quality may be poor in the following areas due to inadequate signal reception.

- Areas far away from or extremely close to the broadcast source
- Mountain areas or places beside tall buildings
- · Inside of a moving train or car, underground, in a tunnel, etc.
- Near high-tension electrical wires, neon lighting, wireless stations, railway lines, highways, etc.
- Other areas where there is a large number of signal obstructions, or areas that are cut off from the signal

About TV Antenna

- · Extend TV Antenna when using TV.
- TV Antenna is only for receiving television signals. You should keep it stowed whenever you are not watching TV.
- Never try to adjust the angle or apply excessive force by holding the tip of TV Antenna. Doing so may cause TV Antenna
- to bend.

 When using TV Antenna, extend it as far as it will go. Note, however, that the best image and audio reception may be possible with TV Antenna stowed if you are very

close to the broadcast source.

Battery Level

Use of TV is not possible when the battery level is at ■, except during charging. TV will turn off automatically if the battery level drops to ■ while you are using it.

About Charging

You can use TV while charging the battery.

· Watching TV while charging may result in longer charging time or unfinished charging.

 Locating AC Charger (sold separately) cord too close to TV Antenna while charging may affect TV image.

TV Screen

• TV starts up in full screen. Press [to togale view screens.

2 Select channels using keypad

• Select channel 10 by pressing *; channel 11 by \Box_{+}^{b} , and channel 12 by # A/a

Direct channel selection is unavailable when keypad operations are used by the data broadcaster while viewing in Data Broadcast Mode

• To change channels one by one, press - / . To automatically search for receivable channels, press and hold • / •.

3 To end TV, press $\Rightarrow YES \Rightarrow \blacksquare$

• Do not remove the battery while TV is in operation. Channel settings, broadcast memory, TV links, and other data may be altered or deleted

TV View Operations

Adjust Volume	□ / □ *1*2
Toggle View Screens	TV
Show Channel Information	(press and hold)
Capture Pictures	۵
End TV	ØU77/X₹ *3/ POWER

- *1 Functions assigned to 🔁 are different in Landscape View (page 2-2).
- *2 Moves cursor in Data Broadcast Mode
- *3 You cannot end TV in Data Broadcast Mode.

Using Data Broadcasts

TV starts up in Data Broadcast Mode. In the data broadcast area you can access a variety of information relating to the program.



Data Broadcast Mode

- In the data broadcast area, use to move cursor and scroll pages.
- Press while in Data Broadcast Mode to show a data broadcast in full screen. To return to the previous view and toggle screens, press .
- Press (To TV) to switch to Image Mode. Press (ToData) in Image Mode to return to Data Broadcast Mode.
- Receiving data broadcasts does not incur transmission fees. However, you will be charged if you use a service that connects vou to the Internet.
- Data broadcasts are unavailable in Landscape View.

6

Image Mode Views

Press [1] to toggle view screens.



Image Mode in Portrait View



Landscape View



Full Screen View

- (1) Station Name
- (2) Program Title (4) Subtitle Area
- (3) Channel Number (5) Volume
- 6 Kev Guide

Using Program Guide

Electronic Program Guide (EPG) S! Appli lets you select a program and activate TV.



Program Guide appears. For following operations, see Program Guide help.

More Features




Functions for Area and Channel Settings (page 6-7)

Functions While Watching TV (page 6-7)

Functions for Data Broadcasts



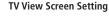

(page 13-28)

Set TV Start-up View

Settings for Watching TV

(page 13-28)

- Channel List Name
- Auto-off Timer

Image and Sound

page 13-28)

- Set Brightness
- Set Image Quality
- Set Image Sharpness
- Set Economy Mode
- Set Subtitles
- Set Audio Output

Data Broadcasts

(page 13-29)

- Set Data Communication Confirmation Window
- Set Secure Connection Confirmation Window
- Set Memory Access Confirmation Window
- Delete Broadcast Data
- Set Location Information Send Setting
- Set Whether or Not to Send Manufacture Number
- Set Content Storage Location

- Configure channel settings in advance (page 6-3).
- Press $\blacksquare \Rightarrow TV \Rightarrow \blacksquare \Rightarrow Timer \Rightarrow \blacksquare$
 - The first time you use the timer, a warning appears. Press \bigcirc (twice) to select OK. If you select **NO** in the confirmation window, the warning will not appear from the next time.



Timer List Window

2 Press (Create) → Manual → •



- 3 Select Channel \Rightarrow \bigcirc \rightarrow Channel List \Rightarrow ■ ⇒Select a station ⇒ ■
 - Select *Direct Input* to directly input a channel number
- 4 Select Start Date ⇒ ⇒Enter a start date and time ⇒ Select *End Date* **→** Enter an end date and time ⇒ •
- 5 Select *Do not Repeat* ⇒ Select a repeat method → ■ → Enter a repeat duration ⇒ •
- 6 Press 🖾 (OK)

When View Time is Near

Five minutes before the view timer is activated. the notification window appears*, the alarm sounds, and handset vibrates.

* The actual notification window may look different from the following.



 When handset is closed, a notification message appears on External Display.

- The view timer cannot be activated in the following situations.
- · If handset power is turned off
- · In Card Reader mode

End any active functions before the view

More Features



Functions for View Timer

(page 6-8)



Settings for View Timer

(page 13-30)

- Set Alarm Volume for Timer Notification
- Set Vibration for Timer Notification

6-6

TV

From TV Screen page 6-4 Data Broadcast Mode page 6-4 Timer List Window page 6-6

Functions for Area and Channel Settings

Add a Reception Area

[Add Channel List]

TV Screen ► Settings → Set Channels \Rightarrow \blacksquare \Rightarrow Empty \Rightarrow \blacksquare \Rightarrow Manual \Rightarrow \blacksquare \Rightarrow Select an area → Select a prefecture →

- For some prefectures, select a regional subdivision as well. If you select Hokkaido for the area, select a city.
- **■**Configuring Channel Settings Automatically

TV Screen \searrow \Rightarrow **Settings** \Rightarrow \Rightarrow **Set Channels** $\Rightarrow \blacksquare \Rightarrow Empty \Rightarrow \blacksquare \Rightarrow Scan \Rightarrow \blacksquare$

Switch Reception Areas [Switch Channel Lists]

TV Screen \searrow Settings \Rightarrow Set Channels ⇒ Select a channel list ⇒ ■

Functions While Watching TV

Select a Channel from Channel List [Select Station]

TV Screen **Settings Set Channels** → Select a channel → ■

Check Keys for Operating TV

[Key Guide]

TV Screen $\searrow Key Guide \Rightarrow \blacksquare$

Capture a Picture

[Capture]

TV Screen View a program ⇒ \(\square \) ⇒ Capture \(\square \) $\blacksquare \Rightarrow YES \Rightarrow \blacksquare$

- Captured pictures are saved in Pictures of handset Data Folder.
- Except for your own personal enjoyment, any use of captured pictures that infringes upon the copyrights of copyright holders is prohibited.
- Due to copyright restrictions, you may not be able to capture pictures of certain programs.

Functions for Data Broadcasts

Save/Use TV Links

[Save/Use TV Links]

■Saving a TV Link

Data Broadcast Mode Select an item such as Save

TV Links ⇒ ■

• The actual procedure depends on the program. For details, see the information within the data broadcast

■Accessing a Website from a TV Link

 $\blacksquare \Rightarrow TV \Rightarrow \blacksquare \Rightarrow TV Links \Rightarrow \blacksquare \Rightarrow Select a TV$ link ⇒ ■

- To view a Memo, do the following. $\blacksquare \Rightarrow TV \Rightarrow \blacksquare \Rightarrow TV Links \Rightarrow \blacksquare \Rightarrow Select a$ Memo ⇒ 🗑
- The following icons appear to indicate TV link types.

TV Links	Valid	Expired
Memo		
Link communication contents		
Mobile contents	-	- X
PC contents		2 ×

 An Internet connection confirmation window may appear depending on the TV link. If you select Ask Once Only, the confirmation window will not appear from the next time.

6

7

Functions for View Timer

Use Program Guide to Set View Timer [Set Timer by Program Guide]

Timer List Window

→ Program Guide →

→

S! Appli starts →Select a program →Set the view timer

Check/Edit/Delete Timer Information [Check/Edit/Delete Timer Information]

■Checking Timer Information

Timer List Window Select an entry ⇒ ■

■Editing Timer Information

Timer List Window Select an entry → □ → 🗟 → Select an item → □ → Edit the item → 🗟

■Deleting a Timer Entry

Timer List Window Select an entry $\Rightarrow P$ $\Rightarrow Delete \Rightarrow YES \Rightarrow \blacksquare$

 When the timer is set to repeat, a confirmation window appears.

Check/Delete Timer Results [Check/Delete Timer Results]

■Checking a Timer Result

 $\blacksquare \rightarrow TV \rightarrow \blacksquare \rightarrow Timer \ Results \rightarrow \blacksquare \rightarrow Select$ an entry $\rightarrow \blacksquare$

■Deleting a Timer Result

 $\blacksquare \rightarrow TV \rightarrow \blacksquare \rightarrow Timer \ Results \rightarrow \blacksquare \rightarrow Select$ an entry $\rightarrow Pelete \rightarrow \blacksquare \rightarrow YES \rightarrow \blacksquare$

6

Camera·····	• • • • • •	· · · · 7-2
Basics Basics		7-2
Taking Pictures·····	• • • • • •	· · · · 7-3
Camera Modes · · · · · · · · · · · · · · · · · · ·		7-3
Taking a Picture · · · · · · · · · · · · · · · · · · ·		7-3
Recording Videos·····	• • • • • •	· · · · 7-5
Video Modes · · · · · · · · · · · · · · · · · · ·		7-5
Recording a Video · · · · · · · · · · · · · · · · · · ·		
Camera Functions · · · · · · · · · · · · · · · · · · ·	• • • • • •	7-7
Delay Timer · · · · · · · · · · · · · · · · · · ·		7-7
Frame Setting (Still Picture) · · · · · · · · · · · · · · · · · · ·		7-7
Multi Shots (Still Picture) · · · · · · · · · · · · · · · · · · ·		7-7
Picture Editing · · · · · · · · · · · · · · · · · · ·		7-8
Basic Operations for Picture Editing		7-8
Changing Size · · · · · · · · · · · · · · · · · · ·		7-9
Picture Effects · · · · · · · · · · · · · · · · · · ·		7-9
Compounding Pictures · · · · · · · · · · · · · · · · · · ·		7-9
Advanced Features · · · · · · · · · · · · · · · · · · ·		

Basics

Use handset camera to take pictures and record videos.

Image Sizes

Select from a variety of sizes, from handy-size pictures or videos perfect for Sha-mail or Movie Sha-mail to high resolution images, to fit your needs.

Auto Focus


When you press the shutter key, the camera automatically detects the distance to the subject and focuses.

Shooting Modes

Use the delay timer, take pictures with frames or other effects, or take continuous shots.

Picture Editing

Compose and edit images by adding stamps or text to pictures you have taken.

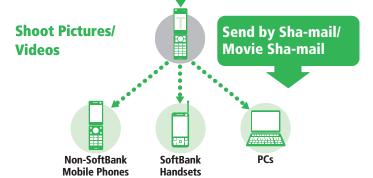

- Pictures are saved in JPEG format, and videos in MPEG-4 format.
- To avoid camera shake, hold handset firmly.
- Fingerprints or grime may affect focus. Wipe the lens with a soft cloth.
- Do not block the lens with your fingers or strap when shooting pictures/videos.

Taking Pictures

Camera Modes

■Mobile

Take pictures to set as wallpaper, etc.

■Digital

Take high-quality pictures to output to external devices such as PC.

Taking a Picture

- Press ⇒ Camera ⇒ ⇒ Mobile or Digital ⇒
 - Press
 in Standby to activate
 Viewfinder in the last Camera mode.



Viewfinder

Prame subject in Display

I a

Autofocus adjustment occurs prior to taking

a picture (focus frame appears). The shutter clicks, and the preview window appears.



Preview Window

- To delete the picture you have taken:
 Press → YES → ■
- If Storage is set to **Phone Memory**, the picture is saved to **Pictures** in Data Folder, and Viewfinder reappears. If it is set to **Memory Card**, a picture taken in **Mobile**

3 Press 🔳 / 📼

mode is saved to *Pictures*, one taken in *Digital* mode to *Digital Camera*, and Viewfinder reappears.

 Capturing images in low-lighting may compromise image quality. Capture images in adequate lighting or use Mobile Light.

Viewfinder Operations

Toggle Camera Modes	≥ m ABC
Zoom Adjustment	-
Exposure Adjustment	• / • *
Mobile Light On/Off	★ **
Icons On/Off	□ ,
Key Guide On/Off	1 .8

^{*} Functions assigned to • are different in Landscape View (page 2-2).

More Features

Functions for Taking Pictures

(page 7-10)

Common Functions After Shooting Pictures/Videos

(page 7-10)



Settings for Shooting Pictures/Videos

(page 13-25)

- Save Pictures/Videos Automatically
- Change Storage Location
- Set Image Quality
- Set White Balance
- Adjust Color Control
- Set Picture/Video Effects
- Adjust Flicker
- Set Shortcuts While Shooting Pictures/Videos
- Set File Name

Settings for Taking Pictures

(page 13-26)

- Set Focus Mode
- Change Shutter Sound
- Add Date Stamps
- Set Guidelines
- Take a Picture for a Phone Book Entry

Recording Videos

Video Modes

■Video

Record long videos.

■Video Mail

Shoot videos to send as attachments

■Short Video

Shoot MPEG-4 videos and send to MPEG-4 compatible SoftBank handsets (PDC).

Recording a Video

Recorded videos are automatically saved to the Videos folder in handset or memory card.



Press ■ ⇒Camera⇒ ■ ⇒Video, Video

Mail or *Short Video* → •

• Press and hold • in Standby to activate Video Viewfinder in the last Video mode



Video Viewfinder

Start tone sounds, and recording begins.



• In Video or Video Mail mode, press (Pause) to pause, then (Record) to resume recording.



End tone sounds, and the first frame of the recording appears.



Preview Window

• To delete a video recorded in *Video Mail* or *Short Video* mode:

Press purse → YES → ■

Videos recorded in *Video* mode are automatically saved. To delete the recording:
 Press P Delete P YES



Files are saved in the location specified in **Storage** and Video Viewfinder reappears.

Video Viewfinder Operations

Toggle Video Modes	∃ å DEF
Zoom Adjustment	· / • *
Exposure Adjustment	•□/□•*
Mobile Light On/Off	★ **
Icons On/Off	□ _⊅ ,
Key Guide On/Off	1 %

* Functions assigned to 🔁 are different in Landscape View (page 2-2).

More Features



Common Functions After Shooting Pictures/Videos

(page 7-10)



Settings for Shooting Pictures/Videos

(page 13-25)

- Save Pictures/Videos Automatically
- Change Storage Location
- Set Image Quality
- Set White Balance
- Adjust Color Control
- Set Picture/Video Effects
- Adjust Flicker
- Set Shortcuts While Shooting Pictures/Videos
- Set File Name

Settings for Recording Videos

(page 13-27)

- Do Not Record Sound
- Enlarge Video Viewfinder
- Change Start/End Tone
- Set Preview On/Off
- Set Recorded Video as a Ringtone Pattern

Camera Functions

Delay Timer

This feature allows you to take a picture or start recording after \(\blue{\cup} \) / \(\blue{\cup} \) is pressed and a specified time elapses.

- Activate Viewfinder/Video Viewfinder

 ⇒ □ → Picture or Movie → ■
- 2 Select *Delay Timer*⇒■



- 3 Select seconds → ■
- Zoom is unavailable when the delay timer is activated.

Frame Setting (Still Picture)

- Activate Viewfinder⇒ → Add Frame
- 2 Select Phone Memory or Memory Card

 →
 - To cancel the frame, select OFF.
- 3 Select Pictures → ■
- 4 Select a frame⇒ (twice)
- When Camera mode is set to *Digital*, you cannot use Add Frame.

Multi Shots (Still Picture)

Take nine pictures in succession.

Activate Viewfinder → ¬Multi Shots



- 2 Select a speed⇒■
- When Camera mode is set to *Digital*, you cannot use Multi Shots.
- Night mode is unavailable during Multi Shots.

Picture Editing

Images that have been captured and stored in Data Folder or memory card can be edited. The following types of files can be edited: JPEG files of 2 Mbytes or less, PNG files of 1 Mbyte or less.

Images that are larger than W240 \times H400 (W400 \times H240) are reduced to W240 \times H400. A picture that is smaller than W16 \times H16 cannot be edited.

- When saving edited image, select Save as New to save as new file. If Overwrite is selected, the original file cannot be restored.
- If Data Folder is full, delete unnecessary files from Data Folder before editing a picture.

Basic Operations for Picture Editing

Press ■→Tools→■→Useful Tools→
■→Edit Picture→■



2 Select Edit⇒ ■ ⇒Phone Memory or

Memory Card → ■ ⇒Pictures or

Digital Camera → ■ ⇒Select a picture

→ ■



Picture Editing Window

3 Press 🛂



4 Select an edit type⇒

→ Perform edit operations



- 5 Press ⊚ (OK)⇒Overwrite or Save as

 New⇒
 - When you edit pictures in *Digital Camera* folder, the edited files cannot be saved in *Overwrite* mode.

Changing Size



- 2 Select a picture size ⇒
 - After selecting a size, use to adjust the position of the picture to clip.
 - To adjust the width or height: Press (Resize) Fit to Width or Fit to Length
 - To rotate the picture:
 Press
 (Resize) → Rotate Image → ■
- 3 Press ⟨¬ (Cut) → Editing is completed.

Picture Effects



- 2 Select an effect ⇒
 - Use to change the effect level in Twinkle, Whitening, Change Color, Shade Off, Pinch, and Brush Up.
- Press Editing is completed.

Compounding Pictures

Compound two pictures.

- In Picture Editing Window, press

 →

 Overlay

 ■
- 2 Select *Phone Memory* or *Memory Card*→ → *Pictures* → → Select a picture

 →
 - Use to adjust the translucency rate.
- Press Editing is completed.

More Features



Additional Picture Editing Functions
(▶ page 7-11)

Camera/Picture Editing

Camera

From Viewfinder page 7-3 Preview Window page 7-3, 7-6 Video Viewfinder page 7-5

Functions for Taking Pictures

Quickly Focus on Nearby Subjects

[Macro]

Viewfinder \longrightarrow Function \longrightarrow Focus Mode \longrightarrow Macro \longrightarrow \bigcirc

Shoot Scenery without Autofocus

[Infinity]

Viewfinder \longrightarrow Function \rightarrow \longrightarrow Focus Mode \rightarrow \longrightarrow Infinity \rightarrow \bigcirc

Shoot with Focus Locked

[Auto Focus Lock]

The focus mode setting (page 13-26) must be

Auto in order to use Auto Focus Lock

- The focus frame turns from white to green when focus was successful and it turns red when focus has failed.
- After focusing on a subject, press again to re-focus on the subject.

Change Size of Pictures to Take [Picture Size]

Viewfinder

→ Picture Size →

→ Select a picture size →

■

• For details on picture sizes, see page 14-20.

Take Night Scene Pictures

[Night]

Viewfinder $\longrightarrow Night \rightarrow \bigcirc ON \rightarrow \bigcirc$

 Night mode is unavailable during Multi Shots (page 7-7).

Take Pictures with Beautiful Skin Tones [Brush Up Mode]

Viewfinder $\Longrightarrow Brush Up \Longrightarrow \bigcirc ON \Longrightarrow \bigcirc$

Common Functions After Shooting Pictures/Videos

View a Picture/Video in Data Folder [View Picture/Video]

Viewfinder / Video Viewfinder → **Data Folder** → Select a picture or video → ■

- To use the full screen, press (Full) while viewing a picture.
- To show the key guide, press ** while playing a video.

Send a Picture/Video via Mail

[As Mail]

- If Auto Save (page 13-25) is set to OFF, a picture or video can be sent immediately after it is taken or recorded.
- Videos recorded in Video mode cannot be sent.

Preview Window

• For details on creating S! Mail, see page 4-4.

Send a Picture/Video to Another Handset [Via Infrared/Via Bluetooth®]

- If Auto Save (page 13-25) is set to OFF, a picture or video can be sent immediately after it is taken or recorded.
- Videos recorded in *Video* mode cannot be sent

Preview Window Send via Via

Infrared or Via Bluetooth

 For sending by infrared communication, see page 12-2. For sending by Bluetooth[®] communication, see page 12-6.

Additional Picture Editing Functions

From Picture Editing Window page 7-8

Add Text to a Picture

[Add Text]

Picture Editing Window → Add Text → → → Select a font size → → → Enter text → → → ↓ to adjust the position → → → Overwrite or Save as New → ■

■Changing Font Color

■Changing Border Color

While selecting a position,

→ □ / □ → ■

Add a Frame to a Picture

[Add Frame]

Add a Stamp to a Picture

[Add Stamp]

Picture Editing Window → Add Stamp → ■ →
Phone Memory or Memory Card → ■ →
Select a stamp → ■ → ♣ to adjust the position
→ ■ → ⑥ (twice) → Overwrite or Save as
New → ■

• If the size of a stamp is larger than the picture, the stamp cannot be added.

Rotate a Picture

[Rotate Image]

Apply a Mosaic to Part of a Picture

[Mosaic]

Mix Pictures to Create Wallpaper

[Wallpaper]

■ → Tools → ■ → Useful Tools → ■ → Edit

Picture → ■ → Wallpaper → ■ → Select [1] →
■ → Phone Memory or Memory Card → ■
→ Select a picture → ■ → to compose the image → ■ → Select [2] to [4] and repeat the operations → □ → Phone Memory or Memory

Card → ■

● To unset a picture, press 🛂 (Delete).

Brighten Dark Areas of a Picture [Change Bright]

■ → Tools → ■ → Useful Tools → ■ → Edit

Picture → ■ → Change Bright → ■ →

Phone Memory or Memory Card → ■ →

Select a picture → ■ → ⊕ to adjust the

brightness → ■ → Overwrite or Save as New

→ ■

• A picture cannot be saved if its brightness is set to 0 %.


Playing Music and Videos · · · · · · · · · · · · · · · · · · ·	8-2
About Music/Video Playback · · · · · · · · · · · · · · · · · · ·	8-2
Obtaining Music and Videos · · · · · · · · · · · · · · · · · · ·	8-3
Playing Music·····	8-4
Playing Music with Music Player · · · · · · · · · · · · · · · · · · ·	8-5
Playing Videos · · · · · · · · · · · · · · · · · · ·	8-5
Playlists · · · · · · · · · · · · · · · · · ·	8-7
Using Playlists · · · · · · · · · · · · · · · · · ·	
S! Appli · · · · · · · · · · · · · · · · · · ·	8-8
Using S! Appli · · · · · · · · · · · · · · · · · · ·	8-8
Downloading S! Appli · · · · · · · · · · · · · · · · · · ·	8-8
Starting S! Appli · · · · · · · · · · · · · · · · · · ·	8-8
Advanced Features · · · · · · · · · · · · · · · · · · ·	8-10

Playing Music and Videos

About Music/Video Playback

Music and videos stored on handset are played and managed with Media Player.

- Access Web pages to get music/video files.
- See page 14-20 for a list of file types that can be played with Media Player.
- Use Earphone-Microphone and a wireless device to play music files with Media Player via a wireless connection.

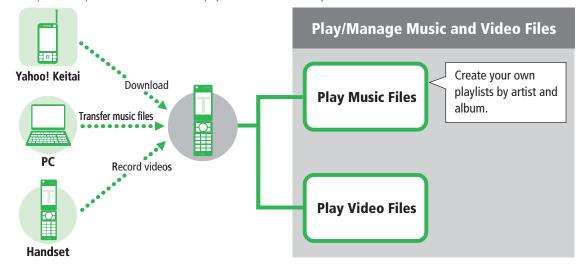

• Media Player cannot be used when battery power is low. Charge the battery to use Media Player.

Obtaining Music and Videos

Download music and video files from Yahoo! Keitai, etc.

- You can connect handset to your PC with the USB cable and transfer music files to handset.
 For details on transferring music files, see page 12-8.
- 📘 Press *→Media Player* → ■



- 2 Select Audio or Videos⇒■
- 3 Select Download Music or Download Videos → ▼YES →
 - · Follow the onscreen instructions.

Streaming

Access Web pages for streaming music/video files.

- Packet transmission fees apply even if playback is paused because handset continues network communication.
- 🚺 Press 🔳 ⇒Media Player⇒ 🔳
- 2 Select Streaming → → Enter URL →
 → Enter a URL → ■

Streaming from Bookmarked Pages

Access the bookmarked Web pages for streaming.

- Press → Media Player → ■
- 2 Select Streaming → → Bookmarks
- 3 Select a bookmark⇒ ■

Streaming from Recent URLs

- Press → Media Player → ■
- **2** Select Streaming \Rightarrow \blacksquare \Rightarrow Recent \Rightarrow \blacksquare
- 3 Select a title⇒ ■

Streaming from Links in Messages and Web Pages

Stream content by selecting a link.

- Select a link in S! Mail/SMS $\Rightarrow \blacksquare \Rightarrow By$ Yahoo! Keitai or By PC Browser $\Rightarrow \blacksquare$
 - To stream from a link on a Web page: Select a link
 - Operations may vary depending on the website.

8





Audio Menu Window

2 Select All Music → ■




All Music List Window

- Select Disc Search to show all music files by artist and album.
- Select **Artist**. **Album** or **Folder** to show music files by artist, album or folder, respectively.

Select a music file⇒ ■

- If a music file includes a jacket photo, the jacket photo appears when the file is selected in the list window. Press during playback to switch the jacket photo.
- To end Media Player, press POWER.

Music File Playback Window

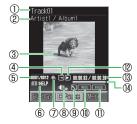

Music File Playback Window

- ①Title ②Artist Name/Album Name ③Playback Image
- 4 Play Mode
 - → All Repeat
 - Random Repeat All
 - Current Only
- (5) File Number/Total Number of Files ®Kev Guide 7)Web Link
- ® Playback Volume (9)Voice Cancel
- (10) Surround **D**Equalizer
- (12) Playback Status
 - ▶ Play Fast Forward Rewind
 - Pause ■ Buffering ■ Stop
- (13) Elapsed Playback Time/Total Playback Time
- ⁽¹⁴⁾Progress Bar

Operations While Playing/Paused

Return to the Beginning of a File/ Skip to Previous File	★ ************************************
Skip to Next File	## A/8 / -
Fast Forward	Press and hold
Rewind	Press and hold
Adjust Volume	•
Key Guide	1 .8

Playing Music with Music Player

If you close handset while playing music with Media Player, Music Player will be activated automatically to continue playback.

Activating Music Player

- Close handset while playing music files with Media Player
- When battery level is low, Music Player won't launch.

Music Player Playback Window



Music Player Playback Window

- ① Play mode
- ② Playback status
- ③ Title, artist name and album name run in a ticker from right to left.

Playing Videos

Press ■ → Media Player → ■ → Videos



Video Menu Window


2 Select *Videos* → ■ → *Phone Memory* or *Memory Card* → ■



Video List Window

3 Select a video file⇒ ■

Video File Playback Window

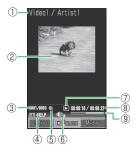

Video File Playback Window

①File Name/Artist Name

- ②Video
- ③File Number/Total Number of Files
- (4)Kev Guide
- (5)Web Link
- ⑥Playback Volume
- Playback Status
 - ▶ Play

- Fast Forward
- Pause ■ Buffering
- Rewind ■ Stop
- ® Elapsed Playback Time/Total Playback Time
- Progress Bar

Operations While Playing/Paused

Skip to Previous File	***/=□
Skip to Next File	# A/a / □•
Fast Forward	Press and hold while playing
Rewind	Press and hold while playing
Adjust Volume	•
Key Guide	1 %

More Features



Functions for Music/Video Playback (page 8-10)

Playback Features (Music)

page 8-10)

Playback Features (Video)

(page 8-10)

Functions for Music/Video Files



(page 8-10)



Settings for Playing Music (page 13-31)

- Set Audio Output
- Set Wallpaper During Playback

Playlists

Using Playlists

Create a list of your favorite songs and play them as a set. Add music files to playlists by all tracks at once, by artist, or by album.

Adding Songs to a Playlist

- Press → Media Player → → Audio \Rightarrow \blacksquare \Rightarrow $Playlist \Rightarrow$ \blacksquare
- Press ¬New Playlist → Phone Memory or Memory Card⇒ ■
- 3 Enter a playlist name $\Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$



Playlist Creation Window

- Select All Music⇒
 - To select music files by artist or by album: Select *Artist* or *Album* ⇒ Select an artist or album⇒ •

- 5 Select a music file⇒
 - To select other files, repeat this step.



6 Press 🖾 (Create)

Playing a Playlist

Press ■ → Media Player → ■ → Audio \Rightarrow \blacksquare \Rightarrow $Playlist \Rightarrow$ \blacksquare



Playlist Window

Select a playlist ⇒ (Play)

Changing a Playlist Name

- Press → Media Player → → Audio \Rightarrow \blacksquare \Rightarrow $Playlist \Rightarrow$ \blacksquare
- 2 Select a playlist⇒ ¬Rename → ■
- 3 Edit the playlist name ⇒ ■

More Features



Functions for Playlists

(page 8-11)

Using S! Appli

Download S! Appli from S! Appli sites on the Internet. Downloading incurs the same amount of transmission fees as when you use the Internet.

- For details, contact SoftBank General Information (page 14-46).
- You can download and use only S! Appli that are specially designed for SoftBank handsets.

Downloading S! Appli



S! Appli Library

- 2 Select More S! Appli⇒ → YES →

 Select an S! Appli → Download

 The select and S! Appli → Download
- 3 Select *Phone Memory* or *Memory Card*⇒ ■

Downloading begins.

- A confirmation window appears when the download is completed.
- If battery level is low, the application may not be completely downloaded.
- If you replace USÍM Card, downloaded applications will no longer be available.

Starting S! Appli

- Press $\longrightarrow S!$ Appli $\longrightarrow Library$
- 2 Select an S! Appli→
 - When you use a Network S! Appli, a transmission fee is charged each time the application connects to the network.
- When using a Network S! Appli while Access under Security is set to Blanket, handset automatically connects to the network without alert.

Pausing/Resuming/Ending S! Appli

- 📘 While an S! Appli is running, press 🚎
- **2** Select *Pause, Resume* or *End*⇒■

Resuming/Ending Paused S! Appli

- 2 Select Resume or Exit⇒■

More Features



S! Appli

(page 8-12)



Operational Settings

(page 13-32)

- Change Sound Effect Volume
- Set Backlight
- · Set Flashing of Backlight
- Set Vibration
- Set Priority While Running S! Appli

Other Settings

(page 13-32)

- Set Confirmation Window for Making Calls or Network Connection
- Update S! Appli Information on Memory Card
- View S! Appli License Information
- Check S! Appli Root Certificates


Advanced Features

Media Player

page 8-	From All Music List Window
page 8-	Music File Playback Window
page 8-	Video Menu Window
page 8-	Video List Window
	Video File Playback Window
page 8-	Playlist Window

Functions for Music/Video Playback



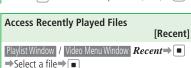

Playback Features (Music)



Repeat

[Repeat Play]

Music File Playback Window While a file is playing/paused >> Play Mode >> Repeat or Repeat All >=

Change Sound Quality [Surround/Equalizer/Voice Cancel]

Music File Playback Window While a file is playing/paused Surround, Equalizer or Voice Cancel Select a sound effect, ON or OFF

Run Media Player in Background [Multitask]

Playback Features (Video)

Window Size

[Normal Screen/Full Screen]

Video File Playback Window While a file is playing/paused → Normal Screen or Full Screen →

Functions for Music/Video Files

Sort Music/Video Files

[Sort by]

■Music Files

All Music List Window Select a file → 🗹 → Sort by → Select a criterion → 🔳

■Video Files

Video List Window Select a file → 🗹 → Change

View → ■ → Sort by → Select a criterion →

■

Send Music/Video Files to Another Handset [Send File]

■ Data Folder ■ Ring Song • Tone,

Music or Videos ■ Select a music or video
file ▼ Send ■ Select a transmission

method ■

 For sending by infrared communication, see page 12-2. For sending by Bluetooth[®] communication, see page 12-6.

View Music/Video File Properties

[Details]

All Music List Window / Video List Window Select a file

▶ Details ■

Functions for Playlists

From Music File Playback Window page 8-4
Playlist Window page 8-7

Add a Song Being Played to a Playlist [To Playlist]

Music File Playback Window While a file is playing/paused → ¬ To Playlist → ■ Select a playlist → ■

Add a Song Being Played to My Library [To My Library]

Music File Playback Window While a file is playing/ paused→Press and hold

Add Songs to a Playlist

[Add Tracks]

Playlist Window Select a playlist

Tracks

All Music

Select a music file

Select a

 To select music files by artist or album, select *Artist* or *Album* and select an artist or album, respectively.

Change Playing Order of a Playlist [Change Order]

Playlist Window Select a playlist → Select a file → Select a position → ■

Delete Songs from a Playlist [Remove Tracks]

- To delete multiple music files, select *Select Multi*, select files you want to delete, and press 圖.
- If you delete all files on a playlist, the playlist will be deleted, too.

Copy a Playlist

[Copy Playlist]

Playlist Window Select a playlist → Copy → Copy → Phone Memory or Memory Card → ■

Delete a Playlist

[Delete Playlist]

Playlist Window Select a playlist → → Delete → → YES → ■

8

From S! Appli Library page 8-8

Set an S! Appli as Screensaver
[S! Appli Screensaver Settings]

■ ⇒S! Appli ⇒ ■ ⇒Settings ⇒ ■ ⇒
Screensaver ⇒ ■

■Selecting an S! Appli

Screensavers → ■ → Select an S! Appli → ■ → YES → ■

■Setting S! Appli Start Time

Start Time ■ Enter a time beforeS! Appli starts ■

- Even if there is an incoming call, Answering Machine will not operate when an S! Appli is set as Screensaver or when Voice Call of Calls&Alarms (page 13-32) is set to Continue Apps.
- Some Screensaver S! Appli may pause when the time set for Power Saving (page 13-5) is reached depending on the application.
- Some S! Appli cannot be set as Screensaver depending on the application.

Move S! Appli

[Move/Select Multi/Move All]

■Moving One Application

S! Appli Library Select an application $\rightarrow \square \rightarrow Move$ $\rightarrow \square \rightarrow One \rightarrow \square \rightarrow YES \rightarrow \square$

■Moving Multiple Applications

SI Appli Library \checkmark \rightarrow Move \rightarrow \blacksquare \rightarrow Select Multi \rightarrow \blacksquare \rightarrow $Select applications <math>\rightarrow$ \blacksquare \rightarrow EE \rightarrow YES \rightarrow \blacksquare

■Moving All Applications

S! Appli Library \longrightarrow \longrightarrow \longrightarrow \longrightarrow \longrightarrow Enter Handset Code \longrightarrow YES \longrightarrow

- Screensaver settings will be canceled if an S! Appli set as Screensaver is moved to memory card.
- Some preinstalled S! Appli cannot be moved depending on the application. Some S! Appli cannot be moved to memory card depending on the application.
- If there is the same S! Appli on handset and memory card, the S! Appli will be overwritten.

Delete S! Appli

[Delete/Select Multi/Delete All]

■Deleting One Application

S! Appli Library Select an application → ✓ → Delete
→ ○ One → ○ → YES → ○

■Deleting Multiple Applications

S! Appli Library → Delete → ■ → Select Multi
→ ■ → Select applications → ■ → ② → YES →

■Deleting All Applications

S! Appli Library \longrightarrow **Delete** \longrightarrow **All** \longrightarrow Enter Handset Code \longrightarrow **YES** \longrightarrow

 If a preinstalled S! Appli is deleted, Reset All does not restore the application.

View S! Appli Properties

[Details]

S! Appli Library Select an S! Appli → → **Details**

ools · · · · · · · · · · · · · · · · · · ·	• 9-2
About Tools · · · · · · · · · · · · · · · · · · ·	. 9-2
Calendar/Tasks · · · · · · · · · · · · · · · · · ·	• 9-4
Saving Events	- 9-4
ime Tahle	. 9-7
Creating a Time Table Jotepad Jotepad	. 9-7
Notepad ······	• 9-8
Using Notepad·····	. 9-8
oice Recorder	• 9-9
! GPS Navi·····	9-10
Using S! GPS Navi	9-10
dokoro Mail·····	9-12
Using Idokoro Mail · · · · · · · · · · · · · · · · · · ·	9-12
Alarms · · · · · · · · · · · · · · · · · · ·	9-14
Using Alarms Vorld Clock	9-14
Vorld Clock · · · · · · · · · · · · · · · · · · ·	9-15
Calculator/Dictionary · · · · · · · · · · · · · · · · · · ·	9-16
Using Calculator · · · · · · · · · · · · · · · · · · ·	9-16
Using Dictionaries · · · · · · · · · · · · · · · · · · ·	9-16
Citchen Timer · · · · · · · · · · · · · · · · · · ·	9-17
Measuring Time · · · · · · · · · · · · · · · · · · ·	9-17
! Quick News ·····	9-18
Checking for Information Updates ! Information Channel	9-18
i! Information Channel · · · · · · · · · · · · · · · · · · ·	9-19
Browsing Undated Information · · · · · · · · · · · · · · · · · · ·	9-19
Occument Viewer · · · · · · · · · · · · · · · · · · ·	9-20
Viewing PC Files · · · · · · · · · · · · · · · · · · ·	9-20
Electronic Books · · · · · · · · · · · · · · · · · · ·	9-21
Using BookSurfing®	9-21
Barcode Reader · · · · · · · · · · · · · · · · · · ·	9-22
Scanning QR Codes · · · · · · · · · · · · · · · · · · ·	9-22
Ku-man's Room (Japanese) · · · · · · · · · · · · · · · · · · ·	9-23
Opening Ku-man's Room·····	9-23
Advanced Features ·····	9-24

About Tools

You can use the following useful functions.

Information Management Tools

Manage information on handset.



Information Browsing Tools

View and check all kinds of information.

Calendar

View Calendar and save events. Use information stored in the events to make calls and create messages.

S! Quick News

Check various pieces of information delivered at a regular interval and S! Loop items from Active Window.

Automatically download subscribed information. Use Weather Indicator that posts weather forecast in Standby.

Tasks

Save tasks with time limit Set the alarm for deadline, or organize tasks to check based on whether they are Completed, Not Completed or Overdue.

Notepad

Save notes. You can access saved notes while entering text. This is especially useful if oftenused phrases and memos are saved.

Time Table

Create a time table and check vour class schedule.

Voice Recorder

Record and play back sounds. The recordings can be sent via mail and set as ringtone.

S! Information Channel

Document Viewer

View PDF, Microsoft® Office Word, Excel, and Power Point® documents.

Electronic Books

Use BookSurfing® to view electronic books, comics, and albums.

Lifestyle Support Tools

These tools support everyday life.





Other Tools

Barcode Reader

Scan QR codes with the camera, and use scanned information.

Ku-man's Room (Japanese)

Visit Ku-man's Room to change his outfit or receive messages from him

S! GPS Navi

Uses positioning information to show your location on a map or the best route to your destination.

Idokoro Mail

Sends messages to inform others when you have entered or left a specific area.

Alarms

An alarm sounds at a specified time. You can set the alarm to sound only on a specific day of the week and set the snooze function.

World Clock

View dates and times of cities around the world. It is also possible to show the current times of two cities (countries) in Standby.

Calculator

Includes basic arithmetic operations, percentages, and memory. You can also calculate currency conversions.

Dictionary

Three useful dictionaries, Japanese, English-Japanese and Japanese-English, are available on handset.

Kitchen Timer

Set an alarm to sound after a specific time expires.

Opening Calendar

Press and hold 💍



Calendar Window

- " and/or the start time, event title and stamp icon are shown on the date that has events.
- Press ** or ** to switch to the previous or next window.
- 2 Press 🖾 to select a view format
 - Switch between Monthly View, Monthly & Event View, Weekly View, 4 Month View and All View.

Jumping to a Specified Date

- In Calendar Window, press → Jump
- **2** Enter a date⇒■

Saving an Event

Trom Calendar Window, select the date to save an event⇒ (Create)



Create Event Window

- 2 Select *Title* → → Enter a title →
 - Select the start date and time field →

 □ → Date&Time or Date Only → □ →

 Enter a date and time → □
 - Enter a time in the 24-hour system.
 - Enter only a date, when you select Date Only.
- 4 Select *End Date* → → Enter a date and time →
 - Enter a time in the 24-hour system.
 - If *Date Only* is selected for the start date and time, this field cannot be entered.
- **5** Select *Contents* → → Enter details of the event → ■

6 Select *Alarm* \Rightarrow *ON* \Rightarrow **■**



Event Alarm Setting Window

- 7 Select *Time* → → Enter a date and time → → 🗟 (OK)
 - Enter a time in the 24-hour system.
- Press
 (OK)⇒OK⇒
 - If you select Notify Only Once when a confirmation window appears telling that the alarm will not start if the power is turned off, this window will not appear from the next time.

Alarm Time Operations

The alarm stops automatically after a set ring time, but you can also stop it manually.

- Press any key while the alarm is sounding
 - To view the event details, press (View) after stopping the alarm.

Checking an Event

- From Calendar Window, select the date to check
 - From All View Window, select an event and press to open Event Details Window.



Daily View Window

2 Select an event⇒ ■



Event Details Window

Deleting an Event

- From Daily View Window, select the event to delete
- 2 Press 🗹 ⇒ Delete ⇒ 🔳
- 3 Select One⇒ ⇒YES⇒
 - To delete all events for the day:
 Select For this Day

 YES

 ■

Deleting All Previous Events

- From Calendar Window, select the next day of the event to delete
- Press ¬Delete → →Before Today
 → →YES →

Saving Tasks

- Press → Tools → → Tasks → ■
- 2 Press
 → Create New →



New Task Window

- 3 Select *Title* → → Enter a title → ■
- 4 Select *Deadline* → → Enter a date and time →
 - Enter a time in the 24-hour system.
- 5 Select *Contents* → → Enter details of the task → ■
- 6 Select $Alarm \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare$



Task Alarm Setting Window

- 7 Select *Time* → → Enter a date and time → → 圖 (OK)
 - Enter a time in the 24-hour system.
- 8 Press (OK)⇒*OK*⇒■
 - If you select Notify Only Once when a confirmation window appears telling that the alarm will not start if the power is turned off, this window will not appear from the next time.

The alarm stops automatically after a set ring time, but you can also stop it manually.

- Press any key while the alarm is sounding
 - To view the task details, press (View) after stopping the alarm.

Checking Tasks

Press ■ ⇒ Tools ⇒ ■ ⇒ Tasks ⇒ ■



Tasks Window

- To change the view format:

 Press → Change View → Select a view format → ■
- To change the status of a task:
 Select a task⇒ (Status)⇒ Select the status⇒

Deleting a Task

- From Tasks Window, select the task to delete
- Press $\square \rightarrow Delete \rightarrow \square \rightarrow One \rightarrow \square \rightarrow YES \rightarrow \square$

More Features



Functions for Calendar

(page 9-24)

Functions for Saving Events/Tasks
(▶ page 9-24)

Functions for Saving Events
(page 9-25)

Functions for Saving Tasks

(page 9-25)
Functions for Checking/Managing Events

(➤ page 9-25)
Functions for Checking/Managing Tasks
(➤ page 9-26)



Settings for Saving Events

(> page 13-38)

- Change Alarm Volume
- Change Vibration
- Set an Image to Appear at Set Time
- Set a Stamp Icon
- Set Category
- Set a Phone Number/F-mail Address/URI

- Set Link Information (Message/Web Page/ Image)
- Set a Location

Settings for Calendar

(page 13-39)

- Set Start-up View of Calendar
- Change Font Color of Events
- Lock Čalendar

Settings for Saving Tasks

page 13-39)

- Change Alarm VolumeChange Vibration
- Set an Image to Appear at Set Time
- Set a Stamp Icon
- Set Task Priority
- Set Task Status

Settings for Tasks

page 13-40)

Lock Tasks

Time Table

Creating a Time Table

A time table from Monday to Saturday can be created.

Subjects and classrooms of up to eight periods per day, and font colors can be entered/specified.

Press ■ → Tools → ■ → Useful Tools →
■ → Time Table → ■



Time Table Window

2 Select a period $\Rightarrow v \Rightarrow Edit \Rightarrow \blacksquare$



3 Select Subject → ■ → Enter a subject

- To enter a classroom, teacher or memo:
 Select an item → → Enter information
- To specify the background or font color:
 Select BG Color or Font Color ⇒
 Select a background or font color ⇒
- 4 Press 🗟 (OK)

Checking Time Table

From Time Table Window, select a period⇒■

Deleting a Class from Time Table

- From Time Table Window, select the period to delete
- Press $\longrightarrow Delete \rightarrow \square \rightarrow One \rightarrow \square \rightarrow YES \rightarrow \square$

More Features



Time Table Functions

(page 9-26)



Time Table Settings

page 13-40)

- Set Start/End Time of a Period
- Reset Time Settings to Default

Using Notepad



Notepad List Window

- 2 Select a blank notepad⇒■
- 3 Enter contents → ■

Setting Category

- From Notepad List Window, select the notepad to set an icon for⇒ Set Category ■
- 2 Select a category
 ■

 The icon of the selected category appears.

Viewing Notepad

From Notepad List Window, select a notepad⇒

■

Deleting a Notepad

- From Notepad List Window, select a notepad
- Press $\[\] \rightarrow Delete \rightarrow \[\] \rightarrow One \rightarrow \[\] \rightarrow YES \rightarrow \[\]$

More Features



Notepad Functions

(page 9-26)

Voice Recorder

- Use Voice Recorder exercising common morals and manners.
- Note that recording of some concerts and shows is not allowed even for personal use.
- If handset receives a call during recording, recording ends and data is automatically saved in order to give priority to the call. If you don't want to receive calls during recording, set handset to Offline Mode
- Press $\blacksquare \Rightarrow Tools \Rightarrow \blacksquare \Rightarrow Useful\ Tools \Rightarrow$ ■ ⇒Voice Recorder ⇒ ■



Voice Recorder Window

2 Select Record⇒

(twice)



Voice Recorder Recording Window

- Sound is recorded through the microphone.
- Press (Pause) to pause recording. To resume recording, press . To save the recording data, press (Save).
- When the remaining time available for recording is less than 10 seconds, • REC flashes.
- 3 Press

Sounds recorded with Voice Recorder are automatically saved in the Ring Song. Tone folder.

Playing Recordings

- From Voice Recorder Window, select Recordings =
- 2 Select *Phone Memory* or *Memory* $Card \Rightarrow \blacksquare$
- 3 Select a file⇒
 - Use during playback to adjust the volume.

More Features



Voice Recorder Functions



About S! GPS Navi

S! GPS Navi uses location information obtained from the GPS satellite and by communication with base stations.

View on the map where you are, and send your location information to compatible SoftBank handsets

The navigation application (Navi appli) is preinstalled on handset. For details, contact SoftBank General Information (page 14-46).

- When signal reception of the GPS satellite is poor, handset position is determined by base station information. However, the margin of error may vary from a few hundred meters to several kilometers in radius, depending on the base station's location/signal strength.
- When you cannot confirm the right location, move to a place where you can see the sky.
- SoftBank accepts no liability for any damages arising from use of the location information provided.
- Positioning cannot be performed by handset while Positioning Lock is in use.

Starting Navi Appli

Use Navi appli to retrieve information about your current location or check the route to your destination.

Press ■ → Tools → ■ → S! GPS Navi



S! GPS Navi Window

2 Select *Navi Appli* ⇒ ■

Checking Your Current Position

- From S! GPS Navi Window, select *Locate*Me⇒
 - Confirmation window appears. Select *Ask Once Only* to always send location
 information without confirmation
- When the location information send setting (LocationProperty) is set to Do not Send, the current position cannot be checked. Set to Always Ask or Send.

Using Ichi Navi

Locate other people or detect the approximate position of your handset in case it is lost.

- From S! GPS Navi Window, select *Ichi*Navi⇒■
 - Follow the onscreen instructions.
 - To use Ichi Navi, the person requesting location information must join the service.
- Before receiving a request for location information, you need to sign up on Yahoo! Keitai the people you allow to request location information (people you inform of your location).
- Ichi Navi is not effective in areas that are out of signal range.
- You need to apply and make settings in advance so that you can search for a lost handset from a PC

More Features



Functions for S! GPS Navi

(page 9-27)



Settings for S! GPS Navi

(page 13-41)

- Save a Map URL
- Edit Map URL Display Name
- Edit Map URL
- Delete a Map URL
- Set Map URL
- Set Navi Appli
- Lock PositioningSet Location Information Send Setting

Using Idokoro Mail

Inform other people of your arrival in or departure from a specified area. Send your location information by a simple operation (Simple Notice).

- When signal reception from the GPS satellite is poor, handset position is determined by base station information. However, the margin of error may vary from a few hundred meters to several kilometers in radius, depending on the base station's location/ signal strength.
- When you cannot confirm the right location, move to a place where you can see the sky.
- SoftBank accepts no liability for any damages arising from use of the location information provided.
- Positioning cannot be performed by handset while Positioning Lock is in use.
- Transmission fees apply for sending mail notifications and using positioning service.
- Idokoro Mail is unavailable while using handset abroad.

Saving People to Recipients List

Press ■ → Tools → ■ → Useful Tools →
■ → Idokoro Mail → ■ → Enter
Handset Code



Idokoro Mail Window

2 Select *Recipients List* → ■ → Select a list item → ■



Recipient Window

- 3 Select Recipient ⇒ ⇒ Select an entry from Phone Book ⇒ ⇒ Select a phone number or e-mail address ⇒ ■
- 4 Select each mail notification → *Yes or No → → (OK)

Saving Locations to Areas List

- From Idokoro Mail Window, select

 Areas List ⇒
 - If Recipients List has no entry, a message appears. Save addresses to Recipients List to use Idokoro Mail
- 2 Select an area list item⇒ ■



Area Settings Window

- 3 Select *Area Name* → → Enter an area name → ■
- 4 Select Set Location → → Current →
 → Start positioning
 - To specify from Location Logs or My Locations:
 Select Location Logs or My Locations
 Select location information
 - To specify from Phone Book: Select **Phone Book** ■ Select a Phone Book entry that has location information ■

Tools

- 5 Select Launch Setting → → Select

 Date → → Date → → Enter a date →

 → Arrivals Time or Departures Time

 → → ON → → Enter a start time

 and duration → → ③ (OK)
 - To specify a day of the week:
 Select Weekly → Select Arrive or
 Depart for a day of the week → ON
 → Enter a start time and duration →
 → Select Arrive or
 OK
- 6 Press 🛭 (OK)

Mail Notifications

Automatically Sending Notifications

When the specified time comes, your current position is obtained using GPS and it is compared with location information of the saved area. When your departure or arrival is confirmed, a mail notification is sent. When your departure or arrival cannot be confirmed in the specified time period or positioning cannot be performed because you are out of range, a mail notification is automatically sent.

Manually Sending Notifications (Simple Notice)

Send a Simple Notice to preset recipients (Recipients must be set to *Yes* in Recipient Window).

- Side Key must be set to SimpleNotice in advance (page 2-4).
- Press and hold
 while handset is closed

More Features



Functions for Idokoro Mail

(page 9-28)



Alarm List Window

2 Select an alarm⇒ ■



Set Alarm Window

- 3 Select *Time* → → Enter a time →
 - Enter a time in the 24-hour system.

- 4 Select *Once* → → Select a repeat interval →
 - When you select *Weekly*, do the following.
 Select day(s) of the week
 Select day(s) of the week
- 5 Select Snooze → → ON or OFF → ■
 →Enter a time between alarm tones
 → ■
- 6 Press (OK)⇒OK⇒
 - If you select Notify Only Once when a confirmation window appears telling that the alarm will not start if the power is turned off, this window will not appear from the next time.

Alarm Time Operations

The alarm stops automatically after a set ring time, but you can also stop it manually.

Press any key while the alarm is sounding

When Snooze is Set

If Snooze is set to *ON*, the alarm plays in specified intervals up to five additional times.

To stop Snooze and return to Standby:

Stop the alarm *Stop Snooze TES*

Canceling an Alarm

- From Alarm List Window, select the alarm to cancel
- Press (ON/OFF)

Deleting an Alarm

- From Alarm List Window, select the alarm to delete

More Features



Alarm Functions

(> page 9-28)



Alarm Settings

(page 13-42)

- Change Alarm Volume
- Change Vibration
- Set an Image to Appear at Set Time

World Clock

Handset shows the time of the city set as Main City. If you set City 1 and City 2, and set **World-Digital** or **World-Analog** as Standby clock (page 2-8), the dates and times of both City 1 and City 2 are shown in Standby.

Setting World Clock

Setting City 1/City 2

Press ■ → Settings → ■ → Phone

Settings → ■ → Clock → ■ → World

Clock → ■



World Clock Setting Window

2 Select City 1 or City 2 → • to select a city → •

Switching Main City

- From World Clock Setting Window, select Set as Main City ⇒ ■
- 2 Select City 1 or City 2⇒ ■

Viewing World Clock

In World Clock Window, move cursor (yellow line) on the map to view dates, times and time differences of major cities. The time zones of City 1 and City 2 are indicated in green and red lines, respectively.

Press ■ ⇒ Tools ⇒ ■ ⇒ Useful Tools ⇒
■ ⇒ World Clock ⇒ ■



World Clock Window

- Use to select a city
 To switch Daylight Saying

More Features



World Clock Functions

(page 9-28)



World Clock Settings

(page 13-42)

- Set a City by GMT Time Difference
- Set Daylight Saving Time (DST)

Calculator/Dictionary

Using Calculator





Calculator Window

Operations in Calculator Window

Enter Numbers	to 9 km
+	Ō
-	
×	•□
÷	•
=	
± (Switch +/-)	
Tax	527M SS
C (Clear)	2171×€
. (Decimal)	DZ9
EXIT	POWER

• Other Options by Pressing 🗹 in Calculator Window

- Converter: Enter the currency exchange rate and then perform currency conversion calculations.
- · Clear All: Delete the input value and clear memory.
- · MS: Save the input value to memory.
- · M+: Add the input value to the value stored in memory.
- · MR: Show the value stored in memory.
- · %: Calculate a percentage.
- · 1/X: Calculate a reciprocal.
- · SQRT: Calculate a square root.
- Set Tax Rate: Set the tax rate to be calculated when you press . Enter the tax rate and press .

Using Dictionaries

Use Japanese, English-Japanese, and Japanese-English dictionaries.



"Jispa" of Gakken Co., Ltd. is bundled as Japanese dictionary, English-Japanese dictionary and Japanese-English dictionary.





- 2 Select Japanese, English-Japanese or Japanese-English⇒ ■
- 3 Press ➡Enter a keyword⇒■
- 4 Select a word⇒ ■

More Features



Functions for Calculator



Kitchen Timer

Measuring Time

- Press → Tools → → Useful Tools →
 → Kitchen Timer → ■
- 2 Enter a countdown time⇒■
- 3 Press 🔳



 Press (Stop) during the count to temporarily stop the timer. To restart, press
 (Start).

When Set Time is Over

The alarm sounds and External Lights flash.

To stop the alarm, press a key from ■, □ to
□ to
□ t, ★ a, ★ a, press • When handset is closed.

Registering Contents

Press ■ ⇒Entertainment ⇒ ■ ⇒
S! Quick News ⇒ ■



S! Quick News Window

2 Select News List or S! Loop List⇒■





News List Window

S! Loop List Window

- 3 Select Add News or S! Loop \Rightarrow \Rightarrow YES \Rightarrow
- 4 Select contents ⇒
 - Follow the onscreen instructions to register contents.

Checking for Updates

- Select contents from News List Window or S! Loop List Window → ■
- 2 Select the item to check ⇒■
 - Press 🗟 to check the previous update and 🗹 to check the next update.

More Features



Functions for S! Quick News



0

Active Window Settings

(page 13-8)

- Show All Information or Only Unread One
- Set Ticker Speed
- Show/Hide Images
- Restore Settings and Registered Contents of S! Quick News to Default

9

S! Information Channel

Browsing Updated Information

Subscribe to contents and receive automatic updates. Content updates are received during the night.

 Packet transmission fees apply to use S! Information Channel.

Subscribing/Canceling Subscription

Access a special site to register or cancel transmission of information and select programs.

Transmission fees apply while you are connected.

- Transmission fees apply while you are connected to the Internet.
- Press → Entertainment → →
 Info Channel → ■



Info Channel Window

- 2 Select $Reg./Cancel \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$
 - Follow the onscreen instructions.

Checking Content Updates

From Info Channel Window, select
What's new?⇒■

Checking from Information Prompt

When Information Prompt appears ⇒

Info Channel ⇒ ■

Using Weather Indicator

Weather Indicator posts the weather forecast in the current area in Standby. The indicator is updated automatically.

 A separate subscription is required to use Weather Indicator.

Checking Weather Forecast

From Info Channel Window, select

Weather ⇒ ■



Weather Indicator Menu

- 2 Select Weather ⇒
 - You can view the weather forecast by selecting Weather Indicator and pressing
 from Active Window (page 2-9).

More Features



S! Information Channel

(page 9-29)



S! Information Channel Settings
(▶ page 13-43)

- Do Not Show Weather Indicator in Standby
- Set Notification of Weather Forecast Updates

9

Viewing PC Files

You can view Microsoft® Office Word, Excel, PowerPoint® and PDF files on handset.

 The following formats (extensions) are supported: Microsoft® Word (.doc), Microsoft® Excel (.xls), Microsoft® PowerPoint® (.ppt), and PDF (.pdf).





2 Select a file⇒■

Operations While Viewing Files

Scroll up, down, left, right	•
Enlarge page	
Reduce page	5/7h (20)
Show with actual size	1 .8
Show entire page*	≥ ^か
Rotate 90 degrees right	∃ č DEF
Go to previous page/sheet/ slide	4 %
Show bookmarks*	5 tk
Go to next page/sheet/slide	占 MNO
Go to first page/sheet/slide	7 [‡]
Search	□ †Þ
Go to last page/sheet/slide	9 _{wxv2}
Go to specific page/sheet/ slide	□ 1 2)

^{*} Available only when viewing PDF files.

- Some document file contents may look different from how they appear on your PC.
- Some document files may take a long time to appear.

a

Electronic Books

Using BookSurfing®

BookSurfing® is a viewer for electronic comic books, electronic photo albums and other electronic publications (CCF files).

You can enlarge or reduce images, scroll pages, and use sound, vibration and other effects to enhance your reading experience.

- Some electronic books may require a content key for viewing.
- Titles of unsupported file formats are not shown.
- 📘 Press 🔳 ⇒Entertainment ⇒ 🔳
- **2** Select *BookSurfing* →
 - For following operations, see BookSurfing[®] help.

Scanning QR Codes

About QR Codes

Scan QR codes with handset camera, and save scanned data. Connect to Web pages, send messages or create Phone Book entries from scanned URLs or contact information.



- Dirty or dark QR codes may not be scanned.
- Some QR codes may not be scanned depending on the size or version.

Scanning a QR Code

Press ■ → Tools → ■ → Useful Tools →

■ ⇒Scan Data ⇒ ■



Scan Data Window

2 Select Scan⇒ ■



Scanning Window

- 3 Frame a QR code in Display⇒
 - Use •• to adjust the exposure.
 - When the QR code is made up of several data areas, select YES to scan the other data areas. When all the areas are scanned, the QR code data is shown.



Scan Results Window



Checking Saved Data

- From Scan Data Window, select

 Scanned Data⇒

 ■
- 2 Select QR code data⇒■

More Features



Scanning QR Codes

(page 9-30)


9

Ku-man's Room (Japanese)

Opening Ku-man's Room

- → (-まんの部屋 (Ku-man's Room) → ■
- 2 Select #### (Open)⇒ ⇒YES or NO
- You cannot open Ku-man's Room if the interface language is set to *English*. Set 言 語選択 (Language) to *日韓* (Japanese).

About Ku-man's Room

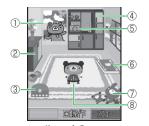

Ku-man's Room

© Dora communications

①Poster

Change posters.

②Change Clothes

Contains Ku-man's clothes.

3Treasure Chest

Contains Ku-man's treasures.

4Closet

It is decorated with many different types of trophies.

⑤Take Pictures

Take photos of Ku-man. You and Ku-man can appear in the same photo.

6Album

Albums with pictures of Ku-man.

 ${\Large @ Change!}$

Standby Ku-man changes his outfit by putting on a plush toy.

®Ku-man

Ku-man is a foot-loose and fancy free baby star bear. He sometimes goes off on journeys.

Playing with Ku-man

Look in Ku-man's Treasure Chest, change the outfit of Ku-man in Standby or take photos.

Example:

Changing the outfit of Ku-man in Standby

In Ku-man's Room, press
Now you can operate Ku-man's Room.

- 2 Press 圖 (前へ (Previous))/☞ (次へ (Next)) to select ᠰル~ル/(Change!)➡■
- Select an outfit
 Ku-man in his room wears the clothes from before the change.

Checking Messages from Ku-man

Ku-man sends mail after you open his room for the first time, when he goes on trips and other times.

Sometimes there are presents attached to messages from Ku-man.

- In Ku-man's Room, press ジ ⇒〈-まルメール (Ku-man Mail)⇒■
- 2 Select a message⇒ ■

More Features



Ku-man's Room (Japanese)

page 9-30)



Setting Ku-man for Standby (Japanese) (▶ page 13-43)

Set Ku-man to Appear in Standby

Advanced Features

Information Management Tools

)-4
)-4
)-4
)-5
)-5
)-5
)-5
)-6

Functions for Calendar

Change Color of Calendar Dates [Set Holiday]

■Changing Color of a Date

Calendar Window Select a date ⇒ 🗹 ⇒ Set Holiday ⇒ ■ Current Day ⇒ ■ ⇒ Select a color or Deactivate ⇒ ■

■Changing Color of a Day of the Week

Calendar Window

Select Week

Select a color

Functions for Saving Events/Tasks

Set Alarm Tone

[Alarm Tone]

Event Alarm Setting Window / Task Alarm Setting Window

Tone⇒ ■

■Setting a Preinstalled Sound

Patterns or Melodies → ■ → Select an alarm tone → ■ → ⓒ (twice) → OK → ■

Setting a File in Data Folder/Memory Card

Phone Memory or Memory Card \Rightarrow \Rightarrow Select a file \Rightarrow \blacksquare (twice) \Rightarrow \boxtimes (twice) \Rightarrow $OK \Rightarrow$

■Setting Time Reader

Time Reading $\rightarrow \square$ (twice) $\rightarrow OK \rightarrow \square$

Set Alarm Ring Time

[Duration]

Event Alarm Setting Window / Task Alarm Setting Window

Duration ■ Duration** ■ Enter a ring time** ■ Duration** ■ Task Alarm Setting Window

**Graph Company Com

Notify of Events/Tasks for Today or Tomorrow at a Specified Time

[Reminder]

Calendar Window / Tasks Window ✓ Settings →

■ Reminder → ■ ON → ■ Time →

■ Enter a time → ■ → ②

• Enter a time in the 24-hour system.

■Setting Today/Tomorrow

Today → Today or Tomorrow → 🖼

■Setting a Preinstalled Alarm Tone

Set Alarm → ¬Tone → ¬Patterns or Melodies → ¬Select an alarm tone → ¬

■ Setting a File in Data Folder/Memory Card as Alarm Tone

Set Alarm \Rightarrow \blacksquare \Rightarrow Tone \Rightarrow \blacksquare \Rightarrow Phone

Memory or Memory Card \Rightarrow \Rightarrow Select a file \Rightarrow \blacksquare (twice) \Rightarrow \boxdot (twice)

■Setting Alarm Volume

Set Alarm → Set volume → Set volume | Set Alarm → (twice)

■Setting Vibration

Set Alarm → **Wibration** → **Select a** vibration pattern → **Select a** (twice)

■Setting Alarm Ring Time

Set Alarm \rightarrow Duration \rightarrow Enter a ring time \rightarrow \bigcirc (twice)

■Setting Alarm Repeats

 $Once \Rightarrow \blacksquare \Rightarrow Select an item \Rightarrow \blacksquare \Rightarrow \Box$

Hide Special Events/Tasks

[Hide]

Create Event Window / New Task Window Options → Show/Hide → → Hide → ■

Functions for Saving Events

Save Periodic Events

[Repeat Setting]

Create Event Window Options → Repeat for

→ Daily, Weekly, Monthly, Yearly or

End of Month → → Enter a repeat duration

→ ■

- If you set a start date to the last day of a month, you can set Repeat for to End of Month.
- To repeat infinitely, enter "00".
- If you set *Monthly* for the 30th or 31st, the repetition is only set for months that include that date
- If an event set to repeat daily, weekly, etc. is deleted, a message asks if you wish to cancel repeat features. Select *Do not Repeat* to delete the event for that day only.
- Canceling a single date of a periodic event may not be effective if the event is sent as vObject (page 2-32) and received by another device.

Edit a Saved Event

[Edit Event]

Daily View Window Select an event $\Rightarrow \triangle B$ \Rightarrow Select an item $\Rightarrow B$ \Rightarrow Edit the item $\Rightarrow B$ $\Rightarrow C$ $\Rightarrow C$

Functions for Saving Tasks

Edit a Saved Task

[Edit Task]

Tasks Window Select a task $\Rightarrow \begin{picture}(1,0) \put(0,0) \put$

Functions for Checking/Managing Events

Use Event Information
[Call/Create Message/Access URL]

■ Calling or Sending a Message to a Phone Number

Event Details Window Select a phone number (twice) Voice Call or Create Mail

When you select Voice Call, do the following.

 ⇒ Voice Call or Video Call
 □

9

■Sending a Message to an E-mail Address

Event Details Window Select an e-mail address (twice)

■Connecting to a URL

Event Details Window Select a URL→ (twice)→

YES→

(twice)→

Use Link Information of an Event [To Messages/To Saved Pages/To Pictures]

Event Details Window To Messages, To Saved Pages or To Pictures

Use Information Stored in Contents [Call/Create Message/Save Sender/Access URL]

Event Details Window Select the *Contents* field → Select information → Voice Call, Create Mail, Save Sender, By Yahoo! Keitai or By PC Browser → ■

Delete Multiple Events

[Select Multi]

Delete All Events

[Delete All]

Calendar Window ► Delete ► All ► ■

Enter Handset Code YES ■

Functions for Checking/Managing Tasks

Use Task Information [Call/Create Message/Save Sender/Access URL]

Tasks Window Select a task → ■ → Select the
Contents field → ■ → Select information →
■ → Voice Call, Create Mail, Save Sender,
By Yahoo! Keitai or By PC Browser → ■

Delete Multiple Tasks

[Select Multi]

Tasks Window → Delete → → Select Multi
→ ■ → Select tasks → ■ → ② → YES → ■

Delete All Tasks

[Delete All]

Tasks Window → Delete → ■ → All → ■ →
Enter Handset Code → YES → ■

 When Change View is not set to All View, you cannot delete all tasks.

Time Table Functions

From Time Table Window page 9-7

Copy a Class on Time Table

[Copy]

Time Table Window Select a period → Copy → Copy → Select a destination period → 🕒 → 🗟

 To copy to multiple periods, repeat selecting a destination period and pressing as many times as required.

Delete All Classes from Time Table [Delete All]

Time Table Window → Delete → → All → ■

Enter Handset Code → YES → ■

Notepad Functions

From Notepad List Window page 9-8

Edit a Notepad

[Edit Notepad]

Notepad List Window Select a notepad with contents stored → Edit the notepad → YES → ■

Delete All Notepads

[Delete All]

Notepad List Window → Delete → ■ → All →
Enter Handset Code → YES → ■

Voice Recorder Functions

From Voice Recorder Window page 9-9

Change Storage Location of Recordings [Select Storage]

Voice Recorder Window Record → ■ → □ → SelectStorage → ■ → Phone Memory or Memory Card → ■

 A memory card must be inserted to configure these settings.

Lifestyle Support Tools

Functions for S! GPS Navi

From S! GPS Navi Window page 9-10

Send Current Position by Mail [Location Mail]

S! GPS Navi Window **Location Mail**⇒ ■

Check Location Logs

[Location Logs]

S! GPS Navi Window **Location Logs** → Select a log → ■

 If so is shown to the left of the log, it means the positioning was successful; so means a failure.

Use Location Logs

[Open Map/Start Navi Appli/Send Message/ To Locations/To Phone Book]

SI GPS Navi Window Location Logs → ■ → Select a log → ☑ → Open Map, Go to, Location Mail, To Locations or To Phone Book → ■

Delete Location Logs

[Delete/Delete All]

S! GPS Navi Window **Location Logs** → Select a log → **Delete** → ■

■Deleting One Entry

 $Delete \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

■Deleting All Entries

Delete All→ ■ → Enter Handset Code → **YES** → ■

Save Location Information to My Locations

[My Locations]

SI GPS Navi Window My Locations → Select an empty item → Save location information → Enter a title →

Functions for Idokoro Mail

From | Idokoro Mail Window page 9-12

Delete People from Recipients List [Delete/Delete All]

■Deleting One Entry

Idokoro Mail Window *Recipients List* ⇒ ■ ⇒ Select an entry $\Rightarrow Delete \Rightarrow \blacksquare \Rightarrow YES \Rightarrow$

■ Deleting All Entries

Idokoro Mail Window *Recipients List* ⇒ • • **Delete All** → Enter Handset Code $YES \Rightarrow \blacksquare$

Delete Area Lists

[Delete/Delete All]

■Deleting One Entry

Idokoro Mail Window **Areas List** ⇒ Select an entry \Rightarrow $Delete \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

■Deleting All Entries

Idokoro Mail Window Areas List ⇒ ■ ⇒ 🛂 ⇒ **Delete** $All \Rightarrow \blacksquare \Rightarrow$ Enter Handset Code $\Rightarrow YES$ ⇒ 🔳

Alarm Functions

From Alarm List Window page 9-14 Set Alarm Window page 9-14

Change an Alarm Name

[Alarm Name]

Set Alarm Window Select an alarm name → ■ → Enter an alarm name $\Rightarrow \Box \Rightarrow OK \Rightarrow \Box$

Change Alarm Tone

[Alarm Tone]

Set Alarm Window Alarm Tone \Rightarrow \Rightarrow Tone \Rightarrow

■Setting Time Reader

Time Reading \rightarrow \bigcirc (twice) \rightarrow \bigcirc \bigcirc

■Setting a Preinstalled Sound

Patterns or **Melodies** ⇒ ■ Select an alarm tone $\rightarrow \square \rightarrow \square$ (twice) $\rightarrow OK \rightarrow \square$

■ Setting a File in Data Folder/Memory Card

Phone Memory of Memory Card ⇒ ■ ⇒ Select a file \rightarrow (twice) \rightarrow (twice) $\rightarrow OK \rightarrow$

Change Alarm Ring Time

[Duration]

Set Alarm Window Alarm Tone ⇒ ■ ⇒ Duration → Enter a ring time → (twice) → $OK \Rightarrow \blacksquare$

Edit an Alarm

[Edit Alarm]

Alarm List Window Select an alarm ⇒ Select an item \Rightarrow Edit the item \Rightarrow \Rightarrow $OK\Rightarrow$

Delete All Alarms

[Reset All]

Handset Code ⇒ YES ⇒ ■

World Clock Functions

From World Clock Setting Window page 9-15

Edit a City Name

[Rename City]

World Clock Setting Window City 1 or City 2⇒ ■ \Rightarrow to select a city \Rightarrow $Rename\ City \Rightarrow$

■ ⇒Enter a city name ⇒ ■

9

Tools

Functions for Calculator

From Calculator Window page 9-16

Calculate Currency Conversion

[Converter]

Calculator Window
Converter

Exchange Rate

Main Currency or

Sub Currency

Enter a rate

(three times)

Enter an amount

Converter

To Main or To Sub

Functions for S! Quick News

From S! Quick News Window page 9-18

News List Window page 9-18

S! Loop List Window page 9-18

Update Lists Automatically

[Auto Refresh]

S! Quick News Window Settings → → Auto
Refresh → → Flash News, News or
S! Loop → ▶

Setting Flash News to Update Automatically

Select a time interval for automatic updates →

 $\blacksquare \Rightarrow \boxdot \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

■ Setting News/S! Loop to Update Automatically

 $Automatic \Rightarrow \blacksquare \Rightarrow \boxdot \Rightarrow YES \Rightarrow \blacksquare$

- S! Quick News (Flash News) and S! Loop List updates do not take place during late hours at night.
- Automatic updates may not occur if handset is outside the service area or signal reception is poor.
- If automatic updates stop for some reason, performing a manual update (page 2-9) can restart the automatic updates.
- Automatic updates are unavailable while using handset abroad.

Delete Registered Contents and Items [Delete/Delete All]

■Deleting One Entry

News List Window / S! Loop List Window

→ Delete

→ Delete

→ Delete

■Deleting All Entries

News List Window / S! Loop List Window ightharpoonup Delete ightharpoonup AII
ightharpoonup Enter Handset Code
ightharpoonup YES

S! Information Channel

From Info Channel Window page 9-19
Weather Indicator Menu page 9-19

Download Unreceived Information [Get Latest]

Info Channel Window Get Latest → ■ → YES →

A connection is established to the redelivery page.

- You can download only the latest information.
 Content cannot be downloaded on nondelivery days.
- ■Requesting Redelivery from Information Prompt

Information Prompt appears → Info Channel → YES → ■

Check Past Updates

[History]

Info Channel Window *History* → Select information → ■

Update Weather Forecast Manually [Update Weather Forecast]

Weather Indicator Menu **Update** → ■ → **YES** → ■

Scanning QR Codes

From Scan Results Window page 9-22

Use Scanned Data

[Call/Send Message/To Phone Book/ Access URL]

Scan Results Window Select information

Call, Send Message or **To Phone Book**■
• When a URL is scanned, select **YES** after

selecting a URL.

Paste Scanned Data into Message Text [To Message]

Scan Results Window **→ To Message ■**

Use Location Information
[Start Navi Appli/To Locations]

Scan Results Window ☑ → Go to or To Locations

Ku-man's Room (Japanese)

From Ku-man's Room page 9-23

Check What You can Do in Ku-man's Room [Help]

Ku-man's Room 🔛 ⇒ヘルプ(Help)⇒ 🔳

S! Town (Japanese)/S! Loop (Japanese) · · · · · · · · · · · · · · · · · · ·	10-2
S! Friend's Status ······	10-3
About S! Friend's Status · · · · · · · · · · · · · · · · · · ·	10-3
Using S! Friend's Status·····	10-4
S! Circle Talk·····	10-6
About S! Circle Talk · · · · · · · · · · · · · · · · · · ·	10-6
Using S! Circle Talk · · · · · · · · · · · · · · · · · · ·	10-7
Advanced Features · · · · · · · · · · · · · · · · · · ·	10-9

S! Town (Japanese)/S! Loop (Japanese)

Using S! Town

S! Town is an online 3D virtual space. Go online to chat, shop, etc.

- When you use S! Town for the first time, a user registration (free) and profile registration are required. Please read and agree to the terms of service before the registration.
- Packet transmission fees apply to use S! Town. The fees may be expensive.
- If you subscribe to Website access restrictions, you cannot use S! Town.
- Press *Communications*
- 2 Select S! Town⇒
 - You can cancel S! Town service by selecting S!ダウン (S! Town) from マイメニュー (My Menu) of Yahoo! Keitai.
 - Upgrade notification may appear when you start S! Town. Follow the onscreen instructions to upgrade S! Town.

About Library

Downloaded S! Appli that expand the functions of S! Town are automatically stored in Library. To check S! Appli in Library: Press — Communications — S! Town

Using S! Loop

Use S! Loop to keep a diary on the web or exchange information via BBS.


- Press *Communications*
- 2 Select S! Loop \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare

S! Friend's Status

About S! Friend's Status

Share your current mood and availability to receive calls, messages or S! Circle Talk calls with your friends who are on your S! Friend's Status Members List. It is possible to check statuses of your S! Friend's Status members from Standby after adding them to Active Window.

• A separate subscription and fees are required to use S! Friend's Status.

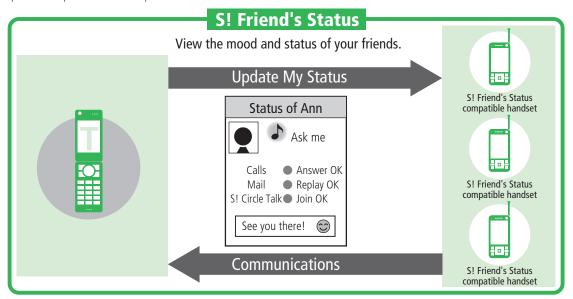

- S! Friend's Status is unavailable if IP Service is set to *OFF*.
- S! Friend's Status is unavailable while using handset abroad.

Using S! Friend's Status

Setting Your Own Status (My Status)

Press and hold 📲



My Status Window

- You can set My Status from Active Window (page 2-8).
- When My Status is offline, switch to online by selecting YES in the confirmation window.
- To go offline:

 Select Online → → Offline → →

 ③ (Update)
- 2 Select a status such as ¿₺₭ (Good mood) → → Select an item → ●

- 3 Select an Answer Status ⇒ ⇒ Select an item ⇒
 - To change all your Answer Statuses at once:

Press ☑ (All) ⇒Select an item ⇒ □ ⇒
Check the settings ⇒ □

- To customize All Answer Statuses Settings:
 Press ☑ (All) → Customize → →
 ☑ (Edit) → Customize the settings →
 ☑ (Save) → ■
- 4 Select the Comment field → → Enter a comment → ■
- 5 Press (Update)
 - If you switch to offline, you and other people cannot check each others' current statuses.
 Also, you cannot create S! Friend's Status Members List or initiate S! Circle Talk.

Adding Members

When you add a person to your S! Friend's Status Members List, an invitation is sent.

- You can only add friends who have a SoftBank handset that supports S! Friend's Status to your S! Friend's Status Members List.
- To create S! Friend's Status Members List, set My Status to *Online*.
- When the person accepts your invitation, you receive a Saving Completed notification, and you and the person can check out each other's status.
- Press → Communications → →
 Friend Status → ■
- Press
 (Add) →Phone Book or Direct
 Input→
 - If you select *Phone Book*, you can search Phone Book entries on handset (not those on USIM Card or memory card).
- 3 Select a member or enter a phone number →
- 4 Press (Save) → YES A Saving Request notification is sent to the person, and Waiting appears in S! Friend's Status Members List Window

 You will receive a Saving Failed notification when the other person's S! Friend's Status Members List already contains 30 people.

Adding a Member from Saving Request

If someone wants to add you to his/her S! Friend's Status Members List, you will receive a Saving Request notification. If you accept, the other person is saved to S! Friend's Status Members List and you and the person can check out each other's status.

- Information Prompt appears

 Notification

 ■
- 2 Select a Saving Request notification → → YES → ■
 - If you select NO, a Saving Failed notification is returned to the other person and the person is not saved to S! Friend's Status Members List.
- If you select NO and a Saving Failed notification is returned to the other person, you cannot send the person an invitation to S! Friend's Status Members List for 24 hours.
- Although you select NO and a Saving Failed notification is returned to the other person, if the person does not receive the notification because he/she is outside the service area or offline for more than 24 hours, you will receive another Saving Request notification when the person comes online.

Checking a Member's Status

Press ■ → Communications → ■ →
Friend Status → ■



S! Friend's Status Members List Window

- 2 Use 🕞 to select a group
- **3** Use 🚺 to select a member⇒■



S! Friend's Status Details Window

More Features



S! Friend's Status Functions

(page 10-9)



Settings for S! Friend's Status

(page 13-44)

- · Edit Status Settings of My Status
- Save Members to Active Window
- Ignore Saving Requests from People Not in Phone Book
- Ignore All Saving Requests

Settings for S! Friend's Status/S! Circle Talk

(page 13-44)

• Disable S! Friend's Status/S! Circle Talk


S! Circle Talk

About S! Circle Talk

S! Circle Talk is a walkie-talkie style communication service. Talk one-on-one or with a group of people (up to ten people) using S! Circle Talk compatible SoftBank handsets.

Press and hold the key to talk (one person at a time) and release the key when finished talking. Check each participant's status and see who is currently talking in S! Circle Talk window.

• You must subscribe to S! Friend's Status to use S! Circle Talk. Transmission fees apply for using S! Circle Talk.

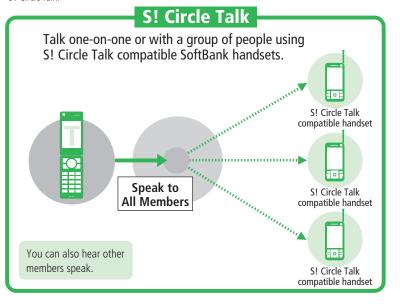

- S! Circle Talk is unavailable if IP Service is set to OFF.
- S! Circle Talk is unavailable if S! Friend's Status is set to Offline. Switch to Online (page 10-4) to use S! Circle Talk.
- Š! Čircle Talk is unavailable during voice or video calls. Also, you cannot receive another S! Circle Talk call during S! Circle Talk.
- S! Circle Talk is unavailable while using handset abroad.

Using S! Circle Talk

Adding Members

Adding a Person

- Press → Communications → →
 Circle Talk →
 - A confirmation window appears the first time you start.
- Press ➡Add Members ➡
 - If no one is on S! Circle Talk Members List, press (Add).



Add Members Menu

- **3** Select *Personal*⇒ → *Phone Book*,
 - Friend Status or Direct Input⇒

 ■
 - If you select *Phone Book*, you can search Phone Book entries on handset (not those on USIM Card or memory card).
- 4 Select a member or enter a phone number → ■

Creating a Group

Organize entries by group and make an S! Circle Talk call to a group of people.

- From Add Members Menu, select

 Group Temp Create New
- 2 Select Empty⇒ ⇒Phone Book, Friend Status or Direct Input⇒ ■
 - If you select *Phone Book*, you can search Phone Book entries on handset (not those on USIM Card or memory card).
- 3 Select a member or enter a phone number⇒■
 - To save more members, repeat 2 and 3.
 - If you want to change a member's phone number, select a member and press
 twice.
- Press (Add) ⇒Enter a group name

Adding a Group from S! Friend's Status Members List

- Save members other than yourself to an S! Friend's Status group in advance.
- From Add Members Menu, select

 Group Friend Status
- 2 Select a group ⇒ ■

Initiating S! Circle Talk

- Enter a phone number, and then press and hold



- Press and hold 흐 to talk
 - Talk when * Myself appears.
 - Initiator can talk as soon as S! Circle Talk is connected
 - * Myself disappears after 30 seconds and the floor is released.
 - Only one person can talk at a time.
- 3 To sign off, press →YES→■
 - When only one person remains, S! Circle Talk ends automatically.

Joining S! Circle Talk

Press (Answer) when S! Circle Talk invitation arrives

S! Circle Talk is connected.

- To reject the connection, press [52] (Reject).
- Alternatively, press or to answer.

S! Circle Talk Operations

Calling Another Member

- During S! Circle Talk, press ¬→Add
- 2 Select *Members List* ⇒ Select a member ⇒
 - To call a person from S! Friend's Status Members List:
 Select Friend Status

 Select an entry
 - To call a person from Phone Book:
 Select Phone Book
 Select an entry
 Select a phone number
 - To enter a phone number directly:
 Select *Direct Input* = Enter a phone number

Adjusting Speaker (Earpiece) Volume

During S! Circle Talk, use 🚺

Toggling Audio Output (Earpiece/Speaker)

📘 During S! Circle Talk, press 🗟 (🐠 / 🔌)

More Features



S! Circle Talk Functions





Settings for S! Friend's Status/S! Circle Talk

(page 13-44)

• Disable S! Friend's Status/S! Circle Talk

Advanced Features

Communications

S! Friend's Status Functions

From -

S! Friend's Status Members List Window page 10-5 S! Friend's Status Details Window page 10-5

Add a Member

[Add Members]

S! Friend's Status Members List Window Select a member other than yourself (My Status)⇒ 🛂 ⇒ Add Members ⇒ ■

• See "Adding Members" (page 10-4) for following operations.

Delete Members

[Deletion Request]

S! Friend's Status Members List Window Select a group

■Deleting One Member

Select a member $\Rightarrow Delete \Rightarrow \blacksquare \Rightarrow One \Rightarrow$ $\blacksquare \Rightarrow YES \Rightarrow \blacksquare$

■Deleting Multiple Members

Select a member other than yourself (My Status) \Rightarrow \searrow \Rightarrow $Delete \Rightarrow \blacksquare \Rightarrow Select Multi <math>\Rightarrow \blacksquare \Rightarrow$ Select members → • > YES → •

■Deleting All Members

Select a member other than yourself (My Status) \Rightarrow P \Rightarrow $Delete \Rightarrow \blacksquare \Rightarrow All \Rightarrow \blacksquare \Rightarrow Enter$ Handset Code → YES → ■

• After a member is deleted from S! Friend's Status Members List, you cannot send/receive a Saving Request notification to/from that person for 24 hours.

Move Members to a Different Group [Change Group]

S! Friend's Status Members List Window Select a group

■Moving One Member

Select a member $\Rightarrow \nabla \rightarrow Change Group \Rightarrow$ $\blacksquare \Rightarrow One \Rightarrow \blacksquare \Rightarrow Select a group \Rightarrow \blacksquare$

■ Moving Multiple Members

Select a member other than yourself (My Status) $\Rightarrow \ \ \Box$ \Rightarrow Change Group $\Rightarrow \ \ \Box$ \Rightarrow Select Multi → Select members → Select a group⇒■

■Moving All Members

Select a member other than yourself (My Status) $\Rightarrow \Box$ \Rightarrow Change Group \Rightarrow \Rightarrow \Rightarrow \Rightarrow \Rightarrow \Rightarrow Select a group →

Edit a Group Name

[Rename]

S! Friend's Status Members List Window Select a group \Rightarrow r \Rightarrow $Rename \Rightarrow$ \Rightarrow Edit the group name \Rightarrow

Update S! Friend's Status Manually [Status Update]

S! Friend's Status Members List Window Settings ⇒ status Update ⇒ ■

Check a Notification

[Notification]

S! Friend's Status Members List Window Y' => Notification ⇒ ■

Contact a Member According to His/Her **Current Status**

[Call/Send Mail]

■Making a Voice Call/Video Call

S! Friend's Status Details Window Select the call answer status → **v** → **Voice Call** or **Video** Call⇒ ■

Sending a Message

S! Friend's Status Details Window Select the mail answer status → ■ → Create a message → 🗟

• For details on creating messages, see pages 4-4 and 4-6.

■Initiating S! Circle Talk

S! Friend's Status Details Window Select the S! Circle Talk answer status

S! Circle Talk Functions

Edit S! Circle Talk Members List

[Edit Group]

■ → Communications → ■ → Circle Talk →
■ → Select a group → □ → Edit Group → ■

■Editing Group Name

Rename → Edit the group name → ■

■Adding Members

Change Member → ■ → Empty → ■ →
Phone Book, Friend Status or Direct Input
→ ■ → Select a member or enter a phone
number → ■ → 🗟

■Changing a Member's Phone Number

Change Member → ■ → Select a member → ■ (twice) → Enter a phone number → ■ → 🗟

■Deleting a Member

Change Member → ■ → Select a member → Pelete → ■ → YES → ■ → 🗟

■Deleting All Members

Change Member → □ → □ → Delete All →
□ → Enter Handset Code → YES → □

Delete a Group or Person from S! Circle Talk Members List

[Delete/Select Multi/Delete All]

■ → Communications → □ → Circle Talk →

■Deleting One Entry

Select a member or a group $\rightarrow \ \square \rightarrow Delete \rightarrow De$


Deleties Multiple 5

■Deleting Multiple Entries

■Deleting All Entries

P \rightarrow Delete \rightarrow \blacksquare \rightarrow All \rightarrow \blacksquare Enter Handset Code \rightarrow YES \rightarrow \blacksquare

Changing Handset Code · · · · · · 11-
Prohibiting/Limiting Use · · · · · · · 11-
Protecting Handset Information · · · · · · 11-
Advanced Features · · · · · · 11-

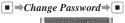



2 Enter current Handset Code



3 Enter new Handset Code



4 Re-enter new Handset Code for confirmation

Security

11

Prohibiting/Limiting Use

Activating PIN Settings

Set to require PIN entry to use handset when handset is turned on with USIM Card inserted in it.





Security Setting Window

- 3 Enter PIN⇒ ■

Prohibiting Handset Use

Set Password Lock to prevent others from using your handset. When Password Lock is activated, Handset Code entry is required to use handset.

From Security Setting Window, select

Password Lock

■ Enter Handset

Code



- 2 Select an item $\Rightarrow ON \Rightarrow \blacksquare$
 - Phone Closed: Locks handset when you close it.
 - Power Saving: Locks handset when Display is turned off for Power Saving.
 - Power Off: Locks handset when it is turned on.
- To cancel Password Lock, enter Handset Code to unlock it temporarily, and then set Password Lock to OFF.
- Phone Closed locks handset when you close it in Standby. Power Saving locks handset when Display is turned off after a certain period of time (as set in the power saving settings) has passed in Standby.
- You cannot make one-touch calls from Earphone-Microphone when Password Lock is activated.

Keypad Lock

Disable all keys to prevent unintentional operations while your handset is in your bag or pocket.

- Press and hold 🔳
 - To cancel Keypad Lock, press and hold while it is set.
- Keypad Lock cannot be set when Bluetooth[®]/ infrared communication is activated.
- When Keypad Lock is set, Information Prompt does not appear.

Using Secure Remote Lock

By using Secure Remote Lock service, if your handset is lost or stolen, you can lock handset functions remotely from a PC or mobile phone. Once the lock is set, all key operations are disabled except for turning the power on, making emergency calls and calling SoftBank Customer Center (157).

For more information on conditions for using Secure Remote Lock, go to http://www.softbank.jp or access My SoftBank from your handset.

Accessing My SoftBank from a Mobile Phone



Protecting Handset Information

Prohibiting Use of Phone Book and Other Features

Set Function Lock to prevent unauthorized access to Phone Book, Calendar, Tasks, Call Log and Sent/Received Log. When Function Lock is set, Handset Code must be entered to access these functions/features.

From Security Setting Window, select

Function Lock

■ Description Handset

Code



2 Select a function $\Rightarrow \blacksquare \Rightarrow Lock \Rightarrow \blacksquare$

Viewing Secret Data

Phone Book entries saved as secret (page 2-18) can be viewed.

From Security Setting Window, select

Secret Mode

■ Enter Handset

Code



- 2 Select Show ⇒ ■
- Secret Mode is set to *Hide* when handset is turned off

More Features



Functions for Prohibiting/Limiting Use (▶ page 11-5)

Advanced Features

Security

Functions for Prohibiting/Limiting Use

From Security Setting Window page 11-3

Change PIN/PIN2

[Change PIN/PIN2]

- Set PIN Settings to *ON* before you change PIN.
 Do not forget your PIN and do not reveal it to
- Do not forget your PIN and do not reveal it to others. Write down your PIN.

Cancel PIN Lock

[Cancel PIN Lock]

While PIN/PIN2 Lock is set, do an operation that requires PIN/PIN2 entry⇒Enter PUK/PUK2 ⇒

■⇒Enter new PIN/PIN2 → ■⇒Re-enter new PIN/PIN2 for confirmation ⇒■

 If Personal Unblocking Key (PUK) is incorrectly entered ten times in a row, USIM Card is locked (USIM lock). If USIM lock is set, it cannot be canceled. Contact SoftBank General Information (page 14-46).

Restrict Access to the Internet by Inputting URLs [Web]

Security Setting Window Restricted Mode \Rightarrow \blacksquare \Rightarrow Enter Internet Security Code (page 1-14) \Rightarrow \blacksquare \Rightarrow Set Regulation \Rightarrow \blacksquare \Rightarrow ON \Rightarrow

■When Internet Security Code is Not Registered

Security Setting Window Restricted Mode > > > Web > • (twice) > Enter Internet Security Code > • Re-enter Internet Security Code for confirmation > • Do not Save > •

- To register a clue to your Internet Security Code, select Save and enter a clue.
- **■**Changing Internet Security Code

Do not Save⇒ ■

• To register a clue to your Internet Security Code, select *Save* and enter a clue.

Infrared ·····	12-2
About Infrared · · · · · · · · · · · · · · · · · · ·	12-2
Using Infrared · · · · · · · · · · · · · · · · · · ·	12-2
Bluetooth [®] · · · · · · · · · · · · · · · · · · ·	12-4
About Bluetooth® · · · · · · · · · · · · · · · · · · ·	12-4
Using Bluetooth®·····	12-5
PC Connection · · · · · · · · · · · · · · · · · · ·	12-8
About PC Connection · · · · · · · · · · · · · · · · · · ·	12-8
Memory Card Backup · · · · · · · · · · · · · · · · · · ·	12-10
About Memory Card Backup · · · · · · · · · · · · · · · · · · ·	12-10
S! Addressbook Back-up ·····	12-12
About S! Addressbook Back-up·····	12-12
Using S! Addressbook Back-up	12-13
Advanced Features ·····	12-14

Infrared


About Infrared

Send/receive Phone Book entries, events, pictures taken with the camera and other data to/from other infrared compatible devices (PCs, handsets).

Precautions

- A dirty Infrared Port may cause an infrared communication failure. If Infrared Port is dirty, gently wipe it with a soft cloth while making sure not to scratch the port.
- Do not move the devices until the file transfer is complete.
- Direct sunlight or fluorescent light may interfere with infrared communication.
- If a voice/video call arrives while handset is sending/receiving files via infrared, the fixed incoming image appears and the fixed melody ringtone sounds. If you answer the call, file transfer is canceled.
- When sending/receiving vObjects, some information may be altered or may not be received.
- You cannot use Bluetooth[®] communication or USB functions other than the charge function during infrared communication.
- S! Friend's Status and S! Circle Talk are unavailable while transferring files even if IP Service is set to QN.

 Bring Infrared Port of handset to within 20 cm of the infrared port of the destination device and align both ports. Make sure no objects are placed between them.

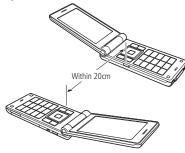

Authentication Password

The authentication password (four digits) is for sending and receiving all data by infrared communication

When sending or receiving all data, the same authentication password needs to be entered on both sending and receiving devices.

Using Infrared

Activating Infrared

Set handset so that it can be connected to other compatible devices via infrared.



Infrared Menu

2 Select *ON/OFF* ⇒ ■

- 3 Select *ON*⇒
 - To cancel infrared standby status, select **OFF**.
- Infrared communication is unavailable when Offline Mode is set to *QN*.
- If handset does not communicate via infrared in three minutes after Infrared has been set to ON, the infrared standby status is canceled automatically.

Transferring Files

Sending a File

Access a function that supports infrared

- 2 Select a file⇒ ¬Send →
 - Select Send vCard to access from Phone Rook
- 3 Select *Via Infrared* ⇒ ■
- Files without transfer permission and files in Saved Pages cannot be sent.
- Removal of memory card during file transfer from memory card may result in loss or damage of files on memory card.

Receiving Files

Handset can receive files when the Infrared setting is ON.

- In Standby, receive a connection request
- 2 Select YES⇒
 - To reject reception of files, select NO.
 - When handset receives a Phone Book entry, event, task or notepad, select YES to save it to your Phone Book, Calendar. Tasks or Notepad.
- 3 Select Phone Memory or Memory Card
- Handset cannot receive files except in Standby.

Sending All Phone Book Entries/Calendar & Task Data

All Phone Book entries on handset, events on Calendar and tasks can be sent to other infrared compatible handsets. Enter the same authentication password on both sending and receiving devices.

- From Infrared Menu, select *Transfer* $All \Rightarrow \blacksquare$
- Enter Handset Code
- Select *Phone Book* or *Cal./Tasks* ⇒
 - When sending Phone Book entries, a confirmation window appears asking if you want to send images saved in Phone Book, Select Without Image to send Phone Book entries without images.
 - When sending events/tasks, a confirmation window appears. Select Without Past not to send past events/tasks.
- Enter the authentication password

Receiving All Phone Book Entries/Calendar & Task Data

All Phone Book entries, events on Calendar and tasks can be received from other infrared compatible handsets. Enter the same authentication password on both sending and receiving devices.

Handset can receive files when the Infrared setting is ON.

- In Standby, receive a connection request
- 2 Enter Handset Code⇒Enter the authentication password
- Select Add ⇒
 - To overwrite all files: Select $Overwrite \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$
 - To cancel receiving files, select Discard.
- Handset cannot receive files except in Standby.

More Features



Functions for Infrared Communication (page 12-14)

Bluetooth®

About Bluetooth®

Transfer Phone Book entries, events and other files in Data Folder between handset and other Bluetooth® compatible devices (PCs, etc.). Also use a handsfree compatible device to make handsfree calls.

Frequency

The Bluetooth® system on handset uses the 2.4 GHz spectrum ranging from 2.402 GHz to 2.480 GHz. Other wireless devices may be using the same frequency. In order to avoid radio interference, note the followings:

- The Bluetooth® system on handset uses 2.4 GHz spectrum. This spectrum is used by industrial, scientific, and medical equipment (microwaves etc.), other radio stations of the same kind, premises radio stations for radio frequency identification which require a license (used in production lines etc.), license free specified low power radio stations, and amateur radio stations (hereafter "other radio stations").
- Before using handset, make sure there are no other radio stations nearby.
- If radio interference occurs between handset and other radio stations, change locations to use handset, or stop using handset (stop emitting radio waves) at once.
- 3. For details, contact SoftBank General Information (page 14-46).

Handset



This wireless device uses 2.4 GHz spectrum. It employs FH-SS modulation, and causes interference within a 10-meter radius.

Precautions

- Communication tests have not been performed for all Bluetooth[®] compatible devices. There is no guarantee of connection with all Bluetooth[®] devices.
- The security function used for wireless communication complies with the standard specifications of Bluetooth®. However, take care when using Bluetooth® for data communication because, in some cases, security may be inadequate depending on the operating environment and configuration.
- SoftBank accepts no liability whatsoever for any data generated or information leaked during Bluetooth® communication.
- If a voice/video call arrives while handset is sending/receiving files by Bluetooth® connection, the fixed incoming image appears and the fixed melody ringtone sounds. If you answer the call, file transfer is canceled.
- When sending/receiving vObjects, some information may be altered or may not be received.
- You cannot use infrared communication and USB functions other than the charge function during Bluetooth[®] communication.

- S! Friend's Status and S! Circle Talk are unavailable while transferring files even if IP Service is set to ON.
- The Bluetooth[®] system on handset has been certified to comply only with specifications of Japanese Radio Law. Using Bluetooth[®] features outside Japan may be punishable by law.

Authentication PIN Code

Authentication PIN code (Bluetooth Passkey) is a 4 to 16 digit number required to connect to a compatible device. Code must be entered on both devices before connection is established.

 You can set a different authentication PIN code on each device

Using Bluetooth®

Use Bluetooth[®] to connect handset to other compatible devices. Transfer files and make dial-up connections.

Activating Bluetooth®

Set handset so that it can be connected to other compatible devices via Bluetooth® communication.





Bluetooth Menu

- 2 Select *ON/OFF* ⇒ ■
- 3 Select *ON*⇒■
 - To cancel Bluetooth[®] standby status, select *OFF*.
- Bluetooth[®] communication is unavailable when Offline Mode is set to ON.

Connecting to Bluetooth® Devices

Finding and Pairing with a Device

Before establishing a Bluetooth® connection, you need to search for, find and then pair with a Bluetooth® compatible device.

From Bluetooth Menu, select Search Device → ■

Handset starts searching for Bluetooth[®] devices and then the names and icons of available devices appear.

- The device type icons are as follows:
 - PC Audio device

 Mobile phone Peripherals

 LAN Printer

 Headset Other device
- 2 Select a device⇒ ⇒Enter an authentication PIN code⇒ ⇒YES or NO⇒ ■

When handset is connected to another Bluetooth® compatible device, the device is registered in the paired device list.

- Enter the same authentication PIN code (any 4 to 16 digits) on handset and the Bluetooth® compatible device.
- An authentication PIN code needs to be entered within approximately 30 seconds for security reasons.

Connecting to a Paired Handsfree Device

From Bluetooth Menu, select *Paired*Device⇒

■



Paired Device List Window

- 2 Select a handsfree device⇒ 🗹
 - If a handsfree device is not registered, press (Search) and select a handsfree device to register it to the paired device list.
- 3 Select *Connect* ⇒ ■

Transferring Files

Sending a File

- Access a function that supports

 Bluetooth®
- 2 Select a file⇒ \(\strice{\pi} \) ⇒ Send \(\strice{\pi} \)
 - Select Send vCard to access from Phone Book
- 3 Select *Via Bluetooth*⇒ ■
- 4 From Paired Device List Window, select a device →
 - If a receiving device is not registered, select (Search) and then select a receiving device.
- Files without transfer permission and files in Saved Pages cannot be sent.
- Removal of memory card during file transfer from memory card may result in loss or damage of files on memory card.

Receiving Files

Handset can receive files when the Bluetooth setting is \boldsymbol{ON} .

- In Standby, receive a connection request⇒YES⇒■
 - If the device information of handset is not registered on the sending device, the same authentication PIN code (any 4 to 16 digits) entry window appears. Enter the same authentication PIN code on handset and the Bluetooth® compatible device.
- 2 Select YES⇒
 - To reject reception of files, select NO.
 - When handset receives a Phone Book entry, event, task or notepad, select YES to save it to your Phone Book, Calendar, Tasks or Notepad.
- Select *Phone Memory* or *Memory Card*⇒ ■
- Handset cannot receive files except in Standby.

Sending All Phone Book Entries/Calendar & Task Data

All Phone Book entries on handset, events on Calendar or tasks can be sent to other Bluetooth® compatible handsets.

- From Bluetooth Menu, select *Transfer*
- 2 Enter Handset Code
- 3 Select *Phone Book* or *Cal./Tasks* →
 - When sending Phone Book entries, a confirmation window appears asking if you want to send images saved in Phone Book. Select Without Image to send Phone Book entries without images.
 - When sending events/tasks, a confirmation window appears. Select Without Past not to send past events/tasks.
- 4 Select a receiving device⇒■
 - If a receiving device is not registered, select (Search) and then select a receiving device.
 - Enter the same authentication PIN code (any 4 to 16 digits) on handset and the Bluetooth[®] compatible device.

Receiving All Phone Book Entries/Calendar & Task Data

All Phone Book entries, events on Calendar or tasks can be received from another Bluetooth® compatible handset.

Handset can receive files when the Bluetooth setting is \emph{ON} .

- In Standby, receive a connection request⇒YES⇒■
 - If the device information of handset is not registered on the sending device, the same authentication PIN code (any 4 to 16 digits) entry window appears. Enter the same authentication PIN code on handset and the Bluetooth® compatible device.
- 2 Select Add ⇒
 - To overwrite all files:
 Select Overwrite → → Enter Handset
 Code → YES → ■
 - To cancel receiving files, select *Discard*.
- Handset cannot receive files except in Standby.

More Features



Functions for Bluetooth® Communication
(page 12-14)



Settings for Bluetooth® Communication (▶ page 13-36)

- Check Details of a Paired Bluetooth® Compatible Device
- Set a Bluetooth® Compatible Device as Trusted Device
- · Check Details of Handset
- · Change Name of Handset
- Communicate Using a Handsfree Device
- Hide Handset

PC Connection

About PC Connection

Use the USB cable to connect handset to a PC to transfer music files. You can also check Data Folder of handset on your PC.

Getting Started

- Install the USB Host Driver software before connecting the USB cable. For details on the installation procedure, refer to the USB Host Driver Installation Guide on the supplied Utility Software (CD-ROM).
- When using the USB cable to connect handset to a PC, be sure to directly insert the plug of the USB cable into a USB port of the PC.
- You cannot use USB functions other than the charge function during infrared/Bluetooth[®] communication.

Configuring USB Connection Mode

Configure the mode for using the USB cable to connect a PC to handset in Standby. Select *Card Reader* to transfer music from a PC, and *Communication* for a dial-up connection.

- Press \longrightarrow Settings \longrightarrow Connectivity \longrightarrow \longrightarrow USB \longrightarrow \bigcirc
- 2 Select Connection ⇒ ⇒

 Communication, Card Reader or

 Always Ask ⇒
 - Select Always Ask to choose the connection mode whenever you connect the USB cable in Standby.
- If handset is not in Standby when connecting the USB cable, handset changes to *Communication* mode even if Connection has been set to *Card Reader* or *Always Ask*.

Transferring Music from a PC to Memory Card

To transfer music files from a PC, use Card Reader mode.

- Offline Mode is set while handset is in Card Reader mode. In Offline Mode, handset cannot make/receive calls, send/receive messages, nor connect to Yahoo! Keitai. In this mode, all the keys are disabled.
- Timer viewing of TV will not start in Card Reader mode.
- Music files cannot be played on handset unless they are transferred using music transfer software.

Switching to Card Reader Mode by Connecting the USB Cable

- In Standby, connect handset to a PC with the USB cable
 - Open the cover of External Device Port and plug in the connector of the USB cable with the inscription facing down.
 - If Connection is set to Always Ask, select Card Reader.



- If Connection is set to Communication, handset does not change to Card Reader mode when connecting the USB cable in Standby.
- If handset is not in Standby when connecting the USB cable, handset changes to Communication mode even if Connection has been set to Card Reader or Always Ask.

Transferring Data

- 🚺 Set handset to Card Reader mode
- 2 Follow the instructions on the PC

Canceling Card Reader Mode

- Use the connected PC's function to remove an external device
- 2 Disconnect the USB cable from handset

More Features



Functions for PC Connection

(page 12-15)



Settings for PC Connection

(► page 13-37)
• Use USB Cable for Charging

Memory Card Backup

About Memory Card Backup

Back up Phone Book entries, events and other data to memory card, and restore as required.

Precautions

- Some data cannot be transferred to memory card.
- Do not use a PC or other device to view or change a backup file on memory card. The file may be damaged.
- Copyrighted data may not be transferred to memory card or restored to handset, or may be deleted from memory card/handset after the transfer.
- If the file name of data restored to handset is more than 32 characters, characters that exceed the limit are omitted when the file is transferred.
- The security lock set to handset Data Folder will not be reflected in the transferred data.

About Backing Up Content Keys

- Since only a single content key backup file can be saved to memory card, backing up another content key will overwrite the previously saved backup file. If you want to maintain the previously backed up content key, import the backup file from memory card to handset and then perform the backup operation again.
- The file whose content key has been moved to memory card for backup will no longer be available on handset.
- Importing a content key into handset adds it to other content keys in handset. It does not overwrite the current handset content keys.

Backing Up Data to Memory Card

Press ■ ⇒ Settings ⇒ ■ ⇒ Backup



Backup Window

- 2 Select Transfer All ⇒ ⇒ Backup
- 3 Select the data to back up⇒ ■



- To select other data, repeat this step.

- 4 Press (Trans.)→ → → Enter Handset Code
 - When transferring Phone Book entries, a confirmation window appears asking if you want to include images saved in Phone Book. Select NO to transfer Phone Book entries without images.
 - When transferring events on Calendar or tasks, a confirmation window appears asking if you want to transfer past events/ tasks. Select *Futures Only* not to transfer past events.

Restoring Data from Memory Card

From Backup Window, select *Transfer* $All \Rightarrow \blacksquare \Rightarrow Restore A$ or $Restore B \Rightarrow \blacksquare$

- If There are no data. appears, select either Restore A or Restore B to restore the data.
- To restore data from a non-3G model SoftBank handset, select *From non-3G*.
- 2 Select the data to restore⇒■



- To select other data, repeat this step.
- 3 Press
 (Read) → → Enter Handset
 Code
 - To restore Phone Book/Events/Tasks/ Messages/Bookmarks/Notepad:
 Select Add or Overwrite ■ (twice) → Select data ■ ■
 - If you select Add, you can add the data without deleting data on handset.

More Features




Functions for Memory Card Backup (▶ page 12-15)

S! Addressbook Back-up

About S! Addressbook Back-up

S! Addressbook Back-up is a service that allows you to back up handset's Phone Book to a network server and synchronize it with the data on the server. It is useful for recovering information if your handset is lost or damaged.

For details on S! Addressbook Back-up, access the following website. http://www.softbank.ip/SAB

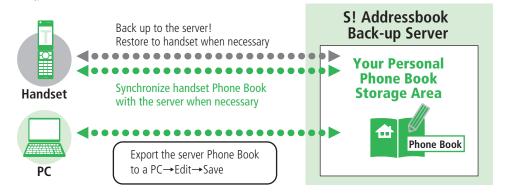

Precautions

- The following
 - The following Phone Book items cannot be synchronized.
 Be careful because the following Phone Book settings on handset are completely deleted when data is read from the server.
 Ringtones/External Lights/Picture/Secret
 - The server Phone Book is deleted when you end your S! Addressbook Back-up contract.
 - Be careful about timing and synchronization type setting when you back up or read data on the server.
 - If you synchronize Phone Book data with the synchronization type of *Synchronize*, *From Client*, or *Backup* after deleting all the Phone Book entries on handset, the server Phone Book is deleted.
 - If you synchronize Phone Book data with the synchronization type of *Synchronize*, *From Server*, or *Restore* after deleting all the Phone Book entries on the server, Phone Book on handset is deleted.

Using S! Addressbook Back-up

Synchronizing Phone Book

Connect to the network server so that Phone Book data on handset and the server can be complemented by each other.

- When synchronizing for the first time, the Synchronize type is used regardless of the synchronization type setting.
- Press \longrightarrow Phone Book \Longrightarrow \longrightarrow Addr. Bkup \Longrightarrow \blacksquare



S! Addressbook Back-up Window

- 2 Select Start Sync → → Start → →
 Enter Handset Code
 - Follow the onscreen instructions.
- Upon starting synchronization, handset connects to the Internet. Transmission fees apply during Internet connections. Ending synchronization terminates the connection automatically.

Setting Synchronization Type

Select from the following types.

Synchronize	Back up changes in handset Phone Book to the server and download new information in the server Phone Book to handset simultaneously.
From Client	Back up changes to the information in handset Phone Book.
From Server	Changes to the information in the server Phone Book are reflected to handset.
Backup	Delete the existing Phone Book data on the server and back up all Phone Book data in handset to the server.
Restore	Delete the existing Phone Book data in handset and reflect all Phone Book data on the server to handset.

From S! Addressbook Back-up Window, select Sync Settings → Select the current Sync Type setting → ■



2 Select a synchronization type⇒ ■ →

☐ (Save)

More Features



Functions for S! Addressbook Back-up (▶ page 12-16)

Advanced Features

File Transfer/Backup

Functions for Infrared Communication

Send My Details

[Send My Details]

 $\blacksquare \Rightarrow Phone \ Book \Rightarrow \blacksquare \Rightarrow My \ Details \Rightarrow \blacksquare$ ⇒ 🗃 ⇒ Via Infrared ⇒ 🔳

Functions for Bluetooth® Communication

From Paired Device List Window page 12-5

Change a Paired Device Name [Device Name]

Paired Device List Window Select a device → 🛂 → **Device Name** → ■ → Enter a device name →

Delete a Paired Device

[Delete Device]

Paired Device List Window Select a device $Delete \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

Cut Off Connection to a Handsfree Device [Disconnect]

Paired Device List Window Select a handsfree device \Rightarrow \neg \Rightarrow $Disconnect <math>\Rightarrow$ \blacksquare

Send My Details

[Send My Details]

 $\blacksquare \Rightarrow Phone \ Book \Rightarrow \blacksquare \Rightarrow My \ Details \Rightarrow$ ■ ⇒ 🗃 ⇒ Via Bluetooth ⇒ 🔳 ⇒ Select a

Use Bluetooth® for Dial-up Connections [Dial-up Connections]

In Standby, receive a connection request from another Bluetooth® compatible device → YES → ■ ⇒Enter an authentication PIN code ⇒ ■

- Handset can use dial-up connections when the Bluetooth setting (page 12-5) is ON.
- Enter the same authentication PIN code (any 4 to 16 digits) on handset and the Bluetooth® compatible device to connect.
- Handset sends a message three times in three minutes to the same device if the receiving device does not respond.
- In a 3G High Speed area, you can receive at a maximum speed of 3.6 Mbps and send at a maximum speed of 384 kbps. Note that sending or receiving very large files can result in high transmission fees

• When accessing the Internet by connecting handset to a PC or PDA (i.e. mobile data communication), a large amount of data is often transferred in a very short time resulting in high packet transmission fees. You are recommended to check the fees now and then during the mobile data communication.

Functions for PC Connection

Use USB Cable for Dial-up Connections [Dial-up Connections]

You can connect handset to a PC with the USB cable and access the Internet.

- Handset sends a message three times in three minutes to the same device if the receiving device does not respond.
- In a 3G High Speed area, you can receive at a maximum speed of 3.6 Mbps and send at a maximum speed of 384 kbps. Note that sending or receiving very large files can result in high transmission fees.
- When accessing the Internet by connecting handset to a PC or PDA (i.e. mobile data communication), a large amount of data is often transferred in a very short time resulting in high packet transmission fees. You are recommended to check the fees now and then during the mobile data communication.

Functions for Memory Card Backup

From Backup Window page 12-10

Back Up/Restore Setting Data

[Relocate]

■Backing Up Setting Data

Backup Window Relocate → ■ → Enter Handset
Code → Backup → ■ → Select a setting data
item → ■ → ≦ → □ → Enter a backup
file code → Re-enter the code for confirmation →
□ (twice) → ■

- To select more than one item, repeat selecting an item and pressing as many times as required.
- A backup file code is a four-digit number set at each backup and required when restoring the setting data to handset. Write down your backup file codes and do not reveal them to others.

■Restoring Setting Data

Backup Window Relocate \blacksquare \Rightarrow Enter Handset Code \Rightarrow Restore or From non-3G \Rightarrow \Rightarrow Select a setting data item \Rightarrow \implies Enter the backup file code \Rightarrow \bigcirc (twice) \Rightarrow

Delete Backup Files

[Delete Data]

Backup Window $Transfer All \Rightarrow \blacksquare \Rightarrow Delete$ $Data \Rightarrow \blacksquare$

■Deleting Phone Book/Events/Tasks/ Messages/Bookmarks/Notepad

Select Data → Select a type of data → Select a file → Select a file → Select a type of data → Select a file → Select a file → Select a type of data → Select a file → Select a type of data → Select

- To select more than one file, repeat selecting a file and pressing as many times as required.

■Deleting All Files

 $All \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare \Rightarrow$ Enter Handset Code

Functions for S! Addressbook Back-up

From > S! Addressbook Back-up Window page 12-13

Synchronize Phone Book Automatically [Auto Sync]

S! Addressbook Back-up Window **Sync Settings**→
Select the current Auto Sync setting→
■

→ON → Enter Handset Code

■Setting Synchronization Schedule

Weekly or **Monthly** → ■ → Set a day of the week/date/time → ■ → 🖾

■Synchronizing Automatically After Editing Phone Book

After Updated ⇒ ■ ⇒ 🗟

 If you select After Updated, synchronization will be performed automatically after about ten minutes whenever handset Phone Book is edited.

View S! Addressbook Back-up History [Sync Log]

S! Addressbook Back-up Window **Sync Log** ⇒ ■ ⇒ Select a log ⇒ ■

Display Settings · · · · · · · · · · · · · · · · · · ·	13-2
Incoming Event Settings · · · · · · · · · · · · · · · · · · ·	13-9
Sound Settings·····	13-11
Mail Settings · · · · · · · · · · · · · · · · · · ·	13-14
Internet Settings · · · · · · · · · · · · · · · · · · ·	13-19
Call Settings · · · · · · · · · · · · · · · · · · ·	13-22
Camera Settings · · · · · · · · · · · · · · · · · · ·	
TV Settings · · · · · · · · · · · · · · · · · · ·	13-28
Media Player Settings ······	13-31
S! Appli Settings · · · · · · · · · · · · · · · · · · ·	13-32
Reset ·····	
Text Entry/Phone Book · · · · · · · · · · · · · · · · · ·	13-34
File Transfer · · · · · · · · · · · · · · · · · · ·	13-36
Various Tools·····	13-38
Communications · · · · · · · · · · · · · · · · · · ·	13-44

13

Display Settings

Menus, Incoming Images, etc.

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Main Screens \Rightarrow \blacksquare \Rightarrow$

Set Menu Icons/Images

Preir	nstalled Icons/Images	ightharpoonup Deco ightharpoonup ightharpoonup Original or Ku-man ightharpoonup ightharpoonup (twice)
Save	ed Icons/Images (Data Folder)	\blacktriangleright Deco \blacksquare or Deco \blacksquare ⇒ \blacksquare ⇒ Phone Memory ⇒ \blacksquare ⇒ Gamendeco ⇒ \blacksquare ⇒ Select a Gamendeco ⇒ \blacksquare (twice) ⇒ YES ⇒ \blacksquare
Keita	aideco	▶ $Deco$ \longrightarrow or $Deco$ \longrightarrow \Longrightarrow \bigstar \bigstar \bigstar \bigstar \bigstar (twice) \Longrightarrow Υ ES \Longrightarrow \blacksquare

Set Incoming Call Image

Preinstalled Image	\blacktriangleright In-Calls → \blacksquare → Voice Call or Video Call → \blacksquare → Original or Ku-man → \blacksquare (twice)
Saved Image (Data Folder/Memory Card)	<i>In-Calls</i> →■→ <i>Voice Call</i> or <i>Video Call</i> →■→ <i>Phone Memory or Memory Card</i>
	→■→Select an image→■→ to compose the image
Keitaideco	\blacktriangleright In-Calls → \blacksquare → Voice Call → \blacksquare → Keitaideco → \blacksquare (twice)

Set Incoming Message Image Preinstalled Image

	(twice)
Saved Image (Data Folder/Memory Card)	Messages → ■ → Receiving or Delivery Check → ■ → Phone Memory or Memory
	$Card \Rightarrow \blacksquare \Rightarrow$ Select an image $\Rightarrow \blacksquare \Rightarrow \clubsuit$ to compose the image $\Rightarrow \blacksquare \Rightarrow \blacksquare$
Keitaideco	\blacktriangleright Messages $\Rightarrow \blacksquare \Rightarrow$ Receiving $\Rightarrow \blacksquare \Rightarrow$ Keitaideco $\Rightarrow \blacksquare $ (twice)

Messages → Receiving or DeliveryCheck → Original or Ku-man →

[•] To set Keitaideco for menu icons/images or incoming call/message image, Keitaideco must be set in advance (page 2-32).




- If you receive a call from a person whose picture is saved to Phone Book and *Picture* under *Caller Details* is set to *ON*, the picture is shown regardless of the incoming image settings. However, if you receive a call from a secret Phone Book entry when Secret Mode is set to *Hide*, the incoming image is shown.
- If a video file is set as ringtone, the incoming image is not shown.

Mini Tool Settings

Select Calendar, Notepad, Weather News, information about songs during playback, or other information to appear on Mini Tool during operations or in Standby.

To show Mini Tool, Wide View must be set to OFF.

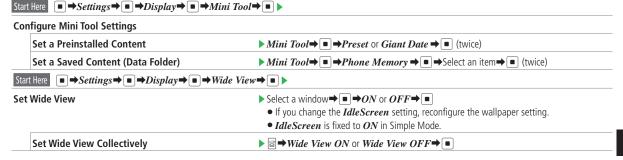

Display Settings



Incoming Caller Details

Start Here ■ → Settings → ■ → Display → ■ → Caller I	Details → • ▶
Set Caller Photo to Appear	▶ Picture \Rightarrow ■ \Rightarrow ON or OFF \Rightarrow ■
Set Caller Info to Appear in External Display	► Ext. Display \Rightarrow \bigcirc ON or OFF \Rightarrow \bigcirc

- When Picture is set to **ON**, incoming image does not appear. However, if you receive a call from a secret Phone Book entry when Secret Mode is set to **Hide**, the caller photo is not shown.
- If a video file is set as ringtone, the caller photo is not shown.

Font Settings

The font size and color for Display can be changed.

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Font Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Font Settings \Rightarrow Each Settings \Rightarrow Ea$ Set Font Size Font Size → ■ → Select a window → ■ → Select a font size → ■ Set Font Color ► Font Color → ■ → Select a font color pattern → ■

Backlight Settings

Set Font Sizes Collectively

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Backlight \Rightarrow \blacksquare \Rightarrow$ Set Power Saving **Power Saving** → Select a time → Set Keypad Lighting Time ► Keypad Light \Rightarrow Enter a lighting time (0 to 15 seconds) \Rightarrow Set Display Lighting \blacktriangleright *Displays* \Rightarrow \blacksquare \Rightarrow *Lighting Time* \Rightarrow \blacksquare \Rightarrow Enter a lighting time (0 to 60 seconds) \Rightarrow \blacksquare **→**Brightness **→** Select a level **→** Set Media Player Lighting (During Video Playback Media Player → ■ → Always ON, Always OFF or Same as Phone → ■ and Streaming)

► Font Size → ■ → 🖾 → Select a font size → 🔳

Display Settings

Settings for External Lights Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow External \ Light \Rightarrow \blacksquare \triangleright$ \blacktriangleright Notification → \blacksquare → Select a type of incoming event → \blacksquare → Select a color or OFF → \blacksquare Set External Lights for Notifications \blacktriangleright Illumination → \blacksquare → Select an item → \blacksquare → Preset or OFF → \blacksquare → Select a pattern → Set External Lights for Incoming Events Set External Lights for Incoming Messages ► Illumination \Rightarrow \blacksquare \Rightarrow Message \Rightarrow \blacksquare \Rightarrow Pattern \Rightarrow \blacksquare \Rightarrow Preset or OFF \Rightarrow \blacksquare \Rightarrow Select a pattern**⇒** ■ Set External Lights for Incoming Feeling Mail ► Illumination \Rightarrow \blacksquare \Rightarrow Message \Rightarrow \blacksquare \Rightarrow Feeling \Rightarrow \blacksquare \Rightarrow ON or OFF \Rightarrow \blacksquare • Priority is given to External Light setting for each Phone Book entry. **Settings for Twin Illuminations** Set Flash Pattern ■ \Rightarrow Settings \Rightarrow ■ \Rightarrow Display \Rightarrow ■ \Rightarrow Twin Illumi \Rightarrow ■ \Rightarrow Select a pattern \Rightarrow ■ Press and hold while handset is closed. Twin Illuminations flash for about three minutes Press on to turn off Twin Illuminations • Side Key must be set to Twin Illumi in advance. **Operator Name Setting** Show/Hide Operator Name in Standby ■ \Rightarrow Settings \Rightarrow ■ \Rightarrow Display \Rightarrow ■ \Rightarrow Operator Name \Rightarrow ■ \Rightarrow ON or OFF \Rightarrow ■

Interface Language	
Switch Language	■ → Settings → ■ → Phone Settings → ■ → Select a language → ■ • If you select Automatic, the language set on USIM Card is automatically selected.
Charging In Progress Image (Slideshow)	
Start Here ■ → Tools → ■ → Photo Stand → ■ ▶	
Set Slideshow On/Off	 NON/OFF → ■ →ON or OFF → ■ →Settings → ■ →Image → ■ →Images List → ■ →Select an image list → ■ • Images must be saved to an image list in advance.
Set Images Saved to an Image List	$\triangleright ON/OFF$ → $\blacksquare \rightarrow ON$ or OFF → $\blacksquare \rightarrow Settings$ → $\blacksquare \rightarrow Image$ → $\blacksquare \rightarrow Image$ List → $\blacksquare \rightarrow Select$ an image list → $\blacksquare \rightarrow Select$ an image $\blacksquare \rightarrow Image$ or $Memory$ $Card$ → $\blacksquare \rightarrow Select$ an image $\blacksquare \blacksquare$ (twice) → \blacksquare
Set Images in a Folder	$\triangleright ON/OFF$ → $\bigcirc \rightarrow ON$ or OFF → $\bigcirc \rightarrow Settings$ → $\bigcirc \rightarrow Image$ → $\bigcirc \rightarrow Select$ Folder → $\bigcirc \rightarrow Select$ a folder → $\bigcirc \rightarrow Select$
Set Preinstalled Images	$\triangleright ON/OFF \Rightarrow \blacksquare \Rightarrow ON \text{ or } OFF \Rightarrow \blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Image \Rightarrow \blacksquare \Rightarrow Preset \Rightarrow \blacksquare$
Set Template	$\blacktriangleright ON/OFF$ → $\blacksquare \rightarrow ON$ or OFF → $\blacksquare \rightarrow Settings$ → $\blacksquare \rightarrow Templates$ → $\blacksquare \rightarrow Select$ a template → \blacksquare (twice)
Set Duration	$\triangleright ON/OFF$ → $\blacksquare \rightarrow ON$ or OFF → $\blacksquare \rightarrow Settings$ → $\blacksquare \rightarrow Duration$ → $\blacksquare \rightarrow Enter$ time \blacksquare

Display Settings

Active Window Settings

Configure settings for S! Quick News in Shortcut Mode (page 2-8).



Show/Hide Images

► Image → ■ → Show or Hide → ■

Restore Settings and Registered Contents of S! Ouick News to Default

 \triangleright Reset → \blacksquare →Enter Handset Code → YES → \blacksquare

Incoming Event Settings

Response Settings for Incoming Calls Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call Settings \Rightarrow \blacksquare \Rightarrow Answer Type \Rightarrow \blacksquare \Rightarrow$ Answer Incoming Calls by Opening Handset (Open to \triangleright Open to $Talk \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare$ Talk) \blacktriangleright Any Keys $\Rightarrow \bullet$ \bullet ON or OFF $\Rightarrow \bullet$ Set Any Key Answer • If Any Key Answer is set to **ON**, you can answer incoming voice/video calls and S! Circle Talk calls by pressing a key from $\square_{**}^{\mathcal{D}}$ to $\square_{***}^{\mathcal{D}}$ or $\square_{***}^{\mathcal{D}}$, besides \nearrow , \square or $\square_{**}^{\mathsf{TW}}$ (for video call). **Answering Machine Settings** Set Answering Machine Response Time $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call Settings \Rightarrow \blacksquare \Rightarrow Ans Machine \Rightarrow \blacksquare \Rightarrow Set Duration \Rightarrow$ ■ ⇒Enter a response time ⇒ ■ **Reject Settings** $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call \ Settings \Rightarrow \blacksquare \Rightarrow Reject \ Calls \Rightarrow \blacksquare \Rightarrow Enter \ Handset \ Code \$ Reject Specific Incoming Calls ▶ Select calls to reject \rightarrow \bigcirc \rightarrow $ON \rightarrow$ \bigcirc **Reject Calls from Specified Phone Numbers** ► Specific #s \Rightarrow \bigcirc \bigcirc ON/OFF \Rightarrow \bigcirc \bigcirc ON \Rightarrow \bigcirc Use Reject List (Save Numbers to Reject List) \triangleright Specific #s → \blacksquare → Reject List → \blacksquare → \blacksquare → Phone Book → \blacksquare → Select an entry → ■ ⇒Select a phone number ⇒ ■ (twice) Enter a Number \triangleright Specific #s → \blacksquare → Reject List → \blacksquare → \blacksquare → Phone Number → \blacksquare → Enter a phone number**→** (twice) Select a Number from Call Log \blacktriangleright Specific #s → \blacksquare → Reject List → \blacksquare → \blacksquare → Call Log → \blacksquare → Select a phone number → (twice)

Incoming Event Settings

• If Call Barring (page 3-17) is set for incoming calls, Call Barring takes priority.

Sound Settings

Set Ringtone Volume

Manner Mode $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Sounds \Rightarrow \blacksquare \Rightarrow Manner Mode \Rightarrow \blacksquare \Rightarrow$ Start Here Switch Manner Modes **Switch Mode** → Select a mode → **Description Original Mode Select an Original Mode Select an item Select an item Select an item Customize Original Mode** item⇒⊠ • For details on setting each item, see "Sound and Vibration". **Sound and Vibration** $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Sounds \Rightarrow \blacksquare \triangleright$ Set Ringtone Set a Preinstalled Sound \blacktriangleright *Incoming* → \blacksquare → Select a type of incoming event → \blacksquare → *Ringtone* → \blacksquare → *Patterns* or *Melodies* → ■ → Select a ringtone → ■ Set a File in Data Folder/Memory Card ► Incoming \Rightarrow \blacksquare \Rightarrow Select a type of incoming event \Rightarrow \blacksquare \Rightarrow Ringtone \Rightarrow \blacksquare \Rightarrow Phone *Memory* or *Memory Card* → Select a file → (twice) • If a play point is included in the selected file, select the play point after selecting the file. • If you set a SMAF file which includes an image as ringtone, the image may not be shown correctly. Incoming → ■ → Voice Call or Message → ■ → Ringtone → ■ → Keitaideco → Set Downloaded Keitaideco Ringtone (twice) • Keitaideco must be set in advance (page 2-32).

volume level→

► Incoming \Rightarrow \blacksquare \Rightarrow Select a type of incoming event \Rightarrow \blacksquare \Rightarrow Ringtone Vol. \Rightarrow \blacksquare \Rightarrow Set

Sound Settings

Set Ring Time	
Specify a Time by Direct Entry	Incoming ⇒ ■ → Message, DeliveryCheck, Missed Call or Friend Status ⇒ ■ → Duration → ■ → Set Duration → ■ → Enter a ring time (1 to 99 seconds) → ■
Play a Specified File until the End	Incoming ⇒ ■ ⇒Message, DeliveryCheck, Missed Call or Friend Status ⇒ ■ ⇒ Duration ⇒ ■ ⇒1 Cycle ⇒ ■
Set Vibration	Incoming → ■ → Select a type of incoming event → ■ → Vibration → ■ → Select a pattern → ■
Set Vibration for Incoming Messages	\blacktriangleright Incoming ⇒ \blacksquare → Message ⇒ \blacksquare → Vibration ⇒ \blacksquare → Pattern ⇒ \blacksquare → Select a pattern ⇒ \blacksquare
Set Vibration for Incoming Feeling Mail	► Incoming \Rightarrow \blacksquare \Rightarrow Message \Rightarrow \blacksquare \Rightarrow Vibration \Rightarrow \blacksquare \Rightarrow Feeling \Rightarrow \blacksquare \Rightarrow ON or OFF \Rightarrow \blacksquare
Set Sound Volume	Sound Vol. ■ → Set volume level → ■
Set Speaker Volume	Speaker Vol. →■ →Set volume level→■
Set Sound Effects	
Set Default Tone	 Sound Effects → ■ → Select an item → ■ → Tone Type → ■ → Original → ■ Select Original 1 (default) or Original 2 for Keypad Tone.
Set a Preinstalled Melody	 Sound Effects → ■ → Select an item → ■ → Tone Type → ■ → Melodies → ■ → Select a melody → ■ You cannot set preinstalled melodies as Keypad Tone.
Set a File in Data Folder/Memory Card	 Sound Effects → ■ → Select an item → ■ → Tone Type → ■ → Phone Memory or Memory Card → ■ → Select a file → ■ (twice) You cannot set files which include an image as sound effects. You cannot set files in Data Folder or memory card as Keypad Tone.

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Sounds \Rightarrow \blacksquare \triangleright$	
Set Sound Effects Volume	<i>Sound Effects</i> → Select an item → <i>Tone Volume</i> → → Set volume level →
Set Kacha-ble Lets you know there are missed calls or new messages by vibrating handset when you open it.	► $Kacha-ble$ → Select an item → ON or OFF → ON
Set Kacha-ble Collectively	► Kacha-ble \Rightarrow \blacksquare \Rightarrow \bigcirc \bigcirc ON or OFF \Rightarrow \blacksquare

Mail Settings

Message Creation Settings


Add Recipients to Simple Input List	 Simple Input → ■ → Select a list item with no entry → ■ → Enter an address For details on how to enter addresses, see page 4-4.
Set Groups	<i>Category</i> → ■ → Select a group → ■ → Enter addresses
Edit a Group Name	\triangleright Category → \blacksquare → Select a group → \blacksquare → Rename → \blacksquare → Enter a group name → \blacksquare
Set Send Type (To/Cc/Bcc) for Each Address	► Category ⇒ \blacksquare → Select a group → \blacksquare → Select an address → \boxdot → $To/Cc/Bcc$ → \blacksquare → To, Cc or Bcc → \blacksquare
Set a Signature	Signature → Signature 1 or Signature 2 → Signature → Signature → Signature → Signature → Signature 1
Cancel Signature Insertion	> Signature → ■ → No Signature → ■
Edit Signature	Signature → ■ → Signature 1 or Signature 2 → Edit → ■ → Edit the signature ■
Set Default Mail Type	▶ Default Type \Rightarrow ■ \Rightarrow SMS or S! Mail \Rightarrow ■
Show/Hide Notification When Mail Type is Switched	Notify Type ⇒ \blacksquare ⇒ Show or Hide ⇒ \blacksquare

Outg	joing	Mess	ages
------	-------	------	------

Show/Hide Sending Confirmation Window	► Confirmation \Rightarrow \blacksquare \Rightarrow Show or Hide \Rightarrow \blacksquare
et Vibration When Sending is Confirmed	▶ <i>Vibration</i> \Rightarrow <i>ON</i> or <i>OFF</i> \Rightarrow \blacksquare
heck Delivery	\triangleright Delivery Check $\Rightarrow \blacksquare \Rightarrow Ask \Rightarrow \blacksquare$
et Server Storage Period of Sent Messages	<i>Expiry</i> → SMS or S! Mail → Select an expiry time →
et Message Priority	<i>Priority</i> → ■ → Select a priority → ■
t Time for Delivering Messages to Recipients	Delivery Time ■ Select a delivery time ■
ve a Reply Address	 Reply to → ■ →ON→ ■ →Enter an address For details on how to enter addresses, see page 4-4.
lit SMS Center Number (+819066519300)	► Message Ctr→ (three times) → Input SMS Center Number →

- SMS may become unavailable after changing SMS Center Number.
 Once SMS Center Number is changed, resetting handset will not restore the default number.

Display Settings

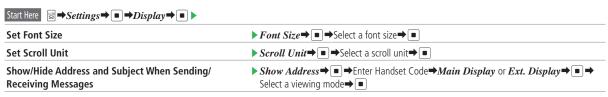

Mail Settings

3D Pictograms

3D Pictograms are a 3D animation playback function compatible with words, pictographs and emoticons in the message text.

Start Here \implies \rightarrow Settings \Rightarrow \implies \implies \implies \implies \implies \implies \implies

Set Automatic Playback of 3D Pictograms

▶ Auto Play → ■ → All, Unread Only or OFF → ■

- 3D Pictograms are unavailable in S! Mail notifications, SMS with no text and Graphic Mail.
- Background playback of music files is paused during 3D Pictograms playback.

Message Box Settings	
Do Not Auto-delete Old Messages	Sent⇒ → Do not Set → ■
Switch Between Folder View and All Message View	S→Message Box→ → → Display → ■ → Folder View → ■ → Folder View of All Messages → ■
Switch Between Mixed View and Separate View	
Message List View Settings	
Start Here → Message Box → ■ → Select a folder → ■	→ □ → Display → □ →
Switch Message List Views	Display Items → Subject or Addresses → ■
Split Message List Window	 Change View → ■ → Preview or Text Only → ■ If you select Preview, the beginning of Graphic Mail text is also shown in the preview window.
	 If you do not want to split Message List Window, select List Only.

• When *Subject* is selected for Display Items, the preview window shows the other party's address. When *Addresses* is selected for Display Items, the subject is shown in the preview window.

Message List Window Settings

Mail Settings

Fi	lter Messages	► ► Filter → ■ → Select a criterion → ■	
	reate a New Phone Book Entry with a Phone umber/E-mail Address	► Select a message → ✓ → Save Sender → ■ → Add New → ■ → Enter other items → 🗟	
	dd a Phone Number/E-mail Address to a Phone ook Entry	► Select a message → ¬Save Sender → → Add → → Select a Phone Book entry → □ → □	
S	witch Between Unread and Read		
	Switch One Message Between Unread and Read	▶ Select a message $\Rightarrow v$ $\Rightarrow Unread/Read$ $\Rightarrow One$ $\Rightarrow To Unread$ or $To Read$ $\Rightarrow \blacksquare$	
	Switch Multiple Messages Between Unread and Read	► \(\mathbb{\text{\$\maxiting{\text{\$\mathbb{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\xi\sincentifteta}}}}} \modelengthered{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\xi\tiny{\$\tinx{\$\notint{\$\and{\text{\$\maxitin{\text{\$\maxitin{\text{\$\maxitin{\text{\$\and{\text{\$\maxitin{\text{\$\xi\tinx{\$\tinx{\$\notin{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\text{\$\and{\tinx{\$\and{\text{\$\end{\text{\$\en{\text{\$\end{\con{\text{\$\exitin{\text{\$\and{\text{\$\end{\cutext{\$\and{\text{\$\end{\cutext{\$\end{\cutext{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\cin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin{\text{\$\exitin}}}}}	
	witch All Messages in a Folder Between Unread and ead	► ¬Unread/Read → ¬All → ¬To Unread or To Read → ¬Change → ¬	

• Only received messages can be switched between unread and read.

Mini Tool Setting in Message List Window

Set Mini Tool in Message List Window	B→Message Box, Drafts or Unsent→ → → Display → → Wide View ON
	or Wide View OFF ⇒ ■
	• To show Mini Tool in Message List Window, select <i>Wide View OFF</i> .

Internet Settings

Security Settings

Security Security		
Start Here for Yahoo! Keitai		
Start Here for PC Site Browser $\[egin{array}{c} & & \\ & $		
Send/Block Manufacture Number	<i>Manufacture #</i> →■ <i>Send</i> or <i>Do not Send</i> →■	
Configure Send Referer Setting	► Send Referer→ ■ → Send or Do not Send → ■	
Enable/Disable Cookies	Cookie ■ Enable , Disable or Always Ask ■	
Configure Script Settings	Script⇒ ■ → Ask Once, Enable, Disable or Always Ask → ■	
Check Root Certificates	Root Certif. →■ Select a root certificate	
Set Authentication	► Authentica → ■ → Retain Info, Per Session or Do not Retain → ■	
Set SSL Communication	Session Info.⇒■ ⇒Show or Hide ⇒ ■	

Internet Settings

Universal Settings for Yahoo! Keitai and PC Site Browser		
Start Here for Yahoo! Keitai		
Start Here for PC Site Browser ✓ (Press and hold) ✓ Setting	gs	
Clear Cache	<i>Memory Mgr.</i> ⇒■⇒Enter Handset Code⇒ <i>Clear Cache</i> ⇒■⇒ <i>YES</i> ⇒■	
Delete All Cookies	<i>Memory Mgr.</i> →■→Enter Handset Code→ <i>Clear Cookie</i> →■→ <i>YES</i> →■	
Clear Authentication Info	<i>Memory Mgr.</i> →■→Enter Handset Code→ <i>Clear Auth</i> →■→ <i>YES</i> →■	
Return Browser Settings, Bookmarks, and Saved Pages to Default	<i>Browser Reset</i> ⇒ ■ ⇒Enter Handset Code ⇒ <i>YES</i> ⇒ ■	
Restore Settings and Stored Information to Default	<i>Reset Setting</i> → ■ →Enter Handset Code → <i>YES</i> → ■	
Yahoo! Keitai Settings		
Set Storage Location of Downloaded Contents	$\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $	
PC Site Browser Settings		
Do Not Show Alert When Switching Browsers	$ (Press and hold) \Rightarrow $	

Web Page Settings	
Web Page → (page 5-3, 5-4)	
Change Font Size	Web Page→ → Settings → ■ → Font Size → ■ → Select a size → ■
Change Scroll Unit	Web Page $\Rightarrow \ \ $
Change Text Encoding Type	Web Page → Settings → Encoding Type → Select a text encoding type →
Adjust Sound Playback Volume	Web Page→¬Settings→■→Sound Volume→■→Set volume level→■
Do Not Download Images and Melodies from Web Pages	Web Page \Rightarrow \Rightarrow $Settings \Rightarrow$ \blacksquare \Rightarrow $Downloads \Rightarrow$ \blacksquare \Rightarrow $Images$ or $Sounds \Rightarrow$ \blacksquare \Rightarrow $Donot Download \Rightarrow$ \blacksquare
Set Security Lock	© (Press and hold) → Bookmarks, Saved Pages, Enter URL or History → Security Lock → ■ → Enter Handset Code → Lock or Unlock → ■
Set Security Lock to a Bookmark Folder	© (Press and hold)⇒ Bookmarks ⇒ ⇒Select a folder⇒ © ⇒ Security Lock ⇒ ⇒ Enter Handset Code⇒ Lock or Unlock ⇒ ■
Set Security Lock to PC Sites	© (Press and hold) → © → Bookmarks, Saved Pages, Enter URL or History → © → Security Lock → ■ → Enter Handset Code → Lock or Unlock → ■

Call Settings

International Call Settings

Change International Code	<i>Intl. Code</i> → ■ →Enter Handset Code →Enter a code → ■	
Add Country Codes to Country Number List	\blacktriangleright CountryNumber → \blacksquare → \trianglerighteq → Add → \blacksquare → Enter a country name → \blacksquare → Enter a country code → \blacksquare	
Set Operator to Use	 Operator → ■ → Auto/Manual → ■ → Automatic or Manual → ■ When Automatic is selected, an operator is automatically selected according to the priority list. 	
Change Priority Order of Operators	 Operator → ■ → Set Priority → ■ → Insert or Move → ■ → Select an operator → ■ (twice) → Select a position → ■ If you select Add to Bottom, you can select and add an operator to the end of the priority list. 	
Add an Operator	Departor → ■ → Add Operator → ■ → Empty → ■ → Operator Name → ■ → Entra an operator name → ■ → Country Code → ■ → Enter a country code → ■ → Operator Code → ■ → Enter an operator code → ■ → Save → ■	

Call Cost Settings

Start Here	■ → Setti	ings⇒□⇒(Call Settings=	► → Call T	ïme&Cost → U	•

Set Currency & Exchange Rate	\blacktriangleright Cost Unit → \blacksquare → \trianglerighteq → Settings → \blacksquare → Enter PIN2 → \blacksquare → Enter a currency (three
	characters)→ ■ →Enter an exchange rate → ■ →YES → ■

 Show Call Cost After Each Call
 ▶ Cost Display ⇒ ■ → ON → ■

 Set Maximum Cost Limit
 ▶ Cost Limit → ■ → Set Max Limit → ■ → Enter PIN2 → ■ (twice) → Enter a maximum cost limit → ■

[•] You cannot make voice and video calls if the total cost reaches the specified maximum cost limit. If the limit is reached during a call, the call ends.

Video Call Settings

 $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call Settings \Rightarrow \blacksquare \Rightarrow Video Call \Rightarrow \blacksquare \triangleright$

Set Alternative Picture

	Set Default Image	$ ightharpoonup Alt. \ Picture ightharpoonup ightharpoonup ightharpoonup ON ightharpoonup ightharpoonup Preset ightharpoonup ightharpoonup (twice)$
	Set an Image in Data Folder/Memory Card	► Alt. Picture \rightarrow \blacksquare \rightarrow ON \rightarrow \blacksquare \rightarrow Phone Memory or Memory Card \rightarrow \blacksquare \rightarrow Select an image \rightarrow \blacksquare (twice)
Set Incoming Image Quality		<i>Image Quality</i> → ■ → Select an item → ■
Add a Dhana Number to Auto Anguer List		

Select a Phone Number from Phone Book	<i>Auto Answer</i> → ■ → <i>Answer List</i> → ■ → ≦ → Enter Handset Code → <i>Phone Book</i> → ■ → Select an entry → ■ → Select a phone number → ■ (twice)
Enter a Phone Number Directly	<i>Auto Answer</i> → Answer List → → → Enter Handset Code → Phone Number → → Enter a phone number → (twice)
Select a Phone Number from Call Log	<i>Auto Answer</i> → Answer List → →

Set Mute Mute → ■ → Mute My Voice, Mute All or OFF → ■ **Set Audio Output** ► Loud Speaker \Rightarrow \bigcirc \bigcirc ON or OFF \Rightarrow \bigcirc

Set Hold Image

Set Default Image	► Hold Setting → ■ → Hold on Call or Hold Answer → ■ → Preset → ■ (twice)
Set an Image in Data Folder/Memory Card	► Hold Setting → ■ → Hold on Call or Hold Answer → ■ → Phone Memory or
	<i>Memory Card</i> → Select an image → (twice)

Earphone-Microphone Settings

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call \ Settings \Rightarrow \blacksquare \Rightarrow Earphone \Rightarrow \blacksquare \Rightarrow Earphone$

Save a Phone Number for Earphone-Microphone Call

Select a Phone Number from Phone Book	► Earphone Call • • → ON/OFF • • → ON → • → Set Number → • → Phone
	Book → ■ → Select an entry → ■ → Select a phone number → ■ (twice)
Enter a Phone Number Directly	► Earphone Call \rightarrow \bigcirc \rightarrow $ON/OFF \rightarrow$ \bigcirc \rightarrow $ON \rightarrow$ \bigcirc \rightarrow Set Number \rightarrow \bigcirc \rightarrow Phone
	<i>Number</i> → ■ →Enter a phone number → ■ (twice)

Set Auto Answer

Call Settings

Allows you to answer an incoming voice call without pressing the switch when Earphone-Microphone is connected

- Add Answer → Add Answer
- If you set Auto Answer and Answering Machine, Answering Machine is given priority.
- If you set Auto Answer and Voice Mail, the one with shorter response time is given priority. If the response time is the same, Voice Mail is given priority.

External Device Settings

Set Access Point Name (APN) to Perform Packet

Transmission from a PC

□ → Settings → □ → External Device → □ → Empty → □ →

Enter an access point name (APN) → □ → YES → □

Camera Settings

Settings for Shooting Pictures/Videos

Settings for Shooting Fictures, viacos	
Viewfinder → (page 7-3)/ Video Viewfinder → (page 7-5)	
Save Pictures/Videos Automatically	$ \begin{tabular}{ll} Viewfinder/Video Viewfinder \\ \hline \begin{tabular}{ll} \hline \end{tabular} \hline \end{tabular} \\ \hline \end{tabular} \hline \end{tabular} \\ \hline \end{tabular} \hline \end{tabular} \hline \end{tabular} \\ \hline \end{tabular} \hline tabula$
Change Storage Location	Viewfinder/Video Viewfinder $\Rightarrow Save \ Settings \Rightarrow Storage \Rightarrow Phone$ Memory or Memory Card $\Rightarrow Select \ a \ folder \Rightarrow Select \ a \ fold$
Set Image Quality	Viewfinder/Video Viewfinder $\Rightarrow Picture$ or $Movie \Rightarrow \blacksquare \Rightarrow Quality \Rightarrow \blacksquare \Rightarrow$ Select a quality $\Rightarrow \blacksquare$
Set White Balance	Viewfinder/Video Viewfinder \Rightarrow $Picture$ or $Movie$ \Rightarrow $White Balance$ \Rightarrow $Select an item \Rightarrow \blacksquare$
Adjust Color Control	Viewfinder/Video Viewfinder \Rightarrow \bigcirc \Rightarrow $Picture$ or $Movie \Rightarrow$ \bigcirc \Rightarrow $Color Control \Rightarrow$ \bigcirc \Rightarrow Select a color tone \Rightarrow \bigcirc
Set Picture/Video Effects	Viewfinder/Video Viewfinder→ → Picture or Movie → ■ → Effects → ■ → Select an effect → ■
Adjust Flicker E.g. under fluorescent light, you can set the frequency (Automatic/50Hz/60Hz) to reduce flicker.	Viewfinder/Video Viewfinder $\Rightarrow \forall \Rightarrow Function \Rightarrow \blacksquare \Rightarrow Flicker \Rightarrow \blacksquare \Rightarrow Automatic,$ 50 Hz or 60 Hz $\Rightarrow \blacksquare$
Set Shortcuts While Shooting Pictures/Videos	Viewfinder/Video Viewfinder $\Rightarrow v \Rightarrow Function \Rightarrow v \Rightarrow Key Shortcut \Rightarrow v \Rightarrow ON \text{ or } OFF \Rightarrow ON $
Set File Name	
Use Date and Time	Viewfinder/Video Viewfinder $\Rightarrow \square \Rightarrow Save \ Settings \Rightarrow \square \Rightarrow File \ Name \Rightarrow \square \Rightarrow Date \& Time \Rightarrow \square$
Define a Name	Viewfinder/Video Viewfinder → ¬Save Settings → ¬File Name → ¬Define → Enter a file name → □

[•] Auto Save cannot be set in *Video* mode.

Camera Settings

Settings for Taking Pictures				
Viewfinder → (page 7-3)/ Preview Window → (page 7-3)				
Set Focus Mode	Viewfinder→¬Function→¬Focus Mode→¬Select a focus mode→¬			
Change Shutter Sound	Viewfinder ⇒ \checkmark ⇒ Function ⇒ \blacksquare ⇒ Shutter Sound ⇒ \blacksquare ⇒ Pattern 1 or Pattern 2 ⇒ \blacksquare			
Add Date Stamps	Viewfinder \Rightarrow $Picture$ \Rightarrow $Date Stamp$ \Rightarrow ON \Rightarrow $Select a font color \Rightarrow$			
Set Guidelines	Viewfinder $\Rightarrow \neg Function \Rightarrow \blacksquare \Rightarrow Grid \Rightarrow \blacksquare \Rightarrow ON \text{ or } OFF \Rightarrow \blacksquare$			
Take a Picture for a Phone Book Entry				
Create a New Phone Book Entry with a Picture	Preview Window → To Phone Book → → Add New → → Create a Phone Book entry • Set Camera mode to Mobile and Picture Size to W112×H112 in advance. • For details on saving a Phone Book entry, see page 2-17.			
Add a Picture to a Phone Book Entry	Preview Window → To Phone Book → → Add → → Select a Phone Book entry → → → □ → □ • If the selected Phone Book entry contains a picture, select YES and press □ to replace the picture. • Set Camera mode to Mobile and Picture Size to W112 × H112 in advance.			

[•] When Camera mode is set to *Digital*, or when it is set to *Mobile* with Picture Size set to *W112×H112*, you cannot add date stamps.

Settings for Recording Videos Video Viewfinder → (page 7-5)/ Preview Window → (page 7-6)		
Do Not Record Sound	Video Viewfinder → ¬ → Voice Record → ¬ → OFF → ¬	
Enlarge Video Viewfinder	Video Viewfinder → □ → ScreenDisplay → ■ • Cannot be set when Video mode is set to Video.	
Change Start/End Tone	Video Viewfinder $\Rightarrow v \Rightarrow Function \Rightarrow v \Rightarrow Start/End \Rightarrow v \Rightarrow Pattern 1$ or $Pattern 2 \Rightarrow v \Rightarrow$	
Set Preview On/Off	Video Viewfinder \Rightarrow $rac{}{}$ $rac{}$ $rac{}{}$ $rac{}$ $rac{}{}$ $rac{}$ $rac{}{}$ $rac{}$ $rac{}{}$ $rac{}$ $rac{}{}$ $rac{}$ $rac{}{}$ $rac{}$ $rac{}{}$ $rac{}{}$ $rac{}{}$ $rac{}$ $rac{}$ $rac{}{}$ $rac{}$	
Set Recorded Video as a Ringtone Pattern		
Create a New Phone Book Entry with a Ringtone Pattern Set for It	Preview Window → ► To Phone Book → ■ → Add New → ■ → Create a Phone Boo entry • Cannot be set when Video mode is set to Video. • For details on saving a Phone Book entry, see page 2-17.	
Set a Ringtone Pattern for a Phone Book Entry	Preview Window → To Phone Book → → Add → → Select a Phone Book entry → → → ○ • If a ringtone pattern has already been set for the selected Phone Book entry, select YES and press ○ to replace the ringtone pattern. • Cannot be set when Video mode is set to Video.	

TV View Screen Setting

TV View Screen Setting	
IV view screen setting	
Set TV Start-up View	$\blacksquare \Rightarrow TV \Rightarrow \blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow First \ View \Rightarrow \blacksquare \Rightarrow Full \ Screen, \ Portrait \ Of \ Landscape \Rightarrow \blacksquare$
Settings for Watching TV	
Start Here $\Longrightarrow \Longrightarrow Settings \Longrightarrow \blacksquare$	
Channel List Name	<i>Set Channels</i> → Select a channel list → ¬Rename → →Enter a channel list name → ■
Auto-off Timer	▶ Off-timer⇒ ■ ⇒30 minutes, 60 minutes, 120 minutes or OFF⇒ ■
Image and Sound	
Start Here ▼▼ ▶	
Set Brightness	<i>Settings</i> → <i>Screen Settings</i> → <i>Brightness</i> → <i>Select a level</i> →
Set Image Quality	► Settings → ■ → Screen Settings → ■ → Image Quality → ■ → Fine, Normal or Cinema → ■
Set Image Sharpness	▶ Settings → ■ → Screen Settings → ■ → Sharpness → ■ → Sharp, Soft or OFF → ■
Set Economy Mode	▶ Settings → ■ → Screen Settings → ■ → Economy Mode → ■ → ON or OFF → ■
Set Subtitles	► Subtitles \Rightarrow \blacksquare \Rightarrow ON or OFF \Rightarrow \blacksquare
Set Audio Output	► Switch Audio → ■ → Main or Sub → ■

Data Broadcasts	
Start Here → ✓ → Settings → ■ → Datacasting → ■ >	
Set Data Communication Confirmation Window	► Start Comm. → ■ → Ask before or Do not Ask → ■
Set Secure Connection Confirmation Window Specify whether a confirmation window appears whenever data communication that uses encryption, a digital signature, or some other security function is performed over a secure connection (SSL).	► Go to Secured → ■ → Ask before of Do not Ask → ■
Set Memory Access Confirmation Window	► Access Memory ⇒ ■ ⇒Ask before or Do not Ask ⇒ ■
Delete Broadcast Data	
Delete Data of a Station	\triangleright Clear Memory $\rightarrow \blacksquare$ \rightarrow Select a station $\rightarrow \boxdot$ \rightarrow Clear $\rightarrow \blacksquare$ \rightarrow YES $\rightarrow \blacksquare$
Delete All Data	\blacktriangleright Clear Memory → \blacksquare → \boxdot → Clear All → \blacksquare → Enter Handset Code → YES → \blacksquare
Select a Station and Delete by Entry	\blacktriangleright Clear Memory → \blacksquare → Select a station → \blacksquare → Select an entry → \boxdot → Clear → \blacksquare → YES → \blacksquare
Delete All Data of a Station and Its Affiliated Stations	<i>Clear Memory</i> → Select a station → → ✓ <i>Clear All</i> → ■ → Enter Handset Code → <i>YES</i> → ■
Set Location Information Send Setting	► Send Location → ■ → Always Ask, Send or Do not Send → ■
Set Whether or Not to Send Manufacture Number Specify whether your manufacture number (IMEI) is sent automatically as a user ID when you use a data broadcast or packet transmission.	Manufacture # ⇒ ■ ⇒Send or Do not Send ⇒ ■
Set Content Storage Location	► Storage → ■ → Phone Memory Of Memory Card → ■

TV Settings

- Positioning cannot be done when Positioning Lock is set. To send location information, set Positioning Lock to OFF.
- Even if *Always Ask* or *Send* is specified for location information send setting, location information is not sent if *Do not Send* is selected for S! GPS Navi location information send setting (*LocationProperty*).

Settings for View Timer



Media Player Settings

Settings for Playing Music	
Start Here ■ → Media Player → ■ → Audio →	
Set Audio Output	 Output Settings → ■ → Speaker/Earphone or Wireless → ■ When you select Wireless, do the following. Select a paired wireless device → ■ For details on pairing a wireless device, see page 12-5 as well as the instruction manual for the device.
Set Wallpaper During Playback	▶ Player Image → ■ → Original or Ku-man → ■

S! Appli Settings

Operational Settings

Change Sound Effect Volume	Volume ■ Set volume level ■
Set Backlight	Backlight ■ → ON/OFF → ■ → Always ON, Always OFF or Same as Phone ■
Set Flashing of Backlight	► $Backlight$ → $Blink$ → $Blink$ → ON or OFF → B
Set Vibration	\blacktriangleright Vibration \Rightarrow \blacksquare \Rightarrow ON or OFF \Rightarrow \blacksquare
Set Priority While Running S! Appli	
Set Priority When a Voice/Video Call Arrives	Calls&Alarms ■ → Voice Call or Video Call → ■ → Pause Apps or Continue Apps → ■
Set Priority When a Message Arrives	<i>Calls&Alarms</i> → ■ → <i>Message</i> → ■ → <i>Pause Apps or Continue Apps</i> → ■
Set Priority When Alarm is Activated	► Calls&Alarms → ■ → Alarm → ■ → Pause Apps or Continue Apps → ■

Other Settings

Start Here	■ ⇒S! Appli⇒		
------------	--------------	--	--

Set Confirmation Window for Making Calls or Network Connection	Library → Select an S! Appli → Security → Select a function → → Blanket, Session, Oneshot or No → ■
Update S! Appli Information on Memory Card	\triangleright Card Sync \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare
View S! Appli License Information	▶ Information ⇒ ■
Check S! Appli Root Certificates	<i>Certification</i> → Select a certificate → ■



Resetting Handset to Default

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Security \Rightarrow \blacksquare \Rightarrow Reset \Rightarrow \blacksquare $	
Return All Settings to Default and Delete All Data Stored on Handset	<i>Reset All</i> →■→Enter Handset Code→ <i>YES</i> →■
Reset All Settings to Default	<i>Reset Setting</i> → ■ → Enter Handset Code → <i>YES</i> → ■
Delete All Phone Book Entries, Files in Data Folder and Messages	<i>Clear Memory</i> → ■ →Enter Handset Code → <i>YES</i> → ■
Reset Confirmation Windows to Default	ightharpoonup Confirmation $ ightharpoonup$ Enter Handset Code $ ightharpoonup$ $ ightharpoonup$

- Files or information saved on USIM Card and memory card are not restored after resetting handset.
 Reset All cannot be performed when Web restriction under Restricted Mode is set to ON. Set Web restriction to OFF before performing reset operations.
- Performing Reset All or Clear Memory deletes some preinstalled S! Appli and contents, which cannot be restored to the status at the time of purchase.

Text Entry/Phone Book

Text Entry Settings	
Start Here In a text entry window→ → Customize → ■)	•
Change Input Method	▶ Input Method⇒■→Standard, Beeper, T9 or Multi-tap→■
Do Not Show Word Suggestions from Entered Text	ightharpoonup Predict Text → $ ightharpoonup$ → OFF → $ ightharpoonup$
Do Not Predict Next Phrase from Entered Phrases	ightharpoonup Prediction ightharpoonup Phrase ightharpoonup ightharpoonup Phrase ightharpoonup ightharpoonup ightharpoonup Phrase ightharpoonup ightharpoonup Phrase ightharpoonup ightharpoonup Phrase ightharpoonup ightharpoonup Phrase ightharpoonu
Set Custom Window	Custom Window ■ → Add to Window ■ (twice) → Enter symbols and pictographs ■
Show/Hide Custom Window	 Custom Window → ■ → Display → ■ → Display or Do not Display → ■ When Display is set, Custom Window appears in text entry windows so that you can quickly enter symbols and pictographs that are saved to Custom Window.
Set Text Deletion Method	 Clear Setting → ■ → Delete or Back Space → ■ When Delete is set, pressing deletes a character to the right of the cursor; when Back Space is set, pressing deletes a character to the left of the cursor.
Reset Prediction Dictionary/Conversion Dictionary	▶ Reset Learned → ■ → Prediction of Conversion → ■ → YES → ■

Phone Book Settings $\blacksquare \Rightarrow Phone \ Book \Rightarrow \blacksquare \Rightarrow Settings \Rightarrow \blacksquare \triangleright$ Start Here **Change Storage Location** ► Select Storage → ■ → Always Ask, Phone Memory, USIM or Memory Card → ■ Prohibit Use of Phone Book **Phone Book Lock** → ■ **→**Enter Handset Code **→**Lock → ■ • If you want to use Phone Book, enter Handset Code to temporarily unlock Phone Book Lock • If Phone Book Lock is set to **Lock**, Speed Dial is unavailable to make calls. **Settings for Phone Book Groups** $\blacksquare \Rightarrow Phone \ Book \Rightarrow \blacksquare \Rightarrow Group \Rightarrow \blacksquare \Rightarrow Select a group \Rightarrow \blacksquare \Rightarrow Select the group name$ Edit a Group Name/Group Icon → ■ → Enter a group name → ■ → Select a group icon → ■ → 🗟 • Press v and select **To USIM** or **To Phone** to switch between handset and USIM Card.

File Transfer

Settings for Bluetooth® Communication

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Connectivity \Rightarrow \blacksquare \Rightarrow Bluetooth \Rightarrow \blacksquare $	
Check Details of a Paired Bluetooth® Compatible Device	<i>Paired Device</i> → Select a device → ■
Set a Bluetooth® Compatible Device as Trusted Device If you set a paired Bluetooth® compatible device as trusted device, a confirmation window does not appear and a connection is established when a connection request is received from that device.	<i>Paired Device</i> → Select a device → ¬Trust Device → ■ → ON → ■
Check Details of Handset	> Settings → ■ → Details → ■
Change Name of Handset	<i>Settings</i> → ■ → <i>Device Name</i> → ■ → Enter a device name of handset → ■
Communicate Using a Handsfree Device	 Settings⇒ ■ ⇒Set Handsfree⇒ ■ ⇒Handsfree⇒ ■ To make and receive regular calls on handset, select Private.
Hide Handset	Settings

• If handset receives a connection request from a device and you register the device to the paired device list by entering an authentication PIN code, a part of the device information is not shown.

Settings for PC Connection

Use USB Cable for Charging

 $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Connectivity \Rightarrow \blacksquare \Rightarrow USB \Rightarrow \blacksquare \Rightarrow Battery \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare$

- Charging is not possible while the PC or handset is turned off.
- Charging may not be possible depending on the connection settings of the PC.
- If handset and a PC are connected with the USB cable, either the PC battery or handset battery is consumed depending on the Battery setting, regardless of whether they are communicating data.

ON: PC battery is used.

OFF: Handset battery is used.

Various Tools

Settings for Saving Events

Change Alarm Volume	$ \land Alarm \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare \Rightarrow Volume \Rightarrow \blacksquare \Rightarrow \text{Set volume level} \Rightarrow \blacksquare \Rightarrow \boxdot \text{ (twice)} \Rightarrow OK \Rightarrow \blacksquare $
Change Vibration	\blacktriangleright Alarm → \blacksquare → ON → \blacksquare → Vibration → \blacksquare → Select a pattern → \blacksquare (twice) → OK → \blacksquare
Set an Image to Appear at Set Time	
Set Default Image	$ \land Alarm \Rightarrow $
Set an Image in Data Folder/Memory Card	\blacktriangleright Alarm → \blacksquare → ON → \blacksquare → Image → \blacksquare → Phone Memory or Memory Card → \blacksquare → Select an image → \blacksquare → \blacksquare to compose the image → \blacksquare → \blacksquare (twice) → OK → \blacksquare
Set a Stamp Icon	\blacktriangleright Stamp Icon → \blacksquare → Select a stamp → \blacksquare → \boxdot → OK → \blacksquare
Set Category	\blacktriangleright <i>Options</i> \rightarrow \blacksquare \rightarrow <i>Category</i> \rightarrow \blacksquare \rightarrow Select a category \rightarrow \blacksquare \rightarrow \boxtimes \rightarrow OK \rightarrow \blacksquare
Set a Phone Number/E-mail Address/URL	Phone Number , Address or URL →■→Enter a phone number, e-mail address, or URL →■→圖→圖→OK→■
Set Link Information (Message/Web Page/Image)	<i>Messages</i> , <i>Saved Pages</i> or <i>Pictures</i> → ■ → Select a message, web page, or image → ■ → ② → OK → ■
Set a Location	Location → ■ → Enter a location → ■ → 圖 → OK → ■

Settings for Calendar

Set Start-up View of Calendar
▶ First View → ■ → Select a view format → ■

Change Font Color of Events
▶ Font Color → ■ → Select a font color → ■

Lock Calendar
▶ Calendar Lock → ■ → Enter Handset Code → Lock → ■

• When Calendar Lock is set, event titles do not appear at the event alarm activation time. Handset Code entry is also required to view event details.

Settings for Saving Tasks



Settings for Tasks	
Lock Tasks	$\blacksquare \Rightarrow Tools \Rightarrow \blacksquare \Rightarrow Tasks \Rightarrow \blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Tasks \ Lock \Rightarrow \blacksquare \Rightarrow Enter$ Handset Code $\Rightarrow Lock \Rightarrow \blacksquare$
Time Table Settings	
Start Here → Tools → ■ → Useful Tools → □	■ →Time Table → ■ → ▼ → Settings → ■ ▶
Set Start/End Time of a Period	> Set Time → ■ → Select a period → ■ → Enter a start time → ■ → Enter an end time → ■ ● Enter times in the 24-hour system.
Reset Time Settings to Default	▶ Reset Time ⇒ ■ → YES → ■

Settings for S! GPS Navi

Save a Map URL	 Map URL Settings → ■ → Select an empty item → Edit URL → ■ → Enter a URI → ■
Edit Map URL Display Name	<i>Map URL Settings</i> → ■ → Select a map URL → ¬ <i>Rename</i> → ■ → Edit the display name → ■
Edit Map URL	 Map URL Settings → ■ → Select a map URL → □ → Edit URL → ■ → YES → ■ → Edit the URL → ■ • The preset map URL cannot be edited.
Delete a Map URL	 Map URL Settings → ■ → Select a map URL → □ → Delete → ■ → YES → ■ The preset map URL cannot be deleted.
Set Map URL	<i>Map URL Settings</i> → ■ → Select the map URL you want to set → ■
Set Navi Appli	 Set Navi Appli → ■ → Select a navigation application → ■ When the application becomes unavailable due to USIM Card replacement, perform Reset All or Clear Memory (page 13-33).
Lock Positioning	Positioning Lock ■ E nter Handset Code •ON ■
Set Location Information Send Setting	► LocationProperty → ■ → □ → Enter Handset Code → Always Ask, Send or Denot Send → ■

:	3		
1	ı	2	

Alarm Settings	
Start Here → Tools → → Alarms → → Select an a	alarm ⇒ ■ ⇒ Enter basic items (page 9-14) ⇒ <i>Alarm Tone</i> → ■ ▶
Change Alarm Volume	$\blacktriangleright Volume$ → \blacksquare →Set volume level → \blacksquare → \boxdot (twice) → OK → \blacksquare
Change Vibration	\blacktriangleright <i>Vibration</i> → \blacksquare → Select a pattern → \blacksquare → \boxdot (twice) → OK → \blacksquare
Set an Image to Appear at Set Time	
Set Default Image	► $Image$ → \blacksquare → $Original$ → \blacksquare (twice) → OK → \blacksquare
Set an Image in Data Folder/Memory Card	► Image \Rightarrow \blacksquare \Rightarrow Phone Memory or Memory Card \Rightarrow \blacksquare \Rightarrow Select an image \Rightarrow \blacksquare \Rightarrow to compose the image \Rightarrow \blacksquare \Rightarrow \boxtimes (twice) \Rightarrow OK \Rightarrow \blacksquare

World Clock Settings	
Start Here ■→Settings→■→Phone Settings■	$\Rightarrow \blacksquare \Rightarrow Clock \Rightarrow \blacksquare \Rightarrow World \ Clock \Rightarrow \blacksquare \Rightarrow$
Set a City by GMT Time Difference	► City 1 or City 2 → \blacksquare → \blacksquare → \blacksquare → \blacksquare to select a time difference
	→ (twice)
Set Daylight Saving Time (DST)	► City 1 or City $2 \Rightarrow \blacksquare \Rightarrow \square \Rightarrow DST \ ON/OFF \Rightarrow \blacksquare \Rightarrow ON \ \text{or} \ OFF \Rightarrow \blacksquare$

S! Information Channel Settings

Start Here $\blacksquare \Rightarrow Entertainment \Rightarrow \blacksquare \Rightarrow Info Channel \Rightarrow \blacksquare \Rightarrow$

Do Not Show Weather Indicator in Standby

 \blacktriangleright Weather \rightarrow \blacksquare \rightarrow View Settings \rightarrow \blacksquare \rightarrow Indicator \rightarrow \blacksquare \rightarrow Hide \rightarrow \blacksquare

▶ Weather \Rightarrow \blacksquare \Rightarrow View Settings \Rightarrow \blacksquare \Rightarrow Prompt \Rightarrow \blacksquare \Rightarrow Show or Hide \Rightarrow \blacksquare

Set Notification of Weather Forecast Updates

Set whether or not to notify of weather forecast updates by Information Prompt.

Setting Ku-man for Standby (Japanese)

Set Ku-man, a 3D animated character, to appear in Standby. Ku-man changes his outfit according to the seasons and time of the day, and makes all sorts of comments with various gestures.

Set Ku-man to Appear in Standby



● To make Ku-man appear in Standby, you need to set 言語選択 (Language) to 日本語 (Japanese). Ku-man does not appear when S! Quick News information is being selected in Standby.

© Dora communications

Communications

Settings for S! Friend's Status

Edit Status Settings of My Status	
Set All Answer Statuses Collectively	ightharpoonup ig
Save Members to Active Window	▶ \blacksquare to select a group \Rightarrow \blacksquare to select a member \Rightarrow \trianglerighteq \Rightarrow $Active Window \Rightarrow \blacksquare (twice) \Rightarrow Not Registered \Rightarrow \blacksquare$
Ignore Saving Requests from People Not in Phone Book	► \square \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Request Reply \Rightarrow \blacksquare \Rightarrow Known Only \Rightarrow \blacksquare
Ignore All Saving Requests	▶ \square → Settings → \blacksquare → Request Reply → \blacksquare → Do not Answer → \blacksquare
Settings for S! Friend's Status/S! Circle Talk	
Disable S! Friend's Status/S! Circle Talk	$\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Security \Rightarrow \blacksquare \Rightarrow IP Service \Rightarrow \blacksquare \Rightarrow OFF \Rightarrow \blacksquare$

• Before configuring the IP Service setting, you need to retrieve the network connection information (page 1-10).


JSIM Card · · · · · · · · · · · · · · · · · · ·	· · · · · 14-2
Handling USIM Card · · · · · · · · · · · · · · · · · · ·	14-2
USIM Codes (PIN/PIN2) · · · · · · · · · · · · · · · · · · ·	
Inserting and Removing USIM Card · · · · · · · · · · · · · · · · · · ·	
Battery	14-4
Battery Installation · · · · · · · · · · · · · · · · · · ·	14-5
oftware Update · · · · · · · · · · · · · · · · · · ·	
Updating Software	
roubleshooting	
ext Entry Keys · · · · · · · · · · · · · · · · · · ·	
Standard Mode · · · · · · · · · · · · · · · · · · ·	
Beeper Mode · · · · · · · · · · · · · · · · · · ·	14-10
imple Mode Function List · · · · · · · · · · · · · · · · · · ·	· · · · 14-11
pecifications	14-17
Main Specifications · · · · · · · · · · · · · · · · · · ·	14-17
Specifications by Function · · · · · · · · · · · · · · · · · · ·	14-18
Default Settings · · · · · · · · · · · · · · · · · · ·	14-24
Glossary·····	· · · · 14-31
ndex ·····	14-32
Alphabetic Order · · · · · · · · · · · · · · · · · · ·	14-32
By User Action · · · · · · · · · · · · · · · · · · ·	14-41
Varranty & After Sales Service · · · · · · · · · · · · · · · · · · ·	14-45
Warranty · · · · · · · · · · · · · · · · · · ·	
After Sales Service · · · · · · · · · · · · · · · · · · ·	
Customer Service·····	14-46

USIM Card

Handling USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited storage for Phone Book entries and SMS messages. USIM Card must be inserted to use handset and Network services (calling, messaging, Web, etc.). Turn handset off before inserting/removing USIM Card.

- Save SMS messages and Phone Book entries on USIM Card (pages 4-19, 13-35).
- Insert USIM Card into compatible SoftBank handsets to access files.
- Do not insert USIM Card into any other IC card device. SoftBank is not liable for any resulting damages.
- Keep the IC chip clean.
- Use a dry, soft cloth to clean USIM Card.
- Do not attach labels to USIM Card. Doing so may damage handset.
- For details on USIM Card, refer to the instruction manual provided with USIM Card.

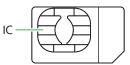

- USIM Cards are the property of SoftBank.
- USIM Cards will be reissued for a fee if lost or damaged.
- Return USIM Cards to SoftBank upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice. Preinstalled S! Appli may become unavailable if a different USIM Card is inserted
- Back up USIM Card information. SoftBank is not liable for lost information.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact your nearest SoftBank Shop or SoftBank General Information (page 14-46).

USIM Codes (PIN/PIN2)

For security, USIM Card has two security codes: PIN and PIN2. Do not forget these codes and do not reveal them to others.

- PIN and PIN2 can be changed (page 11-5).
- The default setting is 9999 for both PIN and PIN2.

PIN

This is a four to eight digit security code to prevent others from using your handset. When PIN Settings is set to *ON*, PIN entry is required each time handset is turned on.

PIN2

This is a four to eight digit security code required for changing data stored on USIM Card, such as resetting Call Time&Cost.

PIN Lock & PUK Codes

PIN Lock or PIN2 Lock is activated when PIN or PIN2 is incorrectly entered three times. PUK (Personal Unblocking Key) codes are required to cancel PIN Lock and PIN2 Lock. To obtain PUK and PUK2, contact SoftBank General Information (page 14-46).


• If PUK or PUK2 is incorrectly entered ten consecutive times, USIM Card is locked. USIM Card Lock cannot be canceled. Contact SoftBank General Information (page 14-46).

Inserting and Removing USIM Card

Before inserting or removing USIM Card, turn off handset and remove the battery.

Insertion


With IC (page 14-2) facing down, slide USIM Card in the direction shown

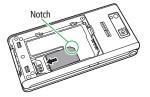

2 Push USIM Card completely in until it stops

Removal


Slide out USIM Card

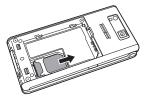

- Avoid touching or scratching USIM Card's IC. Do not force USIM Card into or out of handset; damage may result.
- Take care not to lose USIM Card after removing it from handset.

14

- Before using your handset for the first time, charge the battery.
- Handset uses a lithium ion battery. Battery voltage decreases with operating time (see below).

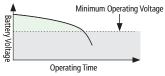

- Extreme temperatures will reduce battery capacity and shorten the operating time. Do not use the battery in high temperatures. This may shorten battery life.
- When storing the battery separately, make sure you put it in a case, etc. and store it in a dry and cool place. This will avoid short-circuiting the battery terminal. It is recommended that you store it uncharged.
- Repeatedly charging and discharging a battery shortens the operating time. If the operating time becomes too short, purchase a new battery.
- When disposing of a used battery, insulate the terminal with tape or place the battery into a plastic bag and then take it to your nearest SoftBank Shop, a recycle shop or follow the local disposal regulations for environmental conservation
- Be careful not to drop or apply excessive force to the battery.

Battery Drain


- The battery discharges little by little when stored for a long time even if it is not used. It self-discharges at a rate of 10 to 20% per month and about 50% per half a year.
- If handset is used in a location with poor signal reception or left in Standby outside the service area, or if you use Mobile Light or launch S! Appli, it will shorten the battery's operating time.

Battery Level


 The battery level on Display (page 1-4) changes with the operating time. Charge or replace the battery when the level is low. When the battery is about to run out (_____), a message appears and the battery alarm sounds. Handset shuts down after 30 seconds.

Battery Installation

- Do not remove battery while handset power is on.
- Pressing down around the notch, slide the battery cover (①), and lift it up (②)

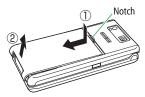

2 Align terminals and insert the battery

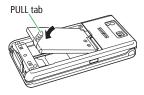

- PULL tab should face up over the battery when inserting the battery.
- Always remove the battery from PULL tab. Otherwise the terminals may be damaged.

3 Replace the battery cover



Software Update

Check if software on handset needs to be updated, and update it through the network.

- Transmission fees do not apply to updates.
- There are two ways to update software:
 Update now and Schedule update.
 - · Update now: Update software now.
 - Schedule update: Set a date and time to update software so that software is updated automatically at the set time.
- Software updates may take a long time.
- Update software when the battery is fully charged. Do not remove the battery while updating.
- Update software in a place where handset has a good reception, and do not change locations while updating.
- You cannot use other functions during updates.
 If a program is running, software update is not available.
- You can update software without deleting Phone Book entries, images and sounds saved on handset. However, data may be lost or damaged if handset is not in good condition (broken, damaged, wet, etc.). We recommend that you make backups of your important data.
 - If software update fails, you may not be able to operate your handset. In this case, contact SoftBank Customer Assistance (page 14-46).

Updating Software

- - The check result appears. Follow the onscreen instructions.

After Software is Updated

When software is updated, handset restarts automatically. After restarting, a confirmation window appears showing update information.

Using Schedule Update

A confirmation window for software update appears on the scheduled time. Press or leave handset for about ten seconds to start automatic software update.

- If you are using another function on handset on the scheduled time, software is not updated.
- If handset is out of the service area on the scheduled time, software is not updated.

14

Troubleshooting

Problem	Possible Causes and Remedies
Cannot turn the power on.	Is the battery inserted properly (page 14-5)?
Cannot turn the power on.	Has the battery run out (page 14-4)?
Please check connection with your charger. appears and cannot charge the battery.	Is there dust on the terminals of AC Charger, External Device Port or battery? Clean the terminals with a dry cotton swab, etc.
	Does the PIN Entry window appear? PIN Settings is set to <i>ON</i> , enter PIN.
Cannot operate handset normally after turning it on.	Does ¶ or <i>Password Lock</i> appear on Display? Password Lock is activated. Enter Handset Code.
	Does <i>USIM not inserted. Power off the phone and insert USIM</i> . appear on Display? Turn the power off and make sure USIM Card is inserted properly (page 14-3).
	Does a appear on Display? Are you out of the service area or in a location where it is difficult to receive a signal? Move to a location where a signal can reach handset and try again.
Cannot establish a connection for voice and video calls or use mail	Are you using handset outside Japan? Set handset to use an operator available for the country/region you are visiting (page 13-22).
and Web functions.	Is your hand or an object covering Internal Antenna area (page 1-3)?
	Does 🗽 or <i>Offline Mode</i> appear on Display? Cancel Offline Mode (page 1-13).
	Did you dial the whole phone number starting from the area code?
Cannot make voice and video calls.	Does <i>Network busy</i> . appear on Display? The line is busy. Wait a while and try again.
	Is Call Barring (page 3-17) set for outgoing calls?
	Is Reject Calls (page 13-9) set?
Cannot receive voice and video calls.	Is Call Forwarding (page 3-10) or Voice Mail (page 3-11) set to <i>All Calls</i> ?
	Is Call Barring (page 3-17) set for incoming calls?

Troubleshooting

Problem	Possible Causes and Remedies
Cannot send messages.	Is Call Barring (page 3-17) set for outgoing calls?
Cannot receive messages. Is Call Barring (page 3-17) set for incoming calls?	
Calls are interrupted or disconnected.	Does appear on Display? Are you in a location where it is difficult to receive a signal? Move to a location where a signal can reach handset.
disconnected.	Is your hand or an object covering Internal Antenna area (page 1-3)?
Handset does not respond to key presses. Does P or Password Lock appear on Display? Password Lock is activated. Enter Handset Code.	

Text Entry Keys

Standard Mode

Text Input Mode Key	Kanji (hiragana) (Double-byte)*	Single-byte katakana	Double-byte alphanumerics (upper case) Single-byte alphanumerics (upper case)	Double-byte alphanumerics (lower case) Single-byte alphanumerics (lower case)	Double-byte numbers Single-byte numbers	
1 .⊕	あいうえおぁいうえお	アイウエオアイウエオ	.@1	.@1	1	
≥ ⊅r ABC	かきくけこ	カキクケコ	ABC2	abc2	2	
∃ č DEF	さしすせそ	サシスセソ	DEF3	def3	3	
4 t GHI	たちつてとっ	タチツテトッ	GHI4	ghi4	4	
5 차	なにぬねの	ナニヌネノ	JKL5	jkl5	5	
Б [™]	はひふへほ	ハヒフヘホ	MNO6	mno6	6	
7,t Pors	まみむめも	ZEVXE	PQRS7	pqrs7	7	
□ [†]	やゆよゃゅょ	ヤユヨヤユヨ	TUV8	tuv8	8	
9 5 WXYZ	らりるれろ	ラリルレロ	WXYZ9	wxyz9	9	
□ ,	わをんー、。	ワヲンー、。	~/?!0	~/?!0	0	
★ **	Custom, Pictographs, Emoticons, * (dakuten), * (handakuten), —(cho-on), \$\(\text{(touten)}, \(\text{(kuten)} \)	Custom, * (dakuten), * (handakuten), —(cho-on), \ (touten), * (kuten)	Custom, Pictogr	aphs, Emoticons	Custom, Pictographs, Emoticons	
# ^{A/a} ER	Symbols, Alphanumerics, URL Toggle case	Symbols, Alphanumerics, URL Toggle case	Symbols, Alpha Toggl		Symbols, Alphanumerics, URL	
		Determin	ne entered text/End text entry		End text entry	
•••	Move cursor, Insert line break with , Scroll through suggestions with	Move cursor	Move cursor, Insert line break with			
クリアメモ	Delete entered characters					
TV DXF	Toggle characters in reverse order					

^{*} When entering a reading to Word List (page 2-15), you can enter only double-byte hiragana and "—" (cho-on).

Beeper Mode

Switch the input method to Beeper mode. Enter two digits to make one character. Key combinations are as follows:

						Press	next				
		1 8	2 m ABC	∃ å DEF	4 t GHI	5 tkL	트 ^많	7 t PORS	□ TUV	9 _{WXYZ}	D***
	1 .8	あ	い	う	え	お	Α	В	С	D	Е
	≥ か ABC	か	き	<	け	2	F	G	Н	- 1	J
	∃ å DEF	さ	U	す	せ	そ	K	L	М	N	0
_	4 th	た	ち	つ	て	٢	Р	Q	R	S	T
Press	5 tk	な	に	ぬ	ね	の	U	V	W	Χ	Υ
s first	Б ™	は	ひ	ıZı	^	ほ	Z	?	!	_	/
SŦ.	7 # PORS	ま	み	む	め	も	¥	&			
	⊟ [†] TUV	や	(ゆ)	よ	X	#			
	9 S	5	り	る	れ	ろ	1	2	3	4	5
	□	わ	を	h	0	۰	6	7	8	9	0

- indicates upper and lower cases are available. Press #** to switch case immediately after character entry.
- When entering in **(a)**, all the characters will be single-byte.
- When entering in 🖺, 🖶, 🖫, and 📵, hiragana will turn to katakana.
- When entering in and and, the characters will be in lower case.

Entering Characters in Beeper Mode

Example: Entering よしお

In a text entry window, press $\blacksquare_{nv}^{\bullet} \subseteq_{sc}^{t} \Rightarrow \blacksquare_{cd}^{t} \supseteq_{sc}^{t} \Rightarrow \blacksquare_{sc}^{t}$

Simple Mode Function List

- Functions that can be used in Simple Mode are listed below.

 To use functions that are unavailable in Simple Mode, access the full menu (page 2-26).

 Settings made in Simple Mode are reflected in the full menu.

Main Menu

Menu Item		Description	Page
Settings		Refer to "Settings" of Simple Mode Main Menu.	14-14
My Number		Same functions as in full mode	3-3
	TV	Same functions as in full mode	6-2
	Alarms	Up to six alarms can be set.	9-14
	Notepad		9-8
	Calculator	Same functions as in full mode	9-16
	Dictionary		9-16
Tools	Calendar	Monthly View only Impossible to save, edit and delete events	9-4
	Scan Data		9-22
	Kitchen Timer	Same functions as in full mode	9-17
	S! GPS Navi		9-10
	Ku-man's Room		9-23
	Full Menu	Same as Tools menu in full mode	_
Full Menu		Same as Main Menu in full mode	2-26

Simple Mode Function List

Menu Item		Description	Page
	Phone Book		2-19
	Video Call		3-7
Phone Book	New Entry	Same functions as in full mode	2-17
Рпопе воок	Call Log		3-9
	Group		13-35
	Full Menu	Same as Phone Book menu in full mode	_
Phone Book Search			2-20
Add to Phone Book			2-17
	Message Box	- Same functions as in full mode	4-8
	Create New		4-4, 4-6
	Retrieve New		4-8
Messaging	Drafts		4-10
	Templates		4-5
	Unsent		4-10
	Full Menu	Same as Messaging menu in full mode	_
	Received/Sent		4-10
Message Box	Drafts		4-10
	Unsent	Same functions as in full mode	4-10
Create Message	Create New		4-4, 4-6
Create Message	Templates		4-5
Manner Mode		Set/cancel Manner Mode.	1-12

Menu Item		Description	Page
Alarms		Up to six alarms can be set.	9-14
	Mobile	Same functions as in full mode	7-3
	Digital		7-3
Camera	Video		7-5
	Full Menu	Same as Camera menu in full mode	_
Data Folder		Same functions as in full mode	2-22
	Yahoo! Keitai	Same functions as in full mode	5-3
	Bookmarks	Impossible to set/cancel Security Lock	5-6
Yahoo! Keitai	Saved Pages	Same functions as in full mode	5-6
	Enter URL		5-3
	Manufacture #		13-19
	Full Menu	Same as Yahoo! Keitai menu in full mode	_

Combinations of menu items in vary according to the menu pattern.

"Settings" of Simple Mode Main Menu

ı	Menu Item	Description	Page
	Wallpaper	Same functions as in full mode	2-7
Idle Screen	Clock/Calendar	Mini Clock cannot be set.	2-8
	Ku-man	Same functions as in full mode	13-43
	General	Can only be set to Large/Medium.	13-5
Font Size	Messaging		13-5, 13-15
ront Size	Mobile Web	Same functions as in full mode	13-5, 13-21
	Text Entry		2-28, 13-5
	Incoming	Can only be set for Voice Call/Video Call/Message.	13-11
Sounds	Earpiece Vol.		3-12
	Keypad Tone Vol.	Same functions as in full mode	13-13
N4 N4I -	ON/OFF	Set/cancel Manner Mode.	1-12
Manner Mode	Switch Mode	Switch Manner Modes (Original Modes cannot be edited).	13-11
	Mini Tool		13-3
Mini Tool	Mini Photo		13-4
	Voice Mail ON	Comp for ations as in full monda	3-11
VM/C-II Freed	Deactivate All	Same functions as in full mode	3-11
VM/Call Fwd	Listen VM		3-11
	Ans Machine		3-6

Menu Item		Description	Page
	Password Lock		11-3
Committee	Reject Calls		13-9
Security	Anti-Spam		13-16
	Change Password	Same functions as in full mode	11-2
Clock	Date & Time		1-11
	12hour/24hour		1-11
	World Clock		9-15
Intl. Calls	Operator	Impossible to set priority and add operators	13-22
Save 1-touch		A Phone Book entry can be assigned to either Softkey to make calls/send messages.	-
Full Menu		Same as Settings menu in full mode	_
Simple Mode OFF		Cancel Simple Mode.	2-6

Functions Available in Standby

Operation	Function	Description	Page
	Main Menu	Refer to "Main Menu".	2-5
(Press and hold)	Keypad Lock	Same functions as in full mode	11-3
■ □ †	My Details	Same as My Number in Main Menu	_
Ō	Active Window		2-8
(Press and hold)	Calendar		9-4
•	Phone Book Search		2-20
•	Dialed Numbers	Same functions as in full mode	3-9
(Press and hold)	Sent Message Log		4-13
•	Received Calls		3-9
(Press and hold)	Received Message Log		4-13
)/li	Use assigned Phone Book entries	Make voice/video calls/send messages to assigned Phone Book entries.	_
(Press and hold)	Simple Mode Off	Cancel Simple Mode.	2-6
P	Shortcuts Menu	Impossible to add functions to Shortcuts Menu	2-4
(Press and hold)	Information Prompt		1-6
2U77)×E	Play messages on Answering Machine		3-6
(Press and hold)	Answering Machine On/Off	Same functions as in full mode	3-6
# And (Press and hold)	Manner Mode On/Off		1-12
*	Toggle views on External Display		2-8
(Press and hold)*	Activate set function		2-4

^{*} Available while handset is closed

Specifications

Main Specifications

	823T	824T
Frequency Range	1920 to 2170 MHz	
Continuous Talk Time	Approx. 180 min. (Video call: Approx. 100 min.)	
Continuous Standby Time	Approx. 440 hrs	
Charging Time	Approx. 120 min.	
Dimensions When Closed (W×H×D)	Approx. 50×103×17.5 mm Approx. 50×103×17.8 mm	
Maximum Output	0.25 W	
Weight	Approx. 119 g	Approx. 112 g

- The values above were calculated with the battery attached.
- The continuous talk time refers to the average length of time a signal can be received normally when handset is in a stationary state and a new fully charged battery is attached.
- The continuous standby time refers to the average length of time a signal can be received normally when handset is closed with External Display facing outward, handset is in a stationary state, a new fully charged battery is attached and there are no calls made/received or operations performed. If handset is in a location outside the service area or where it is difficult to receive a signal (in a building, vehicle, bag, etc.), this time may be reduced to half or less. This time may also be affected by other factors such as the operating environment (battery state, temperature, etc.).
- The operating time of the battery was calculated when a stable signal was received constantly. However, this time may be reduced to half or less if handset is used in a location where the signal is weak or handset is left in Standby when it is outside the service area. Repeated charging and discharging a battery shortens the operating time. If the operating time becomes too short, purchase a new battery.
- If Mobile Light is used frequently for taking pictures and recording videos or as a penlight, the continuous talk time and continuous standby time become shorter.
- When an S! Appli is activated, the continuous talk time and continuous standby time become significantly shorter.
- If handset is used with Display illuminated frequently (for Yahoo! Keitai use, etc.), the continuous talk time and continuous standby time become shorter.
- Note that the LCD Display may have defective pixels (dead or stuck pixels).

AC Charger (Sold Separately)

Input Voltage	100 to 240 V AC, 50/60 Hz
Charging Temperature Range	5 to 35℃

14

Specifications by Function

Basic Operations

Text Entry

Word List	100 words (4 words with same reading), 12 characters per word, 8 characters per reading
Clipboard	20 entries

Phone Book

Number of Entries	1,000 entries	
Name	16 characters each for first and last names	
Reading	16 characters each for first and last names	
Phone Number	5 numbers, 32 digits	
E-mail Address	5 addresses, 128 characters	
Address	Postal code: 20 digits, country: 32 characters, state/city/street/additional info: 64 characters each	
Job Title	32 characters	
Company	32 characters	
URL	128 characters	
Note	256 characters	
Group	20 groups, group name: 16 characters	

Data Folder

Available Memory	Approx. 59 MB ^{*1} , 2,500 entries ^{*2}	
File Name	32 characters	

- *1 Memory capacity when all files that can be deleted are deleted. Data Folder shares its memory with S! Appli Library.
 *2 This number does not include S! Appli entries. Up to 100 S! Appli items
 - can be stored.

Others

Active Window	5 members on Members List	
Shortcuts Menu	40 entries (10 preset)	

Call

Dialed, Received		20 entries each
Answering Machine		5 messages, 30 seconds per message
Voice Record During Calls		60 seconds per recording
Number Memo		5 numbers, 32 digits
International Call Service	Country Number List	20 countries (17 preset)
Send Touch Tones		32 digits

Messaging

Available Memory	Received	Approx. 5 MB, 2,000 messages	
	Sent, Unsent	Approx. 1.5 MB, 600 messages	
	Drafts	Approx. 700 KB, 60 messages	
Address		To/Cc/Bcc: total 20 entries, phone number: 24 digits, e-mail address: 254 characters	
S! Mail Text		Approx. 15,000 double-byte characters/ Approx. 30,000 single-byte characters	
Attachments		Approx. 300 KB (including Address, Subject, Text)	
SMS Text		70 double-byte characters/70 single-byte katakana/160 single-byte alphanumerics	
Message Box		20 folders each for Received and Sent (General folder, Folder 1 to Folder 17, Idokoro folder, Ku-man folder)	
3D Pictograms		150 characters	

Internet

Data Transfer Speed	Maximum 3.6 Mbps receiving/ maximum 384 kbps sending (in 3G High Speed areas)	
Bookmarks	50 entries	
History (URL)	10 entries	

TV

View Timer	5 entries
TV Links	50 entries

Camera/Picture Editing

Effective Pixels		1.96 million pixels
File Format Still pictures: JPEG, videos: MPEG-4		Still pictures: JPEG, videos: MPEG-4
Picture	File Format	JPEG (2.0 MB or less), PNG (1.0 MB or less)
Picture Size		W16×H16 to W240×H400

Camera Modes

Mode	Picture Size	Max. Zoom
	W240×H400	Approx. 4×
	W240×H320	Approx. 4.9×
Mobile	W144×H176	Approx. 8.3×
Mobile	W120×H160	Approx. 9.3×
	W112×H112	Approx. 10.5×
	W96×H128	Approx. 12×
	W1600×H1200	_
Digital	W1280×H960	Approx. 1.3×
Digital	W640×H480	Approx. 2.5×
	W400×H240	Approx. 4×

Video Modes

Mode	Size	Max. Zoom	Max. Recording Time
Video	W320×H240	Approx. 2.5×	Approx. 20 min.
Video Mail	W176×H144	Approx. 2.5×	Approx. 30 sec. (Quality: Fine) Approx. 50 sec. (Quality: Normal) Approx. 60 sec. (Quality: Economy)
Short Video	W128×H96	Approx. 4.1×	Approx. 5 sec.

Media Player

Playlist	10 each on handset and memory card, 50 songs per playlist
My Library	50 songs
Recent	20 entries

Playable Data

- Even under the following conditions, some files may not be playable.
- Although files with bit rates other than those listed below may be playable, their operation is not guaranteed.

	File Format	Bit Rate	Sampling Frequency
	AMR	4.75 to 12.2 kbps	8 kHz
Handset	MPEG-4 AAC-LC	16 to 128 kbps	16 to 48 kHz
	HE-AAC	10 10 120 KDPS	10 to 40 kmz

Notes on AAC data

- · AAC encoder software is required for converting music into AAC formats.
- SoftBank does not recommend nor guarantee operation of any particular AAC encoder software.
- Refer to the website of software provider about specifications and usage of AAC encoder software.

S! Appli

^{*} S! Appli Library shares its memory with Data Folder.

Tools

Notepad	20 notepads, 256 characters per notepad	
Calendar	400 events (100 events per day), from January 2, 2000 to December 30, 2015	
Tasks	100 entries, from January 2, 2000 to December 30, 2015	
Time Table	8 periods per day, Monday to Saturday	
Dictionary	Japanese dictionary: 40,000 words, English-Japanese dictionary: 40,000 words, Japanese-English dictionary: 36,000 words	
Voice Recorder	Maximum 90 minutes per recording	
World Clock	2 cities, city name:13 characters	
S! GPS Navi	20 location logs	
Idokoro Mail	Recipients List: 5 entries, Areas List: 7 entries	
S! Information Channel	7 History entries, 3 MB	
Document Viewer	Microsoft® Word (.doc), Microsoft® Excel (.xls), Microsoft® PowerPoint® (.ppt), PDF (.pdf)	
Electronic Books	BookSurfing®: CCF (.CCF)	
Barcode Reader	QR code data: 10 entries	

Communication Services

S! Friend's Status

S! Friend's Status Members List 30 entries, 10 people per group	's Status Members 30
---	----------------------

S! Circle Talk

Participants	11 people including yourself	
Talk Time 30 seconds each time		
S! Circle Talk Members List	50 entries, 10 people per group	

14

File Transfer/Backup

Infrared

Communication System	IrMC1.1
Transmission Range	Approx. 20 cm

Bluetooth®

Communication System	Bluetooth® specification Ver.1.2	
Output	Bluetooth® Power Class 2	
Transmission Range	Approx. 10 m radius ^{*1}	
Supported Bluetooth® Profiles ^{*2}	HFP (Hands-Free Profile) HSP (Headset Profile) DUN (Dialup Networking Profile) OPP (Object Push Profile) FTP (File Transfer Profile) AZDP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile)	
Frequency Band	2.4 GHz (2.402 GHz to 2.480 GHz)	
Searchable Devices	vices 8 devices at a time	
Paired Devices	20 devices	

- *1 Varies depending on obstacles between devices and signal conditions.
 *2 The specifications of Bluetooth® devices differ according to usage. There are standards for Bluetooth®.
- *3 Only the server function is supported.

Melody List

The preinstalled melodies are shown below.

Ringtones (Fixed Melodies)

• The following are unavailable for Keypad Tone under Sound Effects.

Title	Composer
Pomp And Circumstance	ELGAR EDWARD (NON PROTECTED SHARES)
Moonlight Serenade	MILLER GLENN (US 1)
Hana	TAKI RENTARO
Aloha Oe	Hawaiian ballad
Arabesque No. 1	DEBUSSY CLAUDE ACHILL
Harp Concerto in B Flat Major	HAENDEL GEORG FRIEDRICH
Meditation from Thais	MASSENET JULES EMILE FREDERIC
O Danny Boy	Irish ballad (TRADITIONAL)
Old Phone	Produced by Toshiba
Flash News	Produced by Toshiba
Electronic Sound 1	Produced by Toshiba
Electronic Sound 2	Produced by Toshiba
Electronic Sound 3	Produced by Toshiba
Electronic Sound 4	Produced by Toshiba
Voice 1	Produced by Toshiba
Voice 2	Produced by Toshiba
Voice 3	Produced by Toshiba
Voice 4	Produced by Toshiba
Alarm Clock	Produced by Toshiba
Pigeon	Produced by Toshiba

Data Folder

- The following files are deleted by Reset All or Clear Memory and cannot be restored to the status at the time of purchase.
 Backup data of the following files is contained on the supplied CD-ROM.

Title	Composer
Menuet	BIZET GEORGES
Gymnopedie	SATIE ERIK ALFREDI LE (NON PROTECTED SHARES)
Pavane for Dead Princess	RAVEL MAURICE JOSEPH

Appendix

14

Default Settings

Messaging

Function	Default Setting		
Message Box	Wide View: Wide View ON, Folder View: Folder View, Received/Sent: Separate View, Display Items: Addresses, Change View: List Only, Sort Setting: None (except Ku-man and Idokoro), Security Lock: Unlock, Auto-delete (Received: Set, Sent: Set)		
Display	Font Size: Medium-Small, Scroll Unit: Line, Show Address (Main Display: Show All, Ext. Display: Show All)		
Creating	Signature: No Signature, Default Type: SMS, Notify Type: Show		
Sending	Confirmation: Show, Vibration: ON, DeliveryCheck: Do not Ask, Expiry (SMS: Not Specified, S! Mail: Not Specified), Priority: Normal, Delivery Time: Immediate, Reply to: OFF, Message Ctr: Number on USIM Card		
Receiving	Retrieve Mode (Home: Immediate, Roaming: Immediate), Auto-extract (Picture: Show, Sound: Mute), Anti-Spam (Sort Messages: Do not Sort, Select Folder: Folder 17)		
3D Pictograms	Auto Play: OFF, Colors: Color1		

Yahoo! Keitai

Function	Default Setting		
	Font Size: Medium-Small (Yahoo! Keitai)/Extra-Small (PC Browser), Scroll Unit: 1 line, Downloads (Images: Download, Sounds: Download), Warning (PC Browser: Show, Yahoo! Keitai: Show)		
Settings	Security	Manufacture #: Send, Send Referer: Send, Cookie: Enable, Script: Ask Once (Yahoo! Keitai)/Enable (PC Browser), Authentica: Per Session, Session Info.: Show	
	Storage: Phone Memory		

Entertainment

Function	Default Setting	
S! Quick News	Auto Refresh (Flash News: Manual, News: Manual, S! Loop: Manual), Image: Show	
Weather	Indicator: Show, Prompt: Show	
Ku-man's Room	Ku-man Data: Thumbnail View	

TV

Function	Default Setting		
Watching TV	Subtitles: ON, Switch Audio: Main, Screen Settings: (Brightness: Brightness 3, Image Quality: Normal, Sharpness: Soft, Economy Mode: OFF), Datacasting (Start Comm.: Ask before, Go to Secured: Ask before, Access Memory: Do not Ask, Send Location: Always Ask, Manufacture #: Do not Send, Storage: Phone Memory), Off-timer: OFF, First View: Full Screen, Volume: VOL12		

Camera

Function	Default Setting
Taking Pictures	Camera Mode: Mobile, Picture Size (Mobile: W240 × H400, Digital: W1280 × H960), Brush Up (Mobile: ON, Digital: OFF), Night: OFF, Multi Shots: OFF, Add Frame: OFF, Icons Display: Show, Storage: Phone Memory, File Name: Date&Time, Auto Save: OFF, Quality: Fine, Effects: OFF, Date Stamp Color: White w/Black, Mobile Light: OFF, White Balance: Auto, Color Control: Neutral, Delay Timer: OFF, Focus Mode: Auto, Grid: OFF, Flicker: Automatic, Shutter Sound: Pattern 1, Key Shortcut: ON, Exposure: ±0.0EV

Function	Default Setting		
	Video Mode: Video Mail, ScreenDisplay: Normal screen, Icons Display: Show, Voice Record: ON, Storage: Phone Memory, File Name: Date&Time, Auto Save (Video: ON (Fixed), Video Mail/Short Video: OFF)		
Recording Videos	Quality	Video: Normal, Video Mail: Normal, Short Video: Economy (Fixed)	
	Effects: OFF, Mobile Light: OFF, White Balance: Auto, Color Control: Neutral, Delay Timer: OFF, Flicker: Automatic, Start/End: Pattern 1, Key Shortcut: ON, Preview: ON, Exposure: ±0.0EV		
Scan Data	Exposure: ±0.0EV		

S! Appli

Function	Default Setting
Settings	Screensaver: OFF, Start Time: 3 sec, Calls&Alarms (Voice Call: Pause Apps, Video Call: Pause Apps, Message: Continue Apps, Alarm: Pause Apps), Volume: Level 3, Backlight (ON/OFF: Same as Phone, Blink: ON), Vibration: ON

Tools

Function	Default Setting			
Alarms	Tone: Time Reading, Volume: Level 3, Vibration: OFF, Duration: 60 sec, Image: Original, Repeat: Once, Snooze: OFF			
Calculator	Set Tax Rate: 5	Set Tax Rate: 5%		
	Create Event	Set Alarm: OFF, Show/Hide: Show, Repeat for: Do not Repeat, Category: No Category		
		Set Holiday (Sunday: Red, Monday to Friday: Black, Saturday: Blue)		
Calendar	Reminder	Reminder: OFF, Schedule for: Today, Tone: Pattern 1, Volume: Level 3, Vibration: OFF, Duration: 60 sec, Repeat: Once		
	Calendar Lock: Unlock, First View: Monthly, Font Color: White w/Black			
Tasks	New Task	Set Alarm: OFF, Show/Hide: Show, Priority: Normal, Status: Not Completed		
	Change View: All View, Sort by: Deadline			
	Reminder	Reminder: OFF, Schedule for: Today, Tone: Pattern 1, Volume: Level 3, Vibration: OFF, Duration: 60 sec, Repeat: Once		
	Tasks Lock: Unlock			

Function	Default Setting	
Time Table	BG Color: OFF, Font Color: White w/Black	
Kitchen Timer	10 sec	
Voice Recorder	SelectStorage: Phone Memory	
Photo Stand	ON/OFF: OFF, Templates: Calendar, Image: Preset, Duration: 60 min	
S! GPS Navi	Map URL Settings: NAVITIME (http://map.navitime.jp/), Set Navi Appli: NAVITIME, Positioning Lock: OFF, LocationProperty: Always Ask	

Data Folder

Function	Default Setting	
Data Folder	Change View (View Type: Thumbnail 3×3/Thumbnail 5×5 (My Pictograms Folder only), Sort by: From Latest), Security Lock: OFF	

Media Player

Function	Default Setting		
Audio	Sort by (All Music: Title: A to Z, Artist: Title: A to Z, Album: Track No., Folder: Title: A to Z), Output Settings: Speaker/Earphone, Player Image: Original, Play Mode: All, Surround: OFF, Equalizer: Flat, Voice Cancel: OFF		
Videos	Display Link: ON		

Communications

Function	Default Setting		
Friend Status	My Status: Offline, Request Reply: Always Answer, Answer Status (Calls: Answer OK, Mail: Reply OK, S! Circle Talk: Join OK), Status Setting: ごきげん (Good mood)		
Circle Talk	Loud Speaker: ON		

Phone Book

Function	Default Setting		
Phone Book	Search Mode: Tab/Reading		
Options	ExternalLight: Same as Phone, Ringtone Vol.: Same as Phone, Ringtone: Same as Phone, Vibration: Same as Phone, Duration: Same as Phone, MessageFolder: None, Secret: OFF, Ext. Display: Same as Phone		
Options (Group)	ExternalLight: Same as Phone, Ringtone Vol.: Same as Phone, Ringtone: Same as Phone, Vibration: Same as Phone, Duration: Same as Phone, MessageFolder: None		
Addr. Bkup	Auto Sync: OFF, Sync Type: Synchronize		
Settings	Select Storage: Phone Memory, Phone Book Lock: Unlock		

Settings

Sounds

Function	Default Setting		
Kacha-ble	MissedCall: ON, Messages: ON, Delivery: ON, Missed: ON, Missed CT: ON, Status: ON		
	Incoming	Ringtone: Pattern 1, Ringtone Vol.: Level 3, Vibration (Pattern): OFF, Feeling: ON, Duration: 5 sec	
Normal Mode	Sound Vol.: Level 3, Earpiece Vol.: Level 5, Speaker Vol.: Level 5, Battery: ON		
	Sound Effects	Tone Type: Original (Keypad Tone: Original 1), Tone Volume: Level 1 (Keypad Tone: Silent)	
	Manner Mode: Unset, Switch Mode: Silent		
Manner Mode	Silent	Ringtone Vol.: Silent, Vibration: Pattern 1, Feeling: Same as Normal Mode, Sound Effects: OFF, Battery: OFF, Answering Machine: Same as Normal Mode	
	Alarms	Ringtone Vol. (Except alarm volume): Silent, Vibration: Pattern 1, Alarms (Alarms: Same as Normal Mode, Alarm Volume: Same as Normal Mode, Vibration: Same as Normal mode), Feeling: Same as Normal Mode, Sound Effects: OFF, Battery: OFF, Answering Machine: Same as Normal Mode	

Default Settings

Function	Default Setting		
Manner Mode (Continued)	Drive	Ringtone Vol.: Silent, Vibration: OFF, Feeling: OFF, Sound Effects: OFF, Battery: OFF, Answering Machine: ON	
	Original 1 to 3	Ringtone Vol.: Silent, Vibration: Pattern 1, Feeling: ON, Effects: OFF, Battery: OFF, Answering Machine: ON	

Display/Idle Screen (Ku-man)

Function	Default Setting	
Idle Screen	Wallpaper: Preset (Picture), Others: 1-line Digit, Active Window: ON (Manual), Ext. Display: Icon+Clock	
Main Screens	Deco (Icons): Original, Deco (Windows): Original, In-Calls: Original, Messages: Original, Download: Original, Power On: Original, Power Off: Original	
Mini Tool	Mini Tool: Preset	
Caller Details	Picture: ON, Ext. Display: ON	
Wide View	IdleScreen: ON, Create Msg: ON, Msg Window: ON, Msg Lists: ON	
Font Settings	Font Size (General: Medium, Messaging: Medium-Small, Mobile Web: Medium-Small, PC Browser: Extra-Small, Text Entry: Medium-Small), Font Color: Pattern 1	

Default Setting		
Power Saving: 15 sec, Keypad Light: 5 sec, Displays (Lighting Time: 5 sec, Brightness: Brightness 3), Media Player: Always ON		
Notification	Missed Call: Garnet, Messages: Emerald, DeliveryCheck: Sapphire, Missed Call: Amethyst, Missed CT: Blue Topaz, Friend Status: Citrine	
Illumination	Voice Call: Amethyst A, Video Call: Amethyst A, Message (Pattern: GreenTourmalineA, Feeling: ON), DeliveryCheck: GreenTourmalineA, Missed Call: Mix C, Circle Talk: Mix C, Friend Status: Mix C, Opening: Blue Topaz B, Closing: Blue Topaz B, In Call: Mix F	
Kaleidoscope		
OFF		
OFF		
	(Lighting Time: Player: Always Notification Illumination Kaleidoscope OFF	

Phone Settings

Function	Default Setting	
Clock	12hour/24hour: 24 hour, World Clock (City 1: Tokyo, City 2: Tokyo, Set as Main City: City 1, DST ON/OFF: OFF)	
Sub Menu View	Show	
言語選択 (Language)	日本語 (Japanese)	
Navigation Keys	: Active Window, : Phone Book, : Dialed Numbers, : Received Calls	
Side Key	Twin Illumi	

Security

Function	Default Setting		
Password Lock	Phone Closed: OFF, Power Saving: OFF, Power Off: OFF		
Function Lock	Phone Book: Unlock, Calendar: Unlock, Tasks: Unlock, Call Log: Unlock, Message Log: Unlock		
Secret Mode	Hide		
Anti-Spam	Sort Messages: Do not Sort, Select Folder: Folder 17		
Change Password	9999		
IP Service	ON		
Restricted Mode	Web: OFF		

Call Settings

Function	Default Setting		
	Intl. Code: 0046010		
Intl. Calls	CountryNumber	Japan (81), UK (44), Italy (39), Switzerland (41), Spain (34), Germany (49), Portugal (351), Netherlands (31), France (33), Monaco (377), USA (1), Sweden (46), Australia (61), China (86), Hong Kong (852), Taiwan (886), South Korea (82)	
	Operator: Automatic		
Ans Machine	Setting: OFF, Set Duration: 18 sec		
Earphone	Auto Answer (ON/OFF: OFF, Set Duration: 10 sec), Earphone Call: OFF		
Answer Type	Open to Talk: OFF, Any Keys: OFF		
Video Call	Alt. Picture: OFF, Image Quality: Standard, Hold Setting (Hold on Call: Preset, Hold Answer: Preset), Mute: OFF, Loud Speaker: ON, Auto Answer: OFF		
Reject Calls	Specific #s: OFF, Unknown: OFF, Withheld: OFF, Payphone: OFF, Unavailable: OFF		
Offline Mode	OFF		
Show My Number	OFF		

Default Settings

Connectivity

Function	Default Setting	
Bluetooth	ON/OFF: OFF, Settings (Visibility: Show, Set Handsfree: Private)	
Infrared	ON/OFF: OFF	
USB	Connection: Always Ask, Battery: ON	

Priority

Function	Default Setting	
Mid-operation	Message: Pause, DeliveryCheck: Continue	
Video	Message: Pause, DeliveryCheck: Continue	
Media Player	Pause	
Voice Recorder	Message: Pause, DeliveryCheck: Continue	
S! Appli	Voice Call: Pause Apps, Video Call: Pause Apps, Message: Continue Apps, Alarm: Pause Apps	
Circle Talk	Continue	
TV	Alarm: Pause	

Text Entry

Function	Default Setting	
Custom Window	Display: Display	
Clear Setting	Delete	
Input Method	Standard	
Font Size	Medium-Small	
Prediction	Predict Text: ON, Phrase: ON	

Active Window

Function	Default Setting	
ON/OFF	ON (Manual)	
Templates	News: No Image	
Auto Refresh	Flash News: Manual, News: Manual, S! Loop: Manual	
Unread/Read	Show All	
Screen Speed	Neutral	

Glossary

Terminology	Description	
3G	A third generation (3G) mobile communication system.	
USIM Card	Use handset with this card inserted. The card stores subscriber information such as your phone number and handset data. You can also save Phone Book entries and other data to the card. When you replace your handset, use of the same USIM Card in the new handset enables you to continue using the data stored on the card.	
USIM PIN	A number required for using USIM Card with your handset. This number allows you to prevent others from using your handset in the event that your handset is lost or stolen.	
S! Mail	A service that allows long text messages with picture, video and melody attachments to be exchanged.	
SMS	A service that allows short text messages to be exchanged between handsets.	
SSL	A communication method for transmitting data in an encrypted form over the Internet. It enables data such as information related to privacy and credit card numbers to be sent and received safely and protects against dangers on the Internet such as eavesdropping, tampering and spoofing. SSL communication uses server certificates.	
Server Certificate	A digital certificate for identifying that a site on a server is trustworthy. The server certificate includes information necessary for SSL communication (encrypted communication), server information and a digital signature of a Certificate Authority to verify that the server is authentic.	

Terminology	Description
Cache	The location in handset for temporarily storing the data of accessed Web pages, etc.
S! Appli	Applications including games and 3D images that can be downloaded from the Web pages of S! Appli providers. Some applications connect to the network to obtain information in real time and some applications can be activated as wallpaper.
3G High Speed	A high speed data communication service that complies with HSDPA (High Speed Downlink Packet Access) protocol.

Numeric

Alphabetic Order

Answering Machine · · · · · · · · · · · · · · · · 3-6
Delete Recorded Messages · · · · · · · · 3-13
Response Time · · · · · · · 13-9
Anti-Spam · · · · · · 13-16
Any Key Answer · · · · · 13-9
Areas List 9-12
Delete 9-28
Attachments · · · · · 4-4
Save 4-19
Audio Output During Calls (Earpiece/Speaker
S! Circle Talk · · · · · · · 10-8
Video Call · · · · · · · 3-1!
Voice Call (Handsfree Call) · · · · · · · 3-14
Audio Output Setting (Video Call) · · · 13-23
Authentication · · · · · 13-19
Authentication PIN Code (Bluetooth Passkey) · · · 12-
Auto Answer (Earphone-Microphone) • 13-24
Auto Answer (Video Call) · · · · · 3-13
Auto Answer List (Video Call) · · · · 13-23
Auto Focus Lock · · · · · 7-10
Auto Play (Attachments) · · · · · 4-14
Auto Save 13-2!
Auto-delete · · · · · · 4-10, 13-17
Auto-extract · · · · 13-16
Available Memory • • • • 14-18, 14-19, 14-20
В
Background Play (Multitask)····· 8-10
Backlight 13-5, 13-32
Backup
Polocato

S! Addressbook Back-up · · · · · · · 12-	
Transfer All · · · · · · · · · · · · · · · · 12-	10
Barcode Reader · · · · · 9-	22
Battery · · · · · 1-7, 14	-4
Installation · · · · · · · · 14	1-5
PC Connection · · · · · · · · · · · · · · · · 13-	
Battery Level ••••••• 1-4, 1-5, 14	-4
Beeper Mode · · · · · 14-	10
Bluetooth® · · · · · · 12	
Delete Device · · · · · · · · 12-	
Details · · · · · · 13-	36
Device Name · · · · · · · 12-14, 13-	36
Dial-up Connections · · · · · 12-	14
Disconnect · · · · · · · 12-	14
ON/OFF · · · · · · · · 12	
Paired Device List · · · · · · · 12	
Search Device · · · · · · · 12	
Send a Picture/Video After Shooting · · · · · 7-	11
Send My Details · · · · · · · 12-	14
Set Handsfree · · · · · · 13-	
Settings · · · · · · 13-	36
Transfer Files · · · · · · · 12	2-6
Trust Device · · · · · 13-	36
Visibility · · · · · · · 13-	36
Bookmarks · · · · · · · 5	-6
Create Folder · · · · · · · · · · · · · · · · · · ·	j-C
Delete · · · · · · · · · · · · · · · · · ·	
Edit · · · · · · · · · · · · · · · · · · ·	
Move 5	
Send via Mail · · · · · · · · · · · · · · · · · · ·	j-9
BookSurfing $^{ ext{@}}$ $\cdots \cdots$ 9-	
Brightness · · · · · · · 13-5, 13-	28

Brightness (TV) 13-28 Browser Reset 13-20 Brush Up 7-10	Change Bright (Edit Picture) 7-12 Change Security Codes 3-18 Call Barring Service Code 11-2	Content Key Backup
C	Internet Security Code · · · · · · · · · 11-5 PIN/PIN2 · · · · · · · 11-5	Continuous Talk Time · · · · · · · · · 14-17 Conversion Prediction · · · · · · 2-28
Calculator 9-16 Currency Conversion 9-29 Calendar 9-4 Calendar Lock 13-39 First View 13-39 Set Holiday 9-24 Call 3-2 Call Barring 3-17 Call Barring Service Code 1-14	Channel Selection 6-4 Channel Settings 6-3, 6-7 Charge Battery 1-7 AC Charger 1-7 Desktop Cradle 1-8 In-Car Charger 1-9 PC Connection 13-37 Charger Terminals 1-3 Charging In Progress Image 13-7	Conversion Frediction 2-2-20 Converter 9-16, 9-29 Cookie 13-19, 13-20 Copy (Characters) 2-13 Cost Limit 13-22 Country Number List 13-22 Creating (Mail) 13-14 Custom Window 13-34 Customize Handset Address 4-3 Cut (Characters) 2-13
Change 3-18 Call Forwarding 3-10	Charging Indicator ·····1-3 Charging Time ·····14-17	D
Call Log Lock 3-15 Call Time & Cost 3-16, 13-22 Call Waiting 3-17 Caller Details 13-4 Calls & Alarms (S! Appli) 13-32 Camera 1-3, 7-2 Settings 13-25 Camera Modes 7-3 Camera/Video Indicator 1-3 Cancel PIN Lock 11-5 Capture (TV) 6-7 Card Reader Mode 12-8, 12-9 Card Sync (S! Appli) 13-32 Category (Mail) 13-14 Center Access Code 1-14	Clear Authentication Info 13-20 Clear Cache 13-20 Clear Field 4-14 Clear Memory 13-33 Clear Memory (Data Broadcasts) 13-29 Clear Setting (Text Entry) 13-34 Clock Type 2-8 Color Control 13-25 Communication Mode (USB Connection) 12-8 Confirmation Window Data Broadcasts 13-29 Outgoing Messages 13-15 Reset 13-33 Connection (PC Connection) 12-8	Dakuten (*)/Handakuten (*) 2-11 Data Broadcast Mode 6-4 Data Broadcasts 6-2 Data Folder 2-21 Available Memory 2-31, 14-18 Datacasting 13-29 Date & Time 1-11 Date Stamp 13-26 Daylight Saving Time 9-15, 13-42 Default Settings 14-24 Delay Timer 7-7 Delete (Characters) 2-13 Delete Messages 4-16, 4-18 Delivery Check 4-15, 13-15

Function Lock · · · · · 11-4	Icons (Indicators)	International Call Call Abroad from Japan · · · · · · · · · 3-5
G	Bluetooth® Compatible Devices · · · · · 12-5 Display · · · · · · · · · · · · · 1-4	Global Roaming · · · · · · 3-5
Gamendeco 13-2 Global Roaming 3-5 Operator 13-22 GMT Offset 13-42 Go to Secured (Data Broadcasts) 13-29 Graphic Mail 4-5, 4-15 Grid 13-26 Group (Mail) 4-13, 4-14, 13-14 Group (Phone Book) 2-17, 2-30, 13-35	External Display 1-5 Message List 4-10 Text Input Mode 2-10 TV Links 6-7 Video Call 3-7 Idle Screen (Ku-man) 13-43 Idokoro Mail 9-12 Illumination 13-6 Image Mode 6-5 Image Quality (Camera) 13-25	International Code
Н	Image Quality (TV) · · · · · · · · 13-28 Image Quality (Video Call) · · · · 3-15, 13-23	Jump · · · · · · · · · · · · · · · · · · ·
Handset Code 1-14 Change 11-2 Handset Parts & Functions 1-2 Handsfree (Bluetooth®) 13-36 Handsfree Call (Voice Call) 3-14 Handsfree On/Off (Video Call) 3-15 Handstrap Hole 1-3 Hiragana to Alphanumerics/Katakana Conversion 2-11 History (Internet) 5-3, 5-4 Delete 5-7 Hold Answer 3-13 Hold Call 3-14 Hold Setting (Video Call) 13-23	In-Car Charger 1-9 Incoming Call Image 13-2 Incoming Message Image 13-2 Incoming Messages 4-8 Infinity 7-10 Information Prompt 1-6 Infrared 12-2 Authentication Password 12-2 ON/OFF 12-2 Send a Picture/Video After Shooting 7-11 Send My Details 12-14 Transfer Files 12-2 Infrared Port 1-3, 12-2 Input Method 13-34 Insert 2-28, 4-13	Kacha-ble 13-13 Keitaideco 2-3, 2-7, 2-32, 13-2, 13-11 Key Guide Camera 7-3, 7-6 Media Player 8-5, 8-6 TV 6-7 Key Shortcut 13-25 Keypad 1-3, 2-3, 6-4 Keypad Light 13-5 Keypad Lock 11-3 Kitchen Timer 9-17 Ku-man Mail 9-23 Ku-man's Room 9-23
IC 14-2 Ichi Navi 9-10	Interface Language · · · · · · · 13-7 Internal Antenna · · · · · · · · · · · · 1-3	

Melody List 14-22

My Status 10-4

4	Λ
ш	

PC Connection (USB Connection) · · · · 12-8	Playlist · · · · · 8-7	Receiving (Mail) · · · · · 13-16
Charge Battery · · · · · · · · · · · · 13-37	Add Tracks · · · · · · 8-11	Recent · · · · · 8-10
Dial-up Connections · · · · · · 12-15	Change Order · · · · · · · · · 8-11	Recipients List · · · · · 9-12
PC Files 9-20	Copy8-11	Delete9-28
PC Site Browser · · · · · · · · · · · · · 5-4	Create · · · · · · · 8-7	Reconvert · · · · · 2-29
Penlight · · · · · 1-3, 2-4	Delete8-11	Record Videos·····7-5
Phone Book····· 2-16	Play · · · · · · 8-7	Settings · · · · · · · · · · · 13-25, 13-27
Call from2-19	Remove Tracks · · · · · · 8-11	Reject Calls 3-13, 13-9
Change View · · · · · · · · · · · · 2-30	Rename · · · · · · · 8-7	Reload Page · · · · · · · 5-7
Copy	Positioning Lock · · · · · · 13-41	Relocate 12-15
Delete2-31	Power On 1-10	Reminder · · · · · 9-24
Edit2-30	Power Saving · · · · · 13-5	Replace Text · · · · · 2-29
Move · · · · · · 2-31	Power-off Screen · · · · · · 1-10, 13-3	Reply to
New Entry · · · · · · · 2-17	Power-on Screen · · · · · 13-3	Activate 4-16
Picture · · · · · · · · · 2-18, 13-4, 13-26	Prediction · · · · · 2-28, 13-34	Messages · · · · · · · · 4-9
Search Mode · · · · · · 2-20	Preview 13-27	Save an Address · · · · · · · · · · · · · 13-15
Sort by · · · · · · 2-30	Priority · · · · · 13-10, 13-32	Reset · · · · · 13-33
Phone Book Lock · · · · · 13-35	Priority (Mail) 4-16, 13-15	Reset All 13-33
Phone Number · · · · · · · · · · · · · · · · · 3-3	Program Guide · · · · · · · · · · · · · 6-5	Reset Learned · · · · · · 13-34
Photo Album · · · · · · 2-7	Protect (Mail) 4-17	Reset Setting · · · · · 13-33
Photo Stand · · · · · 13-7	PUK (Personal Unblocking Key) · · · 11-5, 14-2	Internet
Phrase Prediction · · · · · · 2-28, 13-34		Restricted Mode · · · · · 11-5
Pictographs · · · · · 2-12	Q	Retrieve Mail · · · · · · 4-16
Picture (Phone Book) · · · · · · 2-18, 13-4	4	Retrieve Mode · · · · · 13-16
Take a Picture for a Phone Book entry · · · 13-26	QR Codes · · · · 9-22	Retrieve Network Information · · · · 1-10
Picture Size (Camera) · · · · · · 7-10, 14-20		Ring Time 2-30, 13-12
Picture Size (Edit Picture) · · · · · · · · 7-9	R	Ringtone 2-18, 13-11
PIN Settings · · · · · · · 11-3	N	Ringtone Volume · · · · · · 2-30, 3-4, 13-11
PIN/PIN2 14-2	Received Calls · · · · · · 3-9	Root Certificates 13-19, 13-32
Change · · · · · · · · · · · · · · · · · · 11-5	Call from3-12	Rotate Image (Edit Picture) · · · · · 7-11
Play Mode · · · · · 8-10	Delete Call Log Records · · · · · · · · 3-15	,
Player Image······ 13-31	Save to Phone Book · · · · · · · 2-19	

S	My Status · · · · · · · 10-4	Screen Display (Camera) · · · · · · 13-27
	Notification · · · · · · · · · · · 10-5, 10-9	Screen Settings (TV) · · · · · 13-28
S! Addressbook Back-up · · · · 12-12	Rename · · · · · · · 10-9	Script 13-19
Auto Sync · · · · · · 12-16	Request Reply · · · · · · · · · · · · · · 13-44	Scroll Unit · · · · · · 13-15, 13-21
Sync Log · · · · · · · 12-16	Save Members to Active Window · · · · · 13-44	Search Mode (Phone Book) · · · · · 2-20
Synchronization Type · · · · · · · · 12-13	Saving Failed Notification · · · · · · 10-5	Search Time · · · · · 8-10
S! Appli8-8	Saving Request · · · · · · · · · · · · · 10-5	Secret Entries · · · · · 2-18
Delete8-12	Status Setting · · · · · · · · · 13-44	Secret Mode · · · · · 11-4
Details8-12	Status Update · · · · · · · · · · · · · · 10-9	Secure Remote Lock · · · · · 11-4
Download · · · · · · 8-8	S! GPS Navi · · · · · 9-10	Security · · · · · · · · 5-2, 13-19, 13-32, 13-33
End/Exit · · · · · · 8-8, 8-9	Location Logs · · · · · · · 9-27	Security Lock · · · · · · · 2-23, 4-17, 13-21
Move · · · · · · 8-12	Location Mail · · · · · · · · 9-27	Self-delete (Mail) · · · · · · 4-16
Pause · · · · · 8-8	My Locations · · · · · · 9-27	Send Location · · · · · · · 13-29
Resume · · · · · 8-8, 8-9	S! Information Channel · · · · · 9-19	Send Notifications (Idokoro Mail) · · · · 9-13
Screensaver · · · · · · 8-12	Get Latest9-29	Send Picture (Video Call) · · · · · 3-15
Start	History · · · · · 9-29	Send URL
S! Appli Root Certificates · · · · · 13-32	Weather Indicator · · · · · · · 9-19	Sending (Mail) 13-15
S! Appli Settings · · · · · · 13-32	S! Loop · · · · · 10-2	Server Certificate · · · · · · · · · 5-8
S! Circle Talk · · · · · · 10-6	S! Mail · · · · · · · · 4-4	Server Operations · · · · · · 4-16
Add Members · · · · · · 10-7	S! Quick News ····· 9-18	Set as Main City · · · · · 9-15
Answer 10-8	Auto Refresh · · · · · · · 9-29	Settings · · · · · · 13-40
Call Another Member · · · · · · 10-8	Check Updates · · · · · · 2-9	Settings (Bluetooth®) · · · · · · 13-36
Create a Group · · · · · · · · 10-7	Delete9-29	Sharpness · · · · · · · · · · · · · · · · 13-28
Delete	Image · · · · · · 13-8	Short Video Mode · · · · · · · · · · · · · · · · · · ·
Edit Group · · · · · · · 10-10	Reset	Shortcuts Menu ······2-4
Initiate · · · · · · · · · · · · · · · · · · ·	Ticker Speed · · · · · · · 13-8	Arrange Icons · · · · · · · · · · · · · · · · · · ·
S! Friend's Status ······ 10-3	Unread/Read · · · · · · 13-8	Change Icon · · · · · · · · · · · · · · · · · · ·
Add Members	S! Town · · · · · · · 10-2	Delete
Call/Send Mail · · · · · · · 10-9	Saved Pages ······5-6	Edit Title · · · · · · · · · · · · · · · · · · ·
Change Group · · · · · · 10-9	Delete	Show My ID 3-12
Check a Member's Status · · · · · 10-5	Rename · · · · · · · 5-9	Show My Number · · · · · · · · 3-12
Deletion Request · · · · · · · 10-9	Scan Data ······ 9-22	Shutter Sound · · · · · · 13-26
Deletion request	Stail Data 9-22	Silutter Journa 13-20

ide Key · · · · · 2-4	Phone Book · · · · · · · 13-35	Beeper Mode · · · · · · · · · · · · 14-10
ignal Strength · · · · · · · · 1-4, 1-5	Voice Recorder · · · · · · · · 9-27	Settings
ignature · · · · · · 13-14	Streaming8-3	Text Entry Keys · · · · · · 14-9
imple Input · · · · · · · 4-13, 13-14	Sub Menu View ······2-4	Text Input Modes · · · · · 2-10
imple Mode · · · · · · 2-5, 14-11	Subtitles 6-5, 13-28	Time Table · · · · · · · · 9-7
imple Notice · · · · · 9-13	Surround 8-10	Copy9-26
ingle Kanji Conversion · · · · · 2-28	Switch Audio (TV) 13-28	Delete
lideshow · · · · · · 2-22	Switch Browsers · · · · · · · · · · · · · 5-7	Settings
MS4-6	Switch Windows (Video Call) · · · · · 3-15	Timer6-6
Move · · · · · 4-19	Symbols 2-11	Check/Edit/Delete · · · · · · · 6-8
MS Center Number · · · · · 13-15	•	Notification · · · · · · · 13-30
nooze · · · · · 9-14	T	Program Guide······6-8
oftkeys·····xi, 1-3		Timer Results · · · · · · 6-8
oftware Update · · · · · · 14-6	Take Pictures · · · · · · · · · · · · · · · · · 7-3	To Group (Mail) 4-14
ort by (Mail) · · · · · 4-19	Settings · · · · · · · · · · 13-25, 13-26	To Playlist · · · · · · · · 8-11
ort Setting ····· 4-11	Tasks9-5	To/Cc/Bcc · · · · · 4-13
ound Effects · · · · · · 13-12	Alarm · · · · · · 9-5, 13-39	Toggle Characters in Reverse Order · · 2-11
ound Volume · · · · · · 13-12, 13-21	Check	Touch Tones · · · · · 3-14
ounds · · · · · 13-11	Delete	Transfer Music · · · · · 12-8
pace · · · · · 2-27	Edit9-25	Troubleshooting · · · · · · 14-7
peaker · · · · · · · 1-3	Priority · · · · · · 13-39	Trust Device
peaker Volume · · · · · · · 13-12	Reminder · · · · · · 9-24	TV6-2
pecifications · · · · · · · · · · · · · 14-17	Show/Hide · · · · · 9-25	Settings · · · · · · 13-28
peed Dial · · · · · · · · · · · · · · · · · · ·	Stamp Icon · · · · · · · 13-39	TV Antenna · · · · · · 1-3, 6-3
SL/TLS · · · · · · · · · · · · · · · · · · ·	Status · · · · · 13-39	TV Links6-7
tandby · · · · · 1-10, 2-7	Tasks Lock · · · · · 13-40	Twin Illuminations · · · · · · 1-3, 13-6
tart Comm. (Data Broadcasts) · · · · 13-29	Templates (Graphic Mail)	
tart/End Tone (Camera) · · · · · · · · 13-27	Save · · · · · · 4-15	U
torage Location	Switch · · · · · 4-15	
Camera · · · · · · 13-25	Use · · · · · · 4-5	Undo · · · · · 2-14
Data Broadcasts · · · · · · · 13-29	Text Copy 4-19, 5-7	Unread/Read (Mail) · · · · · 13-18
Internet	Text Entry 2-10, 2-27	Unsent Messages····· 4-19

Index

URL History	Watch TV 6- Weather Forecast 2-9, 9-19, 13-4 Update 9-2 Weather Indicator 2-9, 9-1 View Settings 13-4
V	Web (Restricted Mode) 11-
Vibration 2-30, 13-12, 13-15, 13-32 Video Call 3-7 Settings 13-23 Video File Playback Window 8-6 Video Mail Mode 7-5 Video Modes 7-5 View Settings (Weather Indicator) 13-43 View Type (Data Folder) 2-31 Visibility 13-36 vObjects 2-32 Voice Call 3-4 Call from Phone Book 2-19 Voice Cancel 8-10 Voice Mail 3-11 Voice Record (Camera) 13-27 Voice Record During Calls 3-14 Voice Recorder 9-9 Storage Location 9-27 Volume (S! Appli) 13-32	Web Page Operations 5- Web Search 5- White Balance 13-2 Wide View 13-3, 13-1 Word List 2-1 Delete All 2-2 World Clock 9-1 Rename City 9-2 Y Yahoo! Keitai 5- Z Zoom (Camera) 7-3, 7-6, 14-2 Zoom (Video Call) 3-1
Wallpaper 2-7 Wallpaper (Edit Picture) 7-12 Warning 13-20	

14

By User Action	
A	
Access	
Internet · · · · · 5-3,	5-4
Activate	
Barcode Reader · · · · · · · · · · · · · · · · · · ·	
Music Player·····	8-5
Add	
Country Code to Country Number List · · 13	
Functions to Shortcuts Menu·····	
Members to S! Circle Talk Members List · · · 1	
Members to S! Friend's Status Members List · · 1	
Operator • • • • • • • • • • • • • • • • • • •	
Phone Number to Auto Answer List · · · · · 13	3-23
Songs to a Playlist · · · · · · 8-7, 8	3-11
Stamp · · · · · · · · · · · · · · · · · · ·	7-11
Text (Edit Picture) · · · · · · · · · · · · · · · · · · ·	7-11
Adjust (Earpiece/Speaker Volume)	
S! Circle Talk · · · · · · · · · · · · · · · · · · ·	
Video Call · · · · · · · · · · · · · · · · · ·	
Voice Call · · · · · · · · · · · · · · · · · ·	3-4
Answer	
Any Key Answer · · · · · · · · · · · · · · · · · · ·	
Auto Answer (Earphone-Microphone) · · · 13	
Auto Answer (Video Call) · · · · · · · · · · · · · · · · · ·	
Call Waiting · · · · · · · · · · · · · · · · · · ·	3-17
Earphone-Microphone Answer · · · · · · · · 3	3-13
Open to Talk·····	
Response Time Setting (Answering Machine)	
S! Circle Talk Call · · · · · · · · · · · · · · · · · ·	10-8

Video Call 3-7 Voice Call 3-4 Attach 3-4
Files · · · · · · 4-4
В
Back UpData to Memory Card (Transfer All)12-10S! Addressbook Back-up12-13Setting Data (Relocate)12-15
С
Call Dialed Numbers 3-12 Earphone-Microphone Call 3-13 International Call 3-5 Multiparty Call 3-17 Received Calls 3-12 S! Circle Talk 10-7, 10-8 Speed Dial 3-5 Video Call 3-7 Voice Call 3-4 Cancel
Alarm 9-14 Answering Machine 3-6 Card Reader Mode 12-9 Keypad Lock 11-3 Manner Mode 1-12 Mute 3-13 Offline Mode 1-13 Password Lock 11-3

Phone Book Lock 13-35 PIN Lock 11-5, 14-2 S! Information Channel Subscription 9-19 Simple Mode 2-6
Change Alternative Picture (Video Call) · · · 3-15, 13-23 Call Barring Service Code · · · 3-18 Color of Calendar Dates · 9-24 File Name · · · 2-33 Folder Name · · 2-33, 4-17 Font Size (Display) · · 13-5 Font Size (Mail) · · 13-21 Font Size (Mail) · · 13-21 Font Size (Text Entry Window) · 2-28 Handset Code · · · 11-2 Handset E-mail Address · · 4-3 Image Quality (Video Call) · 3-15, 13-23 Internet Security Code · · 11-5 Message Box View Format · · 13-17 My Status · · · · · · · · · · · · · · · · · · ·
Files 2-33 Main Menu Icons 2-3 Messages 4-19
Phone Book Entries · · · · · · · 2-30 Charge (Battery)
AC Charger 1-7 Desktop Cradle 1-8 In-Car Charger 1-9

;	×
1	4

Incoming Call · · · · · · · · 3-13	Lock Calendar Lock · · · · · · · · 13-39	S! Appli · · · · · · 8-8 Play
Input (Characters) Alphanumerics	Call Log Lock 3-35 Function Lock 11-4 Keypad Lock 11-3 Password Lock 11-3 PIN Lock 11-3, 14-2 Positioning Lock 13-41 Security Lock (Data Folder) 2-23 Security Lock (Internet) 13-21 Security Lock (Message Box) 4-17 Tasks Lock 13-40	Answering Machine 3-6 Background Play 8-10 Files (Data Folder) 2-22 Music 8-4 Playlist 8-7 Videos 7-10, 8-5 Voice Recorder 9-9 Protect Messages 4-17 R
Pictographs 2-12 Space 2-27 Symbols 2-11	M Move	Receive Messages · · · · · · · · · 4-8, 4-16
J	Bookmarks 5-9 Files 2-23	S! Friend's Status Notification $\cdots 10-5$ via Bluetooth [®] Communication $\cdots 12-6$, 12-7
Jump to Specified Date on Calendar · · · · · 9-4	Folders 2-33 Messages 4-19 Phone Book Entries 2-31	via Infrared 12-3 Record Answering Machine 3-6
L	S! Appli · · · · · · · 8-12 Shortcuts Menu Icons · · · · · · · 2-26	Other Party's Voice·········3-14 Video·····7-5
Light (Flash) Backlight	SMS · · · · · · · · · · · · 4-19	Voice Mail
External Lights for Notifications 13-6 Mobile Light 7-3, 7-6 Penlight 1-3, 2-4 Twin Illuminations 13-6	Open Ku-man's Room · · · · · 9-23 P	Rename Folder/File 2-33 Saved Page 5-9 Reply to
Listen to Voice Mail	Paste Characters	Received Messages · · · · · · · 4-9

Reset	Words to Word List · · · · · · · · 2-15	Talk
Browser Settings · · · · · · · · 13-20	Search	Call Waiting · · · · · · · 3-17
Handset · · · · · · 13-33	Phone Book · · · · · · 2-20	Handsfree 3-14
Multi Selector · · · · · · · · 2-26	Text in Web Pages · · · · · 5-7	Multiparty Call · · · · · · · · · · · · · · 3-17
Prediction/Conversion Dictionary · · · · · · 13-34	Send	S! Circle Talk · · · · · · · · · 10-7, 10-8
S! Quick News · · · · · · 13-8	Mail Notifications · · · · · · 9-13	Video Call · · · · · · · 3-7
Total Call Cost · · · · · · · · 3-16	Music/Video Files · · · · · · · · · 8-11	Voice Call · · · · · · · · · · · · · · · · · ·
Total Call Time · · · · · · · · · · · · · · 3-16	Picture/Video After Shooting · · · · · 7-10, 7-11	Transfer
Restrict	S! Mail · · · · · · · 4-4	by USB Connection · · · · · · · 12-9
Access to the Internet by URL Entry · · · · · 11-5	SMS · · · · · · 4-6	Setting Data (Relocate) · · · · · · · · 12-15
Call Barring · · · · · · · · · · · · · · · · · · ·	Touch Tones · · · · · · · 3-14	Transfer All (Memory Card) · · · · · · · 12-10
Resume	via Bluetooth® Communication · · · · · · 12-6	Turn off
S! Appli8-8	via Infrared · · · · · · · · · · · 12-2, 12-3	Handset Power·····1-10
T.F.	Video Call Image · · · · · · · · · 3-7	Off-timer (TV) · · · · · · · · 13-28
S	Set	Prediction · · · · · · · · 13-34
	Alarm · · · · · · 9-14	Turn on
Save	Start	Handset Power·····1-10
Attachments · · · · · · · 4-19	Navi Appli · · · · · · · 9-10	
Bookmark · · · · · 5-6	S! Appli · · · · · · · 8-8	U
Drafts · · · · · 4-15	Subscribe	
Events9-4	S! Information Channel Service · · · · · · · 9-19	Update
File in Web Pages · · · · · 5-8	Switch	Mail List · · · · · · 4-16
Locations to Areas List · · · · · · · · 9-12	Text Input Modes · · · · · · · 2-10	S! Appli Information on Memory Card · · 13-32
My Details · · · · · · 3-12	to Simple Mode · · · · · · · · · 2-5	S! Friend's Status · · · · · · · · · · · · · · · · 10-9
My Locations · · · · · · 9-27	to simple ivioue 2-3	S! Quick News · · · · · 2-9
Number Memo······3-14	T	Software
People to Active Window Members List · · 2-9, 13-44	•	Weather Forecast · · · · · · · · 9-29
People to Recipients List · · · · · · · 9-12	Take	Web Page 5-7
Phone Book Entry · · · · · · · 2-17, 2-29	Picture · · · · · · 7-3	
Phone Number to Reject List · · · · · · · 13-9	Take Notes	W
Saved Pages · · · · · · · · · · · · · · · · · 5-6	Notepad · · · · · · 9-8	NA
Tasks	•	Watch
		TV · · · · · · · · · 6-4

Warranty & After Sales Service

Warranty

A warranty card is included with handset. Carefully read the card and check that the store name and purchase date sections have been filled in correctly. Then, store it in a safe place.

 SoftBank and Toshiba assume no responsibility for damages to you or third parties as a result of a failure, malfunction or faulty operation of the product.

After Sales Service

Be sure to refer to "Troubleshooting" (page 14-7) before submitting your handset for repair. If you are still having problems with your handset, contact your nearest SoftBank Shop or SoftBank General Information (page 14-46).

Repair within Warranty Period

Repair is carried out in accordance with the conditions of the warranty.

Repair After Warranty Period

Repair is carried out if possible and the handset owner is responsible for any repair costs.

- During repair, parts may be replaced with used parts that meet our quality standards.
- Data and settings may be lost or altered as a result of failure or repair of your handset. It is, therefore, recommended that you keep a backup copy of important data such as Phone Book data. SoftBank and Toshiba assume no responsibility for any damages due to the loss or alteration of handset data (contents of Phone Book, Data Folder, etc.) and settings as a result of failure or repair of your handset.
- Disassembling or modifying handset is in violation of Radio Law. Your handset will not be accepted for repairs if it has been modified.

Customer Service

If you have any questions about SoftBank handsets or services, call General Information. For repairs, call Customer Assistance.

SoftBank Customer Centers

From a SoftBank handset, dial toll free at 157 for General Information or 113 for Customer Assistance.

SoftBank Global Call Center

From outside Japan, dial +81-3-5351-3491 (Please take care to dial the correct number. International charges will apply to this call.)

Call These Numbers Toll Free from Landlines

Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba,	General Information	6 0088-240-157
Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	Customer Assistance	© 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	© 0088-241-157
	Customer Assistance	(a) 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	© 0088-242-157
	Customer Assistance	6 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka,	General Information	(a) 0088-250-157
Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	Customer Assistance	© 0088-250-113

SoftBank 823T/824T Instruction Manual

SOFTBANK MOBILE Corp.

* For additional information, please visit a SoftBank Shop.

Model: SoftBank 823T SoftBank 824T

Manufacturer: TOSHIBA CORPORATION



Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands).

- * Handsets, batteries and chargers submitted for recycling cannot be returned.
- * Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.