

Basic Operations



Menu Operations	2-2	Phone Book	2-21
Accessing Handset Functions.....	2-2	Overview	2-21
Desktop.....	2-5	Creating Phone Book Entries	2-22
Navigating through Menus	2-8	Using Phone Book	2-23
Multitask	2-10	Phone Book Settings	2-25
Activating Another Function.....	2-10	S! Addressbook Back-up	2-28
Toggling Functions	2-11	Overview	2-28
Text Entry	2-12	Using S! Addressbook Back-up	2-28
Overview.....	2-12	Advanced Features	2-30
Entering Characters in 5-touch Mode....	2-14	Main Menu.....	2-30
Editing Text	2-16	Desktop Icons.....	2-30
Editing Templates	2-17	Text Entry	2-31
Using Dictionaries	2-17	Templates.....	2-32
Entering Characters in 2-touch Mode....	2-18	Dictionaries	2-32
Entering Characters in T9 Input Mode ..	2-18	Phone Book	2-33
		S! Addressbook Back-up.....	2-36

2



Accessing Handset Functions

- In this guide, most operations start from Main Menu.

From Main Menu

Press **MENU** to open Main Menu. Use **▲** to select an item and press **■** to open sub menus.



Main Menu

Tip

- Handset returns to Standby after 15 seconds of inactivity.

Using Softkeys & Multi Selector

Press Softkeys or use Multi Selector in Standby to access assigned functions.

● Softkeys

- **[M]**: Open Mail menu.
- **[Y]** (Press and hold): Open Yahoo! Keitai menu.
- **[P]**: Access the function assigned to the key.

● Multi Selector

- **[D]**: Open Active Desktop Page.
- **[B]**: Open Phone Book Search window.
- **[C]**: Open Received Calls window.
- **[R]**: Open Redial window.

 
Keyword Search

Enter keywords to search for menu items.

1 **MENU** → **[P]**

2 Enter keyword → **■**

<Example> Enter "mail"

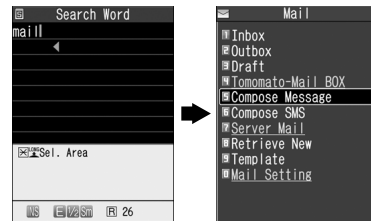

Corresponding results appear.

3 Select an item → **■**

- **toggling Multiple Items**
Press **[Y]** to toggle items.



 
From Quick Menu

Use Quick Menu to access TV, Photo Mode, Photo Slide-show, Movie Mode, Voice Mode or Music when handset is closed.

1

Touch Sensor is enabled (On).

2 Tap , or

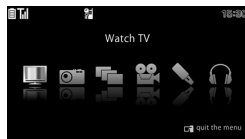

Quick Menu

■ Returning to Standby

⇒ or Press and hold

Tip

- Handset returns to Standby after a period of inactivity.

3 or to select a function

⇒


● Menu Items

Icon	Function
	Activate TV (P. 8-7)
	Activate Camera in Photo Mode (P. 7-5)
	Activate Photo Slide-show from Quick Album (P. 12-5)
	Activate Camera in Movie Mode (P. 7-7)
	Activate Camera in Voice Mode (P. 7-9)
	Activate Music Player (P. 9-6)

From Original Menu

Assign often-used functions to Original Menu for quick access.

 1 ⇒

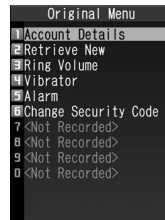

Press to toggle between Main Menu and Original Menu.



2

Basic Operations

Enter Menu Item Number

 
Enter these numbers for direct menu access. Note that Main Menu Theme must be set to **Basic**.

- See P. 15-19 for menu item numbers.
- See P. 2-30 for details on changing Main Menu Theme.

<Example> Access **Select Ring Tone** (menu no. 13)

1 MENU

2 1 → 3

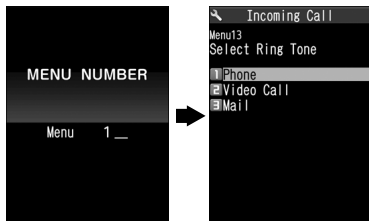



Desktop

 
Press **[F1]** to access Desktop. From Desktop, press **[F2]** to toggle Icon window and Info window.

The following shortcuts are set to Icon window by default.

- S! Quick News List
- Photo Mode
- TV
- Quick Search

Icon Window

Add functions to Icon window and use them as shortcuts. Notifications appear to inform you of missed calls, new messages, etc. Select a notification to check the information.

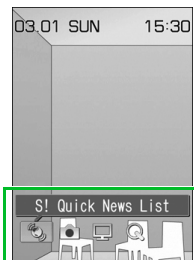

Icons

Icon	Function
	S! Quick News List
	Photo Mode
	TV
	Quick Search
	Call Phone Number
	Compose S! Mail
	Compose SMS
	Access Webpage (Yahoo! Keitai)
	Access Webpage (PC Site Browser)
	Play Melody

Icon	Function
	Show Image
	Play Video
	S! Appli
	Inbox Folder
	Movie Mode
	Voice Mode
	Schedule
	To Do List
	Text Memo
	Bar Code Reader



Icon	Function
	Text Reader
	Music Player
	Life History Viewer
	Calculator
	Dictionary
	Receive IR Transmission
	Bluetooth
	Original Menu
	PC Site Browser
	Books

Icon	Function
	Play/Erase Msg.
	Play/Erase VC Msg.

● Notifications

Icon	Function/Information
	Missed Calls
	Answering Machine Play/delete messages.
	Answering Machine (Video Message) Play/delete Video Messages.
	Voice Mail
	New Messages
	Failed Alarms

Icon	Function/Information
	Missed TV Programs
	Timer Recording Finished
	Maximum Call Cost Limit Reached
	Software Update
	USB Mode Communication
	Network Re-search
	New S! Info Channel
	New S! Info Channel Receive Failure
	New Weather Info.



Icon	Function/Information
Miss	Weather Info. Receive Failure
Get	Content Keys Acquired

Notifications disappear after accessing the functions/information. Answering Machine and Voice Mail notifications disappear after message is played back.

● Adding Icons

Add up to 15 icons per Desktop theme. Select from three Desktop themes.

- 1 From a function
Add Desktop Icon

● Accessing Icons & Notifications

1



Icon Window

2 to select an icon

■ Scrolling Icons



■ Changing Themes

Select a theme YES

 
Info Window

Phone numbers, functions, etc. saved to Icon window appear in Info window.

● Accessing Data and Functions

Press to toggle Info window and Icon window.

1

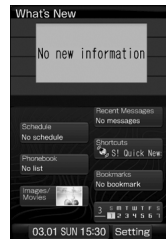

Info Window

Desktop opens to previously used window.

2 Select an item



● Items


Item	Details
What's New	Access/view Notifications (P. 2-6).
Recent Messages	Access new messages
Schedule	Schedule Access schedule entries (today/tomorrow)
	To Do List Access To Do List entries
Shortcuts	Access Icons saved to Icon Window
Phonebook	Phone Number Access phone numbers from Icon window
	E-mail address Select e-mail address (from Icon window) to Create S! Mail
Bookmarks	Yahoo! Keitai Access bookmarked sites
	PC Site Browser Access bookmarked sites

Item	Details
Images & Movies	Still images Open image
	Video Play video
Calendar	Open Calendar
Clock	Access Alarm list (Set Main Time window appears when clock is not set)
Settings	<ul style="list-style-type: none"> • Set items on/off • Change item order

Navigating through Menus

Scrolling Pages

 
Use or to scroll next/previous pages.

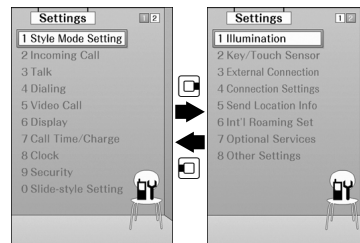



Selecting Menu Items Using Keypad

 Use keypad to enter number corresponding to menu item.

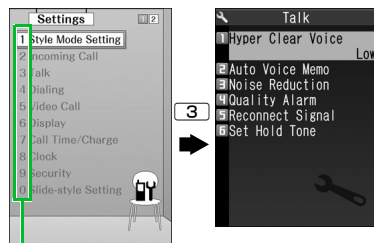

Menu Numbers

Return to Previous Window or Standby

Press **CLEAR** to cancel operation and return to previous window.

Press **⏪** to return to Standby.

- May not apply to all functions/windows.

More Features

Advanced

Main Menu

- Change Main Menu Theme
- Switch to Simple Menu
- Temporarily Change Design Theme of Main Menu

(▶ P. 2-30)

Desktop Icons

- Edit Title of a Desktop Icon
- Change Icon Image
- Check Icon Information
- Change Order of Desktop Icons
- Delete Desktop Icons
- Reset Desktop Icons
- Show/Hide Desktop Icons

(▶ P. 2-30)

Customize

Menu Display Settings

- List View and Details View
- Set Main Menu Theme
- Save Last Selected Menu Item to Memory
- Add a Menu Item to Original Menu

(▶ P. 14-8)

Key/Touch Sensor

- Change Function Assigned to Shortcut Key
- Set Touch Sensor Backlight
- Set Vibrator and Illumination for Touch Sensor Operation
- Set Touch Sensor Scroll
- Set Not to Use Touch Sensor

(▶ P. 14-38)

Desktop Icons

- Set Desktop Theme
- Show New Message Indicator as 3D Animation

(▶ P. 14-7)



Multitask

Activate up to three functions simultaneously. Activate one function per group at one time (except TV & Music Group).

Function Group	Function
Mail Group	Mail
Yahoo! Keitai Group	Yahoo! Keitai
S! Appli Group	S! Appli
Settings Group	Settings, Optional Services
Tools Group	Data Folder, Tools, Phone Book, Own Data, Camera
TV & Music Group	TV, Music

- See P. 15-2 for available combinations of functions that can be activated at the same time.
- Currently active functions are indicated by task indicators in Task Indicator Area. To switch to a different function, select the corresponding task indicator.



Task Indicator Area

- Transmission fees are incurred while accessing functions during a voice call.

Activating Another Function

Activate another function without exiting current function.

1 While using a function →

2 → Select another function →

■ Mail Function

After step 1 →

■ To Access Yahoo! Keitai Portal

After step 1 →

■ To Activate Function Assigned to Shortcut Key

After step 1 →



Toggleing Functions

- 1 When multiple functions are active →



Task Switch Window

Switching Functions

- to select a task indicator →

Opening Main Menu

-

Returning to Standby

-

Press in Standby to reopen Task Switch window.

Ending Multitask

- → *Quit Selected* or *Quit All Function* →

Opening Widget List

-

Tip

- Alternatively, press and hold to end Multitask and return to Standby.



Text Entry

2

Basic Operations

 
Handset has three text input methods: 5-touch, 2-touch and T9 Input.

● This guide mainly explains Japanese text entry in 5-touch mode.

Overview

Text Entry Window

A text entry window consists of Character Entry Pane, Guide Pane and Status Pane. Indicator and key descriptions are as follows:

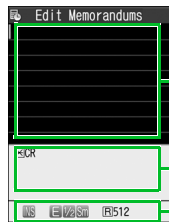

Character Entry Pane

Guide Pane

Status Pane

Text Entry Window

● Character Entry Pane

	Cursor
◀	End mark (end of text)

● Guide Pane

▲▼ CHG	☐ to convert characters
▲▼ All ▲▼ Find	☐ to search Phone Book
◀▶ ▲▼ Area	☐ to specify a text range to copy/cut
☒ CR	☐ to insert line feed
☒ A/a	☐ to switch case of each character, or to add dakuten (`)/handakuten (°)
☐ AA → aa	☐ to cancel Caps Lock mode
☐ aa → Aa	☐ to set Shift mode
☐ Aa → AA	☐ to set Caps Lock mode
☒ LONG Sel. Area	Press and hold ☐ to select area of text to copy (cut)
☐ LONG Paste	Press and hold ☐ to paste copied or cut text
↶ Back	☐ to cycle characters on a key in reverse order (e.g. え→う)


● Status Pane

☐ ☐	Text input method (2-touch/T9 Input mode) (No indicator for 5-touch mode)
INS OVR	Insert/Overwrite mode
☐ ☐ ☐ ☐	Character entry mode
☒	Kuten code input mode (P. 2-32)
☐ 1/2	Double-byte/Single-byte mode
☐	Lower case input mode
☐ CAPS LOCK	Shift/Caps Lock mode
☐	Bytes remaining for text entry
☐	Number of entered characters (appears when entering text to USIM Phone Book/SMS message)



Split Windows

 In some instances, a second window opens with text entry window.

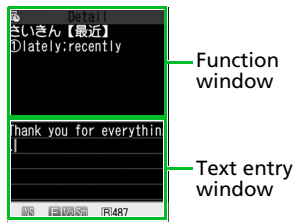

Referring to Dictionary from a text entry window

● Switching Windows

Press and select *Change Window* to switch windows.

Changing Text Input Methods

- 1 [Text Entry] window
 - ⇒ **CHG Input Method**
 - ⇒ **Select a text input method**

Alternatively, press and hold .

Toggling Character Entry Modes

- 1 [Text Entry] window
 - Press to toggle entry modes.
 - Kanji/hiragana Katakana
 - Alphanumerics Numbers

Tip

- In 2-touch mode, press to toggle single-byte and double-byte modes.

Interruptions during Text Entry

● When Battery Runs Out

Battery alarm sounds and *Recharge Battery* appears. Text is automatically saved. Access the same function to continue text entry.

Text may not be saved depending on the function.

● When is Pressed

A message appears asking whether to end text entry. Select *YES* and press to end text entry without saving the text. To continue text entry, select *NO* and press .

● When a Voice Call Arrives

Answer the call. After call ends, text entry window returns.



Entering Characters in 5-touch Mode

Press a key multiple times to cycle through letters assigned to that key.

- For key assignment, see P. 15-10.

Kanji, Hiragana & Katakana

Enter a reading (in hiragana) and convert to kanji, katakana, etc.

● Using Word Prediction

 
Enter a character and Word Prediction suggests words starting with that character. Word Prediction also suggests word selection for words to follow. Switch to kanji/hiragana mode to use Word Prediction.

<Example> Entering “携帯電話”


1 [Text Entry] window → 2 (4 times)

“け” is entered in Character Entry Pane.

Suggestion list shows predictions for words beginning with “け” in Guide Pane.

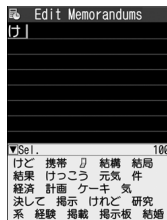

2 Select “携帯” →

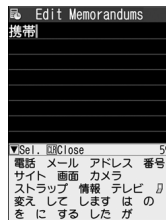 

“携帯” appears in Character Entry Pane.

A suggestion list of words that follow “携帯” appears in Guide Pane.

 
■ When Required Word Does Not Appear

⇒ CLEAR

Continue hiragana (reading) entry in Character Entry Pane to narrow down selection.



3 [Text Entry] window → Select “電話” → [Enter]

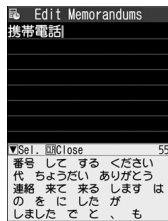

■ To Exit Suggestion List

→ [CLEAR]

Tip

 
- Handset has a learning feature that adds entered words to the suggestion list. Press and hold [CLEAR] to delete an added word from the suggestion list.

● Converting Hiragana

If the required suggestion does not appear or word prediction is set to Off, convert to Kanji as shown below:

<Example> Entering “佐々木”

- 1 [Text Entry] window → [3] (once) → [Enter] → [3] (once) → [2] (twice)

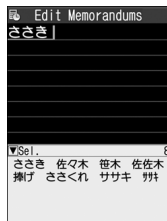

■ To Delete Last Input Character

→ [CLEAR]

■ To Determine Entered Hiragana without Converting It

→ [Enter]

- 2 [Text Entry] window → [Enter]

■ To Reconvert to a Different Word

→ [Text Entry] window → Select a word

■ To Change Conversion Range

→ [Enter]

Dakuten (゛) & Handakuten (゜)

<Example> Entering “が”

- 1 [Text Entry] window → [2] (once) → [Star] → [Enter]

 
Switching to Lower Case

<Example> Change “つ” to “つ”

- 1 [Text Entry] window → [4] (three times) → [Star] → [Enter]

Pictographs & Symbols

- 1 [Text Entry] window → [Star]

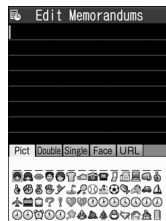

- 2 Select a pictograph/symbol

→ [Enter]



■ To Toggle Pictograph/Symbol Categories

⇒ or

■ To Toggle Full-Screen List and Continuous Entry

⇒

3

The pictograph/symbol list window is closed.

Emoticons

1 ⇒ **Face Mark** ⇒

2 Select an emoticon ⇒

Common Phrases (Templates)

1 ⇒ **Common Phrases** ⇒

2 Select a folder ⇒ ⇒
Select a phrase ⇒ (twice)

Alphanumerics, Numbers & Katakana

Enter alphanumerics, numbers or katakana in kanji/hiragana input mode.

1 [Text Entry] window ⇒
Enter hiragana ⇒ ⇒
Select a character ⇒

Editing Text

Deletion & Correction

1 [Text Entry] window ⇒
Move cursor to the left of the character to delete ⇒

■ To Delete All Characters to the Right of Cursor
⇒ Press and hold

■ To Delete Entire Text
⇒ Move cursor to the end of text
⇒ Press and hold

2 Position cursor ⇒ Enter correct characters



Copy, Cut & Paste

- Only one entry can be stored on clipboard. If you copy or cut new text, the previously copied or cut text is overwritten.
- Copied or cut text can be pasted repeatedly until you copy or cut new text, or turn handset power off.

1 [Text Entry] window ⇒ ⇒ **Copy or Cut** ⇒

 
2 Move cursor to beginning of characters ⇒

3 Move cursor to end of characters ⇒

4 Position cursor ⇒ ⇒ **Paste** ⇒

Editing Templates

1 ⇒ **Own Data** ⇒ ⇒ **Common Phrases** ⇒

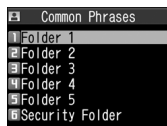

Templates (Common phrases) Window

2 Select a folder ⇒



Templates List Window

■ When Security Folder Selected
⇒ Enter Security Code ⇒

 
3 Select an entry ⇒ ⇒
Enter text ⇒

Using Dictionaries

Saving Words to Own Dictionary

Save frequently used words to Own Dictionary. For each word, save a reading (in hiragana). When the reading is entered in a text entry window, the word appears among the suggestions.

1 ⇒ **Own Data** ⇒ ⇒ **Own Dictionary** ⇒

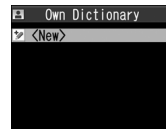

Own Dictionary Window

2 <New> ⇒ ⇒ Enter word
⇒ ⇒ Enter reading ⇒

■ To Check Saved Words
⇒ Select a word ⇒

 


2

Using Downloaded Dictionaries

Download dictionaries from Yahoo! Keitai sites. Dictionary must be enabled in advance.

- 1 **MENU** ⇒ **Own Data** ⇒ **[]** ⇒ **DL Dictionary** ⇒ **[]**

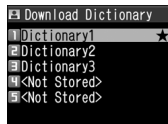

Downloaded Dictionary Window

- 2 Select a dictionary ⇒ **[]**

"★" appears next to the enabled dictionary.

To Disable a Dictionary

- ⇒ Select a dictionary with "★" ⇒ **[]**

Tip

- If an emoticon dictionary is enabled, its content is reflected in the emoticon list when entering emoticons.

Entering Characters in 2-touch Mode

Each hiragana character is entered by combining two key presses.

- For combinations of character input keys, see P. 15-11.
- Procedures for selecting predicted words and for converting entered hiragana are the same as those used in 5-touch mode (P. 2-14).

<Example> Entering "キャンプ"

- 1 **[2][2]** (き) ⇒ **[8][0]**
(change to lower case mode)
⇒ **[8][1]** (ゃ) ⇒ **[8][0]**
(change to upper case mode)
⇒ **[0][3]** (ん) ⇒ **[6][3]**
(ふ) ⇒ **[0][5]** (°)

- 2 **[]** ⇒ **[]**

Tip

- Pressing **[*]** also adds dakuten (°) and handakuten (°) or toggles upper case and lower case.
- Press **[]** to toggle double-byte and single-byte modes.

Entering Characters in T9 Input Mode

Press a key once for each character, and select the word from the suggestion list.

 
- For key assignment, see P. 15-12.
- When character entry mode is "Number," 5-touch input method is automatically applied.

<Example> Entering "春"

- The following example is in Japanese text entry mode.

- 1 **[Text Entry] window** ⇒ **[6]**
⇒ **[9]**

Word predictions for the key combination appear.

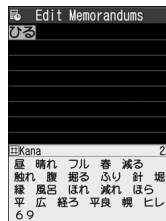



Text Entry

■ To Change Conversion Range



■ Toggle Kanji and Hiragana Suggestion Lists



■ Toggle English and Japanese Suggestion Lists



2 [Text Entry] window



Select word from among the suggestions in Guide Pane.

■ To Show Converted Words on Suggestion List



For example, if you specify “はる,” then “張る,” “貼る” and other words that have the same reading appear on the suggestion list.

■ To Show Predicted Words on Suggestion List



For example, if you specify “はる,” then “春休み,” “遥か” and other words that begin with the same reading appear on the suggestion list.

■ To Exit Suggestion List and Continue Character Entry



3



Re-entering Words

Re-enter as shown below if the desired word does not appear.

<Example> Entering “らんらんと”

● The following example is in Japanese text entry mode.

1 [Text Entry] window

 
(row ろ)  (row わ) 

 (row ろ)  (row わ)

 
 
 
 
 
 (row た)


“らんらんと” does not appear in suggestion list.

2

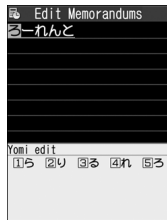



 Cursor is on the first character of the word. The edit window opens in Guide Pane, where hiragana characters of row ろ appear.

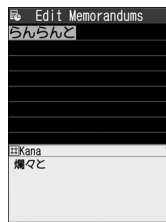3  (ら)  (ん) 
(ら)  (ん)  (と)



■ If No Correction is Necessary

  to move cursor to the next character

■ To End Re-entering a Word



The words predicted/converted from the re-entered word appear on the suggestion list.

4



More Features

2

Advanced

Text Entry

- Switch between Lower Case & Upper Case
- Switch between Single-byte & Double-byte
- Cycle Characters in Reverse Order
- Undo Last Operation
- Move Cursor to Top/End of Text
- Overwrite & Insert Modes
- Insert Line Feed
- Input a Space
- Use Dictionary
- Quote Text
- Use Kuten Codes

▶ P. 2-31

Templates

- Edit a Folder Name
- Reset a Folder Name
- Edit Templates
- Reset Templates

▶ P. 2-32

Dictionaries

- Edit Entries
- Delete Entries

- Edit Title
- View Information
- Delete Dictionaries

▶ P. 2-32

Customize

Text Entry

- Set Text Input Method
- Set Word Prediction
- Set to Show T9 Suggestion Words in Kanji or Hiragana
- Clear Learning History
- Change Font Size
- Set Auto Cursor Movement in 5-Touch Mode

▶ P. 14-38



Overview

Save phone numbers, e-mail addresses and other contact information to Phone Book.

Phone Book Data & Settings

Contact & Personal Information

- FN • N • R Name & Reading
- GR Group
- 4 Phone Numbers
- 3 E-mail Addresses
- Address
- 📅 Birthday
- 📄 Memo
- 🖼️ Still Image
- 📞 Entry Number

Custom Settings

- Incoming Ringtone
- Incoming Image
- Illumination
- Vibration
- Outgoing Message

Others

- Secret Data



Phone Book Usage Examples

- Speed Dial** Abbreviated dialing for numbers in Phone Book (P. 3-12).
- Tomo-Den** Save frequently accessed Phone Book entries to Tomo-Den (P. 3-12).
- Reject Calls** Reject calls from phone numbers not saved in Phone Book (P. 4-7).

When you make calls or write messages, specify phone numbers or addresses from Phone Book.

● Back Up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, Phone Book data may be lost or altered. Damage to handset may also affect data recovery. SoftBank is not liable for damages from lost/altered Phone Book data.



Creating Phone Book Entries

<Example>

Enter a name, phone number and e-mail address, and specify a group

1 ⇒ **Phone Book** ⇒ ⇒
 ⇒ **Add to Phone Book**
 ⇒ ⇒ **Phone** ⇒

2 ⇒ ⇒ Enter last name
 ⇒ ⇒ Check reading ⇒
 ⇒ ⇒ ⇒ Enter first
 name ⇒ ⇒ Check reading
 ⇒

Reading is entered automatically.
 Edit as necessary.



Phone Book Entry Window

3 ⇒ ⇒ Select a group ⇒

4 ⇒ ⇒ Enter phone
 number ⇒ ⇒ Select an
 icon ⇒

■ To Save Additional Numbers
 Select <Not Stored> and repeat
 the same step.

5 ⇒ ⇒ Enter e-mail
 address ⇒ ⇒ Select an
 icon ⇒

■ To Save Additional Addresses
 Select <Not Stored> and repeat
 the same step.

6

Setting Incoming Image

1 [Phone Book Entry] window
 ⇒ ⇒

2 **Select Image** ⇒ ⇒ Select
 a folder ⇒ ⇒ Select a still
 image ⇒

■ To Capture an Image with Camera
 ⇒ **Photo Mode** ⇒ ⇒ Capture
 image ⇒

■ To Cancel Selected Image
 ⇒ **Release This** ⇒

Creating Entries from Other Functions

Create entries from the following
 functions:

- Received calls
- Dialed Calls
- Redial
- Text Reader
- Receives/Sent Address List
- Yahoo! Keitai
- Phone Number Entry window

<Example> Create an entry from
 Received Calls

1 ⇒ Select a record ⇒ ⇒
Add to Phone Book ⇒
 ⇒ **Phone** ⇒

2 **Add** ⇒ ⇒ Search Phone
 Book ⇒ Select an entry ⇒

Phone Book Entry window with
 the phone number automatically
 entered opens.



■ To Save As a New Entry

⇒ New ⇒

③ Enter other items ⇒ ⇒

YES ⇒

Resuming Phone Book Edit Operation

If battery is empty or if another function was activated while editing an entry, resume operation as follows:

① ⇒ **Phone Book** ⇒

⇒ **Add to Phone Book**

⇒ ⇒ **Phone** ⇒

Recall ⇒

■ To Save As a New Entry

⇒ New ⇒

② Enter each item ⇒ ⇒ YES

⇒

Tip

- Save entry before you exit Phone Book. Otherwise, all changes will be lost.

Using Phone Book

Dialing from Phone Book

① ⇒ **Phone Book** ⇒



Phone Book Entry List Window

■ To Dial the First Phone Number

⇒

② or to switch tabs ⇒

to select an entry ⇒



Phone Book Entry Details Window

③ to select a phone number

 
⇒

■ Video Call

⇒

Specifying a Search Method

①

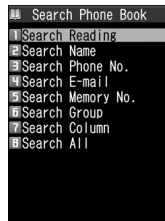

Phone Book Search Window

② Select a search method ⇒

Search Reading:

Enter a reading and press .

Search Name:

Enter a name and press .

Search Phone No.:

Enter a phone number and press .



Search E-mail:

Enter an e-mail address and press

Search Memory No.:

Enter three-digit entry number.

Search Group:

Select a group to view saved entries.

Search Column:

Press a key (- or) to access the tab corresponding to that key.

Search All:

Phone Book is organized by tabs (Japanese syllabary order).



Phone Book Entry List Window

Tip

- Phone Book entries saved on USIM Card are indicated by .

Accessing Entries from Other Functions

Access Phone Book entries from Received Calls, Dialed Calls, Redial and Received/Sent Address List.

● Access Phone Book from Received Calls

1 ⇒ ⇒ **Look-up Phone Book** ⇒

● Access Phone Book from Dialed Calls

1 ⇒ **Own Data** ⇒ ⇒ **Dialed Calls** ⇒ ⇒ ⇒ **Look-up Phone Book** ⇒

● Access Phone Book from Redial

1 ⇒ ⇒ **Look-up Phone Book** ⇒

● Access Phone Book from Received Address List

1 Press and hold ⇒ ⇒ **Look-up Phone Book** ⇒

● Access Phone Book from Sent Address List

1 Press and hold ⇒ ⇒ **Look-up Phone Book** ⇒



 
Phone Book Settings

Customizing Handset Response

Set different ringtones, images, etc. per entry item or Group.

● Indicators

The following indicators appear for set items.

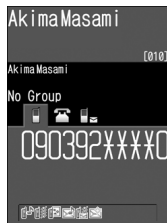

- Ringtone (Incoming Calls)
- Ringtone (Mail)
- Illumination (Incoming Calls)
- Illumination (Mail)
- Vibration (Incoming Calls)
- Vibration (Mail)
- Incoming Image (Calls)
- Outgoing Message (Incoming Calls)

● To Customize by Phone Number/E-mail Address

<Example> Set a ringtone for incoming voice calls

1 [Phone Book Entry Details] window → to select a phone number → → **Ring Tone/Image** →

2 **Voice Call (Recv.)** →

3 **Ring Tone** → → Select a ringtone type → (→
Select a folder → →
Select a ringtone →)

■ To Cancel Custom Settings
→ Select an item →

● To Customize by Group

<Example> Set illumination for incoming messages

1 [Phone Book Entry List] window → → **Group Setting** →

2 Select a group → → **Ring Tone/Image** →

3 **Mail (Recv.)** →

4 **Illumination** → →
Select a pattern →

■ To Cancel Custom Settings
→ Select an item →

Note

- Custom settings are unavailable for secret Phone Book entries.
- Custom Settings are canceled when entry is set as secret.



Restricting Calls to/from Specific Phone Numbers

Restrict calls to/from specific numbers in Phone Book. This can help manage personal calls and prevent nuisance calls.

1 [Phone Book Entry Details] window to select a phone number **Restrictions**

2 Enter Security Code

3 Select a restriction type

Restrict Dialing:

Restrict outgoing calls to all numbers except a specified number. To call that number, you need to dial from Phone Book.

Call Rejection:

Restrict incoming calls from a specified number.

Call Acceptation:

Receive incoming calls only from a specified number.

■ To Cancel Restriction

Select a restriction type with "★"

● When *Restrict Dialing* is Set

The following operations are disabled:

- Dialing by Keypad
- Dialing from Received Calls
- Calling from Phone Book (except: calling specified number in Phone Book)

Tip

- When *Restrict Dialing* is set, all records on Redial, Dialed Calls and Sent Address List are deleted.
- Emergency numbers 110, 119 and 118 are available even when *Restrict Dialing* is set.
- If you change or delete the specified number, the set restriction is canceled. Cancel *Restrict Dialing* to edit or delete.

Setting Entries as Secret

Prevent others from accessing certain Phone Book entries by setting them as secret data.

- Phone Book entries set as secret only appear in Secret Mode or Secret Data Only Mode (P. 4-8).

1 [Phone Book Entry Details] window **Set Secret**

■ To Cancel Secret Setting **Release Secret**

Tip

- Phone Book entries saved in Secret Mode or in Secret Data Only Mode are automatically set as secret.
- If a Phone Book entry that has been saved to Tomo-Den is set as secret, the entry is canceled from Tomo-Den.



Managing USIM Phone Book

Phone Book entries can be copied between handset and USIM Card.

1 ⇒ **Tools** ⇒ ⇒ **USIM Operation** ⇒ ⇒ **Enter Security Code** ⇒

2 **Copy** ⇒ ⇒ **Phone** → **USIM** or **USIM** → **Phone** ⇒ ⇒ **Phone Book** ⇒

3 Search Phone Book

4 **Select an entry** ⇒

Repeat this step to specify other entries.

5 ⇒ **YES** ⇒

Note

- Items that cannot be saved to USIM Phone Book are not copied.
- Phone Book entries set as secret cannot be copied.
- You must end copying of Phone Book entries to make/receive calls or send/receive messages.

More Features

Advanced

Creating Entries

- Save a Postal Code, Address & Memo
- Save Birthday
- Change Entry Number

P. 2-33

Phone Book Search

- Change Index Tab of Phone Book Entry List Window
- Change Font Size
- Change Phone Number/E-mail Address Order
- Compose an S! Mail from Phone Book
- Compose an SMS Message from Phone Book

P. 2-34

Managing Phone Book

- Check Custom Ringtone/Image Settings by Item
- Cancel Custom Ringtone/Image Settings by Item
- Check Restriction Settings by Restriction Type
- Cancel Restriction Settings by Restriction Type
- Check Number of Phone Book Entries
- Edit a Phone Book Entry
- Copy a Phone Book Entry
- Delete Entries
- Delete Items from an Entry
- Delete an Entry from USIM Card

P. 2-34

Customize

Phone Book

- Set Preferred Search Method
- Change Group Name

P. 14-16



Overview

Back up handset Phone Book to server.

- Separate subscription required.
- See SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) for details.

Using S! Addressbook Back-up

Synchronizing Phone Book


Connect to Phone Book backed up on server and bring it up to date with handset's Phone Book.

- The first time you synchronize will be in *Synchronize* regardless of the setting.
- Synchronization can be any of the following types.

Synchronize	Synchronize handset Phone Book and server Phone Book. Both Phone Books are synced with the newest information.
-------------	--

Sync From Client	Copy updated information to server Phone Book.
Sync From Server	Copy update information to handset Phone Book.
Backup	Back up handset Phone Book to server (note that Server Phone Book is deleted).
Restore	Restore server Phone Book to handset (note that handset Phone Book is deleted).

 - 1 ⇒ **Tools** ⇒ ⇒ **S! Addressbook Back-up** ⇒

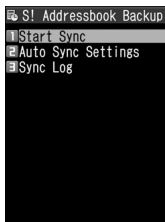

S! Addressbook Back-up Window

- 2 **Start Sync** ⇒ ⇒ Enter Security Code ⇒

- 3 **Select type of synchronization** ⇒ ⇒ **YES** ⇒

Synchronization starts. Synchronization results appear after completion.

- 4

Checking Synchronize Log

- 1 [S! Addressbook Back-up] window ⇒ **Sync Log** ⇒ ⇒ Select an item ⇒



More Features

Advanced

S! Addressbook Back-up

- Delete Synchronize Log

(▶ P. 2-36)

Customize

S! Addressbook Back-up

- Set Auto Synchronize
- Check Auto Synchronize Settings

(▶ P. 14-16)



Main Menu

Start Here

[Main Menu] P. 2-2

Change Main Menu Theme

[Main Menu] → [Menu] → Select a pattern → [OK] (→ YES or NO → [OK])

Switch to Simple Menu

[Main Menu] → [Menu] → Simple Menu → [OK] → YES or NO → [OK]

👉 In Simple Menu, font size is larger and menu options are limited to basic ones.

Temporarily Change Design Theme of Main Menu

[Main Menu] → [Menu] → Select a theme → [OK]

👉 Next time you open Main Menu, default Main Menu returns.

Desktop Icons

Edit Title of a Desktop Icon

[OK] → Select an icon → [F2] → Edit Title → [OK] → Enter title → [OK]

Change Icon Image

[OK] → Select an icon → [F2] → CHG Icon Image → [OK] → Select Icon Image → [OK] → Select a folder → [OK] → Select a file → [OK]

👉 To reset icon image, select *Default Icon Image* and press [OK].

Check Icon Information

[OK] → Select an icon → [F2] → Icon Info Setting → [OK]

Change Order of Desktop Icons

[OK] → Select an icon → [F2] → Sort → [OK] → YES → [OK] → [OK] to select a position → [OK]

Delete Desktop Icons

[OK] → Select an icon → [F2] → Delete → [OK]

- To Select *Delete This* → Delete This → [OK] → YES → [OK]
- To Select *Delete selected* → Delete selected → [OK] → Select icons → [OK] → [Menu] → YES → [OK]
- To Select *Delete All* → Delete All → [OK] → YES → [OK]

Reset Desktop Icons

[OK] → [F2] → Reset Desktop → [OK] → YES → [OK]

Show/Hide Desktop Icons

[OK] → [Menu] → Display Setting → [OK] → Display always or Display at Use → [OK] (→ [OK])

👉 When *Display at Use* is set, Desktop icons only appear when you press [OK] in Standby.



Text Entry

Start Here

[Text Entry] window P. 2-12

Functions Before Entering Text

Switch between Lower Case & Upper Case

[Text Entry] window ⇨ [P] ⇨
Lower Case or *Upper Case* ⇨ [■]

Switch between Single-byte & Double-byte

[Text Entry] window ⇨ [P] ⇨
Single-Byte or *Double-Byte* ⇨ [■]

Functions While Entering Text

Cycle Characters in Reverse Order

[Text Entry] window ⇨ Input a character ⇨ [↶]

☞ This procedure is available in 5-touch mode.

Undo Last Operation

[Text Entry] window ⇨ Press and hold [↶]

Move Cursor to Top/End of Text

[Text Entry] window ⇨ [P] ⇨
Jump ⇨ [■] ⇨ *To Beginning* or *To End* ⇨ [■]

Overwrite & Insert Modes

[Text Entry] window ⇨ [P] ⇨
Overwrite or *Insert* ⇨ [■]

☞ Text entry windows always open in *Insert* mode.

Insert Line Feed

[Text Entry] window ⇨ [✖]

☞ Press [■] to add a space at the end of text.

Input a Space

[Text Entry] window ⇨ [P] ⇨
Space ⇨ [■]

☞ Press [■] to add a space at the end of text.

Use Dictionary

[Text Entry] window ⇨ [P] ⇨ *Refer Dic.* ⇨ [■] ⇨ *Enter Word* ⇨ [■] ⇨

Enter word ⇨ [■] ⇨ Select a dictionary ⇨ [■] ⇨ Select a word ⇨ [■] ⇨ Read descriptions of the word

- To Enter a Word from Search History ⇨ *Reference History* ⇨ [■] ⇨ Select a word ⇨ [■] ⇨ Select a dictionary ⇨ [■] ⇨ Select a word ⇨ [■] ⇨ Read descriptions of the word



Quote Text

[Text Entry] window ⇨ [R] ⇨

Quote Data ⇨ [■]

- To Quote from a Phone Book Entry
⇨ **Quote Phonebook** ⇨ [■] ⇨
Search Phone Book ⇨ Select a data
item to quote text from ⇨ [■] ⇨ [☒]
- To Quote from Account Details
⇨ **Account Details** ⇨ [■] ⇨ Enter
Security Code ⇨ [■] ⇨ Select a data
item ⇨ [■] ⇨ [☒]
- To Scan Text by Text Reader
⇨ **Text Reader** ⇨ [■] ⇨ Scan text
with camera ⇨ [📷]
- To Scan Bar Code by Bar Code Reader
⇨ **Bar Code Reader** ⇨ [■] ⇨ Scan a
bar code with camera ⇨ [■]

Use Kuten Codes

[Text Entry] window ⇨ [R] ⇨

Kuten Code ⇨ [■] ⇨ Enter kuten
codes (P. 15-13)

Templates

Start Here

[Templates (Common phrases)]
window P. 2-17

[Templates List] window P. 2-17

Edit a Folder Name

[Templates (Common phrases)]
window ⇨ Select a folder ⇨ [R] ⇨

Edit Folder Name ⇨ [■] ⇨ Enter
folder name ⇨ [■]

Reset a Folder Name

[Templates (Common phrases)]
window ⇨ Select a folder ⇨ [R] ⇨

Reset Name ⇨ [■] ⇨ YES ⇨ [■]

Edit Templates

[Templates List] window ⇨ Select
a template ⇨ [R] ⇨ **Edit** ⇨ [■] ⇨

Edit phrase ⇨ [■]

Reset Templates

[Templates List] window ⇨ Select
a template ⇨ [R]

- To Select *Delete This*
⇨ **Delete This** ⇨ [■] ⇨ YES ⇨ [■]
 - To Select *Delete All*
⇨ **Delete All** ⇨ [■] ⇨ Enter Security
Code ⇨ [■] ⇨ YES ⇨ [■]
- User entries are deleted, and
preinstalled templates return to default.

Dictionaries

Start Here

[Own Dictionary] window P. 2-17
[Downloaded Dictionary] window
..... P. 2-18

Own Dictionary

Edit Entries

[Own Dictionary] window ⇨
Select an entry ⇨ [☒] ⇨ Edit word
⇨ [■] ⇨ Edit reading ⇨ [■]



Delete Entries

[Own Dictionary] window → Select an entry → **Delete**

- To Select *Delete This* → **Delete This** → YES
- To Select *Delete selected* → **Delete selected** → Select entries → YES
- To Select *Delete All* → **Delete All** → Enter Security Code → YES

Downloaded Dictionaries

Edit Title

[Downloaded Dictionary] window → Select a dictionary → **Edit Title** → Edit title

View Information

[Downloaded Dictionary] window → Select a dictionary → **Dictionary Info**

Delete Dictionaries

[Downloaded Dictionary] window → Select a dictionary → **Delete**

- To Select *Delete This* → **Delete This** → YES
- To Select *Delete All* → **Delete All** → Enter Security Code → YES

Phone Book

Start Here

[Phone Book Entry] window.... P. 2-22
 [Phone Book Entry List] window P. 2-23
 [Phone Book Entry Details] window P. 2-23
 [Phone Book Search] window P. 2-23

Creating Entries

Save a Postal Code, Address & Memo

[Phone Book Entry] window → or → Enter content

Save Birthday

[Phone Book Entry] window → Enter date of birth

Change Entry Number

[Phone Book Entry] window → No → Change entry number



Phone Book Search

Change Index Tab of Phone Book Entry List Window

[Phone Book Entry List] window
⇒ ⇒ **Change Display** ⇒ ⇒
Alphabet, Memory No. or Group
⇒

Change Font Size

[Phone Book Entry List] window or
[Phone Book Entry Details] window
⇒ ⇒ **Font Setting** ⇒ ⇒
Standard Font, Big Font or Small Font ⇒

Change Phone Number/E-mail Address Order

[Phone Book Entry Details] window
⇒ Select a phone number/e-mail address ⇒ ⇒ **Move to Top** ⇒

This procedure is available when more than one phone number/e-mail address is saved to a Phone Book entry.

Compose an S! Mail from Phone Book

[Phone Book Entry Details] window
⇒ to select an e-mail address ⇒
 ⇒ **Compose S! Mail**

Compose an SMS Message from Phone Book

[Phone Book Entry Details] window
⇒ to select a phone number ⇒
 ⇒ **Compose SMS** ⇒ ⇒
Compose SMS message

Managing Phone Book

Check Custom Ringtone/Image Settings by Item

[Phone Book Entry List] window ⇒
 ⇒ **Ring Tone/Image** ⇒ ⇒
Select an item with "★" ⇒ ⇒
Select an item with "★" ⇒ ⇒
Check Settings ⇒ ⇒ Check settings of item

Cancel Custom Ringtone/Image Settings by Item

[Phone Book Entry List] window
⇒ ⇒ **Ring Tone/Image** ⇒ ⇒
Select an item with "★" ⇒ ⇒
Select an item with "★" ⇒ ⇒
Release Settings ⇒ ⇒ **YES** ⇒



Check Restriction Settings by Restriction Type

[Phone Book Entry List] window
 ⇒ [F] ⇒ **Restrictions** ⇒ [] ⇒
 Enter Security Code ⇒ [] ⇒ Select
 a restriction type with "★" ⇒ [F]
 ⇒ **Check Settings** ⇒ []

Cancel Restriction Settings by Restriction Type

[Phone Book Entry List] window
 ⇒ [F] ⇒ **Restrictions** ⇒ [] ⇒
 Enter Security Code ⇒ [] ⇒ Select
 a restriction type with "★" ⇒ [F]
 ⇒ **Release Settings** ⇒ [] ⇒ **YES**
 ⇒ []

Check Number of Phone Book Entries

[Phone Book Entry List] window
 ⇒ [F] ⇒ **No. of Phone Book** ⇒ []

Edit a Phone Book Entry

[Phone Book Entry Details] window
 ⇒ [F] ⇒ **Edit Phone Book** ⇒ [] ⇒
 Edit each item ⇒ [] ⇒ **YES** ⇒ []
 ● To Save as a New Entry
 ⇒ [No] ⇒ [] ⇒ Enter entry number
 The edited entry is saved as a new entry
 and the original entry remains the same
 as before.

Copy a Phone Book Entry

[Phone Book Entry Details] window
 ⇒ [F] ⇒ **Copy to USIM** or **Copy
 from USIM** ⇒ [] ⇒ **YES** ⇒ []

Delete Entries

[Phone Book Entry List] window
 ⇒ Select an entry ⇒ [F] ⇒
Delete Data ⇒ []
 ● To Select *Delete This*
 ⇒ **Delete This** ⇒ [] ⇒ **YES** ⇒ []
 ● To Select *Delete selected*
 ⇒ **Delete selected** ⇒ [] ⇒ Select
 entries ⇒ [] ⇒ [] ⇒ **YES** ⇒ []
 ● To Select *Delete All*
 ⇒ **Delete All** ⇒ [] ⇒ Enter Security
 Code ⇒ [] ⇒ **YES** ⇒ [] ⇒ **YES** ⇒
 []

Delete Items from an Entry

[Phone Book Entry Details] window
 ⇒ [] to select an item ⇒ [F] ⇒
Delete Data ⇒ [] ⇒ **Delete Phone
 No., Delete Mail Add., Delete
 Address, Delete Birthday, Delete
 Memorandums, Delete Image** or
Delete This ⇒ [] ⇒ **YES** ⇒ []



Delete an Entry from USIM Card

MENU → **Tools** → **USIM**

Operation → Enter Security

Code → **Delete** →

USIM → **Phone Book** →

Search Phone Book → Select an entry → **YES** →

S! Addressbook Back-up

Start Here

[S! Addressbook Back-up] window
..... P. 2-28

Delete Synchronize Log

[S! Addressbook Back-up] window →
Sync Log → Select Log →

● To Select *Delete This*

→ *Delete This* → **YES** →

● To Select *Delete selected*

→ *Delete selected* → Select

Log → **YES** →

● To Select *Delete All*

→ *Delete All* → Enter Security

Code → **YES** →