

Security



PIN Settings	4-2	Setting Secret Data	4-8
Setting PIN1 Entry	4-2	Secret Mode & Secret Data Only Mode....	4-8
Changing PIN1/PIN2	4-2	Hiding Handset Data	4-8
Prohibiting Unauthorized Handset			
Use	4-3		
Activating Dial Lock	4-3		
Setting Original Lock	4-3		
Disabling Keypad	4-4		
Using Secure Remote Lock	4-5		
Using IC Card Authentication.....	4-6		
Prohibiting Outgoing/Incoming			
Calls	4-7		
Rejecting Calls without Caller ID.....	4-7		
Rejecting Calls from Numbers			
Not Saved in Phone Book	4-7		
Delaying Ringtone for Numbers			
Not Saved in Phone Book	4-7		
Emission OFF Mode.....	4-7		

4



Setting PIN1 Entry

Set to require PIN1 entry each time handset is turned on.

- 1 → **Settings** → → → **Security** → → → **PIN Setting** → →
- 2 Enter Security Code → →
- 3 **PIN1 Code Entry Set** → → → **ON** → → → Enter PIN1 → →

Changing PIN1/PIN2

● *PIN1 Code Entry Set* must be set to *ON* before changing PIN1.

- 1 → **Settings** → → → **Security** → → → **PIN Setting** → →
- 2 Enter Security Code → →
- 3 **Change PIN1 Code or Change PIN2 Code** → →
- 4 Enter current PIN1/PIN2 → →
- 5 Enter new PIN1/PIN2 → → → Enter new PIN1/PIN2 again for confirmation → →



Activating Dial Lock

Prevent others from operating handset.

- 1** ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Lock** ⇒
- 2** Enter Security Code ⇒
- 3** **Dial Lock** ⇒

Tip

- The following operations are possible even when Dial Lock is activated:
 - Power on/off
 - Calling emergency numbers 110, 119 and 118
 - Answering incoming voice/video calls

Canceling Dial Lock

- 1** Enter Security Code ⇒
If incorrect Security Code is entered, press and enter correct Security Code.

Tip

- If Security Code is incorrectly entered five times, handset powers off. Turn handset power on and enter correct Security Code.

Setting Original Lock

Prevent others from accessing handset functions/data (e.g. Phone Book, Mail, etc.) that contain personal information. Original Locks can be customized.

- For IC Card Lock and Call Remote Lock, see P. 11-4.

Activating Original Lock

- 1** ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Lock** ⇒

- 2** Enter Security Code ⇒



Lock Window

- 3** **Original Lock (High) - Original Lock (Low)** ⇒

Functions/data specified under the selected lock type are locked.

■ To Edit Title

- ⇒ Select an Original Lock ⇒ ⇒ **Edit Title** ⇒ ⇒ Edit title ⇒

- **When Original Lock is Set**

Security Code entry is requested when accessing a locked function or data. Enter Security Code to unlock and access function/data. Setting returns when handset returns to Standby.

- **Dial/Sending Mail and Incoming/Mail Disp.** cannot be unlocked temporarily.



Customizing Original Lock

Select functions/data to lock.

● Indicators

Selected functions/data locked.

All functions/data locked.

● Select and Lock Functions or Data

1 [Lock] window \Rightarrow Select an Original Lock \Rightarrow

2 Select a category \Rightarrow

3 Select a group \Rightarrow

4 Select functions or data to Lock \Rightarrow

Function is locked. Press again to deselect. Repeat to select the function to lock.

■ To Select All Functions \Rightarrow \Rightarrow **Select All** \Rightarrow

■ To Deselect All Functions \Rightarrow \Rightarrow **Release All** \Rightarrow

5 (three times)

● Lock Category or Group

1 [Lock] window \Rightarrow Select an Original Lock \Rightarrow

2 Select a category (\Rightarrow \Rightarrow Select a group) \Rightarrow \Rightarrow **Select All** \Rightarrow

■ To Cancel Lock for Category or Group \Rightarrow \Rightarrow **Release All** \Rightarrow

3 (\Rightarrow)

● Lock All Categories

1 [Lock] window \Rightarrow Select an Original Lock \Rightarrow

2 \Rightarrow **Select All** \Rightarrow

■ To Cancel Lock for All Categories \Rightarrow \Rightarrow **Release All** \Rightarrow

3

● Lock All Group

1 [Lock] window \Rightarrow Select an Original Lock \Rightarrow

2 Select a category \Rightarrow

3 \Rightarrow **Select All** \Rightarrow

■ To Cancel Lock for All Group \Rightarrow \Rightarrow **Release All** \Rightarrow

4 (twice)

Disabling Keypad

Set Keypad Lock to automatically lock handset keys when handset is closed or when handset is not operated for a certain period of time.

Setting Keypad Lock

1 \Rightarrow **Settings** \Rightarrow \Rightarrow **Security** \Rightarrow \Rightarrow **Keypad Lock** \Rightarrow

2 Enter Security Code \Rightarrow



3 After Closed or Timer →

→ Select an item → →

■ To Lock When Handset Closed

→ After Closed → → ON →

■ To Lock After Handset Closed a Certain Time

→ Timer → → Select time until lock activates →

■ To Lock by Pressing and Holding

→ Lock Key → → ON →

Pressing and holding with handset closed activates lock.

■ To Require Security Code to Cancel Keypad Lock

→ Security Code → → YES →



4

● When Keypad Lock is Set

All key operations are disabled, except for answering incoming calls and turning power on/off.

When a call arrives or the alarm is activated, appears at the bottom of Display to indicate some keys are operable.

Tip

- Emergency numbers 110, 119 and 118 are available even when *Keypad Lock* is set.

Temporarily Unlocking Keypad Lock

● When Security Code is YES

1 When Keypad Lock is set → Enter Security Code →

● When Security Code is NO

1 Open handset

Alternatively, press and hold .

Tip

- Alternatively, press , or close and reopen handset.

Using Secure Remote Lock

If your handset is lost, lock handset functions remotely from a PC or other mobile phones. Once the lock is set, all key operations are disabled except for turning the power on. For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>), or access My SoftBank from your handset by the following procedure:

→ メニューリスト (Menu List) →
→ My SoftBank →



Using IC Card Authentication

Hold a FeliCa compatible contactless IC card over handset to authenticate the user ID without canceling Dial Lock or Keypad Lock, or without entering a code number.

- IC Card Authentication is available even when IC Card Lock is activated.
- Register up to two contactless IC cards.

Activating IC Card Authentication

- 1 **MENU** ⇒ **Settings** ⇒ **Security** ⇒ **IC Card Authentic.** ⇒ Enter Security Code



IC Card Authentication Window

2 ON ⇒ OK


■ To Activate Registered IC Card
 ⇒ ON ⇒

■ To Deactivate Authentication
 ⇒ OFF ⇒ YES or NO ⇒
 Select YES to delete or NO not to delete all registered IC Card data.

■ To Register IC Card
 ⇒ New Ext. IC Card ⇒

■ To Delete IC Card Registration
 ⇒ Del. Ext. IC Card ⇒
 Select IC Card to delete ⇒
 ⇒ YES ⇒

3 IC Card over handset mark

Once registered, the  on Display disappears.



Rejecting Calls without Caller ID

Incoming calls from hidden and/or unidentified numbers can be rejected.

1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Call Setting W/O ID** ⇒

2 Enter Security Code ⇒

3 **Unknown, Payphone or User Unset** ⇒

4 **Reject** ⇒

■ To Receive Incoming Calls

⇒ **Accept** ⇒ ⇒ **Select Ring Tone or Select Calling Disp.** ⇒
⇒ Select type ⇒ ⇒ Select a folder ⇒ ⇒ Select a ringtone or image ⇒

Rejecting Calls from Numbers Not Saved in Phone Book

1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Reject Unknown** ⇒

2 Enter Security Code ⇒

3 **Reject** ⇒

■ To Receive Incoming Calls

⇒ **Accept** ⇒

Note

- This procedure is unavailable when *Set Mute Seconds* under *Ring Time (sec.)* is set to *ON* (P. 4-7).

Delaying Ringtone for Numbers Not Saved in Phone Book

Delay ringtone, for calls from numbers not saved in Phone Book. It can prevent you from accidentally returning calls to nuisance calls from Received Calls; as missed calls with very short ring times are not saved in Received Calls, when *Missed Calls Display* is set to *Not Display*.

- This procedure is unavailable when *Reject Unknown* is set to *Reject*.

1 ⇒ **Settings** ⇒ ⇒ **Incoming Call Ring Time (sec.)** ⇒

2 **Set Mute Seconds ON** ⇒ ⇒ Enter time before ringtone plays

■ To Set Zero Seconds

⇒ **OFF** ⇒

3 **Missed Calls Display** ⇒
⇒ **Display or Not Display**
⇒

Tip

- Secret Phone Book entries are also treated as not saved in Phone Book.
- You need not to specify a time when *OFF* is selected.

Emission OFF Mode

The following are prohibited in Emission OFF Mode:

- Incoming/Outgoing Calls
- Incoming/Outgoing Messages
- Yahoo! Keitai Access

1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Emission OFF Mode** ⇒ ⇒ **YES** ⇒

Repeat procedure to cancel Emission OFF Mode.

Tip

- Emergency numbers (110, 119 and 118) are available even in Emission OFF Mode.



Secret Mode & Secret Data Only Mode

Activate Secret Mode/Secret Data Only Mode to view secret Phone Book entries, secret Schedule events and secret files.

Secret Mode: View all data and secret data.

Secret Data Only Mode: Only secret data is available for Phone Book and Schedule, although all data and secret data can be viewed for images, mail, and bookmarks.

Activating Secret Mode & Secret Data Only Mode

- 1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Secret Mode or Secret Data Only Mode** ⇒
- 2 Enter Security Code ⇒

Canceling Secret Mode & Secret Data Only Mode

- 1 In Standby,

Hiding Handset Data

Files stored in Secret Folders are accessible only when Secret Mode or Secret Data Only Mode is activated.

- The following data can be stored in Secret Folders: Images, videos, received and sent messages, and bookmarks of Yahoo! Keitai and PC Browser.
- Data saved on memory card or USIM Card cannot be stored in Secret Folders.
- Each Secret Folder of Data Folder has a fixed storage capacity as follows:
 - My Picture: Approx. 2 MB
 - Videos: Approx. 10 MB

Storing Data in Secret Folders

- 1 Set handset to Secret Mode or Secret Data Only Mode

- 2 In a data list window ⇒
Select a data item ⇒ ⇒
Keep in Secret ⇒

Returning Data in Secret Folders to Ordinary Data

- 1 Set handset to Secret Mode or Secret Data Only Mode
- 2 In a data folder list window
⇒ **Secret** ⇒
- 3 Select a data item ⇒ ⇒
Put Out ⇒
- 4 Select a destination folder
⇒

Tip

- Functions available with Secret Folder data are limited.