 


Music Player & S! Appli

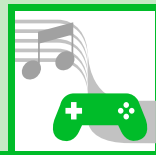

About Music Player	9-2
Playback Windows	9-3
Downloading Music	9-4
Music Playback	9-5
Playing Music.....	9-5
From Quick Menu	9-6
Using Playlists	9-6
S! Appli.....	9-8
About S! Appli.....	9-8
Downloading S! Appli	9-8
Activating S! Appli	9-9
Advanced Features	9-10
Music Player.....	9-10
S! Appli	9-13

9

 


About Music Player

Use Music Player to play and organize songs on handset.

- Access the Internet to download music.
- Videos can also be played with Music Player.
- Some files are unplayable depending on their format.

- Play not possible with insufficient battery charge.
- Alarm notification, received calls, etc. while playing will pause play.

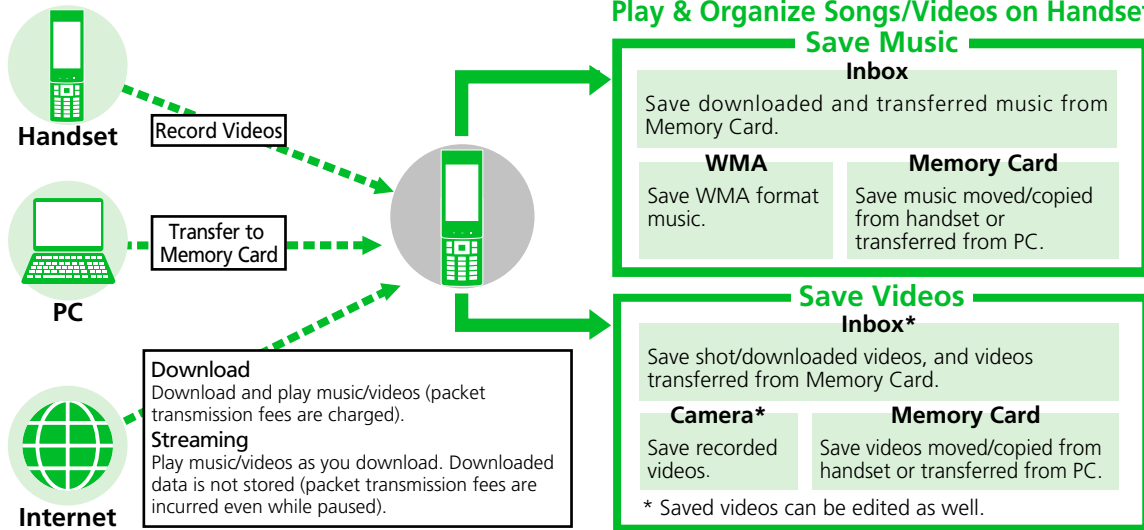


Tip

- Be sure to save music files from PC to Memory Card in the following folder.
 ¥PRIVATE ¥MYFOLDER ¥My Items ¥Music




Playback Windows

 Normal Screen Mode

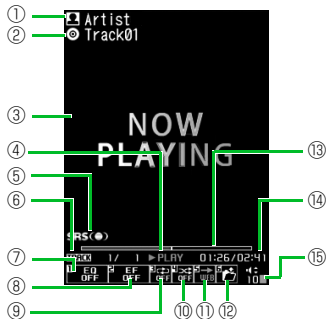

Full Screen Mode (For Video Playback)

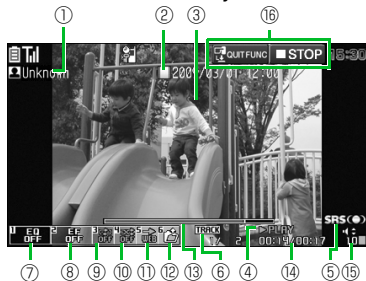 

①	Artist Name <Creator> ¹
②	Title
③	Playback Image <Video> ¹
④	Playback Status ▶PLAY Play ⏸PAUSE Pause ⏩FF Fast Forward ⏪REW Rewind ▶SLOW Slow Play ⏩PLAY Fast Play
⑤	Sound Effect is on (appears continuously)
⑥	Current Track/Total Tracks in Folder (Current File Number/Total Files in Folder)
⑦	Equalizer EQ OFF OFF Pop Live Vocal Break CLight Wavite Ballad Rap Concert Rock Kiss Loud For each genre of music EQ User1 EQ User2 EQ User3 User settings
⑧	Sound Effect EQ OFF OFF Beat Wave Bassmate Vocal Atmospheric TruMatic CS51ch AcidRage Extreme ClearBlue Sky LiveHall For different song styles EQ User1 EQ User2 EQ User3 User settings
⑨	Repeat Mode EQ OFF OFF ⏮ Repeat All ⏮ Repeat One

⑩	Shuffle Mode ⊞ ON ⊞ OFF
⑪	To Web Connect to the URL in the song.
⑫	Song/file Selection
⑬	Playback Position ▣ indicates the current playback position. Use ▣ to move playback position during pause.
⑭	Elapsed Playback Time/Total Playback Time
⑮	Volume
⑯	Guide Display ² QUIT FUNC Press and hold [] to end Music Player STOP to pause PLAY to resume

- 1 Descriptions in < > apply to video playback.
- 2 Only appears when handset closed.



Using Music Player the First Time

When initially using this function after purchasing your handset, a confirmation window will ask if you want to normally play in full screen mode. Select *YES* or *NO* and press

Downloading Music

- Check the fees, expiration date, etc. on the download site.

1 ⇒ **Music** ⇒ ⇒ **Download Music** ⇒ ⇒ **YES** ⇒

■ To Search for Songs to Download
 ⇒ **Search Music** ⇒ ⇒ **YES** ⇒

2 Follow onscreen instructions

Transferring from PC

- Convert music CD data to WMA format and store to microSD card using Windows Media Player.

1 ⇒ **Settings** ⇒ ⇒ **External Connection** ⇒ ⇒ **USB Mode Setting** ⇒ ⇒ **MTP Mode** ⇒

2 Connect handset to your PC with a USB cable

Music can now be transferred by operation from your PC. See the Help for "Windows Media Player" for details.

3 Transfer WMA data from your PC to microSD card

4 Once transferred, remove USB cable from your PC and handset

Remove from PC according to method for the OS.

Note

- Not supported for Windows Media Player 10. Use Windows Media Player 11.

Tip

 
- After transferring WMA data, return *USB Mode Setting* to *Communication Mode*.



Playing Music


1 MENU → **Music** →

2 Select a folder →



Song List Window

 3 Select a song →

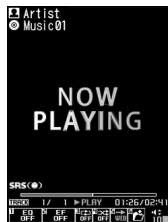

Music Player Playback Window
(Video Player Playback Window)

Tip

- Use any Bluetooth® compatible audio device (P. 13-5).
- To play videos downloaded or recorded with camera:
 → **Data Folder** → → **Videos**
 → Specify a video to play

Available Keys during Playback

● While Handset is Open

Pause/Play	
Adjust Volume	
Play from Beginning Play Previous Song or Video	
Play Next Song/Video	
Rewind	Press and hold
Fast Forward	Press and hold
Move Playback Position	during pause

Select a Song/File	or
Set Equalizer	*
Set Sound Effect	*
Set Repeat Mode	*
Set Shuffle Mode	*
Access the Internet	
Toggle Normal Screen and Full Screen	
Toggle Jacket Image	or When there are several jacket images.
End Playback	

* The setting toggles each time you press the key.



From Quick Menu

- Use Quick Menu to activate Music Player from closed position.

1

 
Touch Sensor is enabled (On).

2 Tap or or

■ Returning to Standby

⇒ or Press and hold

3 or to select ⇒

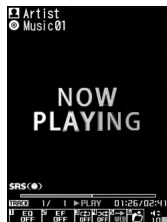

Music Player Playback Window

■ Returning to Standby

⇒ Press and hold

Available Keys in Playback Window

Play/Pause	
Adjust Volume	or
Next Track	Press and hold
Play from Start, Previous Track	Press and hold
End Music Player	Press and hold

 
Using Playlists

Use playlists to play songs by genre or by artist, or gather your favorite songs and arrange them in your favorite order.

- Songs saved on memory card can also be added to playlists.

Creating a Playlist

1 ⇒ **Music** ⇒ ⇒ **Playlist** ⇒

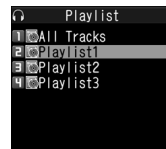

Playlist List Window

2 ⇒ **Create Playlist** ⇒

3 Select a folder ⇒ ⇒

Select a song ⇒

Repeat this step to specify other songs.



4 When all songs are specified ⇨

☑ ⇨ Enter playlist name ⇨ ☑

■ To Start Playing the Playlist

⇨ ☑

 
Playing a Playlist

1 [Playlist List] window ⇨

Select a playlist ⇨ ☑

■ To Play a Playlist from the Beginning

⇨ Select a playlist ⇨ ☑



Playlist Song List Window

■ To Play All Songs

⇨ All Tracks ⇨ ☑ (twice)

2 Select a song ⇨ ☑

More Features

Advanced

Playing Music

- Resume Playback
- File Property
- Repeat
- Set Preferred Sound Quality
- Set Preferred Sound Effect
- Specify Play Start Position
- Use a Different Function While Playing Music
- Open Lyrics
- Open Jacket Image
- Check Operation Methods

(▶ P. 9-10)

Organizing Songs

- Set a Song as Ringtone
- Search for Songs
- Change Order of Songs
- Check Volume of Saved Music
- Delete All Music in WMA Folder

(▶ P. 9-11)

Playlists

- Add Songs to Playlist
- Change Order of Playlist Songs
- Cancel Playlist Songs

- Edit a Playlist Name
- Add All Music in Memory Card to Playlist
- Copy a Playlist
- Check Playlist Information
- Delete Playlists

(▶ P. 9-11)

Customize

Playback Window

- Change Playback Window Mode
- Change Design of Playback Window
- Set Image Display Size

(▶ P. 14-33)



About S! Appli

S! Appli are applications designed for SoftBank handsets. Download games and other applications.

● About Lifestyle-Appli

Handset includes Osaifu-Keitai®-compatible S! Appli "Lifestyle-Appli" (P. 11-3). Change Lifestyle-Appli settings as any other S! Appli.

● About Network S! Appli

Since network S! Appli require network (Internet) connection, transmission fees are incurred. A confirmation may appear when an application is connecting to the network. Follow onscreen instructions.

Tip

- For information on transmission fees, contact SoftBank Customer Center, General Information (P. 15-52).

● About License Information

To check Java™ and JBlend™ license information:

- 1 ⇒ **S! Appli** ⇒ ⇒ **Information** ⇒

Downloading S! Appli

- 1 ⇒ **S! Appli** ⇒ ⇒ **S! Appli List** ⇒ ⇒ **Download S! App** ⇒ ⇒ **YES** ⇒

- 2 **Select an S! Appli** ⇒ (twice)

- **To Activate S! Appli Right Away**
⇒ **YES** ⇒ ⇒ Select an S! Appli
⇒

- **To Activate S! Appli Later**
⇒ **NO** ⇒

Note

- Check the battery level before downloading S! Appli. If the battery level is low, download may fail.
- If you replace USIM Card due to damage or loss, downloaded S! Appli are no longer available.
- If you initialize handset when using an S! Appli moved to Memory Card, the S! Appli will no longer be usable. You will need to download it again.
- When using an S! Appli moved to Memory Card, using the procedures below will resave the S! Appli to your handset and the S! Appli in Memory Card will no longer be usable.
 - Download the same S! Appli with no Memory Card inserted
 - Download the same S! Appli with different Memory Card inserted
 Use an S! Appli resaved to handset as it is in handset, or again move it to Memory Card.

Tip

- For how to download Lifestyle-Appli, see P. 11-3.
- See S! Appli's Help menu or the download site for operational information.



Activating S! Appli

- 1 MENU ⇒ S! Appli ⇒ ⇒ S! Appli List ⇒



S! Appli List Window

- 2 Select an application ⇒

■ To End S! Appli

- ⇒ ⇒ End ⇒

Tip

- S! Appli is paused when a call arrives. S! Appli resumes when the call ends.

More Features

Advanced

S! Appli

- Check S! Appli Information
- Check Volume of Saved S! Appli
- Delete an S! Appli

▶ P. 9-13)

Customize

When Running S! Appli

- Set Sound Volume
- Set Vibration
- Set Backlight
- Set Blinking of Backlight
- Allow/Prohibit S! Appli to Connect to Network
- Allow/Prohibit S! Appli to Write Personal Information
- Reset Security Settings of S! Appli

▶ P. 14-33)

S! Appli Settings

- Reset S! Appli Settings
- Delete All S! Appli

▶ P. 14-34)



Music Player

Start Here

- [Music Player Playback] window P. 9-5
- [Song List] window P. 9-5
- [Playlist List] window P. 9-6
- [Playlist Song List] window P. 9-7

Playing Music

Resume Playback

⇒ **Music** ⇒ ⇒ **Resume Play** ⇒

File Property

[Music Player Playback] window
 ⇒ ⇒ **Detail Info** ⇒ ⇒ **File Property** ⇒
 View file information.

Repeat

[Music Player Playback] window
 ⇒ ⇒ **Action Setting** ⇒ ⇒
Repeat Setting ⇒ ⇒ **All Repeat**
 or **Single Repeat** ⇒

Set Preferred Sound Quality

[Music Player Playback] window ⇒
 ⇒ **Action Setting** ⇒ ⇒
Sound Effect ⇒ ⇒ **Equalizer** ⇒
 Select user setting 1 to 3 ⇒
 ⇒ Set level for each
 wavelength ⇒
 ● To return sound quality to initial state
 ⇒ Select user setting 1 to 3 ⇒
 (twice)

Set Preferred Sound Effect

[Music Player Playback] window ⇒
 ⇒ **Action Setting** ⇒ ⇒
Sound Effect ⇒ ⇒ **Effect** ⇒
 ⇒ Select user setting 1 to 3 ⇒
 ⇒ Set level for each effect ⇒
 ● To set by existing effects
 ⇒ Select user setting 1 to 3 ⇒ ⇒
 ⇒ Select effect ⇒
 ● To return sound effect to initial state
 ⇒ Select user setting 1 to 3 ⇒
 (twice)

Specify Play Start Position

[Music Player Playback] window ⇒
 ⇒ **Play Menu** ⇒ ⇒ **Position to Play** ⇒ ⇒ Specify play start position with ⇒

Use a Different Function While Playing Music

[Music Player Playback] window
 ⇒ ⇒ **Switch to BGM** ⇒ ⇒
 Activate another function



Open Lyrics

[Music Player Playback] window
⇒ [P] ⇒ **Detail Info** ⇒ [■] ⇒ **Lyric**
⇒ [■]

Use to toggle between lyrics.

Open Jacket Image

[Music Player Playback] window ⇒
[P] ⇒ **Detail Info** ⇒ [■] ⇒ **Jacket
Image** ⇒ [■]

Use to toggle jacket images.

Check Operation Methods

[Music Player Playback] window ⇒
[P] ⇒ **Help** ⇒ [■]

Organizing Songs

Set a Song as Ringtone

[Song List] window ⇒ Select a
song ⇒ [P] ⇒ **Select Ring Tone** ⇒
[■] (⇒ Specify play start position
with ⇒ [■]) ⇒ Select ringtone
item ⇒ [■]

Search for Songs

[Song List] window, [Playlist List]
window or [Playlist Song List]
window ⇒ [P] ⇒ **Search** ⇒ [■] ⇒
Title ⇒ [■] ⇒ Select a search
criterion ⇒ [■] ⇒ Enter condition
⇒ [■]

Select a song from search results and
press [■] to play it.

Change Order of Songs

[Song List] window/ [Playlist Song
List] window ⇒ [P] ⇒ **Sort** ⇒ [■]
⇒ Select a criterion ⇒ [■]

Check Volume of Saved Music

[Song List] window ⇒ [P] ⇒
Memory Info ⇒ [■]

Delete All Music in WMA Folder

[MENU] ⇒ Music ⇒ [■] ⇒ **WMA** ⇒ [■]
⇒ [P] ⇒ **Delete All** ⇒ [■] ⇒ Enter
Security Code ⇒ [■] ⇒ **YES** ⇒ [■]

Playlists

Add Songs to Playlist

[Playlist Song List] window ⇒ [P] ⇒
Edit Playlist ⇒ [■] ⇒ **Add Music** ⇒
[■] ⇒ Select a folder ⇒ [■] ⇒ Select
songs ⇒ [■] ⇒ [■] ⇒ **YES** ⇒ [■]

The songs you specified are added at
the end of the playlist.



Change Order of Playlist Songs

[Playlist Song List] window →
 Select a song → → **Edit Playlist**
 → → **Sort Playlist** → →
 Select a position →

Cancel Playlist Songs

[Playlist Song List] window →
 Select a song → → **Edit Playlist**
 → → **Release Settings** →

- To Select *Release This*
 → **Release This** → → YES →
- To Select *Release Selected*
 → **Release Selected** → → Select
 songs → → → YES →
- To Select *Release All*
 → **Release All** → → Enter
 Security Code → → YES →

Edit a Playlist Name

[Playlist List] window → Select a
 playlist → → **Edit Playlist Name**
 → → Edit playlist name →

Add All Music in Memory Card to Playlist

[Playlist List] window → →
Update All Tracks → → YES →

Copy a Playlist

[Playlist List] window → Select a
 playlist → → **Copy to Playlist** →

Check Playlist Information

[Playlist List] window → Select a
 playlist → → **Playlist Info** →

Delete Playlists

[Playlist List] window → Select a
 playlist → → **Delete Playlist** →

- To Select *Delete This*
 → **Delete This** → → YES →
- To Select *Delete Selected*
 → **Delete Selected** → → Select
 playlists → → → YES →
- To Select *Delete All*
 → **Delete All** → → YES →



S! Appli



Start Here

[S! Appli List] window P. 9-9



Check S! Appli Information

[S! Appli List] window → Select an
S! Appli →  → **Properties** → 

Check Volume of Saved S! Appli

[S! Appli List] window →  →
Memory Info → 

Delete an S! Appli

[S! Appli List] window → Select an
S! Appli →  → **Delete** →  →
YES → 