 


# Entertainment

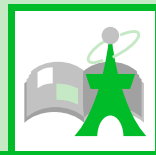


<b>Mobile Widget</b> .....	<b>10-2</b>
Overview.....	10-2
Using Mobile Widget.....	10-2
Downloading Widgets.....	10-3
Adding Widgets .....	10-4
<b>S! Quick News</b> .....	<b>10-5</b>
Using S! Quick News .....	10-5
<b>S! Info Channel</b> .....	<b>10-6</b>
Using S! Info Channel .....	10-6
<b>Books</b> .....	<b>10-8</b>
Obtaining Books .....	10-8
Using BookSurfing® .....	10-8
<b>Advanced Features</b> .....	<b>10-9</b>
Mobile Widget .....	10-9
S! Quick News.....	10-9
S! Info Channel.....	10-10
Weather Indicators .....	10-10

10



## Overview

Download widgets to access the latest information or use various tools. Access widgets from Standby by pressing .

- Add up to five widgets per Desktop page. Select from four Desktop pages.
- In addition to preinstalled widgets, download widgets as needed.
- Screenshots are for illustrative purposes and may differ in appearance from actual widgets.

## ● Network Widgets

Some widgets require network connection. Transmission fees incur when using such widgets. Follow onscreen instructions when connecting.

- Packet transmission fees apply for downloading widgets.

### Tip

- Contact SoftBank Customer Center, General Information for details on transmission fees.

## Checking Overview of Mobile Widget



## Using Mobile Widget

Open Desktop page and use widgets.

 


Widgets appear.



Desktop

### Note

- Handset may briefly connect to network after you press . Packet transmission fees apply.



## 2

Use pointer to select widgets.



Active Desktop Page

Alternatively, in Standby, press to open Active Desktop page.

## 3



## Select Desktop Page

### 1 [Active Desktop Page]

Select a Desktop page



A "★" appears next to the selected Desktop page.

## Downloading Widgets

Download and add to Desktop page.

● Store up to 100 widgets.

- 1 **Entertainment**
- Mobile Widget**
- Widget Contents**
- Download Widget**

- 2 Select widgets to download (twice)

- 3 **Paste on Desktop**
- Select a Desktop page
- Move into position

■ To Activate Immediately

Start

■ To Check Information

Property

■ To Open List

Widget Contents

■ To Return to Previous Window

Back



## Widget List Icons & Indicators



Widget List

①	<p><b>Contents Icon</b></p> <ul style="list-style-type: none"> <li>Access Download Widget.</li> <li>Appears when no icon set to widgets.</li> <li>Uninstalled widgets. Select to start installation.</li> </ul>
②	<p><b>Data Information</b></p> <ul style="list-style-type: none"> <li>Preinstalled widgets</li> <li>Downloaded widgets</li> <li>Added to Desktop Page</li> <li>Sendable by mail</li> <li>Infrared transmittable</li> <li>Transferable to Memory Card</li> </ul>

## Adding Widgets

- 1 MENU ⇒ **Data Folder** ⇒ ⇒ **Widget** ⇒
- 2 Select widgets to add ⇒ ⇒ **Paste on Desktop** ⇒ ⇒ **Select a Desktop page** ⇒ ⇒ **Move into position** ⇒

### Tip

- Add up to five widgets in each Desktop page.

## More Features

### Advanced

#### Mobile Widget

- Change Position of widgets
- Delete from Desktop Page
- Place widgets in Foreground or Background
- Update Display

▶ P. 10-9

### Customize

#### Mobile Widget Settings

- Set Whether to Use Mobile Widget
- Check Auto Synchronize Settings
- Set Whether to Automatically Transmit When Abroad
- Delete All widgets from Desktop Page
- Set Whether to Use Cookies
- Delete Cookies

▶ P. 14-35



## Using S! Quick News

Registered news can be updated automatically and checked from Standby.

## Registering News

<Example> Register news on S! Quick News List

1 Press and hold



S! Quick News List Window

2 Add News **YES**



3 Select an item

Follow onscreen instructions.

## Checking Updated Information

1 [S! Quick News List] window

Select an item

2 Select information

To Check Next Updated Information

## More Features

### Advanced

S! Quick News

- Manually Update List
- Automatically Update List
- View Descriptions of Registered News
- Delete Registered News/Items

P. 10-9

### Customize

S! Quick News

- Hide S! Quick News in Standby
- Set Ticker Speed
- Set Information to appear in S! Quick News
- Hide S! Quick News Images
- Reset S! Quick News Registered Contents

P. 14-36



## Using S! Info Channel

 
This information service automatically receives the latest news, weather, and other information.

- Transmission fees are incurred.

## Subscribing for Service

Subscribe by registering to receive service.

- 1 ⇒ **Entertainment** ⇒ ⇒ **S! Info Ch./Weather** ⇒

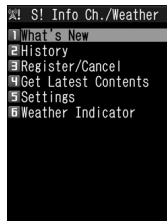

S! Info Channel Menu

- 2 **Register/Cancel** ⇒ ⇒ **YES** ⇒

- 3 **Select a contents** ⇒

Continue by following onscreen directions to subscribe.

## Checking Latest Information

A Desktop Icon notifies you when new information is received.

- 1 ⇒ **Desktop Icons** ⇒

Continue by following onscreen directions. Web page operation is the same as for Yahoo! Keitai.

### Tip

- To check from a menu: [S! Info Channel Menu] ⇒ **What's New** ⇒
- To check previous information: [S! Info Channel Menu] ⇒ **History** ⇒ ⇒ Select a date ⇒ ⇒ Unread or read backnumbers are indicated with or .

## Weather Indicators

After subscribing, weather indicators showing current weather appear in Standby.

### ● Weather Indicators

	Clear (Daytime)		Later
	Clear (Night)		Partial
	Cloudy		Pollen (Low)
	Rain		Pollen (High)
	Thunder		UV Rays (Low)
	Snow		UV Rays (High)


### <Example> Cloudy, partial rain



- Besides the above, indicators for chance of rain, typhoon information, seasonal information, etc. appear.



## Checking Weather Report

- 1 [S! Info Channel Menu] ⇒
- Weather Indicator** ⇒  ⇒
- Weather** ⇒ 

## More Features

### Advanced

#### S! Info Channel

- Receive Previous Unreceivable Information
- Store Images/Melodies from Web Pages
- Store Background Images from Web Pages
- Add Phone Numbers/Mail Addresses from Web Pages

(▶ P. 10-10)

#### Weather Indicators

- Manually Update Weather Information

(▶ P. 10-10)

### Customize

#### S! Info Channel

- Set Whether to Display Desktop Icon For New Received Information
- Set Font Size for Web Pages
- Set Font Size

(▶ P. 14-37)

#### Weather Indicators

- Set Whether to Automatically Update Weather Information
- Set Whether to Display Weather Indicators in Standby
- Set Whether to Display Desktop Icon For New Received Information

(▶ P. 14-37)



Download e-comics, e-photo albums, and other CCF file books.

## Obtaining Books

Download books from the Internet.

- Downloaded books are stored in Books in Data Folder.
- Some books require you to obtain a contents key (right to use contents).

1 ⇒ **Data Folder** ⇒ ⇒ **Books** ⇒ ⇒ **Download Books** ⇒ ⇒ **YES** ⇒

Continue by following onscreen directions to download.

### Tip

- Downloads from BookSurfing® are also available.

## Using BookSurfing®

View e-comics, e-photo albums, etc. (CCF file).

1 ⇒ **Entertainment** ⇒ ⇒ **BookSurfing** ⇒

BookSurfing® is activated.

See the Help for BookSurfing® for operation.

### Tip

- Alternatively, activate BookSurfing® by selecting *BookSurfing* from the S! Appli list.





## Mobile Widget

### Start Here

[Active Desktop Page] ..... P. 10-3

#### Change Position of widgets

[Active Desktop Page] → Point to target widgets → → **Change Layout** → → Move into position →

#### Delete from Desktop Page

[Active Desktop Page] → Point to target widgets → → **Delete Content** → → **YES** →

#### Place widgets in Foreground or Background

[Active Desktop Page] → Point to target widgets → → **To front or To back** →

#### Update Display

[Active Desktop Page] → Point to target widgets → → **Renew Display** →

## S! Quick News

### Start Here

[S! Quick News List] window... P. 10-5

#### Manually Update List

[S! Quick News List] window → Select an item → → **Refresh This or Refresh All** → → **YES** →

#### Automatically Update List

→ **Entertainment** → → **S! Quick News** → → **Settings** → → **Auto Refresh** → → Select an item → → Select an interval, **ON** or **OFF** → (twice)

#### View Descriptions of Registered News

[S! Quick News List] window → Select an item → → **Outline** →

#### Delete Registered News/Items

[S! Quick News List] window → Select an item →   
● To Select **Delete This** → **Delete This** → → **YES** →   
● To Select **Delete All** → **Delete All** → → **YES** → (twice) → Enter Security Code → (twice)



## S! Info Channel

### Start Here

[S! Info Channel Menu] window  
..... P. 10-6

#### Receive Previous Unreceivable Information

[S! Info Channel Menu] window  
⇒ **Get Latest Contents** ⇒  ⇒  
**YES** ⇒

#### Store Images/Melodies from Web Pages

[Web Page] ⇒  ⇒ **Save File** ⇒  
 ⇒ **Object** ⇒  ⇒ Select a file  
⇒  ⇒ **Save** ⇒  ⇒ **YES** ⇒   
 Select **Play** and press  to play  
melody file.  
 Select **Property** and press  to check  
file information.

#### Store Background Images from Web Pages

[Web Page] ⇒  ⇒ **Save File** ⇒  
 ⇒ **Background Image** ⇒  ⇒  
**Save** ⇒  ⇒ **YES** ⇒   
 Select **Property** and press  to check  
file information.

#### Add Phone Numbers/Mail Addresses from Web Pages

[Web Page] ⇒  ⇒ **Add to  
Phone Book** ⇒  ⇒ **YES** ⇒  ⇒  
**Phone** or **USIM** ⇒  ⇒ **New** or  
**Add** (overwrite) ⇒  ⇒ Edit  
items ⇒

## Weather Indicators

### Start Here

[S! Info Channel Menu] window  
..... P. 10-6

#### Manually Update Weather Information

[S! Info Channel Menu] window  
⇒ **Weather Indicator** ⇒  ⇒  
**Manual Update** ⇒  ⇒ **YES** ⇒