


# Customization

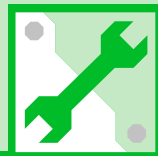

Clock, Display & Sounds.....	14-2
Phone Book & Calls .....	14-16
Mail.....	14-21
Internet .....	14-25
TV.....	14-27
Camera .....	14-31
Player & S! Appli.....	14-33
Entertainment.....	14-35
Other Settings .....	14-38

## 14



## Clock

Start Here ⇒ **Settings** ⇒ ⇒ **Clock** ⇒

Hide Clock	⇒ <i>Clock Display</i> ⇒  ⇒ <i>Display</i> ⇒  ⇒ <i>OFF</i> ⇒
Clock Size	⇒ <i>Clock Display</i> ⇒  ⇒ <i>Size</i> ⇒  ⇒ Select a size ⇒
Clock Color	⇒ <i>Clock Display</i> ⇒  ⇒ <i>Color</i> ⇒  ⇒ <i>Black or White</i> ⇒
Set Auto Time Adjustment	⇒ <i>Set Main Time</i> ⇒  ⇒ <i>Auto Time Adjust</i> ⇒  ⇒ <i>Auto</i> ⇒  ⇒ Select a time zone ⇒ • Press  to change city/area name in Time Zone Selection field.
Manually Adjust Time	⇒ <i>Set Main Time</i> ⇒  ⇒ <i>Auto Time Adjust</i> ⇒  ⇒ <i>Manual(Date Time Set)</i> ⇒  ⇒ Select a time zone ⇒  ⇒ Enter date and time ⇒
Summer Time	⇒ <i>Set Main Time</i> ⇒  ⇒ <i>Summer Time</i> ⇒  ⇒ <i>ON</i> ⇒
Time Zone (Sub Clock)	⇒ <i>Set Sub Clock</i> ⇒  ⇒ <i>Display Method</i> ⇒  ⇒ <i>Always</i> ⇒  ⇒ Select a time zone ⇒
Hide Sub Clock	⇒ <i>Set Sub Clock</i> ⇒  ⇒ <i>Display Method</i> ⇒  ⇒ <i>OFF</i> ⇒
Summer Time (Sub Clock)	⇒ <i>Set Sub Clock</i> ⇒  ⇒ <i>Summer Time</i> ⇒  ⇒ <i>ON</i> ⇒
Time Zone Major City (Sub Clock)	⇒ <i>Set Sub Clock</i> ⇒  ⇒ <i>Area Name</i> ⇒  ⇒ <i>Display</i> ⇒



## Alarm

Start Here ⇒ **Settings** ⇒ ⇒ **Clock** ⇒

Set Priority at Alarm Notification Time	⇒ <b>Alarm Setting</b> ⇒  ⇒ <b>Operation Preferred</b> or <b>Alarm Preferred</b> ⇒
Change Alarm Tone	⇒ <b>Clock Alarm Tone Set</b> ⇒  ⇒ Select an item ⇒  ⇒ Set an alarm tone

## Auto Power On/Off

Set Auto Power On/Off	⇒ <b>Settings</b> ⇒  ⇒ <b>Clock</b> ⇒  ⇒ <b>Auto Power ON</b> or <b>Auto Power OFF</b> ⇒  ⇒ <b>ON</b> ⇒  ⇒ Enter time ⇒  ⇒ <b>1 Time</b> or <b>Daily</b> ⇒
-----------------------	--

## Style Mode Settings

Start Here ⇒ **Settings** ⇒ ⇒ **Style Mode Setting** ⇒

Set Display Design Collectively	⇒ Select a style ⇒  ⇒ <b>YES</b> ⇒  (⇒ <b>YES</b> ⇒ )
Check Default Style Mode Settings	⇒ Select a style ⇒ <ul style="list-style-type: none"> <li>• Details of some items can be checked by selecting an item and pressing .</li> </ul>
Edit Title of a Style	⇒ Select a style ⇒  ⇒ <b>Edit Title</b> ⇒  ⇒ Edit title ⇒
Save Current Style Mode Settings as Favorite	⇒ お気に入り (Favorites) ⇒  ⇒  ⇒ <b>Take Setting Info</b> ⇒  ⇒ <b>YES</b> ⇒ <ul style="list-style-type: none"> <li>• The current style mode settings can later be recalled collectively from お気に入り when they are changed.</li> </ul>



Change Each Item for Favorites	⇒ お気に入り (Favorites) ⇒  ⇒ Select an item ⇒  ⇒ Set an image
Clear All Favorite Settings	⇒ お気に入り (Favorites) ⇒  ⇒ <b>Reset Setting Info</b> ⇒  ⇒ YES ⇒

## Display Settings

Start Here ⇒ **Settings** ⇒ ⇒ **Display** ⇒

Wallpaper	⇒ <b>Display Setting</b> ⇒  ⇒ <b>Stand-by Display</b> ⇒  ⇒ <b>My Picture or Videos</b> ⇒  ⇒ Set an image/video (⇒ Select a layout ⇒  (twice))
Show Calendar in Standby	⇒ <b>Display Setting</b> ⇒  ⇒ <b>Stand-by Display</b> ⇒  ⇒ <b>Calendar</b> ⇒  ⇒ <b>Background</b> ⇒  ⇒ Set an image ⇒ Select a layout ⇒  (twice) <ul style="list-style-type: none"> <li>• Select <i>No Background</i> if you do not want any image in the background of the calendar.</li> <li>• Press , use  to select the calendar and press  to operate it. Use  to switch to the previous/next month. Press  to activate Schedule.</li> </ul>
Set Random Display of Images in Standby	⇒ <b>Display Setting</b> ⇒  ⇒ <b>Stand-by Display</b> ⇒  ⇒ <b>Random Display</b> ⇒  ⇒ Select a folder ⇒  ⇒ Select a layout ⇒ <ul style="list-style-type: none"> <li>• Images switch at random each time handset is opened or returns to Standby.</li> </ul>
Set a Wake-up Image	⇒ <b>Display Setting</b> ⇒  ⇒ <b>Wake-up Display</b> ⇒  ⇒ <b>My Picture</b> ⇒  ⇒ Set an image
Set a Wake-up Message	⇒ <b>Display Setting</b> ⇒  ⇒ <b>Wake-up Display</b> ⇒  ⇒ <b>Message</b> ⇒  ⇒ Enter message ⇒



Set an Outgoing Call/Message Image	⇒ <i>Display Setting</i> ⇒ ■ ⇒ <i>Dialing, Video Call Dialing</i> or <i>Mail Sending</i> ⇒ ■ ⇒ Set an image
Set an Incoming Call, Message Image or Video	⇒ <i>Display Setting</i> ⇒ ■ ⇒ <i>Calling, Video Call Calling</i> or <i>Mail Receiving</i> ⇒ ■ ⇒ <i>Select Calling Disp.</i> or <i>Select Receiving Disp.</i> ⇒ ■ (⇒ <i>My Picture</i> or <i>Videos</i> ⇒ ■) ⇒ Set an image/video
Set an Image for New Messages or Received Result Window	⇒ <i>Display Setting</i> ⇒ ■ ⇒ <i>Retrieve New</i> or <i>Mail Rec'd Result</i> ⇒ ■ ⇒ Set an image
Display Color Scheme	⇒ <i>Display Design</i> ⇒ ■ ⇒ <i>Color Theme</i> ⇒ ■ ⇒ Select a color ⇒ ■
Set a Battery Level Indicator/Signal Strength Indicator Pattern	⇒ <i>Display Design</i> ⇒ ■ ⇒ <i>Icon Pattern</i> ⇒ ■ ⇒ <i>Battery Icon</i> or <i>Antenna Icon</i> ⇒ ■ ⇒ Select a pattern ⇒ ■
Change Softkey Color	⇒ <i>Display Design</i> ⇒ ■ ⇒ <i>Soft Key</i> ⇒ ■ ⇒ Select a color ⇒ ■
Set Font Type	⇒ <i>Font</i> ⇒ ■ ⇒ <i>Font Type</i> ⇒ ■ ⇒ <i>Gothic</i> or <i>Ming-cho</i> ⇒ ■ • Alternatively, press and hold [7] in Standby to make font settings.
Set Font Thickness	⇒ <i>Font</i> ⇒ ■ ⇒ <i>Thickness</i> ⇒ ■ ⇒ <i>Thin</i> or <i>Bold</i> ⇒ ■ • Alternatively, press and hold [7] in Standby to make font settings.
Set Font Sizes Collectively	⇒ <i>Font</i> ⇒ ■ ⇒ <i>Character Size</i> ⇒ ■ ⇒ <i>Standard</i> or <i>X-large</i> ⇒ ■ • Items settable with <i>Separate Setting</i> for <i>Character Size</i> can be set collectively. • Alternatively, press and hold [7] in Standby to make font settings.



<b>Set Font Size for Each Function Window</b>	<p>⇒ <b>Font</b> ⇒ <input type="checkbox"/> ⇒ <b>Character Size</b> ⇒ <input type="checkbox"/> ⇒ <b>Separate Setting</b> ⇒ <input type="checkbox"/> ⇒ Select a window ⇒ <input type="checkbox"/> ⇒ Select a size ⇒ <input type="checkbox"/> ⇒ </p> <ul style="list-style-type: none"> <li>• Alternatively, press and hold [7] in Standby to make font settings.</li> <li>• In PC Site Browser, this procedure is only available in Small Screen view.</li> </ul>
<b>Interface Language</b>	<p>⇒ <b>言語選択</b> ⇒ <input type="checkbox"/> ⇒ <b>日本語</b> or <b>English</b> ⇒ <input type="checkbox"/></p> <ul style="list-style-type: none"> <li>• To change interface language from Japanese to English: ⇒ <b>MENU</b> ⇒ <b>設定</b> ⇒ <input type="checkbox"/> ⇒ <b>ディスプレイ</b> ⇒ <input type="checkbox"/> ⇒ <b>Language</b> ⇒ <input type="checkbox"/> ⇒ <b>English</b> ⇒ <input type="checkbox"/></li> </ul>
<b>Set Image List View</b>	<p>⇒ <b>Viewer Settings</b> ⇒ <input type="checkbox"/> ⇒ <b>Picture</b> or <b>Title</b> ⇒ <input type="checkbox"/></p>
<b>Guard from Prying Eyes</b>	<p>⇒ <b>Privacy Angle</b> ⇒ <input type="checkbox"/> ⇒ <b>ON</b> ⇒ <input type="checkbox"/></p> <ul style="list-style-type: none"> <li>• Alternatively, press and hold [8] in Standby to toggle Privacy Angle on and off.</li> <li>• When <b>Privacy Angle</b> is set, Display is whitish and the viewing angle is narrower.</li> <li>• Turning power off/on cancels Privacy Angle.</li> </ul>
<b>Show Information of Messages Received When Watching TV</b>	<p>⇒ <b>Quick Info Setting</b> ⇒ <input type="checkbox"/> ⇒ <b>Display Sender</b> or <b>Display Sender/Subject</b> ⇒ <input type="checkbox"/></p>
<b>Set 3D Effect When Returning to Standby</b>	<p>⇒ <b>Screen Effect</b> ⇒ <input type="checkbox"/> ⇒ Select an item ⇒ <input type="checkbox"/></p>
<b>Display Quality</b>	<p>⇒ <b>Image Display Mode</b> ⇒ <input type="checkbox"/> ⇒ <b>Normal</b>, <b>Vivid</b> or <b>Dynamic</b> ⇒ <input type="checkbox"/></p> <ul style="list-style-type: none"> <li>• The <b>Visual Image Effect</b> setting in <b>TV Effect</b> has preference for TV display quality.</li> <li>• A preview image for each mode appears during selection in <b>Image Display Mode</b> to check the effect.</li> </ul>
<b>Charging Display (Handset Closed)</b>	<p>⇒ <b>Display On Charge</b> ⇒ <input type="checkbox"/> ⇒ <b>Wide Stand-by Clock</b>, <b>Photo Slide-show</b> or <b>OFF</b> ⇒ <input type="checkbox"/> ⇒ Select a folder ⇒ <input type="checkbox"/></p>



## Backlight

Start Here ⇒ **Settings** ⇒ ⇒ **Display** ⇒ ⇒ **Backlight** ⇒

<b>Set Backlight &amp; Power Saving</b>	<p>⇒ <b>Lighting</b> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒  (⇒ Select time Backlight is lit ⇒ )            ⇒ <b>ON</b> or <b>OFF</b> ⇒  (⇒ Enter a time before the Power Saver Mode is activated)</p> <ul style="list-style-type: none"> <li>• Press and hold  to toggle TV Power Saving on/off.</li> <li>• When the Power Saver Mode is activated, nothing appears in Standby and Keypad backlight flashes. Pressing any key cancels the Power Saver Mode.</li> </ul>
<b>Set Backlight during Charging</b>	<p>⇒ <b>Charging</b> ⇒  ⇒ <b>Standard</b> or <b>All Time ON</b> ⇒ </p>
<b>Set Brightness of Backlight</b>	<p>⇒ <b>Brightness</b> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒  ⇒ Select a Level ⇒ </p> <ul style="list-style-type: none"> <li>• Set <b>Brightness</b> to <b>Level 6</b> to use Display with the maximum brightness. Backlight is <b>Level 4</b> by default. A higher setting reduces battery life.</li> </ul>

## Desktop Icons

Start Here ⇒ **Settings** ⇒ ⇒ **Display** ⇒

<b>Set Desktop Theme</b>	<p>⇒ <b>Desktop Icon</b> ⇒  ⇒ Select a theme ⇒  ⇒ <b>YES</b> ⇒ </p> <ul style="list-style-type: none"> <li>• Press  to see details of the selected theme.</li> </ul>
<b>Change Icon Design of a Theme</b>	<p>⇒ <b>Desktop Icon</b> ⇒  ⇒ Select a theme ⇒  ⇒ Select an icon ⇒  ⇒ <b>CHG Icon Image</b> ⇒  ⇒ <b>Select Icon Image</b> or <b>Default Icon Image</b> ⇒ </p> <p>⇒ Set an icon</p>



Change Order of Icons of a Theme	⇒ <b>Desktop Icon</b> ⇒ <input type="checkbox"/> ⇒ Select a theme ⇒ <input type="checkbox"/> ⇒ Select an icon ⇒ <input type="checkbox"/> ⇒ <b>Sort</b> ⇒ <input type="checkbox"/> ⇒ Select a position ⇒ <input type="checkbox"/>
Copy Icons to Another Theme	⇒ <b>Desktop Icon</b> ⇒ <input type="checkbox"/> ⇒ Select a theme ⇒ <input type="checkbox"/> ⇒ Select an icon ⇒ <input type="checkbox"/> ⇒ <b>Copy</b> ⇒ <input type="checkbox"/> ⇒ <b>Copy This, Copy Selected or Copy All</b> ⇒ <input type="checkbox"/> ⇒ Select a destination theme ⇒ <input type="checkbox"/> (⇒ Select icons ⇒ <input type="checkbox"/> ⇒ <input type="checkbox"/> ) <ul style="list-style-type: none"> <li>• When <i>Copy Selected</i> or <i>Copy All</i> is selected, select <b>YES</b> and press <input type="checkbox"/> at the end of the procedure.</li> </ul>
Move Icons to Another Theme	⇒ <b>Desktop Icon</b> ⇒ <input type="checkbox"/> ⇒ Select a theme ⇒ <input type="checkbox"/> ⇒ Select an icon ⇒ <input type="checkbox"/> ⇒ <b>Move</b> ⇒ <input type="checkbox"/> ⇒ <b>Move This, Move Selected or Move All</b> ⇒ <input type="checkbox"/> ⇒ Select a destination theme ⇒ <input type="checkbox"/> (⇒ Select icons ⇒ <input type="checkbox"/> ⇒ <input type="checkbox"/> ) ⇒ <b>YES</b> ⇒ <input type="checkbox"/>
Delete Icons of a Theme	⇒ <b>Desktop Icon</b> ⇒ <input type="checkbox"/> ⇒ Select a theme ⇒ <input type="checkbox"/> ⇒ Select an icon ⇒ <input type="checkbox"/> ⇒ <b>Delete</b> ⇒ <input type="checkbox"/> ⇒ <b>Delete This, Delete selected or Delete All</b> ⇒ <input type="checkbox"/> (⇒ Select icons ⇒ <input type="checkbox"/> ⇒ <input type="checkbox"/> ) ⇒ <b>YES</b> ⇒ <input type="checkbox"/>
Show New Message Indicator as 3D Animation	⇒ <b>3D Display Setting</b> ⇒ <input type="checkbox"/> ⇒ <b>ON</b> ⇒ <input type="checkbox"/>

## Menu Display Settings

**Start Here**  ⇒ **Settings** ⇒  ⇒ **Display** ⇒  ⇒ **Menu Display Set** ⇒

List View and Details View	⇒ <b>Menu Display</b> ⇒ <input type="checkbox"/> ⇒ <b>List or Detail</b> ⇒ <input type="checkbox"/> <ul style="list-style-type: none"> <li>• Select View for menus from <input type="checkbox"/> ⇒ <b>Settings</b> ⇒ <input type="checkbox"/>.</li> </ul>
Set Main Menu Theme	⇒ <b>Theme</b> ⇒ <input type="checkbox"/> ⇒ Select a theme ⇒ <input type="checkbox"/>





## Clock, Display & Sounds

Change Icon Design (Original Theme)	⇒ <b>Theme</b> ⇒ <input type="checkbox"/> ⇒ <b>Original Theme</b> ⇒ <input type="checkbox"/> ⇒ Select a menu item ⇒ <input type="checkbox"/> ⇒ Set an image • Change Main Menu icons to any preferred image.
Change Background (Original Theme)	⇒ <b>Theme</b> ⇒ <input type="checkbox"/> ⇒ <b>Original Theme</b> ⇒ <input type="checkbox"/> ⇒ <b>Background Image</b> ⇒ <input type="checkbox"/> ⇒ Set an image • Change Main Menu background to any preferred image.
Reset Original Theme Settings	⇒ <b>Theme</b> ⇒ <input type="checkbox"/> ⇒ <b>Original Theme</b> ⇒ <input type="checkbox"/> ⇒ Select a menu item ⇒ <input type="checkbox"/> ⇒ <b>Reset or All reset</b> ⇒ <input type="checkbox"/> ⇒ <b>YES</b> ⇒ <input type="checkbox"/> • This procedure is only available when any Original theme settings have been changed.
Save Last Selected Menu Item to Memory	⇒ <b>Memory Focus</b> ⇒ <input type="checkbox"/> ⇒ <b>ON</b> ⇒ <input type="checkbox"/>

Start Here  MENU ⇒  Y?

Add a Menu Item to Original Menu	⇒ < <b>Not Recorded</b> > ⇒ <input type="checkbox"/> ⇒ <input type="checkbox"/> to select a function ⇒ <input type="checkbox"/>
Change Order of Original Menu Items	⇒ Select an item ⇒ <input type="checkbox"/> ⇒ <b>Sort</b> ⇒ <input type="checkbox"/> ⇒ Select a position ⇒ <input type="checkbox"/>
Cancel Original Menu Items	⇒ Select an item ⇒ <input type="checkbox"/> ⇒ <b>Release</b> or <b>Release All</b> ⇒ <input type="checkbox"/> ⇒ <b>YES</b> ⇒ <input type="checkbox"/>
Reset Original Menu	⇒ <input type="checkbox"/> ⇒ <b>Reset Org. Menu</b> ⇒ <input type="checkbox"/> ⇒ <b>YES</b> ⇒ <input type="checkbox"/>



## Standby Indicators

Enable Indicator Selector

MENU → Settings → [ ] → Display → [ ] → Icons Setting → [ ] → ON → [ ]

- The indicators at the top of Display are enabled by pressing [ ] in Standby. Use [ ] to select an indicators and press [ ] to access the corresponding function.

## Incoming Call/Message Alerts

Start Here MENU → Settings → [ ] → Incoming Call → [ ]

Adjust Ringtone Volume

→ Ring Volume → [ ] → Phone, Video Call or Mail → [ ] → [ ] → [ ]

- When *Step* is set, the ringtone volume increases every three seconds. When *Silent* is set, no ringtone sounds.

Set a Ringtone

→ Select Ring Tone → [ ] → Phone, Video Call or Mail → [ ] → Select Ring Tone → [ ] → Select an item → [ ] → Select a folder → [ ] → Set a ringtone

Set Random Playback of Melodies as Ringtones

→ Select Ring Tone → [ ] → Phone, Video Call or Mail → [ ] → Select Ring Tone → [ ] → Random Melody → [ ] → Select a folder → [ ]

- Melodies in the selected folder are played at random as ringtones.

Set Ringing Duration of Incoming Message Ringtone

→ Mail Ring Time → [ ] → Mail → [ ] → ON → [ ] → Enter ringing duration

- When *OFF* is set, no ringtone sounds and handset does not vibrate when receiving messages.



Set Vibration*	⇒ <b>Vibrator</b> ⇒ <input type="checkbox"/> ⇒ <b>Phone, Video Call or Mail</b> ⇒ <input type="checkbox"/> ⇒ Select a pattern ⇒ <input type="checkbox"/> <ul style="list-style-type: none"> <li>• When <i>Melody Linkage</i> is set, handset vibrates to the melody set as ringtone.</li> </ul>
Set Illumination Color	⇒ <b>Illumination</b> ⇒ <input type="checkbox"/> ⇒ <b>Set Color</b> ⇒ <input type="checkbox"/> ⇒ <b>Phone, Video Call or Mail</b> ⇒ <input type="checkbox"/> ⇒ Select a color ⇒ <input type="checkbox"/>
Set Illumination Pattern	⇒ <b>Illumination</b> ⇒ <input type="checkbox"/> ⇒ <b>Set Pattern</b> ⇒ <input type="checkbox"/> ⇒ <b>Standard or Melody Linkage</b> ⇒ <input type="checkbox"/> <ul style="list-style-type: none"> <li>• Even when <i>Melody Linkage</i> is set, Illumination may not flash to the melody depending on the set ringtone.</li> </ul>
Set Illumination to Flash for Missed Calls/New Messages	⇒ <b>Illumination</b> ⇒ <input type="checkbox"/> ⇒ <b>Missed Info</b> ⇒ <input type="checkbox"/> ⇒ <b>ON</b> ⇒ <input type="checkbox"/>
Set an Incoming Call/Message Image	⇒ <b>Select Ring Tone</b> ⇒ <input type="checkbox"/> ⇒ <b>Phone, Video Call or Mail</b> ⇒ <input type="checkbox"/> ⇒ <b>Select Calling Disp.</b> or <b>Select Receiving Disp.</b> ⇒ <input type="checkbox"/> (⇒ <b>My Picture</b> or <b>Videos</b> ⇒ <input type="checkbox"/> ) ⇒ Set an image/video
Show Phone Book Entry Images for Incoming Calls/Messages	⇒ <b>Disp. Phone Book Image</b> ⇒ <input type="checkbox"/> ⇒ <b>ON</b> ⇒ <input type="checkbox"/>

\* When *Vibrator* is not set to *OFF*, be careful not to let handset fall off a desk or slide too close to a stove, etc. when it vibrates.

**Start Here**  ⇒ **Settings** ⇒  ⇒ **Slide-style Setting** ⇒

Open New Mail Window by Opening Handset	⇒ <b>Setting When Open</b> ⇒ <input type="checkbox"/> ⇒ <b>Display New Mail</b> ⇒ <input type="checkbox"/> ⇒ <input type="checkbox"/>
Open Missed Calls Window by Opening Handset	⇒ <b>Setting When Open</b> ⇒ <input type="checkbox"/> ⇒ <b>Display Missed Call</b> ⇒ <input type="checkbox"/> ⇒ <input type="checkbox"/>



## Answering Incoming Calls

Start Here ⇒ **Settings** ⇒ ⇒ **Incoming Call** ⇒

Set to Answer Calls by Pressing Any Key	<p>⇒ <b>Answer Setting</b> ⇒  ⇒ <b>Any Key Answer</b> ⇒ </p> <ul style="list-style-type: none"> <li>Answer incoming voice calls by pressing a key from , ,  - , , , ,  and . The any key answer function is disabled for incoming video calls.</li> </ul>
Set to Mute Ringtone by Pressing Any Key	<p>⇒ <b>Answer Setting</b> ⇒  ⇒ <b>Quick Silent</b> ⇒ </p> <ul style="list-style-type: none"> <li>Mute the ringtone by pressing a key from  - , , ,  (for voice calls only),  and  or by opening handset.</li> </ul>

Start Here ⇒ **Settings** ⇒ ⇒ **Slide-style Setting** ⇒

Set to Answer Calls by Opening Handset	<p>⇒ <b>Setting When Open</b> ⇒  ⇒ <b>Answer Incoming</b> ⇒  ⇒ </p> <ul style="list-style-type: none"> <li>When set to <i>ON</i>, opening handset starts call even if <i>Answer Setting</i> is set to <i>Quick Silent</i>.</li> <li>When set to <i>OFF</i>, operation follows <i>Answer Setting</i>.</li> </ul>
--	---



## Manner Mode

Start Here ⇒ **Settings** ⇒ ⇒ **Incoming Call** ⇒ ⇒ **Manner Mode Setting** ⇒

Set Manner Mode Type	⇒ <b>Manner Mode Set</b> ⇒  ⇒ Select a Manner Mode ⇒ <ul style="list-style-type: none"> <li>• When <i>Super Silent</i> is set, all tones emitted through the earpiece are also muted.</li> </ul>
Configure Original Manner Mode	⇒ <b>Manner Mode Set</b> ⇒  ⇒ <b>Original</b> ⇒  ⇒ Set each item ⇒
Set Time for Auto Manner Mode Start	⇒ <b>Manner Start Time</b> ⇒  ⇒ <b>Start Time Set1</b> or <b>Start Time Set2</b> ⇒ ⇒  ⇒  ⇒ Enter time ⇒  ⇒  ⇒  ⇒ <b>1 Time, Daily (D)</b> or <b>Select Day (W)</b> ⇒  ⇒ (Select day ⇒ ) ⇒
Set Time for Auto Manner Mode Release	⇒ <b>Manner Release Time</b> ⇒  ⇒ <b>Release Time Set1</b> or <b>Release Time Set2</b> ⇒  ⇒  ⇒  ⇒ Enter time ⇒  ⇒  ⇒  ⇒ <b>1 Time, Daily (D)</b> or <b>Select Day (W)</b> ⇒  ⇒ (Select day ⇒ ) ⇒
Toggle Auto Manner Mode Start and Release On/Off	⇒ <b>Manner Start Time</b> or <b>Manner Release Time</b> ⇒  ⇒ Select an item ⇒  <ul style="list-style-type: none"> <li>• On/off toggles each time you press . Settings (e.g., time) are not updated.</li> <li>• Use the following procedure to cancel all settings at once.  ⇒  ⇒ <b>Release All</b> ⇒  ⇒ <b>YES</b> ⇒ </li> </ul>



## Checking Call Logs

Start Here ⇒ **Settings** ⇒ ⇒ **Incoming Call** ⇒

Change Colors of Names, Phone Numbers and E-mail Addresses in Call and Message Log Windows

⇒ **Disp. Call/Receive No.** ⇒ ⇒ Select a color ⇒

- Pressing toggles the color palette between 16 colors and 256 colors.
- To reset the color settings to default, press .

## Sounds

Start Here ⇒ **Settings** ⇒ ⇒ **Other Settings** ⇒

Set to Play Charging Start/End Tones

⇒ **Charge Sound** ⇒ ⇒ **ON** ⇒

Sound Emitted at Level 1 for First three Seconds

⇒ **Volume Restriction** ⇒ ⇒ **ON** ⇒

- Applies to ring tone and alarm.
- After three seconds pass, ring tone and alarm sounds at set volume.

Start Here ⇒ **Settings** ⇒ ⇒ **Slide-style Setting** ⇒

Set Handset Open/Close Sound

⇒ **Slide Sound** ⇒ ⇒ **Open Sound** or **Close Sound** ⇒ Select a sound ⇒   
⇒ **Ring Time** ⇒ ⇒ Select time sound emitted ⇒

- Slide and close sounds not emitted when set **OFF**.



Start Here ⇒ **Tools** ⇒ ⇒ **Voice Announce** ⇒

Record Sound to Set as Ringtone or Outgoing Message	⇒ Select an item ⇒  ⇒ <b>YES</b> ⇒  ⇒ Record sound (for about 15 seconds) • Press  to stop recording.
Play Recorded Sound	⇒ Select an item with "★" ⇒
Delete Recorded Sound	⇒ Select an item with "★" ⇒  ⇒ <b>Erase</b> ⇒  ⇒ <b>YES</b> ⇒

## Earphone-Microphone

Start Here ⇒ **Settings** ⇒

Audio Output	⇒ <b>External Connection</b> ⇒  ⇒ <b>Headset Usage Setting</b> ⇒  ⇒ <b>Headset+speaker</b> or <b>Headset Only</b> ⇒
Microphone Setting	⇒ <b>External Connection</b> ⇒  ⇒ <b>Headset Mic. Setting</b> ⇒  ⇒ <b>Built-in Microphone</b> or <b>Headset Microphone</b> ⇒
Answer Calls Automatically	⇒ <b>External Connection</b> ⇒  ⇒ <b>Auto Answer Setting</b> ⇒  ⇒ <b>Phone</b> or <b>Video Call</b> ⇒  ⇒ <b>ON</b> ⇒  ⇒ Enter ring time
Save a Phone Number to Dial with an Earphone-Microphone	⇒ <b>Dialing</b> ⇒  ⇒ <b>Headset SW to Dial</b> ⇒  ⇒ <b>Voice Call</b> ⇒  ⇒ Select a Phone Book search method ⇒  ⇒ Search Phone Book ⇒ Select an entry ⇒  ⇒ Select a phone number ⇒



## Phone Book

Set Preferred Search Method	[Phone Book Search] window (P. 2-23) → Select a search method →  → <b>OK</b> → <ul style="list-style-type: none"> <li>To cancel the preferred search method, press <b>CLEAR</b> in Phone Book Search window, select the search method with "★," and then press .</li> </ul>
Change Group Name	[Phone Book Entry List] window (P. 2-23) →  → <b>Group Setting</b> →  → Select a group →  → Edit group name → <ul style="list-style-type: none"> <li>The name remains the same only for <i>No Group</i>.</li> </ul>
Do Not Send Phone Book Entry Images via Infrared	→ <b>Tools</b> →  → <b>Forwarding Image</b> →  → <b>OFF</b> →

## S! Addressbook Back-up

**Start Here** → **Tools** → → **S! Addressbook Back-up** →

Set Auto Synchronize	→ <b>Auto Sync Settings</b> →  → <b>ON/OFF</b> →  → <b>ON</b> →  → Enter Security Code →  → Set synchronize timing →  (→ Set synchronize cycle and day → ) → Select synchronize type →  → <b>YES</b> →  (twice)
Check Auto Synchronize Settings	<b>Auto Sync Settings</b> →  → <b>Confirm Settings</b> →





## Outgoing Calls

Start Here ⇒ **Settings** ⇒ ⇒ **Dialing** ⇒

Save Area Code and Country Code as Prefix Numbers	⇒ <b>Prefix Setting</b> ⇒  ⇒ Select an item ⇒  ⇒ Enter name ⇒  ⇒ Enter prefix numbers ⇒
Save Touch Tones	⇒ <b>Pause Dial</b> ⇒  ⇒  ⇒ Enter touch tone numbers ⇒ <ul style="list-style-type: none"> <li>• Press and hold  to enter "P" (Pause).</li> </ul>
Set Numbers after "*" as Sub Address	⇒ <b>Sub-address Setting</b> ⇒  ⇒ <b>ON</b> ⇒

## International Calls

Start Here ⇒ **Settings** ⇒ ⇒ **Dialing** ⇒ ⇒ **Int'l Dial Assistance** ⇒

Change International Access Code Automatically Dialed with "+"	⇒ <b>Auto Int'l Call Set.</b> ⇒  ⇒ <b>ON</b> ⇒  ⇒ Select a country code ⇒  ⇒ 国際発信 ⇒ <ul style="list-style-type: none"> <li>• When <b>OFF</b> is set, the international access code is not entered when you press and hold .</li> <li>• Select an international access code you set in <b>IDD Prefix Setting</b>.</li> </ul>
Change a Country Code	⇒ <b>Country Code Setting</b> ⇒  ⇒ Select an item ⇒  ⇒ Enter country name ⇒  ⇒ Enter country code ⇒
Save an International Access Code	⇒ <b>IDD Prefix Setting</b> ⇒  ⇒ Select an item ⇒  ⇒ Enter international access name ⇒  ⇒ Enter international access code ⇒



## Call Settings

Start Here ⇒ **Settings** ⇒ ⇒ **Talk** ⇒


Set Reconnection Tone	⇒ <b>Reconnect Signal</b> ⇒  ⇒ <b>High Tone</b> or <b>Low Tone</b> ⇒
Set Noise Reduction	⇒ <b>Noise Reduction</b> ⇒  ⇒ <b>ON</b> ⇒
Set Weak Signal Alarm	⇒ <b>Quality Alarm</b> ⇒  ⇒ <b>High Tone</b> or <b>Low Tone</b> ⇒ <ul style="list-style-type: none"> <li>• Calls may be disconnected without sounding the alarm when signal suddenly becomes too weak.</li> </ul>
Set Clarity of Other Party Voice	⇒ <b>Hyper Clear Voice</b> ⇒  ⇒ <b>High, Low</b> and <b>OFF</b> ⇒
Automatically Record During Voice Call	⇒ <b>Auto Voice Memo</b> ⇒  ⇒ <b>ON</b> ⇒ <ul style="list-style-type: none"> <li>• Record latest 60 seconds of call (two recordings).</li> </ul>
Set a Hold Message	⇒ <b>Set Hold Tone</b> ⇒  ⇒ <b>On Hold Tone</b> ⇒  ⇒ Select a hold tone ⇒

## Call Costs

Start Here ⇒ **Settings** ⇒ ⇒ **Call Time/Charge** ⇒

Set Auto Reset of Total Call Cost	⇒ <b>Auto Reset Total Cost</b> ⇒  ⇒ Enter Security Code ⇒  ⇒ <b>Auto Reset</b> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒  ⇒ Enter PIN2 ⇒ <ul style="list-style-type: none"> <li>• When <b>ON</b> is set, the total call cost indication is automatically reset to zero at twelve midnight on the first day of each month.</li> </ul>
-----------------------------------	--



<p><b>Set/Cancel a Maximum Call Cost Limit*</b></p>	<p>⇒ <b>Set Max Cost Limit</b> ⇒ [ ] ⇒ Enter Security Code ⇒ [ ] ⇒ ¥ ⇒ [ ] ⇒ Enter cost limit ⇒ [ ] ⇒ [ ] ⇒ <b>ON</b> ⇒ [ ] ⇒ Set alarm tone ⇒ Set alarm volume ⇒ [ ] ⇒ Enter PIN2 ⇒ [ ]</p> <ul style="list-style-type: none"> <li>• A call ends automatically and  appears in Display when the total call cost exceeds the set maximum limit.</li> <li>• When the set total call cost limit has been reached, all outgoing calls are disabled. To enable outgoing calls, set the maximum call cost limit to 0: ⇒ <b>Set Max Cost Limit</b> ⇒ [ ] ⇒ Enter Security Code ⇒ [ ] ⇒ ¥ ⇒ [ ] (twice) ⇒ [ ] ⇒ Enter PIN2 ⇒ [ ]</li> </ul>
---	---

\* Cost display may not be available depending on your subscription. If unavailable, you will also be unable to set a cost limit.

## Video Calls

Start Here [MENU] ⇒ **Settings** ⇒ [ ] ⇒ **Video Call** ⇒ [ ]

<p><b>Set an Image to be Sent during Video Calls</b></p>	<p>⇒ <b>Select Image</b> ⇒ [ ] ⇒ Select an item ⇒ [ ] ⇒ <b>Pre-installed</b> or <b>Original</b> ⇒ [ ]</p> <ul style="list-style-type: none"> <li>• To set an image other than the preinstalled image: ⇒ <b>Original</b> ⇒ [ ] ⇒ <b>Change Setting</b> ⇒ [ ] ⇒ Set an image</li> </ul>
<p><b>Redial Automatically as Voice Call When Video Call Connection Fails</b></p>	<p>⇒ <b>Auto Redial as Voice</b> ⇒ [ ] ⇒ <b>ON</b> ⇒ [ ]</p>
<p><b>Set an Image to Appear in Main Window</b></p>	<p>⇒ <b>Display Setting</b> ⇒ [ ] ⇒ <b>Main Display</b> ⇒ [ ] ⇒ <b>Other Side</b> or <b>My Side</b> ⇒ [ ]</p>
<p><b>Automatically Switch to Handsfree Mode in Video Calls</b></p>	<p>⇒ <b>Hands-free Switch</b> ⇒ [ ] ⇒ <b>ON</b> ⇒ [ ]</p>



## Global Roaming

Start Here ⇒ **Settings** ⇒ ⇒ **Int'l Roaming Set** ⇒

Set Operator	<p>⇒ <b>NW Search Mode</b> ⇒  ⇒ <b>Manual</b> ⇒  ⇒ Select an operator ⇒ </p> <ul style="list-style-type: none"> <li>• When <i>Auto</i> is set, an available operator is set automatically.</li> <li>• Use this procedure when handset is out of the service area of the currently used operator.</li> </ul>
Activate Network Re-search for an Available Operator	<p>⇒ <b>NW Search Mode</b> ⇒  ⇒ <b>Network Re-search</b> ⇒  ⇒ Select an operator ⇒ </p> <ul style="list-style-type: none"> <li>• An operator is available when <i>NW Search Mode</i> is set to <i>Manual</i>.</li> </ul>
Set Priority for Operators	<p>⇒ <b>PLMN Setting</b> ⇒  ⇒ Select an operator ⇒  ⇒ <b>Change Priority</b> ⇒  ⇒ Select a position on the priority list ⇒  ⇒  ⇒ <b>YES</b> ⇒ </p> <ul style="list-style-type: none"> <li>• When <i>Auto</i> or <i>Network Re-search</i> is set under <i>NW Search Mode</i>, you are automatically connected to the highest priority operator among available operators.</li> </ul>
Show Operator Name While Roaming	<p>⇒ <b>Display Operator Name</b> ⇒  ⇒ <b>Display ON</b> ⇒ </p>



## S! Mail Settings

Start Here ⇒ **Mail Setting** ⇒

Edit Header/Signature	⇒ <b>Header/Signature</b> ⇒  ⇒ <b>Edit Header</b> or <b>Edit Signature</b> ⇒  (twice) ⇒ Edit header/signature ⇒
Insert Header/Signature Automatically	⇒ <b>Header/Signature</b> ⇒  ⇒ <b>Insert Setting</b> ⇒  ⇒ <b>Header</b> or <b>Signature</b> ⇒  ⇒
Set to Check Delivery	⇒ <b>S! Mail Settings</b> ⇒  ⇒ <b>Delivery Report</b> ⇒  ⇒ <b>ON</b> ⇒ <ul style="list-style-type: none"> <li>After a recipient receives your S! Mail, a message titled <i>S! Mail Report</i> is sent to your handset.</li> </ul>

## SMS Settings

Start Here ⇒ **Mail Setting** ⇒ ⇒ **SMS Settings** ⇒

Set to Check Delivery	⇒ <b>SMS Report Request</b> ⇒  ⇒ <b>ON</b> ⇒ <ul style="list-style-type: none"> <li>After a recipient receives your SMS message, a message titled <i>SMS Report</i> is sent to your handset.</li> </ul>
Set Server Storage Period of SMS Messages	⇒ <b>SMS Validity Period</b> ⇒  ⇒ Select a period ⇒ <ul style="list-style-type: none"> <li>When <i>None</i> is set, SMS messages you send are not stored on the server.</li> </ul>
Set SMS Input Language	⇒ <b>SMS Input Character</b> ⇒  ⇒ <b>Japanese (70char.)</b> or <b>English (160char.)</b> ⇒



## Incoming Message Settings

Start Here ⇒ Mail Setting ⇒

Customize E-mail Address	⇒ Custom Mail Address ⇒  ⇒ Follow onscreen instructions
Do Not Show Emotion Indicators	⇒ Emotion/Keyword ⇒  ⇒ Take the checkmark off from <i>Disp. Emotion</i> ⇒
Show Keyword Indicators	⇒ Emotion/Keyword ⇒  ⇒ Put a checkmark to <i>Disp. Keyword</i> ⇒ Select a keyword entry field ⇒  ⇒ Enter keyword ⇒  ⇒ <ul style="list-style-type: none"> <li>• When handset receives an S! Mail containing the specified keyword, a keyword indicator  -  appears.</li> <li>• In case a message contains both the content that matches an emotion indicator (P. 5-7) and a specified keyword, the keyword indicator takes priority.</li> </ul>
Delete Keywords	⇒ Emotion/Keyword ⇒  ⇒ Select a keyword ⇒  ⇒ Delete Keyword or Delete All Keyword ⇒  ⇒ YES ⇒  ⇒
Set Priority When Receiving Messages during Operation	⇒ Receiving Setting ⇒  ⇒ Alarm Preferred or Operation Preferred ⇒
Set Whether to Read Out Received Messages	⇒ Read Out Setting ⇒  ⇒ Read Out Received Mail ⇒  ⇒ ON or OFF ⇒
Set Voice to Read Out Messages	⇒ Read Out Setting ⇒  ⇒ Select Voice ⇒  ⇒ Select a voice type ⇒
Set Manual Receive	⇒ S! Mail Settings ⇒  ⇒ Message Download ⇒  ⇒ Manual ⇒ <ul style="list-style-type: none"> <li>• The entire text is receivable by user operation.</li> </ul>



## Reply Settings

Change Quotation Marks

⇒ Mail Setting ⇒  ⇒ Header/Signature ⇒  ⇒ Edit Quotation Marks ⇒  ⇒ Edit quotation mark ⇒

## Message View Settings & Others

Start Here  ⇒ Mail Setting ⇒

Set Message List View

⇒ Mail List Disp. ⇒  ⇒ 2 Lines, 1 Line or 1 Line+Body ⇒  ⇒ Subject, Name or Address ⇒

Play Attached Melodies Automatically

⇒ Start Attachment (auto) ⇒  ⇒ ON ⇒   
 • Automatic play only for received mail.

Set Number of Text Lines to Scroll

⇒ Scroll ⇒  ⇒ 1 Line, 3 Lines or 5 Lines ⇒

Set Font Size of Text

⇒ Font Size ⇒  ⇒ Select a size ⇒

Check Mail Settings

⇒ Check Settings ⇒







Reset Mail Settings

⇒ Reset ⇒  ⇒ Enter Security Code ⇒  ⇒ YES ⇒



## SMS Server Settings

Start Here  ⇒ **Settings** ⇒  ⇒ **Connection Settings** ⇒  ⇒ **SMS Center Selection** ⇒ 

Change SMS Center Address	<p>⇒ <b>819066519300</b> ⇒  ⇒ Enter SMS Center address ⇒  ⇒ <b>International</b> or <b>Unknown</b> ⇒ </p> <ul style="list-style-type: none"> <li>• Address is 819066519300 by default. SMS may become unavailable if Center address is changed.</li> </ul>
Reset to SoftBank SMS Center Address	<p>⇒ <b>Reset</b> ⇒  ⇒ Enter Security Code ⇒  ⇒ <b>YES</b> ⇒ </p>





## Internet

Start Here for Yahoo! Keitai Press and hold **Yr** ⇒ **Browser Settings** ⇒ **■**

Start Here for PC Site Browser Press and hold **Yr** ⇒ **PC Site Browser** ⇒ **■** ⇒ **PC Site Brw. Settings** ⇒ **■**

Set Scroll Unit/Speed	⇒ <b>Scroll</b> ⇒ <b>■</b> ⇒ <b>Whole Page, Half Page or Single Line</b> ⇒ <b>■</b>
Set Whether to Show Images or Play Melodies	⇒ <b>Downloads</b> ⇒ <b>■</b> ⇒ <b>Display Images or Play Sounds</b> ⇒ <b>■</b> ⇒ <b>ON or OFF</b> ⇒ <b>■</b>
Clear Cache	⇒ <b>Memory Manager</b> ⇒ <b>■</b> ⇒ <b>Delete Cache</b> ⇒ <b>■</b> ⇒ Enter Security Code ⇒ <b>■</b> ⇒ <b>YES</b> ⇒ <b>■</b>
Delete Cookies	⇒ <b>Memory Manager</b> ⇒ <b>■</b> ⇒ <b>Delete Cookies</b> ⇒ <b>■</b> ⇒ <b>YES</b> ⇒ <b>■</b>
Initialize Memory Status of Internet	⇒ <b>Initialized Browser</b> ⇒ <b>■</b> ⇒ Enter Security Code ⇒ <b>■</b> ⇒ <b>YES</b> ⇒ <b>■</b>
Set Whether to Send Manufacture Number	⇒ <b>Security</b> ⇒ <b>■</b> ⇒ <b>Manufacture Number</b> ⇒ <b>■</b> ⇒ <b>ON or OFF</b> ⇒ <b>■</b>
Set Whether to Send Referer	⇒ <b>Security</b> ⇒ <b>■</b> ⇒ <b>Send Referer</b> ⇒ <b>■</b> ⇒ <b>ON or OFF</b> ⇒ <b>■</b>
Enable/Disable Cookies	⇒ <b>Security</b> ⇒ <b>■</b> ⇒ <b>Cookie Settings</b> ⇒ <b>■</b> ⇒ Select an option ⇒ <b>■</b>
Set Whether to Activate Scripts	⇒ <b>Security</b> ⇒ <b>■</b> ⇒ <b>Script Settings</b> ⇒ <b>■</b> ⇒ Select an option ⇒ <b>■</b>
Check Internet Settings	⇒ <b>Check Settings</b> or <b>Check PC Site Brw. Set</b> ⇒ <b>■</b>
Reset Internet Settings	⇒ <b>Reset</b> or <b>Reset PC Site Brw. Set</b> ⇒ <b>■</b> ⇒ Enter Security Code ⇒ <b>■</b> ⇒ <b>YES</b> ⇒ <b>■</b>



## Yahoo! Keitai

**Start Here** Press and hold ⇒ **Browser Settings** ⇒

Set Font Size	⇒ <b>Font Size</b> ⇒  ⇒ Select a size ⇒
Set Flash <sup>®</sup> Sound On/Off	⇒ <b>Flash Sound Effect</b> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒

## PC Site Browser

**Start Here** Press and hold ⇒ **PC Site Browser** ⇒ ⇒ **PC Site Brw. Settings** ⇒

Do Not Show Alert When Activating PC Site Browser & Switching Browsers	⇒ <b>Warning Messages</b> ⇒  ⇒ <b>OFF</b> ⇒
Set Page Layout	⇒ <b>Display Mode Settings</b> ⇒  ⇒ <b>PC Screen</b> or <b>Small Screen</b> ⇒  ⇒ Select a size ⇒

## Network Connection Settings

Set Whether to Send Location Information	⇒ <b>Settings</b> ⇒  ⇒ <b>Send Location Info</b> ⇒  ⇒ Enter Security Code ⇒  ⇒ <b>Confirm, Send</b> or <b>Not Send</b> ⇒ • Set to <i>Confirm</i> or <i>Send</i> to obtain information.
--	--



## Channel List

Start Here ⇒ TV ⇒ ⇒ **Channel List** ⇒

Change Title of Channel List	⇒ Select a channel list ⇒  ⇒ <b>Edit Title</b> ⇒  ⇒ Edit title ⇒
Delete a Channel List	⇒ Select a channel list ⇒  ⇒ <b>Delete This</b> ⇒  ⇒ <b>YES</b> ⇒ • The currently used channel list cannot be deleted.
Assign Channels to Remote Control Numbers	⇒ Select a channel list ⇒  ⇒  ⇒ <b>Remote Control No.</b> ⇒  ⇒ Select a remote control number ⇒  ⇒ Select a channel ⇒  ⇒ Repeat the same step ⇒  ⇒ <b>YES</b> ⇒
Delete a Channel	⇒ Select a channel list ⇒  ⇒ Select a channel ⇒  ⇒ <b>Delete This</b> ⇒  ⇒ <b>YES</b> ⇒



## Image & Sound

Start Here ⇒ TV ⇒ ⇒ User Settings ⇒

Set Subtitle Display	⇒ Subtitles ⇒  ⇒ ON (Wide: Bottom), ON (Wide: Top) or OFF ⇒
Show/Hide Icons in Landscape View	⇒ Icon Always Show ⇒  ⇒ ON or OFF ⇒ • Icons other than for program title no longer displayed if set to OFF.
Save Battery by Dimming Backlight	⇒ TV Power Saving ⇒  ⇒ YES ⇒
Keep Backlight Lighted While Watching TV	⇒ Display Light ⇒  ⇒ Constant Light ⇒
Set Time Backlight Stays Lit While Watching TV	⇒ Display Light ⇒  ⇒ Lighting Duration ⇒  ⇒ Enter lighting time ⇒
Set Sound Effect	⇒ TV Effect ⇒  ⇒ Sound Effect ⇒  ⇒ Select an effect ⇒
Set Visual Image Effect	⇒ TV Effect ⇒  ⇒ Visual Image Effect ⇒  ⇒ Select an effect ⇒
Set TV to Pause or Continue for Incoming Calls (Time Shift Playback)	⇒ Time Shift Setup ⇒  ⇒ Auto ON or Auto OFF ⇒



## Data Broadcasts

Start Here ⇒ TV ⇒ ⇒ User Settings ⇒ ⇒ Data BC Settings ⇒

Set Whether to Show Images in Pages Accessed from Data Broadcasts	⇒ Set Image Disp. ⇒  ⇒ ON or OFF ⇒
Enable/Disable Sound Effects of Data Broadcasts	⇒ Sound Effect ⇒  ⇒ ON or OFF ⇒
Set Whether or Not to Show Confirmation Window Again	⇒ Reset Disp. Set. ⇒  ⇒ YES or NO ⇒ • Once you select <b>YES (By default)</b> in a confirmation window for accessing a web page from Data Broadcast, the window no longer appears. Use this procedure to set the window to reappear.














## Recording Programs

Continue/End Recording at Low Battery	⇒ TV ⇒  ⇒ User Settings ⇒  ⇒ Rec. While Low Battery ⇒  ⇒ ON or OFF ⇒
---------------------------------------	--



## Other Settings

Start Here  ⇒ TV ⇒  ⇒ **User Settings** ⇒ 

Check TV Settings	⇒ <i>Check TV Settings</i> ⇒ 
Reset Channel Settings	⇒ <i>Reset Channel Setting</i> ⇒  ⇒ Enter Security Code ⇒  ⇒ YES ⇒ 
Clear Data Broadcast Memory	⇒ <i>Reset Storage Area</i> ⇒  ⇒ Select an affiliated station ⇒  ⇒ <i>Delete This</i> or <i>Delete All</i> ⇒  (⇒ Enter Security Code ⇒  ) ⇒ YES ⇒  
Rest TV Settings	⇒ <i>Reset TV Settings</i> ⇒  ⇒ Enter Security Code ⇒  ⇒ YES ⇒ 



## Camera/Video Settings

Set Image Quality	[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) ⇨  ⇨ <b>Quality Setting</b> ⇨  ⇨ Select a quality ⇨
Set File Size	[Video Viewfinder] (P. 7-7) ⇨  ⇨ Select a file size ⇨
Set White Balance	[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) ⇨  ⇨ Select an item ⇨ <ul style="list-style-type: none"> <li>• In Photo Viewfinder, you need to set <i>Photo Mode</i> (P. 7-13) to <i>OFF</i> before setting white balance.</li> </ul>
Reduce Flicker	[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) ⇨  ⇨ <b>Camera Settings</b> ⇨  ⇨ <b>Flicker</b> ⇨  ⇨ <b>Auto, Mode 1 (50Hz) or Mode 2 (60Hz)</b> ⇨
Set Shutter Sound	[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) ⇨  ⇨ <b>Shutter Sound</b> ⇨  ⇨ Select a shutter sound ⇨
Set Display for Handset Closed Shooting	[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) ⇨  ⇨ <b>Icon Always Show</b> ⇨  ⇨ <b>ON</b> or <b>OFF</b> ⇨ <ul style="list-style-type: none"> <li>• Below icons do not appear if set to <i>OFF</i>. <ul style="list-style-type: none"> <li>● Photo Viewfinder Focus Frame, Auto Timer, Number of Files That Can Be Saved</li> <li>● Video Viewfinder Auto Timer, Storage Capacity, Recording Status, Recording Time (remaining)</li> </ul> </li> </ul>
Set Interval for Continuous Shooting	[Continuous Shooting Viewfinder] (P. 7-10) ⇨  ⇨ <b>Interval/Number</b> ⇨  ⇨ <b>Shot Interval</b> ⇨  ⇨ <b>0.5 Seconds, 1.0 Seconds or 2.0 Seconds</b> ⇨



Set Number of Shots for Continuous Shooting

[Continuous Shooting Viewfinder] (P. 7-10) → → **Interval/Number** → → **Shot Number** → → Enter Shot Number →

## File Storage & Continuous Shooting

Set Storage Location for Shot Still Images/Videos

[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) → → **Select to Save** → → **Phone** or **microSD** → → Select a folder →   
 • To save videos on memory card, select a folder of Inbox.

Save Shot Still Images/Videos Automatically

[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) → → **Auto save Set** → → **ON** →   
 • Still images and videos shot with handset camera are saved to the folders specified in *Select to Save*.





## Playback Window

Change Playback Window Mode	[Video Player Playback] window (P. 9-5) → [P] → <b>Action Setting</b> → [ ] → <b>Screen Setting</b> → [ ] → <b>Normal Screen Mode</b> or <b>Full Screen Mode</b> → [ ]
Change Design of Playback Window	[Music Player Playback] window (P. 9-5) → [P] → <b>Action Setting</b> → [ ] → <b>Change Skin</b> → [ ] → Select a design → [ ]
Set Image Display Size	[Video Player Playback] window (P. 9-5) → [P] → <b>Action Setting</b> → [ ] → <b>Set Image Disp.</b> → [ ] → <b>Normal</b> or <b>Fit in Display</b> → [ ]

## When Running S! Appli

**Start Here** [MENU] → **S! Appli** → [ ] → **Settings** → [ ]

Set Sound Volume	→ <b>Sound/Vib Settings</b> → [ ] → <b>Volume</b> → [ ] → [ ] to adjust volume → [ ]
Set Vibration	→ <b>Sound/Vib Settings</b> → [ ] → <b>Vibration</b> → [ ] → <b>ON</b> or <b>OFF</b> → [ ]
Set Backlight	→ <b>Backlight Settings</b> → [ ] → <b>Switch ON/OFF</b> → [ ] → <b>Always ON, Always OFF</b> or <b>Link To Phone Set.</b> → [ ]
Set Blinking of Backlight	→ <b>Backlight Settings</b> → [ ] → <b>Blink</b> → [ ] → <b>ON</b> or <b>OFF</b> → [ ]

**Start Here** [MENU] → **S! Appli** → [ ] → **S! Appli List** → [ ]

Allow/Prohibit S! Appli to Connect to Network	→ Select an S! Appli → [P] → <b>Security Settings</b> → [ ] → <b>Net Access</b> → [ ] → <b>All Permit, Prompt at 1st only, Prompt each time</b> or <b>Disable</b> → [ ]
---	---



Allow/Prohibit S! Appli to Write Personal Information	⇒ Select an S! Appli ⇒ <input type="checkbox"/> ⇒ Security Settings ⇒ <input type="checkbox"/> ⇒ Write User Data ⇒ <input type="checkbox"/> ⇒ All Permit, Prompt at 1st only, Prompt each time or Disable ⇒ <input type="checkbox"/>
Reset Security Settings of S! Appli	⇒ Select an S! Appli ⇒ <input type="checkbox"/> ⇒ Security Settings ⇒ <input type="checkbox"/> ⇒ Reset Security Set. ⇒ <input type="checkbox"/> ⇒ YES ⇒ <input type="checkbox"/>

## S! Appli Settings

Start Here  ⇒ S! Appli ⇒  ⇒ Settings ⇒

Reset S! Appli Settings	⇒ Reset ⇒ <input type="checkbox"/> ⇒ Set to Default ⇒ <input type="checkbox"/> ⇒ Enter Security Code ⇒ <input type="checkbox"/> ⇒ YES ⇒ <input type="checkbox"/>
Delete All S! Appli	⇒ Reset ⇒ <input type="checkbox"/> ⇒ Delete All S! App ⇒ <input type="checkbox"/> ⇒ Enter Security Code ⇒ <input type="checkbox"/> ⇒ YES ⇒ <input type="checkbox"/>



## Mobile Widget Settings









 





Start Here ⇒ **Entertainment** ⇒ ⇒ **Mobile Widget** ⇒ ⇒ **Settings** ⇒

Set Whether to Use Mobile Widget	⇒ <i>Standby Disp. Set.</i> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒
Check Auto Synchronize Settings	⇒ <i>Auto Refresh</i> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒
Set Whether to Automatically Transmit When Abroad	⇒ <i>Auto Roaming</i> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒
Delete All Widgets from Desktop Page	⇒ <i>Delete Content</i> ⇒  ⇒ Select a Desktop page ⇒  ⇒ <b>YES</b> ⇒ • All Widgets in selected Desktop page are deleted.
Set Whether to Use Cookies	⇒ <i>Cookies</i> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒
Delete Cookies	⇒ <i>Delete Cookies</i> ⇒  ⇒ <b>YES</b> ⇒



## S! Quick News

Start Here  ⇒ **Entertainment** ⇒  ⇒ **S! Quick News** ⇒  ⇒ **Settings** ⇒ 

Hide S! Quick News in Standby	⇒ <b>Standby Settings</b> ⇒  ⇒ <b>Standby Disp. Set.</b> ⇒  ⇒ <b>OFF</b> ⇒  (twice)
Set Ticker Speed	⇒ <b>Standby Settings</b> ⇒  ⇒ <b>Speed Settings</b> ⇒  ⇒ <b>Fast, Normal</b> or <b>Slow</b> ⇒  (twice)
Set Information to appear in S! Quick News	⇒ <b>Standby Settings</b> ⇒  ⇒ <b>Unread &amp; Read Set.</b> ⇒  ⇒ <b>Unread Only</b> or <b>Unread &amp; Read</b> ⇒  (twice)
Hide S! Quick News Images	⇒ <b>Set Image Disp.</b> ⇒  ⇒ <b>OFF</b> ⇒  (twice)
Reset S! Quick News Registered Contents	⇒ <b>Del. Quick News</b> ⇒  ⇒ <b>YES</b> ⇒  (twice) ⇒ Enter Security Code ⇒  (twice)



## S! Info Channel

Start Here ⇒ **Entertainment** ⇒ ⇒ **S! Info Ch./Weather** ⇒ ⇒ **Settings** ⇒

Set Whether to Display Desktop Icon For New Received Information	⇒ <i>S! Information Notif.</i> ⇒  ⇒ ON or OFF ⇒
--	---

Set Font Size for Web Pages	⇒ <i>Font Size</i> ⇒  ⇒ Select font size ⇒
-----------------------------	--

Start Here ⇒ **Settings** ⇒ ⇒ **Display** ⇒ ⇒ **Font** ⇒

Set Font Size	⇒ <i>Character Size</i> ⇒  ⇒ <i>Separate Setting</i> ⇒  ⇒ <i>S! Info Ch.</i> ⇒  ⇒ Select font size ⇒
---------------	--

## Weather Indicators

Start Here ⇒ **Entertainment** ⇒ ⇒ **S! Info Ch./Weather** ⇒ ⇒ **Weather Indicator** ⇒ ⇒ **Settings** ⇒

Set Whether to Automatically Update Weather Information	⇒ <i>Weather Update</i> ⇒  ⇒ ON or OFF ⇒  (⇒ YES ⇒ )
---	--

Set Whether to Display Weather Indicators in Standby	⇒ <i>Standby Setting</i> ⇒  ⇒ ON or OFF ⇒
--	---

Set Whether to Display Desktop Icon For New Received Information	⇒ <i>Weather Notif.</i> ⇒  ⇒ ON or OFF ⇒
--	--



## Text Entry

Start Here ⇒ **Settings** ⇒ ⇒ **Other Settings** ⇒ ⇒ **Character Input Set** ⇒

Set Text Input Method	⇒ <b>Input Mode</b> ⇒  ⇒ Select an input method ⇒
Set Word Prediction	⇒ <b>Prediction</b> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒
Set to Show T9 Suggestion Words in Kanji or Hiragana	⇒ <b>T9 Change Mode</b> ⇒  ⇒ <b>T9 Kanji Change Mode</b> or <b>T9 Kana Change Mode</b> ⇒
Clear Learning History	⇒ <b>Clear Learned</b> ⇒  ⇒ Enter Security Code ⇒  ⇒ <b>T9/Expect Words/Pic.</b> or <b>Kana/Kanji Change/Face</b> ⇒
Change Font Size	⇒ <b>CHG Input Size</b> ⇒  ⇒ Select a size ⇒
Set Auto Cursor Movement in 5-Touch Mode	⇒ <b>Auto Cursor</b> ⇒  ⇒ <b>Fast, Normal, Slow</b> or <b>OFF</b> ⇒

## Key/Touch Sensor

Start Here ⇒ **Settings** ⇒ ⇒ **Key/Touch Sensor** ⇒

Set Key/Touch Sensor Sound Off	⇒ <b>Keypad Sound</b> ⇒  ⇒ <b>OFF</b> ⇒
Change Function Assigned to Shortcut Key	⇒ <b>Shortcut-key Setting</b> ⇒  ⇒ Select a function ⇒  ⇒ <b>YES</b> ⇒ <ul style="list-style-type: none"> <li>• Alternatively, press and hold  in Standby to set <b>Shortcut-key Setting</b>.</li> <li>• To return to original settings, press , select <b>Reset Shortcut-Key</b>, and press .</li> </ul>



## Other Settings

Set Touch Sensor Backlight	⇒ <i>Touch Sensor Setting</i> ⇒ <input type="checkbox"/> ⇒ <i>ON</i> ⇒ <input type="checkbox"/> ⇒ <i>Backlight</i> ⇒ <input type="checkbox"/> ⇒ Select a color ⇒ <input type="checkbox"/>
Set Vibrator and Illumination for Touch Sensor Operation	⇒ <i>Touch Sensor Setting</i> ⇒ <input type="checkbox"/> ⇒ <i>ON</i> ⇒ <input type="checkbox"/> ⇒ <i>Touch Sensor Linkage</i> ⇒ <input type="checkbox"/> ⇒ <i>Vibrator or Illumination</i> ⇒ <input type="checkbox"/> ⇒ <i>ON or OFF</i> ⇒ <input type="checkbox"/>
Set Touch Sensor Scroll	⇒ <i>Touch Sensor Setting</i> ⇒ <input type="checkbox"/> ⇒ <i>ON</i> ⇒ <input type="checkbox"/> ⇒ <i>Scroll</i> ⇒ <input type="checkbox"/> ⇒ <i>ON or OFF</i> ⇒ <input type="checkbox"/> <ul style="list-style-type: none"> <li>• Touch Sensor scrolling will be available for web pages and Message Details window when set to <i>ON</i>.</li> </ul>
Set Not to Use Touch Sensor	⇒ <i>Touch Sensor Setting</i> ⇒ <input type="checkbox"/> ⇒ <i>OFF</i> ⇒ <input type="checkbox"/>

## Key Illumination

Start Here ⇒ **Settings** ⇒  ⇒ *Illumination* ⇒  ⇒ *Key Illumination* ⇒  ⇒ *ON* ⇒

Set Illumination for Power On/Off	⇒ <i>Power ON or OFF</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Pattern</i> ⇒ <input type="checkbox"/> ⇒ <i>ON or OFF</i> ⇒ <input type="checkbox"/>
Set Flashing Color for Power On/Off	⇒ <i>Power ON or OFF</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Color</i> ⇒ <input type="checkbox"/> ⇒ Select a color ⇒ <input type="checkbox"/>
Set Flashing Pattern for Call Start	⇒ <i>Talking Start</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Pattern</i> ⇒ <input type="checkbox"/> ⇒ Select a pattern ⇒ <input type="checkbox"/>
Set Flashing Color for Call Start	⇒ <i>Talking Start</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Color</i> ⇒ <input type="checkbox"/> ⇒ Select a color ⇒ <input type="checkbox"/>
Set Illumination for Emotion-Expressing Mail	⇒ <i>Emotion</i> ⇒ <input type="checkbox"/> ⇒ <i>Always, Unread Mail Only or OFF</i> ⇒ <input type="checkbox"/> ⇒ <i>Scroll</i> ⇒ <input type="checkbox"/> ⇒ <i>ON or OFF</i> ⇒ <input type="checkbox"/>
Set Flashing Pattern for Alarm Notification	⇒ <i>Alarm</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Pattern</i> ⇒ <input type="checkbox"/> ⇒ Select a pattern ⇒ <input type="checkbox"/>



## Other Settings

Set Flashing Color for Alarm Notification	⇒ <i>Alarm</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Color</i> ⇒ <input type="checkbox"/> ⇒ Select a color ⇒ <input type="checkbox"/>
Set Illumination for Snooze Notification	⇒ <i>Snooze</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Pattern</i> ⇒ <input type="checkbox"/> ⇒ <i>ON</i> or <i>OFF</i> ⇒ <input type="checkbox"/>
Set Flashing Color for Snooze Notification	⇒ <i>Snooze</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Color</i> ⇒ <input type="checkbox"/> ⇒ Select a color ⇒ <input type="checkbox"/>
Set Illumination for Ir/IC Transmission	⇒ <i>Ir Exchanging</i> or <i>IC Exchanging</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Pattern</i> ⇒ <input type="checkbox"/> ⇒ <i>ON</i> or <i>OFF</i> ⇒ <input type="checkbox"/>
Set Flashing Color for Ir/IC Transmission	⇒ <i>Ir Exchanging</i> or <i>IC Exchanging</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Color</i> ⇒ <input type="checkbox"/> ⇒ Select a color ⇒ <input type="checkbox"/>
Illuminate When Charging Begins	⇒ <i>Charge Starting</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Pattern</i> ⇒ <input type="checkbox"/> ⇒ <i>ON</i> or <i>OFF</i> ⇒ <input type="checkbox"/>
Set Flashing Color (When Charging Begins)	⇒ <i>Charge Starting</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Color</i> ⇒ <input type="checkbox"/> ⇒ Select a color ⇒ <input type="checkbox"/>
Set Flashing Pattern for Handset Open or Close	⇒ <i>Open</i> or <i>Close</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Pattern</i> ⇒ <input type="checkbox"/> ⇒ <i>ON</i> or <i>OFF</i> ⇒ <input type="checkbox"/>
Set Flashing Color for Handset Open or Close	⇒ <i>Open</i> or <i>Close</i> ⇒ <input type="checkbox"/> ⇒ <i>Set Color</i> ⇒ <input type="checkbox"/> (⇒ <i>YES</i> ⇒ <input type="checkbox"/> ) ⇒ Select a color ⇒ <input type="checkbox"/>





## Key Backlight

Start Here ⇒ **Settings** ⇒ ⇒ **Illumination** ⇒

Set Key Backlight Color	⇒ <b>Key Backlight</b> ⇒  ⇒ Select a color ⇒
Set Key Backlight Off	⇒ <b>Key Backlight</b> ⇒  ⇒ <b>OFF</b> ⇒

## Osaifu-Keitai®

Set illumination for IC Card	⇒ <b>Tools</b> ⇒  ⇒ <b>Osaifu-Keitai</b> ⇒  ⇒ <b>IC Card Illumination</b> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒
Delete all Lifestyle-Appli	⇒ <b>S! Appli</b> ⇒  ⇒ <b>Settings</b> ⇒  ⇒ <b>Reset</b> ⇒  ⇒ <b>Delete All LifeApp</b> ⇒  ⇒ Enter Security Code ⇒  ⇒ <b>YES</b> ⇒
Set Whether to Enable Opening from Browser	⇒ <b>Tools</b> ⇒  ⇒ <b>Osaifu-Keitai</b> ⇒  ⇒ <b>Interface Settings</b> ⇒  ⇒ Enter Security Code ⇒  ⇒ <b>Browser</b> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒



### Bluetooth®

Start Here ⇒ **Tools** ⇒ ⇒ **Bluetooth** ⇒ ⇒ **Bluetooth Settings** ⇒

Set Detection Time for Device	⇒ <b>Time-out to Search</b> ⇒  ⇒ Enter search time ⇒
Set Whether to Send Ring Tone for Voice Call, Video Call to Headset or Handsfree Device	⇒ <b>Forward Ring Tone</b> ⇒  ⇒ <b>ON</b> or <b>OFF</b> ⇒ <ul style="list-style-type: none"> <li>• Ring tone will also sound from handset if <i>Headset Usage Setting</i> is set to <i>Headset+speaker</i> and <i>Forward Ring Tone</i> is set to <i>OFF</i>.</li> </ul>
Set Whether to Enable Calling from External Device	⇒ <b>Dial From Other Device</b> ⇒  ⇒ <b>Valid</b> or <b>Invalid</b> ⇒
Check Handset Bluetooth® Information	⇒ <b>Bluetooth Info</b> ⇒ <ul style="list-style-type: none"> <li>• Press  to change name of added device.</li> </ul>

### Resetting Handset

Start Here ⇒ **Settings** ⇒ ⇒ **Other Settings** ⇒

Reset All Settings to Default	⇒ <b>Reset Settings</b> ⇒  ⇒ Enter Security Code ⇒  ⇒ <b>YES</b> ⇒
Initialize Handset to Default Status	⇒ <b>Initialize</b> ⇒  ⇒ Enter Security Code ⇒  ⇒ <b>YES</b> ⇒  ⇒ <b>YES</b> ⇒ <ul style="list-style-type: none"> <li>• When the initialization is completed, handset automatically shuts down and restarts.</li> <li>• When handset is initialized, all data downloaded and saved on handset are deleted and cannot be restored.</li> <li>• Your Security Code will also be reset to default.</li> </ul>