SoftBank 832P User Guide





SoftBank

Introduction

Thank you for purchasing SoftBank 832P.

- For proper handset use, read First Step Guide and User Guide (this guide).
- Accessible services may vary by service area, subscription, etc.

SoftBank 832P is compatible with both 3G and GSM network technologies.

Note

- Unauthorized copying of any part of this guide is prohibited.
- Guide content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this guide. Please contact SoftBank Mobile Customer Center, General Information (19 P.18-33) about unclear or missing information.

Function/Service	Index	<i>⊏</i> ≢ Р.18-26
Name Search	Contents	<i>⊂</i> ₹ P.vi
Objective Coard	Objective Search	<i>⊏</i> ∌ P.ii
Objective Search	Index	<i>⊡</i> ≢ Р.18-26
Function Search	Overview	⊂≇ P.iv
Function Search	Contents	<i>⊏</i> ≢ P.vi
Using	Function List	<i>⊏</i> ≢ Р.18-2
Your Handset	Display	<i>⊡</i> ≓ Р.1-8
Guide	Contents	⊂ / P.vi
Organization	Section Contents	🖙 Chapter Top Pages
Solving	Troubleshooting	<i>⊏</i> ≢ Р.18-9
Problems	Warranty & Service	<i>⊡</i> ≓ P.18-32

26	Getting Started	1
	Call	2
	Text Entry	3
	Phone Book	4
	Digital TV	5
26	Camera	6
	Entertainment	7
_	Music Player	8
	Managing Files	9
	Connectivity	10
	Handset Security	11
	Tools	12
<u>.</u>	Messaging	13
	Internet	14
	S! Appli	15
	Osaifu-Keitai®	16
	Settings	17
ges	Appendix	18

Content Search

		My Phone Number	My Mail Address
	Confirming & Using My Number &	Confirm your phone number on 832P in Standby without navigating menus.	Customized address may reduce spam.
	My Mail Address		Customizing Handset Address:
		My Number: 🗁 P.1-26	⊡ ≉P.13-3
		Setting Ringtones	Downloading Tunes & Tones
Objective Search	Customizing 832P Settings	Set Chaku-Uta Full [®] files as ringtones.	Download music (Chaku-Uta Full®) files from mobile websites.
e Se		Ringtones: 🖙 P.17-2	Downloading Music: 🖙 P.8-2
. <u>≥</u>			
せ		Learning Your Handset	Making Mobile Calls
je.		Learn key assignments, and navigate menus to select & execute functions.	Use voice telephony or enjoy video telephony with compatible mobiles.
qo	Mastering Basics	menus to select a execute functions.	terephony with computible mobiles.
		Handset Menus: 🗁 P.1-18	Voice Calls: 🗁 P.2-2
		Parts & Functions: 😭 P.1-4	Video Calls: 🗲 P.2-7
		Watching One Seg Digital TV	Music Player
	Fun Stuff	Enjoy One Seg digital TV. Set channels in advance to view/record shows.	Download music files from websites via Music Player directly.
		Digital TV: 🕞 P.5-1	Music Player: 👉 P.8-1

Sending Your Contact Info	Messaging Multiple	Sending Files Wirelessly
Save mail address and other details;	Recipients	Send files or your own mail address
send to compatible devices wirelessly.	Enter multiple mail addresses/numbers	saved in Account Details via Infrared/IC transmission to other compatible devices.
	to send a message to all at one time. Sending Messages: 1 P.13-4	transmission to other compatible devices.
Account Details: 🖙 P.4-13	Add/Edit/Delete Address: 🗇 P.13-8	Infrared/IC Transmission: 🗇 P.4-13
Customizing Standby Display	Customizing User Interface	Using Shortcuts to Functions
Add wallpaper, set clock size/position	Download applications that mimic the	Access shortcuts to frequently used
or set calendar to appear in Standby.	interface design of previously used handsets.	functions in Standby.
Wallpaper: 👉 P.9-7	nandsets.	
Display: 🗇 P.17-3	Familiar Usability: 👉 P.1-20	Shortcuts: 🖙 P.1-17
	(,)	
Mastering Text Entry Methods	Using Messaging Services	Accessing the Mobile Internet
Enter text for Messaging functions or	Send short or long text messages.	Accessing the Mobile Internet Access Mobile Internet sites via Yahoo!
2		Access Mobile Internet sites via Yahoo! Keitai to browse sites or download
Enter text for Messaging functions or	Send short or long text messages. Attach image/sound files, etc. to S! Mail.	Access Mobile Internet sites via Yahoo!
Enter text for Messaging functions or to add/edit Phone Book entry items.	Send short or long text messages. Attach image/sound files, etc. to S! Mail. Messaging: C= P.13-1	Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.
Enter text for Messaging functions or	Send short or long text messages. Attach image/sound files, etc. to S! Mail.	Access Mobile Internet sites via Yahoo! Keitai to browse sites or download
Enter text for Messaging functions or to add/edit Phone Book entry items. Text Entry: P.3-1	Send short or long text messages. Attach image/sound files, etc. to S! Mail. Messaging: CPP.13-1 Graphic Mail: CPP.13-5	Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files. Yahoo! Keitai: 1 P.14-2
Enter text for Messaging functions or to add/edit Phone Book entry items.	Send short or long text messages. Attach image/sound files, etc. to S! Mail. Messaging: 13-P.13-1 Graphic Mail: 13-P.13-5 Playing Games	Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files. Yahoo! Keitai: P.14-2 Getting News (Japanese)
Enter text for Messaging functions or to add/edit Phone Book entry items. Text Entry: P.3-1	Send short or long text messages. Attach image/sound files, etc. to S! Mail. Messaging: P.13-1 Graphic Mail: P.13-5 Playing Games Download and install	Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files. Yahoo! Keitai: 1 P.14-2
Enter text for Messaging functions or to add/edit Phone Book entry items. Text Entry: AP.3-1 Camera & Video Camera	Send short or long text messages. Attach image/sound files, etc. to S! Mail. Messaging: 17 P.13-1 Graphic Mail: 17 P.13-5 Playing Games Download and install	Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files. Yahoo! Keitai: P.14-2 Getting News (Japanese) Set up S! Quick News to view a variety
Enter text for Messaging functions or to add/edit Phone Book entry items. Text Entry: P.3-1	Send short or long text messages. Attach image/sound files, etc. to S! Mail. Messaging: 17 P.13-1 Graphic Mail: 17 P.13-5 Playing Games Download and install S! Appli Games via	Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files. Yahoo! Keitai: P.14-2 Getting News (Japanese) Set up S! Quick News to view a variety

	832P Features	Digital TV Enjoy One Seg digital TV programs and video on wide horizontal screen. □ P.5-1	Simple Menu Use simplified menus limiting to only basic functions.
Dverview	SoftBank Mobile Features	Yahoo! Keitai Access Mobile Internet sites via Yahoo! Keitai to browse sites or download files.	Graphic Mail Create HTML messages; select font color/size, background; insert images.
Over	Useful Features	Phone Book/ S! Addressbook Back-up Save Phone Book entries; back up handset entries on Server, etc.	Camera/Video Capture still images or record videos with approx. 3.2 mega pixel camera. Set Image stabilizer/Face detection for high-quality pictures and videos. ▷ P.6-5, P.6-6
	PC-related Functions	PC Site Browser View PC-based websites on 832P.	Data Back-up/Management Transfer data between handset and PC for back-up and editing. ▷ P.10-6

iv

View Blind	Shikkari Talk	Dictionary (Japanese)
832P protects private information from prying eyes.	Make other party's voice clear according to surrounding noise.	Open ケータイTOOL<辞書> to access preinstalled dictionaries and reference books.
Ľ∌ P.1-25	Ċ ₽ P.2-5	ſ ₽ P.12-10
Customized Screen/Familiar Usability	S! Quick News (Japanese)	S! Information Channel/Weather (Japanese)
Change displays and ringtones all at once according to your favorite character, or download applications that install previously used handset model interfaces.	Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Window.	Subscribe to content and periodically receive update information. Set Weather Indicator to check weather forecast in Standby.
C͡₱ P.1-20	C≇ P.7-2	C⇒ P.7-4
Calendar & Alarm	Music Player	Voice Recorder
Add events by time/date and set Event Alarms to help manage your schedule.	Play 832P/microSD Card music files.	Record your voice to set as ringtone, etc.
ſ₽P.12-2, P.12-7	ſ ∌ P.8-1	ſ₽P.12-11
microSD Mode	Osaifu-Keitai®	
Access data on microSD Card from a PC by connecting handset to PC via USB cable (not included).	Use handset as an electronic cash card, reward card or membership card.	
⊡ P.9-20	ſ ⊅ P.16-1	

Contents

Contents	vi
Package Contents	viii
Using This Guide	viii
Safety Precautions	xii
Handling Precautions	xviii
Copyrights and Others	xxi
Specific Absorption Rate (SAR)	xxiv

1. Getting Started

USIM Card	1-2
Parts & Functions	1-4
About Battery	1-10
Handset Power On/Off	1-14
Manner Mode	1-15
Standby Options & Event Indicators.	1-16
Handset Menus	1-18
Customizing User Interface	1-20
Private Menu	
Simple Menu	1-22
Passwords	1-23
Multi Task	1-24
View Blind	
My Number	1-26

2. Call

2-2
2-6
2-9
2-11
2-13
2-15
2-16

3. Text Entry

Text Entry	3-2
Entering Text	
Conversion Methods (Japanese)	
Editing Text	3-9
User's Dictionary 3	-10

4. Phone Book

Overview	4-2
Saving to Phone Book	4-3
Searching/Using Phone Book	4-6
Managing Phone Book	4-9
S! Addressbook Back-up	4-10
Account Details	4-13
Voice Dial	4-14

5. Digital TV

Basics	5-2
Initial Setup	5-4
Watching TV	
TV Links (Japanese)	
Recording/Playing Programs	

6. Camera

Before Using Camera	6-2
Pictures/Videos	
Focus Functions	6-9
Viewing Saved Images	. 6-10

7. Entertainment

S! Quick News (Japanese) 7	/-2
S! Information Channel/Weather	
(Japanese)7	
E-Books (Japanese)7	7-6

8. Music Player

Overview	8-2
Saving Music	8-2
Using Music Player	8-5

9. Managing Files

Data Folder	9-2
Opening Files	9-4
Using/Editing Still Images	9-12
Managing Folders/Files	9-14
microSD Card	9-15

10. Connectivity

Infrared	10-2
IC Transmission	10-4
SoftBank Utility Software (Japanese)	10-6
USB (Japanese)	10-6

11. Handset Security

Changing Phone Password	11-2
Security Functions	11-2
Restricting Calls/Messages	11-8
Reset1	1-12

12. Tools

Calendar	12-2
Tasks	12-6
Alarms	12-7
Calculator	12-8
Notepad	12-9
Dictionary (Japanese)	. 12-10
Sound Recorders	. 12-11
Bar Code Reader	. 12-12
Location Settings	. 12-14

13. Messaging

Basics	. 13-2
Sending S! Mail & SMS	. 13-4
Receiving & Viewing Messages	13-10
Organizing/Using Messages	13-15

14. Internet

Getting Started	14-2
Using Yahoo! Keitai	14-3
Using PC Site Browser	14-5
Basic Operations	
Using Information	14-8
Option Menu Items 1	

15. S! Appli

Before Using S! Appli	15-2
Using S! Appli	15-3

16. Osaifu-Keitai®

Basics	16-2
Using Osaifu-Keitai [®]	16-4
IC Card Lock Functions	16-5

17. Settings

Sound & Vibration	17-2
Display	17-3
Manner Mode	17-6
Incoming Settings	17-6
Date & Time	17-7
Call Settings	17-8
Notification Light	17-9
Text Entry	17-9
Phone Book	17-10
Voice Dial	17-10
Video Call	17-10
Digital TV	17-11

S! Quick News (Japanese)	17-13
Messaging	17-14
Internet	17-15
S! Appli	17-17
Osaifu-Keitai [®]	17-17
Default Settings	17-18

18. Appendix

Function List	18-2
Troubleshooting	18-9
Software Update	
Quick Open Menu	18-13
Key Assignments	
(5-touch Mode)	
(2-touch Mode)	18-15
(NIKO-touch Mode)	18-16
Symbol List	18-17
Character Code List	
Weather Indicator List	18-23
Memory List	18-24
Specifications	
Index	18-26
Warranty & Service	18-32
Customer Service	18-33

Package Contents

□ Handset (832P)



□ Battery (PMBAQ1)



□ Starter Guide

Note

- Use SoftBank specified AC Charger (sold separately) to charge battery.
- For more information about AC Charger and accessories, please contact SoftBank Mobile Customer Center, General Information (29.18-33).
- Optional battery is available for separate purchase.
- 832P accepts microSD Card (not included). Purchase microSD Card to use related functions (CP.9-15).

Using This Guide


Screenshots

Before reading this guide, make a note of the following:

- In this guide, SoftBank 832P User Guide, SoftBank 832P is abbreviated as 832P.
- "microSD Card" and "microSDHC Card" are referred to as "microSD Card" in this guide.
- Handset operations and screenshots are based on defaults for handset color *Black* (C⇒P.17-18).
- Sample screenshots, etc. are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.
- Key icons use simplified labels.
- Most operation descriptions begin in Standby.
- Pressing a key for more than one second is described as "Press and hold."

Guide Symbols

Press the corresponding key to execute the function or operation indicated at the bottom of Display. Example:

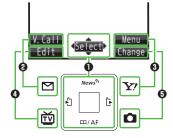

Multi Selector Operations (1)

Operations	Softkey Label*
Press 🔀 to select an item	< ‡ >
Press	Select

* Softkey labels vary by menu.

Multi Selector (1)

Use Multi Selector to select items, navigate menus, etc. In this guide, Multi Selector operations are indicated as shown below.



Softkeys (**2845**)

In this guide, Softkey operations are indicated as shown below.

Example 🛛 🔁 [V. Call], 🕎 [Menu]

• [V. Call] and [Menu] are Softkey label examples; Softkey labels vary by menu.

Japanese Functions & Services


When "(Japanese)" appears in a title, Japanese ability is required to use full range of the function or service.

Operation Descriptions

Following are examples of operation descriptions. Please note, actual operations may differ.

Basic Operations

Operations are expressed as shown here. Example:

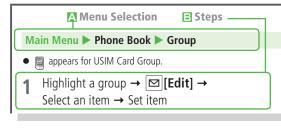




Advanced Operations

For advanced features and settings, go to pages indicated under Tip.

 Example:



Settings Refer to Chapter 17 "Settings."

Abbreviated Descriptions

For advanced settings (Chapter 17), initial operations may be abbreviated or omitted.

Example:

Abbreviated Steps

Initial steps are abbreviated.

From Ma	in Menu ▶ Tools ▶ Calendar		
Functions Available in Calendar Window			
> Highlight a date $\rightarrow \mathbf{Y}$ [Menu] \rightarrow Select an item (See below)			
ltem	Operation/Description		
New	Create a new entry (13 P.12-2, P.12-3)		
Weekly display/ 1 Month	Toggle Monthly/Weekly view		
Icon display Entries in category of selected icon appear > Select an icon			

Steps

Follow these steps after Abbreviated Steps.

Use Other Graphic Mail Settings

> In S! Mail text entry window, \frown → Select an arrange item

(See below)

Omitted Steps

Initial steps are omitted. Start operations from specified window.

Safety Precautions

■ Before use, read these safety precautions carefully and use your handset properly. Keep this guide in a safe place for future reference.

These safety precautions contain information intended to prevent bodily injury to the user and to surrounding people, as well as damage to property, and must be observed at all times.

SoftBank is not liable for any damages resulting from use of this product.

These symbols indicate exposure levels to bodily harm from failure to observe cautions or improper usage.

Make sure to understand these symbols and precautions before reading this guide.

\triangle	Danger	Great risk of death or serious injury from improper use
\triangle	Warning	Risk of death or serious injury from improper use
\triangle	Caution	Risk of injury or damage to property from improper use

Symbol Explanations

Make sure to understand these symbols and precautions before reading this guide.

\bigcirc	Prohibited Action	(\mathbf{x})	Avoid Moisture
	Disassembly Prohibited		Always Dry Hands First
0	Compulsory Action		Disconnect Power Source

Handset, Battery, USIM Card, Charger (sold separately) & microSD Card (not included)



Do not use or leave handset or related hardware in locations subject to high temperatures, such as near an open flame/ heater, in sunlight or inside a car on an extremely hot day. Do not charge, leave, use, or be carrying handset or related hardware in a warm place or where heat collects, such as under a kotatsu (blanketed warming table) or electric blanket, next to a kairo (worn warming patch), etc. Battery may leak, overheat, explode, or ignite. Handset or related hardware may deform or malfunction. Part of the casing may also become hot and cause burns.



Do not use excessive force to attach battery or connect charger to handset. Battery or connector may be the wrong way around.

Battery may leak, overheat, explode or catch fire.



Do not disassemble, modify or solder handset.

May cause accidents such as fire, bodily injury, electric shock or equipment malfunction. Battery may leak, overheat, explode or catch fire. Modifying handset is a violation of Radio Law and subject to prosecution.

Do not get handset, battery and charger wet.



If handset, battery or charger is left wet or battery is charged after exposure to liquids such as water or pet urine, overheating, electric shock, fire, injury or malfunction may occur. Be mindful of location when using handset, battery and charger. Handle with care

0

Use specified battery, charger (sold separately) and holder (not included).

Battery may leak, overheat, explode or catch fire, and charger may overheat, catch fire or cause malfunction.





Do not place handset, battery or charger inside cooking appliances, such as microwave ovens or high-pressure containers, or on IH cooking heaters.

Battery may leak, overheat, explode or catch fire, and handset and charger may overheat, emit smoke, catch fire or cause malfunction.

Do not drop, throw or otherwise subject to strong force or impacts.

Battery may leak, overheat, explode, catch fire, or cause electric shock or damage to handset.



Do not allow liquids (water, pet urine, etc.) or conductive objects (pencil leads, metal pieces, necklaces, hair pins, etc.) to contact charger terminals, external port terminals or microSD Card slot.

May cause fire or malfunction triggered by short-circuit.



Keep handset off and charger disconnected near propane gas, in filling stations or places where flammable gas is generated.

Handset use in such areas may lead to fire. Be sure to turn off handset before using Osaifu-Keitai®-compatible devices within filling stations (When IC Card Lock is set, turn off handset after unlocking setting.).



If handset, battery or charger emits an unusual sound, smoke or odor, perform following steps:

1. Unplug charger from outlet.

2. Turn off handset.

3. Remove battery (Take care to avoid burns or injuries.). May cause fire or electric shock.





Do not place handset, battery or charger on an unstable surface.

May fall, causing injury or malfunction. Take extra precautions while vibration alert is active or during charging.



Keep handset out of the reach of young children. May result in accidental ingestion or bodily injury.



If for use by child, guardian should teach proper handling and ensure handset is used as directed. May result in bodily injury.

Battery



See battery label to confirm battery type.

Label Battery Type Li-ion 00 Lithium-ion



Do not throw battery into fire. Battery may leak, explode or catch fire.



Do not pierce battery with a nail or other sharp object, hit it with a hammer, step on it, or subject it to strong shocks.

Battery may leak, overheat, explode or catch fire.



Do not touch terminals with metallic objects or carry/ store battery with conductive objects (pencil leads, metal pieces, necklaces, hair pins, etc.). Battery may leak, overheat, explode or catch fire.

xiii



If battery fluid gets into eyes, do not rub; flush with clean water and see a doctor immediately.

Failure to do so may cause blindness.

Warning



If battery fluid comes into contact with your skin or clothing, stop using handset immediately and rinse it off with clean water.

Battery fluid is harmful to your skin.



If battery does not charge after specified time, stop charging.

Battery may leak, overheat, explode or catch fire.



If battery emits an unusual odor, overheats, discolors or deforms, immediately remove battery and move it away as far as possible from any flame or fire. Take care to avoid burns or injuries.

Battery may leak, overheat, explode or catch fire.





Do not dispose of battery with ordinary refuse.

Place tape over the terminals to insulate battery, and take it to a SoftBank retailer or institution that handles used batteries in your area. Comply with local waste disposal regulations for recycling.

Handset





Do not use handset while driving a vehicle.

Doing so may interfere with safe driving and cause an accident. Stop your vehicle to park in a safe place before using handset. Drivers using handsets while driving are subject to prosecution.



Do not aim the infrared port at eyes when using infrared communication.

Doing so may affect eyes.



Turn off handset near high-precision electronic devices or devices using weak electronic signals. Handset may cause these devices to malfunction.

*Electronic devices these devices to manufaction. *Electronic devices that may be affected: Hearing aids, implantable cardiac pacemakers, implantable cardioverter defibrillators, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices.



Turn off handset aboard aircraft.

Handset signal may interfere with aircraft operation. When in-flight handset use is permitted, follow airline instructions for proper use.



If you have a weak heart, take extra precautions when setting functions such as Vibration or Ringer Volume for incoming transmissions. May affect heart.



In a thunderstorm, immediately turn off handset and seek shelter.

There is a risk of being struck by lightning and suffering electric shock.



Do not place a magnetic card near or in handset.	Ividy	injule
The stored magnetic data in cash cards, credit cards, telephone cards and floppy disks, etc. may be erased.	seel	kin ab k mec
Do not swing handset by its strap, etc. Handset may strike you or others, or strap may be broken resulting in injury or damage to handset or other property.	ecze	dset co ema or dition.
Do not place your ear too close to the speaker while ringer sounds or sound files play. May impair hearing.		P
Do not use One-push Open button to open handset near your or another person's face. Handset may cause accident and injury.		Key
N If handset affects car electronics, stop use. Handset use may affect electronics in some models. In this case, stop use; could impede safe driving.	Outer case	Me Bat
Handset may become hot while used in a hot environment. Avoid prolonged skin contact that may result in burns.		Bat
Avoid closing handset on fingers or objects when opening it. May result in injury or damage to display.	Side Keys, Ch Notification L	arging
Watch TV with adequate lighting and distance from Display.	Display panel	5
May damage eyesight. Do not turn up the volume unnecessarily high when using earphones. Using earphones with volume turned up for an extended period may impair hearing or injure ears.	Hinge	Hin Hin



Battery cover edges are sharp. Handle with care. May injure hand or fingers.

If skin abnormality occurs, immediately stop use and seek medical treatment.

Handset contains metals. Handset use may cause itching, rashes, eczema or other symptoms depending on the user's physical condition.

Parts		Materials/Surface Finish
	Display side	PA resin/
		Acrylic UV cured coating
		PC resin/
	Keypad side	Acrylic UV cured coating
	Metal case	Stainless steel/Baked finish
Outer case	Pottony side sides	PC+ABS resin/
	Battery side, sides	Acrylic UV cured coating
	Battery cover	Stainless steel/
		Acrylic UV cured coating
	Outer frame	PC+ABS resin/ Evaporated tin/
		Acrylic UV cured coating
ide Keys, Charging Indicator/		PC resin/
	5 5	Evaporated aluminum/
Notification Light		Acrylic UV cured coating
Display panel		Acrylic resin/Hard coating
	Hingo covor	ABS resin/
linge	Hinge cover	Acrylic UV cured coating
	Llinga haldar	PPS resin/
	Hinge holder	Acrylic UV cured coating
	•	· · · · · · · · · · · · · · · · · · ·

Parts		Materials/Surface Finish
Camera panel		Base: PET resin
		Lens portion: Acrylic resin/
		Hard coating
Keypad		Acrylic Urethane resin
One nuch One	n Dutton	PC resin/
One-push Ope	II BULLON	Acrylic UV cured coating
Metal part of C	One-push Open Button	Aluminium/Alumite treatment
External Port of	over	Elastomer resin
microSD Card Slot cover		PC resin, Elastomer resin/
lillicioso calu .		Acrylic UV cured coating
Charging Terminals		Beryllium copper/
		Gold plating on nickel plating
Stop pads		ABS resin
Scrowic (Potton	(compartment)	Aluminium killed steel/
Screws (Battery compartment)		Nickel plating
Battery compa	rtment	Stainless steel/PET resin
Battery compartment (Sides)		PC resin
Pattany terminals		Titanium copper/
Battery terminals		Gold plating on nickel plating
	Battery	PC resin (Label: PET resin)
Battery	Terminals	Glass fiber reinforced epoxy/
		Gold plating on nickel plating

Charger (sold separately)





Do not cover or wrap charger during charging. May cause overheating, fire or malfunction.



Always use the specified power supply/voltage. Using incorrect voltage may cause fire or malfunction. AC Charger: AC100V-240V (household AC outlet only) In-Car Charger: DC12V, 24V (vehicles with a negative earth only)



Use In-Car Charger in vehicles with a negative (-) earth. Do not use In-Car Charger if vehicle has a positive (+) earth. May cause fire.



Do not use charger in thunderstorms. There is a risk of suffering electric shock.



Do not handle charger with wet hands. May cause electric shock or malfunction.



If In-Car Charger fuse blows, always replace it with specified fuse.

Using the incorrect fuse may cause fire or malfunction. Refer to the respective manuals for information on the correct fuse specifications.



If dust accumulates on plug, unplug charger and wipe with a dry cloth. May cause fire.



When plugging charger into outlet, keep conductive materials (pencil lead, metal parts, necklaces, hair pins, etc.) away from Desktop Holder terminals or charger plug/terminals and plug charger firmly into outlet. May cause electric shock, short-circuit or fire.



Unplug AC Charger during periods of disuse.

May cause electric shock, fire or malfunction.



If liquid such as water or pet urine get into charger, unplug it immediately.

May cause electric shock, smoke emission or fire.





Pull charger (not cord) to unplug charger. Pulling on the cord may damage the cord and cause electric shock or fire.



Always unplug charger before cleaning it. May result in electric shock.

Near Electronic Medical Equipment



This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



If you use an implantable cardiac pacemaker or cardioverter defibrillator, keep handset more than 22 cm away from the implant at all times.

Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.



Persons using electronic medical equipment outside medical facilities should consult the vendor about possible radio wave effects.

Handset radio waves may affect electronic medical equipment operations.

Observe the following in medical facilities. Handset radio waves may affect electronic medical equipment.

- Do not take handset into operating rooms, Intensive Care Units or Coronary Care Units.
- Turn off handset inside hospital wards.
- Turn off handset even outside hospital wards (in hospital lobbies, etc.); electronic medical equipment may be in use nearby.
- Where a medical facility has specific instructions prohibiting the carrying and use of mobile phones, observe those instructions strictly.



Turn off handset in crowded places such as rush hour trains; implantable cardiac pacemakers or cardioverter defibrillators may be in use nearby.

Handset radio waves may affect implantable cardiac pacemaker or cardioverter defibrillator operations.

Handling Precautions

General Notes

- SoftBank is not liable for damages from accidental loss/ alteration/repair of handset/microSD Card information (Phone Book entries, image/sound files, etc.). Back-up important information.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- Read microSD Card manual beforehand for proper use.

• Beware of eavesdropping.

Digital signals reduce interception, however transmissions may be overheard. Deliberate/accidental interception of communications constitutes eavesdropping.

"eavesdropping" means radio communication is received by another receiver deliberately or accidentally.

Electromagnetic Waves

 For body worn operation, this mobile phone has been tested and meets RF exposure guidelines when used with an accessory containing no metal and positioning the handset a minimum 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

FCC Notice

• This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organization through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model handset when tested for use at the ear is 0.648 W/kg and when worn on the body, as described in this user guide, is 0.452 W/kg.

Body-worn Operation; This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/ea/ after searching on FCC ID UCE209016A. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at http://www.phonefacts.net.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.483W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

*The tests are carried out in accordance with international guidelines for testing.

** Please see Electromagnetic Waves on page xviii for important notes regarding body worn operation.

Declaration of Conformity

€€0168

We, Panasonic Mobile Communications Development of Europe Ltd., declare that SoftBank 832P conforms with the essential and other relevant requirements of the directive 1999/5/EC. A declaration of conformity to this effect can be found at http://panasonic.net/pmc/support/index.html

- This product is only intended for sale in Japan.
- Compliance to the European RTTE directive applies to: SoftBank 832P handset, Battery (PMBAQ1) and AC Charger (SoftBank ZTDAA1).

Handset Care

- 832P is not waterproof. Avoid exposure to liquids and high humidity.
 - Do not expose handset to precipitation.
 - Air conditioned air may cause condensation, resulting in corrosion.
 - Do not put handset in damp places like bathrooms.
 - On the beach, keep handset away from sun and surf.
 - Perspiration in handset may cause malfunction.
- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damages.
- Use handset within temperatures of 5°C to 35°C and humidity 35% to 85%. Avoid extreme temperatures/direct sunlight.
- Handset may become warm during use or charging. This is not malfunction.
- Exposing lens to direct sunlight may damage color filter and affect image color.

- Soiled terminals may cause poor connection. If the terminals are dirty, use a dry cloth or cotton swab to wipe them clean.
- Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Avoid forceful rubbing or scratching handset displays.
- Do not subject handset to excessive force.
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on a bag with handset inside.
- Do not remove nameplate from handset; doing so invalidates warranty.
- Always turn off handset before removing battery. If battery is removed while saving or sending mail, data may be altered or lost.
- LCD is manufactured with high precision technology, however, some pixels may appear darker/brighter.
- Connect only specified products to External Port.
- While walking, moderate headphone volume to make sounds around you audible and help avoid accidents.
- When holding handset in use, do not cover Speaker.

Function Usage Limits

These functions are disabled after handset replacement/upgrade or service cancellation: Camera; Digital TV; Music Player; S! Appli; Lifestyle-Appli.

After a period of disuse, these functions may become unusable.

Mobile Camera

- Be sure to observe proper etiquette when using the camera.
- Do not expose the camera lens to direct sunlight. Concentrated sunlight through the lens may cause the handset to malfunction.
- Be sure to try taking and previewing pictures before using the camera on important occasions like wedding ceremonies.
- Do not commercially use or transfer pictures taken with the camera without the permission of the copyright holder (photographer), except for personal use.
- Do not use the camera in locations where taking photos and recording videos are prohibited.

Copyrights and Others

Right of Portrait

Portrait right is the right of an individual to refuse to be photographed by others and protects from the unauthorized publication or use of an individual's photograph by others. Right of personality is a portrait right applicable to all citizens and right of publicity is a portrait right (property right) designed to protect celebrities' interests. Be careful when taking pictures with the handset camera. Photographing, publicizing and distributing photographs of citizens and celebrities without permission are illegal.

Copyrights

Sounds, images, computer programs, databases, other copyrighted materials, their respective works and copyright holders are protected by copyright laws. Duplicated materials are limited to private use only. If duplications (including conversion of data types), modifications, transfer of duplicates or distribution on networks are made without permission of copyright holders, this constitutes "Literary Piracy" and "Infringement of Copyright Holder Rights" and a criminal action for reparations and criminal punishment may be filed. If duplicates are made using handset, please observe the copyright laws. Materials captured with handset camera are also subject to the above. This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and/or

(ii) decode MPEG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider licensed to provide MPEG-4/AVC/VC-1 video.

No license is granted or implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com.

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this products is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

Windows Media[®], Microsoft[®], Windows[®] and Windows Vista[®] are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

The abbreviations used for respective operating systems (Japanese version) in this guide are as shown below: Windows Vista® is the abbreviation of Windows Vista® (Home Basic, Home Premium, Business, Enterprise, and Ultimate). Windows® XP is the abbreviation of Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.

Windows[®] 2000 is the abbreviation of Microsoft[®] Windows[®] 2000 Professional operating system.

Microsoft Windows operating system is abbreviated as "Windows" in this guide.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



HE

Aplix, microJBlend and JBlend, and all Aplix-or JBlend-related trademarks and logos are trademarks or registered trademarks of Aplix Corporation in the U.S., Japan and other countries.

OKAO Vision is used for multiple face detection to improve camera AF. OKAO is a registered trademark or trademark of OMRON Corporation in JAPAN and other countries.

BookSurfing $^{\circ}$ is a registered trademark of CELSYS Inc., Voyager Japan, Inc. and INFOCITY Inc.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

microSDHC Logo is a trademark.

Chaku-Uta® and Chaku-Uta Full® are registered trademarks of Sony Music Entertainment (Japan) Inc.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. Content providers are using the digital rights management technology for Windows Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM Software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content ("Secure Content Owners") may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy. display and/or play Secure Content, Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of Revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content Owners.

This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc. For more details, see the bundled "GPL/LGPL 等適用ソフト ウェアのライセンスについて" leaflet.

Powered by MascotCapsule®

MascotCapsule[®] is a registered trademark of HI CORPORATION © 2009 HI CORPORATION. All Rights Reserved.

The image stabilization technology utilized is PhotoSolid, a product of Morpho, Inc.

PhotoSolid is the registered trademark of Morpho, Inc. in Japan and other countries.

FeliCa is a contactless IC card technology developed by Sony Corporation.

FeliCa is a registered trademark of Sony Corporation.

 $\overline{\mathcal{A}}$ is a registered trademark of FeliCa Networks, Inc.

"Osaifu-Keitai" is a registered trademark of NTT DoCoMo, Inc. in Japan.





This product contains NetFront Mobile Client Suite of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in the United States, Japan and other countries. ©2008 ACCESS CO., LTD. All rights reserved.

This software is based in part on the work of the Independent JPEG Group.

This product contains Browser module under licence from ACCESS CO., LTD. and NTT DoCoMo, Inc.

IrFront is a trademark or registered trademark of ACCESS CO., LTD. in Japan and other countries.

The IrDA Feature Trademark is owned by the Infrared Data Association and used under license therefrom.



This product contains Adobe[®] Flash[®] Lite™ Player under license from Adobe Systems Incorporated.

Copyright© 1996-2008 Adobe Macromedia Software LLC. All rights reserved. Adobe, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

"SOFTBANK," SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.

S! Appli, S! Mail, Graphic Mail, PC Site Browser, Familiar Usability and S-1 battle are trademarks or registered trademarks of SOFTBANK MOBILE Corp. Yahoo! and the "Yahoo!" or "Y!" logos are trademarks and/or registered trademarks of Yahoo! Inc. in the US.

This product is manufactured or sold under license from InterDigital Technology Corporation.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

The software contained in 832P is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software, and do not separate it from hardware in whole or part.

"One-push Open™" is a trademark of Panasonic Corporation.

Specific Absorption Rate (SAR)

832P meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the head, shall not exceed 2 W/kg*. This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

All mobile phones, prior to product launch, must be certified as compliant with government requirements as stipulated by the Radio Law.

832P has been granted Technical Regulations Conformity Certification by TELECOM ENGINEERING CENTER. Its highest SAR value is 0.569 W/kg. This value was obtained by TELECOM ENGINEERING CENTER as part of the certification process. SAR tests were conducted with handset transmitting at its highest certified power level in accordance with testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network. Additional information on SAR can be obtained on the following Websites:

Ministry of Internal Affairs and Communications http://www.tele.soumu.go.jp/e/ele/index.htm Association of Radio Industries and Businesses (ARIB) http://www.arib-emf.org/index02.html (Japanese only)

* Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

Getting Started 1

USIM Card	
About USIM Card	1-2
USIM Card Installation	1-3
USIM PINs	1-3
Parts & Functions	1-4
Handset	1-4
One-push Open Button	
Key Operations in Standby	1-6
Display	1-8
About Battery	1-10
Before Charging	
Battery Installation	1-12
Charging Battery	1-13
Handset Power On/Off	1-14
Manner Mode	1-15
Minding Mobile Manners	1-15
Manner-related Features	1-15
Activating Manner Mode	1-15
Activating Emission OFF Mode	1-16
Activating Driving Mode	1-16
Standby Options & Event Indicators	
Event Indicators	
S! Quick News (Japanese)	1-17
S! Information Channel/Weather (Japanese)	1-17
Shortcuts	1-17

Handset Menus	1-18
Main Menu	1-18
Menu Numbers	1-19
Customizing User Interface	1-20
Customized Screen/Familiar Usability	
Private Menu	1-21
Opening Private Menu	1-21
Customizing Private Menu	1-21
Adding Shortcuts	1-21
Simple Menu	1-22
Activating Simple Menu	1-22
Simple Menu	1-23
Passwords	1-23
Phone Password	
Center Access Code	1-23
Security Code	1-24
Multi Task	
Activating Another Function	
Switching Functions	1-25
Ending Current Functions	1-25
View Blind	1-25
My Number	

USIM Card

About USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use 832P or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.

IC

USIM Card



- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If handset is dropped/subjected to shock, handset may return to Standby. This is not a malfunction.

If USIM not inserted After power-off Insert USIM appears,

re-insert USIM Card properly then restart handset.

Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card inserted is lost or stolen, contact SoftBank Mobile Customer Center or Global Call Center (CPP.18-33).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is inserted into handset.
- Returned USIM Cards are recycled.

 
Note

• Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

USIM Card Installation

• Remove battery (
P.1-12) then follow steps below.

Inserting





Removing

1 Slide out USIM Card gently

USIM PINs

There are two USIM Card security codes: PIN & PIN2

- PIN and PIN2 are set to 9999 by default.
- PIN/PIN2 can be changed (
 P.11-2).

PIN	 4 to 8-digit code used to prevent unauthorized handset use. When <i>PIN Authentication</i> is <i>ON</i> (☆P.11-2), PIN entry is required each time handset is turned on (with USIM Card inserted).
PIN2	Required to clear call times/costs or set maximum cost (CPP.17-8).

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unblocking Key (PUK/PUK2) (27.11-3).

 For information on PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (CPP.18-33).

Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (CP.18-33).


Note

 
- Do not force USIM Card into or out of handset; may damage handset/ USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.


Parts & Functions

Handset

4

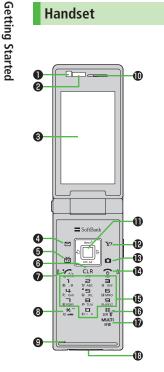



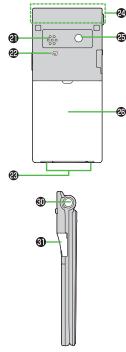

Using Earphone/Microphone

Connect following accessories (A) and (B) to External Port

(A) Earphone/microphone

 
(B) Stereo Earphone Conversion Cable

<Operation>

25

① Connect flat plug (A) to flat terminal (B)

② Connect plug (B) to External Port



• Do not press answer button on earphone/ microphone when connecting. Doing so may cause earphone/microphone to malfunction. In that case, pull out earphone/microphone, and connect again.

Light Sensor

· Detects ambient light

Infrared Port

· Transfer data via Infrared

Display

④ Mail Key

- · Open Messaging menu
- · Execute Upper Left Softkey function (ピョP.ix)

🖯 🖄 TV Key

- Activate TV

6 CLR Clear/Memo Key

- · Delete characters
- $\cdot \,$ Cancel menus
- $\cdot~$ Use Answer Phone

Send Key

- $\cdot \,$ Initiate or answer calls
- $\cdot \,$ Toggle upper/lower case in text entry windows
- · Use Voice Dial

③ ★ ×/Symbol/Driving Mode Key

- Enter " X "
- · Access pictographs in text entry windows
- Toggle Driving Mode

Microphone

Earpiece

Multi Selector

- Select S! Quick News (Unavailable in Simple Menu)
- Open Phone Book; set Auto Focus Lock
- D Open Incoming Call Logs
- Open Redial logs

Yahoo! Keitai Key

- · Open Yahoo! Keitai Main Menu
- ____Execute Upper Right Softkey function (┌─┮Pix)

Camera Key

- · Activate Camera/Video Camera
- · Execute Lower Right Softkey function (┌─╤P.ix)

End/Escape & Power Key

- Power on/off (ピテP.1-14)
- · End calls; return to Standby
- Place Call on hold
- - · Enter phone number/text

#/Symbol/Manner Key

- · Enter "#"
- · Access symbols in text entry windows
- Toggle Manner Mode

MULTI Key

- · Open/activate/toggle TASK MENU (C ₽.1-25)
- ・Activate ケータイTOOL<辞書>

External Port

 Connect AC Charger (sold separately) or other accessories here

Hinge

Notification Light/Charging Indicator

- Flashes for incoming transmissions
- · Flashes while Camera is active
- $\cdot\,$ Lights in red for charging

② Speaker

- Place Logo over a reader/writer when using Osaifu-Keitai[®] (C⇒P.16-4)
- Charging Terminals

Antenna

 Image: Common state sta

Upper Side Key

Increase earpiece/TV volume

Lower Side Key


- Decrease earpiece/TV volume [Closed Position]
- · Set/cancel Manner Mode
- · Check missed calls/new messages

One-push Open Button (□=P.1-6) microSD Card Slot

· Insert microSD Card here (C ₽.9-16)

One-push Open Button

Press One-push Open Button to open handset.

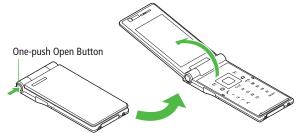

- Fold handset by hand to close. When handset does not close, open it all the way once, then close.
- Customize handset to answer/end calls, etc. by opening/closing handset (29-P.17-6, P.17-8).
- Be careful not to drop handset when opening handset by One-push Open Button.

Key Operations in Standby

Press (less than one second) or press and hold (more than one second) a key in Standby to execute operation.

Key Operations		Functions	
	Short Press	Initiate a call	
	Long Press	Voice dial	
•	Short Press	Show/hide indicators and S! Quick News ticker	
	Long Press (2 + sec)	Turn off power	
	Short Press	Open Main Menu	
	Long Press	Activate/cancel Keyguard	
CLR	Short Press	Play Answer Phone	
CLK	Long Press	Activate/cancel Answer Phone	
۵	Short Press	Activate Camera	
	Long Press	Activate Video Camera	
	Short Press		
Ŭ	Long Press	Activate/cancel IC Card Lock	
	Short Press	Open Messaging Menu	
	Long Press	Open S! Mail Composition window	
Y 7	Short Press	Access Yahoo! Keitai	
17	Long Press	Open Yahoo! Keitai Menu	
0	Short Press	Select Event Indicator, Shortcut, S! Quick News ticker	
	Long Press	—	
	Short Press		
	Long Press	Open Phone Book entry window	
	Short Press	Open Incoming Call Logs	
	Long Press	Open Received address logs	

Key Operations		Functions	
	Short Press	Open Redial logs	
	Long Press	Open Sent address logs	
1	Short Press	Enter "1"	
	Long Press	Open Phone Book page "あ"	
2	Short Press	Enter "2"	
	Long Press	Open Phone Book page "か"	
3	Short Press	Enter "3"	
	Long Press	Open Phone Book page "さ"	
	Short Press	Enter "4"	
4	Long Press	Open Phone Book page "た"	
5	Short Press	Enter "5"	
	Long Press	Open Phone Book page "な"	
6	Short Press	Enter "6"	
	Long Press	Open Phone Book page "は"	
7	Short Press	Enter "7"	
	Long Press	Open Phone Book page "ま"	
8	Short Press	Enter "8"	
	Long Press	Open Phone Book page "や"	
9	Short Press	Enter "9"	
	Long Press	Open Phone Book page "ら"	
	Short Press	Enter "0"	
	Long Press	Open Phone Book page "わ"	
×	Short Press	Enter " X "	
	Long Press	Activate/Cancel Driving Mode	
#	Short Press	Enter "#"	
	Long Press	Activate/Cancel Manner Mode	

Key Operations		Functions	
	Short Press	Increase earpiece volume	
	Long Press		
•	Short Press	Decrease earpiece volume	
	Long Press		
MULTI	Short Press	Activate TASK MENU	
	Long Press	Activate ケータイTOOL<辞書>	

Display

<i>∞ / </i>

Display Indicators

- - The second secon
 - 翻 Out-of-Range
- Packet Transmission in Progress (PC)
 - Dial-up Connection Established on PC
 - P 3G/GSM Packet Transmission Enabled
 - 3G/GSM Packet Transmitting
 - Operator (set for Select Operator) Out-of-Range
 - Image: Second Second
 - Image: SG/GSM Packet Transmission Unavailable * Available only while abroad
- 🛛 🌡 Secure Content
 - S! Addressbook Back-up Synchronizing
 - 🖁 Auto Sync Settings Active
- 🕘 🖳 PC Site Browser Active
 - Infrared Active
 - IC Transmission
 - USB Cable Connected
 - 🔒 Keyguard Active

- Software Update (Notification/Updating/ Result)
 - 🦉 Voice Mail
- microSD Card Inserted Reading/Writing Data 哥 Write-protected Į. Unsupported Unusable **USB Cable (Not Included) Connected** 🖗 microSD Mode MTP Mode **During Call** 卽 During Video Call C During Voice Call New S! Quick News Information
 - New S! Information Channel info
- 🔞 🙀 Unsent Message
 - Unread Message
 - Incoming Mail Memory Full (Handset)

🖲 脂 Privacy Key Lock Active

- Personal Data Lock Active
- 🔓 Key Pad Dial Lock Active
- 🐴 IC Card Lock Active
- Secret Mode and Secret Data Only Active
- Key Pad Dial Lock, Secret Mode and Secret Data Only Active
- Key Pad Dial Lock and Personal Data Lock Active
- Secret Mode, Secret Data Only and IC Card Lock Active
- Privacy Key Lock and IC Card Lock Active
- Personal Data Lock and IC Card Lock Active
- 🔏 Key Pad Dial Lock and IC Card Lock Active
- Key Pad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active
- Key Pad Dial Lock, Personal Data Lock and IC Card Lock Active
- 0 🍟 Manner Mode Active
 - Manner Mode (set in User Mode) Active

Paused Active Auto Start Request Received Start Request Received while Paused Start Request Received while Active Start Request Received while Active One Function Active Multiple Functions Active Digital TV Active

- Music Playback
- Music Paused
- 🚯 Time

S! Appli

- Battery Level
- (Red) Alarm Set (Today)

 (Glue) Alarm Set (After Today)
- 🚯 🕌 Vibration Active (Incoming Call)
 - 述 Vibration Active (Incoming Message)
 - Vibration Active (Incoming Call/Message)
- Incoming Call Ringtone Disabled
 - F Incoming Message Ringtone Disabled
 - Incoming Call/Message Ringtone Disabled
- 🚯 🖾 Driving Mode

Switching USB Mode to microSD Mode

- MP Switching USB Mode to MTP Mode
- 🕲 📱 Side Key Disabled when Handset Closed
- Timer Lock at Close Active
- ② ¥ Call Charge Reached Upper Limit
- Image Source Calls)
 Image Source Calls
- In the second second

Note

To show icon description: Main Menu
 ▶ Settings ▶ Display Settings
 ▶ Describe Icons ▶ ☑ to highlight an icon

Getting Started

About Battery

Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

Charging Time & Operating Time Estimates

		3G	GSM
Charging Time		100 minutes*	
Standby Time		460 hours*	240 hours*
Talk Time	Voice Call	180 minutes*	180 minutes*
laik line	Video Call	120 minutes*	-

* Approximate value

- 3G Mode/GSM Mode: CP.2-10
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.
- Battery may swell as service life nears end; this is not a problem.

Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

Getting Started

Battery Time

- Using handset in poor conditions may shorten battery time.
 - · Extreme temperatures
 - · Impaired handset, battery or Charging Terminals
 - · Signal is weak/handset is out-of-range
 - · Handset is left mid-operation (not in Standby)
 - · Viewing TV, playing music or using S! Appli, etc.
- Extending battery time
 - Example:
 - Turn Back Light Time OFF and Power Saver Mode ON (C ₱P.17-5)
 - · Select *OFF* for Key Tone (ピ゚゚゚゚゚゚₽.17-2)

When Battery Runs Out

• Unless a Call is in Progress


A message appears and warning tone sounds for 10 seconds. Warning tone ends automatically after one minute; press any key except • to cancel warning tone manually. Charge or replace battery.

 $\cdot\,$ If Manner Mode is active, nothing sounds.

• During a Call

A message appears and warning tone sounds via Earpiece or Speaker. After 20 seconds, call ends and handset shuts down in one minute. Charge or replace battery.


Battery Strength Indicator

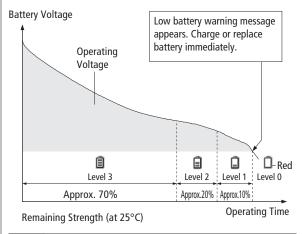

- Alternatively, check battery level from Main Menu ► Settings
 - Phone Settings > Battery > Battery Level

Battery Installation

- Always turn off handset power before removing battery.
- Press and slide to remove cover

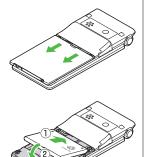


Slide into Groove

2 Insert Battery

Align battery tabs with handset grooves and slide in battery.

Remove Battery

 Lift battery out as shown.



Make sure there is no gap between battery and handset; cover should click into place.



Note

• Lithium-ion batteries are valuable and recyclable resources.




- Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
- · To avoid fire or electric shock, do not:
- Short-circuit battery
- Disassemble battery
- Battery cover edges are sharp. Close battery cover fully to avoid injury.

Charging Battery

Use only specified AC Charger (sold separately).

Charging Time: Approximately 100 minutes

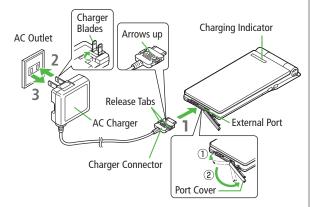

Connect AC Charger to handset

Insert Charger Connector (printed side up) into External Port.

2 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts. When charging is complete, Charging Indicator goes out.

- When Charging Indicator flashes, remove AC Charger and battery from handset then attach them again.
- Charge Sound is heard when charging starts/ends (CPP.17-2). When handset is turned off or in Manner Mode, nothing sounds.

3 When charging is complete, unplug AC Charger, then disconnect handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.

- For details, read AC Charger instructions.
- Alternatively, charge battery by using Desktop Holder (not included).

Handset Power On/Off

Press and hold 💿

Start-up window appears and handset enters Standby.

 Enter PIN if PIN Authentication is ON (C⇒P.11-2).

Press 💿 for 2+ seconds

Handset shuts down.

• Do not turn on handset immediately after turning off. Wait a few seconds.



Standby

The First Time Handset Powers Up, and Setup Window Appears...

Select **YES**, and set the following: (Each item can be set separately.)

- Set date and time (Date & Time: ⊆ P.17-7)
- Set Phone Password Enter "9999", and enter new Phone Password (4-8 digits) (17-P.1-23).
- Set Key Tone

Select *ON* or *OFF* (ピ゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚?17-2).

● Set font size Set Display font size all at once (CPP.17-5).

Note

- If *USIM not inserted After power-off Insert USIM* appears, clean and properly re-insert USIM Card then restart handset.
- After a period of inactivity, Display turns off.

Retrieving Network Information

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: Main Menu > Settings
 Connectivity > Retrieve NW Info > YES
- Settings

Tip

●Change Wallpaper ●Add Calendar to Wallpaper ●Change Start-up Window (ピテP.17-3)

Manner Mode

Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner-related Features

Manner Mode (⊂⊋Right)	Press Manner key to mute handset tones and activate vibration for incoming transmissions.
Vibration Mode (⊂͡͡͡字P.17-2)	Activate in public places, meetings, etc. for silent call/message alerts.
Ringer Volume (⊂⇒P.17-2)	Mute call/message tones.
Emission OFF Mode (CPP.1-16)	Suspend all handset transmissions.
Answer Phone (ピテP.2-15)	Use to handle incoming calls when inappropriate/ unsafe to answer.
Driving Mode (ſſ≇P.1-16)	While driving, send a voice message informing the caller that you cannot answer the call (Handset does not ring.).

Activating Manner Mode

Press one key to mute handset tones and vibration for incoming transmissions.

- Manner Mode settings can be changed (
- When Manner Mode is active, W appears.
 - In Standby, press and hold #
 - To cancel: Press and hold # again

Manner Mode 1 Set

 To activate/cancel while handset is closed: Press and hold

- Shutter click and incoming tone via Earphone (*Level 1*) sound even in Manner Mode.
- When Music Player or Digital TV activates in Manner Mode, confirmation appears asking whether to cancel Manner Mode.
- When Prefer manner mode is OFF (CPP.12-7), Alarm sounds even if Manner Mode is active.



Activating Emission OFF Mode

Temporarily suspend all handset transmissions; when active, all calls/messages and incoming information are blocked.

Main Menu
Settings
Call Settings
Emission OFF Mode

- YES
 - To cancel: Follow the same steps.

Note

• Emission OFF Mode disables Infrared/IC transmissions.

Activating Driving Mode

Handset does not ring for incoming calls. Voice guidance informs the caller you are unavailable and Answer Phone activates.

- When Driving Mode is active, appears.
- 1 In Standby, press and hold 🔀
 - \bullet To cancel: Press and hold $\textcircled{\times}$ again

Note

• When Answer Phone memory is full, incoming calls are rejected.

Standby Options & Event Indicators

Event Indicators

Event Indicators appear for missed calls, messages, etc.

0

1

▼ Select an indicator
 To clear indicators:
 To clear indicators:



Events

Missed Calls	Missed calls (ピョP.2-13)
New Messages	New messages (CPP.13-10)
Answer Phone	Recorded caller messages (ピアP.2-15)
Voice Mail	New Voice Mail (17-P.2-18)
Missed Call Notification	If Missed Call Notification is active, indicator appears for calls missed while handset is off, out-of-range, engaged, etc. (CPP.2-19)
S! Information Channel Info	S! Information Channel (received/failed updates) (
Weather Info	Weather Indicator (received/failed updates) (

Other Information

- Missed alarm (ピアP.12-7) S! Appli startup notice (ピアP.15-3)
- USB Mode setting (ピョア.10-6) Timer (ピョア.5-13)
- Content Key (ピアP.9-5) Software Update result (ピアP.18-12)

Note

• Call operations are available while Event Indicators appear.

S! Quick News (Japanese)

By default, S! Quick News appears at bottom of Display.

- S! Ouick News: r ₽.7-2
- Show/hide S! Ouick News: Cr P.17-13



S! Ouick News

S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.



• St Information Channel/Weather: 12P7-4

Shortcuts

Access frequently used functions from Standby.

• S-1 battle and Content Value Package shortcuts are set by default. Both services available only in Japanese.



Adding Shortcuts

- Shortcuts may not be available for some functions.
- Open a function, \mathbf{Y} [Menu] \rightarrow Add shortcut icon \rightarrow YES

Accessing Functions from Shortcuts

- In Standby, $\bigcirc \rightarrow$ Select an icon
- The selected function name appears above icon.
- To clear: 🕤 or CLR

Editing/Deleting Shortcuts

- In Standby, $\bigcirc \rightarrow$ Highlight an icon $\rightarrow \boxed{\mathbf{Y}}$ [Menu]
- **Edit Title** 2

1


Fdit title → Edit title

Delete Shortcut(s) Delete this or Delete all → YES



Handset Menus

Main Menu

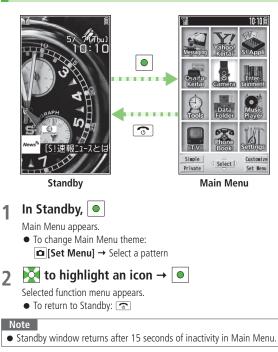

Main Menu Icons

	r	1
Messaging	Yahoo! Keitai	S! Appli
Messaging Create new/view	Vahool Keitai Enjoy Mobile Net &	STAPPII Download, set and
received messages	PC Site browsing	use S! Appli
Osaifu-Keitai	Camera	Entertainment
Osaifu Keitai Use Osaifu-Keitai®	Capture images or record videos	Use S! Quick News or E-Books
Tools	Data Folder	Music Player
Set Alarm or save Calendar entries	Data Folder Open files saved on 832P/microSD Card	Use Music Player
TV	Phone Book	Settings
View TV or record/ timer-record programs	Save entries to call or send messages	Adjust/customize handset settings

.

Settings ●Change Display Color Scheme (ピア.17-3) ●Change Main Menu Icons ●Change Main Menu Background (ピア.17-4)

Menu Numbers

Use keypad to select functions or menu items.

Unnumbered Menu Items

When numbers do not appear, select items as shown.

Main Menu *H* to select *Settings* from Main Menu



1	2	3
4	5	6
7	8	9
*	0	#
Simple	Select	Customize Set Wenu

Example: Menu Icons set to Pattern 1

When Menu Icons is Set to Pattern 5 or Customize

Menus cannot be selected from Main Menu by keypad.

Open menu items by entering specific number in Main Menu (Quick Open Menu: $rac{P.18-13}$).

Top Menu Opened from Main Menu

2 to select *Display Settings*

 


Example: Settings Top Menu

Numbered Menu Items

Press key corresponding to menu number to select a menu.

In Display Settings (from *Settings* Top Menu), **5** to select *Back Light Time*



Getting Started

Customizing User Interface

Customized Screen/Familiar Usability

Customized	Download and set Customized Screen to personalize user
Screen	interface, ringtone, etc., to a selected theme.
Familiar	Download Familiar Usability applications that mimic the
Usability	interface design of other handsets.

Downloading Customized Screen/Familiar Usability

Download characters or applications from websites.

Main Menu > Data Folder > Customized Screen

Customized Screen or Familiar Usability → YES

Website providing characters or applications appears. Follow onscreen instructions.

• To manage Customized Screen applications in Data Folder:

Setting Customized Screen/Familiar Usability

In Standby, 🔍

- 2 ∑r [Customize] → Customized Screen or Familiar Usability
- **3** Highlight a theme $\rightarrow \square$ [Set]
 - To toggle thumbnail and list:
 [Change]

4 YES

1

- Customized Screen or Familiar Usability cannot be set when battery is low.
- Other functions are not available while switching. For some seconds after switching is complete, all calls/messages may be blocked.
- Familiar Usability does not completely remake handset.
- Alternatively, Main Menu > Settings > Customized Screen To cancel, select *Release Settings*.
- When Simple menu is active, Customized Screen and Familiar Usability settings are not reflected. To reflect settings, cancel Simple menu.

Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.


Opening Private Menu

- 1 In Standby, → [Private] Private Menu appears.
 - To return to Main Menu: 🖄 [Normal]
- 2 Select a menu



Change Private Menu Background

> After Step1, $[\underline{\mathbf{v}}]$ [Set] $\rightarrow [\underline{\mathbf{v}}]$ [Menu] \rightarrow Change BG image \rightarrow Select a folder \rightarrow Select an image

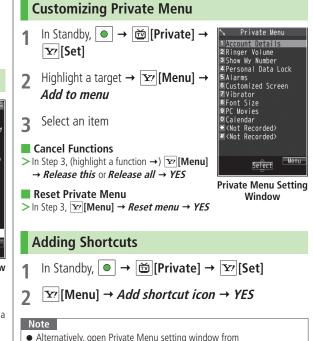


Main Menu
Settings
Display Settings
Private Menu

Simple Menu

Activate Simple menu to limit menu options to basic ones.

● Handset is limited to basic operations (C→P.1-23).

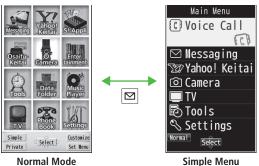

Window

Window

Activating Simple Menu

In Standby, $\bigcirc \rightarrow \boxtimes [Simple] \rightarrow YES$ 1

YES or NO 2

- Select **YES** to set all items in Font Size (CFP.17-5) to Large.
- To open Simple menu: in Standby.

Cancel Simple Menu

> In Standby, \bigcirc \rightarrow \boxdot [Normal] \rightarrow YES

- Turning off the power does not cancel Simple menu.
- S! Quick News is not available in Simple menu. Customized Screen or Familiar Usability setting is canceled.

Simple Menu

Simple Menu	Page	Simple Menu	Page
Voice Call	Tage	TV	Tage
	2-13	Watch TV	5-5
Outgoing Log	-		
Incoming Log	2-13	Timer Recording	5-13
Phone Book	4-6	Channel Setting	5-4
Create New Phone	4-3	Tools	
Book		Data Folder	9-2
Answer Phone	2-15	Alarms	12-7
Account Details	1-26	Calendar	12-2
Messaging		Calculator	12-8
Incoming Mail	13-10	Notepad	12-9
Create New	13-4	Receive via Infrared	10-3
Retrieve New	13-15	Settings	
Drafts	13-15	Diantanaa () (aluma	1-15
Sent Messages	13-15	Ringtones/Volume	17-2
Create New SMS	13-7		17-3
Yahoo! Keitai		Screen/Fonts	to
Yahoo! Keitai	14-2		17-5
Bookmarks	14-8	Call Time & Cost	17-8
Saved Pages	14-8	Date & Time	17-7
Enter URL	14-4		11-2
Camera		Security	16-5
Take Pictures	6-5		18-11
See Pictures	6-10	Coll Sottings	2-17 to
Shoot Videos	6-6	Call Settings	to 2-21
Watch Videos	6-10		2-21
vvalch videos	0-10		

Passwords

Phone Password, Center Access Code and Security Code are needed for handset use.

Phone Password

<Default> 9999

4 to 8-digit number required to use/change some handset functions.

- Enter number within 15 seconds.
- \bullet _ appears for each digit entered.
- Phone Password can be changed on handset ($\square P.11-2$).

Center Access Code

4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.

Security Code

4-digit number specified at initial subscription, required to restrict handset services (C P.2-20).

- Enter number within 15 seconds.
- If entered incorrectly three times, Security Code settings lock; Security Code & Center Access Code must be changed. Reach SoftBank Mobile Customer Center, General Information (27:P.18-33) for details.
- Security Code can be changed on handset (C P.2-20).

Note


- Write down Phone Password, Center Access Code and Security Code. Do not reveal Phone Password, Center Access Code and Security Code. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Mobile Customer Center, General Information (ピア.18-33).

Multi Task

Activate up to three functions from four different groups at the same time.

Group	Function
Messaging Group	Messaging
Yahoo! Keitai/ S! Appli Group	Yahoo! Keitai/S! Appli/Entertainment /Osaifu-Keitai (Lifestyle-Appli)
Tools Group	Music Player*/Camera/Tools/Data Folder/TV/ Phone Book
Settings Group	Settings/Osaifu-Keitai (IC Card Settings)

- * Functions other than Tools Group are included.
- \bullet [igstarbox] appears above the icons of an active group.
- ullet = appears for single function in use; 🚽 for multiple functions in use.

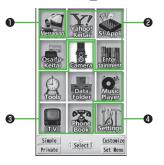

Other Functions while Watching TV (\$P.5-8)
 Using Other Functions while Listening to Music (Play Background) (\$P.8-7\$)

Activating Another Function

Activate another function from a different group. Multi Task is unavailable when Simple menu is active.

 $MULTI \rightarrow Open Menu \rightarrow$

Select a function

TASK MENU
1 單Open Menu
2 CPhone Book
Gastand-by display

TASK MENU Window

Note

• If another function is selected from same group, confirmation appears. Select **YES** to cancel current function and start a new function.

Switching Functions

MULTI → Select a function

Each press cycles through activated functions.

Ending Current Functions



End All Active Functions $\rightarrow MULT \rightarrow Yr [$ $\cong END] \rightarrow YES$

View Blind

Activate View Blind to protect Display from prying eyes.

Main Menu Settings Display Settings View Blind

ON

4

2 Select a level

• Set level 1-3 (Level 3 is the highest level).

- Alternatively, press and hold **B** to activate/cancel. Previously selected level takes priority.
- View Blind cannot be activated: While in Standby; while S! Appli is active; while Privacy Key Lock is active; during All Reset

1 My Number

Confirm handset phone number in Account Details (C⇒P.4-13). Also confirm data saved in Account Details: name, mail address, etc.

1 In Standby, $\bigcirc \rightarrow \bigcirc$ Account Details appears.



Call 2

Making/Answering Voice Calls	2-2
Making Voice Calls	
Outgoing Call Functions	2-3
Emergency Calls (110, 119, 118)	2-4
Answering Voice Calls	2-5
Incoming Call Functions	2-5
Making Voice Clear (Shikkari Talk)	2-5
Making/Answering Video Calls	2-6
Note	
Video Call Window	2-6
Making Video Calls	2-7
Answering Video Calls	2-8
International Calls	
Calling Abroad from Japan	
Calling while Abroad	2-9
Global Roaming Settings	
Engaged Call Functions	
Operations Available during a Voice Call	
Operations Available during a Video Call	2-12
. 5	

Call Log	2-13
Viewing Call Logs	2-13
Making Calls from Call Log	
Functions Available from Call Log	2-14
Answer Phone	2-15
Activating/Canceling Answer Phone	2-15
Playing Messages	2-15
Answer Phone Functions	2-16
Optional Services	2-16
Overview	
Call Forwarding	2-17
Voice Mail	
Call Waiting	2-19
Call Barring	
Caller ID	

Making/Answering Voice Calls

Making Voice Calls

Before Calling

- Confirm signal strength (CPP.1-8)
- If any of these indicators appear:

 Image: The second s

Enter a phone number

• Include area code for all numbers.



2 Confirm the number, then 🖍

- To adjust volume: 🚺 or 🔺
- 3 💿 to end call

Call Time appears.

Correcting Misentries

Use 🔯 to place cursor at digit to delete, then CLR. Press and hold CLR to delete the digit and all digits to the right of cursor.

- Do not cover antenna area (CPP.1-5) with hand or sticker; may weaken signal strength and cause calls/transmissions to be unavailable.
 - 🕤 • • • • • • • •
- ●Operations Available during a Voice Call (ピアP.2-11)
- ●Making Calls from Call Log (ピアP.2-14)
- ●Saving Entered Numbers to Phone Book (ピアP.4-5)
- ●Making Calls from Phone Book (ピテP.4-6)
- Settings Oset Handset Response when Closed during Call
 - ●Call Time & Call Cost (ピテP.17-8)

2 Call

Outgoing Call Functions

Showing/Hiding Caller ID

- > Enter a number $\rightarrow \mathbf{Y}$ [Menu] \rightarrow Notify caller ID \rightarrow OFF or ON
- Setting Caller ID on/off (Caller ID: 1) P.2-21)

Adding Prefix to Phone Number

Save Prefix

- > Main Menu > Settings > Call Settings > Prefix
- ▶ Highlight **<Not Recorded>** ▶ 🖾 [Edit] ▶ Enter a name
- Enter a prefix number
- Up to seven entries can be saved.
- To check entries: Select a saved prefix.
- To delete entries: Highlight a prefix → ∑r[Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES

Make Calls Using Prefix

- > Enter a number → Imit [Menu] → Prefix numbers → Select an entry → Voice Calls: Imit / Video Calls: [V. Call]
- Alternatively, in detail window of Phone Book, Redial, Outgoing Call Logs or Incoming Call Logs, ∑[Menu] → Prefix numbers → Select an entry → Voice Calls: I/Video Calls: □[V. Call]

Example: Save "186" and "184" as prefixes, and add them to phone numbers to show/hide your caller ID when making calls.

Sending Touch-tone Signals

Send touch-tone signals for services such as reserving tickets, checking bank balance, etc. Save number strings to be sent as a touch-tone signal. Use P (pause) to separate numbers when saving.

- Save Pause Dial
- > Main Menu > Settings > Phone Settings > Pause Dial
 - [Edit] Enter a number string
- To enter a pause (p): Press and hold 🔀
- To delete: In Pause Dial window, ∑r [Menu] → Delete → YES

Send Pause Dial

- > Main Menu > Settings > Phone Settings > Pause Dial
 - ▶ ●[Send] ▶ Enter a phone number ▶ ↗ / ●[Dial] ▶ Once line is connected, press ●[Send]
- Number string is sent each time [Send] is pressed.

Emergency Calls (110, 119, 118)

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

Calls Cannot be Made in Following Cases:

- When Set Max Cost Limit is ON and charge limit is reached
- In PIN/PIN2, PUK/PUK2 entry window

Emergency Positioning Request

When an emergency call is made from a mobile phone, location is reported to first response agencies such as the police.

- Location information may be inaccurate due to location or signal conditions. Describe location or nearby landmarks.
- Base Station Positioning System is accurate within 100 meters to 10 kilometers. Location information from distant base stations may be inaccurate.
- Function available where first response agencies have completed system installation.
- Dialing 184 before 110, 118 or 119, cancels location report. However, first responders may obtain location information for immediate and serious threats to life.
- Not available for international roaming.
- Requires no separate subscription or transmission fees.

Note

• Emergency numbers may not be dialable outside Japan depending on the network available or handset settings.

Answering Voice Calls

When a Call Arrives...

832P rings; Notification Light flashes.



If Caller ID is sent, number appears in Display; if saved in Phone Book, caller's name appears.

When an International call arrives, ${\rm let}$ appears at upper left of caller's phone number in Display.

🖍 to talk

● To adjust volume: 🚺 or 🔺 🗹

2 💿 to end call

Call Time appears.

Adjust Ringer Volume

>While 832P is ringing, 💟

- Volume adjustment is disabled in following cases:
 - · During *Manner Mode* (∠₹P.1-15)
 - · While *Ringer Volume* is set to *Escalating Tone* (⊆ P.17-2)

Note

• When Caller ID is not sent, Withheld appears.

●Operations Available during a Voice Call (CPP.2-11)

Rejecting Unknown Callers

- ●Rejecting Calls without Caller ID (ピョP.11-11)
- Settings ●Answer Calls by Opening Handset ●Change Answer Setting (127-P.17-6)

Incoming Call Functions

Following operations are available for incoming calls.

Place Calls on Hold	>0
Answer Phone	$>$ \square / \blacksquare
Call Rejection	 ➤[Menu] → Call Rejection Rejecting Unknown Callers/Rejecting Calls without Caller ID (CPP.11-11)
Call Forwarding	 ➤[Menu] → Call Forwarding Activate Call Forwarding (CPP.2-17) beforehand to forward incoming calls to a preset number. If Call Forwarding is not active, call is rejected.

Making Voice Clear (Shikkari Talk)

<Default> ON

Make other party's voice clear according to surrounding noise.

Main Menu
Settings
Call Settings
Shikkari Talk

```
ON or OFF
```

Making/Answering Video Calls

Exchange video/sound with video call-compatible mobiles.


 Send Alternative Picture (still image) or video Image via Camera. By default, Outgoing Image is set to Alternative Image.

Note

- Only available within 3G network coverage.
- 832P is 3G-324M compliant; calls connected via different systems may be disconnected (charges apply).
- Increasing Speaker volume may cause interference. Decrease volume or use earphone.
- Handset may become warm during Video Call. This is not malfunction.
- When incoming/outgoing sound or image fails, try calling again.

Video Call Window

Example: Outgoing Video Call by Default

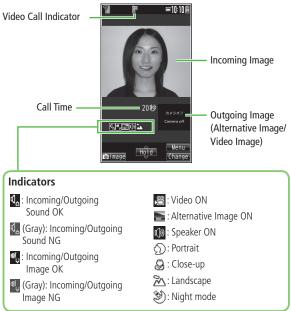

• Image display changes depending on settings.

Making Video Calls

Before Calling

- Confirm signal strength (ピテP.1-8)
- If any of these indicators appear:

 Image: The second s
- 1 Enter a phone number

090XXXXXXX

2 Confirm the number, then ⊡[V. Call]

When answered, outgoing and incoming images appear; other party's voice sounds via Speaker.

- \bullet To adjust volume: \fbox or \blacktriangleright
- 3 💿 to end call

Note

 Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (199.2-12).

- ●Outgoing Call Functions (ピテP.2-3)
- ●Operations Available during a Video Call (ピアP.2-12)
- ●Making Calls from Call Log (ピアP.2-14)
- ●Other Ways to Add New Entries (ピアP.4-5)
- ●Making Calls from Phone Book (ピテP.4-6)
- Settings ●Change Outgoing Alternative Image ●Switch to Voice Call when Video Call Fails (ピP.17-10)

Answering Video Calls

When a Video Call Arrives...

832P rings; Notification Light flashes.

If Caller ID is sent, number appears in Display; if saved in Phone Book, caller's name appears. When an International call arrives, to the sentence appears at upper left of caller's phone number in Display.

2

Call

Alternative Image is sent.

• To send Video Image:

🖮 🖾 image



Hold

t⊙imaqe

2 To end call

Note

● Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (CPP.2-12).

●Adjust Ringer Volume ●Incoming Call Functions (1 ₱ .2-5) ●Operations Available during a Video Call (1 ₱ .2-12)

International Calls

Calling Abroad from Japan

- Application not required. For details, go to: http://mb.softbank.jp/en/global_services/call/
- 1 Enter a phone number
- 2 \mathbf{Y} [Menu] \rightarrow Int'l dial assist Country/region code list appears.
- 3 Select a country/region
- 4 Voice Calls

Video Calls [V. Call]

Enter Country/Region Code Directly

- > O → Press and hold O to display "+ (DD Prefix)" → Enter a country/region code → Enter a number (omit first 0) → Voice Calls: <a href="https://www.collim.coll
- Do not omit leading 0 to call Italy (country code: 39).

Calling while Abroad

 May require application to Global Roaming Service. Download and take Global Roaming Guide when traveling abroad. For details, go to: http://mb.softbank.jp/en/global_services/global_roaming/

Example: Calling Japan from Another Country/Region

- Auto Assist (27P.2-10) is set to ON and Japan (+81) by default.
- Only number starting with **0** is valid.
- 1 Voice Calls

Enter a phone number \rightarrow \frown

Video Calls

Enter a phone number $\rightarrow \square$ [V. Call]

2 Dial

First **0** is replaced by **+81**.

• To call a number just as saved in Phone Book: *Dial with orig.No*.

Calling Other Countries/Regions Using Country/Region Code Follow the same steps as calling abroad from Japan (CPLeft).

Calling within the Same Country/Region

Follow the same steps as making a Voice Call/Video Call within Japan ($\square P.2-2, 2-7$).

Global Roaming Settings

From Main Menu Settings International Call

International Call Settings

>Int'l Dial Assist → Select an item (See below)

Item	Operation/Description
Auto Assist	Replace IDD Prefix with + $> ON$ or OFF (\rightarrow For ON , select a country/region)
Country/ Area Code	 Save up to 27 country/region codes > Highlight <i><not recorded=""></not></i> → ⊠[Edit] → Enter a country/region name → Enter a country/region code To view an entry: Select a saved country/region name To delete: Highlight a country/region name → Try[Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES
IDD Prefix	Edit IDD Prefix. IDD Prefix is set to 0046010 by default $\gg \boxed{\mathbf{x}_{7}}$ [Menu] $\rightarrow Edit \rightarrow$ Edit IDD Prefix

Network Mode

<Default> Automatically

>Select Network → Select an item (See below)

Item	Operation/Description
Automatically	3G/GSM service area in Japan or abroad. 832P selects 3G network in Japan or an available network automatically using area (network condition) abroad.
Manually: 3G/GSM	3G/GSM service area in Japan or abroad. 832P selects an available network using area (network condition).
Manually: 3G	3G service area in Japan or abroad.
Manually: GSM	GSM service area abroad. Unavailable in Japan.
• <i>Automatically</i> is recommended.	

Select Operator

<Default> Auto

> Select Operator → Select an item (See below)

Item	Operation/Description
Auto	Select an operator automatically
Manual	Select an operator manually
	> Select an operator
	 Operators with X are not available.
	 To show operator list: [Update]
Network	Search available networks
Re-search	 When Auto is set, 832P selects an available operator
	automatically. When <i>Manual</i> is set, operator list appears.

Operator Priority for Automatic Search

> *PLMN Setting* \rightarrow **\mathbf{Y}** [Menu] \rightarrow Select an item (See below)

Item	Operation/Description
Add your network	Save currently connected operator $\geq \boxtimes$ [Finish] $\rightarrow YES$
Add from list	 > Select an operator → ● [Set] → Select a network type → ○ [Finish] → YES To search operators by country/region: ○ [Search] → Select a country/region (To search again in country/ region list: ○ [Search] → Enter a country/region name)
Direct input	Save unlisted operators by entering country/region code and operator code > Enter country/region code (3 digits) and operator code (2 to 3 digits) → Select a network type → [E][Finish] → YES
Change priority	> Select a priority $\rightarrow \square$ [Finish] \rightarrow YES
Delete this/ Delete all	$>$ YES $\rightarrow \square$ [Finish] \rightarrow YES

View Operator Name in Standby

<Default> OFF

- > Operator Name -> ON or OFF
- When ON is set, Clock Position is set to Pattern 1 even when Pattern 2 - Pattern 12 is set (⊆P.17-4).

Engaged Call Functions

Operations Available during a Voice Call

Adjust Volume	
	 Adjust volume within two seconds.
	 Adjusted volume is retained even after calls end or
	handset is turned off.
Place Call on	> <a>[Hold]
Hold	• To resume call: 🖍
Speaker	Toggle Speaker or Earpiece
ON/OFF	>~
Record	Record for about three minutes per call
Conversation	> Press and hold • or □ [Rec]
	 To end recording: [Stop], CLR or press and hold
	● To play back recorded data: 🖙 P.2-15
Manner Mode	> Press and hold #
ON/OFF	

Operations Available during a Video Call

Adjust Volume	
	 Adjust volume within two seconds.
	 Adjusted volume is retained even after calls end or
	handset is turned off.
Place Call on	> • [Hold]
Hold	• To resume call: 📶
Speaker ON/	Toggle Speaker or Earpiece
OFF	>~
Record	Record up to five calls for about 20 seconds each
Conversation	> Press and hold 🗹
	• To end recording: • [Stop] or press and hold •
	 To play back recorded data:
Camera/	Toggle Camera Image and Alternative Image
Alternative	>̃™́[⊠image/Subst.]
Image	
Incoming/	Toggle Incoming Image and Outgoing Image
Outgoing	> 🗖 [Change]
Image	
Zoom	> 💽 (zoom in) or 💽 (zoom out)
Toggle Manner	> Press and hold #
Mode	
Backlight	> Yr/[Menu] → Back light → Constant light or
Setting	15 seconds light
Video Call	> $\mathbf{x}_{\mathcal{T}}$ [Menu] \rightarrow V. Call settings \rightarrow Follow the steps
Setting	for selected item (🗁 P.17-11)
LCD AI	Activate/deactivate auto image compensation
	$>$ Y [Menu] \rightarrow <i>LCD AI</i> \rightarrow <i>ON</i> or <i>OFF</i>

Account Details	> [m][Menu] → Account details
Key Guide	> ∑′ [Menu] → <i>Key guide</i>

Call Log

Incoming and outgoing call records appear here. Use these records to call back.

Redial	Up to 30 records of dialed Voice Calls and Video Calls are saved. Older records of same number are deleted.
Outgoing Call Logs	Up to 30 records of dialed Voice Calls and Video Calls, and up to 30 records of 64K data and packet communication are saved. Older records of same number are also retained.
Incoming Call Logs	Up to 30 records of received Voice Calls and Video Calls, and up to 30 records of 64K data communication are saved. Older records of same number are also retained.

Indicators for Redial/Outgoing Call Logs/Incoming Call Logs

► PHONE Dialed/received Voice Calls Z Z MSS * Missed Voice Calls - 64K PHONE Dialed/received Video Calls MSS * Missed Video Calls HE MSG New messages recorded on Answer Phone ► PHONE Dialed/received international Voice Calls **MSS** * Missed international Voice Calls State PHONE Dialed/received international Video Calls Stress * Missed international Video Calls MGN* Calls received while handset is off, out-of-range, engaged, etc. (177-P.2-19)

- Dialed calls of 64K data communication
- K Received calls of 64K data communication
- MSS * Missed calls of 64K data communication
 - Dialed calls of packet communication
- convect Received calls of 64K data/packet communication when no external device is connected
- * Unchecked calls are highlighted.

Viewing Call Logs

Redial



- Outgoing Call Logs
- → Phone Book → Call Log → Outgoing Call Logs

Incoming Call Logs



Records appear.

Select Redial Menu

Redial

5/ 7 10.20 - BPHONE

5/ 7 10:14 ShiratoHanako

AokiTaro 5/710:15 ₌⊞008 SuzukiGoro

V. Call

- View Missed Calls
- > Main Menu > Phone Book > Call Log > Incoming Call Logs
 - Missed Calls
- Unknown Calls appears in Call Log for unchecked calls.

- When handset is closed, missed calls can be checked by ♥ (Info Notice Setting: ピ●P.17-7).
- Newest record appears at top of list. Names appear if saved in Phone Book.
- Call Log records remain even if 832P is turned off.
- When the maximum number of records are saved, oldest is deleted first.
- Incoming Call Logs can also be opened from Main Menu
 - ▶ Phone Book ▶ Call Log ▶ Incoming Call Logs ▶ All Calls

2

Making Calls from Call Log

Voice Calls

Highlight a phone number or name \rightarrow \checkmark

Video Calls

Highlight a phone number or name $\rightarrow \square [V. Call]$

International Calls

Select a phone number or name \rightarrow **Y** [Menu] \rightarrow Int'l dial assist \rightarrow Select a country/region \rightarrow \bigcirc / \boxdot [V. Call]

Functions Available from Call Log

Highlight a call record and press **Y**/[Menu].

• Available functions vary by selected log/record.

ltem	Operation/Description
Notify caller ID	
Prefix	Add a prefix to phone number before dialing
numbers	> Select an entry \rightarrow \frown
Int'l dial	Add international dialing prefix
assist	> Select a country/region \rightarrow
Character size	Toggle font size
Add to	Save number to Phone Book (ピ゚゚ ヺ P.4-5)
Phone Book	
Ring time 1	Show ring time (missed calls)
Add shortcut	Create a shortcut (ピ゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚
icon	
Compose	Create S! Mail
S! Mail	(⊆ From Step 4 on P.13-4)
Compose	Create SMS
SMS ²	(⊆ From Step 4 on P.13-7)
Received	Show Received/Sent address log
address/	
Sent address	
Delete this/	> Delete record(s) in selected list
Delete	
selected/	
Delete all	for Incoming Call Logs

¹ Available only for Incoming Call Logs

² Message can be sent to SoftBank handsets only

Answer Phone

Record up to five voice messages for Voice Calls or up to two for Video Calls (up to 20 seconds per message) on 832P.

- When Answer Phone is active, $\frac{1}{100} \frac{5}{100}$ (Voice Call) or $\frac{1}{100} \frac{3}{100}$ (Video Call) appears in Standby.
- Unavailable when: handset is off or in Emission OFF Mode; 小 appears. Use Voice Mail (CPP.2-18).

Activating/Canceling Answer Phone

<Default> OFF

Press and hold CLR

• To cancel: Press and hold CLR again.



- Redirect a Call to Answer Phone
- > ⊠ [Ans. Ph] or 🔻

Note

- Alternatively, activate/cancel from Main Menu > Tools
 Sound Recorders > Answer Phone Setting > ON or OFF
- When full, new messages cannot be recorded even if Answer Phone is activated. Delete old messages.

Playing Messages

When a new message is recorded, Event Indicator appears (CPP.1-16) in Standby.

- Select indicator
- 2 Select a message
 - Playback starts. After playback ends, indicator disappears.

Note

 Alternatively, press CLR in Standby (for Voice Call messages) or Main Menu ► Tools ► Sound Recorders ► Voice Call Data or Video Call Data ► Select a recording

■ Play Recorded Caller's Voice/Video Main Menu ➤ Tools ➤ Sound Recorders ➤ Voice Call Data or Video Call Data ➤ Call Data



Answer Phone Functions

From Main Menu Tools Sound Recorders

Select Outgoing Message/Set Ring Time

- >Answer Phone Setting $\rightarrow ON \rightarrow$ Select a message \rightarrow Enter ring time
- When Answer Phone and Voice Mail or Call Forwarding are both active, function with shorter ring time takes priority.

For example, if Answer Phone ring time is 18 seconds and Optional Service is 20 seconds, Answer Phone responds first (Priority may change due to signal conditions.).

Delete Recorded Call Data

- > Voice Call Data or Video Call Data → (Highlight an item) → $\boxed{\mathbf{v}}$ [Menu] → Erase this, Erase rec. msg., Erase Call Data^{*} or Erase all → YES
- * Video Call Data only

Optional Services

Overview

 For details, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Call Forwarding (⊂ P.2-17)	Forward unanswerable calls to a preset number when handset is off, out-of-range, etc.
Voice Mail (r͡ᢖP.2-18)	Unanswered calls are forwarded to Voice Mail Center as set or when handset is off, out-of- range, engaged, etc. ● Missed Call Notification (CPP.2-19)
Call Waiting* (┌─͡字P.2-19)	Place the current call on hold and answer a second, or alternate between calls.
Call Barring (⊂ ≱ P.2-20)	 Restrict calls by condition. While Call Forwarding or Voice Mail Service is active, <i>Bar All Outgoing</i> and <i>Bar All Incoming</i> are not available (Call Forwarding or Voice Mail Service is prioritized.).
Caller ID (⊂"₹P.2-21)	Show or hide your number when calling.

* Separate subscription required.

2 Call

Call Forwarding

- Call Forwarding and Voice Mail cannot be set simultaneously.
- When forwarding Video Calls, set a destination phone that supports 3G-324M standard video calls. If not, Video Calls are not forwarded.

Activating Call Forwarding

Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding ► Call Forwarding ON

- 1 Select a type
- 2 Enter a destination phone number
 - \bullet 🚺 to select number from Phone Book.
- 3 Select an item (See below)

Item	Operation/Description
Ringer ON	Forward missed calls
	> Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating
	> YES

Check Call Forwarding Status

> Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding ► Get Status

- Cancel Call Forwarding > Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
 - Deactivate All > YES

- Toll free numbers and international call numbers cannot be saved as a destination number.
- When using Call Forwarding together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal conditions.).
- When *Ringer ON* is set while 832P is ringing/vibrating (within ring time), the following operations are available:
 - $\cdot\,$ To answer call: \frown
 - · To forward call: ∑/[Menu] → Call Forwarding

Voice Mail

• Calls are forwarded to Voice Mail Center via Call Forwarding function; Call Forwarding and Voice Mail cannot be set simultaneously.

Voice Mail is not available for Video Calls.

Activating Voice Mail

Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding ► Voice Mail ON

1 Select an item (See below)

Item	Operation/Description
Ringer ON	Forward missed calls
	> Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating
	> YES

Check Voice Mail Status

Main Menu
 Settings
 Call Settings
 Voice Mail/Call Fwding
 Get Status

Cancel Voice Mail

> Main Menu > Settings > Call Settings > Voice Mail/Call Fwding

► Deactivate All ► YES

Note

- When using Voice Mail together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal conditions.).
- When *Ringer ON* is set while 832P is ringing/vibrating (within ring time), the following operations are available:
 - To answer call:
 - · To forward call: ∑r/[Menu] → Call Forwarding

Checking Voice Mail Messages

Event Indicator (ඌP.1-16) and 🖮 appear in Standby when new messages are recorded.

- \bigcirc → Select indicator → **YES**
- Follow voice guidance.

Indicator and disappear after messages are checked.



View Details

View callers' phone numbers and date/time Voice Mail messages were left before playing messages.

- Activate *Missed Call Notification* beforehand.
- > \bigcirc \rightarrow Voice Mail Notif. \rightarrow \bigcirc [E1416]
- 📕 Delete i Indicator
- > Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
 - Delete Voice Mail Icon > YES

Note

 Alternatively, follow these steps to check Voice Mail: Main Menu > Settings > Call Settings
 Voice Mail/Call Fwding > Listen to Voice Mail > YES

Missed Call Notification

When Missed Call Notification function is active, Event Indicator appears for calls missed while 832P was off, out-of range, engaged etc.

Available only when Voice Mail is active.

Main Menu > Settings > Call Settings > Missed Call Notifi.

YES

832P connects to the Network.

• Follow voice guidance.

When Calls are Received while Missed Call Notification is Active...

Event Indicator appears for missed calls when 832P is turned on or comes into range. Select indicator to view Missed Calls.

 Voice mail indicator appears when Voice Mail messages are recorded (CPP.2-18).

Had incoming call (s)

Call Waiting

Activating/Canceling Call Waiting

Main Menu
Settings
Call Settings
Call Waiting

- Activate or Deactivate → YES Current status appears.
- Check Call Waiting Status
- Main Menu
 Settings
 Call Settings
 Call Waiting
 Get Status

Answering Second Call

- When tone sounds, 🖍
 - 🕝 to alternate between calls.
 - 💿 to disconnect active call.
 - When the party hangs up, active call ends.
 - 🕝 to re-engage the party on hold.
 - When a second call comes in while first call is on hold, hold status is canceled and first call resumes.

Reject Second Call

> When tone sounds, \mathbf{Y} [Menu] \rightarrow Call Rejection

2

Call

- When Voice Mail or Call Forwarding is set to *Ringer ON* while Call Waiting is active, unanswered calls are transferred to Voice Mail Center or the forwarding number.
- When Voice Mail or Call Forwarding is set to *Ringer OFF*, Call Waiting is disabled.

Call Barring

• Security Code is required (
P.1-24).

Activating/Deactivating Call Barring

Main Menu Settings Call Settings Call Barring

Select an item (See below)

Item	Operation/Description
Bar All Outgoing	Restrict all non-emergency calls
Bar All Int'l	Allow only domestic calls
Bar Int'l	Restrict all international calls except to Japan
Bar All Incoming	Reject all calls
Bar All Roaming	Reject calls when outside Japan

2 Activate or Deactivate → YES

3 Enter Security Code

- Check Call Barring Status
- > After Step 1, Get Status
- Cancel All Call Barring
- > In Step 1, *Cancel All Barring* → Enter Security Code
- Change Security Code
- > In Step 1, Set Security Code → Enter current Security Code → Enter new Security Code → Reenter Security Code

- Emergency numbers (110, 119, 118) are dialable even while Call Barring for outgoing calls is active.
- If call is attempted when Call Barring is active, warning message appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.

Caller ID

<Default> Network Set

Main Menu ► Settings ► Call Settings ► Show My Number ► Activate

- 1 ON, OFF or Network Set
 - Network Set Caller ID setting varies by subscription.

Check Caller ID Status

- >Main Menu
 Settings
 Call Settings
 Show My Number
 - Check Setting

Note

 Alternatively, enter these numbers/symbols before the phone number to show or hide Caller ID:

Show: 186 or * 31	#
Hide: 184 or #31	#



Text Entry

Text Entry	3-2
Entering Text	
Entering Characters	
Pictographs & Symbols	3-4
Templates	3-5
Additional Features	3-5
Conversion Methods (Japanese)	3-6
Predictive Conversion	
Converting Hiragana to Katakana/Alphanumerics	3-7
Conversion	3-8
Editing Text	3-9
Deleting & Replacing	3-9
Copy/Cut/Paste	3-9
User's Dictionary	3-10
Saving User's Dictionary Entries	

Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

• Three types of character input methods are available: Mode 1 (5-touch), Mode 2 (2-touch), Mode 3 (NIKO-touch) In this guide, examples are described in Mode 1 (5-touch).

Mode 2 (2-touch)/Mode 3 (NIKO-touch)


Press two numeric keys to enter a character.

● List of Key Assignments (ピアP.18-14 to 16)

📕 Help

Help describes text entry operations.

> In text entry window, \mathbf{Y} [Menu] \rightarrow Help \rightarrow Select an item

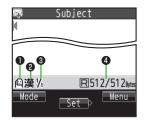

Character Input Methods	Operations
2: Mode 2 (2-touch) ≌: Mode 3 (NIKO-touch)	Press and hold [Mode]
• No icon appears for Mode 1 (5-touch).	
Input Modes*	Operations
abc: Alphanumerics 123: Numbers 漢: Kanji (hiragana) か: Katakana	図[Mode]
Ouble-byte/Single-byte*	Operations
1/1: Double-byte 1/2: Single-byte	Image: Second secon
Remaining/Maximum Bytes in Message	
Depending on functions, number of entered characters may appear.	

* Operations in Mode 3 (NIKO-touch): CPP.18-16

Entering Text

Entering Characters

Example: Enter 鈴木

- In alphanumerics mode, twice to switch to kanji (hiragana) mode
 - す: 3 three times
 - $\vec{\mathfrak{g}}$: $\mathbf{O}^* \rightarrow \mathbf{3}$ three times $\rightarrow \mathbf{X}$
 - き: 2 twice
 - * When the next character is on the same key, press d first to move cursor.
- to enter Predictive Candidates List

I to select 鈴木

- To change word before converting, press CLR.
- There are four types of word suggestion lists: Predictive Candidates, Conversion Candidates, Context Forecast and abc/123/Kana Candidates (CP P.3-6)

翊 鈴木	Subject	
鈴木 すずき 錫 寿	ed. cand. スズキ 鈴城 * 鱸 寿松木 W貴 鋤 涼樹 3 FFB f f b	SUZUKI ZZ [®] ‡
Conv.	⊴ <u>Select</u> ⊳	

すず

Other Input Functions

•		
Enter katakana/	Press 🖾 [Mode] several times to select	
alphanumerics	an input mode → Enter characters	
Enter small kana (つ, ッ, etc.)	 Enter a character → C to convert to small character Alternatively, press a key repeatedly to enter an assigned small kana. 	
Enter upper case characters	 Enter a character → Alternatively, press a key repeatedly to enter an assigned upper case character. 	
Add [°] or [°]	Enter a character to add " or ° →	
Insert line break	Press [Line FD] to insert line breaks in text	
Insert space at end of text		
Insert space within text	Press $\underline{\#}$ repeatedly until single-byte space appears*, or $\underline{\nabla}$ [Menu] \rightarrow <i>Pictograms/symbols</i> \rightarrow <i>Space</i> to enter a space (Double-byte (single-byte) space is entered in 2 bytes (1 byte) input mode.)	
Toggle characters in reverse order	C [Rev] Example: From c, press to toggle as follows: $c \rightarrow b \rightarrow a \rightarrow 2$	
Move cursor to beginning/ end of sentence	Transform [Menu] \rightarrow Jump \rightarrow To beginning or To end	
Undo	🔟 [Undo]	

* Space cannot be entered within text in number mode by following the steps above. Use symbol list.

Pictographs & Symbols

• Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail.

Pictographs

In kanji (hiragana)/katakana/alphanumerics mode, 🗶 SoftBank pictograph list appears.

Symbols

Press and hold # Single-byte symbol list appears.



1

- ito select a pictograph or symbol
- Symbol List: 🖙 P.18-17

Note

• Alternatively, follow the steps to access pictograph or symbol:

 $\underline{\mathbf{Y}}$ [Menu] \rightarrow *Pictograms/symbols*

• List Log may appear first.

Entering Cross-carrier Pictographs

Press 🗃 or 🗖 to toggle lists (Universal pictograph list, Log, Full pictograph list and My Pictograms).

Functions Available in Pictograph/Symbol List

Enter same pictograph or symbol again	⊠[Cont.]
Toggle pictograph/symbol list	<u>ع</u> ر[Pict./Symbol]
Jump to previous/next page	
Toggle full screen/standard screen	
Toggle double/single-byte symbol and log [symbol list only]	 ▲ [1byte/2bytes/Log] ▲ ★ to toggle in reverse
Toggle pictograph lists [pictograph list only]	 [Univrsl. ¹/Full/ My Pict. ²/Log] to toggle in reverse
Close list	CLR

¹ In S! Mail Subject/Text/Signature field or Subject field for Auto-sort Setting only

² In S! Mail Text field only

Templates

Insert templates (greetings, URLs, emoticons) or edit preinstalled templates.

Inserting Templates

- 1 In text entry window, press and hold *
 - Not available in number mode.
- 2 Select a category \rightarrow Select a template

Note

Alternatively, in text entry window, ∑r[Menu] → Input assistance
 → Templates to enter a template

Editing Templates

Main Menu
Tools
Templates/Users Dic.
Templates

- 1 Select a category
- **2** Highlight a template $\rightarrow \square$ [Edit] \rightarrow Edit template

Reset Edited Templates

> After Step 1, (highlight a template →) ∑ [Menu] → Reset this or Reset all (→ For Reset all, enter Phone Password) → YES

Manage Template Folders

- > In Step 1, highlight a category \rightarrow \fbox [Menu] \rightarrow *Edit folder name* \rightarrow Edit folder name
- To reset folder name, *Y* [Menu] → *Reset name* → *YES*

Additional Features

- In text entry window, \mathbf{Y} [Menu] \rightarrow Input assistance
- Select an item (See below)

ltem	Operation/Description
Kuten Code	Enter a character code (C → P.18-18) > Enter a character code (4 digits)
Input date/ time	Select a style to enter date/time > Select a display style \rightarrow Enter date/time
Quote phone book	Quote Phone Book entry detail > Select an entry \rightarrow Check item(s) to quote \rightarrow [Finish]
Quote accnt detls	Quote Account Details > Enter Phone Password \rightarrow Check item(s) to quote \rightarrow [Finish]
Bar code reader	Activate Bar Code Reader to insert scanned result (13-P.12-12)

Conversion Methods (Japanese)

Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

While	Predictive Candidates	Predictive Candidates: わ → 私, わたし, etc.
Entering Text	Conversion Candidates	Conversion Candidates: わ → 和, 輪, etc. Suggests matching conversions Example: わ → 和, 輪, etc.
kana '		Lists alphanumerics/katakana assigned to key (🖆 P.3-7)
After a Word is Fixed	Context Forecast	Suggests words likely to follow Example: 私 is fixed → です, の, は, etc.

- Predictions change with each letter entered.
- Press [Pred.]/[Conv.] to toggle Predictive Candidates List and Conversion Candidates List.

Note

• 832P learns entered characters and suggests them for future conversions (┌/̄͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡͡ː (┌̄͡͡͡͡͡͡͡͡͡ː̄̄̄̄̄̄̄̄̄̄).

Example: Enter 私の鼻

- In kanji (hiragana) mode, 🔘 1 わ is entered and Predictive Candidates List appears.
- to move to Predictive 2 Candidates List \rightarrow **T** to select Λ 秋 is entered and Context Forecast List appears.
- 3 to move to Context Forecast List \rightarrow **X** to select \mathcal{O} \mathcal{O} is entered and Context Forecast List appears.
 - 6 **→** 5

4

はな is entered and Predictive Candidates List appears.

⊠ [Conv.] 5

Conversion Candidates List appears.



私囫	
Context forecast は 遼 達 自身 だけ でも しか に 。 ? が を です と です !?!! - ~ … ♪ か だ ね よ だけど 的 ですか でしょう	5`! วて
Prev.	Next





If the Word is Not Listed

Press CLR to return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

① Move cursor to る, then convert はる to 春 \rightarrow ●

② Convert か to 香 → ●

Using Previously Entered Words

Enter the first one or two hiragana to access previously entered words in the list.

Converting Hiragana to Katakana/ Alphanumerics

Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

Example 1: Enter OK

Step	1	2	3	4
Кеу	6 (3 times)	5 (twice)	עז [a1Kana]	
Display	ßı	ふに	abc/123/Kana Candidates	ОК

• Press • after highlighting **OK**.

Example 2: Enter 10:30 or 10/30

Step	1	2	3
Кеу	1030	[a1Kana]	X
Display	あわさわ	abc/123/Kana Candidates	10:30 or 10/30

• Press • after highlighting 10:30 or 10/30.

Conversion

- In text entry window, ∑ [Menu] → Text entry setting → Learned words
- 2 Select a row \rightarrow Select a log

Delete Learned Words

> In Step 2, (highlight a log →) [v][Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES

Settings Oset Learning Feature Off for Secret Mode/Secret Data Only Delete All Learned Words (2.7.9)

Activating/Canceling Prediction List

<Default> ON

In text entry window, ∑?[Menu] → *Text entry setting*

2 Select an item (See below)

ltem	Operation/Description	
Predict	Activate/cancel Predictive Candidates and Context Forecast lists.	
Candidate display	Activate/cancel Context Forecast list.	
2/NIKO-touch guide	Activate/cancel Conversion Candidates guidance for 2/NIKO-touch input method.	

3 ON or OFF

Fixing Entered Characters Automatically

<Default> ON

Fix character in Mode 1 (5-touch) automatically after specified time elapses.

- 1 In text entry window, ∑ [Menu] → *Text entry setting*
- 2 Character set time → Select a speed

Editing Text

Deleting & Replacing

Delete Characters within Lines

Place cursor before a character \rightarrow CLR A character after cursor is deleted.

• Press and hold CLR to delete all characters after cursor.

Delete Characters from the End of Text

Place cursor at the end of text \rightarrow CLR

A character before cursor is deleted.

• Press and hold **CLR** to delete all characters before cursor.

 
2 Enter another character

Copy/Cut/Paste

Copy/cut text (up to 5000 double-byte/10000 single-byte) and paste to another place.

1 In text entry window, \mathbf{Y} [Menu] \rightarrow Copy or Cut

2 Select Text to Copy/Cut



Select All

$\underline{\mathbf{Y}}^{\prime}[\mathsf{AII}] \rightarrow \textcircled{}[\mathsf{End}]$

3 Place cursor at target location $\rightarrow \mathbf{\overline{rr}}$ [Menu] $\rightarrow Paste$

User's Dictionary

Save frequently used words/phrases (up to 100 entries). Saved words/phrases appear among word suggestions.

Saving User's Dictionary Entries

- 1 In text entry window, ∑?[Menu] → *Text entry setting* → *User's Dictionary*
- 2 <New>
- **3** Enter a word \rightarrow Enter reading

Edit User's Dictionary Entries > After Step 1, highlight a word $\rightarrow \boxtimes$ [Edit] \rightarrow Edit word \rightarrow Edit reading

Delete User's Dictionary Entries

>After Step 1, [x][Menu] → Delete → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES

Note

Alternatively, Main Menu > Tools > Templates/Users Dic.
 > User's Dictionary

Phone Book

Saving to Phone Book4-3Phone Book Entry Items4-3Create New Entry4-3Other Ways to Add New Entries4-5Setting Groups4-6Searching/Using Phone Book4-6Making Calls from Phone Book4-7Managing Phone Book4-9Editing Phone Book Entries4-9Deleting Phone Book Entries4-9Phone Book Kentries4-9Phone Book Entries4-9Copying/Deleting Phone Book Data4-10S! Addressbook Back-up4-10Manual Synchronization4-11Auto Synchronization4-12Viewing Sync Log4-13Editing Account Details4-13Account Details Functions4-13Voice Dial4-14Adding Entries to Voice Dial4-14Searching Entries by Voice Dial4-14	Overview	
Create New Entry4-3Other Ways to Add New Entries4-5Setting Groups4-6Searching/Using Phone Book4-6Making Calls from Phone Book4-7Managing Phone Book4-7Managing Phone Book4-9Editing Phone Book Entries4-9Deleting Phone Book Entries4-9Copying/Deleting Phone Book Data4-9Phone Book Memory Status4-10S! Addressbook Back-up4-10Manual Synchronization4-11Auto Synchronization4-12Viewing Sync Log4-13Editing Account Details4-13Account Details Functions4-13Voice Dial4-14Adding Entries to Voice Dial4-14	Saving to Phone Book	4-3
Other Ways to Add New Entries4-5Setting Groups4-6Searching/Using Phone Book4-6Making Calls from Phone Book4-7Managing Phone Book4-7Managing Phone Book4-9Editing Phone Book Entries4-9Deleting Phone Book Entries4-9Copying/Deleting Phone Book Data4-9Phone Book Memory Status4-10S! Addressbook Back-up4-10Manual Synchronization4-11Auto Synchronization4-12Viewing Sync Log4-13Editing Account Details4-13Account Details Functions4-13Voice Dial4-14Adding Entries to Voice Dial4-14	Phone Book Entry Items	4-3
Setting Groups4-6Searching/Using Phone Book4-6Making Calls from Phone Book4-6Using Phone Book4-7Managing Phone Book4-9Editing Phone Book Entries4-9Deleting Phone Book Entries4-9Copying/Deleting Phone Book Data4-9Phone Book Memory Status4-10S! Addressbook Back-up4-10Manual Synchronization4-11Auto Synchronization4-12Viewing Sync Log4-13Editing Account Details4-13Account Details Functions4-13Voice Dial4-14Adding Entries to Voice Dial4-14	Create New Entry	4-3
Searching/Using Phone Book4-6Making Calls from Phone Book4-6Using Phone Book4-7Managing Phone Book4-9Editing Phone Book Entries4-9Deleting Phone Book Entries4-9Copying/Deleting Phone Book Data4-9Phone Book Memory Status4-10S! Addressbook Back-up4-10Manual Synchronization4-11Auto Synchronization4-12Viewing Sync Log4-13Editing Account Details4-13Account Details Functions4-13Voice Dial4-14Adding Entries to Voice Dial4-14	Other Ways to Add New Entries	4-5
Making Calls from Phone Book 4-6 Using Phone Book 4-7 Managing Phone Book 4-9 Editing Phone Book Entries 4-9 Deleting Phone Book Entries 4-9 Copying/Deleting Phone Book Data 4-9 Phone Book Memory Status 4-10 S! Addressbook Back-up 4-10 Manual Synchronization 4-11 Auto Synchronization 4-12 Viewing Sync Log 4-13 Editing Account Details 4-13 Account Details Functions 4-13 Voice Dial 4-14	Setting Groups	4-6
Making Calls from Phone Book 4-6 Using Phone Book 4-7 Managing Phone Book 4-9 Editing Phone Book Entries 4-9 Deleting Phone Book Entries 4-9 Copying/Deleting Phone Book Data 4-9 Phone Book Memory Status 4-10 S! Addressbook Back-up 4-10 Manual Synchronization 4-11 Auto Synchronization 4-12 Viewing Sync Log 4-13 Editing Account Details 4-13 Account Details Functions 4-13 Voice Dial 4-14	Searching/Using Phone Book	
Managing Phone Book4-9Editing Phone Book Entries4-9Deleting Phone Book Entries4-9Copying/Deleting Phone Book Data4-9Phone Book Memory Status4-10S! Addressbook Back-up4-10Manual Synchronization4-11Auto Synchronization4-12Viewing Sync Log4-13Editing Account Details4-13Account Details Functions4-13Voice Dial4-14Adding Entries to Voice Dial4-14		
Managing Phone Book4-9Editing Phone Book Entries4-9Deleting Phone Book Entries4-9Copying/Deleting Phone Book Data4-9Phone Book Memory Status4-10S! Addressbook Back-up4-10Manual Synchronization4-11Auto Synchronization4-12Viewing Sync Log4-13Editing Account Details4-13Account Details Functions4-13Voice Dial4-14Adding Entries to Voice Dial4-14	Using Phone Book	4-7
Editing Phone Book Entries 4-9 Deleting Phone Book Entries 4-9 Copying/Deleting Phone Book Data 4-9 Phone Book Memory Status 4-10 S! Addressbook Back-up 4-10 Manual Synchronization 4-11 Auto Synchronization 4-12 Viewing Sync Log 4-13 Editing Account Details 4-13 Account Details Functions 4-13 Voice Dial 4-14	-	
Copying/Deleting Phone Book Data4-9Phone Book Memory Status4-10S! Addressbook Back-up4-10Manual Synchronization4-11Auto Synchronization4-12Viewing Sync Log4-12Account Details4-13Editing Account Details4-13Account Details Functions4-13Voice Dial4-14Adding Entries to Voice Dial4-14		
Copying/Deleting Phone Book Data4-9Phone Book Memory Status4-10S! Addressbook Back-up4-10Manual Synchronization4-11Auto Synchronization4-12Viewing Sync Log4-12Account Details4-13Editing Account Details4-13Account Details Functions4-13Voice Dial4-14Adding Entries to Voice Dial4-14	Deleting Phone Book Entries	4-9
Phone Book Memory Status 4-10 S! Addressbook Back-up 4-10 Manual Synchronization 4-11 Auto Synchronization 4-12 Viewing Sync Log 4-12 Account Details 4-13 Editing Account Details 4-13 Account Details Functions 4-13 Voice Dial 4-14 Adding Entries to Voice Dial 4-14	-	
Manual Synchronization 4-11 Auto Synchronization 4-12 Viewing Sync Log 4-12 Account Details 4-13 Editing Account Details 4-13 Account Details Functions 4-13 Voice Dial 4-14 Adding Entries to Voice Dial 4-14		
Manual Synchronization 4-11 Auto Synchronization 4-12 Viewing Sync Log 4-12 Account Details 4-13 Editing Account Details 4-13 Account Details Functions 4-13 Voice Dial 4-14 Adding Entries to Voice Dial 4-14	S! Addressbook Back-up	
Viewing Sync Log		
Viewing Sync Log	Auto Synchronization	4-12
Account Details 4-13 Editing Account Details 4-13 Account Details Functions 4-13 Voice Dial 4-14 Adding Entries to Voice Dial 4-14		
Editing Account Details		
Account Details Functions4-13 Voice Dial4-14 Adding Entries to Voice Dial4-14		
Voice Dial		
Adding Entries to Voice Dial4-14		

Overview

Save frequently used phone numbers and mail addresses to Phone Book.



Note

• Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect data recovery. SoftBank is not liable for damages from lost/altered entries.

Phone Book Memory Status (1) P.4-10)
 Backing up to microSD Card (1) P.9-18)

4-3

Saving to Phone Book

Phone Book Entry Items

Save up to 1000 entries in Phone Book. Save phone numbers or mail addresses etc. in USIM Card Phone Book.

• Savable number of entries varies by USIM Card.

	Phone Book Entry Items	832P	USIM Card	
Bas	Name (Reading)	0	0	
Basic item	Group	19	10	
em	Phone number	4	2	
	Mail address	3	1	
	Address	0	×	
	Birthday	0	×	
	Memo	0	×	
	Image	100	×	
	Memory number	000 - 999	×	
Inco	Ringtone			
mi.	Vibrator			
Incoming Settings	Notification Light			
etti	Screen	\bigcirc	×	
sbu	Msg Ringtone	0	^	
	Msg Vibrator			
	Msg Notif. Light			
	Answer message			

 \bigcirc : Can be saved \times : Cannot be saved

• Phone Book entries in USIM Card can also be used in another SoftBank handset.

Create New Entry

Save new entries to 832P or USIM Card Phone Book.

- When saving to USIM Card Phone Book, set Save Settings to USIM or Ask Every Time beforehand (CPP.17-10).
 - Press and hold 🞑

1

- 2 Enter Last name → Enter First name
 - For 832P Phone Book, 🖂 to switch Basic item and Incoming Settings tabs.

Add to Phone Bo	ok
Basic Item Incoming Se	ettings
FX Aok i	
NTaro	
RAoki	
R Taro	
⊡ <group></group>	
<pre>☎<phone number=""></phone></pre>	
⊠ <mail address=""></mail>	
₽ <address></address>	
≝ <birthday></birthday>	
ı∎ <memo></memo>	
⊠ <image/>	
N0020	
Finish <u>Select</u>	

832P Phone Book

3 Select an item (See below)

Item	Operation/Description
Name	Save first and last names separately. For USIM Card, enter
(First/Last)	both names together
	> Enter name
Reading	Save first and last name readings separately. For USIM
(First/Last)	Card, enter both readings together
	> Enter reading
Group	> Select a group
Phone	> Enter phone number (\rightarrow For 832P, select an icon)
number	
Mail address	> Enter mail address (\rightarrow For 832P, select an icon)
	 Save only phone number if mail address is "phone
	number@softbank.ne.jp".
Address	> Enter zip code \rightarrow Enter address
Birthday	> Enter birthday
Memo	>Enter memo
Image	Save a still image to appear for incoming calls
	> Select an item
	· Select image \rightarrow Select a folder \rightarrow Select a file
	 Shoot image → Capture still images (L[*]Step 2 to 4 on P.6-5)
	 Saved still image appears for an incoming call only when
	Phone Book Image (⊆P .17-6) is ON . If there is an
	image saved for <i>Screen</i> , the image preferentially appears.
Memory	> Enter memory number
number	· · · · · · · · · · · · · · · · · · ·
Ring tone	> <i>Ring Tones</i> → Select a type → Select a folder →
-	Select a ringtone
Vibrator	> Select vibrator → Select a pattern

ltem	Operation/Description
Notification	> Select illumination → Select a pattern
Light	
Screen*	$>$ SEL picture \rightarrow Select a screen type \rightarrow Select a folder
	→ Select an image
	• Still image saved for <i>Screen</i> appears for an incoming
	call whether Phone Book Image is ON or OFF .
	Phone Book Image setting applies only when still
	image is saved for <i>Image</i> .
Msg Ringtone	> <i>Ring Tones</i> → Select a type → Select a folder →
	Select a ringtone
Msg Vibrator	> Select vibrator → Select a pattern
Msg Notif.	> Select illumination → Select a pattern
Light	
Answer	> Select answer message → Select a message
message	

* To cancel: Select **RLS picture**



Other Ways to Add New Entries

Save currently displayed phone numbers, mail addresses or still images to Phone Book.

Example: Saving Numbers from Incoming Call Logs

1 $\square \rightarrow$ Highlight a record $\rightarrow \boxed{27}$ [Menu] \rightarrow Add to Phone Book

2 New Entry

New → Enter details (⊂ From Step 3 on P.4-4)

Add to Existing Entry

```
Add → Select entry → Enter other details
(CrStep 3 on P.4-4)
```

- When saving to USIM Card, *Overwrite* appears instead of *Add*.
- 3 When complete, \square [Finish] \rightarrow YES

Note

- Press ∑[Menu] from a function. If Add to Phone Book appears, the information is savable to Phone Book. From a text message window, select Add Address to save entries; from still image list/still image, select Set display → Phone Book to save entries.
- When adding still images, entries are saved to handset regardless of Save Settings.
- When saving new entries in Secret Mode or Secret Data Only, entries are saved to handset regardless of Save Settings.

Setting Groups

Sort entries by Group. Custom set ringtones/vibrators/ notifications per group.

Main Menu Phone Book

- 📓 appears for USIM Card Group.
- Highlight a group $\rightarrow \boxdot$ [Edit] \rightarrow Select an item \rightarrow Set item
 - Enter group name for " 🖸 Group name."
 - For other item operations: P.4-4
 Custom settings unavailable for USIM Card Groups.
- 2 When complete, 🖾 [Finish]

Check Settings

- > Select a group entry, or \mathbf{Y} [Menu] \rightarrow Check setting
- Settings cannot be checked in USIM Card Group Phone Book.

Reset Group Setting

> Highlight a group $\rightarrow \overline{\mathbf{vr}}$ [Menu] \rightarrow Reset group \rightarrow YES

Searching/Using Phone Book

Making Calls from Phone Book

<Default> A-KA-SA-TA-NA



1

- 2 Search Phone Book (See below)
 - To change search method: CLR → Select a search method (See below)

Search Method	Operation/Description
A-KA-SA-TA-	Search entries by katakana syllabary. Names saved in
NA	Roman characters are saved under the 英 tab.
Reading	> Enter partial reading $\rightarrow \boxed{\square}$
Group	> Select a group
Memory	Enter memory (entry) number to search for an entry
Number*	>Enter a memory number
Name	>Enter partial name \rightarrow
Phone	> Enter partial phone number \rightarrow
Number	· · · <u>—</u>
Mail Address	>Enter partial mail address \rightarrow
2-touch Dial*	Show entries with memory (entry) numbers 000 - 009
* 832P Phone Book only	

3 Select an entry



4 Phone Book

5 Voice Calls

Highlight a phone number \rightarrow \frown

Video Calls

Highlight a phone number $\rightarrow \square[V. Call]$

Note

- To scroll through entries, enter nothing and press (not available in *Group* or *2-touch Dial*).
- If no matches are found in *Reading* or *Memory Number* method, entries closest to condition appear.
- Once a method is selected, same method retains.

Additional Search/Dialing Methods

Open Tab Assigned to Key from Standby	Press and hold \bigcirc – \bigcirc Open search window assigned to key.
Enter Partial Number from Standby or during Call	Enter partial number $\rightarrow \boxed{2}$
By Memory Number	\frown \rightarrow \Box \rightarrow Enter a memory number
By Single-digit Memory Number (2-touch Dial)	Enter last digit (\bigcirc – \bigcirc) of memory number 000-009 \rightarrow \frown / \bigcirc [Dial] (\boxdot [V. Call] for Video Calls)

Using Phone Book

Use Phone Book Entries

> \bigcirc → Highlight an entry → $\boxed{\mathbf{Y}}$ [Menu] → Select an item (See below)

Item	Operation/Description
New	Add a new entry (
Sort	Change display order > Select an order ● Available only when search method (C⇒P.4-6) is Name, Phone Number or Mail Address.
Send Ir data*	(⊆7 P.10-3)
IC transmission*	(Ľ ≇P.10-5)
Copy to microSD*	Copy an entry to microSD Card > YES ● To display copied data: CᢖP.9-17
Delete phone book	> Select an item \rightarrow Follow steps for selected option (\square P.4-9)
Character size	Switch character size to large/standard
Set secret mode/ Release secret*	Set/cancel Secret Mode for selected entry ● Entries saved as secret data appear only when Secret Mode or Secret Data Only is active (□P.11-9).

* Not available in USIM Card Phone Book

■ Use Entry Details > \bigcirc → Select an entry → $\boxed{\mathbf{vr}}$ [Menu] → Select an item (See below)

ltem	Operation/Description
Notify caller ID	Show/hide caller ID (CFP.2-3)
Prefix numbers	Make a call using a prefix number (ピ͡ᢖP.2-3)
Int'l dial assist	Set International dial assist (ピ≇P.2-10)
Restrictions*	Activate restrictions on specified entry (P.11-10)
Edit Phone Book	Edit entry (CFFrom Step 3 on P.4-4)
Delete phone book	 > Phone number or Delete this → YES Item names vary by selected item: Mail address/Address/Birthday/Memo/Image
Add shortcut icon	Create a shortcut (C=P.1-17)
Compose S! Mail	Create a message to mail address of selected entry (CFFrom Step 4 on P.13-4)
Compose SMS	Create an SMS message to phone number of selected entry (☞From Step 4 on P.13-7) ● Message can be sent to SoftBank handsets only.
Send Ir data*	(⊆7 P.10-3)
IC transmission*	(Ľ ᢖP.10-5)
Copy to microSD*	Copy an entry to microSD Card > YES ● To display copied data: C₽P.9-17
Copy names	Copy a name

Item	Operation/Description
Copy phone	Copy an item
numbers	 Item names vary by selected item.
	Copy mail add./Copy address/Copy birthday/
	Copy memo
Character	Switch character size to large/standard
size	
Set secret	Set/cancel Secret Mode for selected entry
mode/	 Entries saved as secret data appear only when
Release	Secret Mode or Secret Data Only is active
secret*	(⊑ ≇P.11-9).
Copy to USIM/	Copy an entry to USIM Card
Copy from	> YES
USIM	

* Not available in USIM Card Phone Book

Note

• Insert entry details to a message (r = P.3-5).

Managing Phone Book

Editing Phone Book Entries

- \bigcirc \rightarrow Select an entry \rightarrow 🛅 [Edit]
- 2 Edit (C≇From Step 3 on P.4-4) → YES

Deleting Phone Book Entries

- $1 \quad \bigcirc \rightarrow \text{Highlight an entry} \rightarrow \forall pelete phone book$
- 2 Select an item (See below)

ltem	Operation/Description
Delete this	> YES
Delete select	 > Check entries to delete → ☑[Finish] → YES ∑['][Menu] → Select all in tab[*], Select all, Release all in tab[*] or Release all to check/uncheck all entries at a time
Delete all in tab*	> YES
Delete all	Delete all entries (832P/USIM Card Phone Book) including Secret Mode entries > Enter Phone Password → YES → YES
* Augilahla in A	KA-SA-TA-NA Reading Group and Memory Number

* Available in A-KA-SA-TA-NA, Reading, Group and Memory Number search methods (☐P.4-6)

Copying/Deleting Phone Book Data

Main Menu > Phone Book > Memory Manager

- 1 Enter Phone Password
- 2 Select an item (See below)

ltem	Operation/Description
Сору	Copy data between 832P/USIM Card Phone Book > Copy to USIM or Copy from USIM
Delete	Delete data in 832P/USIM Card Phone Book > Phone or USIM

3 *Phone Book* \rightarrow Select an entry*

* To clear, repeat operation.

$4 \quad \boxtimes [Finish] \rightarrow YES$

Phone Book Memory Status

Main Menu
Phone Book
Memory Status

View 832P/USIM Card Phone Book memory status.

S! Addressbook Back-up

Back up Phone Book entries to S! Addressbook (network server); synchronize 832P Phone Book with S! Addressbook; restore Phone Book after accidental loss/alteration.

• Separate subscription is required for this service.

Notes

- Fully charge battery beforehand (🗐 appears).
- Transmission fees apply to synchronization, backup and restoration.
- Restoration cancels these Phone Book settings: Ringtone, Vibrator, Notification Light, Picture, Answer message.
- S! Addressbook is deleted upon contract termination.
- Addresses saved in Address field on 832P Phone Book are saved to building name field in S! Addressbook.
- When number of characters saved in S! Addressbook exceeds maximum number of characters savable on 832P Phone Book, excess characters do not appear on 832P Phone Book.

Synchronization/Back-up/Restoration

- Be careful of back-up/restoration timing or selecting a synchronization direction.
- When no 832P Phone Book entries exist, selecting Synchronize, Sync from Phone or Backup to Server deletes S! Addressbook.
- When no SI Addressbook entries exist, selecting Synchronize, Sync from Server or Restore from Server deletes all 832P Phone Book entries.

Capacity Disparities

• When the number of savable items varies between 832P Phone Book and S! Addressbook, synchronization reflects lower limit.

Transfer to New Handsets

- S! Addressbook Back-up-compatible 3G Handsets: Data remains.
- Other 3G Handsets: Service subscription and data remains, but data is not accessible via handset (accessible via PCs).
- V3/V4/V5/V6/V8 Series: Service subscription is terminated and data is deleted.

Manual Synchronization

Main Menu ► Phone Book ► S! Addressbook BkUp ► Start Sync

YES → Enter Phone Password

Select an item (See below)

Item	Operation/Description
Synchronize	Synchronize 832P Phone Book with S! Addressbook
Sync from	Send edited data to S! Addressbook
Phone	
Sync from	Receive edited data from S! Addressbook
Server	
Backup to	Back up 832P Phone Book to S! Addressbook
Server	
Restore from	Restore S! Addressbook to 832P Phone Book
Server	

$3 YES \to OK$

Auto Synchronization

Main Menu ► Phone Book ► S! Addressbook BkUp ► Auto Sync Settings ► ON/OFF

1

- Enter Phone Password → ON
 - To cancel, select **OFF**
- Select an item (See below)

Item	Operation/Description	
Every week	Synchronize weekly at specified time of the day $>$ Select a day \rightarrow Set start time \rightarrow Select a sync type	
Every month	Synchronize monthly at specified time of the date $>$ Enter a date \rightarrow Set start time \rightarrow Select a sync type	
After Editing PB	Synchronize ten minutes after entries are edited > Select a sync type	

3 YES

View Auto Sync Settings

> Main Menu > Phone Book > S! Addressbook BkUp

Auto Sync Settings Confirm Settings

Viewing Sync Log

View synchronization/back-up/restoration logs.

Main Menu ► Phone Book ► S! Addressbook BkUp ► Sync Log

Select a log

Delete Sync Log

> In Step 1, (highlight a log →) [v][Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES

4 Phone Book

Account Details

Save phone number, mail address, street address, etc. in Account Details.

Editing Account Details

- $\bullet \rightarrow 0$
- 2 [Edit] → Enter Phone Password
- 3 Edit $\rightarrow \square$ [Finish]
 - Your subscribing phone number cannot be edited or deleted.

Account Details Functions

In Account Details, press **Y**/[Menu] for following operations.

Item	Operation/Description
Edit*	> Edit Account Details (
Character size	Switch character size to large/standard
Display all data*	View all saved items such as phone numbers and mail addresses
Copy names	Copy a name
Copy phone numbers	Copy an item • Item names vary by selected item. Copy mail add./Copy address/Copy birthday/ Copy notepad

Item	Operation/Description
Send Ir data	Send details via Infrared (27P.10-3)
	 Alternatively, while Account Details is open, press [Ir].
IC	Send details via IC transmission (CPP.10-5)
transmission	 Alternatively, while Account Details is open, press [i][ICtrans].
Copy to	Copy details to microSD Card
microSD	> YES
	 To display copied data:
	 Account Details is saved as a Phone Book entry.
Erase phone	> Select an item → YES
number*	 Delete items saved in Account Details
	 Item names vary by selected item.
	Erase mail add./Erase address/Erase birthday/
	Erase memorandums/Delete image
Reset*	Reset all Account Details except your subscribing phone
	number
	> YES

* Enter Phone Password if required.

Note

• Quote a content from Account Details to a message ($\square P.3-5$).

Voice Dial

Make a call by saying a voice dial name.

Note

- Keep microphone about 10 cm away from your mouth, and pronounce a Voice Dial name clearly. If microphone is too distant, your voice may not be recognized.
- Avoid making sounds unrelated to Voice Dial names (clearing your throat, clicking your tongue, heavy breathing, etc.).
- Say Voice Dial names in quiet places.
- Avoid pressing or brushing keys, or covering microphone with fingers when pronouncing a Voice Dial name.

Adding Entries to Voice Dial

Main Menu Phone Book Settings Voice Dial

- <**New>** → Select a Phone Book entry Entries with \bigstar are already saved in Voice Dial list.
- Enter a Voice Dial name 2
 - Only katakana entry is available for Voice Dial names.

Edit Voice Dial Names

> In Step 1, highlight a Voice Dial name $\rightarrow \square$ [Edit] \rightarrow Edit name \rightarrow YES

Delete Voice Dial Entries

> In Step 1, (highlight a Voice Dial name \rightarrow) **Y** [Menu] \rightarrow Delete this or Delete all -> YES

Searching Entries by Voice Dial

Press and hold \frown \rightarrow Say a Voice Dial name

Say the name within four seconds after voice recognition tone sounds. Once Voice Dial is recognized, result appears.

 \square [Detail] \rightarrow \square to show phone number 2

Voice Calls 3

Highlight phone number \rightarrow \frown or \bigcirc [Dial]

Video Calls

Highlight phone number $\rightarrow \square$ [V. Call]



Settings ●Activate Voice Dial Automatically (1/2) P.17-10)

Digital TV

Basics	5-2
Initial Setup	5-4
Channel Settings	
Watching TV	5-5
Indicators	5-6
Operations while Viewing TV	5-7
Program Guide	5-7
Data Broadcast (Japanese)	5-7
Functions while Viewing TV	5-8
TV Links (Japanese)	5-10
Saving TV Links	
Opening TV Links	
Functions Available in TV Link List	5-11
Recording/Playing Programs	5-11
Recording Current Program	
Capturing Screenshots	5-12
Playing Recorded Programs	
Viewing Captured Screenshots	
Timer	

Basics

832P supports One Seg terrestrial digital TV broadcasting.

One Seg

One Seg is a digital TV broadcasting service for mobile phones. For more information, visit The Association for Promotion of Digital Broadcasting Website:

[PC] http://www.dpa.or.jp/ [Handset] http://www.dpa.or.jp/1seg/k/

(Japanese only)

Features

Watch TV Programs (ピテP.5-5)	Watch One Seg Digital TV on handset.
View Data Broadcast (ピ⊋P.5-7)	Access a variety of program-related information.
Record TV Programs (┌─͡ᢖP.5-11)	Record program/capture still image while watching the program.
Set Timer (┌─╤P.5-13)	Use Timer to view/record programs. You can easily set Timer by using Program Guide (

Mobile W-Speed

Frame rate of Digital TV images are automatically enhanced. Enjoy smooth image flow (\Box P.17-11).

- Mobile W-Speed is set to **OFF** by default.
- When this function is set to ON, full effect of Image Quality may not be achieved.
- Depending on broadcasting condition, full effect of this function may not be achieved.
- Disabled during ECO Mode (
- Disabled for playing back videos recorded with Mobile W-Speed set to **ON**.

Precautions

- Digital TV is available only in Japan.
- Incoming calls/messages may affect TV image or audio quality while TV is activated.
- Digital TV may be disabled if USIM Card is not installed or SoftBank subscription is terminated.
- SoftBank is not liable for damages from accidental loss/alteration of handset/microSD Card information.

Data saved to handset (TV Links, Channel List, etc.) cannot be restored after repairs or handset replacement. Back up important information.

Signal Reception Areas

TV signal reception may be poor in the following conditions:

- Too far from or close to broadcasting stations.
- Mountain areas or near tall buildings.
- In moving vehicles, underground, in tunnels, etc.
- Near high-voltage wires, neon lights, wireless base stations, railroad tracks or highways.
- Areas with numerous signal obstructions or areas where signal reception is blocked.

When Battery is Running Out

- Warning tone sounds and warning message appears if Digital TV is activated with low battery.
- When battery runs low while programs are on or being recorded, handset operates as follows:
 - \cdot While Viewing

Warning tone sounds, and confirmation appears.

· While Recording

Response differs depending on *Rec. When Low Battery* (CP: 17-11) setting.

Continue Recording ... Warning tone does not sound and confirmation does not appear.

Stop Recording ... Warning tone sounds and confirmation appears.

- Watching TV while charging may shorten battery life.
- If recording ends due to low battery, recorded portion is automatically saved.

Incoming Transmissions

TV pauses for incoming calls. Resume TV after call ends.

• Incoming calls do not interfere with recording.

●Use Other Functions while Viewing TV (ピア.5-8)

Initial Setup

Set channels for your area.

• Up to ten Channel Lists can be saved.

Main Menu > TV > Channel Setting > Select Area

Select a region \rightarrow Select a prefecture

YES

Note

- 832P detects a change in reception area after moving to a different area Set Channel List for that area

Channel Settings

Automatic Channel Setup

Main Menu > TV > Channel Setting > Automatic

YES

- After channel search, **YES** \rightarrow Enter title
 - If title is not entered, date (year/month/day/hour/minute) is automatically saved as title.

Using Channel List



From Main Menu TV Channel List

Set Channels

- > Select a Channel List
- Channel List is set, and available channels appear.
- Select a channel to access the station.

Delete Channel List

- > Highlight a Channel List $\rightarrow \boxed{\mathbf{x}}$ [Menu] \rightarrow Delete this \rightarrow YES
- Selected Channel List cannot be deleted.

Delete Channels from Channel List

- > Highlight a Channel List $\rightarrow \square [Detail] \rightarrow$ Highlight a channel \rightarrow Y [Menu] \rightarrow Delete this \rightarrow YES
- Channels in selected Channel List cannot be deleted.

💻 Edit Title

- > Highlight a Channel List $\rightarrow \mathbf{Y}$ [Menu] \rightarrow Edit title \rightarrow Edit
- Reassign a Remote Control Number (Keypad) to a Channel
- > Highlight a Channel List $\rightarrow \square [Detail] \rightarrow \square [Menu] \rightarrow$ **Remote control** $\# \rightarrow$ Select a channel \rightarrow Select a new remote control number $\rightarrow \square$ [Finish] $\rightarrow YES$

Watching TV

- Set channels beforehand (ピテP.5-4).
- Change Default View (ピテP.17-11)

1 🖻



Viewer

2 Select a channel

Direct Channel	1 - 9
Access	(Channel 10)
	O(Channel 11)
	# (Channel 12)
Previous/	
Next Channel	
Channel Search	Press and hold \square ¹ /press and hold \square ²
	• To stop: 🖾 [Cancel] / CLR

¹ Available only in Portrait View

² Available only in Landscape View




Note

● Alternatively, Main Menu ► TV ► Watch TV

Indicators



	Item	Description
0	Image	-
0	Captions	_
0	Data Broadcast	(Ľ ≇P.5-7)
4	Data Broadcast Mode	Data Broadcast Mode off Data Broadcast Mode on
6	ECO Mode	(⊈ 7.17-12)
6	Channel	(₱.5-4)
0	Signal Strength Level	
		Strong ← → Weak Out of range
8	Receiving Captions	-
0	Volume	-
0	Program Title	-
0	Recorder Status	OREC Recording OREC Timer Set
Ð	Indicator/Caption	Indicators/captions on or off

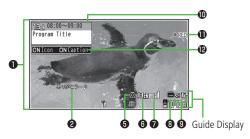

Operations while Viewing TV

Operations	Landscape View	Portrait View
Volume		∑*/▲▼
Mute/Cancel Mute*	CLR	
Program Guide	-	⊠[EPG]
Program Info	Press and hold ⊡ ● To return to Viewer: (CLR
Program Title	₩/⊠/¥//~	🖻 [Disp.]
Indicator/ Caption View	 While Program Title appears: ☺ Each key press toggles indicators (icons) and captions on/off. 	_
Information View	-	While Program Title appears, 🗃 [Change]
Portrait/Landscape View*	 Each key press toggle 	es view.
Record Programs*	● [Record] (⊂ P.5-11 ● To stop: ● [Stop])
Capture Still Images*	Press and hold 🗖 (😭	2.5-12)
Data Broadcast Mode On/Off	_	

* Available when Data Broadcast Mode is off

Program Guide

Check program schedules and set timer to view/record TV programs.

Main Menu > TV > Program List

- Confirmation appears when using Program Guide for first time. Follow onscreen instructions.
- See Program Guide Help menu for usage information.

Data Broadcast (Japanese)

Access a variety of program-related information such as still images and videos.

- Data Broadcast is not available in Landscape View. Press 🗖 to switch to Portrait View.
- 1 Activate TV (Data Broadcast Mode off) →

릴 appears.

- 🚺 to select information.
- To deactivate Data Broadcast Mode: 🖍

Note

 Viewing Data Broadcast information requires no fees: however, accessing websites will incur connection fees.

Functions while Viewing TV

Sound Settings

> While TV is active, $\fbox{2}[Menu] \rightarrow Settings \rightarrow Sound \rightarrow Sound Effect \rightarrow Select an item (See below)$

ltem	Operation/Description
Auto Volume	Automatically increase to optimum volume > <i>ON</i> or <i>OFF</i>
Remaster	Adjust sound quality to reproduce original sound > ON * or OFF
Listening	Adjust to natural sound when using earphone > Select an item
	 Surround: Reproduce natural and stereophonic sound
	• Natur 1* or Natur 2*: Complement sound specific
	to earphone to reproduce natural sound
	OFF: Turn off Listening setting
Equalizer*	Change sound quality when using earphone
	> Select an item
	 Normal: Reproduce normal sound
	 H. BASS1: Enhance low-pitched sound
	• H. BASS2: Enhance low-pitched sound even more
	Voice: Make voice clear
	Train: Minimize sound leakage

* Available only when earphone is connected

Other Functions

> While TV is active, follow the steps below.

ltem	Operation/Description
Access	> $MULTI \rightarrow Open Menu \rightarrow Yahoo! Keitai \rightarrow$
Internet	 Yahoo! Keitai or PC Site Browser Follow onscreen instructions
Make a Voice	
Call/Video	> MULTI → Stand-by display → Enter a number → [] [Dial] (For Video Call, [] [V. Call])
Call	 Interrupt TV during call. After call, TV resumes.
	Recording will not be interrupted.
Use	$>$ MULTI \rightarrow Stand-by display \rightarrow
Messaging	

Functions Available while Viewing TV

>While TV is active, \mathbf{Y} [Menu] \rightarrow Select an item (See below)

ltem	Operation/Description
Channel info ¹	View channel details. Select a channel to watch that
	station
Program info	View current program information
Channel List ¹	View channel list (
Channel	Set channels for your area (⊆₽Р.5-4)
Setting ¹	
Add to ch.	Add current station to Channel List
list 1	> YES
	• Assign current station to lowest available number key.
Program list ¹	View program list
Switch	Switch view (switch image size/image off)
display 1	> Select an item
Switch TV/	In Portrait View, toggle Data Broadcast Mode on/off
data BC ¹	(⊆7 P.5-7)
Icons ²	Set Guide Display in Landscape View
	>ON or OFF
Compose	Create S! Mail while listening to sound (
S! Mail	on P.13-4)

Item **Operation/Description** Settings > Select an item · Brightness: Set Back Light brightness · Mobile W-Speed 2: Enhance frame rate of TV images automatically · Image Quality 2: Select an image quality · LCD AI: Activate image compensation according to Back Light · Sound → Sound Effect ² (C = P.5-8) *Sound* → *Main/sub sound*: Set main/sub sound · Sound → Switch audio data: Available only when multiple audio data are supported Sound → TV Sound W/ Closed ². Set whether to keep speaker on when closing 832P while viewing TV · **ECO Mode**²: Set power saving mode (C→P.17-12) Data > Select an item Broadcasting 1 · Reload contents: Reload page (Data Broadcast link) · Certificate: View owner, author, validity period and serial number of certificate used in SSL communication · Images ²: Show/hide images on Data Broadcast sites Sound Effect ²: Turn on/off sounds from Data Broadcast/sites · Reset Settings 2: Show confirmation on Data Broadcast



ltem	Operation/Description
Back to data BC ¹	End Data Broadcast site and return to Data Broadcast window
Tune service ¹	Select a program when multiple programs are available from the same broadcasting company > Select a station or its affiliate
TV Link 1	Show TV Link details
¹ Available only in Portrait View	

² Available from User Settings even while TV is not active (BP.17-11).

TV Links (Japanese)

Saving TV Links

- Following function is not available in Landscape View.
- Switch Data Broadcast Mode on \rightarrow Select a link

2 YES

1

Follow onscreen instructions to save link.

Opening TV Links

Main Menu ► TV ► TV Link

- Select a TV Link
 - Confirmation appears when Internet access is required. Select YES to proceed.
 - If TV Link is expired, confirmation appears asking whether to delete link.

Functions Available in TV Link List

Main Menu TV TV Link

\mathbf{Y} [Menu] \rightarrow S	elect an	item (See	below)
-------------------------------------	----------	--------	-----	--------

ltem	Operation/Description	
Display detail	Show TV Link title, URL, summary, content type, expiration	
	date	
No. of TVlink	Show number of saved TV Links	
Delete this	> YES	
Delete	> Check TV Links to delete $\rightarrow \square$ [Finish] \rightarrow YES	
selected		
Delete all	> Enter Phone Password → YES	

Recording/Playing Programs

Recording Current Program

Save programs as videos or still images. Recordings are saved to microSD Card.

- microSD Card: r → P.9-15
- Save up to 2GB of data at a time.

Recording Time (total)*	Approx. 740 minutes
Savable Files	99 files

- * Average recordable time per 2GB of data
- Recording is unavailable when signal strength drops to
- Activate TV (Data Broadcast Mode off) \rightarrow [Record] OREC appears, and recording starts.
- [Stop] to stop recording 2
 - Program is saved to microSD Card.

Note

- In the following cases, recording ends and recorded portion is automatically saved:
 - File size is over 2GB
 - · microSD Card memory is full
- Recorded files are not saved to handset.
- Do not remove microSD Card while recording.
- Recording continues even if signal strength level is 🔜 ; however, images and audio are not saved.
- Data Broadcast information cannot be recorded

Capturing Screenshots

Captured screenshots are saved to handset.

- This feature is unavailable when signal strength is a or Data Broadcast Mode is on.
- ר Digital TV
- Activate TV (Data Broadcast Mode off) \rightarrow press and hold \square

Note

• Captions cannot be captured.

Playing Recorded Programs

Main Menu 🕨 Data Folder 🕨 TV 🕨 Video

Select a file Playback starts.



2 **CLR** to stop playback

Example: Video Folder

Playback Operations

Operations	Landscape View	Portrait View
Volume		
Mute/Cancel Mute	Y/ 🕅 🕅 🗸	
Play Previous File	 Press 7/0 to play when playback time 	
Pause/Resume	●[Ⅲ / ▶]	
Play Frame by Frame	Pause playback → ☑[● Play back frame by fr	
Skip Rewind	Press and hold o 1/	Press and hold 问 /
(30 Seconds) ²	×	×
Skip Forward (30 Seconds) ²	Press and hold 1/	Press and hold ()/
Toggle Playback Speed		D
View Title	 [Disp.] In Landscape View, indicator/caption setting display appears. 	
Toggle Caption	Display title → (1) ● In Landscape View, each key press toggles indicators (icons) and captions on/off.	
Portrait/Landscape View	 Each key press switches view. Close handset while in Landscape View to switch to Portrait View. 	

¹ Use opposite key when Display faces right.

² Unavailable if file is under 30 seconds long.

Viewing Captured Screenshots

Main Menu > Data Folder > TV > Image

1 Select an image

Timer

• Set up to 100 timer entries to watch or record programs.

Main Menu 🕨 TV

- 1 Timer Watching or Timer Recording
- 2 \square [New] \rightarrow Select an item (See below)

Item	Operation/Description	
Start date setting	Set date and time to start viewing/recording a program > Select an item	
End date setting ¹	 • Enter date → Enter a date • Choose date → Select a date 	
Channel	> Select a channel	
Edit title	>Enter a program name	
Repeat	> Select a repetition \rightarrow For Select day , select a day (days) $\rightarrow \square$ [Finish]	
Alarm (Alarm notice) ²	> ON or ON/Set time → For ON/Set time, select an alarm time	
Alarm tone ²	> Select an alarm type \rightarrow Select a folder \rightarrow Select an alarm	
Alarm (Alarm on/off) ¹	>ON or OFF	
Alarms (Alarm volume)	 > adjust volume For <i>Timer Recording</i>, Escalating Tone cannot be set. 	
Activate TV w/ alarm ²	 ON or OFF When ON is set, Digital TV activates from alarm notification window. 	

Item	Operation/Description	
Priority 1	Set handset response when Timer Recording starts	
	> Recording or Operation	
	• When <i>Recording</i> is set, active function suspends/	
	ends, and recording starts.	
	 When <i>Operation</i> is set, confirmation appears. 	
	To suspend/end active function, select YES and • to	
	start recording.	
¹ Timer Recordin	a only	
2	5 ,	

² Timer Watching only

3 \square [Finish] \rightarrow For *Timer Recording*, select *YES* or *YES (confirm once)*

Note

- Select timer entries to check details; 🖾 [Edit] to edit details.
- Timer Recording does not start if Internet and two other functions are active simultaneously.
- Alarm does not sound for Timer Watching/Timer Recording in following functions. For Timer Recording, complete followings (in parentheses) one minute before timer starts; otherwise, recording does not start.
 - · While handset is off (Turn on handset)
 - · While Privacy Key Lock is active (Cancel lock)
 - · While Personal Data Lock is active (Cancel/change lock)
 - · During data transfer (Complete transfer)
 - During Infrared transmission or IC transmission (Complete transmission)
 - · During software update (Complete update)

Other Timer Operations

Main Menu 🕨 TV

Timer Watching or Timer Recording

7 \mathbf{Y} [Menu] \rightarrow Select an item (See below)

Item	Operation/Description
New	Set a timer entry to watch/record a program (
Edit	Edit entry details (🖙 P.5-13)
Sort	Sort timer entries
	> Select an order
Delete this	> YES
Delete past	Timer entries with start/end time set prior to current date/ time are deleted > YES
Delete selected	> Check timer entries to delete $\rightarrow \square[Finish] \rightarrow YES$
Delete all	> Enter Phone Password → YES
Memory	Show memory status
Status	
[Timer	
Recording only]	

Checking Timer Recording Results

Main Menu **V**

- *Recording Result* → Select a result
 - Details appear.

Camera

Before Using Camera	6-2
Image File Formats	
Notes	6-2
Camera	6-2
Camera Display Indicators	6-3
Pictures/Videos	6-5
Capturing Still Images (Camera Mode)	6-5
Recording Videos (Video Camera Mode)	6-6
Functions Available while Shooting	6-6
Focus Functions	6-9
Changing Focus Settings	6-9
Auto Focus Lock	6-10
Viewing Saved Images	6-10

Before Using Camera

832P features approximately 3.2 Mega Pixel CMOS Auto-focus Camera capable of capturing still images and videos.

Image File Formats

Captured	images/videos	are saved	to Data Folder.
----------	---------------	-----------	-----------------

Image Type	File Format	Save Location
Still images	JPEG (.jpg)	Camera (Pictures)
Videos	MPEG-4 (.3gp), ASF (.asf)	Camera (Videos)

• To save files to microSD Card: Storage setting: 2 P.6-8

Notes

- Remove dust/debris from lens cover with a soft cloth.
- Handset movement may blur images especially in dark places; hold handset firmly.
- Capturing/saving images immediately after handset has been left in a hot place may affect image quality.
- Exposing lens to direct sunlight may affect image quality.

Shutter Click

Shutter click sounds at fixed volume even in Manner Mode.

● To change shutter click sound: C P.6-8

Camera

Press
in Standby to activate Camera, or press and hold **n** in Standby to activate Video Camera.




Note

- Alternatively, Main Menu
 Camera
 Camera or Video Camera
- Camera is not available when battery is low.
- Incoming calls, Alarm and low battery cancel Camera. Captured images/ recorded videos are retained. Save data when Camera restarts.
- When left in preview window for three minutes, Camera is canceled and previous window returns.


Camera Display Indicators

Picture Preview Window

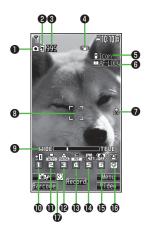

	Item	Description	Operation
0	Toggle Camera mode	Camera mode ☑ / ☑ / ☑ Action mode (Auto/Auto bracket/ Manual) (Cont. shooting set.: C→P.6-8)	 [Video/Cont./Camera] Switch Action mode:
0	Storage setting	🖬 Phone 🔊 microSD Card	9
6	No. of frames	Show number of remaining frames	—
4	Image stabilizer	Correct camera shake	(⊆ 7.6-8)
6	Indicator	Turn indicators on/off	
6	Auto Focus Lock	Lock focus on the subject (⊈P.6-10)	
0	Top indicator	Indicate vertical direction	—
8	Focus Guide	Adjust focus automatically	—
9	Zoom bar	Indicate zoom level (17 P.6-7)	 zoom in/ zoom out Long press: continuous zoom
Ð	Brightness*	Adjust brightness (Level -3 to +3)	1 → Select a level
0	White balance*	Auto Fine Cloudy Light bulb Fluorescent light	$2 \rightarrow$ Select a mode
Ð	Photo mode*	Mormal ♥ Portrait ♥ Sports Image: Food ▲ Scenery ↓ Night mode Image: Food ■ Character ♣ Snow Image: Food ♥ Pet Pet Pet	③ → Select a mode
₿	Image quality*	TRE Fine Fine Super fine	$4 \rightarrow$ Select a mode
0	Image size*	부분대 3M (부분대 2M Wide (유명 2M State) 2M State) 2M State 2M	5 → Select a size
Ð	High Sensitive*	ON 🔐 OFF	6 → Select on/off
❻	Focus* (⊆ 7.6-9)	Face Detection AF Auto Close-up Landscape	$\boxed{\bigcirc}$ → Select a mode
Ð	Auto timer	(⊆ ₽.6-6)	[7] → Toggle on/off
* A	lternatively, 🖾 [🗖] \rightarrow 🔯 to highlight an item \rightarrow 🔯 to select a setting	ng

Video Preview Window

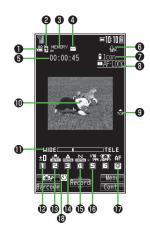

	Item	Description	Operation
0	Toggle Camera mode	🖺 Video camera mode	[Video/Cont./Camera]
0	Storage setting	🖪 Phone 🔊 microSD Card	9
0	Memory capacity bar	Indicate memory status (appears in red when memory is full)	_
4	File size setting	Mail restrict'n(S) 🎆 Long time	(⊆ ≇P.6-8)
6	Recordable time	Indicate recordable time	—
6	Movie type set	Records only video	(⊆ ₹P.6-8)
0	Indicator	Turn indicators on/off	
8	Auto Focus Lock	Lock focus on the subject (ピテP.6-10)	
9	Top indicator	Indicate vertical direction	—
D	Focus Guide	Adjust focus automatically	—
0	Zoom bar	Indicate zoom level (🗲 P.6-7)	 zoom in/ zoom out Long press: continuous zoom
Ð	Brightness*	Adjust brightness (Level -3 to +3)	1 → Select a level
B	White balance*	Auto 🗱 Fine 🕋 Cloudy 🔆 Light bulb 🖸 Fluorescent light	$2 \rightarrow$ Select a mode
0	Photo mode*	Normal ♥ Portrait ♥ Sports Image: Food ▲ Scenery 业 Night mode Image: Food ▲ Character ቆ Snow Image: Food ➡ Pot Pot Pot	3 → Select a mode
Ð	Image quality*	RING Normal Fine Fine Super fine	$4 \rightarrow$ Select a mode
©	Image size*	K 1900 VGA Set HVGA Wide Set QVGA 1150 QCIF Set Sub-QCIF	$5 \rightarrow$ Select a size
Ð	Focus* (⊆ 7.6-9)	AF Auto 😴 Close-up 🔼 Landscape	o → Select a mode
B	Auto timer	(⊆ ≇P.6-6)	$7 \rightarrow Toggle on/off$

* Alternatively, \square [\square] \rightarrow \square to highlight an item \rightarrow \square to select a setting

Pictures/Videos

- Confirm battery strength (19-P.1-9) and memory (19-P.6-8) before recording. When battery is low, video cannot be recorded.
- Captured images and videos are automatically saved to Data Folder. To select save location each time, turn *Auto save set* to *OFF* (C=P.6-8).

Capturing Still Images (Camera Mode)

- 1 Press 🖸 to activate Camera
- 2 Frame subject
- 3 [Record] or to capture the image

Shutter click sounds at fixed volume. Image is automatically saved.

 When Focus is set to Auto or Face Detection, Camera automatically focuses on subject before capturing image.

4 💿

🐨 to exit

Return to Standby.

 


Picture Preview Window

Continuous Shooting

Capture a succession of up to 20 still images automatically with a single press.

In Picture Preview Window,



Appears (Indicators vary by Action mode).

- To set Continuous Shooting: 🖙 P.6-8
- **2** Frame subject $\rightarrow \bigcirc$ [Record] or \bigcirc

Images are automatically saved.

- When *Focus* is set to *Auto*, Camera automatically focuses on subject before capturing image.
- To stop shooting halfway: CLR

Recording Videos (Video Camera Mode)

- Press and hold
 to activate Video Camera
- Frame subject
 - [Record] or ① to start recording

Tone sounds.

- When *Focus* is set to *Auto*, Camera automatically focuses on subject before recording begins. During recording, auto focus functions regardless of Focus setting.
- [Stop] or to end recording

Tone sounds.

Video is automatically saved.

• Recording stops automatically at maximum recording time.

5 🕝 to exit

Return to Standby.

Note

• Alternatively, $\square \rightarrow \square$ [Video] to activate Video Camera



Video Preview Window

Functions Available while Shooting

From ► Camera mode: Action mode: Video camera mode: Press and hold

Auto Timer

- > **Y**/[**Menu**] \rightarrow *Auto timer* \rightarrow *ON* \rightarrow Enter time (seconds) \rightarrow
 - [Record] or \bigcirc (→ For video, \bigcirc [Stop] or \bigcirc)
- Auto timer tone sounds. After set period of time, shutter is released and recording starts.
- When Auto timer is active, [D][Quit] or CLR to return to preview window without canceling Auto timer.
- Auto timer is not available when *Cont. shooting set.* is set to *Manual*.

3

Δ

Zoom

- > \bigcirc (zoom in) or \bigcirc (zoom out) to adjust zoom → \bigcirc [**Record**] or \bigcirc Press and hold \bigcirc for continuous zoom.
- Zoom is available during video recording.
- Zoom is disabled when *Image size* is set as follows:
 - · 3M or 2M Wide (Camera mode)
- Zoom may change image quality.
- Maximum zoom levels for individual image size are as follows.

Camera mode	Size	Zoom level	Max. level (approx.)
Camera	3M (1536×2048)	1 level	1.0 times
(High	2M Wide (1920×1080)	1 level	1.0 times
sensitiv.:	2M (1200×1600)	6 levels	1.3 times
OFF)	1M (960×1280)	11 levels	1.6 times
	VGA (640×480)	21 levels	3.2 times
	Stand-by (240×427)	21 levels	2.4 times
	QVGA (240×320)	21 levels	3.2 times
	QCIF (176×144)	31 levels	5.3 times
	Sub-QCIF (128×96)	31 levels	8.0 times
Camera	VGA (640×480)	11 levels	1.6 times
(High	Stand-by (240×427)	21 levels	2.4 times
sensitiv.:	QVGA (240×320)	21 levels	3.2 times
ON)	QCIF (176×144)	31 levels	5.3 times
	Sub-QCIF (128×96)	31 levels	8.0 times
Continuous	VGA (480×640)	11 levels	1.6 times
shooting	QVGA (240×320)	21 levels	3.2 times
	QCIF (144×176)	31 levels	5.3 times
	Sub-QCIF (96×128)	31 levels	8.0 times

Camera mode	Size	Zoom level Max. level (app	
Video camera	camera VGA (640×480) 11 levels 1.6 times		1.6 times
	HVGA Wide (640×352)	11 levels	1.6 times
	QVGA (320×240)	21 levels	2.4 times
	QCIF (176×144)	31 levels	4.4 times
	Sub-QCIF (128×96)	31 levels	6.0 times

Functions Available in Preview Window

- Change settings before initiating image capture. Some functions are changeable with simple key operations (27P.6-3, P.6-4).
- Some operations are not available depending on camera mode or image size.
- > **Y**/[**Menu**] \rightarrow Select an item (See below)

Item	Operation/Description		
CHG camera- mode	Camera mode, Video camera mode, Action mode or Bar code reader		
Folder jump	Open destination folder		
Image size	> Select a size		
File size	Select <i>Mail restrict'n(S)</i> for S! Mail attachments or		
setting	Long time for long-time recording		
Image quality	> Select an item		
	 In Video camera mode, this function is available only 		
	when <i>File size setting</i> is set to <i>Long time</i> .		
Camera	> Select an item		
settings	\cdot Brightness \rightarrow		
	• White balance: Adjust color tone		
	• Color mode set: Select a color mode		
	• <i>Photo mode</i> : Select a mode suitable for the place		
	• <i>Focus</i> : ≝₽.6-9		
	 Img. stabilizer: Minimize camera shake automatically 		
	• <i>Shoot with frame</i> : Add frame to image		
	• Shutter sound : Select a shutter click sound		
	• <i>Flicker correction</i> : Minimize flicker while shooting		
	near fluorescent light		
Storage	> Select an item		
setting	 Store in → Phone or microSD 		
	 Auto save set → ON or OFF 		

ltem	Operation/Description	
High sensitiv.	>ON or OFF	
Auto timer	(⊆ ₽.6-6)	
Cont. shooting set.	 Select an item Action mode: Manual captures one picture at a time. Auto bracket captures nine different still images automatically. Shot interval: Select an interval when Action mode is set to Auto. Shot number: Set number of images to be captured when Action mode is set to Auto or Manual. Details are as follows: VGA (480×640): 4 QVGA (240×320): 5 to 10 QCIF (144×176): 5 to 20 Sub-QCIF (96×128): 5 to 20 	
Movie type	>Normal or Video	
Display size	Select preview window size > Actual size or Fit in display	
Attach S!Mail mode	 YES or NO Image size, File size setting and Image quality are set to following (respectively): QCIF, Mail restrict'n(S), Normal 	
lcon	Show/hide display indicators > ON or OFF	
Memory Status	View memory information	

Functions Available after Shooting

- Available only when *Auto save set* (Cr. P.6-8) is OFF
- Some operations are not available depending on camera mode or image size
- > \mathbf{Y} [Menu] \rightarrow Select an item (See below)

ltem	Operation/Description	
Play	Play back recorded video	
Save	>Select a folder	
Store all/ animat'n	> Save or Mirror save → Select a folder → <new></new>	
Mirror save	> Select a folder	
Attach to S! Mail	Send file via S! Mail > Select a folder → Create a message (C≇From Step 2 on P.13-4)	
Set display	Set as wallpaper, Phone Book image, etc. > Select a folder \rightarrow Select an item	
Change frame*	> Select a frame → ●[Set] → ●[Save] → Select a folder	
Store in	>Phone or microSD	
Mirror display/ Normal display	Switch Mirror/Normal display	
Display size	Set image size in preview window > Actual size or Fit in display	
lcon	Show/hide display indicators >ON or OFF	
Cancel	Discard image to return to preview window	

* Available only when shooting with frame

Focus Functions

Changing Focus Settings

<Default> Camera mode: Face Detection Video camera/Action mode: Auto

Select a focus setting according to occasion. Focus on Individual scenes automatically.

- Face Detection (Camera mode only): For portraits
- Auto: Auto detection
- Close-up: For nearby objects
- Landscape: For distant landscapes
- In Picture/Video Preview Window, 🟹



 \Box to select a setting \rightarrow

Face Detection

- Detect up to three faces within 2.5 meters.
- Show yellow Focus Guide when a face is detected.
- Automatically focus on one face when more than one is detected (Focus quide turns yellow once focus is on the face.).
- Faces may not be detected in following conditions:
 - Face is tilted.
 - · A part of face is covered by glasses, hat, mask or shadow.
 - · Face is too small, big or dark for screen.
 - · Face is at edge of screen.
- Shoot with Auto focus if detection fails.

Auto Focus Lock

Bring focus on subject at center of display automatically. Lock focus on subject, and recompose your picture.

- In Picture/Video Preview Window, adjust Focus Guide to subject → Ω
 - ① When in focus, handset sounds.
 - ② Focus Guide turns green, and focus is locked.
 - When out of focus, Focus Guide turns red.
 - To try again: CLR
- 2 Determine composition
- 3 Capture image in selected camera mode (Camera/ Action mode: ☞P.6-5 / Video camera mode: ☞P.6-6)

Viewing Saved Images

Main Menu 🕨 Camera

Open Pictures Pictures

Open Videos *Videos*

- 2 Select a folder
- **3** Select a file



Example: Pictures

Open Pictures Saved on microSD Card
 After selecting *Pictures* in Step 1, [microSD] → Select a folder
 Open Videos Saved on microSD Card
 After selecting *Videos* in Step 1, [microSD] → Select a folder
 Tip

●Editing Still Images (ピテP.9-12)

Entertainment

S! Quick News (Japanese) Registering S! Quick News Items	
Opening New Information	
S! Information Channel/Weather (Japanese).	
Registering/Canceling	7-4
Using S! Information Channel	7-4
Using Weather Indicator	7-5
Option Menu Items	7-6
E-Books (Japanese)	7-6

S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Window.

 Registering or viewing S! Quick News incurs transmission fees. No fees apply for viewing ticker information. For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Registering S! Quick News Items

Register one *Quick* news, up to four *General* news and one *Special* news.

Main Menu ► Entertainment ► S! Quick News ► S! Quick News List

 $1 \quad Add \ News \rightarrow YES$

Yahoo! Keitai connects and contents list appears.

Select an item

Follow onscreen instructions.

Opening New Information

Viewing New Information in Standby

When new information is received, 🐚 appears in Standby.

- to highlight ticker
- 2 Select ticker

Content list appears.

- 3 Select information Details appear.
- Tip

Settings ●Show Only Unread Items in Standby ●Change Marquee Speed ●Hide S! Quick News ●Block Image Data (ごP.17-13)

Opening S! Quick News List



Main Menu ► Entertainment ► S! Quick News ► S! Quick News List

- Select an item Content list appears.
- 2 Select information Detailed information appears.
- **3** To connect to the Network, select a title → **YES**

Update Manually

- > In Step1, Yr [Menu] -> Update or All Update -> YES
- **View Summary** > In Step 1, highlight information $\rightarrow \mathbf{Y}$ [Menu] \rightarrow Summary Display
- Delete Registered Items > In Step 1, (highlight information →) [x][Menu] → Delete or All Delete → YES (→ For All Delete, enter Phone Password)

Note

- Alternatively, Main Menu ► Entertainment ► S! Quick News
 Settings ► Del S! Quick News List ► YES to delete all information
- Settings ●Automatically Update S! Quick News List ●Delete S! Quick News Information (ピア.17-13)

S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

• Transmission fees apply for updates.

Registering/Canceling

Main Menu > Entertainment > S! Info Ch./Weather

1 Register/Cancel → YES

832P connects to the Network. Follow onscreen instructions.

Using S! Information Channel

• Up to seven updates are saved.

Viewing New Information

When information arrives, 🧌 and Event Indicator appear in Standby.

- 1 Select Event Indicator Information appears. Follow onscreen instructions.
 - Option Menu Items (17-6)



Manually Retrieve Information

Select Event Indicator "Failed to download"

- Alternatively, Main Menu > Entertainment
 - S! Info Ch./Weather > Get Latest Contents > YES

Delete Information

- > Main Menu > Entertainment > S! Info Ch./Weather
 - ► Highlight What's New? ► 🖅 [Menu] ► Delete ► YES

Note

- Alternatively, Main Menu
 Entertainment
 - S! Info Ch./Weather > What's New? to retrieve information
- If there is unread information in both S! Quick News and S! Information Channel, **%** does not appear. Only Event Indicator appears.

Viewing Previously Received Information

Main Menu > Entertainment > S! Info Ch./Weather

History → Select a date We for unread news and We for read news appear.

Delete History

- >Main Menu > Entertainment > S! Info Ch./Weather > History
 - ► (Highlight a History) ► ∑ [Menu] ► Delete or Delete all ► YES
 - (> For Delete all, enter Phone Password)

Using Weather Indicator

Weather Indicator for current forecast area appears in Standby.

Viewing New Information

Event Indicator and Weather Indicator appear for weather updates.

1 Select Event Indicator or Weather Indicator

Information appears.

Follow onscreen instructions.

• Option Menu Items (17-6)

Weather Indicator

Indicators are updated periodically.

- Example: 🔆 Clear, 🌴 ▷ 🦩 Rain later thunderstorm,
- I are also as a cloudy with occasional snow, etc.
- See Weather Indicator List (recarrow P.18-23) for a complete list of indicators.

Manually Update Weather Indicator

Select Event Indicator "Failed to download"

- Alternatively, Main Menu
 Entertainment
 - ► S! Info Ch./Weather ► Weather Indicator ► Manual Update ► YES
- Hide Event Indicator
- > Main Menu > Entertainment > S! Info Ch./Weather
 - ► Weather Indicator ► Missed Event Settings ► OFF

Note

- Alternatively, view forecast details from Main Menu
- ► Entertainment ► S! Info Ch./Weather ► Weather Indicator
- Weather

Hiding Weather Indicator

Main Menu Entertainment S! Info Ch./Weather Weather Indicator Display Settings

OFF

1

• When Display Settings is set to **OFF**, update is also deactivated.



Option Menu Items

While viewing a content, press **Y**/[Menu] for these options.

Item	Operation/Description	
Forward	Go to next page	
Text Copy	Copy page text	
Select File View, play or save file to Data Folder (From Step 2 in Downloading Image/Sound Files: ᠿP.14-11)		
Jump in this	s Jump to top/end of page	
page		
Yahoo! Keitai View top menu		
Font Size* Change character size		
Exit viewing	Exit content	
this		

* Linked with Font Size setting in Internet option menu.

E-Books (Japanese)

Use BookSurfing $^{\circ}$ to acquire/view e-books, comics, photo books, etc. or e-Book Viewer to view XMDF files on 832P.

- BookSurfing[®] and e-Book Viewer are S! Appli.
- Download Content Keys (ピアP.9-5) to read CCF/XMDF files.
- Some copy protected files have extensions different from the ones below.

Application	File Format
BookSurfing®	CCF (.ccf)
e-Book Viewer	XMDF (.zbf, .zbk, .zbs)

• Some PC content may not be viewable via e-Book Viewer.

Main Menu 🕨 Entertainment

BookSurfing or e-Book Viewer

• See application Help menu for usage information.

Note

• Launch BookSurfing[®]/e-Book Viewer via S! Appli, or select a file from Books in Data Folder.

Music Player

Overview	8-2
Saving Music	8-2
Downloading Chaku-Uta Full®	8-3
Saving Music Files by Using SD Audio	8-3
Transferring WMA Files	8-4
Using Music Player	8-5
Playback Window Indicators	
Playing Music	8-6
Playback Window Operations	8-7
Functions while Playing Files	
Chaku-Uta Full [®] /WMA List	8-9
Using Play List	
Play List	

8

Overview

Play music saved on 832P/microSD Card.

● Play List: 🖙 P.8-10

Notes

- Files may not play due to file support issues or microSD Card status, etc.
- When battery is low, Music Player cannot play files.
- When battery is low during playback, confirmation appears.
- Playback pauses for incoming calls or Alarm. Playback resumes after calls are received or Alarm sounds.

Music Illumination

- Notification Light illuminates when playback starts. When playback starts during charging, Music Illumination lights before Charging Indicator.
- To turn off light, set *Music* to *OFF* in Notification Light setting (ピ=P.17-9).

Note

• Use earphone when listening to music.

Saving Music

Save Music to play on Music Player.

Download Chaku-Uta Full® ([P.8-3)	Open site link to download and save songs Supported file format: SMC, MPEG-4 (MPEG-4 AAC, MPEG-4 AAC+ (HE-AAC), Enhanced aacPlus)
Save Music via SD Audio (ピアP.8-3)	Save music CD songs via PC to microSD Card in AAC format Supported file formats: MPEG-2 AAC, MPEG-2 AAC+SBR
Save WMA files (ſ_͡ᢖP.8-4)	Save Windows Media [®] Audio (WMA) files in PC to microSD Card via Windows Media [®] Player Supported file formats: WMA

• Some files may not play even if format is supported.

• Copy protected files do not play after license expiry (Content Key: 17.9-5).

Copy Protected Files

Copy protected files may not play, be saved or forwarded. To play a copy protected file, obtain Content Key (ट⇒P.9-5). Confirm file expiry date or usage limitations (Music info: ट⇒P.8-8).

🛛 Music Player

Saving Music Files on PCs

When saving music files to microSD Card via PC or other devices for use with 832P, observe the following guidelines:

- Copyrighted Works
 - · Do not infringe on third party/intellectual property rights.
 - $\cdot\,$ microSD Card music files are limited to private use.
- Obtain software to convert file format.
 - · Refer to websites providing software.
 - · Performance of some software types is not guaranteed.

Downloading Chaku-Uta Full®

Access websites directly from Music Player to download Chaku-Uta Full® files.

• View details (price, expiry date, etc.) on source website.

Main Menu ► Music Player ► Data Manager ► Main Folder ► Download Music

1 YES

832P connects to the Network and Download site appears.

• Follow onscreen instructions to download files.

Note

 Alternatively, follow these steps to access Download site: Main Menu > Data Folder > Music > Main Folder
 Download Music > YES

Saving Music Files by Using SD Audio

Note

- Saving music files requires following:
 - 832P
 - · microSD Card (commercial item)
 - · USB cable (not included)
 - · PC (Windows[®] 2000, Windows[®] XP, Windows Vista[®])
 - Software for PC (commercial item)
 Panasonic brand "SD-Jukebox" is recommended. Purchase
 SD-Jukebox from website below:
 - http://club.panasonic.jp/mall/sense/ (Japanese only)
 - $\cdot\,$ Music CD to save

Main Menu ► Settings ► Connectivity ► USB Mode ► microSD Mode

- Connect 832P to a PC via USB cable
- 2 Activate SD-Jukebox on PC
- 3 Set a music CD on PC
- **4** Save music files to micro SD card
 - See SD-Jukebox manual for usage information.
 - After saving, release USB cable from 832P.

Transferring WMA Files

Transfer WMA files from PC to microSD Card via Windows Media[®] Player. Up to 600 files can be saved per microSD Card.

- Use PC with Windows Media® Player installed.
- When using Windows Media[®] Player 10 (10.00.00.3802 or later)/11 on Windows[®] XP, use Windows[®] XP Service Pack 2 or later.
- When using Windows Vista®, use Windows Media® Player 11.
- Have USB cable ready (Transferring Data via USB Cable: 17-P.10-6)
- Insert microSD Card into 832P beforehand.

Main Menu ► Settings ► Connectivity ► USB Mode ► MTP Mode

Connect 832P to a PC via USB cable

Follow Windows $\mathsf{Media}^{\circledast}$ Player operations to transfer WMA files from PC to microSD Card.


- Refer to Windows Media® Player Help for operations.
- Terminate all software applications before releasing USB cable.

Note

- Do not remove microSD Card while transferring files to microSD Card. Files may be damaged.
- WMA files overwrite existing files with same name in handset when copied from PC. To check file names, refer to Windows Media[®] Player Help.
- 832P may not recognize WMA files saved to a microSD on a different handset. Handset may not recognize WMA files from PCs if *USB Mode* is set to *MTP Mode*. Delete WMAudio and WMSystem folders in My Items (MY FOLDER) on microSD, or format microSD Card (CPP.9-17) via PC. Formatting microSD deletes all saved files.
- When saving WMA files to microSD Card without using Windows Media[®] Player, create a folder on microSD Card.

Using Music Player

Playback Window Indicators

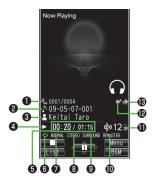

	ltem	Description
0	File Number/Total Number	—
0	Title	—
0	Artist	_
4	Status	—
6	Elapsed Time/Total Time	—
6	Play Mode Indicators	 Play only one Repeat one Repeat all Random Random play&repeat DEMO
0	Equalizer Setting	NORMALNormalH.BASS1H.BASS1H.BASS2H.BASS2TRAINTrain
8	Stereo/Monaural	STEREO Stereo MONO Monaural
9	Listening Setting	SURROUND Surround-sound NATUR1 Natur 1 NATUR2 Natur 2
0	Remaster Setting ON	_
0	Volume	
Ð	Lyric	
B	URL	—

Playing Music

Main Menu 🕨 Music Player

Player

Player Menu window appears.

• Last playback window appears. To open Player menu: CLR twice.

Music Player 1 ∰All Tracks 2 ∰Artist 3 ∰Album 4 ∰Genre 5 ∰Play List

Player Menu Window

🛛 Music Player

Select a category (See below)

ltem	Operation/Description	
All Tracks Select files from 832P & microSD Card		
Artist Select files from Artist folder		
Album Select files from Album folder		
Genre Select files from Genre folder		
Play List Select group of files saved to Play List		
• II A II and and fan anneath (and invelved) aloued Disc List		

- " \star " appears for currently/previously played Play List.
- 3 Select a file

Selected file plays.

- \bullet " \bigstar " appears for currently/previously played file.
- Playback Window Operations: C P.8-7

● To end playback, 🖾 [

Note

- mp4/3gp files in Ring Songs&Tones folder can also be played in Music Player.

Changing Play Mode

Main Menu 🕨 Music Player

1 Player

2

Player Menu window appears.

• Last playback window appears. To open Player menu: CLR twice.

\mathbf{Y} [Menu] \rightarrow *Play mode setting*

3 Select an item (See below)

Operation/Description			
Play all files in selected category/Play List			
Play selected file			
at one Repeat selected file			
Repeat all files in selected category/Play List			
Play selected category/Play List files randomly			
Repeat selected category/Play List files randomly			

Using Other Functions while Listening to Music (Play Background)

Use Phone Book, Messaging, Internet, etc. while listening to music.

- 1 While playing file, D[BGM]
- **2** To end, \bigcirc in Standby \rightarrow *End player*

Note

- Some functions cannot operate simultaneously.
- Volume or play mode change is not available during Play Background.

Playing Chaku-Uta Full®/WMA Files as Demo

Main Menu 🕨 Music Player 🕨 Data Manager

1 Select an item (See below)

Item	Operation/Description			
Main Folder	View Chaku-Uta Full [®] list			
	> Select a folder			
	 To view file list in handset/microSD Card: 			
	🖮 [Phone/microSD]			
WMA	View WMA list			

• [Change] to toggle display view in Chaku-Uta Full[®] and WMA list.

2 Select a Chaku-Uta Full[®] or WMA file

Demonstration playback starts.

Playback Window Operations

Adjust Volume	or 🛓
Play Previous*	 or press and hold When playback time is over three seconds, previous file plays from beginning.
Play Next*	or press and hold 🛡
Rewind	Press and hold 问
Forward	Press and hold 🔍
Pause/Resume	
Stop	
View Next Jacket/Lyric	3
View Previous Jacket/Lyric	1
Switch Jacket/Lyric Display	2
Switch Playlist/Playback Window*	👼 [List/Player]
Play Background*	í [BGM]
Switch Remaster (ピ゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚	9
Switch Listening (8
Switch Equalizer (7

* Not available for playback as a demo

Functions while Playing Files

Set Sound Effect

> While playing file, **∑**[**Menu**] → *Sound effect* → Select an item (See below)

. ,	
Item	Operation/Description
Remaster	Complement sound from earphone to bring close to original sound > ON or OFF
Listening	Add listening effect to sound from earphone Select an item
	 Surround-sound: Reproduce natural and stereophonic sound
	• Natur 1 or Natur 2: Complement sound specific to earphone to reproduce natural sound
	 OFF: Turn off Listening setting
Equalizer	Change quality of sound from earphone
	> Select an item
	 Normal: Reproduce normal sound
	 H. BASS1: Enhance low-pitched sound
	• <i>H. BASS2</i> : Enhance low-pitched sound even more • <i>Train</i> : Minimize sound leakage

Functions Available in Playback Window

>While playing file, \mathbf{Y} [Menu] \rightarrow Select an item (See below)

ltem	Operation/Description		
Player menu	Show Player menu		
Play mode setting	Change play mode (ピテP.8-6)		
Sound effect	(⊆ Left)		
Music info	Show song title, artist and playback time		
Connect to Website	Open site link > YES		
Display image/ Display lyric	Show jacket or lyric		
Previous image/ Previous lyric	Show previous jacket or lyric		
Next image/ Next lyric	Show next jacket or lyric		

Chaku-Uta Full®/WMA List

From Main Menu Music Player Data Manager

- Confirm Memory Status
- > $\underline{\mathbf{Y}'}$ [Menu] \rightarrow *Memory Status*
- Functions Available in Chaku-Uta Full® Folder List
- > *Main Folder* → Highlight a folder → $\boxed{\mathbf{Y}}$ [Menu] → Select an item (See below)

Item	Operation/Description		
Add folder	> Enter folder name		
Edit folder	> Enter folder name		
name			
Delete folder	> Enter Phone Password → YES		
Memory	> Confirm memory status/total files		
Status	-		

Functions Available in Chaku-Uta Full®/WMA File List

> Main Folder or WMA (→ Select a folder) → Highlight a file → $\boxed{\mathbf{Y}}$ [Menu] → Select an item (See below)

Item	Operation/Description		
Set as ring tone (Fullsong	Set Chaku-Uta Full® as ringtone > <i>Fullsong ring tone</i> → Select an item		
ring tone) 1			
Set as ring tone (Point ring tone) ¹	 Set a segment of Chaku-Uta Full[®] as ringtone <i>Point ring tone</i> → Select a segment → Select an item To confirm segment: [□][Play] 		
Music info	Show song title, artist and playback time		
Move 1	> Select a storage		

ltem	Operation/Description				
Move to microSD ¹	Move a Chaku-Uta Full [®] to microSD Card				
Add folder 1	>Enter folder name				
Multiple-	Select multiple Chaku-Uta Full®				
choice 1	> Check Chaku-Uta Full [®] \rightarrow Y /[Menu] \rightarrow Delete ,				
	<i>Move</i> or <i>Send Ir data</i> → Operate selected item				
Connect to Website 1	Open site link > YES				
Display image	Show jacket				
Memory Status	Memory status/total number of files appears				
DEL all	Delete all WMA licenses				
licenses ²	> Enter Phone Password → YES				
Delete this	> YES				
Delete all	Delete all files in folder				
	> Enter Phone Password → YES				
Attach to S! Mail ¹	Send a file via S! Mail (☞ From Step 2 on P.13-4)				
Send Ir data 1	(⊆7 P.10-3)				
IC	(┌ ᢖP.10-5)				
transmission 1					
Take contents key ¹	(C ≇P.9-5)				
 Chaku-Uta Full WMA files only 	,				

Using Play List

Use Play List to organize Data Folder music files. Select Music folder files to create Play List links to each file in its original folder.

Creating New Play Lists

 Maximum number of Play Lists to create and songs to save is as follows: Combined Play Lists: 30 Play Lists; 100 songs per list WMA Play Lists: 100 Play Lists; 250 songs per list SD Audio Play Lists: 99 Play Lists; 99 songs per list

Main Menu 🕨 Music Player

Player

Player menu appears.

- Last playback window appears. To open Player menu: CLR twice
- 2 *Play List* → [Menu] → *Create play list* → Select a category and show file list → Check files to save to Play List → [Finish]



3 Enter a Play List name

Playing Songs from Play List

Main Menu 🕨 Music Player

Player

Player menu appears.

- \bullet Last playback window appears. To open Player menu: \fbox{CLR} twice
- **7** *Play List* → Select a Play List
 - To play back selected Play List from the beginning: 🖾 [Play]
- 3 Select a file

Selected file plays back.



Play List Contents Window

Note

• mp4/3gp files in Ring Songs&Tones folder can also be added to Play List.

8-10

Play List

From Ma	in Menu 🕨 Music Player 🕨 Player 🕨 Play List		
■ Functions Available in Play Lists Window > (Highlight a Play List) ☞ [Menu] → Select an item (See below)			
ltem	Operation/Description		
Player menu	ayer menu Open Player menu		
Play mode setting	Change play mode (ב) P.8-6)		
Create play list	Create a new Play List (≇₽.8-10)		
Copy play list	Copy a Play List > Enter a Play List name		
Edit pl. list name	Edit a Play List name > Edit Play List name		
Add	Add files to a Play List > Select a category, and show file list \rightarrow Check files to add $\rightarrow \boxdot$ [Finish]		
Delete play list	> Select an item \rightarrow Operate selected item		

■ Functions Available in Play List Contents Window > Select a Play List → (Highlight a file) → [x] [Menu] → Select an item

(See below)

Item	Operation/Description		
Player menu	Open Player menu		
Play mode setting	Change play mode (CFP.8-6)		
Music info	Show song title, artist and playback time		
Add	Add files to a Play List > Select a category, and show file list → Check files to add [Finish]		
DEL from play list	Delete files from Play List > Select an item → Operate selected item		
Order to play	 > Select a file from a Play List to change playing order → Iselect] Repeat steps above to change order → [Set]. 		
Add to play list	Add files to another Play List > Add one or Add some (→ For Add some, check files → [Finish]) → Select a Play List		
Display image	Show jacket		



Managing Files

Data Folder	
Data Folder Structure	9-2
Opening Files	
Viewing & Playing Files	
File Display/Playback Functions	9-6
Options	9-7
Using/Editing Still Images	
Editing Still Images	
Creating Animations	9-13
Saving Still Images to Phone Book	9-13
Managing Folders/Files Managing Folders	9-14
Managing Folders/Files	9-14 9-14
Managing Folders/Files Managing Folders Using Play List	9-14 9-14 9-14
Managing Folders/Files	9-14 9-14 9-14 9-15
Managing Folders/Files Managing Folders Using Play List microSD Card	9-14 9-14 9-14 9-15 9-16
Managing Folders/Files Managing Folders Using Play List microSD Card microSD Card Installation	9-14 9-14 9-14 9-15 9-16 9-17
Managing Folders/Files Managing Folders. Using Play List microSD Card microSD Card Installation Format microSD Card.	9-14 9-14 9-14 9-15 9-16 9-17 9-17
Managing Folders/Files Managing Folders. Using Play List. microSD Card microSD Card Installation Format microSD Card. Viewing microSD Card Files	9-14 9-14 9-14 9-15 9-15 9-16 9-17 9-17 9-17 9-18

Data Folder

Save, play and manage files downloaded from Internet, etc.

 Access websites directly from Pictures, My pictograms, Ring Songs&Tones, S! Appli, Music, Videos, Lifestyle-Appli, Books, Customized Screen and Templates folders, and download files to 832P.

Data Folder Structure

Folder		r	Function/Saved Data	File Format 1
Pictures	Download Pictures		Connect to download site	JPEG, GIF (.gif including Interlaced GIF), GIF Pictogram Package File
	Main Folder Camera		Downloaded still images, etc.	
			Still images captured by Camera, etc.	
	My	Download My Pict.	Connect to download site	(.gpk), SWF (.swf Flash
	Pictograms	お気に入り	Downloaded pictograms, etc.	Animation),
		顔文字, 装飾, etc.	Preinstalled pictograms	PNG (.png including Interlaced
	Mail Art	Mail Art (download)	Connect to download site	PNG)
	Pre-installed Original Animation		Preinstalled still images	
			Display still images continuously	
	microSD ²		Still images captured by Camera or copied/moved from	
			SoftBank handsets	
Ring	DL Ring Song	s&Tones	Connect to download site	SMF, SP-MIDI, AMR, SMAF,
Songs&Tones	Main Folder		Downloaded ring songs/tones, etc.	MPEG-4 formatted files (.mid, .midi, .amr, .mmf, .3gp, .mp4)
	Pre-installed		Preinstalled ring songs/tones	
	Voice Announce	nce	Data recorded by Voice Announce	
	Play List		Play back Play List	1
	microSD ²		Ring songs/tones copied/moved from SoftBank handsets	1
S! Appli	Download S!	Appli	Connect to download site	-
	microSD ²		S! Appli downloaded/moved from SoftBank handsets	
Music	Main Folder	Download Music	Connect to download site	MP4, SMC, WMA (.3gp, .mp4,
		Music Search		.smc, .wma)
		Initial Folder	Downloaded Chaku-Uta Full®	
		microSD ²	Chaku-Uta Full® downloaded/moved from SoftBank handsets	1
	WMA ³		WMA Files transferred from PC	1

Folder		Function/Saved Data	File Format 1
Videos	Download Videos	Connect to download site	MP4 (including .mp4, .3gp,
	Main Folder	Downloaded video files, etc.	SDV), ASF (.asf)
	Camera	Video files recorded by Camera	
	Pre-installed	Preinstalled video files	
	Play List	Play back Play List	
	Position Memory	Play back video files from saved resume position	
	microSD ²	Video files recorded by Camera or copied from SoftBank	
		handsets	
PC Movies	microSD ³	PC movies saved using PC	WMA (.wma), WMV (.wmv), ASF (.asf)
	Position Memory	Play back PC movies from saved resume position	
	Play History	Playback records of PC movies	
TV	Image	Still images recorded by Digital TV	JPEG (.jpg)
	Video ³	Copy-protected video files (One-Seg compatible)	TOD (.tod), MOI (.moi),
	Position Memory	Play back video files from saved resume position	MAI (.mai), PGI (.pgi)
Lifestyle-Appli	Download	Connect to download site (Osaifu-Keitai [®] : 👉 P.16-2)	-
Books	Download Books	Connect to download site	CCF (.ccf), XMDF (.zbf, .zbk,
	microSD ²	E-Books downloaded or moved from SoftBank handsets	.zbs)
Customized	Customized Screen	Connect to download site	CUSR (.xcsf)
Screen	Familiar Usability		UIE (.uie)
	microSD ²	Customized Screen/Familiar Usability downloaded or moved/	CUSR (.xcsf), UIE (.uie)
		copied from SoftBank handsets	
Templates	Download Templates	Connect to download site	-
Other	Main Folder	Incompatible files attached to mail ⁴	-
Documents	microSD ²	Incompatible files downloaded or copied from SoftBank handsets	

Some copy protected files have extensions different from above.
 When microSD Card is installed, press
 microSD] in Folder list.
 Available only when microSD Card is installed.
 Some attachment files cannot be saved in Other Documents.

Using Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key (☆P.9-5) may be required for usage.

See file information to confirm restrictions such as expiry term or usage limitation (Respective file information in "Ontione": (2007)

- "Options": 🖙 P.9-7).
- To or A (Silver) appears for copy protected files requiring Content Keys.
 A files are inaccessible.
- Files downloaded on 832P cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- 832P holds up to 1000 Content Keys. Multiple Keys may be required to use a file. Expired Keys are deleted automatically.
- Interrupted playback (by incoming calls or Alarm) of copy protected WMA files with limited usage in Data Folder is also counted as one usage.

Opening Files

Viewing & Playing Files

Main Menu 🕨 Data Folder

Select a folder

• In Folder List, press 😇 to toggle handset folder and microSD Card folder.



Pictures Folder

- 2 Select a folder \rightarrow Select a file File appears/plays.
 - To toggle file list view:
 [Change]



Still Image List Window

When Shortcut to a Download Site is Selected

Handset connects to a download site on Internet.

Operations while Playing Back Ring Songs&Tones

Stop	• [Stop]
Volume*	
Attach files (during playback) to S! Mail	

* To use I with handset closed, set *Info Notice Setting* (BP.17-6) to *OFF*.

Videos/PC Movies Playback Operation

• Some operations are not available depending on files.

Adjust Volume	or A
Play Previous	 Starts from beginning when playback time is over three seconds.
Play Next	
Rewind 1	Press and hold 问
Forward ¹	Press and hold 🔍
Select Position ²	repeatedly
Change Speed	
Mute/Resume	¥? [※ / 《》]
Pause/Resume	
Play Frame by Frame 1	While pausing, ⊠[Frame] ● Play back frame by frame
Switch Portrait/ Landscape View (Full Screen)	٥
Remaster (≝₹P.8-8)	9
Listening (8
Equalizer (19.8-8)	7

¹ Videos only

² PC Movies only

Tip

●File Display/Playback Functions (ピア-9-6)

Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, select *YES*. 832P connects to Content Key site.

● Copy Protected Files: 🖙 P.9-4

 ● ☐ or △ (Silver) appear for files requiring Content Keys. △ files are inaccessible. ☑ appears on images in Thumbnail view of expired files (Original icon appears for Books folder.).

Note

- Alternatively, obtain Content Key as follows: Highlight a file →
 ∑[Menu] → Take contents key
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (Connection fees apply).

File Display/Playback Functions

- Enlarge Still Images
- > Main Menu ► Data Folder ► Pictures ► Select a folder ► Select a file ► [x][Menu] ► Display size ► Fit in display
- Play Back from a Resume Position
- Resume playback (videos/PC Movies) from a saved position.
 Main Menu > Data Folder > Videos or PC Movies
 Position Memory > Select an item
- FOSICION MEMORY F Select and
- Save a resume position: Bright
- Marker to resume is a resume position automatically saved when a call comes in, alarm goes off, battery runs low, or playback is terminated.

Functions Available in Video/PC Movie Playback Window

- Some operations are not available depending on files.
- >While playback is paused, \mathbf{Y} [Menu] \rightarrow Select an item (See below)

Item	Operation/Description
Normal play 1	Play at normal speed
Slow 1	Play at slow speed
Quick View (1.25x) ¹	Play 1.25 times faster than normal
Quick View(2x) ¹	Play at double speed
Fast ²	Forward
Rewind ²	Rewind
Stop	Return to Videos/PC Movies List window
Position to play	Start playback from specified point $\rightarrow \Box$ [Set]
Connect to Website ¹	Open site link > YES

Item	Operation/Description
Sound effect	Remaster, Listening or Equalizer (🖙 P.8-8)
Contents info ²	Show title, file name, etc.
Position	Save resume position
memory	> Select a resume position
	 To play back from a saved position:
Attach to	Send file via S! Mail
S! Mail 1	(⊆ From Step 2 on P.13-4)
Register	Set as ringtone
(Ringtones) 1	> <i>Ringtones</i> → Select a type
	 "★" is added to item set as ringtone.
Register	Save a file as Start-up Window
(Start-up	> Start-up Window → YES
Window) 1	
Video info 1	Show title, file name, etc.
Send Ir data 1	Send file via Infrared (ピテP.10-3)
IC	Send file via IC transmission (CPP.10-5)
transmission 1	
Add shortcut	Create a shortcut (┌─╤P.1-17)
icon ¹	
Description ²	Show file information
	> The words view or Description view
Copy URL ²	Copy URL
Display size	Select a display size
	>Actual size or Fit in display
Play on full	Switch to Landscape View. Full screen playback starts
disp. 1	To toggle views:

² PC movies only

Options

Copy Protected Files

- When set as wallpaper or ringtone, settings may return to defaults if license has expired or different USIM Card is inserted.
- Limited use files cannot be set as wallpaper or ringtone.

Highlight a file in Data Folder \rightarrow **Y** [Menu] for the following operations.

• Some functions may not be available depending on files.

Pictures

ltem	Operation/Description
Edit picture	Edit files (ピョア.9-12)
Display picture	Open files
Set display*	Set as wallpaper, Phone Book image, Menu Icons, etc.
	> Select an item
	 "★" is added to item.
Picture info	Show file name, file size, etc.
Attach to	Send files via S! Mail (🖅 From Step 2 on P.13-4)
S! Mail	
Graphic mail	Add selected files to Graphic Mail (
Send Ir data	Send files via Infrared (
IC transmission	Send files via IC transmission (⊂ P.10-5)
Add shortcut	Create shortcuts (C≩P.1-17)
icon	
Copy to	Copy files to microSD Card
microSD	
Move to	Move files to microSD Card
microSD	
Positioning	Set where to paste files in Standby
	> Select a position

Item	Operation/Description
Edit file name	Edit file names
Move	Move files to other folders
Slideshow	Show files in a folder continuously. Select display speed > Normal or Slow
Delete this	Delete a file > YES
Delete all	Delete all files $>$ Enter Phone Password $\rightarrow YES$
Multiple- choice	Select multiple files to use $\rightarrow \mathbf{x}$ [Menu] \rightarrow Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Pictures/ File names	Toggle list view ● Alternatively, □ [Change] to toggle
Take contents key	Connect to site for Content Key
Outgoing Video	a file as Video Call related item (except for Incoming/ o Calls), set Select Images to Original (Change Outgoing ige: ᠿP.17-10).

To set a file as Menu Icon related item, set *Menu Icons* to *Customize* (C=P.17-4).



- If incoming calls arrive or handset is turned off while My Pictograms package file (.gpk) is being uncompressed, some pictograms in package file may not open. Retry uncompressing.
 - Tip ••••••••••••••••••••••••••
- ●Enlarge Still Images (ピアP.9-6)
- ●Editing Still Images (Cr P.9-12)
- ●Creating Animations ●Saving Still Images to Phone Book (ピア.9-13)

Ring Songs&Tones

ltem	Operation/Description
Edit file name	Edit file names
Play melody	Play back files
Set as ring	> Set as ringtone
tone	● "★" is added to item.
Add shortcut	Create shortcuts (C → P.1-17)
icon	
Attach to	Send files via S! Mail (
S! Mail	
Send Ir data	Send files via Infrared (⊆₽.10-3)
IC transmission	Send files via IC transmission (ピアP.10-5)
Copy to	Copy files to microSD Card
microSD	
Song·Tone	Show titles, file names, etc.
info	
Memory	Show memory information
Status	

ltem	Operation/Description
Delete	> Select a type Delete this → YES Delete select → Check files to delete →
	$\square[Finish] \rightarrow YES$ $Delete all \rightarrow Enter Phone Password \rightarrow YES$
Sort	Change display order of files > Select an order
Move	Move files to other folders
Move to microSD	Move files to microSD Card
Take contents key	Connect to site for Content Key

S! Appli/Lifestyle-Appli

ltem	Operation/Description
Start	Activate S! Appli or Lifestyle-Appli
Security level	Set security level (⊂ P.15-4)
S! Appli info	Show file names, file sizes, etc.
	Create shortcuts (CPP.1-17)
icon	
Move to	Move files to microSD Card
microSD	(Lifestyle-Appli cannot be moved)
Delete	Delete files
	> YES

Music

• See "Functions Available in Chaku-Uta Full®/WMA File List" (17 P.8-9)

Videos

ltem	Operation/Description
Register	Set as ringtones or Start-up display
Video info	Show titles, file names, etc.
Attach to S! Mail	Send files via S! Mail (⊆From Step 2 on P.13-4)
Send Ir data	Send files via Infrared (ピアP.10-3)
IC transmission	Send files via IC transmission (ピ゚゚゚ , ₽.10-5)
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Move	Move files to other folders
Add shortcut icon	Create shortcuts (ピョP.1-17)
Edit file name	Edit file names
Delete this	Delete a file > YES
Delete all	Delete all files \rightarrow YES
Multiple- choice	Select multiple files to use \rightarrow Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view Change] to toggle views
Take contents key	Connect to site for Content Key

PC Movies

Item	Operation/Description
Contents info	Show titles, file names, etc.
Move	Move files to other folders
Сору	Copy files to other folders
Multiple-	Select multiple files to use
choice	> Check files to use $\rightarrow \mathbf{Y}$ [Menu] \rightarrow Select an item
Comment view	Show descriptions
Memory Status	Show memory information
Delete this	Delete a file
	> YES
Delete all	Delete all files
	> Enter Phone Password $\rightarrow YES$
TV	
 See Pictures for 	older for still images.
See Pictures for Item	older for still images. Operation/Description
ltem	Operation/Description
Item Edit title	Operation/Description >Enter titles
Item Edit title Video info	Operation/Description > Enter titles Show titles, channel names, etc.
Item Edit title Video info Add shortcut	Operation/Description > Enter titles Show titles, channel names, etc. Create shortcuts (CPP.1-17) Delete a file
Item Edit title Video info Add shortcut icon Delete this	Operation/Description > Enter titles Show titles, channel names, etc. Create shortcuts ((☐ P.1-17)) Delete a file > YES
Item Edit title Video info Add shortcut icon Delete this	Operation/Description > Enter titles Show titles, channel names, etc. Create shortcuts (CPP.1-17) Delete a file
Item Edit title Video info Add shortcut icon Delete this	Operation/Description > Enter titles Show titles, channel names, etc. Create shortcuts ((☐ P.1-17)) Delete a file > YES
Item Edit title Video info Add shortcut icon Delete this Delete selected	Operation/Description > Enter titles Show titles, channel names, etc. Create shortcuts (C⇒P.1-17) Delete a file > YES > Check files to delete → [Finish] → YES
Item Edit title Video info Add shortcut icon Delete this Delete selected Delete all	Operation/Description > Enter titles Show titles, channel names, etc. Create shortcuts (C⇒P.1-17) Delete a file > YES > Check files to delete → [Finish] → YES Delete all files
Item Edit title Video info Add shortcut icon Delete this Delete selected Delete all	Operation/Description > Enter titles Show titles, channel names, etc. Create shortcuts (CPP.1-17) Delete a file > YES > Check files to delete → [Finish] → YES Delete all files > Enter Phone Password → YES

Books

Item	Operation/Description
Play	Play back files
Connect to Website	Open site link
Book info	Show file names, file sizes, etc.
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Add folder	Add folders
Edit file name	Edit file names
Move	Move files to other folders
Take contents key	Connect to site for Content Key
Delete	Delete files > YES

Customized Screen

ltem	Operation/Description
Preview	Preview files
Collective	Set Customized Screen all at once
Setting	
File info	Show titles, file names, etc.
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Edit file name	Edit file names
Delete this	Delete a file
	> YES
Delete all	Delete all files
	> Enter Phone Password → YES
Multiple-	Select multiple files to use
choice	> Check files to use $\rightarrow \mathbf{x}$ [Menu] \rightarrow Select an item
Memory	Show memory information
Status	
Sort	Change display order of files
	> Select an order
Listing	Change list view
	• [Change] to toggle views
Take contents	Connect to site for Content Key
key	
Connect to	Open site link
Website	

Templates

ltem	Operation/Description	
Compose S! Mail	Send files via S! Mail (CPP.13-5)	
Edit title	Edit titles	
Template Info	Show title and file size	
Delete this	> YES	
Delete selected	> Check files to delete $\rightarrow \boxdot$ [Finish] \rightarrow YES	
Delete All	> Enter Phone Password \rightarrow YES	

Other Documents

Item	Operation/Description	
File info	Show file names, file sizes, etc.	
Attach to S! Mail	Send files via S! Mail (CFFrom Step 2 on P.13-4)	
Copy to microSD	Copy files to microSD Card	
Edit file name	Edit file names	
Move	Move files to other folders	
Delete this	Delete a file > YES	
Delete all	Delete all files \rightarrow Enter Phone Password \rightarrow YES	
Multiple- choice	Select multiple files to use \rightarrow Check files to use \rightarrow Select an item	
Memory Status	Show memory information	
Sort	Change display order of files > Select an order	

Note

 Titles of mp4/3gp Ring Songs&Tones files and Videos/Music/Customized Screen files appear in respective lists. Files without titles appear with file names (created when files are saved to handset). Titles cannot be changed; edited file names may not appear in lists.

Using/Editing Still Images

Editing Still Images

• Edit features are not available for all file types.

Main Menu > Data Folder > Pictures

Select a folder \rightarrow Select a file \rightarrow **Y**/[**Menu**] \rightarrow 1 Edit picture

2 \mathbf{Y} [Menu] \rightarrow Select an item (See below)		
Item Operation/Description		
Marker stamp > Select a stamp → ∑ to move stamp → [Pu ● Following options are available when positioning stamp: • To rotate or scale up/down: ∑[Menu] → Select an item • To start over: [D][Cancel] ● To add: [D][Add]		
Frame	 > Select a frame • To rotate 180 degrees: ^T[Menu] → 180° rotation • To change frame: • To return to frame list: [™][Cancel] 	
Character stamp	 > Enter text → to move text → [Put] To change content/color/font/size: When positioning stamp, [v] [Menu] → Operate selected item To start over: [Cancel] after positioning 	

Item	Operation/Description	
Change size		
	• To start over: 🖾 [Cancel]	
Trim away	> Specify a size $\rightarrow \mathbf{\nabla}$ to specify area $\rightarrow \mathbf{O}$ [Set]	
	• To start over: After specifying area, 🖾 [Cancel]	
Retouch	> Select an item	
	• To start over: 🖾 [Cancel]	
Rotate >90° to right, 90° to left or 180°		
	• To start over: 🖾 [Cancel]	
Brightness	> 🖸 to adjust brightness	
Attach to	Create S! Mail with edited still images.	
S! Mail [*] $> \bigcirc$ [Set] \rightarrow Create S! Mail (CPFrom Step 2 on P.1 \bullet Edited files are automatically saved.		
		● Alternatively, ☑ [🔀] to attach pictures to S! M
Save*	Overwrite/rename to save edited files.	

3 • [Set]	→	[Save
-----------	---	-------

```
YES (Overwrite) or NO (Save as)
Δ
```

Creating Animations

Saving Original Animation

Main Menu > Data Folder > Pictures > Original Animation

- $\langle New \rangle \rightarrow \langle 1st \rangle \cdot \langle 20th \rangle$
- **7** Select a folder \rightarrow Select a file
 - Repeat Step 2.
- 3 ⊠[Finish]

Functions Available in Original Animation List

In Original Animation list, press **Y** [Menu] for following operations.

Item	Operation/Description	
Edit title	>Enter title	
Org. animation	n Add more files to an Original Animation (
Display	Play back an Original Animation	
picture	• Alternatively, select an Original Animation from list to	
	play back.	
Set display	Set an Original Animation as Standby display, etc.	
	> Select item to set Original Animation as	
Picture info	View item set for Set display	
Release	Cancel a saved Original Animation	
animation	> YES	

Saving Still Images to Phone Book

- Savable sizes: Standby (240 x 427) or smaller in JPEG, GIF or PNG format (up to 300 Kbytes)
- Save images to up to 100 Phone Book entries.
- Still images cannot be saved to USIM Card Phone Book entries.

Main Menu > Data Folder > Pictures

Select a folder \rightarrow Select a file \rightarrow **Y** [Menu] \rightarrow Set display \rightarrow Phone Book

2 New Entry

New → Enter details (→ From Step 3 on P.4-4) → \square [Finish]

Add to Existing Entry $Add \rightarrow$ Select entry $\rightarrow \square$ [Finish] $\rightarrow YES$

Managing Folders/Files

Managing Folders

The following operations are available in Pictures, Music, Books, Videos, Ring Songs&Tones, PC Movies and Other Documents.

Main Menu 🕨 Data Folder

1 Select a folder → **Y** [Menu] → Select an item (See below)

ltom	Operation/Description	
Item		
Add folder	Create user folders	
Edit folder	Edit user folder names	
name		
Delete folder	Delete a user folder	
	> Enter Phone Password → YES → YES	
Delete all	> Enter Phone Password → YES → YES	
image ¹		
Edit Play	Edit Play Lists	
List ²		
Release Play	ase Play Cancel edited Play Lists	
List ²	> YES	
Select	Specify folders on microSD Card to save files to	
storage ³ > YES		
-	• Folders cannot be specified when saving Books files.	
Memory	View memory capacity/number of saved files	
Status ⁴		

² Play List folder in Ring Songs&Tones folder only

- ³ microSD Card only
- ⁴ Music folder only

Using Play List

Use Play List to organize Data Folder Ring Songs&Tones/ Videos files.

Select Ring Songs&Tones, Music or Videos folder files to create Play List links to each file in its original folder.

Creating Ring Songs&Tones Play Lists

- Main Menu > Data Folder > Ring Songs&Tones
- Highlight *Play List* → [Y?][Menu] → *Edit Play List*
- **2** Select a number \rightarrow Select a folder \rightarrow Select a file
 - Repeat Step 2.

3 ⊠[Finish]

- Play Back Play List
- > Main Menu ► Data Folder ► Ring Songs&Tones ► Play List
- Files are played back in the saved order.

Delete a File

> After Step 1, select a file → *Release this*

¹ Pictures folder only

Delete All Files

> After Step 1, ∑7 [Menu] → Release Play List → YES

Note

 mp4/3gp files cannot be added to Play List except in Music Player Play List.

Creating Video Play Lists

Main Menu 🕨 Data Folder 🕨 Videos 🕨 Play List

- 1 Select a Play List
- 2 Select a number \rightarrow Select a folder \rightarrow Select a file • Repeat Step 2.
- 3 [Finish]

📕 Play Back Play Lists

- > Main Menu ► Data Folder ► Videos ► Play List ► Highlight Play List → [Play]
- Files are played back in the saved order.

Delete a File

> After Step 1, (highlight a file \rightarrow) $\boxed{\mathbf{Y}}$ [Menu] \rightarrow *Delete this* or *DEL all from list* \rightarrow *YES*

Change Order

> After Step 1, [v] [Menu] \rightarrow Oder to play \rightarrow Select a file \rightarrow Select a target $\rightarrow [Finish] \rightarrow [Finish]$

microSD Card

- 832P is compatible with up to 2 GB commercial microSD Cards and up to 16 GB commercial microSDHC Cards (as of March 2009).
 For information on memory card compatibility, visit the website below (Japanese). Note that microSD Cards not listed on the website may not function properly.
 - · From Yahoo! Keitai
 - P-egg (as of April 2009)
 - Yahoo! Keitai top page → メニューリスト → 辞書・ツール→ ケータイメーカー → P-egg
 - · From PC
 - http://panasonic.jp/mobile/

Not all operations are guaranteed by the microSD/microSDHC Cards listed.

• Format new microSD/microSDHC Cards for use with 832P ($rac{r}{s}$ P.9-17).

Note

 
- SoftBank is not liable for damages from accidental loss/alteration of microSD Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

microSD Card Installation

• Turn off handset before inserting/removing microSD Card.

Inserting

Open cover. Insert microSD Card until it clicks




Close cover

microSD Card Check

When microSD Card is installed correctly, 📠 appears. If 🐺 appears, microSD Card cannot be used. Remove microSD Card from handset, and re-insert it. If 🕅 does not disappear, execute Check microSD (CPP.9-20) or format microSD Card (2-P.9-17). (Display Indicator: 2 P.1-8)

Removing

 - Push microSD Card in
 - microSD Card pops out with a light push.



- Remove microSD Card and close cover 2
 - To close cover: r → Left

Note

- Do not turn off handset or remove battery/microSD Card while B flashes. microSD Card may be damaged or files lost.
- microSD Card may pop out when inserting/removing it.

Format microSD Card

Formatting microSD Card deletes all saved files/data.

Main Menu Tools microSD Backup

- Y [Menu] \rightarrow *microSD format*
- Enter Phone Password → YES

Note

- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- microSD Cards formatted on other devices may not be used. Format microSD Card on 832P before use
- 832P cannot format incompatible microSD Cards.
- If format fails, turn power off and remove microSD Card from 832P. Reinsert microSD Card and format it again.

Viewing microSD Card Files

View Phone Book entries, Calendar events, Tasks, mail messages, Notepads and Bookmarks backed up on microSD Card.

 
Main Menu
Tools
microSD Backup

Select a category

- Select a file 2 Backup date appears as file name.
- Select a data 3



Category List





9





2∃AokiTaro B 090XXXXXXXXX

Detailed Data

Note

 If messages on microSD Card do not appear correctly, copy messages to handset (17-P.9-18) and execute **Charset Conversion** (17-P.13-22).

Handset Data Backup

Back up handset data (Phone Book, Calendar, Tasks, Messages, Notepad, Bookmarks, Content Keys) to microSD Card; restore handset data after accidental loss/alteration.

● Back up Content Key: Cr P.9-21

Backing up to microSD Card

Main Menu > Tools > microSD Backup

- Highlight a category → ∑r [Menu] → Copy to microSD (→ For Bookmarks, select an item)
- Enter Phone Password → YES All files of selected category are backed up to microSD Card.
- One File Backup > Open a file → [Y][Menu] → Copy to microSD → YES

Restoring from microSD Card

Main Menu > Tools > microSD Backup

Select a category

Restore One Item

Select a file \rightarrow Highlight an item \rightarrow **Y** [Menu] \rightarrow *Add to phone*

Restore One File Highlight a file \rightarrow **Y** [Menu] \rightarrow *Add to phone* or *Overwrite to phone* \rightarrow Enter Phone Password

Restore All Files \mathbf{Yr} [Menu] \rightarrow *Add all to phone* or *Overwr. all to ph.* \rightarrow Enter Phone Password

3 YES

Note

- Note that Overwrite to phone or Overwr. all to ph. erases all files of same category on handset.
- Files of 10 MB or larger cannot be moved/copied from microSD Card to handset.
- Data backed up in other SoftBank handsets may not be restored in 832P depending on type and size.

●Delete Items from microSD Card ●View microSD Card Memory Capacity ((1) P.9-20)

PC File Transfers

Folder Structure

Files moved or copied from 832P to microSD Card are managed as shown below:

• Save files in folders by file type.

DCIM						
 Still images saved to microSD Card 						
F	PRIVATE					
ľ	MYFOLDER					
Utility						
		Calendar	Calendar.BCK	Calendar Backup files		
		Contacts	Contacts.BCK	Phone Book Backup files		
		Rights		Content Key Backup files		
		Tasks	Tasks.BCK	Tasks Backup files		
		Memo	Memo.BCK	Notepad Backup files		
	Ν	Mail				
		Drafts	Drafts.BCK	Drafts Backup files		
		Inbox	Inbox.BCK	Incoming Mail Backup files		
		Outbox	Outbox.BCK	Unsent Messages Backup files		
		Sent Messages	Sent Messages. BCK	Sent Messages Backup files		
My Items						
		Book		E-comics		
		Bookmarks	Bookmarks.BCK	Bookmarks Backup files		
		Custom Screens		Familiar Usability applications		

	Flash(R)	Flash [®] files	
	Games and More	S! Appli	
	Music	Sound files with .3gp, .mp4, .smc	
	Other Documents	Other files	
	Pictograms	My Pictograms	
	Pictures	Still images moved/copied from handset to Main Folder in microSD Card	
	Sounds & Ringtones	Sound files of: up to 5 MB with .3gp, .mp4, up to 300 KB with .mid, .midi, .amr	
	Videos	Videos moved/copied from handset to Main Folder in microSD Card	
	WMFile*	PC Movies saved from PC to microSD Card	
SD	_VIDEO		
•	 Videos saved to microSD Card 		

- Some copy protected files have extensions different from above.
- When moving/copying videos from microSD Card to handset, file format or file size may change.
- * If WMFile does not appear in My Items (MYFOLDER), create and save a folder titled WMFile.

Using Data on microSD Card

With a microSD Card inserted, connect handset with a PC via USB cable (not included) to read/write data from/onto microSD Card.

Following equipment is required:

- Connector Cable: USB cable
- PC: PC with USB port (Universal Serial Bus Specification Rev 1.1 compliant)
- Compatible Operating Systems: Windows[®] 2000, Windows[®] XP, Windows Vista[®] (Japanese version in each)

Main Menu ► Settings ► Connectivity ► USB Mode ► microSD Mode

- Connect handset to PC via USB cable while 832P is on
 - PC recognizes microSD Card.
 - 🛱 appears in Standby (handset).

Note

- Even if incoming call arrives, reading/writing data continues during calls. After calls, check indicators on PC to see if reading/writing is complete.
- File names saved in microSD Card may not properly appear if changed on PC.

microSD Card Functions

- Restore microSD Card items (Check microSD)
- Main Menu > Tools > microSD Backup > Tr/[Menu]
 Check microSD > YES
- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- It may take 30 seconds or longer to complete Check microSD depending on data volume on microSD Card.
- 832P cannot check incompatible or unformatted microSD Cards.
- 832P may delete files and folders that fail to be restored.

Delete Items from microSD Card

- > Main Menu > Tools > microSD Backup > Select a category
 - ► (Highlight a file →) ∑ [Menu] ► Delete this or Delete all (► For Delete all, enter Phone Password) ► YES
- Content Key cannot be deleted.

View microSD Card Memory Capacity

- > Main Menu ► Tools ► microSD Backup ► 🕎 [Menu]
 - microSD info

Back Up Content key

Copy Content Keys to microSD Card from handset or to handset from microSD Card.

> Main Menu Settings Security Content Key

- ► Copy to microSD or Copy from microSD ► Enter Phone Password
- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to microSD Card must be inserted to move Content Keys from microSD Card.
- Some applications are made for use on specific models. Some models move Content Keys to microSD Card instead of backing up. Contact SoftBank Mobile Customer Center, General Information for more information.
- Content Keys are backed up after the previous back up file is deleted. To back up another key and keep existing keys, move existing keys to handset first and back up a new key.

ອ Managing Files

Connectivity


Infrared	10-2
Before Using Infrared	
One/Multiple File Transfer	
All File Transfers	
IC Transmission	10-4
One File Transfer	
All File Transfers	
SoftBank Utility Software (Japanese)	10-6
USB (Japanese)	10-6
Setting USB Mode	
Transferring Data via USB Cable	
Data Communication via USB Cable	

Infrared

Before Using Infrared

Transfer Phone Book/Calendar events, messages, bookmarks and Data Folder files wirelessly between 832P and compatible devices, including PCs and other mobiles.

- 832P infrared function is based on IrMC1.1, however, some IrMC1.1based device transmissions may not be transmitted/received within specification.
- Debris may inhibit infrared transfers; clean infrared ports with a soft cloth beforehand.
- Direct sunlight/fluorescent light may inhibit transfers.
- Align infrared ports within 20 cm of one another and make sure no objects are placed between them. Do not move the devices until transfer is complete.

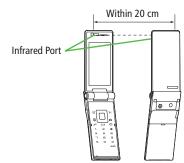

Transferable Files

Condition Transferable file	One file	All files
Phone Book (Account Details)	0	Up to 1000
Calendar events 1	0	Up to 1000
Tasks	0	Up to 100
Received message	0	Up to 1000
Sent message	0	Up to 500
Drafts	0	Up to 10
Notepad	0	Up to 20
Ring Songs&Tones	0	×
Still image ^{2 3}	0	×
Video ³	0	×
Bookmark (Yahoo! Keitai, PC Site Browser)	0	Up to 100 each
○: Transferable ×: Not transferable		

X: Not transferable

¹ Saved Holidays/Memorial days not transferable

² Including Flash[®] files

³ Multiple files transferable

Note

- Following files cannot transfer:
 - Files prohibited for transfers from 832P
 - Phone Book entries and SMS on USIM Card
- If memory becomes full, remaining entries are truncated (Memory List: 🖙 P.18-24).

10

One/Multiple File Transfer

● Transferable Files: 🖙 P.10-2

Sending

1 Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	$>$ Y' [Menu] \rightarrow Send Ir data \rightarrow Send phonebook
Account Details	> 0 [lr]
Messages	$>$ \mathbf{Y}' [Menu] \rightarrow Send Ir data \rightarrow Send This
Bookmarks	$>$ \mathbf{Y} [Menu] \rightarrow Send to ExtrnlDvcs \rightarrow Send Ir data \rightarrow Send This
Still Images/ Videos	 ∑r[[Menu] → Send Ir data To send multiple files: ∑r[[Menu] → Multiple-choice → Select files to send → ∑r[[Menu] → Send Ir data
Other Files	$>$ \mathbf{Y} [Menu] \rightarrow Send Ir data

2 YES

Receiving

Main Menu ► Tools ► Receive via Infrared ► Receive

1 When a file is received, **YES**

Send files from sender side within 30 seconds.

• To receive subsequent files, select YES.

All File Transfers

Precaution

 Receiving all files overwrites all saved files including secret/protected files.

Files saved in Secret Mode are also deleted.

 Sending all Phone Book entries sends Account Details as well. User-edited information is overwritten (handset number remains).

Session Number

Session number (4 digits) is required for all file transfers via Infrared and IC transmission. Sender and recipient must enter same Session number to complete transfers.

Sending

Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	$\mathbf{Yr}[Menu] \rightarrow Send \ Ir \ data \rightarrow Send \ all \ phonebook$
Messages	$\boxed{\mathbf{Yr}}[Menu] \rightarrow \mathit{Send} \ \mathit{Ir} \ \mathit{data} \rightarrow \mathit{Send} \ \mathit{All}$
Bookmarks	\mathbf{Y} [Menu] \rightarrow Send to ExtrnlDvcs \rightarrow Send Ir data \rightarrow Send All
Other Files	∑r [Menu] → Send all Ir data

2 Enter Phone Password \rightarrow Enter Session number \rightarrow **YES** Recipient must enter the same Session number to start transfers.

Receiving

Main Menu ► Tools ► Receive via Infrared ► Receive All

1 Enter Phone Password → Enter same Session number as sender's → **YES** → **YES**

Saved files are deleted, and transfer starts.


IC Transmission

Exchange files with another IC compatible handset using reader/writer function.

• Type of files and transfer conditions are same as those for infrared file transfer (CPP.10-2).

Multiple file transfer is not available.

- IC transmission is not available when IC Card Lock (
 P.16-5) is activated.
- When receiving dada, end all active functions.
- If there is difficulty in file transfer, move a 💭 logo close to or away from the other logo or move each side up, down, left, or right.
- Data cannot be sent during charging battery.

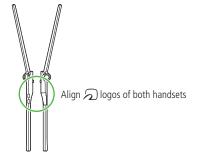

One File Transfer

Before Receiving a File

- Receive IC Datum is set to ON by default. When Receive IC Datum is OFF, One File Transfer is unavailable.
- To set *Receive IC Datum* on:
- Main Menu > Osaifu-Keitai > IC Card Settings
- Receive IC Datum > ON

Sending

Highlight a file, and follow the steps below

Files to Send	Operation/Description
Phone Book	$>$ Y [Menu] \rightarrow <i>IC transmission</i> \rightarrow <i>Send phonebook</i>
Account Details	>[ICtrans]
Messages	$>$ \mathbf{Y} [Menu] \rightarrow <i>IC Transmission</i> \rightarrow <i>Send This</i>
Bookmarks	> \mathbf{Y} [Menu] \rightarrow Send to Extrn/Dvcs \rightarrow IC transmission \rightarrow Send This
Other Files	$>$ Y /[Menu] \rightarrow <i>IC transmission</i>

2 YES

Receiving

1 Align \bigcirc logo on sender side with 832P (recipient) \rightarrow YES

All File Transfers

● Precautions/Session number (ピアP.10-3)

Sending

1 Highlight a file, and follow the steps below

Operation/Description
> ∑r/[Menu] → IC transmission → Send all phonebook
$>$ Y' [Menu] \rightarrow <i>IC Transmission</i> \rightarrow <i>Send All</i>
$>$ $\underline{\mathbf{x}}_{l}$ [Menu] \rightarrow Send to ExtrnlDvcs \rightarrow IC transmission \rightarrow Send All
$>$ [Menu] \rightarrow <i>AllIC transmission</i>

2 Enter Phone Password \rightarrow Enter Session number \rightarrow **YES** Recipient must enter the same Session number to start transfers.

Receiving

- Align \supset logo on sender side with 832P (recipient)
- 2 **YES** → Enter Phone Password → Enter same Session number as sender's Saved files are deleted Transfer starts

SoftBank Utility Software (Japanese)

Phone Book, Calendar, Tasks, messages, Bookmarks, Notepads and Data Folder can be transferred to a PC, edited or managed by using SoftBank Utility Software.

 For details on and downloading SoftBank Utility Software, visit http://mb.softbank.jp/r/utilitysoft/cd/ (Japanese)

Note

- USB cable (not included) is necessary for using SoftBank Utility Software.
- S! Appli, PC Movies, TV, Lifestyle-Appli, Books, Customized Screen, Templates and Other Documents cannot be backed up.
- Copy protected files may not be backed up.
- Set **USB Mode** to **Communication Mode** (ピ゚゚**F**Right).

USB (Japanese)

Connect 832P to a PC via USB cable (not included) specified by SoftBank for data transfer or data communication.

Setting USB Mode

<Default> Communication Mode

Main Menu > Settings > Connectivity > USB Mode

Select an item (See below)

Item	Operation/Description
Communication Mode	Packet transmission, 64K data transmission, data transfer and calls with USB handsfree compatible devices are available (CPP.10-7)
microSD Mode	Read/write data on microSD Card (ſ⊆͡ᢖP.9-20)
MTP Mode	Transfer/delete music data via Windows Media® Player on PC ($\square P.8-4$)

Transferring Data via USB Cable

- Transfer data using SoftBank Utility Software (C→Left).
- Transferring data in microSD Mode (C₽P.9-20)

Data Communication via USB Cable

Use 832P as a modem for Internet access by connecting 832P with a PC.

- Download utility software from URL below and install on PC. http://panasonic.jp/mobile/support/download/832p/index.html
- 1 Install "USB ドライバ (USB Driver)" and "Modem Wizard" from Utility Software (832P) to a PC
- 2 Set 832P to *Communication Mode* (C→P.10-6), and connect 832P to PC via USB cable
 - Power up 832P before connecting to PC via USB cable.
- **3** Start up "Modem Wizard", and operate communication setup
 - "Modem Wizard" enables you to set up APN and dial-up easily. For setup/starting procedures, see "832P Modem Wizard" Help.

Note

 Connecting handset to a PC or PDA for Internet access may incur high packet transmission fees.



Handset Security

Changing Phone Password 11-2
Security Functions 11-2
USIM PINs11-2
Keyguard11-3
Privacy Key Lock11-4
Personal Data Lock 11-4
Secure Remote Lock 11-6
Key Pad Dial Lock 11-7
Side-keys Guard11-8
Additional Lock Functions11-8
Restricting Calls/Messages11-8
Hiding Call Logs and Sent/Received Address List
Secret Mode/Secret Data Only11-9
Setting Secret Mail11-9
Mail Security11-10
Call Restrictions11-10
Delaying Ringtone11-11
Rejecting Unknown Callers 11-11
Rejecting Calls without Caller ID 11-11
Reset
Reset Settings11-12
All Reset11-12

Changing Phone Password

<Default> 9999

Change Phone Password as required.

● For Phone Password details: C P.1-23

Main Menu
Settings
Security
Change Phone Password

- Enter current 4-8-digit Phone Password
- 2 Enter new 4-8-digit Phone Password → YES

Security Functions

USIM PINs

● For more information about PINs: 🗁 P.1-3

Note

• Emergency numbers (110, 119, 118) are not dialable in PIN/PIN2, PUK/PUK2 entry window.

PIN Authentication

Activate to require PIN entry each time handset is turned on.

Main Menu
Settings
Security
PIN Authentication

Enter Phone Password → *PIN Authentication*

2 ON

- To deactivate PIN Authentication: OFF
- 3 Enter PIN

Changing PIN/PIN2

• Set **PIN Authentication** to **ON** before changing PIN (

Main Menu
Settings
Security
PIN Authentication

- Enter Phone Password → *Change PIN* or *Change PIN2*
- 2 Enter current PIN/PIN2
- 3 Enter new PIN/PIN2
- 4 Reenter new PIN/PIN2

11

11 Handset Security

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unblocking Key (PUK/PUK2).

- For information about PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (
 ∠ P.18-33).
- In PIN lock mode, enter PUK/PUK2
- Enter new PIN/PIN2
- Reenter new PIN/PIN2

Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled (Even turning off power is counted as one incorrect entry.). Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (C ₽P.18-33).

Keyguard

Lock handset keys to prevent accidental operation except when turning power on/off or answering incoming calls.

In Standby, press and hold



- When Keyguard is set, 🖶 appears.
- To cancel Keyguard, repeat operation.

While Keyguard is Active

- Emergency numbers (110, 119, 118) are dialable even when Keyguard is active. Entered numbers do not appear on Display. Once numbers are dialed, Keyguard is canceled.
- Press r to disable Calendar event tone or Alarm.
- Keyguard can be canceled even during a call.

Note

• Turning off power cannot cancel Keyguard.

Privacy Key Lock

<Default> OFF

Set Privacy Key Lock to require Phone Password for using 832P except for turning handset on/off and answering calls.

Main Menu ► Settings ► Security ► Privacy Key Lock

1 Enter Phone Password

When Privacy Key Lock is set, 🔚 appears in Standby.

 To cancel Privacy Key Lock, enter Phone Password in Standby. If Phone Password is incorrectly entered five times, 832P turns off.

While Privacy Key Lock is Active

- Emergency numbers (110, 119, 118) are dialable even when Privacy Key Lock is active.
- Only phone numbers appear on Display for incoming calls.
- Message ringtones or Alarm tones are disabled.
- Calendar event tone or Alarm is disabled.
- S! Quick News and some indicators on Display do not appear. They appear after Privacy Key Lock is canceled.

Note

• Turning off power cannot cancel Privacy Key Lock.

Personal Data Lock

Set Personal Data Lock to prevent others from reading or tampering with your personal information in Phone Book or Data Folder. Activate to require Phone Password for accessing personal data.

Locked Functions/Data

- · Messaging
- · S! Appli
- · Phone Book search/saving/setting
- Memory Manager/ Memory Status (Phone Book)
- $\cdot \,$ Account Details
- · Restrictions (Phone Book)
- \cdot Notepad
- \cdot Calendar
- Tasks
- Shortcuts
- · Event Indicators
- · Camera/Video Camera
- Lifestyle Appli
- microSD Backup
- \cdot Answer Phone
- Voice Recorder
- · Customized Screen
- $\cdot~$ Voice Announce

- · Software Update
- · Yahoo! Keitai viewing/setting
- $\cdot\,$ PC Site Browser viewing/setting
- $\cdot\,$ Bookmarks/ Saved Pages
- $\cdot \ \operatorname{BookSurfing}^{\scriptscriptstyle \otimes}$
- e-Book Viewer
- · S! Quick News
- $\cdot \,$ S! Info Ch./Weather
- · Content Key obtaining/backup
- · Voice Dial
- · Data Folder
- Music Player
- · Digital TV
- $\cdot\,$ Bar Code Reader
- $\cdot\,$ Receive via Infrared
- $\cdot\,$ IC Data transmission
- Alarm
- · Reset Settings
- All Reset

Activating/Canceling Personal Data Lock

<Default> Deactivate

Main Menu Settings Security Personal Data Lock

Enter Phone Password → *Activate/Deactivate*

While Personal Data Lock is set, $\frac{1}{2}$ appears in Standby.

• To cancel Personal Data Lock, repeat operation. If Lock OFF at Open is set, password entry is requested when 832P is opened.

Canceling Personal Data Lock Temporarily

When Phone Password is entered, $\frac{1}{2}$ disappears and disabled functions become temporarily available.

- Once handset returns to Standby while no functions are active, Personal Data Lock is active again.
- Some functions remain unavailable. Deactivate Personal Data Lock to use the following:
 - · Receiving IC data · Reject unknown

Note

- While Personal Data Lock is set, some indicators do not appear in Standby. They appear after lock is canceled.
- Turning off power does not cancel Personal Data Lock.

Customizing Personal Data Lock

Enable/disable Alarm, incoming message notification, etc. while Personal Data Lock is active.

Main Menu
Settings
Security
Personal Data Lock

1 Enter Phone Password → *Customize*

Select an item (See below)

ltem	Operation/Description
Alarm Tone	Enable/disable Alarms (Calendar, TV timer, or other alerts) or TV Timer Recording. > Select an item → <i>Accept</i> (Enable) or <i>Not Accept</i> (Disable)
Incoming Call Act	 Show/hide Event Indicator (incoming messages) or Phone Book entry information (incoming calls). > Select an item Incoming Message → Accept (Show indicator) or Not Accept (Hide indicator) Phone Book Available → Accept (Show Phone Book Entry information) or Not Accept (Hide information)
Display/Tone	 Enable/disable Display settings, ringtones or indicators. > Select an item Internal Display → Accept (Enable Display Settings) or Not Accept (Disable) Ring Tones → Accept (Enable Sound Settings) or Not Accept (Disable) S! Quick News → Accept (Show information) or Not Accept (Hide information) S! Info Ch./Weather → Accept (Show indicators) or Not Accept (Hide indicators)

Activating Personal Data Lock when Closing Handset

<Default> Released

Set Timer Lock at Close to automatically activate Personal Data Lock when specified time has elapsed after 832P is closed.

Main Menu
Settings
Security
Timer Lock at Close

1 Enter Phone Password \rightarrow **Personal Data Lock** \rightarrow Select a time

Confirmation appears asking whether to activate Lock OFF at Open. When Timer Lock at Close is set, $\frac{20}{3}$ appears.

• When **OFF** is selected, setting is canceled.

Opening Personal Data Lock OFF Window when Opening Handset

<Default> OFF

Main Menu ► Settings ► Security ► Lock OFF at Open

- Enter Phone Password
- Personal Data Lock → ON

Note

 When Timer Lock at Close and Lock OFF at Open are both active, canceling Personal Data Lock when opening handset temporarily cancels lock. However, lock activates again when specified time elapses after closing 832P.

Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

 For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp) or My SoftBank.

Accessing My SoftBank from Handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ▶ Yahoo! Keitai ▶ Yahoo! Keitai ▶ メニューリスト ▶ My SoftBank ▶ English

Follow onscreen instructions.

Note

• Emergency numbers (110, 119, 118) are dialable even while Secure Remote Lock is set.

Showing Messages during Secure Remote Lock

<Default> OFF

Set Display message to appear when Secure Remote Lock is active.

• Use preset message or create a message.

Main Menu
Settings
Security
Lock Message

1 Enter Phone Password

2 Display Setting → ON

■ Save Lock Messages > After Step 1, *Message* → Enter a message

Key Pad Dial Lock

<Default> Released

Allow dialing only from Phone Book entries and lock dialing with keypad. Unauthorized use of 832P can be prevented.

Unavailable Operations

- Dialing with keypad
- Phone Book (saving, editing, deleting, copying from microSD Card, and sending/receiving via Infrared, IC transmission)
- · Sending SMS to unknown numbers
- · Sending S! Mail

Available Operations

- · Dialing from Phone Book or Voice Dial
- Dialing from Redial, Outgoing Call Logs, Incoming Call Logs, Sent address, or Received address (only phone numbers saved in Phone Book)

Main Menu 🕨 Settings 🕨 Security 🕨 Key Pad Dial Lock

Enter Phone Password

While Key Pad Dial Lock is set, 🔓 appears in Standby.

• To cancel Key Pad Dial Lock, repeat operation.

Note

• Emergency numbers (110, 119, 118) are dialable even while Key Pad Dial Lock is set.

Side-keys Guard

<Default> OFF

Set Side-keys Guard to disable side key operations while 832P is closed.

Main Menu > Settings > Phone Settings > Side-keys Guard

1 *ON*

While Side-keys Guard is set, 🖑 appears in Standby.

• To set Side-keys Guard to **OFF**, repeat operation.

Note

When *Menu Icons* is set to *Pattern 5* or *Customize*, press

 in Standby → Press and hold ★ to toggle *ON/OFF*.

Additional Lock Functions

■ IC Card Lock Deactivate Osaifu-Keitai[®] functions (CPP.16-5).

Remote Lock

Deactivate Osaifu-Keitai® functions remotely (27.16-5).

Restricting Calls/Messages

Hiding Call Logs and Sent/Received Address List

<Default> ON

Main Menu
Settings Incoming Settings Call Logs

Enter Phone Password

Select an item (See below)

Item	Operation/Description
Incoming	Show/hide Incoming Call Logs/Received address list
Outgoing	Show/hide Redial/Outgoing Call Logs/Sent address list

3 *OFF*

1

Note

 While Incoming Call Logs is OFF, Answer Phone (Voice Calls) does not play. Selecting Missed Call indicator does not show Missed calls list.

Secret Mode/Secret Data Only

<Default> Deactivate

Phone Book entries and calendar events saved as secret data appear only when 832P is in Secret Mode/Secret Data Only.

● Set Phone Book or Calendar events as secret data (Phone Book: 1, 4-8, / Calendar events: 1, 2-5)

Main Menu
Settings
Security

1 Select an item (See below)

Item	Operation/Description
Secret Mode	View all data including secret data
Secret Data Only	View only secret data

2 Enter Phone Password

For Secret Data Only, number of saved secret data appears. When Secret Mode/Secret Data Only is set, 🖥 appears (For Secret Data Only, indicator flashes.).

Cancel Secret Mode/Secret Data Only

> In Standby, 💿 or follow Step 1 above.

Cancel Secret Setting

> In Phone Book/Calendar event window, [Yr] [Menu] → Release secret

Note

Tip

Settings

 Select whether to save data edited/saved in Secret Mode as secret data. Data saved/edited in Secret Data Only are saved as secret data.

Set Learning Feature Off for Secret Mode/Secret Data Only

Setting Secret Mail

(**∠**]=P.17-9)

<Default> ON

Set messages from secret Phone Book entries to appear only when handset is set to Secret Mode or Secret Data Only.



- Universal Settings → Secret Mail Display
- 3 Enter Phone Password

4 OFF

Note

 When both Spam Filter and Secret Mail Display are set, messages from Phone Book entries saved as secret mode are sorted into Spam Folder (Safe List: 17-P.13-17).

Mail Security

Set handset to require Phone Password for opening mail boxes or operating Server Mail.

- $\square \rightarrow Settings$
- 2 Universal Settings → Mail Security
- **3** Enter Phone Password \rightarrow Repeat item selection* \rightarrow [\square [Finish]

* To cancel: press 💿 again.

Set/Cancel Mail Security by Incoming Mail Folder

Call Restrictions

Reject/accept/forward calls from specified phone numbers, or restrict calling unspecified phone numbers.

- \bigcirc \rightarrow Search Phone Book
- Select an entry → [Y?] [Menu] → Restrictions
- 3 Enter Phone Password
- 4 Select an item (See right)

	Operation/Description
Restrict	Allow calls only to set numbers
Dialing	
Call Rejection	Reject specified numbers
Call	Accept from specified numbers only
Acceptance	
Call	Automatically forward specified numbers
Forwarding	● Set destination numbers (Call Forwarding: 🖙 P.2-17)
	el Phone Book Restrictions Phone Book Restrictions Enter Phone Passwor
 Main Menu Select an it YES 	 Phone Book ► Restrictions ► Enter Phone Passwor em* ► Select a Phone Book entry ► Select a number
 Main Menu Select an it YES * "★" appears f Highlight an it 	 Phone Book ► Restrictions ► Enter Phone Passwor em* ► Select a Phone Book entry ► Select a number

1 Handset Security

2

Delaying Ringtone

<Default> OFF

Delay ringtone/vibration for Voice/Video Calls from unknown numbers.

Main Menu ► Settings ► Incoming Settings ► Ring Time Settings ► Ring Starting Time

- **ON** \rightarrow Enter start time
- Hide Missed Call Records (Disconnected during Ringtone Delay)
- > Main Menu > Settings > Incoming Settings
 - ▶ Ring Time Settings ▶ Missed Calls Display ▶ Not Display

Rejecting Unknown Callers

<Default> Accept

Main Menu
Settings
Security
Reject Unknown

1 Enter Phone Password $\rightarrow Reject$

Rejecting Calls without Caller ID

<Default> Accept

Reject calls without Caller ID or from pay phones.

Main Menu
Settings
Security
Call Setting w/o ID

- 1 Enter Phone Password
- 2 Select an item → *Reject*

Reset

Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu
Settings
Security
Reset Settings

1 Enter Phone Password → YES

Note

• Some default settings may not be restored.

All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu Settings Security All Reset

1 Enter Phone Password → **YES** → **YES** 832P automatically turns off and restarts.

Note

- Fully charge battery (📋) beforehand.
- Phone Password is reset to default.
- USIM Card/microSD Card files are not affected.
- Data transmission settings (set via PC) are not affected.
- Non-restorable items when deleted by All Reset:
 - · Customized settings, Call Logs, downloaded S! Appli, etc.

Tools

Opening Calendar12	2-2
Creating Calendar Events	
Saving Holidays/Memorial Days12	
Viewing/Editing Calendar Event Details12	
Calendar Functions	
Tasks	-6
Saving a Task12	
Using Tasks	
Alarms	
Alarm Tone	
Setting Alarm	
Calculator	
Notepad12	
Saving a Note12	
Notepad Functions	2-9
Dictionary (Japanese) 12-1	
Activating Dictionary12-	
Dictionary Applications12-	

Sound Recorders	
Voice Recorder	
Voice Announce	
Bar Code Reader	12-12
Scanning Barcodes	
Viewing/Editing Scanned Data	
Using Scanned Data	
Location Settings	12-14
Positioning Lock	
Sending Location Information	

12

Calendar

View by day, week or month; set Alarms for events.

Opening Calendar

Main Menu 🕨 Tools 🕨 Calendar

Current month appears.

- When a date with Calendar events is selected, number of AM and PM events and up to three contents appear.
- 🖄 [Prev.] or 🗖 [Next] to show previous/next month calendar.
- To switch Monthly/Weekly view: CrP.12-4


	20	09/	5/	7(T)	าน)	
Sun	Mon	Tue	Wed	Thu	Fri	Sat
					1	2
3	4	5	6		8	9
10	11	12	13	14	15	16
17	18	19	20	21	22	23
24	25	26	27	28	29	30
31						
AM	1	2	G	М	1	
9 1	1:35	i Sc	hedu	led		
81	1:40) Sh	opp	ing		
11	2:30) Me	al			
Ne	W	Æ	Â	an.	Me	enu
Pre	٧.		eiec	τP	Ne	ext

Monthly View

Creating Calendar Events

Save up to 1000 entries.

 Main Menu 🕨 Tools 🕨 Calendar





2 Select an item (See below)

ltem	Operation/Description
Select icon/	> Select an icon \rightarrow Edit subject
Edit summary	
Whole day	> OFF or ON
setting	 When ON is set, Alarm goes off at 0:00 a.m.
Date (from)	> Enter start date and time
Date (to)	> Enter end date and time
Repeat	> Select a repetition \rightarrow (For Select day , check days $\rightarrow \square$ [Finish])
Alarm	 > Select an Alarm type (→ For <i>ON/Set time</i>, enter time) ● Alarm Tone: □ P.12-7
Alarm tone	> Select an Alarm tone type \rightarrow Select a folder \rightarrow Select an Alarm tone
Contents	>Enter event description

12 Tools

3 [Finish]

Calendar Event Indicators

Following indicators appear in Calendar Window.

- (Blue): Morning event
- (Orange): Afternoon event
- ___ (Underscore): Event that lasts for two days or longer
- Following indicators appear on Display.
 - 🔯 : Alarm

M : Monthly Y : Yearly

D : Daily

W : Weekly

eeklv

Note

- Calendar events between 00:00 on 2000/01/01 and 23:59 on 2037/12/31 can be saved on 832P.
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (C⇒P.11-5).

Saving Holidays/Memorial Days

Save up to 100 entries (one entry a day) each for Holidays or Memorial days.

Main Menu 🕨 Tools 🕨 Calendar

1 Highlight a date → ⊠[New] → Holidays or Memorial days

2 Select an item (See below)

Item	Operation/Description
Date setting	>Enter a date
Repeat	 Select a repetition type 1 time does not repeat Holidays/Memorial days events.
Edit holiday/ anniversary	>Enter description

3 ⊠[Finish]

Indicators

Holidays appear in red.

Memorial days are marked with a red circle.

● Following indicators appear in Calendar/Calendar Event List Window: ★: Holidays
Ø: Memorial days
Y: Yearly repeat

Viewing/Editing Calendar Event Details

Main Menu Tools Calendar

to select a date

- Select an event
 - To edit: [Edit] → Edit selected item (Schedule: 17 From Step 2 on P.12-2/ Holiday, Anniversary: Cr From Step 2 on P.12-3)

	Sch	nedule		
🕈 Summ	arv			
	duleo	•		
G.₩ho I				
Date				UFF
		7(Thu)	113	: 35
●Date				
		7(Thu)	11:	: 35
©© Repe	at			0FF
'∕⊘Alar	m			0FF
Cont	ents			
Sche	duleo	đ		

2009/ 5/ 7(Thu)

1:35~11:35 2 11:40~12:00 ¥ Shopping 3 12:30~13:00 **Calendar Event List**

Calendar Event Details

Calendar Functions

- From Main Menu Tools Calendar
- Functions Available in Calendar Window

> Highlight a date $\rightarrow \boxed{\mathbf{v}}$ [Menu] \rightarrow Select an item (See below)

ltem	Operation/Description
New	Create a new entry (🖙 P.12-2, P.12-3)
Weekly display/ 1 Month	Toggle Monthly/Weekly view
Icon display	Entries in category of selected icon appear > Select an icon
No. of schedules	Display number of saved Schedule, Holiday or Anniversary entries
Add shortcut icon	Create a shortcut (⊆ P.1-17)
Send all Ir data	(_₽ P.10-3)
AllIC transmission	(<u>r</u> ₽.10-5)
Delete past	> Select a category to delete \rightarrow YES
Delete all	> Enter Phone Password \rightarrow Select an item \rightarrow YES
Reset holidays	Restore deleted Holidays > YES

2

Functions Available in Calendar Events List/Details

> Select a date (→ Select a Schedule, Holiday or Anniversary) → $\boxed{\mathbf{x}}$ [**Menu**] → Select an item (See below)

Item	Operation/Description
New	Create a new entry (13-P.12-2, P.12-3)
Edit	Edit selected item (12-4)
Сору	Copy an entry to another day > Enter date and time to copy an entry to
Calendar display	Switch from Icon display to Calendar display
Icon display	Entries in category of selected icon appear > Select an icon
Set secret mode/ Release secret	Activate/deactivate Secret Mode > YES (→ For Set secret mode, enter Phone Password) • Secret entries appear only in Secret Mode or Secret Data Only (→P.11-9).
Compose S! Mail	Create S! Mail by copying event date and content to message text (ſ ₱ From Step 2 on P.13-4)
Send Ir data	(⊆ ₽.10-3)
Send all Ir data	(┌─ ᢖ₽.10-3)
IC transmission	(┌─ ᢖ₽.10-5)
AllIC transmission	([] 7 P.10-5)
Copy to microSD	Copy an entry to microSD Card > YES ● To display data on microSD Card: C₽P.9-17
Delete this	> YES

ltem	Operation/Description
Delete past	Delete selected category entries up to the highlighted date
	> Select a category to delete \rightarrow YES
Delete select	> Check entries to delete $\rightarrow \square$ [Finish] $\rightarrow YES$

12 Tools

Tasks

Make quick notes of task to manage in Task list.

Saving a Task

Main Menu 🕨 Tools 🕨 Tasks

- $\square [New] \rightarrow Select an item (See below)$
 - To check saved Tasks, select a Task. To edit, press [Edit] in detail window.

Item	Operation/Description
Edit Tasks	> Enter content
Due date	 > Select how to enter due date → Enter due date • Select <i>No date</i> to enter none.
Priority	> Select a priority level
Category	> Select a category
Alarm	 > Select an Alarm type (→ For <i>ON/Set time</i>, enter time) ● Alarm Tone: C[*] P.12-7
Alarm tone	> Select an Alarm tone type \rightarrow Select a folder \rightarrow Select an Alarm tone

2 ⊡[Finish]

• When content is not entered, Tasks cannot be saved.

Note

 Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (C⇒P.11-5).

Using Tasks

In Tasks window, press **Y** [Menu] for following operations.

ltem	Operation/Description
New	Create a new entry (
Edit	Edit an entry (
Change status	 Change status indicator shown in Tasks list > Select a status (→ For <i>Completion</i>, select an item → Enter Completion date) Overdue status indicator turns red.
Show by category	> Select a category
Sort/Filter	Sort list by due date, entry order, status, etc. > Select a condition
Add shortcut icon	Create a shortcut (CFP.1-17)
Send Ir data	(⊆7 P.10-3)
Send all Ir data	(Ľ ≇P.10-3)
IC transmission	(⊑ ₽.10-5)
AllIC transmission	([]≇P.10-5)
Copy to microSD	Copy a Task to microSD Card > YES ● To display data on microSD Card: C₽P.9-17
Delete this	> YES
Delete select	> Check entries $\rightarrow \square$ [Finish] $\rightarrow YES$
Delete completed	Delete an entry in <i>Completion</i> status > YES
Delete all	> Enter Phone Password \rightarrow YES

12 Tools

Alarms

Alarm Tone

When scheduled time arrives, alarm tone sounds and Notification Light illuminates. Alarm image corresponding to icon appears on Display.

To Stop Alarm Tone for Calendar Events, Tasks or Alarm Press any key.

Missed Alarm

"Missed Alarm" Event Indicator appears in Standby for alarms missed during Privacy Key Lock, Personal Data Lock or Infrared transmission once locks are canceled or transmission ends. Select indicator to view content.

Note

- When one or more Alarms are set to the same time, alarm sounds in the order of : "Alarm" → "Timer Recording" → "Tasks" → "Calendar"
 - → "Timer Watching"

For Tasks, "Missed Alarm" indicator appears.

Setting Alarm

Set up to five alarms. Alarm tone sounds at the specified time once, everyday or weekly as set.

Main Menu > Tools > Alarms

Highlight an Alarm $\rightarrow \square$ [Edit]



7 Follow the steps below

ltem	Operation/Description
Alarm (Alarm	Activate or cancel Alarm
on/off)	>ON or OFF
Time setting	> Set Alarm time
Repeat	> Select a repetition (→ For <i>Select day</i> , check days → [🖾 [Finish])
Alarm tone	> Select an Alarm tone type \rightarrow Select a folder \rightarrow Select an Alarm tone
Alarms (Alarm volume)	> 🖸 to set Alarm tone volume
Snooze	>ON or OFF (→ For OFF, enter time)
setting	 When Snooze is set to ON, Alarm tone sounds for 60 seconds, repeating up to six times at five minute intervals.
Prefer	>ON or OFF
manner mode	 Set Manner Mode or Alarm priority.



Alarm Indicators

- Following indicators appear:
 - D : Repeats daily
- W : Repeats weekly

Cancel & Reactivate Alarm

- > In Alarms list, press $\fboxr[Menu] \rightarrow$ Select *set this* or *Release this* \rightarrow *YES*
- Cancel or reactivate an alarm entry as required.
- Highlight an entry \rightarrow to reactivate/cancel Alarm.

Cancel Snooze


> Press any key \rightarrow \bigcirc

Note

- Copy protected files may not be set as Alarm tone.
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (□P.11-5).

Calculator

Main Menu > Tools > Calculator

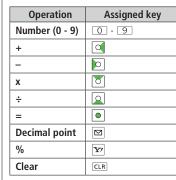





Notepad

Save up to 20 notes.

Saving a Note

Main Menu 🕨 Tools 🕨 Notepad

1 <Not Recorded>

• Select a saved note to view content. [•][Edit] to edit.

2 Enter text

• Up to 256 double-byte or 512 single-byte characters can be entered.

		Notepad	
1	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
2	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
3	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
4	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
5	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
6	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
7	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
8	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
9	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
0	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
×	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
#	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
	<not< th=""><th>Recorded></th><th></th></not<>	Recorded>	
		Salacto	Menu
		Delecth	

Notepads Window

Notepad Functions

In Notepad list window, press **Y** [Menu] for following operations.

Item	Operation/Description
	• •
Edit	Edit a saved note
Compose	Create S! Mail by copying content to message text
S! Mail	(⊑≇From Step 2 on P.13-4)
Edit schedule	Copy a note to Schedule to create a Calendar event
	> Schedule → Save a new note (Cr From Step 2 on
	P.12-2)
Add shortcut	Create a shortcut (ピョP.1-17)
icon	
Send Ir data	(⊆7 P.10-3)
Send all Ir	(⊆ ₹P.10-3)
data	
IC	(⊆ ₽.10-5)
transmission	
Allic	(⊆ ₽.10-5)
transmission	
Copy to	Copy a note to microSD Card
microSD	> YES
	 To display data on microSD Card:
Notepad Info	Display entry date, latest modified date and category of
	note
Category	> Select a category
	 When no category applies, select None.
Delete this	> YES
Delete	> Check notes $\rightarrow \square$ [Finish] \rightarrow YES
selected	
Delete all	> Enter Phone Password → YES

12 Tools

Dictionary (Japanese)

Use ケータイTOOL<辞書> to access preinstalled dictionaries and reference books.

- ケータイTOOL<辞書> is an S! Appli.
- The following dictionaries are preinstalled.

Dictionary applications	英会話とっさのひとことクイズ, 英会話とっ さのひとこと辞典, 学研「辞スパ」英和/和英 /国語辞典 ● Refer to 使い方 (ᠿRight) for details.	
E-Book Other files ● View by using E- Book Viewer. Refer to Viewer Help for details.		

Activating Dictionary

- Press and hold MULTI → Read $\hat{\mathcal{R}}_{\overline{\mathcal{F}}}$ (disclaimer) → OK f f $\mathcal{K}_{\overline{\mathcal{F}}}$ f $\mathcal{K}_{\overline{\mathcal{F}}}$
 - To forbid showing 免責 each time: Uncheck
 アプリ起動時に常に表示する。
- 2 Select a dictionary

Note

- Alternatively, Main Menu > Tools > Dictionary to activate
- Press and hold <u>Muum</u> to activate Dictionary while another function is active (creating messages, viewing TV, etc.). Dictionary may not activate, however, during a call, while another S! Appli is active, etc.

Dictionary Functions

After Step 1, press $\square[\times =]$ for following operations.

ltem	Operation/Description			
文字サイズ	Change font size			
変更	> Select a size			
使い方	View details			
	> Select an item			
免責	View disclaimer			
ライセンス	View license			

Dictionary Applications

Enter a word and corresponding definitions appear from all dictionaries.

- In Step 2 (ごLeft), 学研「辞スパ」 英和/和英/国語辞典
- \rightarrow Enter a word

Search results appear.

- To scroll pages: D/
- To switch dictionaries: 1/3
- To search again: ∑7 [再検索]
- 3 Select a word

Details appear.

4 To end, $\bigcirc \rightarrow$ *Stopped*

Note

2

● While Dictionary application is active, press [Xニュー] for useful functions.

12 Tools

Sound Recorders

Voice Recorder

Set recorded sounds for ringtones.

• Record for about 60 seconds each.

Main Menu
Tools
Sound Recorders
Voice Recorder

1 ^{YES}

2 • [Stop]/CLR/ \bigcirc (\rightarrow *OK*) to stop recording

Recorded sounds are saved in Ring Songs&Tones folder.

Voice Announce

Set recorded sound for on hold tone/holding tone, Alarm, Calendar event alarm, Tasks alarm, ringtones, Answer Phone message, Timer Watching (Digital TV), Ring Songs&Tones Play List.

- Record only one item for about 15 seconds.
- Select Voice Announce in individual window to set Voice Announce as specific tone.

Main Menu ► Tools ► Sound Recorders ► Voice Announce

1 Record

Recording starts. Tone beeps five seconds before recording ends.

2 To end recording, • [Stop]

After recording ends, tone beeps twice and previous screen returns.

- To play back: Play
- To delete: *Erase* → *YES*

Bar Code Reader

Scan barcodes (JAN) or QR Codes with built-in camera. Access websites, send messages, etc. from QR Codes.

JAN Codes

JAN Code is a one-dimensional bar code denoting numerals with bars and spaces of different widths.

QR Codes

QR Code is a two-dimensional bar code containing information.



Scanning Barcodes

Up to five scanned barcodes can be saved. For split data, scan up to 16 divided QR Codes.

Main Menu ► Tools ► Bar Code Reader ► Scan Barcodes

- Frame barcode in the center of Display
 - To adjust Display brightness: ∑r/[Menu] → Brightness → Adjust to -3 (dark) +3 (light)
 - To zoom: 🔯
 - To use Focus Lock: 🔎

• [Start]

Scanning starts, and scanned results appear when completed.

- For split data, **OK** → Repeat Step 1 and 2
- To use scanned data: 🗁 Step 2 on P.12-13



Example: Scanned Results Window (QR Code (Left))

3 $\boxed{Y'}$ [Menu] \rightarrow Save result \rightarrow OK

Note

- 832P cannot read barcodes or two-dimensional codes other than JAN/ QR Codes.
- Some barcodes cannot be read depending on code type or size.
- Barcode recognition may be slow. Hold handset steady while scanning.
- Barcodes may not be correctly read owing to scratch, dirt, damage, quality of printed material, light reflection, or QR code version.

Tools

12

Viewing/Editing Scanned Data

Main Menu ► Tools ► Bar Code Reader ► Saved Data List

1 View

Select an item

Edit Title

Highlight an item \rightarrow **Y**^{*i*} [Menu] \rightarrow *Edit title* \rightarrow Edit

Delete Saved Data

> In Step 1, (highlight an item →) ∑ [Menu] → Delete → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES

Using Scanned Data

Main Menu ► Tools ► Bar Code Reader ► Saved Data List

1 Select an item

2 \mathbf{Y} [Menu] \rightarrow Select an item (See below)

Item	Operation/Description
Save result	Save scanned results
Display list	Display Saved Data List
Internet	Connect to URL
	> Yahoo! Keitai or PC Site Browser -> YES
	 Alternatively, select URL to connect to Internet.
Compose	Create S! Mail to selected address (
S! Mail	P.13-4)
	 Alternatively, select address to create S! Mail.
Dialing	Call selected phone number
	> Select a dialing method → <i>Dial</i>
	 Alternatively, select phone number to dial.
Add to	Save scanned results to Phone Book (C ≠ From Step 2 on
Phone Book	P. 4-5)
Add	Save URL to Bookmark
bookmark	$> YES \rightarrow \bigcirc [OK]$
Сору	Copy selected characters to another place (CᢖFrom Step 2 on P.3-9)

Location Settings

Retrieve 832P Location Information.

• Only available within 3G network coverage in Japan.

Emergency Positioning Request

When an emergency call is made from 832P, location detected by nearby base station is reported to Emergency response agencies such as the police (rgpP.2-4).

Positioning Lock

<Default> OFF

Activate to lock positioning function.



- Main Menu ► Tools ► Location Settings ► Positioning Lock
- 1 Enter Phone Password → *ON*

Sending Location Information

<Default> Send with Check

Set whether to send location information when requested.

Main Menu ► Tools ► Location Settings ► Send Location Info

1 Enter Phone Password → *Send without Check*

Messaging

Basics	13-2
Available Entry Items & Character Entry Limits	13-2
Messaging Folders & Memory Status	13-3
Customizing Handset Address	
Sending S! Mail & SMS	
Sending S! Mail	
Sending SMS Messages	13-7
Creating Messages	13-8
Graphic Mail Functions	
Sending Messages	
Receiving & Viewing Messages	13-10
Opening New Messages	
Window Description	
Retrieving Complete S! Mail	
Opening & Saving Attachments	
Showing Sent/Received Mail Address	
Using Server Mail	
Retrieving/Viewing Messages	

Organizing/Using Messages	13-15
Checking Messages in Messaging Folders	
Auto-sort	13-16
Filter Spam	13-17
Replying to Messages	13-18
Using Mail Groups	13-18
Sent/Received Address	13-19
Organizing Messages	
Using Messages	13-21

13

Basics

Send messages via S! Mail or SMS.

S! Mail [Separate subscription required]	Exchange text messages with SoftBank or e-mail compatible handsets, PCs, etc.; attach image or sound files etc. • 832P is compatible with Graphic Mail (17) P.13-5)	
SMS	Exchange short text messages with SoftBank handsets.	

• For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

13 Messaging

Available Entry Items & Character Entry Limits

	Item S! Mail SMS		SMS		
Ad	E-mail address	0	Up to 246 single-byte alphanumerics/ Up to 20 recipients	×	_
Address	Phone number ¹	0		0	Up to 21 single-byte alphanumerics/Up to 1 recipient
Subject		0	Up to 256 double- byte/ Up to 512 single- byte alphanumerics	×	_
Tex	t	0	30 KB	0	Up to 70 double-/ single-byte alphanumerics ²
Atta	achment	0	Up to approx. 300 KB	×	-

¹ SoftBank handset numbers only


² When text entry mode is set to *English (160char.)* (CFP.17-14), up to 160 single-byte alphanumerics can be entered.

Note

- Send up to 300 KB including subject, message text and attachment via S! Mail. Message text character limit differs by attachment size.
- When number of entered characters exceeds limit in SMS, S! Mail conversion option message appears.
- S! Mail cannot be converted to SMS.

Messaging Folders & Memory Status

Messages are organized in folders by message type.

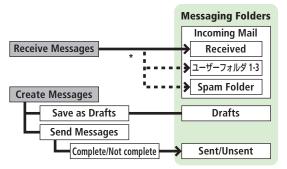

* Set Auto-sort to sort received messages to specified folders or Spam Folder automatically (C⇒P.13-16).

Deleting Messages Automatically

When memory for messaging folders is low, old messages are automatically deleted one by one. Protect important messages from unintentional deletion ($\square P.13-20$), or set message deletion settings to **OFF** ($\square P.17-14$). Messages in Drafts and SMS on USIM Card are not deleted automatically.

When Messaging Memory is Full

 
[] (Received Full) appears in Standby and no more new incoming messages are received. Delete old messages in Incoming Mail folder (C⇒P.13-21). Retrieve new messages (C⇒P.13-15) after deleting some S! Mail.

■ View Memory Status
> ▷ → Memory Status

Tip ●Mail Security (C P.11-10)

Customizing Handset Address


Change your handset mail address (alphanumerics before @) to reduce the risk of receiving spam. Default account name is random alphanumerics.



- For details, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).
- Handset mail address cannot be changed in Emission OFF Mode.
- For operations while using Internet: 12-04-6

☑ → Settings → Custom Mail Address

832P connects to the Network. Follow onscreen instructions.

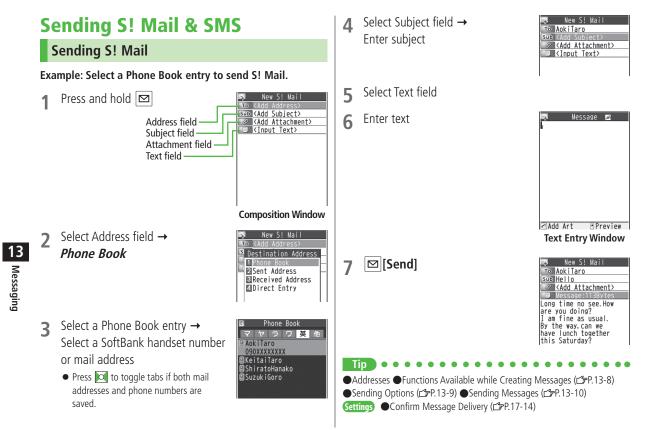

Adding Attachments

Example: Attach Picture files to S! Mail.

- 1 After Step 6 on P.13-4, select Attachment field
- 2 Select a folder in Data Folder \rightarrow Select a file
- 3 ⊠[Send]

To AokiTaro Sub Hello Wessage:113Bytes Long time no see. How are you doing? I am fine as usual. By the way, can we have lunch together this Saturday? New S! Mail To AokiTaro Sub Hello Wessage:113Bytes Long time no see. How are you doing? I am fine as usual. By the way, can we have lunch together this Saturday?		
de or Video mode → video, ●[Stop] or ●) a folder)		

Attach Captured Pictures/Videos

> After Step1, Activate Camera → Photo mode or Video mode →

- Frame subject \rightarrow **[Record]** or **()** (\rightarrow For video, **[Stop]** or **()**
- \rightarrow **[Save]** or **()** (\rightarrow For still image, select a folder

Note

Attachments (27P.13-8)

- Some files can not be attached depending on the file format or size.
- Some copy protected files can not be sent.
- Ring Songs&Tones, Music and Videos files cannot be attached directly from microSD Card. Move files to handset before attaching to messages.

Create HTML messages; select font color/size, background color, or insert images, etc.

Example: Use various Templates to create Graphic Mail.

• Change font size

 
Graphic Mail

• Scroll text

23

- After Step 4 on P.13-4, press ∑ [Menu] → Load Template → Select a template
 - To view template: Highlight template $\rightarrow \square$ [View]
- Select Text field → Delete "ココに文字をいれてネ"

● Alternatively, ∑r [Menu] → Set Graphic Mail to open Graphic Palette





Select a font size \rightarrow Enter text ✓ → Select Arrange Area



0 0 0

Shall we go together

Preview

13 Messaging

6

8

- Set Scrolling \rightarrow Y' [Exit]
- \blacktriangle to preview \rightarrow CLR
 - Alternatively, [¥7] [Menu] → Preview to view text field
- $\rightarrow \square$ [Send] Q

• [End]



2

- Reset Operations
- > To cancel previous operation: Close Graphic Palette $\rightarrow \mathbf{Y}$ [Menu] \rightarrow Undo
- > To reset all Graphic Mail operations: A Graphic mail all reset -> $YES \rightarrow YES$

Using My Pictograms

- After Step 5 on P.13-4, in text entry window,

My Pictogram list appears.

- Previously used pictogram list appears first.
- Functions in pictogram list (ピアP.3-4)
- Select a My Pictogram 2 My Pictogram is entered.
- Enter text $\rightarrow \square$ [Send] 3

Use My Pictograms from Graphic Palette

> In text entry window, $\frown \rightarrow My \ Pictograms \rightarrow \boxdot [My \ Pict.] \rightarrow$ Select a My Pictogram $\rightarrow \mathbf{Y}$ [Exit]

Use My Pictograms Saved in microSD

- > In text entry window, \frown \rightarrow *Insert files* \rightarrow *File Select* \rightarrow *Pictures* \rightarrow $\textcircled{microSD} \rightarrow My \ Pictograms \rightarrow Select a folder \rightarrow Select a My$ Pictogram
- ●Use Other Graphic Mail Settings (CPP.13-9)
- Download Templates via Internet (P.13-10)

Select Text field **Sending SMS Messages** 4 Message 5 Enter text Example: Select a Phone Book entry to send SMS. When number of entered character New SMS \square exceeds limit, S! Mail conversion option Address field -То Create New SMS message appears. Text field ⊠ [Send] 6 abc 1/2 In Othe Mode Set Line F **Text Entry Window** Menu Send Select Manual Mail Conversion **Composition Window** > In SMS Composition window, \mathbf{Y} [Menu] \rightarrow Change mail type Note Select Address field \rightarrow New SMS • When a single-byte text message including $|\{\}|^{\sim}$ is sent or a draft including such text is edited, some characters may be cut out of text Phone Book Destination Address field ☑Sent Address SReceived Address Direct Entry Tip ●Addresses ●Functions Available while Creating Messages (ピア.13-8) **Settings** ●Confirm Message Delivery ●Change SMS Center Number Select a Phone Book entry \rightarrow Phone Book 2 ●Set Input Character to English (C=P.17-14) ヤラワ英能 Select a SoftBank handset number AokiTaro 090XXXXXXXX KeitaiTaro lShiratoHanako SuzukiGoro

13 Messaging

Creating Messages

Addresses

From ► S! Mail: Press and hold 🖂 ► Select Address field SMS: 🖂 🕨 Create New SMS 🕨 Select Address field

Enter Address Directly

> Direct Entry → Enter a SoftBank handset number/mail address

Select Address from Sent Address/Received Address Logs

> Sent Address or Received Address → Select a log

Add/Edit/Delete Address

> Follow the steps (See below)

Item	Operation/Description
Add recipients*	> <not entered=""> → Select an address selection method → Select an address or enter directly</not>
Edit	> Select an address → <i>Direct Entry</i> → Edit address
Delete*	> Highlight an address → Yr[Menu] → Delete receiver → YES
* CLAA 1	

* S! Mail only

Change To/Cc/Bcc

• S! Mail only

> Highlight an address $\rightarrow \boxed{\mathbf{Y}}$ [Menu] $\rightarrow Destination types \rightarrow$ Select a type

Attachments



From After attaching a file, select Attachment field

Open/Play Attached Files

> Select a file

Add Attachments

> \mathbf{Y} [Menu] \rightarrow Add Attached Files \rightarrow (Select a folder \rightarrow Select a file)* \rightarrow ☑ [Finish]

* To capture still images or videos: Activate Camera → Photo mode or *Video mode* \rightarrow Frame subject $\rightarrow \bigcirc$ [Record] or $\bigcirc (\rightarrow$ For video, • [Stop] or \bigcirc) \rightarrow • [Save] or \bigcirc (\rightarrow For still image, select a folder)

Delete Attachments

> Highlight a file $\rightarrow \mathbb{Y}$ [Menu] $\rightarrow Del Attached Files \rightarrow YES$

Other Functions

Functions Available while Creating Messages

- > S! Mail: Press and hold $\square \rightarrow \forall \forall$ [Menu] \rightarrow Select an item (See below)
- > SMS: $\square \rightarrow Create New SMS \rightarrow [Yr] [Menu] \rightarrow Select an item (See below)$

ltem	Operation/Description
Send	Send message
Preview	Preview message while creating
Save as	Save message to Drafts box without sending
Drafts	
Attached	View attached file list
files 1	
Load	> Select a template
Template ¹	
Save	Save edited template
Template ¹	> YES
Add	Add signature
Signature ¹	● Create and save signature beforehand (
Send Settings:	Notify recipient of message priority level
Priority 1	> Select a level

13

Messaging

ltem	Operation/Description
Send Settings:	Check whether S! Mail is sent to recipient
Confirm	>ON
Delivery ¹	
Send Settings:	Set reply-to address
Set Reply	>ON
Address ¹	 Specify reply-to address beforehand (
Confirm	Check whether SMS is sent to recipient
Delivery ²	>ON
Input	Select character input mode
character ²	>Japanese or English
Change mail	Switch SMS to S! Mail while creating
type ²	
¹ S! Mail only	
² SMS only	

Sending Options

From ► Settings ► S! Mail Settings ► Sending Options

Set Reply-to Address

> Set Reply-To → ON → Select reply-to address entry field → Select a reply-to address or enter directly → \square [Finish]

Set Signature

> Set Signature → Select an item (→ ON or ON When New → Select signature entry field → Enter signature → [□[Finish])

Graphic Mail Functions

Use Other Graphic Mail Settings

> In S! Mail text entry window, \frown > Select an arrange item (See below)

	, , , ,
Item	Operation/Description
Insert files:	Insert still images, Flash [®] or music files
File Select	Send inserted music files as BGM > Select a folder \rightarrow Select a file
Insert files:	Activate camera to insert pictures
Camera	> Capture a sill image
Insert files:	Delete inserted music file
Delete BGM	> YES
Font Color	> Change font color
Background	> Change background color
color	
Insert Lines	Insert separator line
My Pictograms	Insert My Pictograms (27P.13-6)
Graphic mail	Cancel all Graphic Mail Settings
all reset	$> YES \rightarrow YES$
Select	Specify text to be arranged
Arrange Area	> Place cursor before text \rightarrow [Start] \rightarrow
	Specify area $\rightarrow \bigcirc$ [End] \rightarrow Select other items \rightarrow
	Follow the steps for selected items
	• To cancel selection: \bigcirc [End] \rightarrow \bigcirc
Font Size	> Change font size
Select	Flash text
Blinking	
Set Scrolling	Scroll text
Set Swinging	Swing text
Alignment	> Select a type

- One file of BGM or Flash[®], and up to 40 types of My Pictograms or images can be inserted per Graphic Mail.
- To delete inserted images, lines, My Pictograms, etc.: Close Graphic Palette → Move cursor before images, etc. → CLR
- Ring Songs&Tones or Music files cannot be inserted directly from microSD Card. Move files to handset beforehand.
- Download Templates via Internet
- > 🖂 → Templates → Download Templates → YES
- 832P connects to Internet, and a website appears. Follow onscreen instructions.

Sending Messages

From ► S! Mail: Press and hold ► [Menu] SMS: ► Create New SMS ► [Menu]

Confirm Delivery

>(For S! Mail, Send Settings →) Confirm Delivery → ON

● Confirm Message Delivery (C P.17-14)

Save to Drafts

- > Save as Drafts
- Messages are saved to *Drafts* (CrP.13-15).

Receiving & Viewing Messages

Opening New Messages

When a new message is received, and Event Indicator appear in Standby.

 By default, the complete message and any attachments are automatically downloaded. This setting also applies while abroad. Transmission fees are incurred; adjust to use (To change auto download settings:
 P.17-14).



Select indicator

Select a folder

2

Unread Count -



Incoming Mail



Message List Window

3 Select an unread message



Note

- 832P may connect to the Network via URL link in message text. Data-intensive web pages may incur high charges.
- Depending on situations, Message tone may not sound and Notification Light may not flash.
 - In flashes for new messages instead.

Tip • • •

- ●Retrieving/Viewing Messages (ピアP.13-15)
- ●Setting Secret Mail (CPP.11-9)
- Settings ●Change Ringtone ●Change Ringer Volume ●Set Message Ringtone Duration ●Set Vibration Alert (197.17-2) ●Adjust Notification Light Color Tone for Incoming Call/Message (197.17-9)

Window Description

Messaging Folder Contents

Received Date & Time ¹, Sender ² and S! Mail Subject (For SMS, Message Text)

- For Sent/Unsent box, following appear:
 - ¹ Sent date/time
 - ² Recipient

Message Type/Status



Message Status

Received

5/ 7 SuzukiGoro

🛛 🖂 5/ 7 ShiratoHanako

Happy B 🕿 5/ 7 SuzukiGoro

☑ ● 5/ 7 KeitaiTaro Happy

5/ 7 ShiratoHanako

Example: Received Folder

in Incoming Mail

Good evening

How are you?

1

- 💊 Attachments
 - (Silver) Protected
- 🗧 Forwarded Message
- Replied Message
- Sending failed (Sent/Unsent Message)
- Delivery Report received (Sent/Unsent Message)
 - High Priority
- 🕑 Low Priority

Message Contents



Number of Attachments

The number of files (images, sounds, videos, text, etc.) appears.

• For a sent message, the following appear:

¹ Sent date/time ² Recipient ³ Number/all sent messages

Note

- Status indicators for forwarded/replied SMS messages (saved in USIM Card) do not appear.
- After retrieving complete messages, S! Mail Notice icons with (Forwarded) or
 (Replied) change to
 (S! Mail).
- Messages remain protected after complete messages are retrieved via protected S! Mail Notices.
- If messages on microSD Card do not appear correctly, copy messages to handset (C⇒P.9-18) and execute Charset Conversion (C⇒P.13-22).

●Functions Available for Received/Sent/Draft Message List (ピア.13-20) ●Functions Available in Received/Sent Message Window (ピア.13-21) (settings) ●Change Font Size (ピア.17-14)

Retrieving Complete S! Mail

During Video Calls or outgoing mail, complete S! Mail is not downloaded. When notification arrives, retrieve complete message. Note: Depending on download setting, complete message is not downloaded.

At the end of message text, highlight *Continue*



Retrieve from Message List

> In received message list, $\overline{\mathbf{v}_{7}}$ [Menu] \rightarrow Retrieve \rightarrow This one

Retrieve Multiple Messages

> In received message list, ∇ [Menu] \rightarrow Retrieve \rightarrow Selected \rightarrow Repeat: Select a message* \rightarrow \square [Finish] \rightarrow YES

* To cancel selection, press <a> again.

Opening & Saving Attachments

- In Message window, Y' [Menu] \rightarrow Attached files
- Select a file \rightarrow CLR
- To save the file, highlight the file \rightarrow 3 \square [Save] \rightarrow YES

Select a folder



Note

- When messages are opened, attached image files appear/play automatically.
- 🖳 (Silver) appears with file requiring a Content Key. If Content Key has expired, warning appears when opening a file. Acquire new Content Key (टੋ₽Р.9-5).
- Incompatible files are saved to Other Documents in Data Folder. Some files may not be saved to 832P.

File Formats Supported by Auto Playback

- Image files (JPEG, GIF, PNG)
- Music files (SMAF, AMR, SMF, SP-MIDI)



●Play Attached Music Files Automatically (ご字P.17-14)

Showing Sent/Received Mail Address

Sent Address

Press and hold

Received Address

Press and hold o

- SMS : SMS (successfully sent)
- ■MAIL : S! Mail (successfully sent)
- To show Redial/Incoming Call Logs: [[Change]

Select a log to show 2

- To send S! Mail/SMS to addresses shown: → Mail composition operation (S! Mail: From Step 4 on P.13-4 or SMS: From Step 4 on P.13-7)
- To save to Phone Book: [[Store] → Operation for saving to Phone Book (
 From Step 2 on P.4-5)

●Sent/Received Address (1→P.13-19)

13-13

Using Server Mail

Retrieve mail list stored at the Center to view Server Mail.

Viewing Server Mail

- 2 Retrieve Mail List → YES

■ Update Server Mail List > After Step1, *Retrieve Mail List* → ☑[Update] → *YES*

Retrieving Server Mail

1

13 Messaging

 $\square \rightarrow$ Server Mail \rightarrow Retrieve Mail List

● If no Server Mail is in the list, YES → Back

2 Retrieve a New Message



Retrieve Multiple Messages

Y/[Menu] → *Retrieve* → *Retrieve Selected* → Select S! Mail* → \square [Finish] → *YES* * To clear, repeat same operation.

■ Retrieve All Messages > □ → Server Mail → Retrieve All

● Mail Security (ピテP.11-10)

● Server Mail Functions (ピア.13-15)

Retrieving/Viewing Messages

Manually Retrieving New Messages

Retrieve S! Mail messages saved on Server while handset is off/out-of-range. $> \square \rightarrow Retrieve New$

Server Mail functions

From From Server Mail

- Delete One/Selected Server Mail
- > Retrieve Mail List \rightarrow Highlight a message $\rightarrow \mathbf{y}$ [Menu] \rightarrow Del Server Mail → Delete This or Delete Selected (→ For **Delete This**, select messages^{*} $\rightarrow \square$ [Finish]) $\rightarrow YES$
- * To clear, repeat same operation.
- Delete All Server Mail > Delete All → Enter Phone Password → YES
- Forward Server Mail > Retrieve Mail List \rightarrow Highlight a message \rightarrow [Y/[Menu] \rightarrow *Fwd Server Mail* → Compose S! Mail → [Send]
- Sort Server Mail > Retrieve Mail List $\rightarrow \boxed{Y}$ [Menu] \rightarrow Sort \rightarrow Select a condition
- View Server Mail Information > Retrieve Mail List → Highlight a message → [Yr/[Menu] → Mail Information
- View Server Mail Memory > Server Mail Memory

Organizing/Using Messages

Checking Messages in Messaging Folders

- $\square \rightarrow$ Incoming Mail, Drafts, Sent/Unsent
- In Incoming Mail folder, select a folder then message.
- Messaging Folders: C=P.13-3
- 2 Select a message
 - In Received/Sent Message window, toggle #/* to view previous/next messages.

•Functions Available in Incoming Mail Box •Functions Available for Received/Sent/Draft Message List (C⇒P.13-20)

Auto-sort

- Previously received messages are not sorted.
- Incoming messages are sorted by subject if both address and subject match sort condition applied to specific folder. Messages with no subject are sorted by address.
- Either address or mail subject can be specified per folder.
- 2 Highlight ユーザーフォルダ 1-3 → [Ŷ?][Menu] → *Auto-sort*

	Incoming Mail	
1	Received (2)	
2	Function	
3	Add folder	
4	☑Edit folder name	
5	3 Auto-sort	
	⊿ Mail Security	
	Delete folder	
	_	
	Select Exit	
	Berect	

- 13 Messaging
- $\mathbf{Y} [\mathbf{Menu}] \rightarrow \text{Select an item (See below)}$

Item	Operation/Description
Add Address	Sort received messages by sender's address
	> Select an address selection method \rightarrow
	Select/enter an address
	 Save up to 10 addresses per folder.

Item	Operation/Description
Add Subject	Sort received messages by mail subject
	>Enter a subject
	 Save one subject per folder.
	 SMS cannot be sorted by mail subject.
Add Group	Sort received messages by Group in Phone Book
	> Select a group
	• Save up to 10 groups per folder.

Edit Sort Conditions

>After Step 2, highlight an item → ●[Edit] → Edit address, subject or mail group

Change Auto-sort List View

Switch Name view or Address view for Auto-sort.

> After Step 2, [¥7] [Menu] → Display the List → Name or Address

Delete Auto-sort Settings

> After Step 2, (highlight an item →) ∑ [Menu] → Auto-sort → Delete or Delete All (→ For Delete All, enter Phone Password) → YES

Filter Spam

Sort messages from unidentifiable handsets into Spam Folder without incoming notification.

Note

 Some messages from addresses saved in Phone Book as secret data may be sorted into Spam Folder. Be careful when deleting messages from Spam Folder.

Setting Spam Folder

<Default> OFF

- 1 ⊠ → Settings → Universal Settings → Anti-Spam Measures
- 7 Spam Filter → Enter Phone Password
- $3 ON \rightarrow YES$

Safe List

- Specify up to 20 addresses and domains (for example, @softbank.ne.jp) to receive messages from without sorting into Spam Folder.
- 1 ⊠ → Settings → Universal Settings → Anti-Spam Measures → Safe List

2 Add Addresses

Y/[Menu] \rightarrow Add Address \rightarrow Received Address or **Direct Entry** \rightarrow Select or enter an address

Add Domains

Tr $[Menu] \rightarrow Add Domain \rightarrow$ Enter a domain (character string after @)

3 ⊠[Finish]

Edit Saved Addresses

> After Step 1, highlight an address $\rightarrow \bigcirc$ [Edit] \rightarrow Edit address

Delete Addresses

>After Step 1, (highlight an address →) ∑ [Menu] → Delete or Delete All (→ For Delete All, enter Phone Password) → YES

●Report Spam (2 P.13-22)

Replying to Messages

Via S! Mail

In Message window, 🖾 [Reply]

→ *Reply to Sender* or

Reply to All

Received message text is quoted.

• *Re*: appears before Subject of reply.

Via SMS

In Message window, [2] [Reply] Received message text is quoted.

Complete message $\rightarrow \square$ [Send]

Without Quoting Message Text when Replying

> In Step 1, [v][Menu] → Reply → Reply to Sender or Reply to All → Compose S! Mail or Compose SMS

Selectable items differ by mail type.

Note

• Alternatively, select a message in message list to reply to (CPP.13-20)

Rcvd. Ms9. 1/5 2009/5/7 7 1 Reply with Quote 1 Reply with Quote 2 Reply to All 2 Reply to All 1 I 1 Physical Structure 2 Reply to All 1 Physical Structure 1 Select

Using Mail Groups

Save mail addresses by group. Messages can be sent to specified group of recipients.

- Save up to five recipients per group.
- Create up to 20 groups.

Creating Mail Groups

Main Menu > Phone Book > Settings > Mail Group

- Select a group to save
- Enter Mail Address Directly
 Highlight <*Not stored>* →
 [Edit] → Enter mail address

Select Mail Address from Phone Book or Sent/Received Address Logs Highlight *<Not stored>* → [Y:][Menu] → Look-up address

- \rightarrow Select an item \rightarrow Select an entry
- Repeat Step 2 to save mail addresses.



Mail Group List

13-18

13 Messaging

Change Group Names

> In Step 1, highlight a mail group $\rightarrow \overline{Y}$ [Menu] \rightarrow *Edit group name* → Edit name

Reset Group Names

> In Step 1, highlight a mail group $\rightarrow \mathbf{Y}$ [Menu] \rightarrow Reset group name → YES

Edit Mail Addresses > After Step 1, highlight a mail address $\rightarrow \square$ [Edit] \rightarrow Edit

Delete Saved Mail Addresses

> After Step 1, (highlight a mail address \rightarrow) \mathbf{Y} [Menu] \rightarrow **Delete this** or **Delete all** (→ For **Delete all**, enter Phone Password) → YES

Sending a Message to All Group Members

Main Menu > Phone Book > Settings > Mail Group

Highlight a group $\rightarrow \square \square \square \square \square \square \square \square \square$

Compose a message (⊆From Step 4 on P.13-4)

Sent/Received Address

- > Sent address logs: Press and hold $\bigcirc \rightarrow$ Highlight an address \rightarrow **Y**/[**Menu**] \rightarrow Select an item (See below)
- > Received address logs: Press and hold \bigcirc \rightarrow Highlight an address \rightarrow **Y**/**[Menu]** \rightarrow Select an item (See below)

ltem	Operation/Description
Character	Toggle character size
size	
	Save selected mail address/number to Phone Book
Book	(⊂ ∋ From Step 2 on P.4-5)
Add shortcut	
icon	to open composition window with selected mail address/ number in Address field
Compose	Create S! Mail to selected address/phone number
S! Mail	(┌ ┘ 〒From Step 4 on P.13-4)
Compose	Create SMS to selected phone number (
SMS	P.13-7)
Dialing	> Select a dialing method \rightarrow Dial
Dialed calls ¹	Show Redial logs
Received	Show Incoming Call Logs
calls ²	
Delete this	> YES
Delete	> Check logs to be deleted $\rightarrow \square$ [Finish] $\rightarrow YES$
selected	
Delete all	>Enter Phone Password → YES
¹ Sent address logs only	

² Received address logs only

Organizing Messages

Functions Available in Incoming Mail Box

> ☑ → Incoming Mail → Highlight a folder → ☑ [Menu] → Select an item (See below)

ltem	Operation/Description
Add folder	> Enter folder name
Edit folder name*	> Edit folder name
Auto-sort*	> Sort received messages (Auto-sort: SFrom Step 3 on P.13-16)
Mail Security	Set to enter Phone Password for opening a folder > Enter Phone Password • To cancel: repeat the step
Delete folder*	> Enter Phone Password → YES
* ユーザーフォ	ルダ only

Functions Available for Received/Sent/Draft Message List

> ☑ → Incoming Mail, Drafts or Sent/Unsent (→ For Incoming Mail, select a folder) → Highlight a message → ☑ [Menu] → Select an item (See below)

ltem	Operation/Description
Edit ¹²	Edit message to send (S! Mail: 🗲 From Step 2 on P.13-4/SMS: 🗲 From Step 2 on P.13-7)
Send ²	Send Drafts
Retrieve ³	Retrieve complete S! Mail > <i>This one</i> or <i>Selected</i> (→ For <i>Selected</i> , select multiple messages* → ☑[Finish] → <i>YES</i>) * To cancel: press ● again

Item	Operation/Description
Reply ³	 > Reply to Sender or Reply to All → Compose S! Mail or Compose SMS → Compose a message (S! Mail: G→From Step 4 on P.13-4/SMS: G→From Step 4 on P.13-7) ● Items to be selected differ by mail type.
Reply with Quote ³	Quote received message to reply > Reply to Sender or Reply to All → Compose S! Mail or Compose SMS → Compose a message (S! Mail: ☞From Step 4 on P.13-4/ SMS: ☞From Step 4 on P.13-7) • Selectable items differ by mail type.
Forward ³	 > Forward Fwd Server Mail → Select Address field → Select an item → Select/enter an address → [Send] ● Forward Server Mail (CP.13-15) ● When forwarding S! Mail, "Fw:" appears before Subject. Dotted line appears in the first line of Text field. ● Attachments are also forwarded (Messages with copy protected attachments may not be forwardable.).
Dial	> Select an item → Make a call/compose a message/add to Phone Book
Add Address ^{1 3}	Save addresses to Phone Book > Select phone number or mail address → YES (C 3 From Step 2 on P.4-5)
Protect/ Unprotect ¹³	Protect received/sent messages This one or Selected (→ For Selected, select multiple messages* → ☑[Finish]) * To cancel: press ● again • To unprotect, repeat the step.

Item	Operation/Description
Unread/ Read ³	Switch status to Unread/Read
Move ³	Move messages to specific folders > Move This or Move Selected (→ For Move Selected, select multiple messages* → [□ [Finish] → YES) → Select a folder * To cancel: press • again
Delete	 > Select an item → Operate selected item If messages are received while selecting multiple messages, message deletion may fail.
Confirm Delivery ¹	View Delivery report
Send Ir data	(⊆7 P.10-3)
IC Transmission	(Ľ ≇P.10-5)
Copy to microSD	Copy messages to microSD Card > YES
Copy to USIM/ Copy to Phone ³	Copy SMS to USIM Card/handset > YES
Move to USIM/Move to Phone ³	Move SMS to USIM Card/handset > YES
Sort	Change display order > Select a display order
Mail Information	View detailed information (Subject, From, To, etc.)
 ¹ Sent messages ² Drafts only ³ Received messages 	,

Using Messages

■ Functions Available in Received/Sent Message Window > In Message Window, [x][Menu] → Select an item (See below)

ltem	Operation/Description
Retrieve 1	Retrieve complete S! Mail
Edit ²	Edit message to send (S! Mail: CPFrom Step 2 on P.13-4/SMS: CPFrom Step 2 on P.13-7)
Reply ¹	 > Reply to Sender or Reply to All → Compose 5! Mail or Compose SMS → Compose a message (S! Mail: C⇒From Step 4 on P.13-4/SMS: C⇒From Step 4 on P.13-7) Items to be selected differ by mail type.
Reply with Quote ¹	Quote received message to reply > Reply to Sender or Reply to All → Compose S! Mail or Compose SMS → Compose a message (S! Mail: CrFrom Step 4 on P.13-4/ SMS: CFFrom Step 4 on P.13-7) • Selectable items differ by mail type.
Forward ¹	 Forward or Fwd Server Mail ● Forward Server Mail (P.13-15)
Dial	> Select an item → Make a call/compose a message/add to Phone Book
Add Address	Save addresses to Phone Book > Select phone number or mail address → YES (C 3 From Step 2 on P.4-5)
Add to Phone Book	Save highlighted phone number/mail address to Phone Book > YES (CPFrom Step 2 on P.4-5)

Next Page 13-21

//

Item	Operation/Description
Attached files	Show attached files
Save	Save templates
Templates	> YES
Add Shortcut	
lcon	to open composition window with selected mail address/
	number in Address field
Font Size	> Select a size
Scroll Unit	Change scroll unit
	>Half Screen or Whole Screen
Charset	Convert characters when not properly shown
Conversion ¹	> Select an item
Delete	> Select an item \rightarrow Operate selected item
Confirm	View Delivery report
Delivery ²	
Mail	View detailed information (Subject, From, To, etc.)
Information	
Send Ir data	(Ľ ≇P.10-3)
IC	(⊂≆ P.10-5)
Transmission	
Copy to	Copy messages to microSD Card
microSD	> YES
Copy to USIM or	Copy SMS to USIM Card/handset
Copy to Phone 1	> YES
Move to USIM	
or Move to Phone 1	> YES
	Devent or exited as all as Corean Mail
Report Spam ¹	Report received mail as Spam Mail
neport spall	 ▶ [Send] ● Change destination to report to (C⇒P.17-14).

Received Message Window only
Sent Message Window only

2

Getting Started 14-2
Using Yahoo! Keitai 14-3
Opening Yahoo! Keitai Main Menu14-3
Entering URL14-4
Using Access Histories14-4
Exiting Mobile Internet14-4
Using PC Site Browser 14-5
Opening Menu14-5
Entering URL14-5
Using Access Histories14-5
Exiting Internet14-5
Basic Operations14-6
Basic Operations
Using Cursor14-6
Using Cursor
Using Cursor
Using Cursor 14-6 Text Entry & Item Selection 14-7 Using Information 14-8 Bookmarks & Saved Pages 14-8
Using Cursor
Using Cursor
Using Cursor

Getting Started

Access Yahoo! Keitai Mobile Internet and PC sites. "Yahoo! Keitai" is both a SoftBank Mobile Internet service and the SoftBank Mobile Internet portal. View PC Internet websites via PC Site Browser.

Internet

Yahoo! Keitai

- View Mobile Internet Websites (ピアP.14-3)
- Download image/sound files, etc. (C P.14-11)
- Movies/Music Streaming (
 P.14-12)
- Register S! Quick News (ピョP.7-2)

PC Sites

- View PC Sites (C₽P.14-5)
- Download still images (C P.14-11)

Note

- Separate subscription is required for Network access.
- For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).
- Video Calls cannot be received while connecting to the Network.

Cache Memory

Retrieved information is temporarily saved in Cache Memory.

When full, oldest is deleted first.

- Previously viewed pages may load from Cache Memory. To view the latest, update information (CPP. 14-13).
- Cached items with expiry dates are deleted upon expiry.
- Information remains even after handset is disconnected from the Network or handset power is turned off.

Settings ●Clear Cache ●Delete Cookies (ピテP.17-15) ●Initialize Browser (ピテP.17-16)

SSL/TLS

SSL (Secure Socket Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers.

Server certificates are saved on 832P (2.17-16).

Notes

When a security notice appears, subscribers must decide for themselves whether or not to open the page. SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co., Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust.net Co., Ltd. cannot be held liable for any damages associated with the use of SSL and TLS.

Settings ●Security Settings (ピア.17-16)

Using Yahoo! Keitai

Opening Yahoo! Keitai Main Menu

Select Yahoo! Keitai Main Menu items to access websites.

Main Menu 🕨 Yahoo! Keitai

Yahoo! Keitai

832P connects to the Network.

- 2 Select a menu item
 - Repeat Step 2 as required.
 - Basic Operations: CPP.14-6

Note

• Shortcut: In Standby, press 🔽

Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites, or open previously viewed pages using URL histories.

• Up to 20 URL histories are stored.

Main Menu		Yahoo!	Keitai		Enter URL
-----------	--	--------	--------	--	-----------

- 1 Enter URL Directly
 - *Direct Entry* → Enter URL

```
Use URL History
URL History List →
Select a URL
```



URL History List Window

14 Internet

■ Delete URL Histories > In Step1, URL History List → (Highlight a URL →) [¥7][Menu] → Delete or Delete All → YES

Using Access Histories

Open previously viewed pages using access histories.

• Up to 100 access histories are stored (The number of savable histories varies depending on data amount.).

Main Menu 🕨 Yahoo! Keitai 🕨 History

1 Select a history



History Window

Delete Access Histories

- > In Step 1, (highlight a history \rightarrow) \mathbf{Y} [Menu] \rightarrow Delete or Delete All
 - → YES (→ For Delete All, enter Phone Password)
- Show Access History URLs
- > In Step 1, highlight a history \rightarrow \mathbf{Y} [Menu] \rightarrow Display URL

Exiting Mobile Internet

Note

• Closing handset does not affect active browser.

Using PC Site Browser

Opening Menu

View PC websites using PC Site Browser.

- When PC Site Browser opens, 📃 appears.
- Some pages may not be viewable.
- Viewing PC websites may incur high charges.

Main Menu 🕨 Yahoo! Keitai 🕨 PC Site Browser

1 Homepage

Confirmation appears. Select NO.

- To show confirmation each time: **YES**
- 2 Select a menu item

Repeat Step 2 as required.

Note

● Alternatively, press 🖾 in Yahoo! Keitai Menu to switch to PC Site Browser Menu. To return to Yahoo! Keitai Menu, press 🖾 again.

Tip

Settings ●Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai (C P.17-15)

Entering URL

Follow same operation accessed from Yahoo! Keitai (13-P.14-4).

• Up to 20 URL histories are stored.

Main Menu ► Yahoo! Keitai ► PC Site Browser ► Enter URL

● Follow Step 1 of same operation accessed from Yahoo! Keitai (ピョP.14-4).

Using Access Histories

Follow same operation accessed from Yahoo! Keitai (1) P.14-4).

• Up to 100 access histories are stored (The number of savable histories varies depending on data amount.).

Main Menu ► Yahoo! Keitai ► PC Site Browser ► History

● Follow Step 1 of same operation accessed from Yahoo! Keitai (ピ P.14-4).

Exiting Internet

Note

• Closing handset does not affect active browser.

Basic Operations

Using Cursor

Move Cursor	Use cursor to select underlined menu items. to move right to move left to move to previous line to move to next line
Scroll Pages	Scroll bar appears on right side or at bottom of Display when page content continues beyond view. Scroll up/down scroll left/right scroll page up by a screenful scroll page down by a screenful
Move to previous page/ next page	 Previously viewed pages are temporarily saved in Cache Memory (C⇒P.14-2). [Back]: Return to previous page [Menu] → Forward: View next page Some web pages may not appear after performing the steps above.

When Authentication is Required Some pages require user authentication for access. If required, enter user ID or password.

Tip

●Font Size ●Scroll Unit ●Images Off ●Sound Off ●Delete Settings User ID or Password Entered when Authentication is Required (**⊆P**.17-15)

Text Entry & Item Selection

Enter text or select items to send information.



• Actual web pages may differ in appearance.

Text Entry Field	Highlight field $\rightarrow \bigcirc \rightarrow$ Enter text $\rightarrow \bigcirc$
Menu List	Highlight field $\rightarrow \bigcirc$ Menu list appears. Highlight an item $\rightarrow \bigcirc$ Selected items are highlighted.
Radio Button	Highlight $\bigcirc \rightarrow \bigcirc$ When selected, \textcircled{o} appears.
Check Box	Highlight $\square \rightarrow \bigcirc$ When selected, \checkmark appears.
Command Button	Highlight the button $\rightarrow \bigcirc$ Corresponding command is executed.

Using Information

Bookmarks & Saved Pages

Bookmark websites or save page content to Saved Pages.

• Some copy protected materials cannot be saved.

Bookmarks	Save links to websites. 832P connects to the Network to open the link.
Saved Pages	Save page content. 832P opens saved pages without connecting to the Network.

Saving Web Pages

- 1 Open a web page → ∑ [Menu] → Bookmarks or Saved Pages → Add
- Select title \rightarrow Edit title
- 3 Y' [Set] $\rightarrow OK$
 - Saved Bookmarks/Saved Pages are saved to Bookmarks List/Saved Pages List (ClarRight)

Open Bookmarks/Saved Pages in Web Page

> Open a web page → ∑ [Menu] → Bookmarks or Saved Pages → View List

Viewing Bookmarks & Saved Pages

Main Menu > Yahoo! Keitai (> PC Site Browser)

Bookmarks or Saved Pages → Select an item Example: Yahoo! Keitai Browser

€,	Bookmarks
1	PanasonicX-カ-サイト
	5-1/1° トル
3 🎭]ンテンツ得パック
4 🕵	株価
5 %	天気
6 🔩	ニュース



Bookmarks List Window

Saved Pages List Window

Note

 Create folders in Bookmarks/Saved Pages List to organize Bookmarks/ Saved Pages (27: 14-9).



●Send Bookmarks via Infrared (☞P.10-3) ●Send Bookmarks via IC Transmission (☞P.10-5)

- ●Add Bookmark Shortcuts to Standby ●Save URLs to Bookmarks
- ●Send Bookmark URLs (ピアP.14-10)

14

Managing Bookmarks & Saved Pages

Follow the steps below to open Bookmarks or Saved pages list:

Yahoo! Keitai

Main Menu > Yahoo! Keitai > Bookmarks or Saved Pages

PC Site Browser

Main Menu > Yahoo! Keitai > PC Site Browser **Bookmarks** or Saved Pages

Note

 When a different USIM Card is inserted, Saved Pages do not appear or title name cannot be changed.

Creating New Bookmark/Saved Pages Folders

• Folders cannot be created within existing folders.

Bookmarks 1

In Bookmarks list window, [Yr [Menu] → *Create New* → *Folders* → Enter title

Saved Pages

In Saved Pages list window, ∑? [Menu] → *New Folder* → Enter title

Move Bookmarks/Saved Pages to Folder

- ① Before moving to folders, set Sort to Saved/Moved Order (r²⇒P.14-10)
- ② In Bookmarks/Saved Pages list window (☐ P.14-8), highlight a bookmark/saved page \rightarrow **Y** [Menu] \rightarrow Move to \rightarrow Select a folder \rightarrow Select a destination

Edit Folder Title

> In Bookmarks/Saved Pages list window (\square P.14-8), highlight a folder \rightarrow **Y**/[Menu] \rightarrow Edit \rightarrow Edit folder title

Editing Bookmark Titles/URLs

- In Bookmarks list window, highlight a bookmark \rightarrow \mathbf{Y}' [Menu] \rightarrow Edit
- 2 Edit title/URL

Renaming Saved Pages

- In Saved Pages list window, highlight a saved page \rightarrow \mathbf{Y} [Menu] \rightarrow Edit
- Edit title 2

Internet

Delete Bookmarks/Saved Pages/Folders
Display Bookmark/Saved Page URLs
Change Bookmarks/Saved Pages/Folders Display Order
Sort Bookmarks/Saved Pages/Folders (C⇒P.14-10)

Bookmarks/Saved Pages Functions

- From Main Menu > Yahoo! Keitai (> PC Site Browser) Bookmarks or Saved Pages
- Add Bookmark Shortcuts to Standby

> Highlight a bookmark $\rightarrow \mathbf{Y}$ [Menu] $\rightarrow Add shortcut icon \rightarrow YES$

Save URLs to Bookmarks

> ∑ [Menu] → Create New → Bookmarks → Enter a title/URL → ∑ [Set]

Delete Bookmarks/Saved Pages/Folders

> Follow the steps below

ltem	Operation/Description
Delete	> Highlight a bookmark, saved page or folder \rightarrow Tr [Menu] \rightarrow Delete \rightarrow YES
Delete Selected Items	Select items to delete > ☑/[Menu] → Delete selected → Check items to delete → ☑/[Delete] → YES
Delete All	> $\boxed{\mathbf{Y}}$ [Menu] → <i>Delete All</i> → <i>YES</i> → Enter Phone Password

Display Bookmark/Saved Page URLs

> Highlight a bookmark/saved page $\rightarrow \mathbf{\overline{y}}$ [Menu] $\rightarrow Display URL$

■ Change Bookmarks/Saved Pages/Folders Display Order > Highlight a bookmark/saved page/folder \rightarrow $\boxed{\Sigma'}$ [Menu] \rightarrow Move to \rightarrow $\boxed{\Box}$ to select a position

• Before changing order, set *Sort* (**C** Right) to *Saved/Moved Order*.

Sort Bookmarks/Saved Pages/Folders

> Y [Menu] \rightarrow Sort \rightarrow Select a condition

Send Bookmark URLs

> Highlight a bookmark → ∑[Menu] → Send URL → S! Mail or SMS → Create a message (S! Mail: ∠From Step 2 on P.13-4/SMS: ∠From Step 2 on P.13-7)

Downloading Image/Sound Files

Save images, sounds, etc. to Data Folder or microSD Card.

- For PC Site Browser, only still images can be saved.
- 1 Open a web page \rightarrow **Y** [Menu] \rightarrow Select File
- 2 Select a file

3 Save → YES

Available menu items vary by saved content.

- Save location is determined by *Save Settings* (□P.17-15). However, save location may change depending on situations. Check confirmation when download is complete.
- Confirmation appears when downloading images or sound files. Select **YES** for image/sound setting.

Note

- Do not remove/install microSD Card while saving files to it.
- Do not turn 832P power off while downloading or saving files. Files may be damaged.
- Some copy protected files may not be saved.

Using Number, Address or URL

Use linked numbers, addresses or URLs to make calls, send messages, access websites, or save directly to Phone Book.

1 Open a web page containing phone numbers, mail addresses or URLs

2 Phone Number

Select a phone number \rightarrow Select an item (See below)

Item	Operation/Description		
Voice call	Make a Voice Call		
Video call	Make a Video Call		
Select image	Select outgoing image		
Add to Phone	Save a number to Phone Book (⊂ From Step 2 on P.4-5)		
Book	· · · · · · · · · · · · · · · · · · ·		

E-mail Address

Select an address \rightarrow Select an item (See below)

Item	Operation/Description	
Compose	Create S! Mail (
S! Mail		
Compose SMS	Create SMS (C≇From Step 4 on P.13-7)	
Add to Phone Book	Save mail address to Phone Book (⊆From Step 2 on P.4-5)	

URL

.

Select URL 832P connects to the Network.

Streaming

- Supported by compatible files on Yahoo! Keitai sites only.
- Streaming files cannot be saved.

Main Menu 🕨 Yahoo! Keitai 🕨 Yahoo! Keitai

- 1 Open a web page → Select a file Streaming starts.
- 2 CLR or 🕤 to exit

Engaged Streaming Operations

Mute/Release Mute	Y/ [🕺 / 🖏]	
Pause/Resume*		
Volume		
Set Playback Position*	o start playback from specified point	
Toggle Display Position	Toggle Portrait/Landscape view.	

* Not available during playback for live events such as live sports programs.

14 Internet

Note

- Streaming requires a continuous Network connection. Network remains connected even during a pause (Transmission fees apply).
- Paused streams may stop after three minutes of inactivity.
- When roaming abroad, streaming may be unavailable or not be performed properly.

Incoming Voice Calls while Streaming

Incoming call pauses an active stream.

• Video Calls cannot be received while streaming.

Option Menu Items

In Yahoo! Keitai, press 🕎 [Menu] for following operations.

• Some functions may not be available depending on web pages.

Item	Operation/Description	
Forward	Go to next page (ピ゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚゚	
Bookmarks	View Bookmarks list, add bookmarks, or add bookmark shortcuts to Standby	
Saved Pages	View Saved Pages list or save page content to Saved Pages	
Text Copy	Copy page text	
Reload Page	Refresh page information	
Enter URL	Enter URL directly or use URL History to access pages	
Select File	View, play or save file to Data Folder (Downloading Images/Sounds to Save: I ☞ From Step 2 on P.14-11)	

Item	Operation/Description	
Handy	Switch PC Browser 1/Switch Browser 2: Toggle	
Functions	Yahoo! Keitai/PC site	
	Internet Search: Search text in Internet	
	Search In Page: Search text within page	
	Jump in this page: Jump to top/end of page	
	Send URL: Send URL via S! Mail/SMS	
	History: Open previously viewed pages	
	Expand/Shrink ² : Zoom page in/out	
	Set Display Range ² : Specify displayed area of page	
	Flash(R) Menu: Playback/pause Flash® files	
	Properties : View page details or electronic certificates	
	for secure pages	
Yahoo! Keitai 1/	View top menu	
Homepage ²		
Settings	Font Size: Change character size	
	Encoding: Change encoding type	
Switch screen ²	Toggle between Small Screen and PC Screen	
Exit Browser	Exit Browser	
¹ Yahoo! Keitai on	ý.	
² PC Site Browser	only	



S! Appli

Before Using S! Appli	15-2
Downloading S! Appli	
Using S! Appli	15-3
Activating S! Appli	
Terminate/Suspend & Resume	
Using S! Appli Startup History	
Managing Applications	15-4

Before Using S! Appli

S! Appli are JavaTM-based applications designed to run on SoftBank handsets. Download games and other real-time applications for use on 832P.

- Separate subscription required to use downloaded applications (not required for pre-installed S! Appli).
- For usage on pre-installed applications, see Help menu for each S! Appli.

Note

• For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Network S! Appli

Network S! Appli requires Network connection.

• Connection fees apply.

License Information

> Main Menu > S! Appli > Information

Downloading S! Appli

Download up to 100 S! Appli files to 832P/microSD Card.

 End suspended S! Appli if any. However, S! Appli may not be ended during calls.

Main Menu 🕨 S! Appli 🕨 S! Appli List

Download S! Appli → YES

832P connects to the Network, and download site appears.

- 2 Select an S! Appli Properties appear.
- **3** Follow onscreen instructions
- **4** Select a save location

Downloaded S! Appli is saved to Data Folder automatically.

- Download may take some time.
- 5 YES to activate

Downloaded S! Appli starts.

- To exit: NO
- Download Lifestyle-Appli
- Main Menu (S! Appli) Osaifu-Keitai Lifestyle-Appli
 Download Select a Lifestyle-Appli
- Lifestyle-Appli: 🖙 P.16-2

Using S! Appli

Activating S! Appli

Main Menu 🕨 S! Appli 🕨 S! Appli List

Select an S! Appli

Application starts and 🖓 appears.

- See application Help menu for usage information.
- Confirmation appears when selecting Network S! Appli.
- For a microSD Card S! Appli, press 👼 [microSD] before Step 1.

Note

Tip

- Activate an S! Appli; Main Menu > Data Folder > S! Appli > Select an S! Appli
- Applications with R in S! Appli List are intended for Landscape View.
- Incoming transmissions pause S! Appli.
- If handset is closed while S! Appli is active, S! Appli pauses.

Settings ●Volume ●Backlight On/Off ●Deactivate Vibration ●Sync microSD Card with S! Appli Library (☞P.17-17)

Terminate/Suspend & Resume

Terminating/Pausing S! Appli

- While running an S! Appli, 💿
- 2 **Suspended** or **Stopped** appears for a suspended application.

Resuming/Terminating Paused S! Appli

Main Menu 🕨 S! Appli 🕨 S! Appli List

Replayed or Stopped

Resumed application starts from paused point.

Using S! Appli Startup History

- Main Menu 🕨 S! Appli 🕨 S! Appli History
- 1 Highlight a record → ∑ [Menu] → *Start, S! Appli info* or *Delete*

Managing Applications

Moving S! Appli between 832P and microSD Card

Main Menu 🕨 S! Appli 🕨 S! Appli List

- 1 Highlight an S! Appli → $\boxed{\mathbf{Y}}$ [Menu] → *Move to microSD* or *Move to phone*
 - Some S! Appli may not be moved to microSD Card.

Deleting S! Appli

Main Menu 🕨 S! Appli 🕨 S! Appli List

- 1 Highlight an S! Appli → ∑? [Menu] → Delete → YES
 - Some pre-installed S! Appli may not be deleted.

Viewing S! Appli Properties

Main Menu ► S! Appli ► S! Appli List

Highlight an S! Appli \rightarrow **Y**^{*r*} [Menu] \rightarrow *S*! Appli info

Setting Security Level while Running S! Appli

• Security Level cannot be set for some applications.

Main Menu 🕨 S! Appli 🕨 S! Appli List

- 1 Highlight an S! Appli $\rightarrow \mathbf{Y}$ [Menu] \rightarrow Security level
- 2 Select an item (See below)

Item	Operation/Description
Network Access	Connect to the Network
Auto Invocation Activate S! Appli	
Multimedia Recording	Record multimedia data
Data Reading Access	Read Phone Book, Calendar events, etc.
Data Rewrtng Accss	Write/delete Phone Book, Calendar events, etc.
Location Access Retrieve Location information	

3 Always Allowed, Ask First Time*, Ask Every Time or Not Allowed

* Confirmation appears the first time application is activated.

Reset Security Level Settings

Reset security level settings to default or condition when downloading.

> In Step 2, *Reset Sec. Setting* → *YES*

S! Appli

15

Osaifu-Keitai®

Basics	16-2
Downloading Lifestyle-Appli	
Activating Lifestyle-Appli	
Using Osaifu-Keitai [®]	
Reader/Writer Transactions	
IC Card Lock Functions	16-5
Activating IC Card Lock	
Remote Lock	

Basics

"Osaifu-Keitai[®]" is a range of IC Card-based services used by Osaifu-Keitai[®] compatible handsets. Make purchases using e-money or e-ticketing. Hold handset up to a reader/ writer to pay for your purchase.

Osaifu-Keitai® Terms

	An IC chip embedded in Osaifu-Keitai [®] -compatible handsets	
Lifestyle- Appli Applications to use Osaifu-Keitai [®] . Some applications are preinstalled.		

Precautions

- Data saved in IC Card vary by service content and usage history. Procedures to delete IC Card data vary by Lifestyle-Appli. Contact Osaifu-Keitai[®] service providers for details.
- SoftBank is not liable for damages from accidental loss or alteration of IC Card data or settings.
- IC Card data can be misused if your Osaifu-Keitai[®] compatible handset is lost or stolen. SoftBank is not liable for any resulting damages.
- Downloading Lifestyle-Appli and using applications may incur high packet communication charges.

Osaifu-Keitai® 16

Getting Started

Downloading Lifestyle-Appli

Download Lifestyle-Appli via Internet website.

Registration/Settings

Activate Lifestyle-Appli to complete registration or customize settings.

• Make deposit into account, check payment records or balance, etc.

Note

 Keep a copy of service passwords/customer service contact, etc. in a separate place.

Downloading Lifestyle-Appli

Main Menu 🕨 Osaifu-Keitai 🕨 Lifestyle-Appli

Download → YES

1

- 2 Select a Lifestyle-Appli
 - Lifestyle-Appli is saved to Data Folder.

Activating Lifestyle-Appli

• Lifestyle-Appli cannot be activated during a call or while another S! Appli is active.

Main Menu 🕨 Osaifu-Keitai 🕨 Lifestyle-Appli

- 1 Select a Lifestyle-Appli
- 2 To exit, 💿 → Stopped

Note

- Alternatively, Main Menu
 S! Appli
 Osaifu-Keitai

 Lifestyle-Appli
 - or

Main Menu 🕨 Data Folder 🕨 Lifestyle-Appli

Using Osaifu-Keitai®

Reader/Writer Transactions

- Complete registration/settings and charge your account beforehand.
- There is no need to activate a Lifestyle-Appli during transaction.
- 1 Hold \supset logo up to reader/writer
 - When IC Card Notification Light setting is **ON**, Notification Light illuminates (CPP.17-9).
 - Hold handset parallel to reader/writer. Try moving handset around if recognition is slow.
 - Check scan result on reader/writer display.
 - Osaifu-Keitai[®] can be used during a call or
 - Internet transmission (May require extra time.).



Note

- Data may be unreadable if a metal object, etc. is between 🗩 logo and reader/writer.
- Even though Osaifu-Keitai[®] is available while handset is off, Lifestyle-Appli does not activate. However, if battery is left uncharged after warning tone sounds, Osaifu-Keitai[®] may become disabled. Charge battery beforehand.
- When handset is held up to reader/writer, handset may show a message or vibrate depending on service. S! Appli, Messaging or Internet may also activate automatically. To avoid such cases, set the functions not to activate during transactions. (CPP.17-17).

Tip

 Disable Handset Response to Commands from Reader/Writer (CPP.17-17)

IC Card Lock Functions

Activating IC Card Lock

<Default> OFF

1

Press and hold $\textcircled{\boxtimes} \rightarrow$ Enter Phone Password

🐴 appears in Standby.

• Repeat the step as required to unlock.

Note

1

- Alternatively, Main Menu ► Osaifu-Keitai ► IC Card Settings
 - ► IC Card Lock or Main Menu ► Settings ► Security

IC Card Lock

Remote Lock

<Default> OFF

Saving Numbers to Activate Remote Lock

• Save up to three phone numbers to enable Remote Lock.

Main Menu ► Osaifu-Keitai ► IC Card Settings ► Remote Lock

- Enter Phone Password → ON → Numbers to Permit
- 2 *<Not Recorded>* \rightarrow Enter phone numbers
 - To save numbers from Phone Book/Incoming Call Logs or to use a payphone number: [v][Menu] → *Refer to* or *Payphone*
- 3 \square [Return] \rightarrow \square [Set]

Number of Calls to Activate Remote Lock

<Default> Three times

• Specify the number of incoming calls for activating IC Card Lock.

Main Menu ► Osaifu-Keitai ► IC Card Settings ► Remote Lock

- 1 Enter Phone Password → *ON*
- 2 # of Incoming Call → Enter a number (03-10) → [□][Set]

Activating Remote Lock

- 1 Call 832P from one of the specified numbers (Send Caller ID)
- 2 Hang up after 832P receives the call
- **3** Repeat Steps 1-2 until specified number of incoming calls is reached (within three minutes)
 - After specified number of incoming calls, IC Card Lock is set and a message informs you IC Card Lock is activated.

Note

- When setting IC Card Lock, call 832P from the same specified phone number. Incoming calls from different phone numbers cannot be counted.
- Specified incoming calls may not be counted when Call Forwarding is active.
- Remote Lock is not available when ring time for Answer Phone is set to 0 or Driving Mode is active.

Settings

Sound & Vibration	
Ringtones	
Charge Sound/Key Tone	
Display	17-3
Display Settings	17-3
Main Menu	
Clock	
Back Light	
Font	
Manner Mode	17-6
Incoming Settings	17-6
Date & Time	17-7
Call Settings	17-8
Call Time & Call Cost	
Making & Receiving Calls	
Notification Light	17-9
Text Entry	17-9
Phone Book	17-10
Voice Dial	17-10

Video Call	
Function Menus	17-10
Engaged Video Call Settings	
Digital TV	17-11
S! Quick News (Japanese)	
Display Settings	
Auto Update/Deleting Information	
Messaging	17-14
Universal Settings	
S! Mail Settings	
SMS Settings	17-14
Internet	
Browser Display Settings	17-15
Memory Manager & Reset	17-15
Security Settings	
Reset	
S! Appli	17-17
Osaifu-Keitai [®]	17-17
Default Settings	

Settings Sound & Vibration

Ringtones

From Main Menu Settings

Setting/Operation	Default
 Change Ringtone Sound Settings → Ring Tones → Select an item → Select Ring Tone → Select a type → Select a folder → Select a tone 	Phone/Video Call: Pattern 1 Message: Tone3
 Change Ringer Volume > Sound Settings → Ringer Volume → Select a type → ∑ to adjust volume 	Level 4
■ Disable 3D Sound Effect (Ringtone/Melody) > Sound Settings → Stereo/3D Sound → OFF	ON
■ Set Ringtone Sound Output for Earphone* > Sound Settings → Earphone → Earphone	Earphone + Speaker
■ Set Message Ringtone Duration > Sound Settings → Message Ring Tones → ON or OFF (→ For ON, enter ring time)	ON (Ring time: 5 sec)
■ Set Vibration Alert > Incoming Settings → Vibrator → Select an item → Select a vibration pattern	OFF

* When earphone is connected and Sound Settings is set to *Earphone*, ringtone sounds through earphone and speaker for incoming calls/ messages or alarms after about 20 seconds. Ringtone sounds only from earphone for other events.

Pre-installed Ringtones

Title	Composer
Pinwheel	Original
WALKURENRITT/DIE WALKURE	WAGNER RICHARD WILHELM
PARADE OF THE WOODEN SOLDIERS	JESSEL LEON
OUVERTURE/GUILLAUME TELL	ROSSINI GIOACCHINO ANTONIO
DANCE OF THE KNIGHTS OP 64 NO 13	PROKOFEV SERGEJ S
WALTZ/COPPELIA BALLET SUITE	DELIBES LEO CLEMENT PHILIBERT
DANSE DES MIRLITONS/CASSE NOISETTE OP 71A/ORI	CHAJKOVSKIJ PETR ILICH
PETER AND THE WOLF OP 67	PROKOFEV SERGEJ S

Names of composers given above conform to JASRAC Website. Parts of titles may not appear due to Display size.

Charge Sound/Key Tone

From Main Menu Settings

Setting/Operation	Default
Set Key Tone	OFF
> Sound Settings → Key Tone → ON or OFF	UFF
Charging Start/End Tone Off	
> Phone Settings → Battery → Charge Sound →	ON
OFF	

Settings Display

Display Settings

From Main Menu Settings Display Settings

Setting/Operation	Default
Change Wallpaper ¹ Internal Display → Stand-by Display → Select an item → Select a folder → Select an image	(⊏ ₽.17-18)
■ Add Calendar to Wallpaper > Internal Display → Stand-by Display → Calendar → Select a view format → BG Image ON or BG Image OFF (→ For BG Image ON, select a folder → select an image)	-
■ Change Outgoing Call/Message Image > Internal Display → Select an outgoing type → Select a folder → Select an image	(⊆ ₹P.17-18)
■ Change Incoming Call/Message Image > Internal Display → Select an incoming type → Select Calling Disp. ² → Select an image type → Select a folder → Select an image	(┌─ ₽.17-18)
■ Change Battery/Antenna Indicator > Internal Display → Battery Icon or Antenna Icon → Select a pattern	(⊏ ₽.17-18)
■ Change Start-up Window Internal Display → Start-up → OFF, Message, Pictures or Videos ³	-

■ Change Display Color Scheme > Color → Select a color	(Ľ ⊋P.17-18)
■ Set Interface Language >言語設定 → English	日本語
Show New Call/Message when Handset Opens $>$ Open for New \rightarrow ON	OFF

¹ For Flash[®] files, press 💿 in Standby to pause or resume a Flash[®] image.

- ² Setting applies to messages retrieved manually (*Incoming Options* (CP: 17-14) set to *Manual Retrieval*) or when Server Mail is retrieved (Retrieve New window cannot be changed).
- ³ For *Pictures* or *Videos*: Select a folder \rightarrow Select an image
 - For *Message*: Enter text

Main Menu

From ► Main Menu ► Settings ► Display Settings ► Menu Icons

Setting/Operation	Default
Change Main Menu Theme	(⊡ ⊋P.17-18)
> Select a pattern	(L <i>3</i> F. 17 - 10)
Change Main Menu Icons	
$>$ <i>Customize</i> \rightarrow Select a menu \rightarrow Select a folder \rightarrow	-
Select an image	
Change Main Menu Background	
> Customize → Background Image → Select a	-
folder \rightarrow Select an image	

Settings 17

Clock

From ► Main Menu ► Settings ► Display Settings ► Internal Display ► Clock

	2.17-18)
	217-18)
→ ● [Set]	
Change Standby Clock Position ¹²	
> Stand-by Clock → ⊠[Position] → Select a (C⇒P pattern → ●[Set]	2.17-18)
Change Standby Clock Size	
> Stand-by Clock → [Size] → Large or Small → (☞ P	2.17-18)
Change Standby Clock at Upper Right (lower right in Landscape View)	2.17-18)
>Icon Clock → Select a pattern	

¹ Highlight *Stand-by Clock* $\rightarrow \square$ [Play] to view Standby Clock.

² Even if clock position is set to **Pattern 2** - **Pattern 12**, clock appears in **Pattern 1** when:

• Calendar, World Clock or Operator Name is set to appear in Standby

- Time zone is set to other than GMT+9
- Privacy Key Lock is active

Back Light

From Main Menu Settings Display Settings

Setting/Operation	Default
■ Turn Back Light On/Off; Set Power Saver Mode ¹ > Back Light Time → Lighting → ON or OFF → Select ON or OFF in Power Saver Mode (→ For ON, Enter Light time)	ON+Saver
 ■ Illuminate Back Light while Charging > Back Light Time → Charging → Constant Light 	Standard ²
Limit Back Light to Display Only > Back Light Time \rightarrow Area \rightarrow LCD	
■ Adjust Brightness > Back Light Time → Brightness → Select a brightness level	Auto ³
Set Back Light to Turn On Quickly > Back Light Time \rightarrow Soft Light \rightarrow OFF	ON
■ Disable Auto Image Compensation > LCD AI → OFF	ON

¹ During operation (except when in Standby or S! Appli is active), press and hold 5 to toggle *ON/OFF*.

² When set to *Standard*, Back Light illuminates with the same setting as *Lighting* setting.

³ When set to *Auto*, Back Light is automatically adjusted according to ambient light.

Font

From Main Menu Settings Display Settings

Setting/Operation	Default
Change Font Size by Function	Standard
$>$ Font Size \rightarrow Select an item \rightarrow Select a size	Stanuaru
Set Menu Font Sizes Collectively	Standard
> Font Size → Collective Setting → Large or Small *	Stanuaru
Change Font Style	Font 1
$>$ Font \rightarrow Font 2	FUILT
Change Font Style (Incoming/Outgoing Call Window)	Pattern 1
>Disp. Call/Recv # → Pattern 2	rallenn I
When set to Small font size for Phone Book Incoming/C	Jutaning Call

When set to **Small**, font size for Phone Book, Incoming/Outgoing Call Logs and text entry is set to **Standard**.

Settings Manner Mode

From Main Menu Settings Incoming Settings Manner Mode Type

Setting/Operation	Default
Set Manner Mode Type	
> Manner Mode, Super Silent or User Mode	Manner Mode
$(\rightarrow$ For <i>User Mode</i> , set individual items $\rightarrow \square$ [Finish])	

Default Settings by Mode

Manner Mode	Super Silent	Driving Mode	User Mode
Answer Phone			
Value set for	Value set for	ON	OFF
Answer Phone	Answer Phone	UN	UT
Vibrator			
ON	ON	OFF	ON
In. Calls			
Silent	Silent	Silent	Silent
Msg Ring T.			
Silent	Silent	Silent	Silent
Alarm			
Silent	Silent	Silent	Silent
Rec. Check Tone			
ON	OFF	ON	ON
Key Tone			
OFF	OFF	*	OFF
Mic Sensitiv.			
Up	Up	Up	Up
LVA Tone (Low b	attery alarm)		
OFF	OFF	OFF	OFF

* Based on Key Tone setting (ピテP.17-2)

Settings Incoming Settings

From Main Menu Settings Incoming Settings

Setting/Operation	Default
■ Change Answer Setting (C⇒P.17-7) > Answer Setting → Quick Silent or OFF	Any Key Answer
■ Answer Calls by Opening Handset > Open-to-Ans. Call → Phone or Video Call → Answer	Keep Ringing
Hide Caller Image Saved in Phone Book > Phone Book Image $\rightarrow OFF$	ON
■ Set Response (P.17-7) for Missed Call/New Message Notification Info Notice Setting → ON or OFF	ON
Activate Auto Answer with Earphone $>$ Auto Answer \rightarrow ON \rightarrow Enter ring time	OFF
■ Set Call Waiting Response > In-call Management → Call Forwarding or Call Rejection	Answer

Answer Setting Key Operations

Any Key	To answer a call, press any of the following keys:
Answer	Voice Call: 🔍, 🖍, 🔘 - 🧐, 🗶, 🗰, CLR, 🖾,
	👼, 🗖, 🗖, 🔺
	Video Call: •, 🖍
Quick Silent	
	Voice Call/Video Call: O - 9, 🗶, #, clr, 🖾,
	🛅 , 🗖 , 🞑 , 🔺
OFF	To answer a call, press any of the following keys:
	Voice Call/Video Call: 💽, 🖍

● When [Voice Mail] is assigned to indicated at the bottom of Display, press indicated to start voice or video recording.

Info Notice Setting Response

ON	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls/Received Messages: Double-beep sounds twice
ボイス (Voice)*	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls: Double-beep sounds; voice message announces that you have a missed call Received Messages: Double-beep sounds; voice message announces that you have a new message

- When Vibrator is set for Incoming Settings, vibration activates with beeps. In Manner Mode, only vibration activates.
- Set *Side-keys Guard* to *OFF* beforehand (
- * Japanese only

Settings Date & Time

From Main Menu Settings Dat	ite & Time
-----------------------------	------------

Setting/Operation	Default	
Change Date and Time		
> Date & Time → Enter year, date, time and time zone	_	
Display World Clock	OFF	
> World Clock $\rightarrow ON \rightarrow \bigotimes$ to select an area	OIT	
Activate Daylight Savings Time	OFF	
>Daylight Savings → ON	UFF	
Deactivate Alarm while Operating Other Functions	Alarm Preferred	
>Alarm Tone → Operation Preferred	Fielelleu	
Deactivate Automatic Time Correction via Yahoo! Keitai	ON	
>Time Correction → OFF		

Settings Call Settings

Call Time & Call Cost

From Main Menu Settings Call Settings

Setting/Operation	Default
Display Call Time/Cost	
> Call Time/Cost	_
Reset Total Call Charge/Time	
> <i>Reset</i> → Enter Phone Password →	_
Reset Total Duration or Reset Total Cost → YES (→ For Reset Total Cost, enter PIN2)	
Set Charge Limit ²	
> Set Max Cost Limit → ON → Enter charge limit → Enter PIN2	OFF

May not be available depending on subscription status. In that case, Set Max Cost Limit is not available.

² When set to *ON*, incoming/outgoing calls including emergency number calls are disabled if charge limit is reached.

Making & Receiving Calls

From Main Menu Settings

Setting/Operation	Default
■ Change Earpiece Volume > Call Settings → Volume → 🔯 to adjust volume	Level 4

End the Call
On-hold Tone: On-hold Tone 1 Holding Tone: JESU JOY OF MAN's
ON
High Tone
High Tone
_
OFF

* When Hold Call is selected: *Speaker ON* (Hold tone sounds from speaker)/*Speaker OFF* (Hold tone does not sound from speaker)

Settings 17

Settings Notification Light

From Main Mei	u 🕨 Settings 🕨	Notification Light
---------------	----------------	--------------------

Setting/Operation	Default
■ Set Notification Light by Incoming Type (Voice/Video Calls or Messages) > Incoming → Select Color → Select a type →	(⊆ ₹Р.17-18)
Change Notification Light Color Name for Incoming Call/Message	
>Incoming → Color → Edit Color Name → Select a color → Edit color name	_
Adjust Notification Light Color Tone for Incoming Call/Message <i>Incoming</i> → <i>Color</i> → <i>Adjust Color Tone</i> → Select a color → Adjust color tone	-
Select a color → Adjust color tone Select a function Light for Other Functions > Select a function → ON or OFF, or to select a color	_
View Notification Light Status*	-

* View Notification Light settings for incoming calls/messages, engaged calls or upper Side Key commands.

Settings Text Entry

From ► Main Menu ► Settings ► Phone Settings ► Text Entry Method

Setting/Operation	Default
 Set Input Mode > Input Mode → Check input mode(s) to use → □ [Finish] → Select a input mode to prioritize 	Input mode: All Prioritized mode: Mode 1 (5-touch)
■ Hide Predictive Candidates/Context Forecast List > Predict → OFF	ON
■ Set Learning Feature Off for Secret Mode/ Secret Data Only > Learn in Secret Mode → Enter Phone Password → OFF	ON
■ Delete All Learned Words > Reset Learned Words → Enter Phone Password → YES	-

Settings Phone Book

From Main Menu > Phone Book > Settings

Setting/Operation	Default
■ Change Save Location for New Entry > Save Settings → USIM or Ask Every Time	Phone
■ Change Phone Book Search Method > Search Method → Select a method	A-KA-SA-TA-NA
Change Font Size \rightarrow Font Size \rightarrow Font Size \rightarrow Phone Book or Call Log \rightarrow Large	Standard
■ Forbid Forwarding Phone Book Entry Images > Forwarding Image → OFF	ON*

* If **ON** is selected, images can be forwarded via Infrared or IC transmission.

Settings Voice Dial

Settings 17

From	Main Menu 🕨 Settings 🕨 Phone Settings
	Voice Settings

Setting/Operation	Default
■ Activate Voice Dial Automatically > Auto Voice Dial → ON	OFF
 Activate Voice Dial via Earphone > Voice Earphone Dial → ON 	OFF

Settings Video Call

Function Menus

From Main Menu Settings Video Call	
Setting/Operation	Default
■ Change Incoming Image Quality > Incoming Video Qlty → Quality Prioritized or Motion Prioritized	Standard
■ Change Outgoing Alternative Image > Select Images → Select a category → Highlight Original → ☆ [Menu] → Change setting → Select a folder → Select a file → ♥ [Play] to view image	Pre-installed
■ Switch Earpiece On <i>>Loud Speaker → OFF</i>	ON
■ Switch to Voice Call when Video Call Fails > Voice Call Auto Redial → ON	OFF

Engaged Video Call Settings

From During a Video Call, [177] [Menu] V. Call settings

Setting/Operation	Default
Change Incoming Image Quality	
> Visual preference -> Quality Prioritizd or	Normal
Motion Prioritized	
Change Brightness	0
> Brightness → Select a brightness level	0
Adjust Color Tone to Lighting Conditions	Automatic
> White balance → Select an environment	
Change Color Tone	Normal
> Color mode set → Select a color tone	
Enhance Image Quality in Low Light Conditions	OFF
>Night mode → ON	
Set Focus	Landssana
> Focus → Select a focus type	Landscape

Settings Digital TV

From Main Menu > TV > User Settings

Setting/Operation	Default
Hide Caption	ON
$>$ Caption \rightarrow OFF	ON
Change View when Activating TV	Wide Screen
>First View → Normal Screen	Wide Scieen
End Recording when Battery Runs Low	Continue
>Rec. When Low Battery → Stop Recording	Recording
Forbid Enhancing Frame Rate Automatically	OFF
>Mobile W-Speed → ON	OIT
Change Image Quality	Dynamic
>Image Quality → Select an item	Dynamic
Deactivate Auto Volume	ON
$>$ Sound \rightarrow Sound Effect \rightarrow Auto Volume \rightarrow OFF	UN
Remaster Sounds from Earphone	OFF
> Sound \rightarrow Sound Effect \rightarrow Remaster $^{1} \rightarrow ON$	on
Add Listening Effect	OFF
> Sound \rightarrow Sound Effect \rightarrow Listening $^{1} \rightarrow$ Select an item	OIT
Change Quality of Sound from Earphone	Normal
> Sound \rightarrow Sound Effect \rightarrow Equalizer $^{1} \rightarrow$ Select an item	Normai
Turn Off Speaker by Closing 832P while	
Watching TV	ON
$>$ Sound \rightarrow TV Sound While Closed \rightarrow OFF	

Settings 17

■ Set Power Saving Mode ² > ECO Mode → YES	Released
■ Set Back Light Duration while Watching TV > Display Light → Lighting Duration → Enter duration (min.)	Constant Light
 ■ Hide Images on Data Broadcast Sites > Data Broadcasting → Images → OFF 	ON
Turn Off Sounds from Data Broadcast/Sites > Data Broadcasting \rightarrow Sound Effect \rightarrow OFF	ON
Show Confirmation on Data Broadcast > Data Broadcasting \rightarrow Reset Settings \rightarrow YES	_
■ Hide Guide in Landscape View > <i>lcons</i> → <i>OFF</i>	ON
Check TV Settings Check TV Settings	_
■ Reset Channel List > Reset Channel Setting → Enter Phone Password → YES	_
■ Delete Information in Broadcasting Storage Area > Reset Storage Area → (Highlight an affiliated channel →) [v][Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES	-
■ Reset TV Settings > Reset TV Settings → Enter Phone Password → YES	_
¹ Remaster/Listening/Equalizer Settings: CP.5-8	

² To cancel ECO Mode, perform same operation. When ECO Mode is set, following settings automatically activate and cannot be changed. When canceled, original settings return.
 Mobile W-Speed: OFF
 Image Quality: Normal
 Remaster: OFF
 Listening: OFF

Equalizer: Normal

Settings

Gettings S! Quick News (Japanese)

Display Settings

From ► Main Menu ► Settings ► Display Settings ► Internal Display ► S! Quick News Settings

Setting/Operation	Default
■ Show Only Unread Items in Standby > Unread/Read Setting → Unread	Unread + Read
■ Change Marquee Speed > Marquee Speed → Fast or Slow	Normal
■ Hide S! Quick News > Display Settings → OFF	ON (Show)
■ Block Image Data >Image Display → OFF	ON (Show)

Auto Update/Deleting Information

From Main Menu Entertainment S! Quick News Settings

Setting/Operation	Default
 ■ Automatically Update Quick News in S! Quick News List¹² > Auto Refresh → S! Quick News → Set update frequency 	OFF
 Automatically Update General News (Once a day)¹² > Auto Refresh → General → ON 	OFF
■ Cancel Automatic Updates for Special News >Auto Refresh → Special → OFF	ON (Automatically update every 4 hours) ^{1 2}
■ Delete S! Quick News Information > Del S! Quick News List → YES → Enter Phone Password	_
¹ If calls are in progress at update time, auto update does i	not occur until

next update.

² Video Calls are rejected during auto update.

Settings Messaging

Universal Settings

From	Main Menu Messaging Settings
	Universal Settings

Setting/Operation	Default
■ Change Font Size* > Font Size → Small or Large	Normal
■ Set Scroll Unit in Text Entry/Preview Window > Scroll Unit → Half Screen or Whole Screen	Single Line
 Confirm Message Delivery (Available when messaging to SoftBank handset numbers) > Delivery Report → ON 	OFF (Not confirm)
Change Anti-Spam Measures Setting Anti-Spam Measures → Report Spam → Edit recipient address → [Finish] → YES	stop@meiwaku. softbankmobile. co.jp
■ Reset Anti-Spam Measures Setting > Anti-Spam Measures → Report Spam → ∑[Menu] → Reset Address → ☑[Finish] → YES	_
Set Auto Delete Off (For Drafts or Sent/Unsent) > Auto Sent Msg Del \rightarrow OFF	ON
■ Set Auto Delete Off (For Incoming Mail) > Auto Received Msg Del → OFF	ON

* Character size in SMS or S! Mail subject field does not change. Check preview to see actual size.

S! Mail Settings

From ► Main Menu ► Messaging ► Settings ► S! Mail Settings ► Incoming Options

Setting/Operation	Default
Set S! Mail Download Condition (within Japan)	Auto Download
>Home Auto Setting → Download by Numbers or Manual Retrieval	All
■ Retrieve S! Mail Manually while Abroad > Roaming Auto Setting → Manual Retrieval	Auto Download
■ Play Attached Music Files Automatically* >Auto Sound Play → ON	OFF (Not play back)

* When multiple sound files are attached, the first file plays.

SMS Settings

From Main Menu Messaging Settings

Setting/Operation	Default
Change SMS Center Number*	
> <i>Message Center</i> → Enter SMS Center number	_
Set Input Character to English	Japanese
> Set Input Character → English (160char.)	(70char.)

* Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings

Yahoo! Keitai

From Main Menu Yahoo! Keitai Set Yahoo! Keitai

PC Site Browser

From Main Menu Yahoo! Keitai PC Site Browser Set PC Site Browser

Setting/Operation	Default
■ Font Size > Font Size → Large or Small	Normal
Scroll Unit > Scroll Unit \rightarrow Whole Screen or Half Screen	Single Line
Images Off > Downloads → Display Image → OFF	ON
Sound Off $>$ Downloads \rightarrow Play Sounds \rightarrow OFF	ON
Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai*	
> Warning Messages → PC Site Browser (when activating) or Yahoo! Keitai (when switching) → OFF	ON

 
PC Site Browser only

Memory Manager & Reset

Yahoo! Keitai

From Main Menu Yahoo! Keitai Set Yahoo! Keitai

PC Site Browser



Setting/Operation	Default
Clear Cache	
>Memory Manager → Clear Cache → YES	_
Delete Cookies	
>Memory Manager → Delete Cookies → YES	_
Delete User ID or Password Entered when	
Authentication is Required	-
>Memory Manager → Delete Certificates → YES	
Set Data Storage Location to microSD Card*	Phone
>Save Settings → microSD	Phone
* Yahool Keitai Browser only	

Yanoo! Keitai Browser only

Security Settings

Yahoo! Keitai

From ► Main Menu ► Yahoo! Keitai ► Set Yahoo! Keitai ► Security

PC Site Browser

From ► Main Menu ► Yahoo! Keitai ► PC Site Browser ► Set PC Site Browser ► Security

Setting/Operation	Default
Set Auto Send Off for Manufacturer's Number (for Authentication)	ON (Send)
> Manufacture Number → OFF (Not send)	
■ Set Not to Send Referer Information > Send Referer → OFF	ON (Send)
 Select whether or Not to Allow Cookies to Be Stored on 832P > Cookies → OFF or Ask Every Time 	ON (Save)
Select whether or Not to Run Scripts in Yahoo! Keitai ¹ > Script → ON, OFF or Ask Every Time	Ask before Connect
 Select whether or Not to Run Scripts in PC Site Browser ² Script → Ask before Connect, OFF or Ask Every Time 	ON (Run)
 View Server Certificates Issued by Certificate Authorities > Root Certificates → Select an item 	_

- Select whether or Not to Retain Authentication Information > Certificate Retention → Always Keep or Not Keep
- ¹ Yahoo! Keitai Browser only
- $^{\rm 2}\,$ PC Site Browser only

Reset

Yahoo! Keitai

From Main Menu Yahoo! Keitai Reset

PC Site Browser

From ► Main Menu ► Yahoo! Keitai ► PC Site Browser ► Reset

Setting/Operation	Default
Reset Browser Settings	
> <i>Restore Defaults</i> → <i>YES</i> → Enter Phone Password	–
Initialize Browser	
>Initialized Browser → YES → Enter Phone Password	_

Settings S! Appli

From	Main Menu 🕨	S! Appli 🕨	S! Appli Settings
------	-------------	------------	-------------------

Setting/Operation	Default
Volume \rightarrow Volume \rightarrow to adjust volume	Level 4
■ Backlight On/Off Display Backlight → Always ON or Always OFF	Follow General Setting
■ Deactivate Vibration > Vibration → OFF	ON
Sync microSD Card with S! Appli Library*	-
* Undate SLAppli Library on microSD Card after using micr	oSD Card in

 Update S! Appli Library on microSD Card after using microSD Card in another handset or PC.

Settings Osaifu-Keitai®

From	Main Menu > Osaifu-Keitai > IC Card Settings

Setting/Operation	Default
View IC Card Status	
>IC Card Status	_
Disable Handset Response to Commands from Reader/Writer	All ON
> Interface Settings → Enter Phone Password → Select an item → OFF	AILUN

Default Settings

Default settings vary by handset color as below.

• For operations, refer to respective setting sections.

	Setting		Black	White	Champagne	Pink	Red
Notification		Voice Call	A-Signal	B-Signal	C-Signal	D-Signal	A-Signal
Light	Incoming	Video Call	A-Signal	B-Signal	C-Signal	D-Signal	A-Signal
(Ľ ≇P.17-9)		Message	A-Rhythm	B-Rhythm	C-Rhythm	D-Rhythm	A-Rhythm
	Side Key (Upper Side H	Key)	A-Wave	B-Wave	C-Wave	D-Wave	A-Wave
Display	Stand-by Display		Black	White	Champagne	Pink	Red
Settings		Position	Pattern 10	Pattern 1	Pattern 10	Pattern 6	Pattern 1
(⊆ ≇P.17-3 to 5)	Stand-by Clock	Size	Large	Large	Large	Large	Large
		Pattern	Pattern 5	Pattern 5	Pattern 6	Pattern 5	Pattern 4
	Icon Clock		Pattern 6	Pattern 6	Pattern 6	Pattern 1	Pattern 6
	Outgoing Image (Call/	e (Call/Message) Pattern 1 Pa		Pattern 1	Pattern 1	Pattern 2	Pattern 1
	Incoming Image (Call/	Message)	Pattern 1	Pattern 1	Pattern 1	Pattern 2	Pattern 1
	Menu Icons		Pattern 1	Pattern 1	Pattern 1	Pattern 2	Pattern 1
	Color Scheme		Black	White	Gold	Pink	Red

Function List	
Troubleshooting	
Warning Signs	
Software Update	
Updating Software Manually	
Updating Software Automatically	
Quick Open Menu	18-13
Key Assignments (5-touch Mode)	
Key Assignments (2-touch Mode)	18-15
Key Assignments (NIKO-touch Mode).	
Symbol List	18-17
Character Code List	18-18
Weather Indicator List	18-23
Memory List	
Specifications	18-25
Index	18-26
Warranty & Service	
Warranty	
After-Sales Service	
Customer Service	18-33

Function List

From Main Menu, press key corresponding to a menu number for direct access (P.1-19).

Example: To select *S*! *Mail Settings* in Messaging menu:

1 first column 9 second column 3 third column

- 1 (Messaging) \rightarrow 9 (Settings) \rightarrow 3 (S! Mail Settings)
- To select (1): $\bigcirc \rightarrow$ (1); To select (2): $\bigcirc \rightarrow$ (2)
- When Menu Icons are set to Pattern 5 or Customize, first column of function number is not available. Select a menu from Main Menu; then select a function number (second column in table).

Messaging									
	Menu Number/Function Name Page								
1	Me	essag	ging	-					
	1	Inc	coming Mail	-					
		1	Received	P.13-10					
		2	ユーザーフォルダ 1	P.13-3					
		3	ユーザーフォルダ 2	P.13-3					
		4	ユーザーフォルダ 3	P.13-3					
		5	Spam Folder	P.13-17					
	2	Cr	eate New	P.13-4					
	3	Re	trieve New	P.13-15					
	4	Dra	afts	P.13-15					
	5	Tei	mplates	-					
		1	Download Templates	P.13-10					
	6	Se	nt/Unsent	P.13-15					
	7	Se	rver Mail	-					
		1	Retrieve Mail List	P.13-14					
		2	Retrieve All	P.13-14					
		3	Delete All	P.13-15					

7	4	Server Mail Memory	P.13-15
8	Cre	eate New SMS	P.13-7
9	Set	tings	-
	1	Custom Mail Address	P.13-3
	2	Universal Settings	P.17-14
	3	S! Mail Settings	P.17-14
	4	SMS Settings	P.17-14
0	Me	mory Status	P.13-3
	9	8 Cree 9 Set 1 2 3 4	 8 Create New SMS 9 Settings 1 Custom Mail Address 2 Universal Settings 3 S! Mail Settings 4 SMS Settings

Y	Yahoo! Keitai								
	Menu Number/Function Name Page								
2	Yal	noo!	Keitai	-					
	1	Ya	hoo! Keitai	-					
	2	Bo	okmarks	-					
	3	Sa	ved Pages	P.14-8					
	4	En	ter URL	-					
		1	Direct Entry	P.14-4					
		2	URL History List	P.14-4					
	5	History		P.14-4					
	6	PC	Site Browser	-					
		1	Homepage	P.14-5					
		2	Bookmarks	P.14-8					
		3	Saved Pages	P.14-8					
		4	Enter URL	P.14-5					
		5	History	P.14-5					
		6	Yahoo! Keitai	P.14-5					
		7	Set PC Site Browser	P.17-17					
		8	Reset	P.17-18					

2	7	Set	t Yahoo! Keitai	-
	1	1	Font Size	P.17-15
		2	Scroll Unit	P.17-15
		3	Downloads	P.17-15
		4	Memory Manager	P.17-15
		5	Security	P.17-16
		6	Save Settings	P.17-15
	8	Reset		-
		1	Restore Defaults	P.17-16
		2	Initialized Browser	P.17-16

SI AF	🥁 S! Appli							
	Menu Number/Function Name Page							
3	S!	Appl	i	-				
	1	S!	Appli List	-				
		1	Download S! Appli	P.15-2				
	2	Os	aifu-Keitai	_				
		1	Lifestyle-Appli	P.16-3				
		2	IC Card Settings	P.16-5				
	3	S!	Appli Settings	-				
		1	Volume	P.17-19				
		2	Display Backlight	P.17-19				
		3	Vibration	P.17-19				
		4	Synchronize microSD	P.17-19				
	4	S!	Appli History	P.15-3				
	5	Inf	ormation	P.15-2				

lsai Keit	Saifu-Keitai				
		Menu Number/Function Name	Page		
	Os	aifu-Keitai	-		
	1	Lifestyle-Appli	P.16-3		
	2	IC Card Settings	P.16-5		

Os K

0

œ

Cam	Camera					
	Menu Number/Function Name Page					
5	Ca	mera	-			
	1	Camera	P.6-5			
	2	Video Camera	P.6-6			
	3	Pictures	P.6-10			
	4	Videos	P.6-10			

Ente	Entertainment						
	Menu Number/Function Name Page						
;	En	terta	inment	-			
	1	S!	Quick News	-			
		1	S! Quick News List	P.7-3			
		2	Settings	P.17-13			
	2	S! Info Ch./Weather -		-			
		1	What's New?	P.7-4			
		2	History	P.7-4			
		3	Register/Cancel	P.7-4			
		4	Get Latest Contents	P.7-4			
		5	Weather Indicator	P.7-5			
	3	Bo	okSurfing	P.7-6			
	4	e-E	Book Viewer	P.7-6			

😰 Tools							
	Menu Number/Function Name Page						
7	To	ols		-			
	1	Alá	arms	P.12-7			
	2	Ca	lendar	P.12-2			
	3	Ca	Iculator	P.12-8			
	4	No	tepad	P.12-9			
	5	Tas	sks	P.12-6			
	6		tionary	P.12-10			
	7	So	und Recorders	-			
		1	Voice Call Data	P.2-15			
		2	Video Call Data	P.2-15			
		3	Answer Phone Setting	P.2-15			
		4	Voice Recorder	P.12-11			
		5	Voice Announce	P.12-11			
	8	Bar Code Reader		-			
		1	Scan Barcodes	P.12-12			
		2	Saved Data List	P.12-13			
	9	Lo	cation Settings	-			
		1	Positioning Lock	P.12-14			
		2	Send Location Info	P.12-14			
	0	Re	ceive via Infrared	-			
		1	Receive	P.10-3			
		2	Receive All	P.10-4			

*	mi	croSD Backup	-			
	1	Phone Book	P.9-18			
	2	Calendar	P.9-18			
	3	Tasks	P.9-18			
	4	Incoming Mail	P.9-18			
	5	Sent Messages	P.9-18			
6 Unsent Message		Unsent Messages	P.9-18			
	7	Drafts	P.9-18			
	8	Memo Pad	P.9-18			
	9	Bookmarks	P.9-18			
#	Ter	nplates/Users Dic.	-			
	1 Templates		P.3-5			
	2	User's Dictionary	P.3-10			

Dat	Data Folder							
			Menu Number/Function Name	Page				
8	Da	ta Fo	older	-				
	1	Pic	tures	-				
		1	Download Pictures	P.9-4				
		2	Main Folder	P.9-2				
		3	Camera	P.9-2				
		4	My Pictograms	P.13-6				
		5	Mail Art	P.9-2				
		6	Pre-installed	P.9-2				
		7	Original Animation	P.9-13				

8	2	Rir	ng Songs&Tones	-
		1	DL Ring Songs&Tones	P.9-4
		2	Main Folder	P.9-2
		3	Pre-installed	P.9-2
		4	Voice Announce	P.9-2
		5	Play List	P.9-2
	3	S!	Appli	-
		1	Download S! Appli	P.15-2
	4	Μι	isic	-
		1	Main Folder	P.8-7
		2	WMA	P.8-7
	5	Vio	leos	-
		1	Download Videos	P.9-4
		2	Main Folder	P.9-3
		3	Camera	P.9-3
		4	Pre-installed	P.9-3
		5	Play List	P.9-3
		6	Position Memory	P.9-6
	6	PC Movies –		
		1	microSD	P.9-3
		2	Position Memory	P.9-6
		3	Play History	P.9-3
	7	TV		-
		1	Image	P.5-13
		2	Video	P.5-12
		3	Position Memory	P.9-3
	8	Lif	estyle-Appli	-
		1	Download	P.16-3
	9	Bo	oks	-
		1	Download Books	P.9-4

8	0	Cu	stomized Screen	-
		1	Customized Screen	P.1-20
		2	Familiar Usability	P.1-20
	∗	Ter	nplates	-
		1	Download Templates	P.13-10
	#	Ot	her Documents	-
		1	Main Folder	P.9-3

Mu	Music Player					
			Menu Number/Function Name	Page		
9	Mu	usic F	Player	-		
	1	Pla	ayer	-		
		1	All Tracks	P.8-6		
		2	Artist	P.8-6		
		3	Album	P.8-6		
		4	Genre	P.8-6		
		5	Play List	P.8-6		
	2	Da	ta Manager	-		
		1	Main Folder	P.8-7		
		2	WMA	P.8-7		

	TV TV						
	Menu Number/Function Name Page						
*	TV		-				
	1	Wá	atch TV	P.5-5			
	2	Pro	ogram List	P.5-7			
	3	Tin	ner Watching	P.5-13			
	4	Tin	ner Recording	P.5-13			
	5	Re	cording Result	P.5-14			
	6	TV	Link	P.5-10			
	7	Ch	annel List	P.5-4			
	8	Ch	annel Setting	-			
		1	Select Area	P.5-4			
		2	Automatic	P.5-4			
	9	User Settings –					
		1	Caption	P.17-13			
		2	First View	P.17-11			
		3	Rec. When Low Battery	P.17-11			
		4	Mobile W-Speed	P.17-11			
		5	Image Quality	P.17-11			
		6	Sound	P.17-11			
		7	ECO Mode	P.17-12			
		8	Display Light	P.17-12			
		9	Data Broadcasting	P.17-12			
		0	Icons	P.17-12			
		*	Check TV Settings	P.17-12			
		#	Reset Channel Setting	P.17-12			
			Reset Storage Area*	P.17-12			
		1	Reset TV Settings	P.17-12			

Phone Book						
Menu Number/Function Name Page						
Ph	one	Book	-			
1	Ph	one Book	P.4-2			
2	Cre	eate New Entry	P.4-3			
3	Ca	ll Log	-			
	1	Outgoing Call Logs	P.2-13			
	2	Incoming Call Logs	P.2-13			
4	Gr	pup	P.4-6			
5	Ac	count Details	P.1-26, P.4-13			
6	S!	Addressbook BkUp	-			
	1	Start Sync	P.4-11			
	2	Auto Sync Settings	P.4-12			
	3	Sync Log	P.4-12			
7	Me	emory Manager	P.4-9			
8	Re	strictions	P.11-10			
9	Set	ttings	-			
	1	Save Settings	P.17-10			
	2	Search Method	P.17-10			
	3	Font Size	P.17-10			
	4	Voice Dial	P.4-14			
	5	Mail Group	P.13-18			
	6	Forwarding Image	P.17-10			
0	Me	emory Status	P.4-10			

• Number in first column is not available for Phone Book.

* Cannot be selected by third column number.

South	Settings						
	Menu Number/Function Name Page						
#	Se	tting	S	-			
	1	Sound Settings		-			
		1	Ring Tones	P.17-2			
		2	Ringer Volume	P.17-2			
		3	Key Tone	P.17-2			
		4	Stereo/3D Sound	P.17-2			
		5	Earphone	P.17-2			
		6	Message Ring Tones	P.17-2			
	2	Dis	splay Settings	-			
		1	Internal Display	P.17-3			
		2	Font Size	P.17-5			
		3	Font	P.17-5			
		4	Menu Icons	P.17-4			
		5	Back Light Time	P.17-5			
		6	View Blind	P.1-25			
		7	Color	P.17-3			
		8	Private Menu	P.1-21			
		9	言語設定	P.17-3			
		0	Open for New	P.17-3			
		*	LCD AI	P.17-5			
		#	Disp. Call/Recv #	P.17-5			
		1	Describe Icons	P.1-8			
	3	Cu	stomized Screen	-			
		1	Customized Screen	P.1-20			
		2	Familiar Usability	P.1-20			
		3	Release Settings	P.1-20			

4	Inc	oming Settings	-				
	1	Vibrator	P.17-2				
	2	Manner Mode Type	P.17-6				
	3	Answer Setting	P.17-6				
	4	Open-to-Ans. Call	P.17-6				
	5	Call Logs	P.11-8				
	6	Phone Book Image	P.17-6				
	7	Ring Time Settings	P.11-11				
	8	Info Notice Setting	P.17-6				
	9	Auto Answer	P.17-6				
	0	In-call Management	P.17-6				
5	Ph	one Settings	-				
	1	Side-keys Guard	P.11-8				
	2	Text Entry Method	P.17-9				
	3	Battery	P.17-2				
	4	Pause Dial	P.2-3				
	5	Headset Switch to Call	P.17-8				
	6	Voice Settings	P.17-10				
	7	Software Update	P.18-11				
6	Da	te & Time	-				
	1	Date & Time	P.17-7				
	2	World Clock	P.17-7				
	3	Daylight Savings	P.17-7				
	4	Alarm Tone	P.17-7				
	5	Time Correction	P.17-7				

Appendix 18



#	7	Se	curity	-
		1	Privacy Key Lock	P.11-4
		2	Personal Data Lock	P.11-4
		3	IC Card Lock	P.16-5
		4	Secret Mode	P.11-8
		5	Secret Data Only	P.11-8
		6	Key Pad Dial Lock	P.11-7
		7	Reject Unknown	P.11-10
		8	Call Setting w/o ID	P.11-10
		9	All Reset	P.11-11
		0	Reset Settings	P.11-10
		*	PIN Authentication	P.11-2
		#	Change Phone Password	P.11-2
		1	Timer Lock at Close	P.11-5
		2	Lock OFF at Open	P.11-6
		3	Content Key	P.9-5
		4	Lock Message	P.11-7
	8	Ca	ll Settings	-
		1	Call Time/Cost	P.17-8
		2	Reset	P.17-8
		3	Set Max Cost Limit	P.17-8
		4	Voice Mail/Call Fwding	P.2-17, P.2-18
		5	Call Waiting	P.2-19
		6	Call Barring	P.2-20
		7	Missed Call Notifi.	P.2-19
		8	Prefix	P.2-3
		9	Volume	P.17-8
		0	Shikkari Talk	P.2-5
		*	Closing Clamshell	P.17-8
		#	Hold Tones	P.17-8
		1	Noise Reduction	P.17-8

9	 Quality Alarm Reconnect Signal Emission OFF Mode Show My Number Service Numbers Video Call Incoming Video Qlty Select Images Loud Speaker 	P.17-8 P.17-8 P.1-16 P.2-21 P.17-8 - P.17-10 P.17-10 P.17-10 P.17-10			
9	Emission OFF Mode Show My Number Service Numbers Video Call Incoming Video Qlty Select Images Loud Speaker	P.1-16 P.2-21 P.17-8 - P.17-10 P.17-10 P.17-10			
9	 Show My Number Service Numbers Video Call Incoming Video Qlty Select Images Loud Speaker 	P.2-21 P.17-8 - P.17-10 P.17-10			
9	Service Numbers Video Call Incoming Video Qlty Select Images Loud Speaker	P.17-8 - P.17-10 P.17-10			
9	Video Call I Incoming Video Qlty Select Images Loud Speaker	- P.17-10 P.17-10			
	Incoming Video Qlty Select Images Loud Speaker	P.17-10			
	2 Select Images 3 Loud Speaker	P.17-10			
	3 Loud Speaker				
		P 17 10			
		F.17-10			
	4 Voice Call Auto Redial	P.17-10			
0	International Call	-			
	1 Int'l Dial Assist	P.2-10			
	2 Select Operator	P.2-10			
	3 PLMN Setting	P.2-11			
	4 Operator Name	P.2-11			
	5 Select Network	P.2-10			
*	Connectivity	-			
	1 USB Mode	P.10-6			
	2 Retrieve NW Info	P.1-14			
#	Notification Light	-			
	1 Incoming	P.4-4, P.17-9			
	2 Online	P.17-9			
	3 Missed Call/Unread	P.17-9			
4	4 Clamshell Close	P.17-9			
	5 Music	P.17-9			
	6 IC Card	P.17-9			
	7 Side Key	P.17-9			
1	8 Confirm Status	P.17-9			

Troubleshooting

Handset does not turn on

- Was 💿 pressed for more than one second?
- · Is battery level sufficient?
- · Is battery inserted properly? (C P.1-12)

Handset functions do not work after turning power on

Does PIN Entry window appear?
 PIN Authentication is ON. Enter PIN (CPP.11-2).

USIM not inserted After power-off Insert USIM or Inserted USIM is unavailable to this mobile phone Please insert valid one appears when handset is turned on or operations attempted

- · Is USIM Card inserted correctly? (C P.1-3)
- · Is SoftBank specified USIM Card inserted? (C→P.1-2)
- USIM Card IC chip may be dirty.
 Wipe with a clean cloth, then insert USIM Card correctly.

Keypad does not respond

Does appear in Standby?
 Keyguard (CPP.11-3) or Privacy Key Lock is active (CPP.11-4). Cancel it.

Side Keys_do not work while handset is closed

Does appear?
 Side-keys Guard (C→P.11-8) is ON.
 Set to OFF.

Outgoing calls or Video Calls will not connect or message and Internet connections are unavailable

- Does I appear?
 Is handset out-of-range or in a location where signal is weak?
 Move to a location where signal is strong.
- Are you using handset overseas?
 Set international settings (e.g. Select Operator) to use abroad (CPP.2-10).
- Does ☐ appear?
 Personal Data Lock is set (CPP.11-4). Deactivate Personal Data Lock.

Outgoing calls or Video Calls will not connect

- · Is area code entered?
- · Is restricting outgoing calls in Call Barring? (C P.2-20)
- Does ¥ appear in Standby? Total cost has reached upper limit. Set Max Cost Limit to *OFF* or execute *Reset* (∠P.17-8).

Outgoing calls will not connect or busy signal sounds

- · Did you enter area code?
- · Is restricting outgoing calls in Call Barring? (☐ P.2-20)

Call is interrupted or disconnected

 Does appear? Is handset out-of-range or in a location where signal is weak?

Move to a location where signal is strong.

"Cannot start any more functions" appears when a menu is opened.

• Maximum number of functions are active at the same time. Cancel current function and try again (∠ P.1-25).



Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.
 Set Secret Mode or Secret Data Only *ON* (C P.11-9).
- Does ☐ appear?
 Personal Data Lock is set (□ P.11-4). Deactivate Personal Data Lock.

Digital TV does not work

- Is handset out of terrestrial Digital TV broadcasting service area or in a location where airwaves are weak?
 - Move to a location where airwaves are strong ($\square P.5-3$).

Customized Screen setting cannot be canceled

Enter "6368##" in Standby → *Release Settings* Customized Screen cannot be canceled in Standby while Simple menu is active. Deactivate Simple menu in Standby.

Osaifu-Keitai® does not work

 Does ∰ appear? Deactivate IC Card Lock (C P.16-5).

Display clock is reset

• Replacing battery does not reset Display clock; however, if battery is removed for long periods, the clock may be reset. Set Date & Time (CPP.17-7) or Retrieve NW Info (CPP.1-14) again.

Battery Operating Time is greatly reduced

 Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (19.1-10) and "Battery Time" (19.1-11).

Cannot charge battery

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder (not included)? (CP.1-13)
- · Is AC Charger securely plugged into an outlet?
- · Is battery installed in handset correctly? (ピアP.1-12)
- · Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Battery may not charge beyond +5°C and +35°C.
- · Battery may need to be replaced.

Handset/accessories feel warm

 AC Charger/Desktop Holder may warm during charging. Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.

Note

 If you did not find the remedy to your problem here, please contact SoftBank Mobile Customer Center (CPP.18-33).

Appendix

18

Warning Signs

Problem	Causes and Remedies
翻 appears	Handset is out-of-range. Move to a location where signal is strong.
appears	Side-keys Guard is ON (CPP.11-8). To activate Side Keys while handset is closed, set Side-keys Guard OFF .
🗂 or 脂 appears	Keyguard (CPP.11-3) or Privacy Key Lock (CPP.11-4) is active. Cancel it to use handset. Answer calls even if Keyguard or Privacy Key Lock is active.
Low battery message appears and battery alarm tone sounds	Battery is low. Charge (C≇P.1-13) or replace battery (C≇P.1-12).

Software Update

Check for handset software updates and download as required.

Choose to begin update or schedule update.

- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if 📄 appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.

1

Updating Software Manually

Main Menu ► Settings ► Phone Settings ► Software Update ► Software Update

 $\boxdot [YES] \rightarrow Follow onscreen instructions$

After download is complete, handset automatically turns off and restarts before Software Update begins.

After Software Update is complete, handset automatically turns off and restarts before information appears for successful update (This process takes approximately 60 seconds.).

★ Software Update Software has been succe ssfully updated.

Updating Software Automatically

Main Menu ► Settings ► Phone Settings ► Software Update ► Regular Updates

- **YES** → Follow onscreen instructions
 - Select YES to activate Internet. Follow onscreen instructions to perform Regular Updates. For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Update Results

When Event Indicator appears, *Update* →

- When *Update* indicator does not appear, Main Menu > Settings
 - Phone Settings
 - Software Update
 - Update Results

Scheduled Update

Follow onscreen instructions for setup. Confirmation appears at scheduled update time. Press • or wait ten seconds for update to start.

 Software Update will not start while handset is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.



Software Update

Your scheduled update

s about to start.

Note

- If handset does not power on after Software Update, remove then re-insert battery and try again. If handset still does not power on, contact SoftBank Mobile Customer Center, Customer Assistance (CPP.18-33).
- Software Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (27.18-33).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (http://www.softbank.jp).

Quick Open Menu

When *Menu lcons* is set to *Pattern 5* or *Customize* (CPP.17-4), press menu numbers in Main Menu to open the following functions.

Example: To open Notepad:

In Standby, $\bigcirc \rightarrow 42$

Menu	#
Alarm	44
Calendar	45
Calculator	85
Notepad	42
Tasks	95
Sound Recorders	55
Receive via Infrared	79
Templates/Users Dictionary	38
Pictures folder	46
Ring Songs&Tones folder	16
Phone Book Settings	26
Ring Tones	13
Ringer Volume	50
Key Tone	30
Stereo/3D Sound	64
Earphone/Speaker Settings	51
Message Ring Tones	68
Internal Display	56

Menu	#
Font Settings	66
Menu Icons	57
Back Light Time	70
Color Theme	86
Private Menu Settings	52
Language	15
Describe Icons	36
Vibrator	54
Manner Mode Type	20
Answer Setting	58
Ring Time Settings	90
Info Notice Setting	65
Auto Answer	94
Text Entry Method	35
Date & Time	31
Secret Mode	40
Secret Data Only	41
Call Setting w/o ID	10
Reset Settings	23
Change Phone Password	29
Call Time/Cost	61
Reset Total Duration/Cost	60
Closing Clamshell	18
Noise Reduction	76

Menu	#
Quality Alarm	75
Reconnect Signal	77
Show My Number	17
Notification Light	89

Key Assignments (5-touch Mode)

Display Key	漢	カナ	abc	123	
1	あいうえおぁぃぅぇぉ	アイウエオァィゥェォー	. / @ - : ˜ ¹~²_1	1	
2	かきくけこ	カキクケコ2	abcABC 2	2	
3	さしすせそ	サシスセソ3	defDEF 3	3	
4	たちつてとっ	タチツテトッ4	ghiGHI 4	4	
5	なにぬねの	ナニヌネノ5	jkIJKL 5	5	
6	はひふへほ	ハヒフヘホ6	mnoMNO 6	6	
7	まみむめも	マミムメモ7	pqrsPQRS 7	7	
8	やゆよゃゅょ	ヤユヨャュョ8	tuvTUV 8	8	
9	らりるれろ	ラリルレロ9	wxyzWXYZ 9	9	
0	わをんゎー	ワヲンヮ ² 一0	0	0	
*	" o 3	°° 3	Pictograms	*	
		[Press and hold] Templates		*	
	、。?!·	、。?!·	, . ?!'-& () ¥	#	
# 4	□ (Space)	🗌 (Space)	🗌 (Space)	#	
		[Press and ho	ld] Symbols ⁴		

- ¹ Appears when entering single-byte character.
- $^{\scriptscriptstyle 2}\,$ Appears when entering double-byte character.
- 3 Added to highlighted character. Press 🗶 to display pictographs after determining character.
- ⁴ In number mode, symbol list may not be displayed.
- While entering character, press **(a)** to toggle characters at cursor in reverse order.
- After entering hiragana, katakana or alphanumerics, press 🖍 to toggle upper/lower case.
- In number mode, press and hold ① to enter "+" (not available in S! Mail text field).
- In alphanumerics mode, characters entered after an upper-case character appear in order of: upper case → lower case.

Key Assignments (2-touch Mode)

Kanji/Hiragana Mode

<Upper Case Mode>

\searrow					Se	econ	d dig	jit			
		1	2	З	4	5	6	7	8	9	0
	1	あ	い	う	え	お	А	В	С	D	Е
	2	か	き	<	け	Č	F	G	Н		J
	З	さ	し	す	せ	そ	К	L	Μ	Ν	0
	4	た	ち	0	T	と	Ρ	Q	R	S	Т
First digit	5	な	に	ぬ	ね	の	U	V	W	Х	Υ
irst	6	は	강	ιζι		ほ	Ζ	?	!	—	/
	7	ま	み	む	め	も	¥	&			
	8	や	(Þ)	よ	*	#			
	9	5	b	3	れ	3	1	2	З	4	5
	0	わ	を	h		0	6	7	8	9	0

<Lower Case Mode>

					Se	econ	d dig	git			
	\searrow	1	2	З	4	5	6	7	8	9	0
	1	あ	い	5	え	お	а	b	С	d	е
	2						f	g	h	i	j
	З						k		m	n	0
- L	4			2			р	q	r	S	t
First digit	5						u	V	W	Х	У
irst	6						Z				
1	7										
	8	や		Þ		よ					
	9										
	0	わ			`	0					

Katakana Mode

<Upper Case Mode>

<u> </u>	per	Cus														
\searrow			Second digit													
		1	2	З	4	5	6	7	8	9	0					
	1	7	1	ウ	Ι	1	А	В	С	D	Е					
	2	力	+	ク	ケ		F	G	Н	Ι	J					
	З	Ħ	Ŷ	λ	t	y	Κ	L	М	Ν	0					
t.	4	Þ	F	ッ	Ŧ	\mathbb{P}	Р	Q	R	S	Т					
First digit	5	t	_	R	ネ)	U	V	W	Х	Y					
irst	6	Л	Ł	フ	Λ	木	Ζ	?	!	-	/					
ш	7	7	111	Ь	Х	£	¥	8								
	8	Þ	(l)	Ξ	*	#								
	9	ラ	IJ	ll	V		1	2	3	4	5					
	0	ワ	F	y	"	•	6	7	8	9	0					

<Lower Case Mode>

			Second digit										
			2	З	4	5	6	7	8	9	0		
	1	7	イ	ゥ	I	オ	а	b	С	d	е		
	2						f	g	h	i	j		
	З						k		m	n	0		
t	4			ッ			р	q	r	S	t		
First digit	5						u	V	W	Х	у		
irst	6						Ζ						
"	7												
	8	Þ		L		Э							
	9												
	0	ワ ¹			,								

Alphanumerics Mode

				Seco	nd c	ligit					
	\sum	1	2	3	4	5	6	7	8	9	0
	1	"	\$	%	1	+	а	b	С	d	е
	2	,		:	;	<	f	g	h	i	j
	З	=	>	0	[]	k	Ι	m	n	0
L	4	^	-	1 2	{		р	q	r	S	t
digi	5	}	\sim 1 ~ 2				u	V	W	Х	У
First digit	6						Z	?	!	-	/
1	7						¥	&			
	8		()		*	#			
	9						1	2	3	4	5
	0						6	7	8	9	0

Toggle upper/lower case

¹ Appears when entering double-byte character.

² Appears when entering single-byte character.

Note

- A space is entered by pressing key corresponding to a blank where no character is assigned.
- In kanji (hiragana) or katakana mode, "`" or "`" is entered by pressing * after entering
- characters. Press ★ once for "`", twice for "°".
- \bullet In number mode, press and hold \fbox to enter
 - "+" (not available in S! Mail text field).

Key Assignments (NIKO-touch Mode)

Kanji/Hiragana Mode

<Upper Case>

<u>_0</u>	per	Cus	<u> </u>								
\backslash					Se	con	d dig	git			
	\searrow	1	2	З	4	5	6	7	8	9	0
	1	あ	い	5	え	お		-	@	_	1
	2	か	き	<	け	Č		а	b	С	2
	З	さ	し	す	せ	そ		d	е	f	З
L	4	た	ち	0	τ	と	2	g	h	i	4
digi	5	な	に	ぬ	ね	の		j	k		5
First digit	6	は	ひ	ιζι		ほ		m	n	0	6
ш.	7	ま	み	む	め	も	р	q	r	S	7
	8	や	Þ	よ	や	Þ	よ	t	u	V	8
	9	5	b	る	れ	ろ	W	Х	У	Ζ	9
	0	わ	を	h	、	0	—		!	?	0

Katakana Mode

$\leq 0p$	oper	Cas	e>								
					Se	econ	d dig	git			
	\geq	1	2	З	4	5	6	7	8	9	0
	1	7	1	ウ	Ι	才		-	0	_	1
	2	力	+	ク	ケ			а	b	С	2
	3	Ħ	シ	λ	t	У		d	е	f	3
L.	4	夕	F	Ÿ	Ŧ	1	ッ	g	h	i	4
digi	5	t	_	R	ネ	1		j	k	Ι	5
First digit	6	Л	Ł	フ	Λ	木		m	n	0	6
ш.	7	7	111	Ь	Х	Ŧ	р	q	r	S	7
	8	Þ	l	Ξ	Þ	L	Э	t	u	V	8
	9	ラ	IJ	ll	V		W	Х	у	Z	9
	0	ワ	F	ン	、	0	-	•	!	?	0

Note

- Press [Mode] to toggle kanji (hiragana) and single-byte number modes.
- To switch to katakana mode: In kanji (hiragana) mode, ∑r[Menu] → 1 byte character
- To switch to lower case: Enter a character \rightarrow
- A space is entered by pressing key corresponding to a blank where no character is assigned.
- Press * once for "*", twice for "*". In kanji (hiragana) mode, enter characters before pressing *.
- In number mode, press and hold <u></u> to enter "+" (not available in S! Mail text field).

Symbol List

Double-byte Symbol List

			-,																											
、	0	,			:	;	?	!	*	δ	ε	ζ	η	θ	l	К	λ	μ	V] [Ð	Ē	ு	(株)	(有)	(代)	明治	炡	昭和	÷
•	1	`		^	-	_	\mathbf{i}	ヾ	2	ξ	0	π	ρ	σ	τ	U	Φ	χ	ψ		≡	ſ	∮	Σ		\perp	L	\square	Δ	•.•
2	//	순	々	\checkmark	\bigcirc		—	-	/	ω	А	Б	В	Γ	Д	Е	Ë	Ж	З		\cap	U								
$\left \right\rangle$	\sim					"	,	u	"	И	Й	К	Л	Μ	Н	0	П	Ρ	С											
()	ĺ]	[]	{	}	<	\rangle	Т	У	Φ	Х	Ц	Ч	Ш	Щ	Ъ	Ы	S	Sing	le-b	yte	Sym	bol	List				
«	>	Γ	Ţ	ſ	J	ľ]	+	—	Ь	Э	Ю	Я	а	б	В	Г	Д	е		ļ	"	#	\$	%	&	,	()	*
±	Х	÷	=	\neq	<	>	\leq	\geq	∞	ë	ж	З	И	Й	К	Л	М	Н	0		+	,	-		/	:	;	<	=	>
	o ⁷ l	ዯ	0	1	"	°C	¥	\$	¢	П	р	С	Т	У	ф	Х	Ц	Ч	Ш		?	0	[¥]	^	_	۲	{	
£	%	#	&	*	@	§	☆	\star	\bigcirc	Щ	Ъ	Ы	Ь	Э	Ю	Я			Г		}	~	0	Γ		`	•	-	*	0
	\bigcirc	\diamond	٠			\bigtriangleup		\bigtriangledown	▼	٦		L	\vdash	\top	\neg		+	—	Ι											
*	Ŧ	→	←	Ť	Ļ	=	\in	∋	\subseteq	г	٦	Ч	L	F	т	Н	ㅗ	+	\vdash											
⊇	\subset	\supset	U	\cap	\wedge	\vee	_	\Rightarrow	\Leftrightarrow	-	-		+	\vdash	т	\dashv	⊥	+	\bigcirc											
V	Ξ	\angle	\perp	\frown	∂	∇	\equiv	≒	«	2	3	4	(5)	6	\bigcirc	8	9	10	1											
≫		\sim	\propto	•.•	ſ	ſſ	Å	‰	#	(12)	(13)	(14)	(15)	(16)	\bigcirc	(18)	(19)	20	Ι											
b	⊅	†	‡	¶	\bigcirc	ゐ	ବ୍	ヰ	ヱ	Π	Ш	IV	V	VI	VII	VII	IX	Х	Ξ _{IJ}											
ヴ	力	ケ	А	В	Г	Δ	Е	Ζ	Н	+	セン チ	メートル	グラ ム	トン	アール	ヘク タール	リッ トル	ワッ ト	ற											
Θ	Ι	К	Λ	Μ	Ν	Ξ	0	П	Ρ	ドル	セント	バー セント	ミリバル	ページ	mm	CM	km	mg	kg											
Σ	Т	Y	Φ	Х	Ψ	Ω	α	β	γ	СС	m	平成	*	*	No.	K.K.	Tel	Ð	\oplus		• To	ente	er a s	pace	: 🗇 F	2.3-3				

Character Code List First Three Last Digit First Three Last Digit First Three Last Digit Diaits 2 З 4 6 8 9 Digits 2 З 4 6 8 Dinits 2 З 6 161 162 163 悪扱袷 握宛安 旭虻按 050 ウグズ 穐斡粟 渥姐庵 葦飴暗 194 確学鰍 ゥクス オコ 葵梓鮎鞍 茜圧或杏 格郭笠活樺栢 核閣樫渇 殻隔橿 獲革梶葛兜 穫岳潟轄藩 ェケセヅハ エゲゼテ ,絢案 051 ガザダ 195 196 較掛 |楽割日釜 カサタドビポ ギジ 綾盟 オゴ キシチニ First Three シデ 谄 Last Digit 052 Digits 2 З 4 5 6 78 9 053 デヌブムリヴ ッ 164 i 97 111日本 涓 褐 鰹 ッネ 詞鞄茅苅 010 054 055 ÷ 198 199 株 LI ۰, . lõii ピマヨヲ フミラン 164 以惟緯域芋淫陰う 伊意胃育鰯胤隠 位慰萎郁允蔭韻 偉 囲為違壱員 委異医逸姻 依易衣磯印 夷畏遺溢因 ボ 056 65 荷謂 012 순 ⊁ 叞 200 201 桬 > ゞ 11 ヤロ ヤ 威移井稲引 刈巻感汗簡還含頑 瓦堪憾澗缶間巌願 乾姦換潅翰閑玩 侃 冠官相甘艦陥眼 013 166 ル ?維亥茨飲院 057 T E Z ワ 喚慣漢緩鑑岸顔 寛桓監 勘幹 勧患歓管貫丸雁 完敢環肝関癌 \sim 058 苹 167 202 203 棺 カ ヶ _ lõis iē8 咽 款 <____ lõi6 169 170 204 莞韓岩 × -≠, °⊃°C⊛ ≦¥ 060 В ΔΞΩ Ε Z П H ΘΣ I 竿 観 ÷ Α 205 206 207 3 -諌舘贋 017 ≧ \$ 061 K Y Λ 0 Т 館 Μ Ν Ψ % © 062 φ X 018 £ # 8 @ 翫 ¢ * 063 170 宇臼瓜 烏渦閏 019 β 右碓浦 羽噓噂 * α δ ξ ε ζ η 020 064 λ ò ŧ * θ μ ν π 171 窺姥 丑厩 L к ρ 鵜鰻 021 ļ = 065 σ τ φ X ψ 172 173 領云 鬱運 蔚 207 伎幾 危忌 喜揮 器 + υ ω 企希 lõzż 奇既機 ∈ ∋ \subseteq \equiv 雲 基旗 嬉期帰規偽祇喫虐急笈拠亨侠喬橋鏡曲斤衿 寄棋毅記儀義桔逆救級挙享僑境況響極欣襟 朷 岐棄気貴妓蟻橘丘朽糾渠京兇峡狂饗玉欽謹 Ë ź 023 070 Ж Р С С \subset Б К В Л E U А Й Ĥ 173 024 Λ \vee A 071 Μ **荏泳液円演**遠 $\neg \Rightarrow$ ⇔ Э 餌洩疫園炎鉛】 営盈駅奄煙塩 嬰穎悦宴燕 **叡瑛益堰焔鴛** 影頴謁延猿 映英越怨縁 畿軌戯 072 У Э ФЮ Х ШШ Ъ 174 輝 飢 Ц Ч 紀 徽亀疑吃脚弓窮拒魚供叫 起宜誼詰久求給虚 騎 曳衛閱掩艷 栄詠榎援苑 永鋭厭沿薗 は技掬杵 026 027 7,#(073 Ь 175 176 鬼 δ « 擬菊黍及灸去鋸 ∠ ⊥ ∽ ∞ 074 犠吉客宮究巨禦 議砧仇汲旧 а Å ‰ lŏ28 b ⊅ † # 075 Й 177 刧 б В З С Ы И ж 029 i 78 076 н 休泣牛距 Κ Л 0 П р V Μ Т фЮ ぉ 077 ч ш ъ 球 Х Ш ш Ь Э 03. 2 З 078 178 179 汚 店 0 Я 032 4 5 6 7 A K 8 B L 9 C 往横沖卸 央押黄乙 奥旺岡俺 応欧荻恩 180 181 182 王屋穏 033 D N X 080 081 翁憶音 E O Y F G Q L 殴億 襖臆 **鳫**桶 P 1 034 M Ĺ 00週 Н J F 共 競強狭驚桐琴近 凶怯胸凝僅禽 協恐脅尭 221 222 223 223 224 225 226 + 温 035 R Ś Ť Ü V Ŵ Ż 082 菻 卿挟 _ 036 b Ċ 083 а d か 教郷局錦 矯 興暁 е ി 037 k 1 m n 130 182 183 184 化嫁回! **蕎**業 ×□#≣®® 下夏火華俄餓怪 g h 国マンテレージ 18 19 VII X た 究 料禁金 、勤筋銀 038 išī 均 р r S ١, w Х V (1) 20 X 1 I 佳果花迦芽塊改海凱蓋蛎 加架苛過蛾壊 可歌茄霞賀廻 嘉河荷蚊雅快 仮家 何寡禾課牙会懐魁 伽科稼嘩画解戒晦階涯垣 価暇箇貨臥回拐械貝碍柿 039 132 133 婜 z 巾 040 185 186 菌 吟 えげ 菓 うぐず えけ **禍蝦我** あ あがざだな いき 5 うく おこそでばほ i34 77 041 か 峨 お ぎじぢぬぶ - n C 職 個 o 042 ₫ ぜて 135 87 雈 226 227 228 229 ごぞと さたど しちにふみらん せづはべ km mg m うねぷ No.KK. 代明 山∠ 043 うの 136 耻症 田翻 188 介 悔 矩空 苦偶 駆遇 駈 句具櫛掘 狗虞屑沓鍬 玖喰屈靴 躯寓 **凶悪釧窟** ば (株) Σ 137 ⊕ Ē 189 駒串 044⊕ ≒ (有) 恢 ΰ ~ 138 190 045 び 絵害骸各 \sim Δ 界外該劃 $\sqrt{}$ 灰劾街鈎 皆咳鎧嚇 1 む もれ 139 Π 191 192 193 高開概蛙 /崖浬廓 230 231 232 046 Ē Ē ŧ める 蟹慨馨 やろ κ¢ U 轡君 窪董 粂 熊訓 限群 よ Đ Ď あ 唖 編 蘂 軍 047 Þ よ わ 栗 動 048 ゐ 2 を 160 亜 娃 痐 哀 愛 挨 姶 译 郡

18-18

Appendix

18

First Three		Last Digit		First Three		Last Digit		First Three	Last Digit	First Three	Last Digit	
Digits	0 1 2	2345	6789	Digits	0 1 2	3 4 5	6789	Digits 0 1 2 3				6789
232 233	【 計 基 型 美	と 祁 係 傾 引 と 形 径 恵 」	刑 兄 啓 圭 慶 慧 孫 経 避 詣 警 軽 頚	270 271 272	察捌	撮 擦 札 第 擬 皿 晒 所 擬 転 暫 暫 発	殺薩雑 皐 三傘参山 産算纂蚕 残	311 蝕辱尻作 312心慎振第 313 疹真神雾 314 身辛進金 315 尋甚尽腎	所晋森榛浸深。	图 347 台大 月 348 宅 托 ③ 349 諾 茸		竜 瀧 卓 啄 豕 託 鐸 濁
234 235 236	封型敬野芸欠倦憲 北京の優勝 北京の 北京の	B2号を回た書系重乗 「「「「「」」 「「」」 「「」」 「「」」 「「」」 「」 「」」 「」 「	撃 激 隙 桁	273		1	仕仔伺	। वि	済訊迅陣靭	E 350 叩 351 棚谷 352 担探	旧 達 辰 奪 月	脱 巽 竪 辿 丹 単 嘆 坦 切 壇 弾 断
238 239	俟 倦 優 建 憲 縣	央 潔 穴 結」 建 兼 券 剣 「 孫 拳 捲		1275 276	施旨枝	史師 一 一 二 二 二 二 二 二 二 二 二 二 二 二 二	七始支祉請願詞事 (1) (1) (1) (1) (1) (1) (1) (1)	315 316 須 酢 図 属 317 炊 睡 粋 著		k 354 暖 檀 創 【	段 男 談 5 】	
240 241 242	肩見調	書兼券剣 業業業業 業業 業業 業 業 業 、 、 、 、 、 、 、 、 、 、 、 、 、	研硯編鼎 鍵険顕 動	279	施紙諮字 耳軸	持時		320 澄摺 🤋	翠衰遂醉錐錘 影数枢趨雛据 雀裾	 354 355 智 池 356 畜 竹 357 中 仲 	痴稚置致的	知 地 弛 恥 朔 遅 馳 築 窒 茶 嫡 着
243	[2	- 1	個古呼属	280 281 282	次 滋 耳 軸 宗 疾	治爾 璽 第 辞 次 鹿 第 七 昭	■ 磁示而 □ </td <td> 320 せ 321 勢姓征[[</td> <td>】 世瀬畝是凄 成政整星晴想</td> <td>川358 註 酎</td> <td>周 喋 寵</td> <td>端壁茶 嫡 着 室 注 虫 衷 偖 苧 著 貯</td>	320 せ 321 勢姓征[[】 世瀬畝是凄 成政整星晴想	川358 註 酎	周 喋 寵	端壁茶 嫡 着 室 注 虫 衷 偖 苧 著 貯
244 245 246 247		三庫弧戸市の市の市でである。	個故誇呉語体 四湖 新聞 西古 時間 西古 時間 西古 時間 一個	283 284 285 286	屡 蕊 縞	時七質舎謝爵守首収州臭酬汁祝春淳初諸 必叱実写車酌手儒周修舟集渋縮瞬準所諸 此執部射遮釈朱受 愁蒐醜獣粛竣潤暑助	式失篠倽蛇錫殊呪 識嫉偲赦邪若狩寿 一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一	321 9勢栖西航籍接端局 322 324 325 324 325 326 4 5 327 328 329 329 329 330 331 322 329 331 322 329 331 332 332 332 332	世球 就 世 滅 政 整 星 聖 静 析 研 部 節 司 二 、 、 歌 節 宣 言 方 石 打 吉 斎 石 初 吉 寺 石 初 1 三 聖 静 析 析 研 師 読 恵 来 石 初 吉 古 晴 奇 石 初 5 二 歌 節 前 書 書 新 析 切 師 読 恵 寺 元 5 二 二 3 二 5 5 二 二 5 二 5 二 二 二 二 二 二 二 二 二 二 二 二 二	妻 359 丁 兆 嬰 360 帖 朝 362 調 諜 363 直 朕	帳 庁 弔 張 F 潮 跳 銚 長] 沈 珍 賃 鎮]	影 徴 懲 挑 聴 脹 腸 蝶 頂 鳥 勅 捗 陳
248 249 250	回知の高いので、こので、こので、こので、こので、こので、こので、こので、こので、こので、こ	アロロ			社尺惹腫綬者灼取酒囚	野手朱 一 一 一 一 一 一 一 一 一 一 一 一 一	蛇邪借 勺弱 湯 若 寂 積 務 狩 寿 授 樹	326 接 摂 折 割 327 蝉 仙 先 刊 328 扇 擢 栓 椎	昔戚赤窈ら」 「「「」」 「「」」 「」」 「」」 「」」 「」」 「」」 「」」 「」	5 戊 363	י כ	… 達墜椎
251 252	乞効 巧拘江 ジョック		孔孝恒 宏 工 「 「 「 「 「 「 「 「 「 「 「 「 「	1290 291	一般 一般 重成 一般 重要	(州修愁) (州) (州) (州) (州) (州) (州) (州) (州) (州) (州	拾 洲 秀 秋 衆 襲 讐 蹴 什 住 充 十	328 扇 撰 栓 梢 329 煽 旋 穿 育 330 繊 羨 朋 331 選 遷 銭 鈗	方	煎 364 槌 追 365 漬 柘 桟 366 嬬 紬	鎚痛通塚 注蔦綴鍔ね 爪吊釣鶴 て →	栂 掴 槻 伯 春 潰 坪 壷
254 255	紅紘紀	交綱耕考ī 丁衡講貢!	皇 硬 肱郊 鴻 融 麗	293	1、一次宿ど、一次宿ど、一次宿じ、一次宿じ、1、1、1、1、1、1、1、1、1、1、1、1、1、1、1、1、1、1、1	計 渋 獣 着 祝 縮 粛	衆什縦塾舜盾署叙シティングを開始の	332 全禅繕腸	善 糎) 366 367 剃 貞 368 悌 抵 369 艇 訂	2	亭低停偵 底庭廷弟 碇禎程締
257 258 259	号合壩	1 泊 込		296 297 298	醇 順 処 署 書 薯	計: 計: 計: 計: 一: 一: 一: 一: 一: 一: 一: 一: 一: 一: 一: 一: 一:	縦塾舜 縦	332 333 曽 楚 狙 函 334 組 蘇 訴 阿 335 倉 喪 壮 孝	充 疎 礎 祖 租 粗 罰 且 遡 鼠 僧 創 双 罰	夏 370 邸 見 371 的 笛	諦 蹄 逓 鄭 釘 鼎 泥 ź	商 擢 敵 滴 敵 撤 轍 迭
	昏昆相して	夏梱 混痕	墾 婚 恨 ^懇 紺 艮 魂	299 300 301	勝匠	傷 償 骨 召 哨 i 将 小 少 i 招 掌 捷	商 唱 嘗 奨 尚 庄 床 廠 昇 昌 昭 晶	335 倉喪壮秀 336 搜掃挿招 337 漕荘葬倉 338 草荘葬倉 339 霜臟蔵購 340 臓蔵購	奏乘早曹 樂早 書 総 編 書 総 譜 音 僧 臣 総 に 唐 三 次 れ 居 曹 巣 総 宗 二 居 曹 巣 総 宗 二 居 曹 巣 総 宗 二 王 曹 総 総 宗 二 書 二 総 二 の 二 の 二 の 二 の 二 の 二 の 二 の の 二 の		適 病 話 に 、 の に 、 、 、 、 、 、 、 、 、 、 、 、 、 、 、 、	禿 纏 甜 貼 田 電
261 262 263	佐叉鸣		些 査 沙 瑳 砂 債 催 再 朂 採 栽 歳 済	304		樵沼消	渉 湘 焼 焦 称 章 笑 粧	341 捉 束 測 5	曽 憎 曽 造 促 側 則 即 タ 已 速 俗 属 賊 族 績 前 存 孫 尊 損 村 ラ	373 374 堵塗 売375 賭途 376 怒倒	妬 屠 徒 斗 相都 鍍 砥 砺	鬼 吐 た 渡 登 菟 ろ 度 土 奴
264 265 266	詐哉災載堺 	《登宴》中 一位	斎 細 菜 裁 財 冴 坂 阪	2 306 2 307	松照紹詳丈情覺	冗剰城 は	之。 記 記 算 で り て 記 に 記 に 記 に 記 に 記 に 記 に 記 に 記 に 記 に 記	した	1	377 宕島	党、東方方、京方方、京方方、京方方、京方方、京方方、京方方、京方方、京方方、京方方	客 塔 塘 大田 「 「 「 「 「 「 「 「 」 「 」 「 」 「 」 「 」 「 」
268	堺 榊 着 咋 搾 匙 鮭 笹 是	乍朔 柵 窄 釒	碕 鷺 作 削 策 索 錯 桜	308 309 310	情擾条 醸錠嘱 拭植	杖 浄 状 埴 飾 殖 燭 織 I	宣 穣 烝 譲 職 <mark>色</mark> 触 食	は た 343 他多太ジ 344 柁舵橋路 345 岱蒂待意 346 腿苔袋貨	太 詑 唾 堕 妥 惰 它 駄 騨 体 堆 対 ī 意 態 戴 替 泰 滞 刖 資 退 逮 隊 黛 鯛 (村 379 答 筒 台 380 董 代 381 鐙 陶	蕩藤 討 謄 ፣	豆 踏 逃 透 動 同 堂 導

Appendix
18

First Three						Digit					First Three					ast						First Three					.ast [First Thre	e				Last I					
Digits	0	1	2	3	4	5	6	7	8	9	Digits	0	1	2	3	4	5	6	7	-	9	Digits	0	1	2	-		5	-	_	8 9	J	0	1		3	4	5			-	9
382 383 384	憧鴇独	撞匿読	洞得栃	瞳徳橡	童涜凸屯	胴特突惇	萄督椴敦	道禿届沌	銅篤鳶豚	峠毒苫遁	411 412 413	肘百評	弼謬豹鰭瓶	必俵廟品	畢彪描彬	筆標病斌	逼氷秒浜	桧漂苗瀕	姫瓢錨貧	媛票鋲窨	紐表蒜頻	442 442	夢し	無	牟 め	矛	霧】	鵡	椋	胥梦	。 東	468 469 470	齢漣	暦煉蓮	歴簾連ろ	列練舗	劣聯	烈	裂	廉	恋	憐
385 386	独寅頓	匿読酉呑	得栃瀞曇な	徳橡噸鈍	電	停	敦	沌	厭	」 遁	412 413 414 415	蛭敏	5鰭瓶		彬	斌	浜	瀕	貧	寳	频	442 443 444	名免	命棉		盟緬	迷面	銘 麺	鳴	侄	」 「 「 「 」 「 」	47C				20/K	】 呈	魯	檲	炉	賂	路漏
386 387	【 謎	灘難	-	鍋	】 奈楢	那馴	内縄	乍畷	凪南	薙楠	415 416	「府	怖	ふ不扶	付敷	」埠斧	夫普	婦浮阜楓	富父	冨符	布腐	444 445	【孟	毛	も猛	盲餅	】 網	耗戻	摸蒙籾	莫諸賞	支 素 黙 問 問	471 472 473	露牢肋	労狼録	篭論	廊老	呂弄聾	魯朗蝋	櫓楼郎	炉榔六	賂浪麓	漏禄
388 388	謎軟【		捺汝に	_]	弐	迩	匂	賑	肉	417 418 419	膚武伏	芙舞副	譜葡復	付敷負蕪幅複	賦部照	天普赴封	阜楓	<u> </u> 父附風	I符侮葺	腐撫蕗	445 446 447	孟目紋「	毛杢門	猛勿匁や	餅	網尤	戻	籾	蕢	問 問	473			わ	倭亘	】和鰐	話詫	歪藁	賄蕨	脇椀	惑湾
389 390	虹	廿 如	日尿ぬ	乳韮	入	妊		認	MIX	M	420 421 422	物粉	副福鮒糞	譜葡復腹分紛	幅複吻雰	埠斧賦部服覆噴文	淵墳聞	弗憤	払 扮	沸 焚	仏奮	447 448 449	▶ 矢鑓	厄		也約	冶薬	夜 訳	爺] 躍	耶 清	野 劲 柳 薮	474 475 476 476	枠碗	鷲腕	121		岸与	рЪ	æ	197X	178	/5
390	ľ		ね		1				濡		422 423	1		~		1		丙	併	兵	塀	449 450	ľ		ゆ愈	油	】 癒					478 479										
390 391 392	袮粘	寧	葱	猫	熱	年	念	捻	撚	禰燃	424	幣僻片	平壁篇	弊癖編	柄碧辺	並別返	蔽瞥遍	丙閉蔑便	併陛箆勉	兵米偏娩	塀頁変弁	450 451 452	悠祐	偷諭憂裕		油唯有遊	癒佑柚邑	優湧郵	勇涌雄	友猶融	宥 幽	482	乖亟		丐亂亢	丕亅亰	个豫毫任	丱亊亶	丶 舒 从	仍	仄	乂亞仆
392 393	【 脳	乃膿	の廼農は	之覗	】 埜 蜜	嚢	悩	濃	納	能	426 426	鞭【	保	ほ 舗	舖	】 庯	捕			補	餔	452 453	【 余	뉵	よ誉	趣	】 袹	傏	幼	厌氧	予庫	483	伯	佗	仞佇來	仭佶侖	仟侈儘	价侏俔	伉侘俟	佚佻俎	估佩俘倪	佛佰俛
393 394		浱]	巴麗	把	播	覇俳	杷感	426 427 428 429	穂俸抱	保募包捧法褒傍某防睦翻	は舗墓呆放泡訪剖棒	鋪慕報方烹豐坊冒頬釦盆	圃戊奉朋砲邦妨紡北勃	捕暮宝	歩母峰	甫簿峯	補菩崩	輔倣庖	453 454 455 456	余揚窯養	与揺羊慾	蒼擁耀抑ら	輿曜葉欲	預楊蓉沃	偏様要浴	幼洋謡翌	い 容 踊 翼	容 庸 用 陽 定	485 486 487 488	' 倅	佯俚伜假傚	來俐俶會	常保倡学	侈儘俥倩偐傲僂儁儻兮 [侏俔倚倬偈	俟倨俾做	俎倔俯偖	倪們偬	佛佰俛倥倆偸
395 396	波拝倍陪柏爆	排培	琶敗媒	10杯梅	婆盃楳矧粕	罵牌煤萩舶	把芭背狽伯薄	播馬肺買剥迫	影輩売博曝	廃配賠	430 431	12 蜂亡	注法褒	心泡訪	/え 豊い	記砲邦	縫鋒	胞飽	芳鳳	萌鵬		456	I		-		1				~ 竊落醉	489		僉	俶會傅僊	區傳	影傲僂		1071			
397 398 399	柏爆	培這泊縛函畠	媒蝿白莫箱.1	破杯梅秤箔駁硲鉢		秋舶	旧薄	剥迫		i 賠 拍 漠	432 433 434	望鉾	傍某防	剖棒 吠	功冒頬	奶紡北	縫鋒帽肪僕没	ふ膨ト	忙謀墨堀	房貌撲幌	蓬乏暴貿朴奔	457 458	螺乱【	裸卵	来嵐り	莱欄	頼濫】	雷藍	洛]	格覧	各	492	僅備兢	價儺竸冑决	僵儷兩	厥儼兪	儁 儀 兮	僖儂儿冀冤况	兀	傍儕兒囘冢凅	儒兌册寫凉	啰 免冉
400 401 402	畑抜	函畠符	1	硲鉢鳩	麦箸溌噺搬	肇発塙	筈醗蛤	櫨髪隼氾	幡伐伴	肌罰判	435 436	牧本	睦翻	:吠穆凡ま	釦盆	勃	没	殆	堀	幌	奔	458 459 460	履	李痢掠	梨事	理裡	璃里流	翦维	陡;		利 吏 玄 立	494 495 496	問シュ	冑决處	僵儷兩冓冱凩	冕冲恁	「冰鳳	冤况	冦冽凾	家個工	寫凉刋	僣儚兔冉冪凛刔剌劔
403 404	(抜半犯)	筏反班台	閥叛畔挽	鳩帆繁晩	· 一般 一般 一般 一般	肇発塙斑藩盤	筈醗蛤板販磐	+氾範蕃	=汎釆蛮	i判版煩	436 437	昧	枚		嗐	■摩槙又満	磨幕抹	魔膜末	麻枕沫	埋鮪迄	妹柾侭	461 462 463	葎隆玉	「掠竜」	梨裏略龍寮諒淋	理裡劉侶料遼燐	三流慮辺	離溜旅涼	陸琉虜猟領輪	津留了寮力隣	率流亮瞭禄齸立粒傍稜偏麟	497	刎	處刧剔剱	《刪剪劈劬	加制	冰凰刳剩辨	山刹剳	。凾剏剿	又剄剽	剋劍	刻刻
405	領【		ሪ	晄	1					匪	438 439 440	昧 鱒 繭	权桝麿漫	臺	哩俣慢	メ 満	木	木	沐	<u>ک</u>	15	463 464 465	隆両糧厘			科遼燐	慮梁量琳	旅涼陵臨	猟 ? 領輪	貸	原緑鱗 麟	\$501	勣	辧勦	労劬飭	削劭勠	辨劼勳	券勵	勁勸	勍	勗匆匱	勞匈
406 407 408	卑比誹	否泌費	妃疲避	庇皮非眉	彼碑飛美匹	悲秘樋	扉緋簸	批罷備	披肥尾	匪斐被微	440 441	【 蜜	湊	み 蓑	味稔	】未脈	魅妙	巳粍	箕民	岬眠	密	466	【瑠	塁	る涙れ	累	】 類					502 503	甸	匍圓夘	富卆卻	亰仭佶侖俤倡偕傴傳儉儼兪冕冲凭刮剴劑劭勠匏卅卷簒吽	Ł	匚 卉 彫	匣卍厠曼吭	凖	置	· 回□ 厮
409 410	龀	費毘鼻	疲避琵柊	眉稗	美		髭		膝	菱	441	Ī		蓑 む	,001	Ĩ		, 0		-1-1	務	466 467	• 嶺		玲	礼	苓	令鈴	伶	列零	令鼠	504 505 506	后厰叭	ム い	参吁	簒吽	, 雙呀	卉厖叟听	蔓吭	燮吼	ΠŢ	<u></u> 切 呐

Appendix
18

-

First Three	Last Digit		First Three		st Digit		First Three		ast Digit	First Three	Last Digit
Digits O 1	23456		Digits O		156	789	Digits C		456789		3456789
507 吩 吝 508 咒 呻 509 咥 咬	呎 咏 呵 咎 『 咀 呶 咄 咐 『	呟 呱 呷 呰 包 哇 咢 咸	550 551 廬	廖 廣 斯 原 廱 廰 廰 3	討塵 廢	廡 屛 屛 葬 彁 子 彁 子 引 行	593 村 594 朸	E 杰 枩 杼 柞 川 柯 枴 柬 柞 氏 柮 枹 柎 柞	沙 ⑰ 劤 伊 / / / // 枳 柩 枸 柤 柞 柝	636 炮烟休	烝 烙 焉 烽 焜 焙 燦 煢 煌 煖 煬 熏 燻 熄
509 座 咬	哄 哈 咨	3 FI - 7 190	552 彛	廱 廳 廰 颈 弋 弑 弖 氰	§ 弭 弸	「 弃 彁 ず 弾 派 寿 彁 ず 行 (泰 彌 彷)	595 相	加柯 枴 柬 札 氐 柮 枹 柎 札	柆 柧 檜 栞 框 栩	637 熙熙煦	閒喜熾燒燉燔燈
510 咫	哂 咤 咾 咼 阝	う 哥 哦 唏 於 啀 啣 啌	551 廬 552 舜 553 彎 554 徃	顧 廳 廳 ፼ ፼ 配 和 弓 和 弓 和 弓 和 一 和 一 和 一 和 一 和 一 和 一 和 一	 一 子 明 二 子 開 三 何 一 子 開 三 何 一 四 明 美 徑 何 何 一 四 三 二 四 三 二 二 一 四 三 二 徑 () 一 () () ()) () ()) ()) ()) ()) () (彭彳彷	596 祭	€ 桍 栲 桎 柞 € 梏 梭 梔 亻	流 栫 桙 档 桷 桿 係 梛 梃 檮 梹 桴	638 熕 熨 熬 639 燠 燈 燧 640 _ 燹 燿	達 燼 業 爐 爛 爨 爭 爬 爰
511 唔 哽 512 售 啜	哮哭哺哢咖	於 <u></u> 啀 啣 啌 戻 啝 喙 喀	554 往 555 徠	徂 彿 徊 征 徨 徭 徼 忄	 建理彙徑忻 が 個 作	從徙徘	597 598 対	き 栝 梭 梔 亻	枳 柩 枸 柤 柞 柄 柆 柧 檜 栞 框 翉 椨 梃 檮 栴 樨 梍 桾 椁 棊 椈 棘	640 燹燿) 641 爲爻爼	榮 爐 爛 爨 爭 爬 爰 爿 牀 牆 牋 牘 牴 牾
512 售 啜 513 咯 喊	喟啻啾喘唧	即單啼喃			古恂怩	[[] 10 11 11 11 11 11 11 11 11 11 11 11 11	598 599 相	杜松 松 椏 相 昭 樹 棡 椌 相	旧 17日 17子 1余 17月 184 棍	641 為 爻 爼 642 犂 犁 犇 643 狆 狄 狎	業 爐 爛 爨 爭 爬 爰 爿 牀 牆 牋 牘 牴 牾 塙 挙 犢 犧 犹 犲 狂
514 喩 喇	喨嗚嗅嗟		557 伯	佛 悴 快 忖	寸 忻 忤 村 怐 志 志 恤 恂	弃 彁彭從忸怎恪恬 葬彈彳徙忱怱恷恫 彝彌彷徘忝怛恟恙	600	督棧棕	椶椒 椄 棗 棣 枳	641 為 爻 爼 642 犂 犁 犇 643 狆 狄 狎 644 猗 猊 猜	佛 狢 狼 狡 狹 狷 倏 倡 猝 猴 猯 猩 猥 狷
515 嘔 嗷	嘖 嗾 嗽 嘛 嗨	夏 嗜 嗤 嗔 連 噎 噐 營 肅 噬 噪 嚆	557 怕 558 協 559 悁	忿 怡 恠 忄 忡 怏 忄 恍 恣 忄	寺恤恂	恬恫恙	601 梢	せんちょう いっかい しょうしん しんしょう しんしょう しんしょう しんしん しんしん しんしん	锍栫 桙 桰 椐 栫 栫 栫 栫 栫 栫 栫 栫 栫 栫 栫 栫 栫 栫 栫 栫 栫 栫	644 猗 猊 猜	昌猝猴猫猩猥猾
516 嘴嘶	嘲嘸噫噤嚊	夏嗜嗤嗔 雪 噎 嗤 喘 聲 弓 疇 曝 嚴 麗 慶 麗 麗		悍 惧 悃 t 悄 悛 悖 t	^東 免悒悧	悋惡悸	601 档 602 棺 603 梯	共長花園 章皆林豈匪寥 榜梏梠勞棔棠楜椰槁樮槿 栲梭梺棡棧棯楸橇傅榑權 桎梔椏椌棕椨楫楞榾榠槹	諩쾾柬嫅嫎縎蠗飬 棢楾榁霚褣槧榡橦 橶椛槊榴傱룒樕 水 蟍 榝 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋	643 狆 狄 狎 644 猗 猊 猜 645 獎 獏 默 646 獺 珈 玳	薘朱 「高赤昌 「 「 「 「 「 に 「 、 「 、 、 、 、 、 、 、 、 、 、 、
518 嚼 匾	囃囀囈囎	■ ■ ■ ■ ■ 日 四		悄 悛 悖 † 惓 悴 忰 †	免悒 悧 棲 惆 悵	悋惘愡愿慙 툶 僧 し 慣 物 に 間 に 「 物 に を 思 に 間 に し に 「 物 で 、 を 、 を 、 を 、 を 、 を ろ を の 、 を ろ を の 、 を ろ を の 、 の を ろ の を の ろ の ろ の ろ ろ ろ ろ ろ ろ ろ ろ ろ ろ	604 榿	豈槁槓榾	(陳差榕) 一樣 之子 一樣 之子 一樣 之子 一樣 一個 一樣 一個 一樣 一個 一樣 一個 一樣 一個 一樣 一個 一個 一樣 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個	647 琅 瑯 琥	你 玻 珀 珥 珮 珞 理 语 琲 琺 瑕 琿 瑟 瑙
519 囹 圀	面画画	키 지지 (ㅋㅋ) 수가	561 惠 562 愆 563 愍	惶惷愀惶	と 唐 信 信 懐 に 懐	惚惻惱	605 根 606 樛 607 梢 608 楣	匪 樮 榑 榠 柞 廖 槿 權 槹 柞	搓 <mark>寨槊槝</mark> 榻槃 榜椞榓檍櫊 櫢 杠 枪 木 橋 橋 橋 橋 橋 橋 橋 橋 橋 橋 総 橋 橋 総 橋 橋 総 橋 橋 総 橋 橋 総 橋 橋 橋 橋 総 橋	648 瑁 瑜 瑩 649 璧 瓊 瓏 650 瓠 瓣 】	唐 琲 琺 瑕 琿 瑟 聡 塊 瑣 瑪 瑶 瑾 璋 璞 嬰 珱 む 瓩 瓮 瓲 瓰 瓱 瓸
520 圈 521 圷 圸	國	コ 乖 岱 披	564 恰	愎 慇 愾 荒 傅 慂 慄 t 情 慥 慱 t	※ 陇 慊 堅 慷 慘	愿慙 痡憮罹懾 戅忩慭慺懦悡	606 核 607 様	◎ 槿 權 槹 椎 単 榑 壄 榕 柞	嘝 槧 樅 榱 樞 棚 廖 桟 樓 勈 椙 樟	(649) 璧 瓊 瓏 3 650 1 瓠 瓣)	愛 玹 辻 瓩 瓮 瓲 瓰 瓱 邷
		目 埀 垈 坡	565 慴	博 慂 慄	堅 康 標	慵憙憖	608 権	巣槫 樊 樒 柞 晨 橸 橇 橢 柞		651 瓷 甄 甃 652 甦 甬 甼 653 畩 畤 畧	迴 甌 甎 甍 甕 甓 嘗 当 畍 畊 畉 畛 畆 畚
523 埔 埒	将堊埖埣圳	明堙 堝 塲	566 想	憬 憔 憚 ᢔ 懷 懈 懃 !	憲 憫 景 憺 懋	憮懌懊	609 橋	意 檠 檄 檢 柞 檗 蘗 檻 柞		651 瓷 甄 甃 652 甦 甬 甼 653 畩 畤 畧	記述 通 動 転 、 売 発 、 完 、 完 、 完 、 完 、 完 、 完 、 完 、 完 、 完 、 完 、 売 、 売 、 読 … 、 読 … … … … … … … … … … … … …
524 堡 塢 525 墟 墫	響 2 時 4 響 2 時 4 響 2 時 4 響 2 時 4 響 2 時 4 9 時 4 1 日 1	朋 堙 堝 塲 置 塹 墅 墹 置 壅 壓 壑	567 應 568 懣 569 戉	懷懈懃性	慿 憺 懋 曜 密 懽 懼	儒権電燈	610 611 楣	ໂ 檠 檄 檢 椎 檗 蘗 檻 椎 櫑 櫟 檪 櫩 柞	匱 櫂 檸 檳 檬 檹 攊 櫻 欅 蘖 櫺 欒	651 瓷 甄 甃 1 652 甦 甬 甼 653 畩 畤 畧 654 疊 疊 뭘 뭘	畫 畭 畸 當 疆 疇 畴 庁 疚 疝 疥 疣 痂 疳
524 堡塘 525 堡墟墙 526 527 528 528 529 529 529 529 529 529 529 529	垓塔塋墺壘壽夸奥妁姙 垠堊塰壞壥夂夾獎妝姚 垳埖毀墙壜夂竒奩佞娥 を崩りり回すえる。 女多	η 堙 塹 壅 型 型 型 型 型 型 型 型 型 型 型 型 型 型 型 型 型 型	569 戊	成成整整			612 欄	『鬱 欟 欸 ネ	櫃 櫂 檸 檳 檬 檬 櫪 櫻 欅 蘖 櫺 欒 歓 盜 欹 鴥 歇 歃 歛 歟 歡 歸 歹 残	654 疊 疉 疂 3 655 痃 疵 疽 3 656 痣 痞 痾 3	直疼疱痍痊痒瘫 癫痫 疼癫痛 痛
527 壻 壺	· 墨索女 章 奕 奇 奕 章	■ 壯 壺 壹 豊 梦 夥 夬 聲 奎 奚 奘	570	憂戡截劉	敗 戰 戲 囚 扼 抂	戳扁扎	613 兼	欠歐 歙 歔 ゑ	欷歔殘喪 藌 數 驗 弱 驗 弱 慶 眠 石 三 決 浩 三 派 浩 慶 梁 殿 昭 一 。 梁 歌 齋 慶 殿 昭 一 。 梁 歌 子 慶 昭 、 一 二 、 注 、 二 、 二 、 二 、 二 、 、 、 、 、 、 、 、 、	656 痣 痞 痾	奏 痼 瘁 痰 痺 痲 痳
528 天 卒 529 奢 奠	今 火 苛 尖 9 奥 獎 奩	契 笑 奎 奖 类	571 扞 572 抓	扣 扛 扠 排 抖 拔 抃 排		快找 抒 抻 拏 拿	614 列 615 殯	夭 殄 殃 殍 纾 觱 殲 殱 殳 月	殘 殕 殞 殤 殪 殫 設 殻 毆 毋 毓 毟	657 瘋瘍 療 約 658 瘰瘻 癇 約	蒕 瘧 瘠 瘡 瘢 瘤 瘴 蕟 癆 癜 癘 凝 癢 癨
528 天 本 529 奢 奠 530 奸	夸 夾 奇 奕 ∮ 今 獎 奩 ⓒ 如 妙 娥 娥 娥 娟 望 夕 婉 娵 娶 婢 雪	北妲姆姨	573 拆	擔 拈 拜 ‡	半拍 拂	拇 抛 拉	616 11	新 新 新 新 新 新 新 新 新 新 新 新 新 新	《殘穀母氣》 發發戰。 一個一個一個一個 一個 一個 一個 一個 一個 一個 一個 一個 一個 一個	659 癩 癪 癧 兆	解 瘤
531 姜妍	妁 妝 佞 侫 ݡ 姚 娥 娥 娟 娜 娜 娜 媚 媚 嫦 婉	と妲 姆 姨 娜 娉 娚 婚 媚 媼 媾	574 挌	拮 拱 挧 扌	消 掛 撃 振 振	游損 持 撃 探 振 制 振 に 一 振 り に 一 振 し に 一 振 し に 一 振 し に 一 振 し に 一 に 一 の に の し に 一 の に の し の し に の の の の の の の の の の の の の	617 粂	悲 毫 毳 毯 『 『 汞 汕 注 〉 引 汨 汳 沒 〉 N 泝 沮 沱 〉	Ξ沂沍沚沁 沭 沐泄泱泓沽泗	660 癲 癶	癸 發 皀 皃 皈 皋 皎
532 婀 婬 533 嫋 嫂	婉娘娶婢雪	を 媚 媼 媾 と 嫖 嫺 嫻	575 捍 576 掉	搜 捏 掖 排 掟 掵 捫 拮	奇掀揯	捜 掌 海 塔 世	618 619 沤	计出波没入	沐泄決泓沽泗	661 皖皓皙 662 盍盖盒	豈 皰 皴 皸 皹 皺 盂 盞 盡 盥 盧 盪 蘯 盻
534 嬌 嬋	婉 娵 娶 婢 勢 媽 嫣 孎 嫘 嫁 娜 愛 子 孚 孫	贁 嫖 嫺 嫻 鼻 嬾 孃 孅	576 掉 577 揉	[症 掵 捫 拈 插 揶 揄 扌	♪ 「 「 「 】 「 】 「 】 「 】 「 】 「 】 「 】 「 】 「	拆 捶 揀 掛 響 探 搦 攪 勝 勝 援 勝 攪	620	北 電 義 油 沢 泊 浜 泊 沢 沢 沢 沢 沢 沢 沢 沢 沢 沢 沢 沢 沢 沢 沢 沢	沾 泙 泪 洟 衍 洶 洫	662 盍 盖 盒	蓋 盡 盥 盧 盪 蘯 跨 眩 眤 眞 眥 眦 眛 眷
535 孀 子	妁姙婉媽嬖孕儒 ケ 城 城	亥孰 孳 孵	578 攝	插 揶 揄 打 搗 搨 搏 打 撥 撩 撈 打		擾 攪 撕		合洸 洙 洵 氵	泙 泪 洟 衍 洶 洫 洳 洒 冽 浣 涓 浤 弟 濤 涅 淹 渕 渊	664 眸 睇 睚	倪 睫 詰 睥 睿 睾 睹
531 姜妍 532 婀媚 533 娇媚 534 孀 535 孀 536 537 定 第	孺亡官愿	亥孰 孳 孵 夏寃 寢 寢 夏 寫 寰 寶 四 士 町	579 撓 580	撥 撩 撈 掛 據 擒 擅 扌	或 翌 七志 居辛	100 100 653	622 決 623 沤	愛 灰 浙 進 2	第 濤 涅 淹 渕 渊 ※ ※ ※ ※ ※ 	665 瞎 瞋 瞑 666 瞽 瞻 矇	堂 瞞 瞰 瞶 曖 瞿 瞼 矍 矗 矚 矜 矣 矮 矼
533 嫋嬌 534 嬌嬌 535 孀 536 學 537 538 寳 丸	媽嬖孕孺寤將 嫣嬲学「實專 「實專對」 「」 「 「 」 「 」 「 」 「 」 「 」 「 」 」 「 」 「	「 薬 熟 窓 寝 寫 に 影 の 定 寛 に の の の の で い の の の の の の の の の の の の の	581舉	「爾」「酒」「酒」」 「酒」「酒」「酒」」 「酒」「酒」「酒」」 「酒」「酒」」 「」「酒」」 「」「酒」」 「」「酒」」 「」」」 「酒」「酒」」 「」」」 「酒」」 「」」」 「一」」 「一	록 撻 擘 擣 擯 攬	擂 擱 擧 擶 擴 擲	624 浙	西海 虚 直 /	着 淬 淞 淌 淨 淒 淕 淪 淮 渭 湮 渮	666 瞽 瞻 矇	齹瀮 霻 霻 監
539 尹 屁	屆屎屓		581 舉 582 擺	攀 擽 攘 扌	青 攅 攤	▲ 響 敷 設 設	621 治 622 液 623 液 624 淋 625 液 626 湃	没渡湟渾	査 湫 渫 湶 湍 渟 滿 渝 游 溂 溪 溘	668 碚 碌 碣	<u>頃</u> 碪 碯 磑 磆 磋 磔
	屏孱屬屮山	し 労 屹 岌 平 岷 峅 岾	583 攵	<u>致</u> 收 攸 田	女 效 敖	敕敍敍	626 涯	■渺 湎 渤 シ	滿 渝 游 溂 溪 溘	669 碾 碼 磅	素 磬 表 733 1m 7辛 78 167 189
541 岑 岔 542 峇 峙 543 崗 嵜 544 嵌 嵒	妛 岫 岻 岶 屾 峩 崍 峺 崑 崖 屾 嵬 嵋 嵋 嵬 嵳 嶋 嶬 癜 嶽 隆 舅	半呧岍岾		敝 敲 數 愈 旃 旆 旁 カ	敗 斃 變 旄 旌 旒	斜痛眼睛。新聞的	627 628 629 湾	合定MITTER # 100000000000000000000000000000000000	泙奾渧蔳淕遀襔朔漑 涀洒濤淬淪湫渝鵍灌 涜淗湦淞淮渫瀇溲滬 澋溂霮濪湑湶溂漝濪 澋濾 瀫 臔 滚 瀧 次 派 之 之 満 、 派 之 二 湾 浩 之 流 派 之 二 浩 浩 之 流 派 之 之 流 、 之 二 浩 浩 之 二 浩 浩 二 浩 浩 二 浩 浩 二 浩 浩 二 浩 浩 二 浩 浩 二 浩 浩 二 浩 二 浩 二 浩 二 浩 二 浩 二 浩 二 浩 二 二 浩 二 二 浩 二 二 二 二 二 浩 二 二 二 二 二 二 浩 二	670 磧磚 671 礫 祀 祠	S 整 磁 部 磁 器 克 登 礇 礒 礑 礙 礬 祗 祟 祚 祕 祓 祺 祿 齋 禪 禮 禳 禹 禺 秉
542 峇 峙 543 崗 嵜	崟崛崑崔峰	爭崚斎崘	586 无	旱杲昊》	記 記 記 路 書	昵 昶 昴	628 629	* 漱 滯 漲 ※	條	672 禊 禝 禧 郊	齋 禪 禮 禳 禹 禺 秉
544 嵌 嵒	峩 峽 峺 峭 톑 崟 崛 崑 崔 幽 嵋 噦 憲 嶐 闄	₩ ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●	587 易 588 晟	旃 旁 カ 肩	こ 晞 書	旛 昵 昭 昭 昭 昭 昭 昭 昭 昭 昭 昭 昭 昭 昭 昭 昭 昭 昭 昭	630	漾漓滷	堯 潺 潸 澁 澀 潯 童 潘 澎 澑 濂 滂	673 社 秧 秬	版 秣 稈 稍 稘 稙 稠 慆 稾 稷 穃 穗 穉 穡
545 嶢 嶝 546 巓 巒	妛 岫 岻 峭 順	递 嶼 巉 巍 巵 帋 帚 帙	588 晟 589 暨	笛 晰 罪 雪 躍 曉 暾 雪 		暄暘暝	631 港 632 渡	漾 漓 滷 注	條 獟 潺 潸 澁 澀 潯 潼 潘 澎 澑 濂 滂 濤 瀉 瀋 濺 瀑 瀁	673 枇 秧 秬 674 稟 禀 稱 675 穢 穩 龝 676 窖 窩 竈	舀 稾 稷 榕 穗 穉 檣 襄 穹 穽 窈 窗 窕 窘
547 帑 帛	巖 巛 巫 已 扂 帶 帷 幄 幃 帏 幣 幇 幵 并 ゞ	乚泙嶌爭搦疑弖負 屶岷峪崚嶇嶼帋幎 嶑帚巁 嶑帚幗	590	曄 瞭 曖 B	^皆 蒙曠 昿	曦囊曰	633 涌	合愛図所與痒息,算參 洗洗注浸潤潮房類漲濾澤澤濱 洵延涸淤渾渤房類漲濾澤澤濱 濱延湖淤渾渤房類漲濾淺澤澤 (1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	獟 <i>漘湭瀶</i> 潯 濸彲澑濂 濸 瀖 瀖 瀖 瀖 瀖 瀖 濡 濡 濡 濡 濡 濡 濡 濡 濡 濡 濡 濡 濡	675 穢 穩 龝 676 窖 窩 竈 677 竊 竍 竏	稻 稾 稷 穃 穗 穉 穡 寰 穹 穽 窈 窗 窕 窘 窰 窶 竅 竄 窿 邃 竇 竕 竓 站 竚 竝 竡 竢
548 幟 幢	幣幇幵并纟	と 麼 广 庠	591 曳	曷 朏 朖 扌	ま 朦 朧	霸术束	634 瀥	〗濾 瀛 瀚 〗	猪 瀝 瀘 瀟 瀰 瀾	677 竊 竍 竏 ウ	稻 稾 稷 穃 穗 穉 穡 寶 穹 穽 窈 窗 窕 窘 窰 竅 跎 竝 竡 莖 竡 筑 笏 笊 笆 笳 笘 竿
549 廁 廂	夏 廐 廏		592 朶	<u> </u>	干杞杠	杙 杣 杤	635 澰	激灑灣炙炸	吵 炯 烱 炬 炸 炳	678 竦竭 竰	<u> </u>

Appendix
18

First Three	Last Digit	Fin	rst Three	Last Di	git	First Three		Last Digit		First Three	Last Digit	
	3 4 5 6		Digits O 1			3 9 Digits			6789	Digits 0 1 2		89
6685 6897 7003 7007 7007 7001 1213 486 7110 7110 7110 7110 7110 7111 7110 7111 7110 721 721 721 721 721 721 721 721 </td <td>衛衛臺资廠同甚し比光妥總段辱專會資工學賞售廣盟辱幷幫氏補卑喝貳商秦公等簑榮籌齋稻稼紆紊紡紀綢溆縉縲繩續缺罎罧羝翅飜耿聳肛胄腋腓膊旙臑臾航箙簑篗監籬粳糒 絅絲綛綯緲縋縺纖纏 罐罸羚翆耆耻聲肓胚 腑膀膵臙舁舸篋篦篶籔籵粲糜 絋絨綺器膡辳襦纈 网霜草刻耄聊酸肚胖 胼膂膾臘春舳</td> <td>连箟篁廣篢撬批杂奠、紮駅桨侖威寥調齊要(平縣褐禽菱冷晶内永)建膠遺葛舅浮盧弨位筥箍篌龍簧籀粐粮鬻(純純総綟縊繈繖緕纔(罔羃羲翔耒聒聹冒胯)腮膕膽臚與艙舮芬苻茨空铳簀簪膝喝粹糯。 袖絣綵館縣矮熊繽織 医霉義勃和明聴比胱 腥膤臀臟舊艘艱苡苹</td> <td>22222222222222222222222222222222222222</td> <td>音 譚 譜 響 譜 響 譜 響 調 部 調 部 一 調 - - - - - - - - - - - - -</td> <td>· 直及調查,1日未未留一致食害患所必多用能。 現見省形式自尊主要、骨合打论、莲菇萎蘢山田柴蛹蝟、螟螳蝗蠶彩袒祈禰襁、欄說紙訪詞誣謔謖譁 讀谿貂貭童膏菊惡皆蚍虬蟛蜒,耆彧蜱蚓量多不喜神靈、樱凯祥詞詐評言謐論、讌豈貉真</td> <td>1777274567789012334567%1巻車舎曵 雄宛木台 2777777777777777777888889012334567 2777777777777777777788888888888888888</td> <td>跟蹂 蹣躊躲軾輛轆辭逅溢 遞邊郛酥醪釟鈕鉋鋩 鍼鏨鐓鑒鑘閔閹關陏跣踵蹇蹕躓躾輊輦鞽辯迹逶遏遨邊鄂酪藤金鈑鉐錏錙鍮鏥鐃鑄鑽閖閾闡陋陜</td> <td>兪箦厥鄭雁辂奏轗ニ西坴屗逐馧郮銷體氻泧釿宛淺惎將潘廣賛閘閭罰臽步惫蓷霎碅靨挂踴蹌亸躔軈輕輻轜迚逑逹遑澆桏酅酲釄釼詌銤鍄鋢鎰鏃鐐鑅鑼閙灛闢陜陦隲襍霑靏勒鞏踤蹐蹼躙軋輒輹轢迥逕迸遒隨邯鄲醋釀叙鉅銓錮錣鎬鏝鐶鑢鑾閠灛阨 陬隴霍霖靈靱鞳</td> <td>赳胺踝 蹙躇躡軣輓轂轤迪逍 這選邵酊醂釉鈞鉤鉚 錵鏴鏈鐵鑪鑿閧趁跋踞 蹤燭躬軼輜輾辜迯逞 逾遽郢酖醢釋釿鉈鋏 錻鎹貗鐡鈩閂閭趙跪踐 蹠躄躰軻輟轌辟遭逖 遖邁郤酘醫釐鈔銕綉 鍜鏖鐚鐺鑰閇閼跂跫踟 踪躋軆軫輛轉辣迴逋 遘激扈酣醯釖鈬鈿銷 鍠鏗鐔鑁鑵閊閭</td> <td>88888888888888888888888888888888888888</td> <td>顡顳餃鍸皢欶騁驃驩體髱됳崓魴鯀鯔緧鰡纑鴦鵆鵃鶚鷏鸐麕豥黯皷齖瓕颪餉餮饌駝騏騾驫髞髷鬚鬯鮓鯊鯡鯺鰰鳧鶑鵈鵑鷤鷂灣麑黏鰴鼕齡颯皧餽饕詥騅驠ົົ馳髟 鬤鬲鮃鮹鯵鰈鏮鳬鴣鵐驁鷘卥麝黐檿鼡齦颱餙饂檤輆驏驛骰髣 鬣鬾鮖鯏鮵鯟鱆鴉鵄 鵲鶵鵗鹽麩黜黹鼾顲</td> <td>預 飄餡饉馥駮騫驗骼髦 鬥魏終鯑鯰鰄鰾鴈鴕 鶉鴿鷦麁麸點黻齊齪 棸 鼲餝饅馺駱蠈驟鹘髯 鬧整飯鯶鰕鱷с鴴 鶇儱鷭薼殌蠫黼蕟騗</td>	衛衛臺资廠同甚し比光妥總段辱專會資工學賞售廣盟辱幷幫氏補卑喝貳商秦公等簑榮籌齋稻稼紆紊紡紀綢溆縉縲繩續缺罎罧羝翅飜耿聳肛胄腋腓膊旙臑臾航箙簑篗監籬粳糒 絅絲綛綯緲縋縺纖纏 罐罸羚翆耆耻聲肓胚 腑膀膵臙舁舸篋篦篶籔籵粲糜 絋絨綺器膡辳襦纈 网霜草刻耄聊酸肚胖 胼膂膾臘春舳	连箟篁廣篢撬批杂奠、紮駅桨侖威寥調齊要(平縣褐禽菱冷晶内永)建膠遺葛舅浮盧弨位筥箍篌龍簧籀粐粮鬻(純純総綟縊繈繖緕纔(罔羃羲翔耒聒聹冒胯)腮膕膽臚與艙舮芬苻茨空铳簀簪膝喝粹糯。 袖絣綵館縣矮熊繽織 医霉義勃和明聴比胱 腥膤臀臟舊艘艱苡苹	22222222222222222222222222222222222222	音 譚 譜 響 譜 響 譜 響 調 部 調 部 一 調 - - - - - - - - - - - - -	· 直及調查,1日未未留一致食害患所必多用能。 現見省形式自尊主要、骨合打论、莲菇萎蘢山田柴蛹蝟、螟螳蝗蠶彩袒祈禰襁、欄說紙訪詞誣謔謖譁 讀谿貂貭童膏菊惡皆蚍虬蟛蜒,耆彧蜱蚓量多不喜神靈、樱凯祥詞詐評言謐論、讌豈貉真	1777274567789012334567%1巻車舎曵 雄宛木台 2777777777777777777888889012334567 2777777777777777777788888888888888888	跟蹂 蹣躊躲軾輛轆辭逅溢 遞邊郛酥醪釟鈕鉋鋩 鍼鏨鐓鑒鑘閔閹關陏跣踵蹇蹕躓躾輊輦鞽辯迹逶遏遨邊鄂酪藤金鈑鉐錏錙鍮鏥鐃鑄鑽閖閾闡陋陜	兪箦厥鄭雁辂奏轗ニ西坴屗逐馧郮銷體氻泧釿宛淺惎將潘廣賛閘閭罰臽步惫蓷霎碅靨挂踴蹌亸躔軈輕輻轜迚逑逹遑澆桏酅酲釄釼詌銤鍄鋢鎰鏃鐐鑅鑼閙灛闢陜陦隲襍霑靏勒鞏踤蹐蹼躙軋輒輹轢迥逕迸遒隨邯鄲醋釀叙鉅銓錮錣鎬鏝鐶鑢鑾閠灛阨 陬隴霍霖靈靱鞳	赳胺踝 蹙躇躡軣輓轂轤迪逍 這選邵酊醂釉鈞鉤鉚 錵鏴鏈鐵鑪鑿閧趁跋踞 蹤燭躬軼輜輾辜迯逞 逾遽郢酖醢釋釿鉈鋏 錻鎹貗鐡鈩閂閭趙跪踐 蹠躄躰軻輟轌辟遭逖 遖邁郤酘醫釐鈔銕綉 鍜鏖鐚鐺鑰閇閼跂跫踟 踪躋軆軫輛轉辣迴逋 遘激扈酣醯釖鈬鈿銷 鍠鏗鐔鑁鑵閊閭	88888888888888888888888888888888888888	顡顳餃鍸皢欶騁驃驩體髱 됳崓 魴鯀鯔緧鰡纑鴦鵆鵃鶚鷏鸐麕豥黯皷齖瓕颪餉餮饌駝騏騾驫髞髷鬚鬯鮓鯊鯡鯺鰰鳧鶑鵈鵑鷤鷂灣麑黏鰴鼕齡颯皧餽饕詥騅驠ົົ馳髟 鬤鬲鮃鮹鯵鰈鏮鳬鴣鵐驁鷘卥麝黐檿鼡齦颱餙饂檤輆驏驛骰髣 鬣鬾鮖鯏鮵鯟鱆鴉鵄 鵲鶵鵗鹽麩黜黹鼾顲	預 飄餡饉馥駮騫驗骼髦 鬥魏終鯑鯰鰄鰾鴈鴕 鶉鴿鷦麁麸點黻齊齪 棸 鼲餝饅馺駱蠈驟鹘髯 鬧整飯鯶鰕鱷с鴴 鶇儱鷭薼殌蠫黼蕟騗

Weather Indicator List

• Indicators and categories are subject to change without prior notice.

Weather	
*	Clear (day)
S	Clear (night)
Q	Cloudy
Ŧ	Rain
8	Snow
4	Thunderstorm
	Precipitation 0%-100%
\square	Later
0	Occasionally

Pollen Level	
Star Star	Low
	Moderate
	High
	Very High

Cherry Blossom		
4	Blossoms Opening	
S.	Near Full Bloom	
*	Peak Bloom	
J.	Past Peak	

Fall Foliage	
*	No Color
*	Moderate Color
*	Peak Color
×	Past Peak

UV Level	
Ŵ	Low
獒	Moderate
휋	High
躨	Very High

Typhoon	
S .	Formed
S	Approaching
5	Severe

Other Information	
æ	Heavy Rain
E.	Strong Winds
4	Notifications

Memory List

Data Folde	er	Up to 3500 items (Up to 100 MB) (One S! Appli corresponds up to 6 MB.)		
• Shared wit	th S! Ap	S! Appli List		
Calendar I	Events	Up to 1000 items		
Phone Boo	ok	Up to 1000 it	tems	
Messaging	Incom	ing Mail	Up to 1000 items	
(SMS and S! Mail		Jnsent	Up to 500 items	
combined)	Drafts	;	Up to 10 items	

Yahoo! Keitai	Saved Pages	[Yahoo! Keitai] Up to 20 items/750KB [PC Site Browser] Up to 20 items/1150KB
	Bookmarks	[Yahoo! Keitai] Up to 100 items [PC Site Browser] Up to 100 items
	URL History	[Yahoo! Keitai] URL Entry: Up to 20 items URL Access: Up to 100 items* [PC Site Browser] URL Entry: Up to 20 items URL Access: Up to 100 items*
	Cache	[Yahoo! Keitai] 750KB [PC Site Browser] 1150KB

* The number of savable items varies depending on URL length.

Specifications

832P

Weight (including battery)		107 g*
Dimensions (closed)		50 x 110 x 10 mm (thinnest part)*
Standby Time	3G	460 hours*
(closed)	GSM	240 hours*
	3G	180 minutes*
Talk Time	Video Call	120 minutes*
	GSM	180 minutes*
TV Reception	Normal Mode	5.5 hours*
Time	ECO Mode	7.1 hours*
Charging Time	AC Charger	100 minutes*
	In-Car Charger	100 minutes*
Maximum	3G	0.25 W
Output	GSM	2.0 W

* Approximate value

- Values above were calculated with battery installed.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- TV-Reception Time is an average measured using earphone/microphone, with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when a S! Appli is active.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	600 mAh
Dimensions	45 x 3.8 x 37 mm*

* Approximate value

• Specifications subject to change without notice.

Index

Numerics
3G2-10

Α
AC Charger 1-13
Access History
PC Site Browser14-5
Yahoo! Keitai14-4
Account Details 1-26, 4-13
Address (Adding/editing/deleting) 13-8
After-Sales Service 18-32
Alarms 12-7
All Reset 11-12
Alternative Image 2-6
Answer Phone
Answering Calls
Video Calls 2-8
Voice Calls 2-5
Attachments
Adding13-8
Deleting 13-8
Opening/saving 13-13
Auto Answer 17-6
Auto Focus Lock 6-10
Auto Save (Camera)6-8
Auto timer 6-6
Auto-sort 13-16

Back Light
Display 17-5
S! Appli 17-17
Video Calls 2-12
Backup
microSD Card
S! Address Back-up 4-10
Bar Code Reader 12-12
Basic Operations
Handsetx
Internet 14-6
Battery1-10
Battery Level 1-9, 1-11
Bookmarks14-8
Books folder 9-3
BookSurfing [®] 7-6
Brightness
Camera 6-3
Display 17-5
Video Calls 17-11
Video Camera6-4
Browser (Initializing)

Cache Memory	14-2
Calculator	12-8
Calendar	12-2
Calendar Events	12-2
Call Barring	2-20
Call Cost	17-8
Call Forwarding	2-17
Call Log	2-13
Call Operations	
Call Rejection	
Calls without Caller ID	11-11
Unknown Callers	11-11
Call Settings	17-8
Call Time	
Call Waiting	2-19
Caller ID	2-3, 2-21
Camera [Section Contents]	6-1
Center Access Code	
Channel Setting	5-4
Character Code (Kuten Code)	
Character Code List	
Input Options	3-5
Charge Limit	
Charge Limit Charging Time	17-8
	17-8 1-10
Charging Time	17-8 1-10 9-20
Charging Time Check microSD	17-8 1-10 9-20 17-4
Charging Time Check microSD Clock Display	17-8 1-10 9-20 17-4 17-8
Charging Time Check microSD Clock Display Closing Clamshell	17-8 1-10 9-20 17-4 17-8 17-3

Continuous Shooting	I
Conversion Candidates	l
Conversion Methods	l
Cookies	l
Deleting 17-15	l
Settings 17-16	l
Copy Protected Files	l
Country/Region Code 2-10	l
Customer Service 18-33	l
Customized Screen 1-20	l
	1

D

Data Folder	9-2
Date & Time Settings	17-7
Deleting	
Calendar events	
Messages	13-21
Phone Book	
S! Appli	15-4
Delivery Report	
Dictionary	12-10
Digital TV [Section Contents]	5-1
Digital TV Settings	
Display	1-8
Display Indicators	
Display Settings	

Download Customized Screen 1-20 Familiar Usability..... 1-20 From web pages..... 14-11 Lifestyle-Appli 16-3 S! Appli...... 15-2 Templates 13-10 Driving Mode...... 1-16, 17-6

Ε

e-Book Viewer	. 7-6
Earpiece Volume	
Video Calls	. 2-7
Voice Calls	. 2-5
Emergency Calls (110, 119, 118)	. 2-4
Emergency Positioning Request	. 2-4
Emission OFF Mode	1-16
Event Indicators	1-16

Familiar Usability1-2	20	Ha
Flash [®] files9-1	9	
Flash(R) folder9-1	9	
Focus Setting6-	.9	
Folder/files	4	Ha
Font Size		He
Call Log 2-1	4	He
Internet 17-1	5	
Messages	4	
Phone Book 4-	7	H
Font Size (Collective Setting) 17-	5	
Function List 18	2	

G

Global Roaming Service	2-9
Graphic Mail	13-5
Group Settings	4-6
GSM	2-10

H

andset	
Menus	. 1-18
Parts & Functions	1-4
Power On/Off	. 1-14
andset Security [Section Contents]	. 11-1
elp (Text Entry)	3-2
old	
Video Calls	. 2-12
Voice Calls	. 2-11
TML messages	. 13-5

IC Card Lock...... 16-5 IC Transmission 10-4 IDD Prefix2-9 Image quality Image size Incoming Call Logs 2-13 Incoming Options (S! Mail)..... 17-14 Information (S! Appli)..... 15-2 Infrared......10-2 Input Character Settings (SMS) 17-14 Internal Display 17-3 International Call From abroad......2-9 From Japan 2-9

International Setting	2-10
Internet [Section Contents]	14-1

K

Key Assignments	
Mode 1 (5-touch)	18-14
Mode 2 (2-touch)	18-15
Mode 3 (NIKO-touch)	18-16
Key Pad Dial Lock	11-7
Key Tone	17-2
Keyguard	11-3
Kuten Code (Character Code)	18-18

Ν

Network Information	1-14
Network S! Appli	15-2

New Messages
Receiving 13-15
Viewing 13-10
Night mode
Camera 6-3
Video Calls 17-11
Video Camera6-4
Normal Mode (Simple Menu) 1-22
Notepad12-9
Notification Light Settings 17-9

0

One-push Open Button	1-6
Open For New	. 17-3
Open-to-Ans. Call	. 17-6
Operator Names	. 2-11
Optional Services	. 2-16
Original Animation	. 9-13
Osaifu-Keitai® [Section Contents]	. 16-1
Other Documents folder	9-3
Outgoing Call Logs	. 2-13

Р

Passwords	1-23
Passwords (Changing)	
Center Access Code	1-23
Phone Password	11-2
Security Code	2-20

PC Site Browser 14-2
Access 14-5
Display Settings17-15
Memory Manager & Settings 17-15
Security Settings 17-16
Personal Data Lock 11-4
Phone Book [Section Contents] 4-1
Phone Password 1-23
Changing 11-2
Photo mode
Still images 6-3
Videos
Pictographs
Pictures (Still Images)
Capturing6-5
Editing
Pictures folder 9-2
PIN/PIN2 1-3
Changing 11-2
PIN Authentication 11-2
PIN Lock & Cancellation (PUK) 11-3
Play Background8-7
Play List 8-10
Play mode setting 8-6
Predictive Candidates
Preview Window
Camera 6-3
Video Camera6-4
Privacy Key Lock 11-4
Private Menu 1-21
PUK/PUK2 1-3, 11-3

Q	
QR Code12-12	2
Quality	
Still images6-3	3
Videos	ŀ
Quick Open Menu 18-13	3

R

Recipients (Adding/editing/deleti	ng) 13-8
Referer Information	17-16
Remote Lock	16-5
Reset	11-12
All Reset	11-12
Browser Settings	17-16
Settings	11-12
Total Cost	17-8
Total Duration	17-8
TV Settings	17-12
Ring Songs&Tones folder	
Ring Time (Answer Phone)	
Ring Time Settings	11-11
Ringer Volume	17-2
Ringtone	9-8, 17-2
Ringtone Duration	17-2
Root Certificates	

S	
S! Addressbook Back-up	4-10
S! Appli [Section Contents]	15-1
S! Information Channel	7-4
S! Mail	
Creating/sending	13-4
Mail Notice	13-11
Settings	17-14
Universal Settings	17-14
S! Quick News	1-17, 7-2
Save	
Alarms	
Calendar	
Notepad	
Phone Book	
S! Information Channel	
S! Quick News	
Shortcuts	
Still Images	
User's Dictionary	
Videos	
Saved Pages	
Script Scroll Unit	
SD Audio	
Secret Data Only Secret Mail Setting	
Secret Mode	
Secure Remote Lock	
Security Code	
Security Functions	
Security Functions	

Security level	15-4
Security Settings (Internet)	17-16
Security Settings (Mail)	11-10
Server Mail	13-14
Settings [Section Contents]	17-1
Shikkari Talk	2-5
Shortcuts	1-17
Shutter sound	6-8
Side-keys Guard	11-8
Signal Strength	1-8
Simple Menu	1-22
SMS	13-2
Creating/sending	
Settings	17-14
Universal Settings	17-14
Snooze	12-7
SoftBank Utility Software	10-6
Softkeys	ix
Software Update	18-11
Sort (Messages)	13-21
Spam Filter	
Speaker ON/OFF	2-11
SSL	14-3
Still Images (Picture)	
Capturing	
Editing	9-12
Streaming	
Symbols	3-4
Symbol List	

Т		

Tasks	12-6
Templates (Graphic Mail)	13-5
Text Entry [Section Contents]	3-1
Time Correction	17-7
Timer Lock at Close	11-6
TLS	14-3
Trimming (Editing Still Images)	9-12

U

URL History	
PC Site Browser	14-5
Yahoo! Keitai	14-4
USB	10-6
User Mode	17-6
User's Dictionary	3-10
USIM Card	1-2
USIM Card Phone Book	4-3
USIM PINs	1-3

V

Vibrator	
Incoming alert	17-2
S! Appli	17-17
Videos (Recording)	6-6
Videos folder	
View Blind	1-25
Voice Announce	12-11
Voice Dial	4-14
Voice Mail	2-18
Voice Recorder	12-11
Volume	
Ringtone	17-2
S! Appli	
Video Calls	
Voice Calls	2-5

W

Wallpaper
Warning Messages (PC Site Browser) 17-15
Warranty 18-32
Weather Indicator7-5
White balance
Still Images 6-3, 6-8
Videos6-4, 6-8
WMA Files8-4
World Clock 17-7

Y

Yahoo! Keitai	14-2
Access	14-3
Display Settings	17-15
Memory Manager & Settings.	17-15
Security Settings	17-16

Warranty & Service

Warranty

Warranty is provided when you purchase a 832P.

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

SoftBank is not liable for any damage resulting from use of this product.

After-Sales Service

See "Troubleshooting" (☆P.18-9) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (☆P.18-33) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

Check phone number before you dial.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at 157 for General Information or 113 for Customer Assistance SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491 (Please take care to dial the correct number. International charges will apply to this call.)

Subscription Area	Service Center	Toll Free Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi,	General Information	0088-240-157
Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka General Information Customer Assistance	0088-241-157	
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113

SoftBank 832P User Guide

March 2012, Third Edition

SOFTBANK MOBILE Corp.

For additional information, please visit a SoftBank shop.

Model: SoftBank 832P Manufacturer: Panasonic Mobile Communications Co., Ltd.



Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- Handsets, batteries and chargers submitted for recycling cannot be returned.
- Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.