

<b>USIM Card.....</b>	<b>1-2</b>
About USIM Card .....	1-2
USIM Card Installation .....	1-3
USIM PINs .....	1-3
<b>Parts &amp; Functions.....</b>	<b>1-4</b>
Handset .....	1-4
One-push Open Button .....	1-6
Key Operations in Standby .....	1-6
Display .....	1-8
<b>About Battery .....</b>	<b>1-10</b>
Before Charging .....	1-10
Battery Installation .....	1-12
Charging Battery .....	1-13
<b>Handset Power On/Off.....</b>	<b>1-14</b>
<b>Manner Mode .....</b>	<b>1-15</b>
Minding Mobile Manners.....	1-15
Manner-related Features.....	1-15
Activating Manner Mode .....	1-15
Activating Emission OFF Mode.....	1-16
Activating Driving Mode .....	1-16
<b>Standby Options &amp; Event Indicators .....</b>	<b>1-16</b>
Event Indicators.....	1-16
S! Quick News (Japanese).....	1-17
S! Information Channel/Weather (Japanese).....	1-17
Shortcuts.....	1-17

 
<b>Handset Menus.....</b>	<b>1-18</b>
Main Menu .....	1-18
Menu Numbers .....	1-19
<b>Customizing User Interface .....</b>	<b>1-20</b>
Customized Screen/Familiar Usability .....	1-20
<b>Private Menu .....</b>	<b>1-21</b>
Opening Private Menu .....	1-21
Customizing Private Menu .....	1-21
Adding Shortcuts .....	1-21
<b>Simple Menu.....</b>	<b>1-22</b>
Activating Simple Menu.....	1-22
Simple Menu .....	1-23
<b>Passwords.....</b>	<b>1-23</b>
Phone Password .....	1-23
Center Access Code.....	1-23
Security Code .....	1-24
<b>Multi Task .....</b>	<b>1-24</b>
Activating Another Function.....	1-25
Switching Functions.....	1-25
Ending Current Functions.....	1-25
<b>View Blind .....</b>	<b>1-25</b>
<b>My Number .....</b>	<b>1-26</b>

# USIM Card

## About USIM Card

**Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use 832P or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.**

USIM Card



- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If handset is dropped/subjected to shock, handset may return to Standby. This is not a malfunction.

If **USIM not inserted After power-off Insert USIM** appears, re-insert USIM Card properly then restart handset.

## Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card inserted is lost or stolen, contact SoftBank Mobile Customer Center or Global Call Center (☎P.18-33).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is inserted into handset.
- Returned USIM Cards are recycled.

## Note

 
- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

## USIM Card Installation

- Remove battery (➡P.1-12) then follow steps below.


### Inserting

- 1 With IC chip down, insert USIM Card

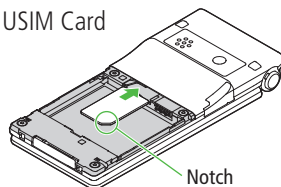

### Removing

 - 1 Slide out USIM Card gently

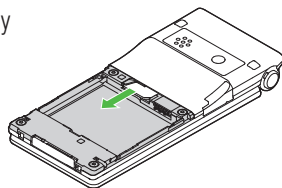

#### Note

- Do not force USIM Card into or out of handset; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

## USIM PINs

### There are two USIM Card security codes: PIN & PIN2

- PIN and PIN2 are set to 9999 by default.
- PIN/PIN2 can be changed (➡P.11-2).

<b>PIN</b>	4 to 8-digit code used to prevent unauthorized handset use. <ul style="list-style-type: none"> <li>● When <b>PIN Authentication</b> is <b>ON</b> (➡P.11-2), PIN entry is required each time handset is turned on (with USIM Card inserted).</li> </ul>
<b>PIN2</b>	Required to clear call times/costs or set maximum cost (➡P.17-8).

### PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unblocking Key (PUK/PUK2) (➡P.11-3).

 
- For information on PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (➡P.18-33).

#### Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (➡P.18-33).

# Parts & Functions

## Handset

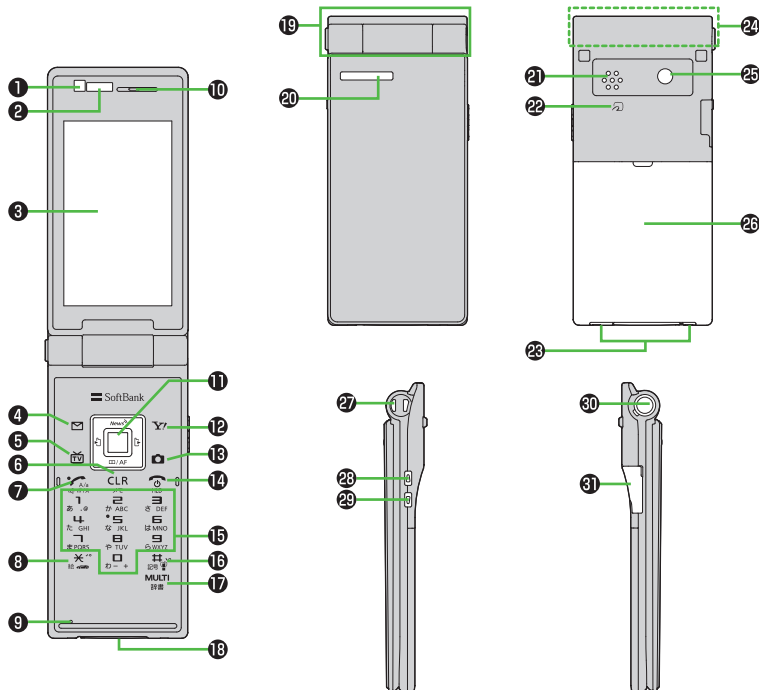

### Using Earphone/Microphone

Connect following accessories (A) and (B) to External Port.

 
(A) Earphone/microphone

(B) Stereo Earphone Conversion Cable





 


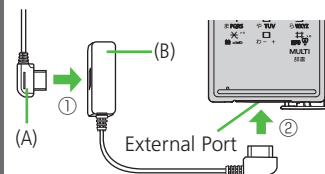


 








<Operation>

① Connect flat plug (A) to flat terminal (B)

 ② Connect plug (B) to External Port



- Do not press answer button on earphone/microphone when connecting. Doing so may cause earphone/microphone to malfunction. In that case, pull out earphone/microphone, and connect again.


- 1 **Light Sensor**
  - Detects ambient light
- 2 **Infrared Port**
  - Transfer data via Infrared
- 3 **Display**
- 4  **Mail Key**
  - Open Messaging menu
  - Execute Upper Left Softkey function (P.16)
- 5  **TV Key**
  - Activate TV
  - Execute Lower Left Softkey function (P.16)
- 6  **Clear/Memo Key**
  - Delete characters
  - Cancel menus
  - Use Answer Phone
- 7  **Send Key**
  - Initiate or answer calls
  - Toggle upper/lower case in text entry windows
  - Use Voice Dial
- 8  **\* /Symbol/Driving Mode Key**
  - Enter "\*"
  - Access pictographs in text entry windows
  - Toggle Driving Mode
- 9 **Microphone**
- 10 **Earpiece**
- 11  **Multi Selector**
  - Scroll up/down/left/right to navigate menus and text (P.16)
  -  Select S! Quick News (Unavailable in Simple Menu)
  -  Open Phone Book; set Auto Focus Lock
  -  Open Incoming Call Logs
  -  Open Redial logs
- 12  **Yahoo! Keitai Key**
  - Open Yahoo! Keitai Main Menu
  - Execute Upper Right Softkey function (P.16)
- 13  **Camera Key**
  - Activate Camera/Video Camera
  - Execute Lower Right Softkey function (P.16)
- 14  **End/Escape & Power Key**
  - Power on/off (P.1-14)
  - End calls; return to Standby
  - Place Call on hold
- 15  **Keypad**
  - Enter phone number/text
- 16  **# /Symbol/Manner Key**
  - Enter "#"
  - Access symbols in text entry windows
  - Toggle Manner Mode
- 17  **MULTI Key**
  - Open/activate/toggle TASK MENU (P.1-25)
  - Activate ケータイTOOL<辞書>
- 18 **External Port**
  - Connect AC Charger (sold separately) or other accessories here
- 19 **Hinge**
- 20 **Notification Light/Charging Indicator**
  - Flashes for incoming transmissions
  - Flashes while Camera is active
  - Lights in red for charging
- 21 **Speaker**
- 22  **Logo**
  - Place Logo over a reader/writer when using Osaifu-Keitai® (P.16-4)
- 23 **Charging Terminals**
- 24 **Antenna**
- 25 **Camera**
- 26 **Battery Cover**
- 27 **Strap Eyelet**
- 28  **Upper Side Key**
  - Increase earpiece/TV volume
- 29  **Lower Side Key**
  - Decrease earpiece/TV volume

[Closed Position]

  - Set/cancel Manner Mode
  - Check missed calls/new messages
- 30 **One-push Open Button** (P.1-6)
- 31 **microSD Card Slot**
  - Insert microSD Card here (P.9-16)

## One-push Open Button

 Press One-push Open Button to open handset.

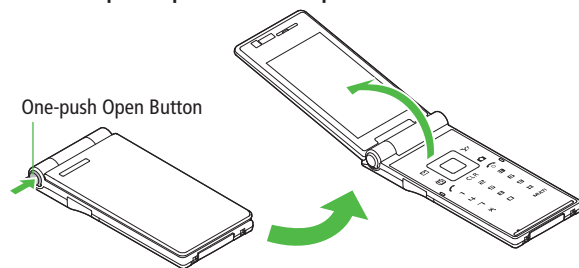































     
 
- Fold handset by hand to close. When handset does not close, open it all the way once, then close.
- Customize handset to answer/end calls, etc. by opening/closing handset (P.17-6, P.17-8).
- Be careful not to drop handset when opening handset by One-push Open Button.

## Key Operations in Standby

                Press (less than one second) or press and hold (more than one second) a key in Standby to execute operation.


Key Operations	Functions	
	Short Press	Initiate a call
	Long Press	Voice dial
	Short Press	Show/hide indicators and S! Quick News ticker
	Long Press (2 + sec)	Turn off power
	Short Press	Open Main Menu
	Long Press	Activate/cancel Keyguard
	Short Press	Play Answer Phone
	Long Press	Activate/cancel Answer Phone
	Short Press	Activate Camera
	Long Press	Activate Video Camera
	Short Press	Activate Digital TV
	Long Press	Activate/cancel IC Card Lock
	Short Press	Open Messaging Menu
	Long Press	Open S! Mail Composition window
	Short Press	Access Yahoo! Keitai
	Long Press	Open Yahoo! Keitai Menu
	Short Press	Select Event Indicator, Shortcut, S! Quick News ticker
	Long Press	—
	Short Press	Open Phone Book search window
	Long Press	Open Phone Book entry window
	Short Press	Open Incoming Call Logs
	Long Press	Open Received address logs

Key Operations	Functions
 Short Press	Open Redial logs
 Long Press	Open Sent address logs
 Short Press	Enter "1"
 Long Press	Open Phone Book page "あ"
 Short Press	Enter "2"
 Long Press	Open Phone Book page "か"
 Short Press	Enter "3"
 Long Press	Open Phone Book page "さ"
 Short Press	Enter "4"
 Long Press	Open Phone Book page "た"
 Short Press	Enter "5"
 Long Press	Open Phone Book page "な"
 Short Press	Enter "6"
 Long Press	Open Phone Book page "は"
 Short Press	Enter "7"
 Long Press	Open Phone Book page "ま"
 Short Press	Enter "8"
 Long Press	Open Phone Book page "や"
 Short Press	Enter "9"
 Long Press	Open Phone Book page "ら"
 Short Press	Enter "0"
 Long Press	Open Phone Book page "わ"
 Short Press	Enter "＊"
 Long Press	Activate/Cancel Driving Mode
 Short Press	Enter "#"
 Long Press	Activate/Cancel Manner Mode

  Key Operations	Functions
 Short Press	Increase earpiece volume
 Long Press	
 Short Press	Decrease earpiece volume
 Long Press	
 Short Press	Activate TASK MENU
 Long Press	Activate ケータイTOOL<辞書>

# Display
 
## Display Indicators

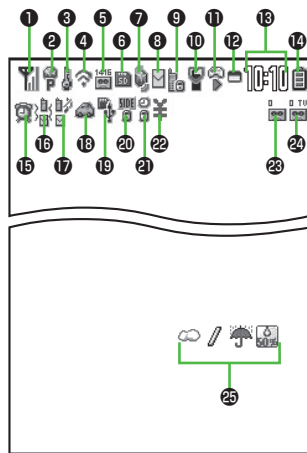

### 1 Signal Strength

Strong Moderate Weak Low

Emission OFF Mode

Out-of-Range

### 2 Packet Transmission in Progress (PC)

Dial-up Connection Established on PC

3G/GSM Packet Transmission Enabled

3G/GSM Packet Transmitting

Operator (set for Select Operator)  
Out-of-Range

3G/GSM Packet Transmission Available\*

3G/GSM Packet Transmission Unavailable\*  
\* Available only while abroad

### 3 Secure Content

S! Addressbook Back-up Synchronizing

Auto Sync Settings Active

### 4 PC Site Browser Active

Infrared Active

IC Transmission

USB Cable Connected

Keyguard Active

### 5 Software Update (Notification/Updating/Result)

Voice Mail

### 6 microSD Card

Inserted

Reading/Writing Data

Write-protected

Unsupported

Unusable

**USB Cable (Not Included) Connected**

microSD Mode

MTP Mode

**During Call**

During Video Call

During Voice Call

### 7 New S! Quick News Information

New S! Information Channel info

### 8 Unsent Message

Unread Message

Incoming Mail Memory Full (Handset)



- 9 Privacy Key Lock Active  
 Personal Data Lock Active  
 Key Pad Dial Lock Active  
 IC Card Lock Active  
 Secret Mode and Secret Data Only Active  
 Key Pad Dial Lock, Secret Mode and Secret Data Only Active  
 Key Pad Dial Lock and Personal Data Lock Active  
 Secret Mode, Secret Data Only and IC Card Lock Active  
 Privacy Key Lock and IC Card Lock Active  
 Personal Data Lock and IC Card Lock Active  
 Key Pad Dial Lock and IC Card Lock Active  
 Key Pad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active  
 Key Pad Dial Lock, Personal Data Lock and IC Card Lock Active
- 10 Manner Mode Active  
 Manner Mode (set in User Mode) Active

- 11 **SI Appli**  
 Paused  
 Active  
 Auto Start Request Received  
 Start Request Received while Paused  
 Start Request Received while Active
- 12 One Function Active  
 Multiple Functions Active  
 Digital TV Active  
 Music Playback  
 Music Paused
- 13 Time
- 14 **Battery Level**  
 → → → (Red)
- 15 (Red) Alarm Set (Today)  
 (Blue) Alarm Set (After Today)
- 16 Vibration Active (Incoming Call)  
 Vibration Active (Incoming Message)  
 Vibration Active (Incoming Call/Message)
- 17 Incoming Call Ringtone Disabled  
 Incoming Message Ringtone Disabled  
 Incoming Call/Message Ringtone Disabled
- 18 Driving Mode

- 19 Switching USB Mode to microSD Mode  
 Switching USB Mode to MTP Mode
- 20 Side Key Disabled when Handset Closed
- 21 Timer Lock at Close Active
- 22 Call Charge Reached Upper Limit
- 23 Number of Answer Phone Messages (Voice Calls)
- 24 Number of Answer Phone Messages (Video Calls)
- 25 Weather Indicator (P.7-5)

**Note**

- To show icon description: **Main Menu**  
 ► **Settings** ► **Display Settings**  
 ► to highlight an icon

## About Battery

### Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

### Charging Time & Operating Time Estimates

		3G	GSM
Charging Time		100 minutes*	
Standby Time		460 hours*	240 hours*
Talk Time	Voice Call	180 minutes*	180 minutes*
	Video Call	120 minutes*	—

\* Approximate value

- 3G Mode/GSM Mode: P.2-10
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

## About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.
- Battery may swell as service life nears end; this is not a problem.

### Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

## Battery Time


- Using handset in poor conditions may shorten battery time.
  - Extreme temperatures
  - Impaired handset, battery or Charging Terminals
  - Signal is weak/handset is out-of-range
  - Handset is left mid-operation (not in Standby)
  - Viewing TV, playing music or using S! Appli, etc.
- Extending battery time
 

Example:

  - Turn Back Light Time **OFF** and Power Saver Mode **ON** (☞P.17-5)
  - Select **OFF** for Key Tone (☞P.17-2)

## When Battery Runs Out

- **Unless a Call is in Progress**

 
A message appears and warning tone sounds for 10 seconds. Warning tone ends automatically after one minute; press any key except  to cancel warning tone manually. Charge or replace battery.

  - If Manner Mode is active, nothing sounds.
- **During a Call**

A message appears and warning tone sounds via Earpiece or Speaker. After 20 seconds, call ends and handset shuts down in one minute. Charge or replace battery.

## Battery Strength Indicator

- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (☞P.1-9) or a message appears on Display.

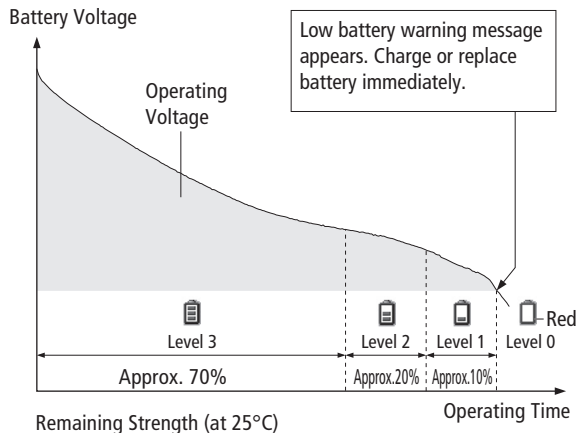


### Note

- Alternatively, check battery level from **Main Menu ► Settings ► Phone Settings ► Battery ► Battery Level**

## Battery Installation


- Always turn off handset power before removing battery.
 
### 1 Press and slide to remove cover

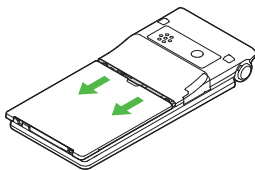

### 2 Insert Battery

 
Align battery tabs with handset grooves and slide in battery.

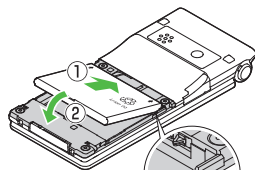

Slide into Groove


### Remove Battery

 Lift battery out as shown.

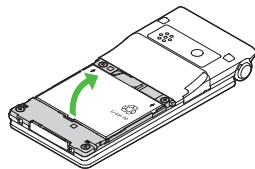

### 3 Replace battery cover

 Make sure there is no gap between battery and handset; cover should click into place.

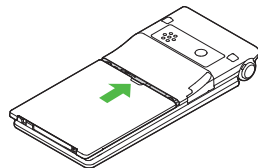

#### Note

- Lithium-ion batteries are valuable and recyclable resources.
  - Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
  - To avoid fire or electric shock, do not:
    - Short-circuit battery
    - Disassemble battery
- Battery cover edges are sharp. Close battery cover fully to avoid injury.

 


Li-ion 00

## Charging Battery

Use only specified AC Charger (sold separately).

**Charging Time: Approximately 100 minutes**

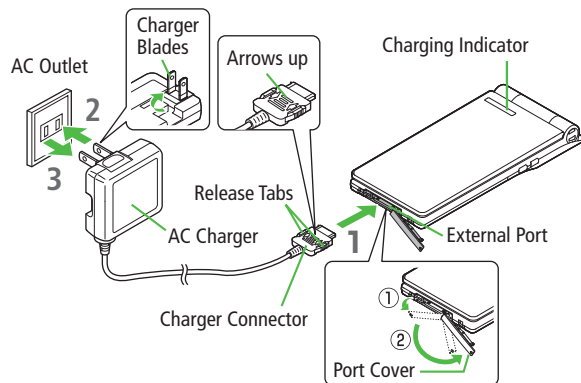

### 1 Connect AC Charger to handset

Insert Charger Connector (printed side up) into External Port.

### 2 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts.

When charging is complete, Charging Indicator goes out.

- When Charging Indicator flashes, remove AC Charger and battery from handset then attach them again.

- **Charge Sound** is heard when charging starts/ends (P.17-2). When handset is turned off or in Manner Mode, nothing sounds.

### 3 When charging is complete, unplug AC Charger, then disconnect handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.

#### Note

- For details, read AC Charger instructions.
- Alternatively, charge battery by using Desktop Holder (not included).

# 1 Handset Power On/Off

## 1 Press and hold

 
Start-up window appears and handset enters Standby.

- Enter PIN if PIN Authentication is ON (☞P.11-2).

## 2 Press for 2+ seconds

Handset shuts down.

- Do not turn on handset immediately after turning off. Wait a few seconds.

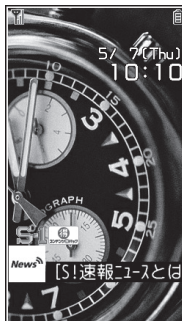

Standby

### The First Time Handset Powers Up, and Setup Window Appears...

Select **YES**, and set the following:

(Each item can be set separately.)

- Set date and time (Date & Time: ☞P.17-7)
- Set Phone Password  
Enter "9999", and enter new Phone Password (4-8 digits) (☞P.1-23).
- Set Key Tone  
Select **ON** or **OFF** (☞P.17-2).
- Set font size  
Set Display font size all at once (☞P.17-5).

#### Note

- If **USIM not inserted After power-off Insert USIM** appears, clean and properly re-insert USIM Card then restart handset.
- After a period of inactivity, Display turns off.

## Retrieving Network Information

When , , or  is pressed for the first time in Standby, handset initiates Network Information retrieval;  to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: **Main Menu** ► **Settings**  
► **Connectivity** ► **Retrieve NW Info** ► **YES**

#### Tip

#### Settings

- Change Wallpaper
- Add Calendar to Wallpaper
- Change Start-up Window (☞P.17-3)

# Manner Mode

## Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

## Manner-related Features

<b>Manner Mode</b> (☞P.17-2)	Press Manner key to mute handset tones and activate vibration for incoming transmissions.
<b>Vibration Mode</b> (☞P.17-2)	Activate in public places, meetings, etc. for silent call/message alerts.
<b>Ringer Volume</b> (☞P.17-2)	Mute call/message tones.
<b>Emission OFF Mode</b> (☞P.1-16)	Suspend all handset transmissions.
<b>Answer Phone</b> (☞P.2-15)	Use to handle incoming calls when inappropriate/unsafe to answer.
<b>Driving Mode</b> (☞P.1-16)	While driving, send a voice message informing the caller that you cannot answer the call (Handset does not ring.).

## Activating Manner Mode

Press one key to mute handset tones and vibration for incoming transmissions.

- Manner Mode settings can be changed (☞P.17-6).
- When Manner Mode is active, 📞 appears.

1 In Standby, press and hold [#]

- To cancel: Press and hold [#] again
- To activate/cancel while handset is closed: Press and hold 📞



### Note


- Shutter click and incoming tone via Earphone (**Level 1**) sound even in Manner Mode.
- When Music Player or Digital TV activates in Manner Mode, confirmation appears asking whether to cancel Manner Mode.
- When **Prefer manner mode** is **OFF** (☞P.12-7), Alarm sounds even if Manner Mode is active.

### Tip

- Settings** ● Set Manner Mode Type (☞P.17-6)

## Activating Emission OFF Mode

Temporarily suspend all handset transmissions; when active, all calls/messages and incoming information are blocked.

- When Emission OFF Mode is active,  appears.

**Main Menu** ► **Settings** ► **Call Settings** ► **Emission OFF Mode**

### 1 YES

- To cancel: Follow the same steps.

#### Note

- Emission OFF Mode disables Infrared/IC transmissions.

## Activating Driving Mode

Handset does not ring for incoming calls. Voice guidance informs the caller you are unavailable and Answer Phone activates.

- When Driving Mode is active,  appears.

### 1 In Standby, press and hold

- To cancel: Press and hold  again

#### Note

- When Answer Phone memory is full, incoming calls are rejected.

 
## Standby Options & Event Indicators

### Event Indicators






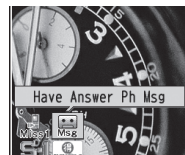

Event Indicators appear for missed calls, messages, etc.

### 1 → Select an indicator

 


 


- To clear indicators:  or **CLR**



### ■ Events

<b>Missed Calls</b>	Missed calls (  P.2-13)
<b>New Messages</b>	New messages (  P.13-10)
<b>Answer Phone</b>	Recorded caller messages (  P.2-15)
<b>Voice Mail</b>	New Voice Mail (  P.2-18)
<b>Missed Call Notification</b>	If Missed Call Notification is active, indicator appears for calls missed while handset is off, out-of-range, engaged, etc. (  P.2-19)
<b>S! Information Channel Info</b>	S! Information Channel (received/failed updates) (  P.7-4)
<b>Weather Info</b>	Weather Indicator (received/failed updates) (  P.7-5)

### ■ Other Information

- Missed alarm ( P.12-7)
- S! Appli startup notice ( P.15-3)
- USB Mode setting ( P.10-6)
- Timer ( P.5-13)
- Content Key ( P.9-5)
- Software Update result ( P.18-12)

#### Note

- Call operations are available while Event Indicators appear.



## S! Quick News (Japanese)

By default, S! Quick News appears at bottom of Display.

- S! Quick News: P.7-2
- Show/hide S! Quick News: P.17-13



S! Quick News

## S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

 
- S! Information Channel/Weather: P.7-4



## Shortcuts

Access frequently used functions from Standby.

- S-1 battle and Content Value Package shortcuts are set by default. Both services available only in Japanese.

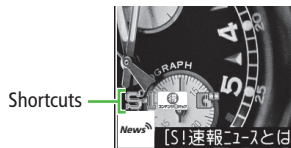

## Adding Shortcuts

- Shortcuts may not be available for some functions.

- 1 Open a function, [Menu] → **Add shortcut icon** → YES

## Accessing Functions from Shortcuts

 
- 1 In Standby, → Select an icon  
The selected function name appears above icon.
  - To clear: or

## Editing/Deleting Shortcuts

- 1 In Standby, → Highlight an icon → [Menu]
- 2 **Edit Title**  
**Edit title** → Edit title  
**Delete Shortcut(s)**  
**Delete this** or **Delete all** → YES


# Handset Menus

## Main Menu

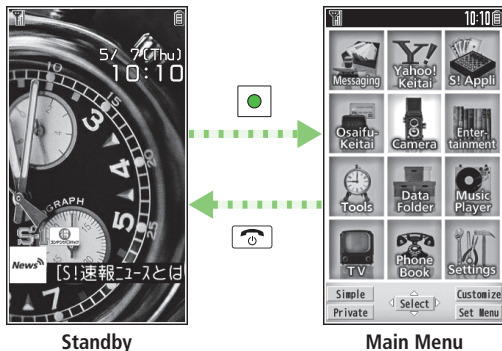

### 1 In Standby,

Main Menu appears.

- To change Main Menu theme:  
 [Set Menu] → Select a pattern

### 2 to highlight an icon →













Selected function menu appears.

- To return to Standby: 

#### Note

- Standby window returns after 15 seconds of inactivity in Main Menu.

## Main Menu Icons

<b>Messaging</b>  Create new/view received messages	<b>Yahoo! Keitai</b>  Enjoy Mobile Net & PC Site browsing...	<b>S! Appli</b>  Download, set and use S! Appli
<b>Osaifu-Keitai</b>  Use Osaifu-Keitai®	<b>Camera</b>  Capture images or record videos	<b>Entertainment</b>  Use S! Quick News or E-Books
<b>Tools</b>  Set Alarm or save Calendar entries...	<b>Data Folder</b>  Open files saved on 832P/microSD Card	<b>Music Player</b>  Use Music Player
<b>TV</b>  View TV or record/timer-record programs	<b>Phone Book</b>  Save entries to call or send messages...	<b>Settings</b>  Adjust/customize handset settings

## Tip

**Settings** ● Change Display Color Scheme (P.17-3) ● Change Main Menu Icons ● Change Main Menu Background (P.17-4)

## Menu Numbers

 
Use keypad to select functions or menu items.

## Unnumbered Menu Items

When numbers do not appear, select items as shown.

## Main Menu

**#** to select **Settings** from Main Menu

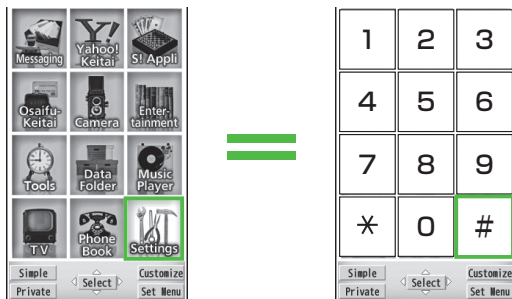

Example: Menu Icons set to Pattern 1


## When Menu Icons is Set to Pattern 5 or Customize

 Menus cannot be selected from Main Menu by keypad.

Open menu items by entering specific number in Main Menu (Quick Open Menu: P.18-13).

## Top Menu Opened from Main Menu

**2** to select **Display Settings**

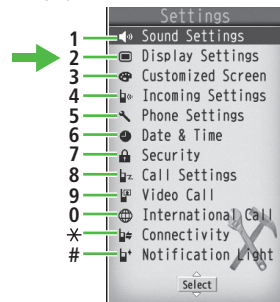


Example: Settings Top Menu

## Numbered Menu Items

 Press key corresponding to menu number to select a menu.

In Display Settings (from **Settings** Top Menu), **5** to select **Back Light Time**

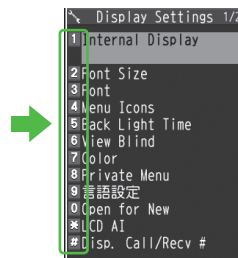

# 1 Customizing User Interface

## Customized Screen/Familiar Usability

<b>Customized Screen</b>	Download and set Customized Screen to personalize user interface, ringtone, etc., to a selected theme.
<b>Familiar Usability</b>	Download Familiar Usability applications that mimic the interface design of other handsets.

## Downloading Customized Screen/Familiar Usability

Download characters or applications from websites.





**Main Menu ► Data Folder ► Customized Screen**

### 1 *Customized Screen* or *Familiar Usability* → YES

Website providing characters or applications appears.  
Follow onscreen instructions.

- To manage Customized Screen applications in Data Folder:  
📄 P.9-10

## Setting Customized Screen/Familiar Usability

- 1 In Standby, 
- 2  [Customize] → *Customized Screen* or *Familiar Usability*
- 3 Highlight a theme →  [Set]
  - To toggle thumbnail and list:  [Change]
- 4 YES

### Note

- Customized Screen or Familiar Usability cannot be set when battery is low.
- Other functions are not available while switching. For some seconds after switching is complete, all calls/messages may be blocked.
- Familiar Usability does not completely remake handset.
- Alternatively, **Main Menu ► Settings ► Customized Screen**  
To cancel, select *Release Settings*.
- When Simple menu is active, Customized Screen and Familiar Usability settings are not reflected. To reflect settings, cancel Simple menu.

 
## Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.

### Opening Private Menu

- 1 In Standby, → [Private]  
Private Menu appears.  
● To return to Main Menu: [Normal]
- 2 Select a menu

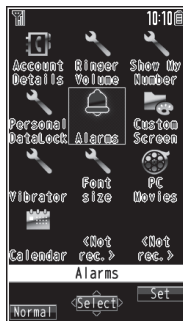

Private Menu Window

### Change Private Menu Background

- > After Step 1, [Set] → [Menu] → *Change BG image* → Select a folder → Select an image

### Customizing Private Menu

 
- 1 In Standby, → [Private] → [Set]
- 2 Highlight a target → [Menu] → *Add to menu*
- 3 Select an item

#### Cancel Functions

- > In Step 3, (highlight a function →) [Menu] → *Release this* or *Release all* → YES

#### Reset Private Menu

- > In Step 3, [Menu] → *Reset menu* → YES

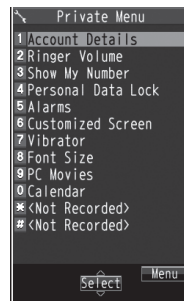

Private Menu Setting Window

### Adding Shortcuts

- 1 In Standby, → [Private] → [Set]
- 2 [Menu] → *Add shortcut icon* → YES

#### Note

- Alternatively, open Private Menu setting window from **Main Menu** ► **Settings** ► **Display Settings** ► **Private Menu**

 
## Simple Menu

Activate Simple menu to limit menu options to basic ones.

- Handset is limited to basic operations (P.1-23).



Normal Mode Window

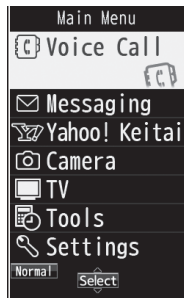

Simple Menu Window

## Activating Simple Menu

1 In Standby, → [Simple] → YES

2 YES or NO

- Select YES to set all items in Font Size (P.17-5) to Large.
- To open Simple menu: in Standby.

### Cancel Simple Menu

> In Standby, → [Normal] → YES

#### Note

- Turning off the power does not cancel Simple menu.
- S! Quick News is not available in Simple menu. Customized Screen or Familiar Usability setting is canceled.

## Simple Menu

Simple Menu	Page
<b>Voice Call</b>	
Outgoing Log	2-13
Incoming Log	2-13
Phone Book	4-6
Create New Phone Book	4-3
Answer Phone	2-15
Account Details	1-26
<b>Messaging</b>	
Incoming Mail	13-10
Create New	13-4
Retrieve New	13-15
Drafts	13-15
Sent Messages	13-15
Create New SMS	13-7
<b>Yahoo! Keitai</b>	
Yahoo! Keitai	14-2
Bookmarks	14-8
Saved Pages	14-8
Enter URL	14-4
<b>Camera</b>	
Take Pictures	6-5
See Pictures	6-10
Shoot Videos	6-6
Watch Videos	6-10

Simple Menu	Page
<b>TV</b>	
Watch TV	5-5
Timer Recording	5-13
Channel Setting	5-4
<b>Tools</b>	
Data Folder	9-2
Alarms	12-7
Calendar	12-2
Calculator	12-8
Notepad	12-9
Receive via Infrared	10-3
<b>Settings</b>	
Ringtones/Volume	1-15 17-2
Screen/Fonts	17-3 to 17-5
Call Time & Cost	17-8
Date & Time	17-7
Security	11-2 16-5 18-11
Call Settings	2-17 to 2-21

## Passwords

Phone Password, Center Access Code and Security Code are needed for handset use.

### Phone Password

<Default> 9999

**4 to 8-digit number required to use/change some handset functions.**

- Enter number within 15 seconds.
- \_ appears for each digit entered.
- Phone Password can be changed on handset (P.11-2).

### Center Access Code

**4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.**

- Do not attempt to change Center Access Code. For details, contact SoftBank Mobile Customer Center, General Information (P.18-33).

## Security Code

4-digit number specified at initial subscription, required to restrict handset services (➡P.2-20).

- Enter number within 15 seconds.
- If entered incorrectly three times, Security Code settings lock; Security Code & Center Access Code must be changed. Reach SoftBank Mobile Customer Center, General Information (➡P.18-33) for details.
- Security Code can be changed on handset (➡P.2-20).

### Note

- Write down Phone Password, Center Access Code and Security Code. Do not reveal Phone Password, Center Access Code and Security Code. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Mobile Customer Center, General Information (➡P.18-33).

 
## Multi Task

Activate up to three functions from four different groups at the same time.

Group	Function
① <b>Messaging Group</b>	Messaging
② <b>Yahoo! Keitai/ S! Appli Group</b>	Yahoo! Keitai/S! Appli/Entertainment /Osaifu-Keitai (Lifestyle-Appli)
③ <b>Tools Group</b>	Music Player*/Camera/Tools/Data Folder/TV/ Phone Book
④ <b>Settings Group</b>	Settings/Osaifu-Keitai (IC Card Settings)

\* Functions other than Tools Group are included.

- [▼] appears above the icons of an active group.
- [ ] appears for single function in use; [ ] for multiple functions in use.

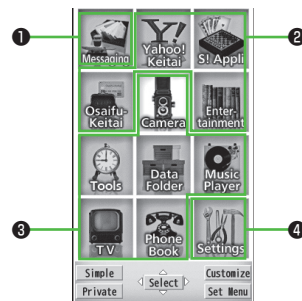

### Tip

 
- Other Functions while Watching TV (➡P.5-8)
- Using Other Functions while Listening to Music (Play Background) (➡P.8-7)



## Activating Another Function

Activate another function from a different group. Multi Task is unavailable when Simple menu is active.

- 1  → *Open Menu* →  
Select a function

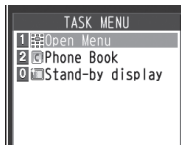


TASK MENU Window

### Note

- If another function is selected from same group, confirmation appears.  
Select **YES** to cancel current function and start a new function.

## Switching Functions

- 1  → Select a function  
Each press cycles through activated functions.

## Ending Current Functions

- 1 

### End All Active Functions

- >  →  [  ] → **YES**

 
## View Blind

Activate View Blind to protect Display from prying eyes.

Main Menu ► Settings ► Display Settings ► View Blind


 
- 1 **ON**
- 2 Select a level
  - Set level 1-3 (Level 3 is the highest level).

### Note

- Alternatively, press and hold  to activate/cancel. Previously selected level takes priority.
- View Blind cannot be activated: While in Standby; while S! Appli is active; while Privacy Key Lock is active; during All Reset

## My Number

Confirm handset phone number in Account Details (P.4-13). Also confirm data saved in Account Details: name, mail address, etc.

- 1 In Standby,  →   
Account Details appears.

