

Making/Answering Voice Calls 2-2

Making Voice Calls	2-2
Outgoing Call Functions	2-3
Emergency Calls (110, 119, 118)	2-4
Answering Voice Calls.....	2-5
Incoming Call Functions.....	2-5
Making Voice Clear (Shikkari Talk).....	2-5

Making/Answering Video Calls..... 2-6

Note	2-6
Video Call Window	2-6
Making Video Calls.....	2-7
Answering Video Calls	2-8

International Calls..... 2-9

Calling Abroad from Japan.....	2-9
Calling while Abroad	2-9
Global Roaming Settings	2-10

Engaged Call Functions 2-11

Operations Available during a Voice Call	2-11
Operations Available during a Video Call.....	2-12

Call Log..... 2-13

Viewing Call Logs.....	2-13
Making Calls from Call Log.....	2-14
Functions Available from Call Log	2-14

Answer Phone..... 2-15

Activating/Canceling Answer Phone	2-15
Playing Messages	2-15
Answer Phone Functions	2-16

Optional Services 2-16

Overview.....	2-16
Call Forwarding.....	2-17
Voice Mail	2-18
Call Waiting.....	2-19
Call Barring.....	2-20
Caller ID.....	2-21

Making/Answering Voice Calls

Making Voice Calls

Before Calling

- Confirm signal strength (☞P.1-8)
- If any of these indicators appear:



→Calls cannot be made (☞P.1-8, P.1-9, P.18-11)

1 Enter a phone number

- Include area code for all numbers.




2 Confirm the number, then

- To adjust volume:  or 

3 to end call

Call Time appears.

Correcting Misentries

Use  to place cursor at digit to delete, then **[CLR]**.

Press and hold **[CLR]** to delete the digit and all digits to the right of cursor.

Note

- Do not cover antenna area (☞P.1-5) with hand or sticker; may weaken signal strength and cause calls/transmissions to be unavailable.

Tip

- Operations Available during a Voice Call (☞P.2-11)

- Making Calls from Call Log (☞P.2-14)

- Saving Entered Numbers to Phone Book (☞P.4-5)

- Making Calls from Phone Book (☞P.4-6)

- **Settings** ● Set Handset Response when Closed during Call

- Call Time & Call Cost (☞P.17-8)

Outgoing Call Functions

Showing/Hiding Caller ID

- > Enter a number → [Menu] → *Notify caller ID* → *OFF* or *ON*
- Setting Caller ID on/off (Caller ID: P.2-21)

Adding Prefix to Phone Number

■ Save Prefix

- > **Main Menu** ► **Settings** ► **Call Settings** ► **Prefix**
 - Highlight **<Not Recorded>** ► [Edit] ► Enter a name
 - Enter a prefix number
- Up to seven entries can be saved.
- To check entries: Select a saved prefix.
- To delete entries: Highlight a prefix → [Menu] → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

■ Make Calls Using Prefix

- > Enter a number → [Menu] → *Prefix numbers* → Select an entry → Voice Calls: / Video Calls: [V. Call]
 - Alternatively, in detail window of Phone Book, Redial, Outgoing Call Logs or Incoming Call Logs, [Menu] → *Prefix numbers* → Select an entry → Voice Calls: / Video Calls: [V. Call]
- Example: Save "186" and "184" as prefixes, and add them to phone numbers to show/hide your caller ID when making calls.

Sending Touch-tone Signals

Send touch-tone signals for services such as reserving tickets, checking bank balance, etc. Save number strings to be sent as a touch-tone signal. Use P (pause) to separate numbers when saving.

■ Save Pause Dial

- > **Main Menu** ► **Settings** ► **Phone Settings** ► **Pause Dial**
 - [Edit] ► Enter a number string
- To enter a pause (p): Press and hold
- To delete: In Pause Dial window, [Menu] → *Delete* → *YES*

■ Send Pause Dial

- > **Main Menu** ► **Settings** ► **Phone Settings** ► **Pause Dial**
 - [Send] ► Enter a phone number ► / [Dial] ► Once line is connected, press [Send]
- Number string is sent each time [Send] is pressed.
- To send all number strings at one time: Once line is connected, press and hold → *Send at one time*

Emergency Calls (110, 119, 118)

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

Calls Cannot be Made in Following Cases:

- When **Set Max Cost Limit** is **ON** and charge limit is reached
- In PIN/PIN2, PUK/PUK2 entry window

Emergency Positioning Request

When an emergency call is made from a mobile phone, location is reported to first response agencies such as the police.

- Location information may be inaccurate due to location or signal conditions. Describe location or nearby landmarks.
- Base Station Positioning System is accurate within 100 meters to 10 kilometers. Location information from distant base stations may be inaccurate.
- Function available where first response agencies have completed system installation.
- Dialing 184 before 110, 118 or 119, cancels location report. However, first responders may obtain location information for immediate and serious threats to life.
- Not available for international roaming.
- Requires no separate subscription or transmission fees.

Note

- Emergency numbers may not be dialable outside Japan depending on the network available or handset settings.

Answering Voice Calls

When a Call Arrives...

832P rings; Notification Light flashes.



If Caller ID is sent, number appears in Display; if saved in Phone Book, caller's name appears.

When an International call arrives,  appears at upper left of caller's phone number in Display.


1 to talk

- To adjust volume:  or 

2 to end call

Call Time appears.

Adjust Ringer Volume

> While 832P is ringing, 

- Volume adjustment is disabled in following cases:
 - During **Manner Mode** (↪P.1-15)
 - While **Ringer Volume** is set to **Escalating Tone** (↪P.17-2)

Note






- When Caller ID is not sent, **Withheld** appears.

Tip

- Operations Available during a Voice Call (↪P.2-11)
 - Rejecting Unknown Callers
 - Rejecting Calls without Caller ID (↪P.11-11)
- Settings** ● Answer Calls by Opening Handset ● Change Answer Setting (↪P.17-6)

Incoming Call Functions

Following operations are available for incoming calls.

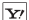Place Calls on Hold	> 
Answer Phone	>  / 
Call Rejection	>  [Menu] → Call Rejection <ul style="list-style-type: none"> ● Rejecting Unknown Callers/Rejecting Calls without Caller ID (↪P.11-11)
Call Forwarding	>  [Menu] → Call Forwarding <ul style="list-style-type: none"> ● Activate Call Forwarding (↪P.2-17) beforehand to forward incoming calls to a preset number. If Call Forwarding is not active, call is rejected.

Making Voice Clear (Shikkari Talk)

<Default> ON

Make other party's voice clear according to surrounding noise.

Main Menu ▶ Settings ▶ Call Settings ▶ Shikkari Talk

1 ON or OFF

Making/Answering Video Calls

Exchange video/sound with video call-compatible mobiles.

 
- Send Alternative Picture (still image) or video Image via Camera. By default, Outgoing Image is set to Alternative Image.

Note

- Only available within 3G network coverage.
- 832P is 3G-324M compliant; calls connected via different systems may be disconnected (charges apply).
- Increasing Speaker volume may cause interference. Decrease volume or use earphone.
- Handset may become warm during Video Call. This is not malfunction.
- When incoming/outgoing sound or image fails, try calling again.

Video Call Window

Example: Outgoing Video Call by Default

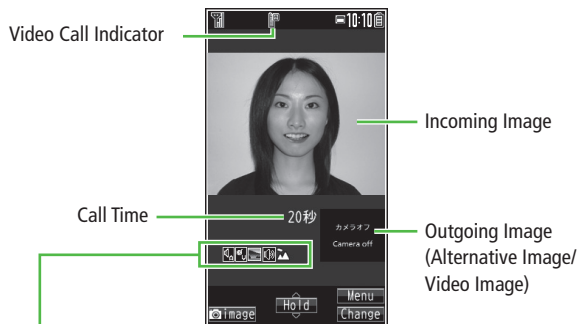

Indicators

: Incoming/Outgoing Sound OK	: Video ON
(Gray): Incoming/Outgoing Sound NG	: Alternative Image ON
: Incoming/Outgoing Image OK	: Speaker ON
(Gray): Incoming/Outgoing Image NG	: Portrait
	: Close-up
	: Landscape
	: Night mode

- Image display changes depending on settings.

Making Video Calls

Before Calling

- Confirm signal strength (☞P.1-8)
- If any of these indicators appear:



→ Video Calls cannot be made (☞P.1-8, P.1-9, P.18-11)

1 Enter a phone number

090XXXXXXXXX

2 Confirm the number, then [V. Call]

When answered, outgoing and incoming images appear; other party's voice sounds via Speaker.

- To adjust volume:  or 

3 to end call

Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (☞P.2-12).


Tip

- Outgoing Call Functions (☞P.2-3)
 - Operations Available during a Video Call (☞P.2-12)
 - Making Calls from Call Log (☞P.2-14)
 - Other Ways to Add New Entries (☞P.4-5)
 - Making Calls from Phone Book (☞P.4-6)
- Settings**
- Change Outgoing Alternative Image
 - Switch to Voice Call when Video Call Fails (☞P.17-10)

Answering Video Calls

When a Video Call Arrives...

832P rings; Notification Light flashes.

If Caller ID is sent, number appears in Display; if saved in Phone Book, caller's name appears. When an International call arrives,  appears at upper left of caller's phone number in Display.

 


1



Alternative Image is sent.

- To send Video Image:

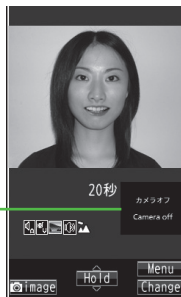

2



to end call

Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (P.2-12).

Tip


- Adjust Ringer Volume ● Incoming Call Functions (P.2-5)
- Operations Available during a Video Call (P.2-12)

International Calls

Calling Abroad from Japan

- Application not required. For details, go to:
http://mb.softbank.jp/en/global_services/call/

1 Enter a phone number

2  [Menu] → *Int'l dial assist*
Country/region code list appears.

3 Select a country/region





4 Voice Calls



Video Calls

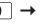

■ Enter Country/Region Code Directly

- >  → Press and hold  to display "+ (IDD Prefix)" → Enter a country/region code → Enter a number (omit first 0)
→ Voice Calls:  / Video Calls:  [V. Call]
- Do not omit leading 0 to call Italy (country code: 39).


Calling while Abroad

- May require application to Global Roaming Service. Download and take Global Roaming Guide when traveling abroad. For details, go to:
http://mb.softbank.jp/en/global_services/global_roaming/

Example: Calling Japan from Another Country/Region

- **Auto Assist** (☞P.2-10) is set to **ON** and **Japan (+81)** by default.
- Only number starting with 0 is valid.

1 Voice Calls

Enter a phone number → 

Video Calls

Enter a phone number →  [V. Call]

2 Dial

First 0 is replaced by +81.

- To call a number just as saved in Phone Book: **Dial with orig.No.**

■ Calling Other Countries/Regions Using Country/Region Code

Follow the same steps as calling abroad from Japan (☞Left).

■ Calling within the Same Country/Region

Follow the same steps as making a Voice Call/Video Call within Japan (☞P.2-2, 2-7).

Global Roaming Settings

From ► Main Menu ► Settings ► International Call

International Call Settings

> **Int'l Dial Assist** → Select an item (See below)

Item	Operation/Description
Auto Assist	Replace IDD Prefix with + > ON or OFF (→ For ON , select a country/region)
Country/ Area Code	Save up to 27 country/region codes > Highlight <Not Recorded> → [Edit] → Enter a country/region name → Enter a country/region code ● To view an entry: Select a saved country/region name ● To delete: Highlight a country/region name → [Menu] → Delete this or Delete all (→ For Delete all , enter Phone Password) → YES
IDD Prefix	Edit IDD Prefix. IDD Prefix is set to 0046010 by default > [Menu] → Edit → Edit IDD Prefix

Network Mode

<Default> Automatically

> **Select Network** → Select an item (See below)

Item	Operation/Description
Automatically	3G/GSM service area in Japan or abroad. 832P selects 3G network in Japan or an available network automatically using area (network condition) abroad.
Manually: 3G/GSM	3G/GSM service area in Japan or abroad. 832P selects an available network using area (network condition).
Manually: 3G	3G service area in Japan or abroad.
Manually: GSM	GSM service area abroad. Unavailable in Japan.

● **Automatically** is recommended.

Select Operator

<Default> Auto

> **Select Operator** → Select an item (See below)

Item	Operation/Description
Auto	Select an operator automatically
Manual	Select an operator manually > Select an operator ● Operators with X are not available. ● To show operator list: [Update]
Network Re-search	Search available networks ● When Auto is set, 832P selects an available operator automatically. When Manual is set, operator list appears.

■ Operator Priority for Automatic Search

> **PLMN Setting** → [x7][Menu] → Select an item (See below)

Item	Operation/Description
Add your network	Save currently connected operator > [Finish] → YES
Add from list	> Select an operator → [Set] → Select a network type → [Finish] → YES ● To search operators by country/region: [Search] → Select a country/region (To search again in country/region list: [Search] → Enter a country/region name)
Direct input	Save unlisted operators by entering country/region code and operator code > Enter country/region code (3 digits) and operator code (2 to 3 digits) → Select a network type → [Finish] → YES
Change priority	> Select a priority → [Finish] → YES
Delete this/ Delete all	> YES → [Finish] → YES

■ View Operator Name in Standby

<Default> OFF

> **Operator Name** → ON or OFF

- When **ON** is set, Clock Position is set to **Pattern 1** even when **Pattern 2 - Pattern 12** is set (P.17-4).

Engaged Call Functions

Operations Available during a Voice Call

Adjust Volume	> [Volume] / [Up/Down] ● Adjust volume within two seconds. ● Adjusted volume is retained even after calls end or handset is turned off.
Place Call on Hold	> [Hold] ● To resume call: [Resume]
Speaker ON/OFF	Toggle Speaker or Earpiece > [Speaker]
Record Conversation	Record for about three minutes per call > Press and hold [Record] or [Rec] ● To end recording: [Stop], [CLR] or press and hold [Stop] ● To play back recorded data: P.2-15
Manner Mode ON/OFF	> Press and hold [#]

Operations Available during a Video Call

Adjust Volume	<p>> / </p> <ul style="list-style-type: none"> ● Adjust volume within two seconds. ● Adjusted volume is retained even after calls end or handset is turned off.
Place Call on Hold	<p>> [Hold]</p> <ul style="list-style-type: none"> ● To resume call:
Speaker ON/OFF	<p>Toggle Speaker or Earpiece</p> <p>> </p>
Record Conversation	<p>Record up to five calls for about 20 seconds each</p> <p>> Press and hold </p> <ul style="list-style-type: none"> ● To end recording: [Stop] or press and hold ● To play back recorded data: P.2-15
Camera/Alternative Image	<p>Toggle Camera Image and Alternative Image</p> <p>> [Image/Subst.]</p>
Incoming/Outgoing Image	<p>Toggle Incoming Image and Outgoing Image</p> <p>> [Change]</p>
Zoom	<p>> (zoom in) or (zoom out)</p>
Toggle Manner Mode	<p>> Press and hold #</p>
Backlight Setting	<p>> [Menu] → <i>Back light</i> → <i>Constant light</i> or <i>15 seconds light</i></p>
Video Call Setting	<p>> [Menu] → <i>V. Call settings</i> → Follow the steps for selected item (P.17-11)</p>
LCD AI	<p>Activate/deactivate auto image compensation</p> <p>> [Menu] → <i>LCD AI</i> → <i>ON</i> or <i>OFF</i></p>
















Account Details	> [Menu] → <i>Account details</i>
Key Guide	> [Menu] → <i>Key guide</i>

Call Log

Incoming and outgoing call records appear here. Use these records to call back.

Redial	Up to 30 records of dialed Voice Calls and Video Calls are saved. Older records of same number are deleted.
Outgoing Call Logs	Up to 30 records of dialed Voice Calls and Video Calls, and up to 30 records of 64K data and packet communication are saved. Older records of same number are also retained.
Incoming Call Logs	Up to 30 records of received Voice Calls and Video Calls, and up to 30 records of 64K data communication are saved. Older records of same number are also retained.

Indicators for Redial/Outgoing Call Logs/Incoming Call Logs

	Dialed/received Voice Calls		Dialed calls of 64K data communication
 *	Missed Voice Calls		Received calls of 64K data communication
	Dialed/received Video Calls	 *	Missed calls of 64K data communication
 *	Missed Video Calls		Dialed calls of packet communication
	New messages recorded on Answer Phone		Received calls of 64K data/packet communication when no external device is connected
	Dialed/received international Voice Calls		
 *	Missed international Voice Calls		
	Dialed/received international Video Calls		
 *	Missed international Video Calls		
 *	Calls received while handset is off, out-of-range, engaged, etc. (P.2-19)		


* Unchecked calls are highlighted.

Viewing Call Logs

1 Redial



 
Outgoing Call Logs

 → **Phone Book** → **Call Log**
→ **Outgoing Call Logs**

Incoming Call Logs



Records appear.

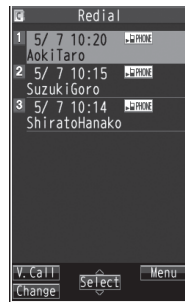


Redial

■ View Missed Calls

> **Main Menu** ► **Phone Book** ► **Call Log** ► **Incoming Call Logs**
► **Missed Calls**

● **Unknown Calls** appears in Call Log for unchecked calls.

Note

- When handset is closed, missed calls can be checked by  (Info Notice Setting: P.17-7).
- Newest record appears at top of list. Names appear if saved in Phone Book.
- Call Log records remain even if 832P is turned off.
- When the maximum number of records are saved, oldest is deleted first.
- Incoming Call Logs can also be opened from **Main Menu**
► **Phone Book** ► **Call Log** ► **Incoming Call Logs** ► **All Calls**


Making Calls from Call Log

1 Open Call Logs (☞P.2-13)


2 Voice Calls

Highlight a phone number or name → 

Video Calls

Highlight a phone number or name →  [V. Call]

International Calls

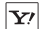Select a phone number or name →  [Menu] →



Int'l dial assist → Select a country/region →

 /  [V. Call]

Functions Available from Call Log

Highlight a call record and press  [Menu].

- Available functions vary by selected log/record.

Item	Operation/Description
Notify caller ID	Notify or withhold your Caller ID (☞P.2-3)
Prefix numbers	Add a prefix to phone number before dialing > Select an entry → 
Int'l dial assist	Add international dialing prefix > Select a country/region → 
Character size	Toggle font size
Add to Phone Book	Save number to Phone Book (☞P.4-5)
Ring time ¹	Show ring time (missed calls)
Add shortcut icon	Create a shortcut (☞P.1-17)
Compose S! Mail	Create S! Mail (☞From Step 4 on P.13-4)
Compose SMS ²	Create SMS (☞From Step 4 on P.13-7)
Received address/Sent address	Show Received/Sent address log
Delete this/ Delete selected/ Delete all	> Delete record(s) in selected list

¹ Available only for Incoming Call Logs

² Message can be sent to SoftBank handsets only

 
Answer Phone

Record up to five voice messages for Voice Calls or up to two for Video Calls (up to 20 seconds per message) on 832P.

- When Answer Phone is active, - (Voice Call) or - (Video Call) appears in Standby.
- Unavailable when: handset is off or in Emission OFF Mode; appears. Use Voice Mail (P.2-18).

Activating/Canceling Answer Phone

- 1 Press and hold
 - To cancel: Press and hold again.

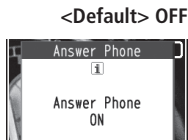

Redirect a Call to Answer Phone

> [Ans. Ph] or

Note

- Alternatively, activate/cancel from **Main Menu** ► **Tools** ► **Sound Recorders** ► **Answer Phone Setting** ► **ON** or **OFF**
- When full, new messages cannot be recorded even if Answer Phone is activated. Delete old messages.

Playing Messages

When a new message is recorded, Event Indicator appears (P.1-16) in Standby.



- 1 Select indicator
- 2 Select a message
Playback starts.
After playback ends, indicator disappears.

Note

- Alternatively, press in Standby (for Voice Call messages) or **Main Menu** ► **Tools** ► **Sound Recorders** ► **Voice Call Data** or **Video Call Data** ► Select a recording

Play Recorded Caller's Voice/Video

Main Menu ► **Tools** ► **Sound Recorders** ► **Voice Call Data** or **Video Call Data** ► **Call Data**

Answer Phone Functions

From ► Main Menu ► Tools ► Sound Recorders


Select Outgoing Message/Set Ring Time

> **Answer Phone Setting** → **ON** → Select a message → Enter ring time

- When Answer Phone and Voice Mail or Call Forwarding are both active, function with shorter ring time takes priority.

For example, if Answer Phone ring time is 18 seconds and Optional Service is 20 seconds, Answer Phone responds first (Priority may change due to signal conditions.).

Delete Recorded Call Data







> **Voice Call Data** or **Video Call Data** → (Highlight an item) →  [Menu] → **Erase this, Erase rec. msg., Erase Call Data*** or **Erase all** → **YES**

* **Video Call Data** only

Optional Services

Overview

- For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Call Forwarding  P.2-17	Forward unanswerable calls to a preset number when handset is off, out-of-range, etc.
Voice Mail  P.2-18	Unanswered calls are forwarded to Voice Mail Center as set or when handset is off, out-of-range, engaged, etc. <ul style="list-style-type: none"> ● Missed Call Notification ( P.2-19)
Call Waiting*  P.2-19	Place the current call on hold and answer a second, or alternate between calls.
Call Barring  P.2-20	Restrict calls by condition. <ul style="list-style-type: none"> ● While Call Forwarding or Voice Mail Service is active, Bar All Outgoing and Bar All Incoming are not available (Call Forwarding or Voice Mail Service is prioritized.).
Caller ID  P.2-21	Show or hide your number when calling.


* Separate subscription required.

Call Forwarding

- Call Forwarding and Voice Mail cannot be set simultaneously.
- When forwarding Video Calls, set a destination phone that supports 3G-324M standard video calls. If not, Video Calls are not forwarded.

Activating Call Forwarding

Main Menu ► Settings ► Call Settings
► Voice Mail/Call Fwding ► Call Forwarding ON

- 1 Select a type
- 2 Enter a destination phone number
 -  to select number from Phone Book.
- 3 Select an item (See below)

Item	Operation/Description
Ringer ON	Forward missed calls > Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating > YES



Check Call Forwarding Status

> Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Get Status

Cancel Call Forwarding

> Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Deactivate All ► YES

Note

- Toll free numbers and international call numbers cannot be saved as a destination number.
- When using Call Forwarding together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal conditions.).
- When **Ringer ON** is set while 832P is ringing/vibrating (within ring time), the following operations are available:
 - To answer call: 
 - To forward call:  [Menu] → Call Forwarding

Voice Mail

- Calls are forwarded to Voice Mail Center via Call Forwarding function; Call Forwarding and Voice Mail cannot be set simultaneously.
- Voice Mail is not available for Video Calls.

Activating Voice Mail

Main Menu ► Settings ► Call Settings
► Voice Mail/Call Fwding ► Voice Mail ON

- 1 Select an item (See below)

Item	Operation/Description
Ringer ON	Forward missed calls > Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating > YES



■ Check Voice Mail Status

> Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Get Status

■ Cancel Voice Mail

> Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Deactivate All ► YES


Note

 
- When using Voice Mail together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal conditions.).
- When **Ringer ON** is set while 832P is ringing/vibrating (within ring time), the following operations are available:
 - To answer call: 
 - To forward call:  [Menu] → Call Forwarding

Checking Voice Mail Messages

Event Indicator ( P.1-16) and  appear in Standby when new messages are recorded.

- 1  → Select indicator → YES

- Follow voice guidance.
- Indicator and  disappear after messages are checked.

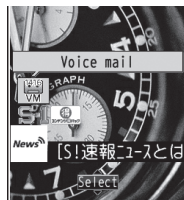

■ View Details

View callers' phone numbers and date/time Voice Mail messages were left before playing messages.

- Activate **Missed Call Notification** beforehand.

>  → Voice Mail Notif. →  [1416]

■ Delete Indicator

> Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Delete Voice Mail Icon ► YES

Note

- Alternatively, follow these steps to check Voice Mail:
Main Menu ► **Settings** ► **Call Settings**
 ► **Voice Mail/Call Fwding** ► **Listen to Voice Mail** ► **YES**

Missed Call Notification

When Missed Call Notification function is active, Event Indicator appears for calls missed while 832P was off, out-of-range, engaged etc.

- Available only when Voice Mail is active.

Main Menu ► **Settings** ► **Call Settings** ► **Missed Call Notifi.**

 
1 YES

832P connects to the Network.

- Follow voice guidance.

When Calls are Received while Missed Call Notification is Active...

Event Indicator appears for missed calls when 832P is turned on or comes into range. Select indicator to view Missed Calls.



- **Voice mail** indicator appears when Voice Mail messages are recorded (P.2-18).

Call Waiting

Activating/Canceling Call Waiting

Main Menu ► **Settings** ► **Call Settings** ► **Call Waiting**

1 *Activate* or *Deactivate* → YES




Current status appears.

■ Check Call Waiting Status

> **Main Menu** ► **Settings** ► **Call Settings** ► **Call Waiting**
 ► **Get Status**

Answering Second Call

1 When tone sounds,

-  to alternate between calls.
-  to disconnect active call.
- When the party hangs up, active call ends.
-  to re-engage the party on hold.
- When a second call comes in while first call is on hold, hold status is canceled and first call resumes.

■ Reject Second Call

> When tone sounds,  [Menu] → *Call Rejection*

Note

- When Voice Mail or Call Forwarding is set to **Ringer ON** while Call Waiting is active, unanswered calls are transferred to Voice Mail Center or the forwarding number.
- When Voice Mail or Call Forwarding is set to **Ringer OFF**, Call Waiting is disabled.

Call Barring

- Security Code is required (☞P.1-24).

Activating/Deactivating Call Barring

Main Menu ► **Settings** ► **Call Settings** ► **Call Barring**

- 1 Select an item (See below)

Item	Operation/Description
Bar All Outgoing	Restrict all non-emergency calls
Bar All Int'l	Allow only domestic calls
Bar Int'l	Restrict all international calls except to Japan
Bar All Incoming	Reject all calls
Bar All Roaming	Reject calls when outside Japan

- 2 **Activate or Deactivate** → **YES**

- 3 Enter Security Code

Check Call Barring Status

> After Step 1, **Get Status**

Cancel All Call Barring

> In Step 1, **Cancel All Barring** → Enter Security Code

Change Security Code

> In Step 1, **Set Security Code** → Enter current Security Code → Enter new Security Code → Reenter Security Code

Note

- Emergency numbers (110, 119, 118) are dialable even while Call Barring for outgoing calls is active.
- If call is attempted when Call Barring is active, warning message appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.

Caller ID

<Default> Network Set

Main Menu ► Settings ► Call Settings
► Show My Number ► Activate

1 *ON, OFF* or *Network Set*

- *Network Set* Caller ID setting varies by subscription.

■ Check Caller ID Status

> Main Menu ► Settings ► Call Settings ► Show My Number
► Check Setting

Note

- Alternatively, enter these numbers/symbols before the phone number to show or hide Caller ID:

Show: 1 8 6 or * 3 1 #

Hide: 1 8 4 or # 3 1 #

