

Music Player

Overview	8-2
Saving Music	8-2
Downloading Chaku-Uta Full®	8-3
Saving Music Files by Using SD Audio	8-3
Transferring WMA Files	8-4
Using Music Player	8-5
Playback Window Indicators	8-5
Playing Music	8-6
Playback Window Operations	8-7
Functions while Playing Files	8-8
Chaku-Uta Full®/WMA List	8-9
Using Play List	8-10
Play List	8-11

Overview

Play music saved on 832P/microSD Card.

- Play List: [☞P.8-10](#)

Notes

- Files may not play due to file support issues or microSD Card status, etc.
- When battery is low, Music Player cannot play files.
- When battery is low during playback, confirmation appears.
- Playback pauses for incoming calls or Alarm. Playback resumes after calls are received or Alarm sounds.

Music Illumination

- Notification Light illuminates when playback starts. When playback starts during charging, Music Illumination lights before Charging Indicator.
- To turn off light, set **Music** to **OFF** in Notification Light setting ([☞P.17-9](#)).

Note

- Use earphone when listening to music.

Saving Music

Save Music to play on Music Player.

Download Chaku-Uta Full® (☞P.8-3)	Open site link to download and save songs Supported file format: SMC, MPEG-4 (MPEG-4 AAC, MPEG-4 AAC+ (HE-AAC), Enhanced aacPlus)
Save Music via SD Audio (☞P.8-3)	Save music CD songs via PC to microSD Card in AAC format Supported file formats: MPEG-2 AAC, MPEG-2 AAC+SBR
Save WMA files (☞P.8-4)	Save Windows Media® Audio (WMA) files in PC to microSD Card via Windows Media® Player Supported file formats: WMA

- Some files may not play even if format is supported.
- Copy protected files do not play after license expiry (Content Key: [☞P.9-5](#)).

Copy Protected Files

Copy protected files may not play, be saved or forwarded.

To play a copy protected file, obtain Content Key ([☞P.9-5](#)).

Confirm file expiry date or usage limitations (Music info: [☞P.8-8](#)).

Saving Music Files on PCs

When saving music files to microSD Card via PC or other devices for use with 832P, observe the following guidelines:

- Copyrighted Works
 - Do not infringe on third party/intellectual property rights.
 - microSD Card music files are limited to private use.
- Obtain software to convert file format.
 - Refer to websites providing software.
 - Performance of some software types is not guaranteed.

Downloading Chaku-Uta Full®

Access websites directly from Music Player to download Chaku-Uta Full® files.

- View details (price, expiry date, etc.) on source website.

Main Menu ▶ Music Player ▶ Data Manager ▶ Main Folder ▶ Download Music

1 YES

832P connects to the Network and Download site appears.

- Follow onscreen instructions to download files.

Note

- Alternatively, follow these steps to access Download site:

Main Menu ▶ Data Folder ▶ Music ▶ Main Folder ▶ Download Music ▶ YES

Saving Music Files by Using SD Audio

Note

- Saving music files requires following:
 - 832P
 - microSD Card (commercial item)
 - USB cable (not included)
 - PC (Windows® 2000, Windows® XP, Windows Vista®)
 - Software for PC (commercial item)
 Panasonic brand "SD-Jukebox" is recommended. Purchase SD-Jukebox from website below:
<http://club.panasonic.jp/mall/sense/> (Japanese only)
- Music CD to save

Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode ▶ microSD Mode

- 1 Connect 832P to a PC via USB cable
- 2 Activate SD-Jukebox on PC
- 3 Set a music CD on PC
- 4 Save music files to micro SD card
 - See SD-Jukebox manual for usage information.
 - After saving, release USB cable from 832P.

Transferring WMA Files

Transfer WMA files from PC to microSD Card via Windows Media® Player. Up to 600 files can be saved per microSD Card.

- Use PC with Windows Media® Player installed.
- When using Windows Media® Player 10 (10.00.00.3802 or later)/11 on Windows® XP, use Windows® XP Service Pack 2 or later.
- When using Windows Vista®, use Windows Media® Player 11.
- Have USB cable ready (Transferring Data via USB Cable: ☞P.10-6)
- Insert microSD Card into 832P beforehand.

Main Menu ► Settings ► Connectivity ► USB Mode
► MTP Mode

1 Connect 832P to a PC via USB cable

Follow Windows Media® Player operations to transfer WMA files from PC to microSD Card.

 
- Refer to Windows Media® Player Help for operations.
- Terminate all software applications before releasing USB cable.

Note

- Do not remove microSD Card while transferring files to microSD Card. Files may be damaged.
- WMA files overwrite existing files with same name in handset when copied from PC. To check file names, refer to Windows Media® Player Help.
- 832P may not recognize WMA files saved to a microSD on a different handset. Handset may not recognize WMA files from PCs if **USB Mode** is set to **MTP Mode**. Delete WMAudio and WMSystem folders in My Items (MY FOLDER) on microSD, or format microSD Card (☞P.9-17) via PC. Formatting microSD deletes all saved files.
- When saving WMA files to microSD Card without using Windows Media® Player, create a folder on microSD Card.

Using Music Player

Playback Window Indicators

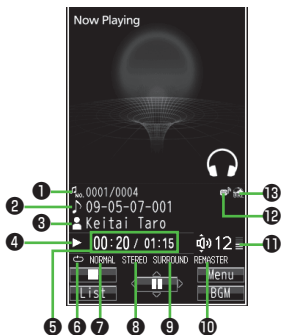

Item	Description
1	File Number/Total Number —
2	Title —
3	Artist —
4	Status —
5	Elapsed Time/Total Time —
6	Play Mode Indicators Play only one Repeat one Repeat all Random Random play&repeat DEMO DEMO
7	Equalizer Setting NORMAL Normal H.BASS1 H.BASS1 H.BASS2 H.BASS2 TRAIN Train
8	Stereo/Monaural STEREO Stereo MONO Monaural
9	Listening Setting SURROUND Surround-sound NATUR1 Natur 1 NATUR2 Natur 2
10	Remaster Setting ON —
11	Volume —
12	Lyric —
13	URL —

 
Playing Music

Main Menu ► Music Player

1 **Player**

Player Menu window appears.

- Last playback window appears.
To open Player menu: [CLR] twice.

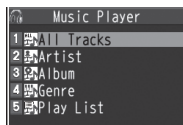

Player Menu Window

2 Select a category (See below)

Item	Operation/Description
All Tracks	Select files from 832P & microSD Card
Artist	Select files from Artist folder
Album	Select files from Album folder
Genre	Select files from Genre folder
Play List	Select group of files saved to Play List

- "★" appears for currently/previously played Play List.

3 Select a file

Selected file plays.

- "★" appears for currently/previously played file.
- Playback Window Operations: ↵P.8-7
- To end playback, [] [] []

Note

- mp4/3gp files in Ring Songs&Tones folder can also be played in Music Player.
- When playing back files with handset closed, missed calls or new messages cannot be checked by [] even if **Info Notice Setting** (↵P.17-7) is **ON**.

Changing Play Mode

Main Menu ► Music Player

1 **Player**

Player Menu window appears.

- Last playback window appears. To open Player menu: [CLR] twice.

2 [Y?] [Menu] → **Play mode setting**

3 Select an item (See below)

Item	Operation/Description
Normal	Play all files in selected category/Play List
Play only one	Play selected file
Repeat one	Repeat selected file
Repeat all	Repeat all files in selected category/Play List
Random	Play selected category/Play List files randomly
Random play&repeat	Repeat selected category/Play List files randomly

Using Other Functions while Listening to Music (Play Background)

Use Phone Book, Messaging, Internet, etc. while listening to music.

- 1 While playing file, [BGM]
- 2 To end, in Standby → *End player*

Note

- Some functions cannot operate simultaneously.
- Volume or play mode change is not available during Play Background.

Playing Chaku-Uta Full®/WMA Files as Demo

Main Menu ► Music Player ► Data Manager

- 1 Select an item (See below)

Item	Operation/Description
Main Folder	View Chaku-Uta Full® list ➤ Select a folder <ul style="list-style-type: none">● To view file list in handset/microSD Card: [Phone/microSD]
WMA	View WMA list

- [Change] to toggle display view in Chaku-Uta Full® and WMA list.
- 2 Select a Chaku-Uta Full® or WMA file
Demonstration playback starts.


Playback Window Operations

Adjust Volume	or
Play Previous*	or press and hold <ul style="list-style-type: none">● When playback time is over three seconds, previous file plays from beginning.
Play Next*	or press and hold
Rewind	Press and hold
Forward	Press and hold
Pause/Resume	[/]
Stop	[]
View Next Jacket/Lyric	[3]
View Previous Jacket/Lyric	[1]
Switch Jacket/Lyric Display	[2]
Switch Playlist/Playback Window*	[List/Player]
Play Background*	[BGM]
Switch Remaster (↵P.8-8)	[9]
Switch Listening (↵P.8-8)	[8]
Switch Equalizer (↵P.8-8)	[7]

* Not available for playback as a demo

Functions while Playing Files



■ Set Sound Effect

> While playing file,  [Menu] → **Sound effect** → Select an item (See below)

Item	Operation/Description
Remaster	Complement sound from earphone to bring close to original sound > ON or OFF
Listening	Add listening effect to sound from earphone > Select an item <ul style="list-style-type: none"> · Surround-sound: Reproduce natural and stereophonic sound · Natur 1 or Natur 2: Complement sound specific to earphone to reproduce natural sound · OFF: Turn off Listening setting
Equalizer	Change quality of sound from earphone > Select an item <ul style="list-style-type: none"> · Normal: Reproduce normal sound · H. BASS1: Enhance low-pitched sound · H. BASS2: Enhance low-pitched sound even more · Train: Minimize sound leakage

■ Functions Available in Playback Window

> While playing file,  [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Show Player menu
Play mode setting	Change play mode ( P.8-6)
Sound effect	( Left)
Music info	Show song title, artist and playback time
Connect to Website	Open site link > YES
Display image/ Display lyric	Show jacket or lyric
Previous image/ Previous lyric	Show previous jacket or lyric
Next image/ Next lyric	Show next jacket or lyric

Chaku-Uta Full®/WMA List

From **Main Menu** **Music Player** **Data Manager**

■ Confirm Memory Status

> [Menu] → *Memory Status*

■ Functions Available in Chaku-Uta Full® Folder List

> *Main Folder* → Highlight a folder → [Menu] → Select an item
(See below)

Item	Operation/Description
Add folder	> Enter folder name
Edit folder name	> Enter folder name
Delete folder	> Enter Phone Password → YES
Memory Status	> Confirm memory status/total files

■ Functions Available in Chaku-Uta Full®/WMA File List

> *Main Folder* or *WMA* (→ Select a folder) → Highlight a file →
 [Menu] → Select an item (See below)

Item	Operation/Description
Set as ring tone (Fullsong ring tone) ¹	Set Chaku-Uta Full® as ringtone > <i>Fullsong ring tone</i> → Select an item
Set as ring tone (Point ring tone) ¹	Set a segment of Chaku-Uta Full® as ringtone > <i>Point ring tone</i> → Select a segment → Select an item ● To confirm segment: [Play]
Music info	Show song title, artist and playback time
Move ¹	> Select a storage

Item	Operation/Description
Move to microSD ¹	Move a Chaku-Uta Full® to microSD Card
Add folder ¹	> Enter folder name
Multiple-choice ¹	Select multiple Chaku-Uta Full® > Check Chaku-Uta Full® → [Menu] → Delete , Move or Send Ir data → Operate selected item
Connect to Website ¹	Open site link > YES
Display image	Show jacket
Memory Status	Memory status/total number of files appears
DEL all licenses ²	Delete all WMA licenses > Enter Phone Password → YES
Delete this	> YES
Delete all	Delete all files in folder > Enter Phone Password → YES
Attach to S! Mail ¹	Send a file via S! Mail (📧 From Step 2 on P.13-4)
Send Ir data ¹	(📧 P.10-3)
IC transmission ¹	(📧 P.10-5)
Take contents key ¹	(📧 P.9-5)

¹ Chaku-Uta Full® files only

² WMA files only

Using Play List

Use **Play List** to organize **Data Folder** music files. Select **Music** folder files to create **Play List** links to each file in its original folder.

Creating New Play Lists

- Maximum number of Play Lists to create and songs to save is as follows:
 Combined Play Lists: 30 Play Lists; 100 songs per list
 WMA Play Lists: 100 Play Lists; 250 songs per list
 SD Audio Play Lists: 99 Play Lists; 99 songs per list

Main Menu ► Music Player

1 *Player*

 
Player menu appears.

- Last playback window appears. To open Player menu: **[CLR]** twice

2 *Play List* → **[Y?]** **[Menu]** →

Create play list → Select a category and show file list → Check files to save to Play List →

[Finish]

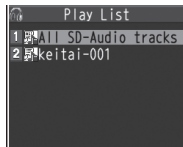

Play Lists Window

3 Enter a Play List name

Playing Songs from Play List

Main Menu ► Music Player

 
1 *Player*

Player menu appears.

- Last playback window appears. To open Player menu: **[CLR]** twice

2 *Play List* → Select a Play List

- To play back selected Play List from the beginning: **[Play]**

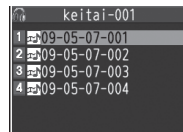

Play List Contents Window

3 Select a file

Selected file plays back.

Note

- mp4/3gp files in Ring Songs&Tones folder can also be added to Play List.

Play List

From ► Main Menu ► Music Player ► Player ► Play List

Functions Available in Play Lists Window

> (Highlight a Play List) [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Open Player menu
Play mode setting	Change play mode (☞P.8-6)
Create play list	Create a new Play List (☞P.8-10)
Copy play list	Copy a Play List > Enter a Play List name
Edit pl. list name	Edit a Play List name > Edit Play List name
Add	Add files to a Play List > Select a category, and show file list → Check files to add → [Finish]
Delete play list	> Select an item → Operate selected item

Functions Available in Play List Contents Window

> Select a Play List → (Highlight a file) → [Menu] → Select an item (See below)

Item	Operation/Description
Player menu	Open Player menu
Play mode setting	Change play mode (☞P.8-6)
Music info	Show song title, artist and playback time
Add	Add files to a Play List > Select a category, and show file list → Check files to add → [Finish]
DEL from play list	Delete files from Play List > Select an item → Operate selected item
Order to play	> Select a file from a Play List to change playing order → to change order → [Select] ● Repeat steps above to change order → [Set].
Add to play list	Add files to another Play List > Add one or Add some (→ For Add some , check files → [Finish]) → Select a Play List
Display image	Show jacket

