

# Managing Files

<b>Data Folder</b> .....	<b>9-2</b>
Data Folder Structure .....	9-2
<b>Opening Files</b> .....	<b>9-4</b>
Viewing & Playing Files .....	9-4
File Display/Playback Functions .....	9-6
Options .....	9-7
<b>Using/Editing Still Images</b> .....	<b>9-12</b>
Editing Still Images .....	9-12
Creating Animations .....	9-13
Saving Still Images to Phone Book .....	9-13
<b>Managing Folders/Files</b> .....	<b>9-14</b>
Managing Folders .....	9-14
Using Play List .....	9-14
<b>microSD Card</b> .....	<b>9-15</b>
microSD Card Installation .....	9-16
Format microSD Card .....	9-17
Viewing microSD Card Files .....	9-17
Handset Data Backup .....	9-18
PC File Transfers .....	9-19
microSD Card Functions .....	9-20

## Data Folder

Save, play and manage files downloaded from Internet, etc.


- Access websites directly from Pictures, My pictograms, Ring Songs&Tones, S! Appli, Music, Videos, Lifestyle-Appli, Books, Customized Screen and Templates folders, and download files to 832P.

### Data Folder Structure

Folder		Function/Saved Data	File Format <sup>1</sup>	
Pictures	Download Pictures		JPEG, GIF (.gif including Interlaced GIF), GIF Pictogram Package File (.gpk), SWF (.swf Flash Animation), PNG (.png including Interlaced PNG)	
	Main Folder			
	Camera			
	My Pictograms	Download My Pict.		Connect to download site
		お気に入り		Downloaded pictograms, etc.
		顔文字, 装飾, etc.		Preinstalled pictograms
	Mail Art	Mail Art (download)		Connect to download site
	Pre-installed			Preinstalled still images
Original Animation		Display still images continuously		
microSD <sup>2</sup>		Still images captured by Camera or copied/moved from SoftBank handsets		
Ring Songs&Tones	DL Ring Songs&Tones		SMF, SP-MIDI, AMR, SMAF, MPEG-4 formatted files (.mid, .midi, .amr, .mmf, .3gp, .mp4)	
	Main Folder			
	Pre-installed			
	Voice Announce			
	Play List			
	microSD <sup>2</sup>			Ring songs/tones copied/moved from SoftBank handsets
S! Appli	Download S! Appli		—	
	microSD <sup>2</sup>			
Music	Main Folder	Download Music	MP4, SMC, WMA (.3gp, .mp4, .smc, .wma)	
		Music Search		
		Initial Folder		
		microSD <sup>2</sup>		
	WMA <sup>3</sup>	WMA Files transferred from PC		

Folder		Function/Saved Data	File Format <sup>1</sup>
<b>Videos</b>	Download Videos	Connect to download site	MP4 (including .mp4, .3gp, SDV), ASF (.asf)
	Main Folder	Downloaded video files, etc.	
	Camera	Video files recorded by Camera	
	Pre-installed	Preinstalled video files	
	Play List	Play back Play List	
	Position Memory	Play back video files from saved resume position	
	microSD <sup>2</sup>	Video files recorded by Camera or copied from SoftBank handsets	
<b>PC Movies</b>	microSD <sup>3</sup>	PC movies saved using PC	WMA (.wma), WMV (.wmv), ASF (.asf)
	Position Memory	Play back PC movies from saved resume position	
	Play History	Playback records of PC movies	
<b>TV</b>	Image	Still images recorded by Digital TV	JPEG (.jpg)
	Video <sup>3</sup>	Copy-protected video files (One-Seg compatible)	TOD (.tod), MOI (.moi), MAI (.mai), PGI (.pgi)
	Position Memory	Play back video files from saved resume position	
<b>Lifestyle-Appli</b>	Download	Connect to download site (Osaifu-Keitai®: P.16-2)	–
<b>Books</b>	Download Books	Connect to download site	CCF (.ccf), XMDf (.zbf, .zbx, .zbs)
	microSD <sup>2</sup>	E-Books downloaded or moved from SoftBank handsets	
<b>Customized Screen</b>	Customized Screen	Connect to download site	CUSR (.xcsf)
	Familiar Usability		UIE (.uie)
	microSD <sup>2</sup>	Customized Screen/Familiar Usability downloaded or moved/ copied from SoftBank handsets	CUSR (.xcsf), UIE (.uie)
<b>Templates</b>	Download Templates	Connect to download site	–
<b>Other Documents</b>	Main Folder	Incompatible files attached to mail <sup>4</sup>	–
	microSD <sup>2</sup>	Incompatible files downloaded or copied from SoftBank handsets	

<sup>1</sup> Some copy protected files have extensions different from above.

<sup>2</sup> When microSD Card is installed, press  [microSD] in Folder list.




<sup>3</sup> Available only when microSD Card is installed.

<sup>4</sup> Some attachment files cannot be saved in Other Documents.

## Using Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key (P.9-5) may be required for usage.

See file information to confirm restrictions such as expiry term or usage limitation (Respective file information in "Options": P.9-7).

-  or  (Silver) appears for copy protected files requiring Content Keys.  files are inaccessible.
- Files downloaded on 832P cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- 832P holds up to 1000 Content Keys. Multiple Keys may be required to use a file. Expired Keys are deleted automatically.
- Interrupted playback (by incoming calls or Alarm) of copy protected WMA files with limited usage in Data Folder is also counted as one usage.

## Opening Files

### Viewing & Playing Files

#### Main Menu ► Data Folder

#### 1 Select a folder

- In Folder List, press  to toggle handset folder and microSD Card folder.



#### Pictures Folder

#### 2 Select a folder → Select a file

File appears/plays.

- To toggle file list view:  [Change]









#### Still Image List Window

#### When Shortcut to a Download Site is Selected

Handset connects to a download site on Internet.

#### Operations while Playing Back Ring Songs&Tones

Stop	 [Stop]
Volume*	 / 
Attach files (during playback) to S! Mail	 [  ]

\* To use  with handset closed, set **Info Notice Setting** (P.17-6) to **OFF**.

## Videos/PC Movies Playback Operation

- Some operations are not available depending on files.

Adjust Volume	or
Play Previous	 ● Starts from beginning when playback time is over three seconds.
Play Next	
Rewind <sup>1</sup>	Press and hold
Forward <sup>1</sup>	Press and hold
Select Position <sup>2</sup>	repeatedly
Change Speed	[  /  /  ]
Mute/Resume	[  /  ]
Pause/Resume	[  /  ]
Play Frame by Frame <sup>1</sup>	While pausing,  [Frame] ● Play back frame by frame
Switch Portrait/Landscape View (Full Screen)	
Remaster (P.8-8)	<input type="text" value="9"/>
Listening (P.8-8)	<input type="text" value="8"/>
Equalizer (P.8-8)	<input type="text" value="7"/>

<sup>1</sup> Videos only

<sup>2</sup> PC Movies only

### Tip

- File Display/Playback Functions (P.9-6)

## Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, select **YES**. 832P connects to Content Key site.

- Copy Protected Files: P.9-4
- or (Silver) appear for files requiring Content Keys. files are inaccessible. appears on images in Thumbnail view of expired files (Original icon appears for Books folder.).

### Note

- Alternatively, obtain Content Key as follows: Highlight a file → [Menu] → **Take contents key**
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (Connection fees apply).

## File Display/Playback Functions

### Enlarge Still Images

> **Main Menu** ► **Data Folder** ► **Pictures** ► Select a folder ► Select a file ► [Menu] ► **Display size** ► **Fit in display**

### Play Back from a Resume Position

> Resume playback (videos/PC Movies) from a saved position.

**Main Menu** ► **Data Folder** ► **Videos** or **PC Movies**

► **Position Memory** ► Select an item

- Save a resume position:
- **Marker to resume** is a resume position automatically saved when a call comes in, alarm goes off, battery runs low, or playback is terminated.

### Functions Available in Video/PC Movie Playback Window

- Some operations are not available depending on files.
- > While playback is paused, [Menu] → Select an item (See below)

Item	Operation/Description
<b>Normal play</b> <sup>1</sup>	Play at normal speed
<b>Slow</b> <sup>1</sup>	Play at slow speed
<b>Quick View (1.25x)</b> <sup>1</sup>	Play 1.25 times faster than normal
<b>Quick View(2x)</b> <sup>1</sup>	Play at double speed
<b>Fast</b> <sup>2</sup>	Forward
<b>Rewind</b> <sup>2</sup>	Rewind
<b>Stop</b>	Return to Videos/PC Movies List window
<b>Position to play</b>	Start playback from specified point >  to highlight a play point →  [Set]
<b>Connect to Website</b> <sup>1</sup>	Open site link > <b>YES</b>

Item	Operation/Description
<b>Sound effect</b>	<b>Remaster, Listening</b> or <b>Equalizer</b> (P.8-8)
<b>Contents info</b> <sup>2</sup>	Show title, file name, etc.
<b>Position memory</b>	Save resume position > Select a resume position ● To play back from a saved position:
<b>Attach to S! Mail</b> <sup>1</sup>	Send file via S! Mail (From Step 2 on P.13-4)
<b>Register (Ringtones)</b> <sup>1</sup>	Set as ringtone > <b>Ringtones</b> → Select a type ● "★" is added to item set as ringtone.
<b>Register (Start-up Window)</b> <sup>1</sup>	Save a file as Start-up Window > <b>Start-up Window</b> → <b>YES</b>
<b>Video info</b> <sup>1</sup>	Show title, file name, etc.
<b>Send Ir data</b> <sup>1</sup>	Send file via Infrared (P.10-3)
<b>IC transmission</b> <sup>1</sup>	Send file via IC transmission (P.10-5)
<b>Add shortcut icon</b> <sup>1</sup>	Create a shortcut (P.1-17)
<b>Description</b> <sup>2</sup>	Show file information > <b>The words view</b> or <b>Description view</b>
<b>Copy URL</b> <sup>2</sup>	Copy URL
<b>Display size</b>	Select a display size > <b>Actual size</b> or <b>Fit in display</b>
<b>Play on full disp.</b> <sup>1</sup>	Switch to Landscape View. Full screen playback starts ● To toggle views:

<sup>1</sup> Video files only

<sup>2</sup> PC movies only

## Options

### Copy Protected Files



- When set as wallpaper or ringtone, settings may return to defaults if license has expired or different USIM Card is inserted.
- Limited use files cannot be set as wallpaper or ringtone.

Highlight a file in Data Folder →  [Menu] for the following operations.

- Some functions may not be available depending on files.

### Pictures

Item	Operation/Description
<b>Edit picture</b>	Edit files (☞P.9-12)
<b>Display picture</b>	Open files
<b>Set display*</b>	Set as wallpaper, Phone Book image, Menu Icons, etc. > Select an item • "★" is added to item.
<b>Picture info</b>	Show file name, file size, etc.
<b>Attach to S! Mail</b>	Send files via S! Mail (☞From Step 2 on P.13-4)
<b>Graphic mail</b>	Add selected files to Graphic Mail (☞P.13-5)
<b>Send Ir data</b>	Send files via Infrared (☞P.10-3)
<b>IC transmission</b>	Send files via IC transmission (☞P.10-5)
<b>Add shortcut icon</b>	Create shortcuts (☞P.1-17)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Positioning</b>	Set where to paste files in Standby > Select a position

Item	Operation/Description
<b>Edit file name</b>	Edit file names
<b>Move</b>	Move files to other folders
<b>Slideshow</b>	Show files in a folder continuously. Select display speed > <b>Normal</b> or <b>Slow</b>
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use →  [Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order
<b>Pictures/ File names</b>	Toggle list view • Alternatively,  [Change] to toggle
<b>Take contents key</b>	Connect to site for Content Key

\* Before setting a file as Video Call related item (except for Incoming/ Outgoing Video Calls), set **Select Images** to **Original** (Change Outgoing Alternative Image: ☞P.17-10).

To set a file as Menu Icon related item, set **Menu Icons** to **Customize** (☞P.17-4).

- If incoming calls arrive or handset is turned off while My Pictograms package file (.gpk) is being uncompressed, some pictograms in package file may not open. Retry uncompressing.

### Tip

- Enlarge Still Images (👉P.9-6)
- Editing Still Images (👉P.9-12)
- Creating Animations ● Saving Still Images to Phone Book (👉P.9-13)

### Ring Songs&Tones

Item	Operation/Description
<b>Edit file name</b>	Edit file names
<b>Play melody</b>	Play back files
<b>Set as ring tone</b>	<ul style="list-style-type: none"> <li>&gt; Set as ringtone</li> <li>● "★" is added to item.</li> </ul>
<b>Add shortcut icon</b>	Create shortcuts (👉P.1-17)
<b>Attach to S! Mail</b>	Send files via S! Mail (👉From Step 2 on P.13-4)
<b>Send Ir data</b>	Send files via Infrared (👉P.10-3)
<b>IC transmission</b>	Send files via IC transmission (👉P.10-5)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Song-Tone info</b>	Show titles, file names, etc.
<b>Memory Status</b>	Show memory information

Item	Operation/Description
<b>Delete</b>	<ul style="list-style-type: none"> <li>&gt; Select a type               <ul style="list-style-type: none"> <li>· <b>Delete this</b> → YES</li> <li>· <b>Delete select</b> → Check files to delete → ☑[Finish] → YES</li> <li>· <b>Delete all</b> → Enter Phone Password → YES</li> </ul> </li> </ul>
<b>Sort</b>	Change display order of files > Select an order
<b>Move</b>	Move files to other folders
<b>Move to microSD</b>	Move files to microSD Card
<b>Take contents key</b>	Connect to site for Content Key

### S! Appli/Lifestyle-Appli

Item	Operation/Description
<b>Start</b>	Activate S! Appli or Lifestyle-Appli
<b>Security level</b>	Set security level (👉P.15-4)
<b>S! Appli info</b>	Show file names, file sizes, etc.
<b>Add shortcut icon</b>	Create shortcuts (👉P.1-17)
<b>Move to microSD</b>	Move files to microSD Card (Lifestyle-Appli cannot be moved)
<b>Delete</b>	Delete files > YES

### Music

- See "Functions Available in Chaku-Uta Full®/WMA File List" (👉P.8-9)



## Videos

Item	Operation/Description
<b>Register</b>	Set as ringtones or Start-up display
<b>Video info</b>	Show titles, file names, etc.
<b>Attach to S! Mail</b>	Send files via S! Mail (☞P.13-4)
<b>Send Ir data</b>	Send files via Infrared (☞P.10-3)
<b>IC transmission</b>	Send files via IC transmission (☞P.10-5)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Move</b>	Move files to other folders
<b>Add shortcut icon</b>	Create shortcuts (☞P.1-17)
<b>Edit file name</b>	Edit file names
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use → [Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order
<b>Listing</b>	Change list view ● [Change] to toggle views
<b>Take contents key</b>	Connect to site for Content Key

## PC Movies

Item	Operation/Description
<b>Contents info</b>	Show titles, file names, etc.
<b>Move</b>	Move files to other folders
<b>Copy</b>	Copy files to other folders
<b>Multiple-choice</b>	Select multiple files to use > Check files to use → [Menu] → Select an item
<b>Comment view</b>	Show descriptions
<b>Memory Status</b>	Show memory information
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>

## TV

- See Pictures folder for still images.

Item	Operation/Description
<b>Edit title</b>	> Enter titles
<b>Video info</b>	Show titles, channel names, etc.
<b>Add shortcut icon</b>	Create shortcuts (☞P.1-17)
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete selected</b>	> Check files to delete → [Finish] → <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Memory Status</b>	Show memory information
<b>Listing</b>	Change list view ● [Change] to toggle views

## Books

Item	Operation/Description
<b>Play</b>	Play back files
<b>Connect to Website</b>	Open site link
<b>Book info</b>	Show file names, file sizes, etc.
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Add folder</b>	Add folders
<b>Edit file name</b>	Edit file names
<b>Move</b>	Move files to other folders
<b>Take contents key</b>	Connect to site for Content Key
<b>Delete</b>	Delete files > <b>YES</b>

## Customized Screen

Item	Operation/Description
<b>Preview</b>	Preview files
<b>Collective Setting</b>	Set Customized Screen all at once
<b>File info</b>	Show titles, file names, etc.
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Move to microSD</b>	Move files to microSD Card
<b>Edit file name</b>	Edit file names
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use → <input type="checkbox"/> [Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order
<b>Listing</b>	Change list view ● <input type="checkbox"/> [Change] to toggle views
<b>Take contents key</b>	Connect to site for Content Key
<b>Connect to Website</b>	Open site link

## ■ Templates

Item	Operation/Description
<b>Compose S! Mail</b>	Send files via S! Mail (☞P.13-5)
<b>Edit title</b>	Edit titles
<b>Template Info</b>	Show title and file size
<b>Delete this</b>	> <b>YES</b>
<b>Delete selected</b>	> Check files to delete → ☑[Finish] → <b>YES</b>
<b>Delete All</b>	> Enter Phone Password → <b>YES</b>

## ■ Other Documents

Item	Operation/Description
<b>File info</b>	Show file names, file sizes, etc.
<b>Attach to S! Mail</b>	Send files via S! Mail (☞From Step 2 on P.13-4)
<b>Copy to microSD</b>	Copy files to microSD Card
<b>Edit file name</b>	Edit file names
<b>Move</b>	Move files to other folders
<b>Delete this</b>	Delete a file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to use > Check files to use → ☒[Menu] → Select an item
<b>Memory Status</b>	Show memory information
<b>Sort</b>	Change display order of files > Select an order

### Note

- Titles of mp4/3gp Ring Songs&Tones files and Videos/Music/Customized Screen files appear in respective lists. Files without titles appear with file names (created when files are saved to handset). Titles cannot be changed; edited file names may not appear in lists.

# Using/Editing Still Images

## Editing Still Images

- Edit features are not available for all file types.

Main Menu ► Data Folder ► Pictures

1 Select a folder → Select a file → [Menu] → *Edit picture*

2 [Menu] → Select an item (See below)

Item	Operation/Description
Marker stamp	<p>&gt; Select a stamp →  to move stamp →  [Put]</p> <ul style="list-style-type: none"> <li>● Following options are available when positioning a stamp:               <ul style="list-style-type: none"> <li>· To rotate or scale up/down:  [Menu] → Select an item</li> <li>· To start over:  [Cancel]</li> </ul> </li> <li>● To add:  [Add]</li> </ul>
Frame	<p>&gt; Select a frame</p> <ul style="list-style-type: none"> <li>· To rotate 180 degrees:  [Menu] → <i>180° rotation</i></li> <li>· To change frame: </li> <li>· To return to frame list:  [Cancel]</li> </ul>
Character stamp	<p>&gt; Enter text →  to move text →  [Put]</p> <ul style="list-style-type: none"> <li>● To change content/color/font/size: When positioning stamp,  [Menu] → Operate selected item</li> <li>● To start over:  [Cancel] after positioning</li> </ul>

Item	Operation/Description
Change size	<p>&gt; Select a size</p> <ul style="list-style-type: none"> <li>● To start over:  [Cancel]</li> </ul>
Trim away	<p>&gt; Specify a size →  to specify area →  [Set]</p> <ul style="list-style-type: none"> <li>● To start over: After specifying area,  [Cancel]</li> </ul>
Retouch	<p>&gt; Select an item</p> <ul style="list-style-type: none"> <li>● To start over:  [Cancel]</li> </ul>
Rotate	<p>&gt; <i>90° to right, 90° to left or 180°</i></p> <ul style="list-style-type: none"> <li>● To start over:  [Cancel]</li> </ul>
Brightness	<p>&gt;  to adjust brightness</p>
Attach to S! Mail*	<p>Create S! Mail with edited still images.</p> <p>&gt;  [Set] → Create S! Mail (From Step 2 on P.13-4)</p> <ul style="list-style-type: none"> <li>● Edited files are automatically saved.</li> <li>● Alternatively,  [Attach] to attach pictures to S! Mail</li> </ul>
Save*	<p>Overwrite/rename to save edited files.</p>

\* Available after other editing operations.


3 [Set] → [Save]

4 *YES* (Overwrite) or *NO* (Save as)

## Creating Animations


### Saving Original Animation

Main Menu ► Data Folder ► Pictures ► Original Animation

- 1 <New> → <1st> - <20th>
- 2 Select a folder → Select a file
  - Repeat Step 2.
- 3  [Finish]

### Functions Available in Original Animation List




In Original Animation list, press  [Menu] for following operations.

Item	Operation/Description
<b>Edit title</b>	> Enter title
<b>Org. animation</b>	Add more files to an Original Animation (  Above)
<b>Display picture</b>	Play back an Original Animation <ul style="list-style-type: none"> <li>● Alternatively, select an Original Animation from list to play back.</li> </ul>
<b>Set display</b>	Set an Original Animation as Standby display, etc. > Select item to set Original Animation as
<b>Picture info</b>	View item set for <b>Set display</b>
<b>Release animation</b>	Cancel a saved Original Animation > <b>YES</b>

## Saving Still Images to Phone Book

- Savable sizes: Standby (240 x 427) or smaller in JPEG, GIF or PNG format (up to 300 Kbytes)
- Save images to up to 100 Phone Book entries.
- Still images cannot be saved to USIM Card Phone Book entries.

Main Menu ► Data Folder ► Pictures

- 1 Select a folder → Select a file →  [Menu] → **Set display** → **Phone Book**
- 2 **New Entry**  
**New** → Enter details (→ From Step 3 on P.4-4) →  [Finish]  
**Add to Existing Entry**  
**Add** → Select entry →  [Finish] → **YES**

# Managing Folders/Files

## Managing Folders

The following operations are available in Pictures, Music, Books, Videos, Ring Songs&Tones, PC Movies and Other Documents.

### Main Menu ► Data Folder

- 1 Select a folder →  [Menu] → Select an item (See below)

Item	Operation/Description
Add folder	Create user folders
Edit folder name	Edit user folder names
Delete folder	Delete a user folder > Enter Phone Password → YES → YES
Delete all image <sup>1</sup>	> Enter Phone Password → YES → YES
Edit Play List <sup>2</sup>	Edit Play Lists
Release Play List <sup>2</sup>	Cancel edited Play Lists > YES
Select storage <sup>3</sup>	Specify folders on microSD Card to save files to > YES ● Folders cannot be specified when saving Books files.
Memory Status <sup>4</sup>	View memory capacity/number of saved files

<sup>1</sup> Pictures folder only

<sup>2</sup> Play List folder in Ring Songs&Tones folder only

<sup>3</sup> microSD Card only

<sup>4</sup> Music folder only

 

## Using Play List

Use Play List to organize Data Folder Ring Songs&Tones/ Videos files.

Select Ring Songs&Tones, Music or Videos folder files to create Play List links to each file in its original folder.

### Creating Ring Songs&Tones Play Lists

#### Main Menu ► Data Folder ► Ring Songs&Tones

- 1 Highlight *Play List* →  [Menu] → *Edit Play List*
- 2 Select a number → Select a folder → Select a file
  - Repeat Step 2.
- 3  [Finish]

#### ■ Play Back Play List

> Main Menu ► Data Folder ► Ring Songs&Tones ► Play List

- Files are played back in the saved order.

#### ■ Delete a File

> After Step 1, select a file → *Release this*

## Delete All Files

> After Step 1, [Menu] → *Release Play List* → YES

### Note

- mp4/3gp files cannot be added to Play List except in Music Player Play List.

## Creating Video Play Lists

Main Menu ► Data Folder ► Videos ► Play List

- 1 Select a Play List
- 2 Select a number → Select a folder → Select a file
  - Repeat Step 2.
- 3 [Finish]

## Play Back Play Lists

> Main Menu ► Data Folder ► Videos ► Play List ► Highlight Play List → [Play]

- Files are played back in the saved order.

## Delete a File

> After Step 1, (highlight a file →) [Menu] → *Delete this* or *DEL all from list* → YES

## Change Order

> After Step 1, [Menu] → *Oder to play* → Select a file → Select a target → [Finish] → [Finish]

## microSD Card

- 832P is compatible with up to 2 GB commercial microSD Cards and up to 16 GB commercial microSDHC Cards (as of March 2009). For information on memory card compatibility, visit the website below (Japanese). Note that microSD Cards not listed on the website may not function properly.
  - From Yahoo! Keitai P-egg (as of April 2009)  
Yahoo! Keitai top page → メニューリスト → 辞書・ツール → ケータイメーカー → P-egg
  - From PC  
<http://panasonic.jp/mobile/>  
Not all operations are guaranteed by the microSD/microSDHC Cards listed.
- Format new microSD/microSDHC Cards for use with 832P (P.9-17).

### Note

 
- SoftBank is not liable for damages from accidental loss/alteration of microSD Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

## microSD Card Installation

 
- Turn off handset before inserting/removing microSD Card.

### Inserting

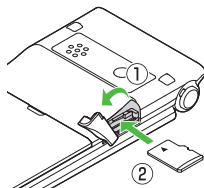


- 1 Open cover. Insert microSD Card until it clicks

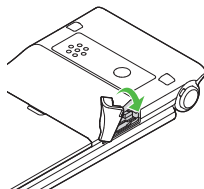

- 2 Close cover

 



### microSD Card Check

When microSD Card is installed correctly,  appears. If  appears, microSD Card cannot be used. Remove microSD Card from handset, and re-insert it. If  does not disappear, execute Check microSD ([P.9-20](#)) or format microSD Card ([P.9-17](#)).  
(Display Indicator: [P.1-8](#))


## Removing

- 1 Push microSD Card in
  - microSD Card pops out with a light push.

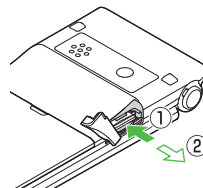

- 2 Remove microSD Card and close cover
  - To close cover:  Left

### Note


- Do not turn off handset or remove battery/microSD Card while  flashes. microSD Card may be damaged or files lost.
- microSD Card may pop out when inserting/removing it.



## Format microSD Card

- Formatting microSD Card deletes all saved files/data.

Main Menu ► Tools ► microSD Backup

1  [Menu] → *microSD format*

2 Enter Phone Password → *YES*

### Note

 
- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- microSD Cards formatted on other devices may not be used. Format microSD Card on 832P before use.
- 832P cannot format incompatible microSD Cards.
- If format fails, turn power off and remove microSD Card from 832P. Reinsert microSD Card and format it again.

## Viewing microSD Card Files

View Phone Book entries, Calendar events, Tasks, mail messages, Notepads and Bookmarks backed up on microSD Card.

Main Menu ► Tools ► microSD Backup

 
1 Select a category

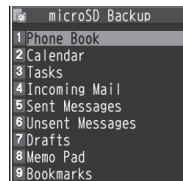

Category List

 
2 Select a file

Backup date appears as file name.



File List

3 Select a data



Data List



Detailed Data

### Note

- If messages on microSD Card do not appear correctly, copy messages to handset (P.9-18) and execute **Charset Conversion** (P.13-22).

## Handset Data Backup

Back up handset data (Phone Book, Calendar, Tasks, Messages, Notepad, Bookmarks, Content Keys) to microSD Card; restore handset data after accidental loss/alteration.

- Back up Content Key: (P.9-21)

### Backing up to microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Highlight a category → [Y?] [Menu] → **Copy to microSD** (→ For **Bookmarks**, select an item)
- 2 Enter Phone Password → **YES**  
All files of selected category are backed up to microSD Card.

#### One File Backup

> Open a file → [Y?] [Menu] → **Copy to microSD** → **YES**

### Restoring from microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Select a category

## 2 Restore One Item

Select a file → Highlight an item → [Y?] [Menu] → **Add to phone**

### Restore One File

Highlight a file → [Y?] [Menu] → **Add to phone** or **Overwrite to phone** → Enter Phone Password

### Restore All Files

[Y?] [Menu] → **Add all to phone** or **Overwr. all to ph.** → Enter Phone Password

## 3 YES

#### Note

- Note that **Overwrite to phone** or **Overwr. all to ph.** erases all files of same category on handset.
- Files of 10 MB or larger cannot be moved/copied from microSD Card to handset.
- Data backed up in other SoftBank handsets may not be restored in 832P depending on type and size.

#### Tip

- Delete Items from microSD Card ● View microSD Card Memory Capacity (P.9-20)

## PC File Transfers

### Folder Structure

Files moved or copied from 832P to microSD Card are managed as shown below:

- Save files in folders by file type.

<b>DCIM</b>		
● Still images saved to microSD Card		
<b>PRIVATE</b>		
<b>MYFOLDER</b>		
<b>Utility</b>		
Calendar	Calendar.BCK	Calendar Backup files
Contacts	Contacts.BCK	Phone Book Backup files
Rights		Content Key Backup files
Tasks	Tasks.BCK	Tasks Backup files
Memo	Memo.BCK	Notepad Backup files
<b>Mail</b>		
Drafts	Drafts.BCK	Drafts Backup files
Inbox	Inbox.BCK	Incoming Mail Backup files
Outbox	Outbox.BCK	Unsent Messages Backup files
Sent Messages	Sent Messages.BCK	Sent Messages Backup files
<b>My Items</b>		
Book		E-comics
Bookmarks	Bookmarks.BCK	Bookmarks Backup files
Custom Screens		Familiar Usability applications

Flash(R)	Flash® files
Games and More	S! Appli
Music	Sound files with .3gp, .mp4, .smc
Other Documents	Other files
Pictograms	My Pictograms
Pictures	Still images moved/copied from handset to Main Folder in microSD Card
Sounds & Ringtones	Sound files of: up to 5 MB with .3gp, .mp4, up to 300 KB with .mid, .midi, .amr
Videos	Videos moved/copied from handset to Main Folder in microSD Card
WMFile*	PC Movies saved from PC to microSD Card
<b>SD_VIDEO</b>	
● Videos saved to microSD Card	

- Some copy protected files have extensions different from above.
- When moving/copying videos from microSD Card to handset, file format or file size may change.

\* If WMFile does not appear in My Items (MYFOLDER), create and save a folder titled WMFile.

## Using Data on microSD Card


With a microSD Card inserted, connect handset with a PC via USB cable (not included) to read/write data from/onto microSD Card.

Following equipment is required:

- Connector Cable: USB cable
- PC: PC with USB port (Universal Serial Bus Specification Rev 1.1 compliant)
- Compatible Operating Systems: Windows® 2000, Windows® XP, Windows Vista® (Japanese version in each)

**Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode ▶ microSD Mode**

1 Connect handset to PC via USB cable while 832P is on

- PC recognizes microSD Card.
-  appears in Standby (handset).

### Note

- Even if incoming call arrives, reading/writing data continues during calls. After calls, check indicators on PC to see if reading/writing is complete.
- File names saved in microSD Card may not properly appear if changed on PC.


## microSD Card Functions

### Restore microSD Card items (Check microSD)

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu] ▶ Check microSD ▶ YES**

- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- It may take 30 seconds or longer to complete Check microSD depending on data volume on microSD Card.
- 832P cannot check incompatible or unformatted microSD Cards.
- 832P may delete files and folders that fail to be restored.

### Delete Items from microSD Card

> **Main Menu ▶ Tools ▶ microSD Backup ▶ Select a category ▶ (Highlight a file →)  [Menu] ▶ Delete this or Delete all (▶ For Delete all, enter Phone Password) ▶ YES**

- Content Key cannot be deleted.

### View microSD Card Memory Capacity

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu] ▶ microSD info**

## ■ Back Up Content key

Copy Content Keys to microSD Card from handset or to handset from microSD Card.

### > Main Menu ► Settings ► Security ► Content Key

► Copy to microSD or Copy from microSD ► Enter Phone Password

- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to microSD Card must be inserted to move Content Keys from microSD Card.
- Some applications are made for use on specific models. Some models move Content Keys to microSD Card instead of backing up. Contact SoftBank Mobile Customer Center, General Information for more information.
- Content Keys are backed up after the previous back up file is deleted. To back up another key and keep existing keys, move existing keys to handset first and back up a new key.

## 9

## Managing Files