

Appendix

Function List	18-2
Troubleshooting.....	18-9
Warning Signs	18-11
Software Update	18-11
Updating Software Manually.....	18-11
Updating Software Automatically	18-12
Quick Open Menu	18-13
Key Assignments (5-touch Mode)	18-14
Key Assignments (2-touch Mode)	18-15
Key Assignments (NIKO-touch Mode)	18-16
Symbol List	18-17
Character Code List	18-18
Weather Indicator List.....	18-23
Memory List.....	18-24
Specifications	18-25
Index.....	18-26
Warranty & Service.....	18-32
Warranty	18-32
After-Sales Service	18-32
Customer Service.....	18-33

Function List

From Main Menu, press key corresponding to a menu number for direct access (P.1-19).

Example: To select **S! Mail Settings** in Messaging menu:

1 first column **9** second column **3** third column

1 (Messaging) → **9** (Settings) → **3** (S! Mail Settings)

- To select ①:  → **1**; To select ②:  → **2**
- When Menu Icons are set to Pattern 5 or Customize, first column of function number is not available. Select a menu from Main Menu; then select a function number (second column in table).

Messaging		
	Menu Number/Function Name	Page
1	Messaging	—
1	Incoming Mail	—
1	Received	P.13-10
2	ユーザーフォルダ 1	P.13-3
3	ユーザーフォルダ 2	P.13-3
4	ユーザーフォルダ 3	P.13-3
5	Spam Folder	P.13-17
2	Create New	P.13-4
3	Retrieve New	P.13-15
4	Drafts	P.13-15
5	Templates	—
1	Download Templates	P.13-10
6	Sent/Unsent	P.13-15
7	Server Mail	—
1	Retrieve Mail List	P.13-14
2	Retrieve All	P.13-14
3	Delete All	P.13-15

1	7	4 Server Mail Memory	P.13-15
	8	Create New SMS	P.13-7
	9	Settings	—
	1	Custom Mail Address	P.13-3
	2	Universal Settings	P.17-14
	3	S! Mail Settings	P.17-14
	4	SMS Settings	P.17-14
	0	Memory Status	P.13-3

Yahoo! Keitai		
	Menu Number/Function Name	Page
2	Yahoo! Keitai	—
1	Yahoo! Keitai	—
2	Bookmarks	—
3	Saved Pages	P.14-8
4	Enter URL	—
1	Direct Entry	P.14-4
2	URL History List	P.14-4
5	History	P.14-4
6	PC Site Browser	—
1	Homepage	P.14-5
2	Bookmarks	P.14-8
3	Saved Pages	P.14-8
4	Enter URL	P.14-5
5	History	P.14-5
6	Yahoo! Keitai	P.14-5
7	Set PC Site Browser	P.17-17
8	Reset	P.17-18

2	7	Set Yahoo! Keitai	—
	1	Font Size	P.17-15
	2	Scroll Unit	P.17-15
	3	Downloads	P.17-15
	4	Memory Manager	P.17-15
	5	Security	P.17-16
	6	Save Settings	P.17-15
	8	Reset	—
	1	Restore Defaults	P.17-16
	2	Initialized Browser	P.17-16

 S! Appli			
Menu Number/Function Name		Page	
3	S! Appli	—	
	1 S! Appli List	—	
	1 Download S! Appli	P.15-2	
	2 Osaifu-Keitai	—	
	1 Lifestyle-Appli	P.16-3	
	2 IC Card Settings	P.16-5	
	3 S! Appli Settings	—	
	1 Volume	P.17-19	
	2 Display Backlight	P.17-19	
	3 Vibration	P.17-19	
	4 Synchronize microSD	P.17-19	
	4 S! Appli History	P.15-3	
	5 Information	P.15-2	

 Osaifu-Keitai		
Menu Number/Function Name		Page
4	Osaifu-Keitai	—
	1 Lifestyle-Appli	P.16-3
	2 IC Card Settings	P.16-5

 Camera		
Menu Number/Function Name		Page
5	Camera	—
	1 Camera	P.6-5
	2 Video Camera	P.6-6
	3 Pictures	P.6-10
	4 Videos	P.6-10

 Entertainment		
Menu Number/Function Name		Page
6	Entertainment	—
	1 S! Quick News	—
	1 S! Quick News List	P.7-3
	2 Settings	P.17-13
	2 S! Info Ch./Weather	—
	1 What's New?	P.7-4
	2 History	P.7-4
	3 Register/Cancel	P.7-4
	4 Get Latest Contents	P.7-4
	5 Weather Indicator	P.7-5
	3 BookSurfing	P.7-6
	4 e-Book Viewer	P.7-6

Tools		
	Menu Number/Function Name	Page
7	Tools	—
1	Alarms	P.12-7
2	Calendar	P.12-2
3	Calculator	P.12-8
4	Notepad	P.12-9
5	Tasks	P.12-6
6	Dictionary	P.12-10
7	Sound Recorders	—
1	Voice Call Data	P.2-15
2	Video Call Data	P.2-15
3	Answer Phone Setting	P.2-15
4	Voice Recorder	P.12-11
5	Voice Announce	P.12-11
8	Bar Code Reader	—
1	Scan Barcodes	P.12-12
2	Saved Data List	P.12-13
9	Location Settings	—
1	Positioning Lock	P.12-14
2	Send Location Info	P.12-14
0	Receive via Infrared	—
1	Receive	P.10-3
2	Receive All	P.10-4

7	*	microSD Backup	—
1		Phone Book	P.9-18
2		Calendar	P.9-18
3		Tasks	P.9-18
4		Incoming Mail	P.9-18
5		Sent Messages	P.9-18
6		Unsent Messages	P.9-18
7		Drafts	P.9-18
8		Memo Pad	P.9-18
9		Bookmarks	P.9-18
#		Templates/Users Dic.	—
1		Templates	P.3-5
2		User's Dictionary	P.3-10

Data Folder		
	Menu Number/Function Name	Page
8	Data Folder	—
1	Pictures	—
1	Download Pictures	P.9-4
2	Main Folder	P.9-2
3	Camera	P.9-2
4	My Pictograms	P.13-6
5	Mail Art	P.9-2
6	Pre-installed	P.9-2
7	Original Animation	P.9-13

8	2	Ring Songs&Tones	—
	1	DL Ring Songs&Tones	P.9-4
	2	Main Folder	P.9-2
	3	Pre-installed	P.9-2
	4	Voice Announce	P.9-2
	5	Play List	P.9-2
	3	S! Appli	—
	1	Download S! Appli	P.15-2
	4	Music	—
	1	Main Folder	P.8-7
	2	WMA	P.8-7
	5	Videos	—
	1	Download Videos	P.9-4
	2	Main Folder	P.9-3
	3	Camera	P.9-3
	4	Pre-installed	P.9-3
	5	Play List	P.9-3
	6	Position Memory	P.9-6
	6	PC Movies	—
	1	microSD	P.9-3
	2	Position Memory	P.9-6
	3	Play History	P.9-3
	7	TV	—
	1	Image	P.5-13
	2	Video	P.5-12
	3	Position Memory	P.9-3
	8	Lifestyle-Appli	—
	1	Download	P.16-3
	9	Books	—
	1	Download Books	P.9-4

8	0	Customized Screen	—
	1	Customized Screen	P.1-20
	2	Familiar Usability	P.1-20
	✳	Templates	—
	1	Download Templates	P.13-10
	#	Other Documents	—
	1	Main Folder	P.9-3

Music Player

Menu Number/Function Name		Page
9	Music Player	—
1	Player	—
	1 All Tracks	P.8-6
	2 Artist	P.8-6
	3 Album	P.8-6
	4 Genre	P.8-6
	5 Play List	P.8-6
	2 Data Manager	—
	1 Main Folder	P.8-7
	2 WMA	P.8-7

TV		
Menu Number/Function Name		Page
✱	TV	—
1	Watch TV	P.5-5
2	Program List	P.5-7
3	Timer Watching	P.5-13
4	Timer Recording	P.5-13
5	Recording Result	P.5-14
6	TV Link	P.5-10
7	Channel List	P.5-4
8	Channel Setting	—
1	Select Area	P.5-4
2	Automatic	P.5-4
9	User Settings	—
1	Caption	P.17-13
2	First View	P.17-11
3	Rec. When Low Battery	P.17-11
4	Mobile W-Speed	P.17-11
5	Image Quality	P.17-11
6	Sound	P.17-11
7	ECO Mode	P.17-12
8	Display Light	P.17-12
9	Data Broadcasting	P.17-12
0	Icons	P.17-12
✱	Check TV Settings	P.17-12
#	Reset Channel Setting	P.17-12
	Reset Storage Area*	P.17-12
①	Reset TV Settings	P.17-12

* Cannot be selected by third column number.

Phone Book		
Menu Number/Function Name		Page
	Phone Book	—
1	Phone Book	P.4-2
2	Create New Entry	P.4-3
3	Call Log	—
1	Outgoing Call Logs	P.2-13
2	Incoming Call Logs	P.2-13
4	Group	P.4-6
5	Account Details	P.1-26, P.4-13
6	S! Addressbook BkUp	—
1	Start Sync	P.4-11
2	Auto Sync Settings	P.4-12
3	Sync Log	P.4-12
7	Memory Manager	P.4-9
8	Restrictions	P.11-10
9	Settings	—
1	Save Settings	P.17-10
2	Search Method	P.17-10
3	Font Size	P.17-10
4	Voice Dial	P.4-14
5	Mail Group	P.13-18
6	Forwarding Image	P.17-10
0	Memory Status	P.4-10

● Number in first column is not available for Phone Book.



Settings

	Menu Number/Function Name	Page
#	Settings	—
1	Sound Settings	—
1	Ring Tones	P.17-2
2	Ringer Volume	P.17-2
3	Key Tone	P.17-2
4	Stereo/3D Sound	P.17-2
5	Earphone	P.17-2
6	Message Ring Tones	P.17-2
2	Display Settings	—
1	Internal Display	P.17-3
2	Font Size	P.17-5
3	Font	P.17-5
4	Menu Icons	P.17-4
5	Back Light Time	P.17-5
6	View Blind	P.1-25
7	Color	P.17-3
8	Private Menu	P.1-21
9	言語設定	P.17-3
0	Open for New	P.17-3
✕	LCD AI	P.17-5
#	Disp. Call/Recv #	P.17-5
①	Describe Icons	P.1-8
3	Customized Screen	—
1	Customized Screen	P.1-20
2	Familiar Usability	P.1-20
3	Release Settings	P.1-20

#	4	Incoming Settings	—
	1	Vibrator	P.17-2
	2	Manner Mode Type	P.17-6
	3	Answer Setting	P.17-6
	4	Open-to-Ans. Call	P.17-6
	5	Call Logs	P.11-8
	6	Phone Book Image	P.17-6
	7	Ring Time Settings	P.11-11
	8	Info Notice Setting	P.17-6
	9	Auto Answer	P.17-6
	0	In-call Management	P.17-6
#	5	Phone Settings	—
	1	Side-keys Guard	P.11-8
	2	Text Entry Method	P.17-9
	3	Battery	P.17-2
	4	Pause Dial	P.2-3
	5	Headset Switch to Call	P.17-8
	6	Voice Settings	P.17-10
	7	Software Update	P.18-11
#	6	Date & Time	—
	1	Date & Time	P.17-7
	2	World Clock	P.17-7
	3	Daylight Savings	P.17-7
	4	Alarm Tone	P.17-7
	5	Time Correction	P.17-7

#	7	Security	—
	1	Privacy Key Lock	P.11-4
	2	Personal Data Lock	P.11-4
	3	IC Card Lock	P.16-5
	4	Secret Mode	P.11-8
	5	Secret Data Only	P.11-8
	6	Key Pad Dial Lock	P.11-7
	7	Reject Unknown	P.11-10
	8	Call Setting w/o ID	P.11-10
	9	All Reset	P.11-11
	0	Reset Settings	P.11-10
	✱	PIN Authentication	P.11-2
	#	Change Phone Password	P.11-2
	①	Timer Lock at Close	P.11-5
	②	Lock OFF at Open	P.11-6
	③	Content Key	P.9-5
	④	Lock Message	P.11-7
	8	Call Settings	—
	1	Call Time/Cost	P.17-8
	2	Reset	P.17-8
	3	Set Max Cost Limit	P.17-8
	4	Voice Mail/Call Fwding	P.2-17, P.2-18
	5	Call Waiting	P.2-19
	6	Call Barring	P.2-20
	7	Missed Call Notifi.	P.2-19
	8	Prefix	P.2-3
	9	Volume	P.17-8
	0	Shikkari Talk	P.2-5
	✱	Closing Clamshell	P.17-8
	#	Hold Tones	P.17-8
	①	Noise Reduction	P.17-8

#	8	② Quality Alarm	P.17-8
		③ Reconnect Signal	P.17-8
		④ Emission OFF Mode	P.1-16
		⑤ Show My Number	P.2-21
		⑥ Service Numbers	P.17-8
	9	Video Call	—
		1 Incoming Video Qlty	P.17-10
		2 Select Images	P.17-10
		3 Loud Speaker	P.17-10
		4 Voice Call Auto Redial	P.17-10
	0	International Call	—
		1 Int'l Dial Assist	P.2-10
		2 Select Operator	P.2-10
		3 PLMN Setting	P.2-11
		4 Operator Name	P.2-11
		5 Select Network	P.2-10
	✱	Connectivity	—
		1 USB Mode	P.10-6
		2 Retrieve NW Info	P.1-14
	#	Notification Light	—
		1 Incoming	P.4-4, P.17-9
		2 Online	P.17-9
		3 Missed Call/Unread	P.17-9
		4 Clamshell Close	P.17-9
		5 Music	P.17-9
		6 IC Card	P.17-9
		7 Side Key	P.17-9
		8 Confirm Status	P.17-9

Troubleshooting

Handset does not turn on

- Was  pressed for more than one second?
- Is battery level sufficient?
- Is battery inserted properly? (P.1-12)

Handset functions do not work after turning power on

- Does PIN Entry window appear?
PIN Authentication is **ON**. Enter PIN (P.11-2).

USIM not inserted After power-off Insert USIM or Inserted USIM is unavailable to this mobile phone Please insert valid one appears when handset is turned on or operations attempted

- Is USIM Card inserted correctly? (P.1-3)
- Is SoftBank specified USIM Card inserted? (P.1-2)
- USIM Card IC chip may be dirty.
Wipe with a clean cloth, then insert USIM Card correctly.

Keypad does not respond

- Does  or  appear in Standby?
Keyguard (P.11-3) or Privacy Key Lock is active (P.11-4). Cancel it.

Side Keys do not work while handset is closed

- Does  appear?
Side-keys Guard (P.11-8) is **ON**.
Set to **OFF**.

Outgoing calls or Video Calls will not connect or message and Internet connections are unavailable

- Does    appear?
Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.
- Are you using handset overseas?
Set international settings (e.g. Select Operator) to use abroad (P.2-10).
- Does  appear?
Personal Data Lock is set (P.11-4). Deactivate Personal Data Lock.

Outgoing calls or Video Calls will not connect

- Is area code entered?
- Is restricting outgoing calls in Call Barring? (P.2-20)
- Does  appear in Standby? Total cost has reached upper limit. Set Max Cost Limit to **OFF** or execute **Reset** (P.17-8).

Outgoing calls will not connect or busy signal sounds

- Did you enter area code?
- Is restricting outgoing calls in Call Barring? (P.2-20)

Call is interrupted or disconnected

- Does  appear? Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.

"Cannot start any more functions" appears when a menu is opened.

- Maximum number of functions are active at the same time. Cancel current function and try again (P.1-25).

Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.
Set Secret Mode or Secret Data Only **ON** (☞P.11-9).
- Does  appear?
Personal Data Lock is set (☞P.11-4). Deactivate Personal Data Lock.

Digital TV does not work

- Is handset out of terrestrial Digital TV broadcasting service area or in a location where airwaves are weak?
Move to a location where airwaves are strong (☞P.5-3).

Customized Screen setting cannot be canceled

- Enter "6368##" in Standby → **Release Settings**
Customized Screen cannot be canceled in Standby while Simple menu is active. Deactivate Simple menu in Standby.

Osaifu-Keitai® does not work

- Does  appear?
Deactivate IC Card Lock (☞P.16-5).

Display clock is reset

- Replacing battery does not reset Display clock; however, if battery is removed for long periods, the clock may be reset. Set Date & Time (☞P.17-7) or Retrieve NW Info (☞P.1-14) again.

Battery Operating Time is greatly reduced

- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (☞P.1-10) and "Battery Time" (☞P.1-11).

Cannot charge battery

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder (not included)? (☞P.1-13)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in handset correctly? (☞P.1-12)
- Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Battery may not charge beyond +5°C and +35°C.
- Battery may need to be replaced.

Handset/accessories feel warm

- AC Charger/Desktop Holder may warm during charging.
Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.

Note

- If you did not find the remedy to your problem here, please contact SoftBank Mobile Customer Center (☞P.18-33).

Warning Signs

Problem	Causes and Remedies
 appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Side-keys Guard is ON (P.11-8). To activate Side Keys while handset is closed, set Side-keys Guard OFF .
 or  appears	Keyguard (P.11-3) or Privacy Key Lock (P.11-4) is active. Cancel it to use handset. Answer calls even if Keyguard or Privacy Key Lock is active.
Low battery message appears and battery alarm tone sounds	Battery is low. Charge (P.1-13) or replace battery (P.1-12).

Software Update

Check for handset software updates and download as required.

Choose to begin update or schedule update.

- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.


Updating Software Manually

**Main Menu ► Settings ► Phone Settings
► Software Update ► Software Update**

1  [YES] → Follow onscreen instructions

After download is complete, handset automatically turns off and restarts before Software Update begins.

After Software Update is complete, handset automatically turns off and restarts before information appears for successful update (This process takes approximately 60 seconds.).

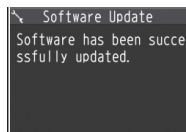

Updating Software Automatically

Main Menu ► Settings ► Phone Settings
► Software Update ► Regular Updates

1 YES → Follow onscreen instructions

- Select **YES** to activate Internet. Follow onscreen instructions to perform Regular Updates. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).


Update Results

When Event Indicator appears, **Update** →



- When **Update** indicator does not appear,


Main Menu ► Settings
► Phone Settings
► Software Update
► Update Results

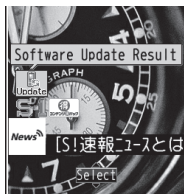

Scheduled Update

Follow onscreen instructions for setup. Confirmation appears at scheduled update time. Press  or wait ten seconds for update to start.

 - Software Update will not start while handset is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.



Note

- If handset does not power on after Software Update, remove then re-insert battery and try again. If handset still does not power on, contact SoftBank Mobile Customer Center, Customer Assistance (P.18-33).
- Software Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (P.18-33).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Quick Open Menu

When **Menu Icons** is set to **Pattern 5** or **Customize** (P.17-4), press menu numbers in Main Menu to open the following functions.

Example: To open Notepad:

In Standby,  →  

Menu	#
Alarm	44
Calendar	45
Calculator	85
Notepad	42
Tasks	95
Sound Recorders	55
Receive via Infrared	79
Templates/Users Dictionary	38
Pictures folder	46
Ring Songs&Tones folder	16
Phone Book Settings	26
Ring Tones	13
Ringer Volume	50
Key Tone	30
Stereo/3D Sound	64
Earphone/Speaker Settings	51
Message Ring Tones	68
Internal Display	56

Menu	#
Font Settings	66
Menu Icons	57
Back Light Time	70
Color Theme	86
Private Menu Settings	52
Language	15
Describe Icons	36
Vibrator	54
Manner Mode Type	20
Answer Setting	58
Ring Time Settings	90
Info Notice Setting	65
Auto Answer	94
Text Entry Method	35
Date & Time	31
Secret Mode	40
Secret Data Only	41
Call Setting w/o ID	10
Reset Settings	23
Change Phone Password	29
Call Time/Cost	61
Reset Total Duration/Cost	60
Closing Clamshell	18
Noise Reduction	76

Menu	#
Quality Alarm	75
Reconnect Signal	77
Show My Number	17
Notification Light	89

Key Assignments (5-touch Mode)

Display Key	漢	カナ	abc	123
1	あいうえおあいうえお	アイウエオアイウエオ ¹	. / @ - :  ¹  ² _ 1	1
2	かきくけこ	カキクケコ ²	a b c A B C 2	2
3	さしすせそ	サシスセソ ³	d e f D E F 3	3
4	たちつてとっ	タチツテトツ ⁴	g h i G H I 4	4
5	なにぬねの	ナニヌネノ ⁵	j k l J K L 5	5
6	はひふへほ	ハヒフヘホ ⁶	m n o M N O 6	6
7	まみむめも	マミムメモ ⁷	p q r s P Q R S 7	7
8	やゆよやゆよ	ヤユヨヤユヨ ⁸	t u v T U V 8	8
9	らりるれろ	ラリルレロ ⁹	w x y z W X Y Z 9	9
0	わをんわー	ワヲン  ² ー0	0	0
*	 ³	 ³	Pictograms	*
	[Press and hold] Templates			
# ⁴	、。？！・  (Space)	、。？！・  (Space)	、。？！' - & () ¥  (Space)	#
	[Press and hold] Symbols ⁴			

¹ Appears when entering single-byte character.

² Appears when entering double-byte character.

³ Added to highlighted character. Press  to display pictographs after determining character.

⁴ In number mode, symbol list may not be displayed.

- While entering character, press  to toggle characters at cursor in reverse order.
- After entering hiragana, katakana or alphanumerics, press  to toggle upper/lower case.
- In number mode, press and hold  to enter "+" (not available in S! Mail text field).
- In alphanumerics mode, characters entered after an upper-case character appear in order of: upper case → lower case.

Key Assignments (2-touch Mode)

Kanji/Hiragana Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&			
	8	や	(	ゆ	)	よ	*	#			
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん	ゝ	ゞ	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	や		ゆ		よ					
	9										
	0	わ			ゝ	ゞ					

Katakana Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&			
	8	ヤ	(	ユ	)	ヨ	*	#			
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン	ゝ	ゞ	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	ヤ		ユ		ヨ					
	9										
	0	ワ ¹									

Alphanumerics Mode

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	"	\$	%	'	+	a	b	c	d	e
	2	.	.	:	:	<	f	g	h	i	j
	3	=	>	@	[	]	k	l	m	n	o
	4	^	_	' ¹ ' ²	{		p	q	r	s	t
	5	}	~ ¹ ~ ²				u	v	w	x	y
	6						z	?	!	-	/
	7						¥	&			
	8		(		)		*	#			
	9						1	2	3	4	5
	0						6	7	8	9	0

■ Toggle upper/lower case

¹ Appears when entering double-byte character.

² Appears when entering single-byte character.

Note

- A space is entered by pressing key corresponding to a blank where no character is assigned.
- In kanji (hiragana) or katakana mode, "" " or "" " is entered by pressing [✖] after entering characters. Press [✖] once for "" ", twice for "" ".
- In number mode, press and hold [0] to enter "+" (not available in S! Mail text field).

Key Assignments (NIKO-touch Mode)

Kanji/Hiragana Mode

<Upper Case>

		Second digit									
First digit		1	2	3	4	5	6	7	8	9	0
	1	あ	い	う	え	お	.	-	@	_	1
	2	か	き	く	け	こ		a	b	c	2
	3	さ	し	す	せ	そ		d	e	f	3
	4	た	ち	つ	て	と	っ	g	h	i	4
	5	な	に	ぬ	ね	の		j	k	l	5
	6	は	ひ	ふ	へ	ほ		m	n	o	6
	7	ま	み	む	め	も		p	q	r	7
	8	や	ゆ	よ	ゃ	ゅ	ょ	t	u	v	8
	9	ら	り	る	れ	ろ		w	x	y	9
	0	わ	を	ん	.	。	ー	・	!	?	0

Katakana Mode

<Upper Case>

		Second digit									
First digit		1	2	3	4	5	6	7	8	9	0
	1	ア	イ	ウ	エ	オ	.	-	@	_	1
	2	カ	キ	ク	ケ	コ		a	b	c	2
	3	サ	シ	ス	セ	ソ		d	e	f	3
	4	タ	チ	ツ	テ	ト	ッ	g	h	i	4
	5	ナ	ニ	ヌ	ネ	ノ		j	k	l	5
	6	ハ	ヒ	フ	ヘ	ホ		m	n	o	6
	7	マ	ミ	ム	メ	モ		p	q	r	7
	8	ヤ	ユ	ヨ	ャ	ュ	ョ	t	u	v	8
	9	ラ	リ	ル	レ	ロ		w	x	y	9
	0	ワ	ヲ	ン	.	。	ー	・	!	?	0

Note

- Press [Mode] to toggle kanji (hiragana) and single-byte number modes.
- To switch to katakana mode: In kanji (hiragana) mode, [Menu] → **1 byte character**
- To switch to lower case: Enter a character →
- A space is entered by pressing key corresponding to a blank where no character is assigned.
- Press [*] once for "'", twice for "''". In kanji (hiragana) mode, enter characters before pressing [*].
- In number mode, press and hold [0] to enter "+" (not available in S! Mail text field).

First Three Digits	Last Digit									
	0	1	2	3	4	5	6	7	8	9
010										
011										
012										
013										
014										
015										
016										
017										
018										
019										
020										
021										
022										
023										
024										
026										
027										
028										
029										
031										
032										
033										
034										
035										
036										
037										
038										
039										
041										
042										
043										
044										
045										
046										
047										
048										
049										
050										
051										
052										
053										
054										
055										
056										
057										
058										
059										
060										
061										
062										
063										
064										
065										
066										
067										
068										
069										
070										
071										
072										
073										
074										
075										
076										
077										
078										
079										
080										
081										
082										
083										
084										
085										
086										
087										

First Three Digits			Last Digit			First Three Digits			Last Digit		
0	1	2	3	4	5	6	7	8	9	0	1
050	051	052	053	054	055	056	057	058	059	060	061
062	063	064	065	070	071	072	073	074	075	076	077
078	080	081	082	083	130	131	132	133	134	135	136
137	138	139	160								

[illegible]

Weather Indicator List

- Indicators and categories are subject to change without prior notice.

Weather	
	Clear (day)
	Clear (night)
	Cloudy
	Rain
	Snow
	Thunderstorm
	Precipitation 0%-100%
	Later
	Occasionally

Pollen Level	
	Low
	Moderate
	High
	Very High

Cherry Blossom	
	Blossoms Opening
	Near Full Bloom
	Peak Bloom
	Past Peak

Fall Foliage	
	No Color
	Moderate Color
	Peak Color
	Past Peak

UV Level	
	Low
	Moderate
	High
	Very High

Typhoon	
	Formed
	Approaching
	Severe

Other Information	
	Heavy Rain
	Strong Winds
	Notifications

Memory List

Data Folder	Up to 3500 items (Up to 100 MB) (One S! Appli corresponds up to 6 MB.)
--------------------	---

- Shared with S! Appli List

Calendar Events	Up to 1000 items
------------------------	------------------

Phone Book	Up to 1000 items
-------------------	------------------

Messaging (SMS and S! Mail combined)	Incoming Mail	Up to 1000 items
	Sent/Unsent	Up to 500 items
	Drafts	Up to 10 items

Yahoo! Keitai	Saved Pages	[Yahoo! Keitai] Up to 20 items/750KB [PC Site Browser] Up to 20 items/1150KB
	Bookmarks	[Yahoo! Keitai] Up to 100 items [PC Site Browser] Up to 100 items
	URL History	[Yahoo! Keitai] URL Entry: Up to 20 items URL Access: Up to 100 items* [PC Site Browser] URL Entry: Up to 20 items URL Access: Up to 100 items*
	Cache	[Yahoo! Keitai] 750KB [PC Site Browser] 1150KB

* The number of savable items varies depending on URL length.

Specifications

832P

Weight (including battery)		107 g*
Dimensions (closed)		50 x 110 x 10 mm (thinnest part)*
Standby Time (closed)	3G	460 hours*
	GSM	240 hours*
Talk Time	3G	180 minutes*
	Video Call	120 minutes*
	GSM	180 minutes*
TV Reception Time	Normal Mode	5.5 hours*
	ECO Mode	7.1 hours*
Charging Time	AC Charger	100 minutes*
	In-Car Charger	100 minutes*
Maximum Output	3G	0.25 W
	GSM	2.0 W

* Approximate value

- Values above were calculated with battery installed.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- TV-Reception Time is an average measured using earphone/microphone, with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when a S! Appli is active.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	600 mAh
Dimensions	45 x 3.8 x 37 mm*

* Approximate value

- Specifications subject to change without notice.

Index

Numerics

3G 2-10

A

AC Charger 1-13
Access History
 PC Site Browser 14-5
 Yahoo! Keitai 14-4
Account Details 1-26, 4-13
Address (Adding/editing/deleting) 13-8
After-Sales Service 18-32
Alarms 12-7
All Reset 11-12
Alternative Image 2-6
Answer Phone 2-15
Answering Calls
 Video Calls 2-8
 Voice Calls 2-5
Attachments
 Adding 13-8
 Deleting 13-8
 Opening/saving 13-13
Auto Answer 17-6
Auto Focus Lock 6-10
Auto Save (Camera) 6-8
Auto timer 6-6
Auto-sort 13-16

B

Back Light
 Display 17-5
 S! Appli 17-17
 Video Calls 2-12
Backup
 microSD Card 9-18
 S! Address Back-up 4-10
Bar Code Reader 12-12
Basic Operations
 Handset x
 Internet 14-6
Battery 1-10
Battery Level 1-9, 1-11
Bookmarks 14-8
Books folder 9-3
BookSurfing® 7-6
Brightness
 Camera 6-3
 Display 17-5
 Video Calls 17-11
 Video Camera 6-4
Browser (Initializing) 17-16

C

Cache Memory.....	14-2
Calculator	12-8
Calendar	12-2
Calendar Events.....	12-2
Call Barring.....	2-20
Call Cost	17-8
Call Forwarding	2-17
Call Log.....	2-13
Call Operations.....	2-11
Call Rejection	
Calls without Caller ID	11-11
Unknown Callers	11-11
Call Settings	17-8
Call Time	17-8
Call Waiting	2-19
Caller ID.....	2-3, 2-21
Camera [Section Contents].....	6-1
Center Access Code	1-23
Channel Setting.....	5-4
Character Code (Kuten Code)	
Character Code List	18-18
Input Options	3-5
Charge Limit	17-8
Charging Time	1-10
Check microSD.....	9-20
Clock Display	17-4
Closing Clamshell	17-8
Color Scheme.....	17-3
Content Key	9-5
Context Forecast	3-6

Continuous Shooting.....	6-5
Conversion Candidates.....	3-6
Conversion Methods.....	3-6
Cookies	
Deleting.....	17-15
Settings	17-16
Copy Protected Files.....	9-4
Country/Region Code	2-10
Customer Service.....	18-33
Customized Screen	1-20

D

Data Folder	9-2
Date & Time Settings.....	17-7
Deleting	
Calendar events	12-5
Messages.....	13-21
Phone Book	4-9
S! Appli.....	15-4
Delivery Report	13-9
Dictionary	12-10
Digital TV [Section Contents]	5-1
Digital TV Settings.....	17-11
Display.....	1-8
Display Indicators.....	1-8
Display Settings.....	17-3

Download

Customized Screen	1-20
Familiar Usability.....	1-20
From web pages.....	14-11
Lifestyle-Appli	16-3
Music	8-2
S! Appli.....	15-2
Templates	13-10
Drafts.....	13-15
Driving Mode.....	1-16, 17-6

E

e-Book Viewer	7-6
Earpiece Volume	
Video Calls	2-7
Voice Calls	2-5
Emergency Calls (110, 119, 118)	2-4
Emergency Positioning Request	2-4
Emission OFF Mode	1-16
Event Indicators.....	1-16

F	
Familiar Usability	1-20
Flash® files	9-19
Flash(R) folder	9-19
Focus Setting	6-9
Folder/files	9-14
Font Size	
Call Log	2-14
Internet	17-15
Messages	17-14
Phone Book	4-7
Font Size (Collective Setting)	17-5
Function List	18-2

G	
Global Roaming Service	2-9
Graphic Mail	13-5
Group Settings	4-6
GSM	2-10

H	
Handset	
Menus	1-18
Parts & Functions	1-4
Power On/Off	1-14
Handset Security [Section Contents]	11-1
Help (Text Entry)	3-2
Hold	
Video Calls	2-12
Voice Calls	2-11
HTML messages	13-5

I	
IC Card Lock	16-5
IC Transmission	10-4
IDD Prefix	2-9
Image quality	
Still images	6-3
Videos	6-4
Image size	
Still Images	6-3
Videos	6-4
Incoming Call Logs	2-13
Incoming Options (S! Mail)	17-14
Information (S! Appli)	15-2
Infrared	10-2
Input Character Settings (SMS)	17-14
Internal Display	17-3
International Call	
From abroad	2-9
From Japan	2-9

International Setting	2-10
Internet [Section Contents]	14-1

K	
Key Assignments	
Mode 1 (5-touch)	18-14
Mode 2 (2-touch)	18-15
Mode 3 (NIKO-touch)	18-16
Key Pad Dial Lock	11-7
Key Tone	17-2
Keyguard	11-3
Kuten Code (Character Code)	18-18

L	
Language	17-3
License Information (S! Appli)	15-2
Location Settings	12-14
Lock Message	11-7
Lock OFF at Open	11-6

M

Mail Group.....	13-18
Mail Security.....	11-10
Main Menu	1-18
Making Calls	
International Calls.....	2-9
Video Calls	2-7
Voice Calls	2-2
Manner Mode	1-15, 2-11, 2-12, 17-6
Manufacture Number	17-16
Memory List.....	18-24
Memory Manager (Internet).....	17-15
Menu Icons	17-4
Menu Numbers	1-19
Messaging [Section Contents].....	13-1
microSD Card.....	9-15
Backup.....	9-18
Formatting.....	9-17
Synchronizing.....	17-17
Missed Call Notification	2-19
Mobile W-Speed	5-2
MULTI Key	1-5, 1-25, 12-10
Multi Selector	ix
Music folder.....	9-2
Music Player [Section Contents].....	8-1
My Pictograms.....	9-2, 13-6

N

Network Information	1-14
Network S! Appli	15-2

New Messages

Receiving.....	13-15
Viewing	13-10
Night mode	
Camera	6-3
Video Calls	17-11
Video Camera	6-4
Normal Mode (Simple Menu)	1-22
Notepad.....	12-9
Notification Light Settings	17-9

O

One-push Open Button.....	1-6
Open For New.....	17-3
Open-to-Ans. Call.....	17-6
Operator Names	2-11
Optional Services	2-16
Original Animation	9-13
Osaifu-Keitai® [Section Contents].....	16-1
Other Documents folder.....	9-3
Outgoing Call Logs	2-13

P

Passwords.....	1-23
Passwords (Changing)	
Center Access Code	1-23
Phone Password	11-2
Security Code	2-20

PC Site Browser	14-2
Access.....	14-5
Display Settings	17-15
Memory Manager & Settings	17-15
Security Settings	17-16
Personal Data Lock.....	11-4
Phone Book [Section Contents].....	4-1
Phone Password	1-23
Changing	11-2
Photo mode	
Still images.....	6-3
Videos.....	6-4
Pictographs.....	3-4
Pictures (Still Images)	
Capturing	6-5
Editing	9-12
Pictures folder	9-2
PIN/PIN2	1-3
Changing	11-2
PIN Authentication	11-2
PIN Lock & Cancellation (PUK)	11-3
Play Background.....	8-7
Play List	8-10
Play mode setting.....	8-6
Predictive Candidates.....	3-6
Preview Window	
Camera	6-3
Video Camera	6-4
Privacy Key Lock	11-4
Private Menu	1-21
PUK/PUK2	1-3, 11-3

Q	
QR Code.....	12-12
Quality	
Still images.....	6-3
Videos.....	6-4
Quick Open Menu	18-13

R	
Recipients (Adding/editing/deleting) ...	13-8
Referer Information.....	17-16
Remote Lock.....	16-5
Reset.....	11-12
All Reset.....	11-12
Browser Settings.....	17-16
Settings	11-12
Total Cost	17-8
Total Duration	17-8
TV Settings.....	17-12
Ring Songs&Tones folder	9-2
Ring Time (Answer Phone).....	2-16
Ring Time Settings.....	11-11
Ringer Volume	17-2
Ringtone	9-8, 17-2
Ringtone Duration.....	17-2
Root Certificates	17-16

S	
S! Addressbook Back-up.....	4-10
S! Appli [Section Contents]	15-1
S! Information Channel	7-4
S! Mail	13-2
Creating/sending	13-4
Mail Notice.....	13-11
Settings	17-14
Universal Settings	17-14
S! Quick News	1-17, 7-2
Save	
Alarms	12-7
Calendar	12-2
Notepad	12-9
Phone Book	4-3, 17-10
S! Information Channel.....	7-4
S! Quick News	7-2
Shortcuts	1-17
Still Images.....	6-8
User's Dictionary	3-10
Videos.....	6-8
Saved Pages.....	14-8
Script	17-16
Scroll Unit.....	17-15
SD Audio	8-2
Secret Data Only.....	11-9
Secret Mail Setting.....	11-9
Secret Mode	11-9
Secure Remote Lock	11-6
Security Code	1-24
Security Functions	11-2

Security level.....	15-4
Security Settings (Internet)	17-16
Security Settings (Mail)	11-10
Server Mail	13-14
Settings [Section Contents].....	17-1
Shikkari Talk	2-5
Shortcuts	1-17
Shutter sound	6-8
Side-keys Guard	11-8
Signal Strength.....	1-8
Simple Menu.....	1-22
SMS.....	13-2
Creating/sending	13-7
Settings	17-14
Universal Settings	17-14
Snooze	12-7
SoftBank Utility Software	10-6
Softkeys.....	ix
Software Update	18-11
Sort (Messages)	13-21
Spam Filter	13-17
Speaker ON/OFF	2-11
SSL	14-3
Still Images (Picture)	
Capturing	6-5
Editing	9-12
Streaming.....	14-12
Symbols	3-4
Symbol List.....	18-17

T	
Tasks	12-6
Templates (Graphic Mail).....	13-5
Text Entry [Section Contents]	3-1
Time Correction	17-7
Timer Lock at Close	11-6
TLS	14-3
Trimming (Editing Still Images)	9-12

U	
URL History	
PC Site Browser	14-5
Yahoo! Keitai	14-4
USB	10-6
User Mode	17-6
User's Dictionary	3-10
USIM Card	1-2
USIM Card Phone Book	4-3
USIM PINs	1-3

V	
Vibrator	
Incoming alert	17-2
S! Appli	17-17
Videos (Recording)	6-6
Videos folder	9-3
View Blind	1-25
Voice Announce	12-11
Voice Dial	4-14
Voice Mail	2-18
Voice Recorder	12-11
Volume	
Ringtone	17-2
S! Appli	17-17
Video Calls	2-7
Voice Calls	2-5

W	
Wallpaper	9-7, 17-3
Warning Messages (PC Site Browser) ...	17-15
Warranty	18-32
Weather Indicator	7-5
White balance	
Still Images	6-3, 6-8
Videos	6-4, 6-8
WMA Files	8-4
World Clock	17-7

Y	
Yahoo! Keitai	14-2
Access	14-3
Display Settings	17-15
Memory Manager & Settings	17-15
Security Settings	17-16

Z	
Zoom	6-7

Warranty & Service

Warranty

Warranty is provided when you purchase a 832P.

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

SoftBank is not liable for any damage resulting from use of this product.

After-Sales Service

See "Troubleshooting" (☞P.18-9) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (☞P.18-33) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

Check phone number before you dial.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at
157 for General Information or
113 for Customer Assistance

SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(Please take care to dial the correct number. International
charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Toll Free Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113