

# Getting Started

 
<b>Handset Parts</b> .....	<b>1-2</b>	<b>Codes</b> .....	<b>1-20</b>
Basic Key Operations.....	1-3	About Codes.....	1-20
<b>Display</b> .....	<b>1-6</b>	Security Code.....	1-20
Display Indicators.....	1-6	Center Access Code.....	1-20
Sub-display.....	1-8	Network Password.....	1-20
<b>USIM Card</b> .....	<b>1-10</b>	<b>Other Basic Information</b> .....	<b>1-21</b>
Before Using USIM Card.....	1-10	Checking Battery Level.....	1-21
Other Notes on USIM Cards.....	1-10	My Phone Number.....	1-21
USIM PINs.....	1-11	Using Earphone.....	1-21
USIM Card Installation.....	1-12	Side Key Guard.....	1-22
<b>Battery &amp; Charger</b> .....	<b>1-13</b>	Using ECO Mode.....	1-22
Notes on Charging Battery.....	1-13		
Battery Installation.....	1-13		
Charging Battery.....	1-15		
<b>Power On/Off</b> .....	<b>1-17</b>		
Power On.....	1-17		
Power Off.....	1-17		
<b>Mobile Manners</b> .....	<b>1-19</b>		
Minding Mobile Manners.....	1-19		
Activating Manner Mode.....	1-19		







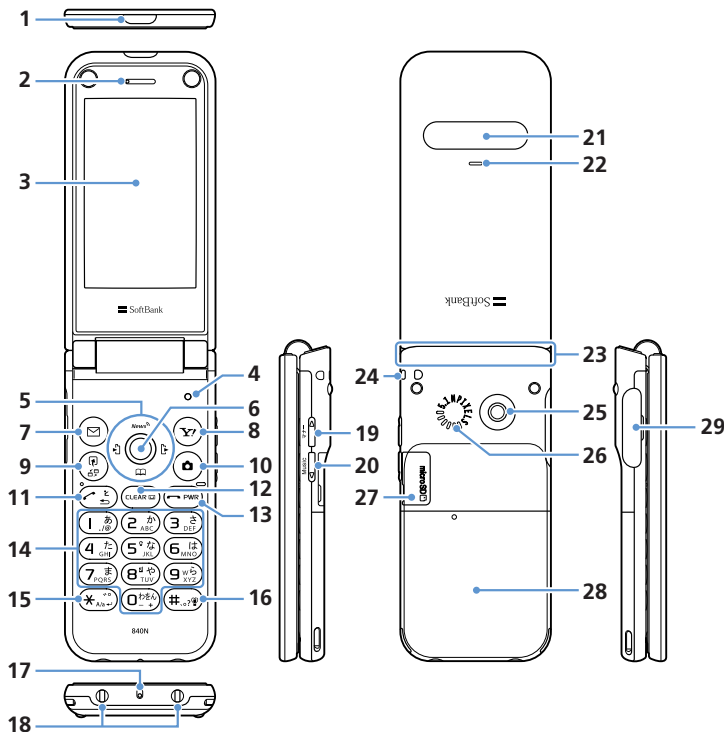


 
 



# 1

# Handset Parts

1

Getting Started

















 
- 1 Infrared Port
- 2 Earpiece
- 3 Display
- 4 Light Sensor
- 5 Multi Selector 
- 6 Center Key 
- 7 Mail Key 
- 8 Yahoo! Keitai Key 
- 9 Shortcut Key 
- 10 Camera Key 
- 11 Send Key 
- 12 Clear/Back Key 
- 13 Power/End Key 
- 14 Keypad 
- 15 \*Key 
- 16 #/Manner Key 
- 17 Microphone
- 18 Charger Terminals
- 19 Volume up/Manner Key 
- 20 Volume down/Music Key 
- 21 Sub-display
- 22 Charging Indicator/Illumination
- 23 Internal Antenna
- 24 Strap Eyelet
- 25 Camera
- 26 Speaker
- 27 Memory Card Slot
- 28 Battery Cover

## 29 External Device Port

**Tip**

- TV antenna is built into handset. For optimal signal reception, do not cover Internal Antenna with hands or anything else. Do not affix stickers over Internal Antenna.
- Key illustrations are simplified and differ in appearance from actual handset keys.

**Basic Key Operations****In Standby**









No.	Key/Operations	Description
5		Access Desktop Icons/Indicators.
	Press and hold 	Open S! Quick News List.
		Open Phone Book Search menu.
		Open Received Calls window.
	Press and hold 	Open Received Address List.
		Open Redial window.
	Press and hold 	Open Sent Address List.
6		Open Main Menu.
7		Open Mail menu.
	Press and hold 	Compose a new S! Mail.
8		Access Yahoo! Keitai portal.
	Press and hold 	Open Yahoo! menu.
9		Activate function assigned to key ( <i>Itsumono-Mail</i> is set by default).
	Press and hold 	Assign a function to key.
10		Activate Camera (Photo Mode).







No.	Key/Operations	Description
11		Open Tomo-Den Window.
12		Play messages on Answering Machine.
	Press and hold	Set/cancel Answering Machine.
13	Press and hold	Turn power on/off.
14	Press and hold	Set/cancel ECO Mode.
	Press and hold	Set font type, thickness and size.
	Press and hold	Set Privacy Angle on/off.
	Press and hold	Enter “+” (international access code).
16	Press and hold	Set/cancel Manner Mode.
19		Increase earpiece volume. View clock (handset closed).
	Press and hold	Set/cancel Manner Mode.
20		Decrease earpiece volume.
	Press and hold	Activate Music Player (unavailable when battery is low).

## During Voice Calls

 
No.	Key/Operations	Description
5		Open Phone Book Search Group menu.
	Press and hold	Continuously increase earpiece volume.
		Open Phone Book Search Column menu.
	Press and hold	Continuously decrease earpiece volume.
		Open Received Calls window.
		Open Redial window.
7		Turn handsfree on/off.
8		Toggle Hyper Clear Voice modes (High, OFF or Low).
9		Open Task Switch window.
12		Hold call.
13		End call.
	Press and hold	Turn power off.
16	Press and hold	Set/cancel Manner Mode.
19		Increase earpiece volume.
20		Decrease earpiece volume.
	Press and hold	Record other party's voice.

## During Text Entry



 



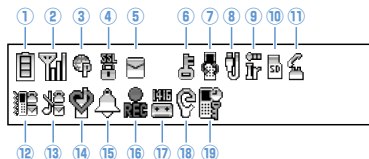 


No.	Key/Operations	Description
5		Insert line feed ↵ (when cursor is at the end of text).
		Add a space (when cursor is at the end of text).
7		Toggle character entry modes (in 5-touch or T9 input mode). Toggle double-byte and single-byte characters (in 2-touch mode).
	Press and hold 	Toggle text input methods (in 5-touch, 2-touch or T9 input mode).
8		Open pictograph, symbol or emoticon lists.
	Press and hold 	Convert S! Mail to Graphic Mail.
11		Cycle characters in reverse order (in 5-touch mode).
	Press and hold 	Undo last operation (conversion, pasting, cut, etc.) and return to the previous state.

No.	Key/Operations	Description
12		Delete one character to right of cursor. When cursor is at end of text, a character to left is deleted.
	Press and hold 	Delete all text to right of cursor. When cursor is at end of text, delete all text.
15		Enter dakuten (゛) or handakuten (゜) (in 5-touch, 2-touch or T9 input mode). Toggle case (in 5-touch or 2-touch mode). Insert line feed ↵.
	Press and hold 	Select area.
16		Toggle Shift, Caps Lock and lower case modes (when entering alphanumerics in T9 input mode).
	Press and hold 	Paste copied or cut text.

## Display Indicators



- ① Battery Level
- ② Signal Strength
  - Out of Range
  - Emission OFF Mode
  - USIM Lock Active
- ③ Packet Transmission Available (Yahoo! Keitai)
  - Packet Transmission in Progress (Yahoo! Keitai)
  - Packet Transmission Available (Dial-up Connection)
  - Packet Transmission in Progress (Dial-up Connection)
  - Packet Transmission in Progress (Sending/Receiving Data)
- ④ SSL Secured Site Connected
- ⑤ Unread S! Mail/SMS
  - Handset S! Mail/SMS Memory Full
  - USIM SMS Memory Full ( when there are unread S! Mail/SMS Messages)
  - Handset S! Mail/SMS & USIM SMS Memory Full
- ⑥ Dial Lock Active
  - Original Lock Active
  - Secret Mode/Secret Data Only Mode
  - Original Lock Active in Secret Mode/Secret Data Only Mode
- ⑦ Software Updated
- ⑧ Side Key Guard On
- ⑧ USB Cable Connected (Communication/microSD Mode)
  - microSD Mode
  - Handsfree Device Connected (Communication/microSD Mode)
  - USB Cable/Handsfree Device Connected (Communication/microSD Mode)
- ⑨ Infrared Transmission
  - S! Addressbook Back-up Sync in Progress
- ⑩ Memory Card Inserted
  - Invalid Memory Card Inserted
  - Memory Card Reader/Writer in Use
  - Accessing Memory Card
- ⑪ Voice Call
  - Video Call
  - Maximum Call Cost Limit Reached
- ⑫ Vibration Set for Incoming Calls & Messages
  - Vibration Set for Incoming Calls/Messages
- ⑬ No Ringtone for Incoming Calls & Messages
  - No Ringtone for Incoming Calls/Messages
- ⑭ Manner Mode
- ⑮ Alarm Set
  - Alarm Set for Today (appears prior to set time.)
- ⑯ One Seg Timer Recording in Progress

- 17  New Messages at Voice Mail Center
  -  Answering Machine On
    -  New Voice Calls
    -  New Video Calls
    -  New Voice & Video Calls
- 18  ECO Mode
  -  Privacy Angle On (  when Backlight is Off)
- 19  Keypad Lock Active (*After Closed* or *Timer is ON*)

## Tip

- To see indicator descriptions:  
 ⇒ *Settings* ⇒  ⇒ *Display* ⇒  ⇒ *Icons* ⇒ 

## Sub-display



- ① Battery Level
- ② Unread Messages  
 Handset Message Memory Full  
 USIM SMS Memory Full  
( when there are unread messages)  
 Handset & USIM SMS Memory Full
- ③ Manner Mode
- ④ Voice Call  
 Video Call
- ⑤ Packet Transmission Available  
(Yahoo! Keitai)  
 Packet Transmission in Progress  
(Yahoo! Keitai)  
 Packet Transmission in Progress  
(Sending/Receiving Data)
- ⑥ Signal Strength  
 Out of Range  
 Emission OFF Mode

## Animation

Handset status and new information appear on Sub-display.

### Examples



Clock (Digital 1)



Alarm



Incoming Call



Missed Call/  
New Mail (S! Mail/SMS)



On hold



TV Timer Recording



Emotion-Expressing  
Mail



Music Player

### Tip

- Sub-display may be hard to see when outdoors or under strong light.

## More Features

### Customize

#### Style Mode Settings

- Set Display Design Collectively
- Check Style Mode Settings
- Edit Title of a Style
- Save Current Style Mode Settings as Favorite
- Change Each Item for Favorites
- Clear All Favorite Settings

▶ P. 14-3

#### Display Settings

- Wallpaper
- Show Calendar in Standby
- Set Wallpaper Image to Change When Handset Returns to Standby
- Display Color Scheme
- Battery Level Indicator/Signal Strength Indicator Design
- Interface Language
- Guard from Prying Eyes
- Set Effect for Screen Change

▶ P. 14-3

#### Backlight

- Set Backlight & Power Saving
- Illuminate Display Only or Display and Keys
- Set Brightness of Backlight

▶ P. 14-5



## Standby Indicators

- Enable Indicator Selector

(▶ P. 14-7)

## Sub-display

- Notifications/Animation
- Set Clock Pattern
- Set Messages to Appear
- Set Time Signal
- Set Viewable Time

(▶ P. 14-8)

## Closed Illumination

- Set Flashing Color for Handset Close
- Set Flashing Pattern for Handset Close

(▶ P. 14-27)

 
## Before Using USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card that contains customer information (phone number, etc.). A USIM Card must be inserted to use your handset.

- Store Phone Book entries and SMS on USIM Card.
- Insert USIM Card into other USIM-compatible SoftBank handsets to use information on Card.
- Do not apply excessive force when inserting/removing USIM Card.
- SoftBank is not liable for any damage caused by inserting USIM Card into other IC card readers/writers.
- USIM Card may become warm during use. This is not a malfunction.
- Keep IC chip clean.
- For details, refer to the manual supplied with your USIM Card.
- Do not drop USIM Card or subject to excessive shock. Doing so may cause malfunction.
- Do not bend USIM Card or place heavy objects on it. Doing so may cause malfunction.
- Avoid extreme temperatures.
- Do not scratch, carelessly touch or short-circuit the IC chip. Doing so may result in data loss or malfunction.
- Clean USIM Card with a dry soft cloth (such as is used for eyeglasses).
- Use a SoftBank-designated USIM Card. Using a non-designated card may result in handset malfunction.

## Other Notes on USIM Cards

- USIM Cards are the property of SoftBank.
- USIM Cards will be reissued for a fee if lost or damaged.
- Return USIM Cards to SoftBank upon cancellation or suspension of service.
- Returned USIM Cards are recycled.
- USIM Card specifications and performance may change without prior notice.
- Keep a separate copy of data saved on your USIM Card. SoftBank is not liable for lost data.
- If USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P. 15-51).
- Downloaded files (S! Appli, videos, Saved Pages, etc.) saved to handset or memory card may be inaccessible after USIM Card replacement, handset upgrade or service subscription cancellation. If a different USIM Card is inserted, the cookies and cache are cleared to protect personal information.



## USIM PINs

There are two security codes for USIM Cards: PIN1 and PIN2.

### PIN1

PIN1 is a four- to eight-digit code to prevent unauthorized handset use by a third party.

- Default PIN1 is 9999.
- PIN1 can be changed (P. 4-2).
- When *PIN1 Code Entry Set* is set to *ON*, PIN1 must be entered each time handset is turned on to be used.

### PIN2

PIN2 is required to reset total call cost or to set a maximum limit to call costs.

- Default PIN2 is 9999.
- PIN2 can be changed (P. 4-2).

### PIN Lock & Cancellation (PUK)

If PIN1 or PIN2 is incorrectly entered three times consecutively, PIN Lock is activated, limiting handset use to specific functions. Enter Personal Unblocking Key (PUK1/PUK2) to cancel PIN Lock.

- For information on PUK, contact SoftBank Mobile Customer Center, General Information (P. 15-51).

### Note

- If PIN1 is incorrectly entered three times, and then PUK is incorrectly entered 10 times, USIM Card locks and handset cannot be used.
- If PIN2 is incorrectly entered three times, and then PUK is incorrectly entered 10 times, operations that require PIN2 will become unusable.
- Write down your PUK.
- To cancel USIM Card lock, contact SoftBank Mobile Customer Center, General Information (P. 15-51).

 
1

## USIM Card Installation


- Remove Battery (P. 1-14) before inserting or removing USIM Card.
- Be careful of notch when handling USIM Card. May injure your hands or fingers.

### Insertion

#### 1 Slide in USIM Card (IC chip facing down)

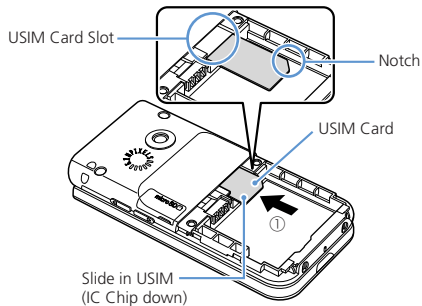


#### 2 Push USIM Card in completely

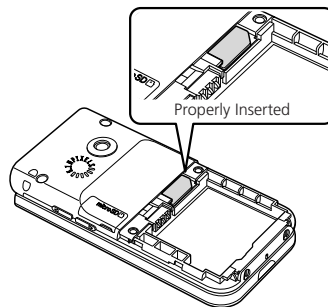 


### Removal
 
#### 1 Slide USIM Card out gently

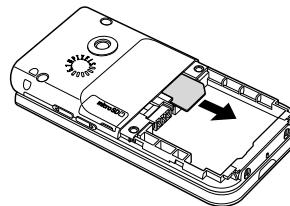

## Notes on Charging Battery

- Charge battery at least once every six months. If battery is left uncharged for a long period, it may become unusable or its operation time may decrease.
- Avoid connecting too many things to one AC outlet. Doing so may cause the AC outlet to overheat and cause a fire.
- Battery and AC Charger may become warm during charging, but this is not a malfunction. If they become too hot, however, stop charging and contact SoftBank Mobile Customer Center, Customer Assistance (P. 15-51).
- If Charging Indicator flashes red during charging, battery may be faulty. Contact SoftBank Mobile Customer Center, Customer Assistance (P. 15-51).
- Depending on the conditions of usage, the battery may expand as it nears the end of its life. However, this presents no safety problems.
- Check the battery type on its label:

 
Mark	Type
 Li-ion00	Lithium-ion battery Lithium-ion batteries are a recyclable resource. Do not dispose of them as municipal waste. Bring used batteries to your nearest SoftBank Shop or recycling center after insulating the terminals with tape. Observe local regulations on battery disposal.

## Battery Installation

- When installing Battery, make sure Battery is oriented correctly.


### Insertion

#### 1 Press and slide Battery cover off

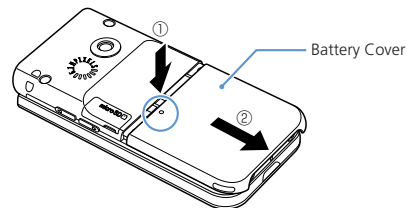


#### 2 Insert Battery

 Align ⊕ ▲ ⊖ marks on Battery and handset then slide Battery into place.

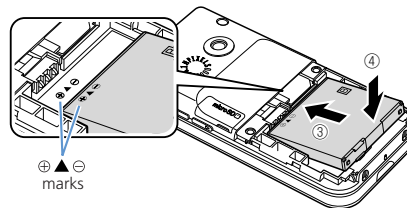

## 3 Replace cover

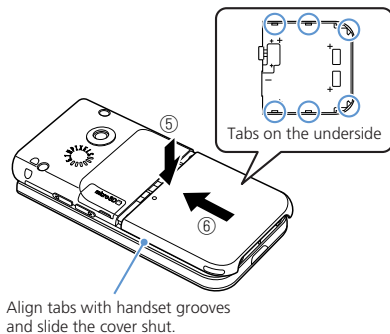 

Align tabs with handset grooves and slide the cover shut.

### Note

 
- Do not force Battery Cover shut. Tab may be misaligned and cause breakage.

## Removal

- Turn off handset before removing battery.

### 1 Remove Battery cover


### 2 Press (1) and lift out (2)

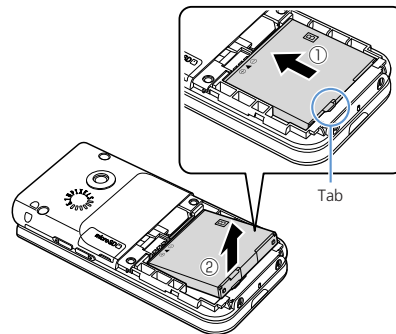

## Charging Battery


### Using AC Charger

 Use only SoftBank-specified AC Charger (ZTDAA1, sold separately).

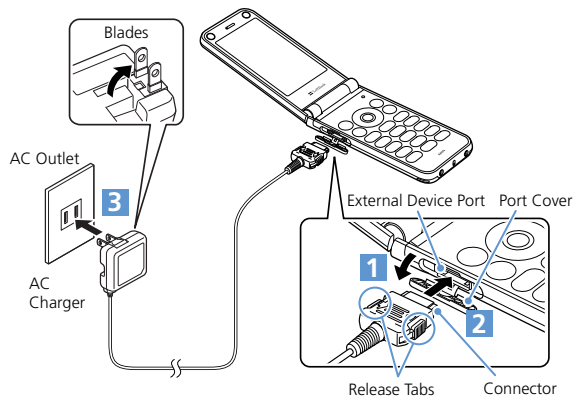

- 1 Open Port Cover
- 2 Insert Charger connector into External Device Port
- 3 Extend Charger blades and plug into an AC Outlet  
Charging Indicator lights red while charging. When charging is complete, Indicator goes out.
- 4 Disconnect connector from handset  
Press and hold Release Tabs to remove connector.
- 5 Unplug Charger from AC Outlet
- 6 Close Port Cover

### Note

 
- Battery can only be charged while inserted in handset.
- When both Charging Indicator and Display Indicator  go out and **Charge Unusual Stop Charge** appears, disconnect handset from AC Charger and remove battery. Set up handset and Charger and start charging again. If the same error occurs, AC Charger may be faulty or a non-specified charger is being used. Contact SoftBank Mobile Customer Center, Customer Assistance (P. 15-51).
- When Battery is fully depleted, etc., it may take time for Charging Indicator to illuminate.

# Battery & Charger

1

## Using Desktop Holder

Desktop Holder is sold separately.

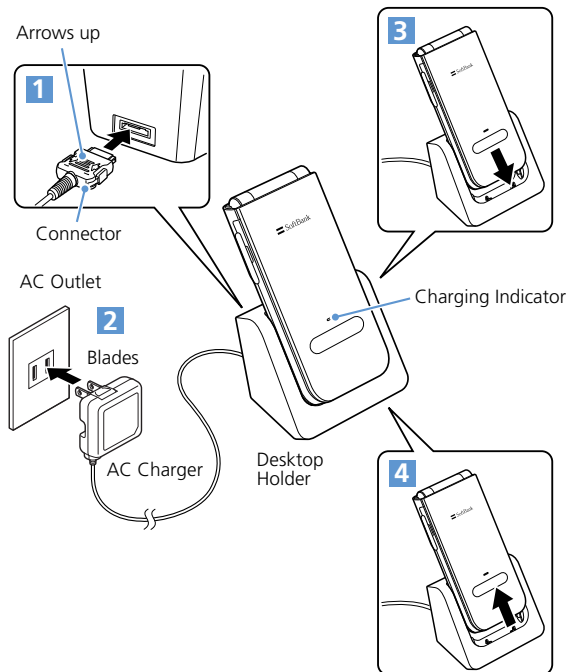

**1** Insert Charger connector into Desktop Holder

**2** Plug Charger into an AC Outlet

**3** Place handset in Desktop Holder

Charging Indicator lights red while charging. When charging is complete, Indicator goes out.

**4** Lift out

## More Features

### Customize

#### Backlight

- Set Backlight during Charging

(▶ P. 14-5)

#### Sounds

- Set to Play Charging Start/End Tones

(▶ P. 14-10)



## Power On

- Make sure USIM Card is correctly inserted before turning power on.

### 1 Press and hold



### Tip

- Power-on message (WELCOME) may appear on Display for a while when turning on handset immediately after turning power off or inserting battery.
- After USIM Card is replaced, Security Code is required when powering handset on for the first time. If Security Code is incorrectly entered five times, handset shuts down. Turn handset on again.

## Initial Setup

Setup prompt appears in Japanese the first time handset is turned on. Select **NO** and press **OK** to exit. Change interface language to English (P. 14-5) and restart handset to perform setup as follows.

### 1 [Initial Settings Window] ⇨ **YES**

⇨ **OK**

▶ **To Automatically Enter Date & Time**  
**Auto** ⇨ **OK** ⇨ Select a time zone ⇨

**OK**

▶ **To Manually Enter Date & Time**  
**Manual (Date Time Set)** ⇨ **OK** ⇨

Select a time zone ⇨ **OK** ⇨ Enter date and time ⇨ **OK**

### 2 Enter Security Code (9999) ⇨ **OK**

⇨ **Enter new Security Code** ⇨ **OK**

⇨ **YES** ⇨ **OK**

### 3 Select a font size ⇨ **OK**

Select **Separate Setting** to customize font per window (P. 14-4).

### 4 [Keypad Sound Setting Window]

⇨ **ON or OFF** ⇨ **OK**

### Tip

- Setup prompt no longer appears after setup is complete.
- The default Security Code is 9999.

## Retrieving Network Information

When **OK**, **Cancel**, **Home** or **Power** is pressed after initial setup, a prompt appears. Select **YES** to update network settings.

### Tip

- Retrieve network information to use network-related services, such as mail and the Internet.
- To manually update network settings:  
**OK** ⇨ **Settings** ⇨ **OK** ⇨ **Connection Settings** ⇨ **OK** ⇨ **Retrieve NW Info** ⇨ **OK** ⇨ **YES** ⇨ **OK**

## Power Off

### 1 Press and hold

Handset shuts down.

## More Features

### Customize

#### Clock

- Hide Clock
- Clock Size
- Clock Color
- Set Auto Time Adjustment
- Manually Adjust Time
- Summer Time
- Time Zone (Sub Clock)
- Hide Sub Clock
- Summer Time (Sub Clock)

(▶ P. 14-2)

#### Auto Power On/Off

- Set Auto Power On/Off

(▶ P. 14-3)

#### Display Settings

- Set a Wake-up Image
- Set a Wake-up Message
- Set Font Type
- Set Font Thickness
- Set Font Sizes Collectively
- Set Font Size for Each Function Window

(▶ P. 14-4)

#### Sounds

- Set Key Sound Off

(▶ P. 14-10)

#### Resetting Handset

- Reset All Settings to Default
- Initialize Handset to Default Status

(▶ P. 14-28)

## Minding Mobile Manners

Use your handset responsibly. Inappropriate handset use can be both dangerous and bothersome. Take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn handset power off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

## Activating Manner Mode



 
Mute handset sound.

### 1 Press and hold

#### Note

- When handset is set to vibrate for incoming calls, be careful as handset may slide off, slide into a stove, etc.

#### Tip

- Press and hold  again to cancel Manner Mode.
- Shutter click sounds even in Manner Mode.
- Press and hold  to set or cancel Manner Mode during a call. Short beeps sound through the earpiece when Manner Mode is set or canceled during a call.
- Set or cancel Manner Mode by pressing and holding .

## More Features

### Customize

Manner Mode

- Set Manner Mode Type
- Configure Original Manner Mode

[▶ P. 14-10](#)

## About Codes

Security Code, Center Access Code and Network Password are required to use handset.

- Do not reveal these codes to others. Write down your codes.
- SoftBank is not liable for any damage due to handset misuse.

## Security Code













Security Code, 9999 by default, is required to use some handset functions. The code can be changed.

- If Security Code is entered incorrectly or nothing is entered for 15 seconds, a tone sounds and a message appears. Enter correct Security Code.

### Note

- The warning tone does not sound in Manner Mode or when *Keypad Sound* is set to *OFF*.

## Changing Security Code

- 1   **Settings**  **Security**  
  **Change Security Code**  
 
- 2 **Enter current Security Code**  
- 3 **Enter new Security Code**   **YES** 

## Center Access Code

Center Access Code, a four-digit code assigned at initial subscription, is required to access Optional Services via landlines or to subscribe to fee-based information.

## Network Password

Network Password, a four-digit code assigned at initial subscription, is required to use Call Barring.

 


- If Network Password is incorrectly entered three times, Call Barring settings are locked. Network Password and Center Access Code must be changed.

## Checking Battery Level

Use Battery Level meters as a guide only.

### Battery Level Indicator

Appears at top of Display or on Sub-display.

-  Near full charge
-  Sufficient charge
-  Almost depleted; charge battery

### Battery Level Beeper & Large Indicator

Check battery level by number of beeps and large indicator.

- 1   $\Rightarrow$  **Settings**  $\Rightarrow$    $\Rightarrow$  **Other Settings**  $\Rightarrow$    $\Rightarrow$  **Battery Level**  $\Rightarrow$  

Battery Level indicator appears. Beeps sound according to the battery level.  
 Three beeps: Near full charge  
 Two beeps: Sufficient charge  
 One beep: Almost depleted; charge battery

### Note

- The battery level beeper does not sound in Manner Mode or when *Keypad Sound* is set to *OFF*.

## When Battery Is Empty

*Recharge battery* appears, the battery alarm sounds for about 10 seconds, and handset powers off in about 60 seconds. Charge battery.

## My Phone Number

Check handset phone number.



 


- 1   $\Rightarrow$  

Account Details appear.

### ■ Add Other Information

$\Rightarrow$    $\Rightarrow$  Enter Security Code  $\Rightarrow$    $\Rightarrow$   
 Select an item  $\Rightarrow$    $\Rightarrow$  Enter information  $\Rightarrow$    $\Rightarrow$  

### ■ View All Information

$\Rightarrow$    $\Rightarrow$  **Display All Data**  $\Rightarrow$    $\Rightarrow$  Enter Security Code  $\Rightarrow$    $\Rightarrow$   
 to switch tabs ( $\Rightarrow$  )

### ■ Reset Account Details

$\Rightarrow$    $\Rightarrow$  **Reset**  $\Rightarrow$   ( $\Rightarrow$  Enter Security Code  $\Rightarrow$   )  $\Rightarrow$  **YES**  $\Rightarrow$  

## Using Earphone

Use Stereo Earphone Conversion Cable (sold separately) to connect earphones.



### Note

- When ringtone volume (P. 14-8) is set to *Silent*, no sound is output to earphones. Set volume to *Level 1* or higher.

### Tip

- When sound source is monaural (calls, etc.), stereo earphones output monaural sound to left and right earphones; when sound source is stereo, only the left channel is output to monaural earphones.

## Side Key Guard


 



 





 



Disable Side Keys  and  while handset is closed.

1   Press and hold 

Repeat to cancel setting.

### Tip


• Alternatively, set Side Key Guard by:

-   Settings    Other Settings 
-   Side Key Guard    ON or OFF 
-   



## Using ECO Mode

Setting ECO Mode will dim Display and modify settings to decrease battery consumption.

1 Press and hold 

ECO Mode is set, and  appears.

### Tip


- Press and hold  again to cancel ECO Mode.
- Press and hold  to set or cancel ECO Mode during a call.

## More Features

### Customize

#### Earphone-Microphone

- Audio Output
- Microphone Setting
- Answer Calls Automatically
- Save a Phone Number for One-touch Dialing from Earphone-Microphone

 P. 14-11