 


Music Player & S! Appli

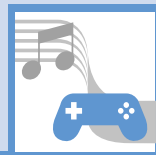

About Music Player	9-2
Playback Windows	9-3
Downloading Music	9-4
Transferring Music from PC.....	9-4
Music Playback.....	9-5
Playing Music.....	9-5
Using Playlists	9-6
S! Appli.....	9-7
About S! Appli.....	9-7
Downloading S! Appli.....	9-7
Activating S! Appli	9-7
Advanced Features	9-9
Music Player.....	9-9
S! Appli	9-11

9

 


About Music Player

Use Music Player to play and organize songs on handset.



- Access the Internet to download music.
- Also play videos with Music Player.
- Some files are unplayable depending on their format.

- Fully charge battery beforehand. Playback unavailable on low charge.
- Alarm notifications, incoming calls, etc. will pause playback. For videos, select the same video to resume watching.

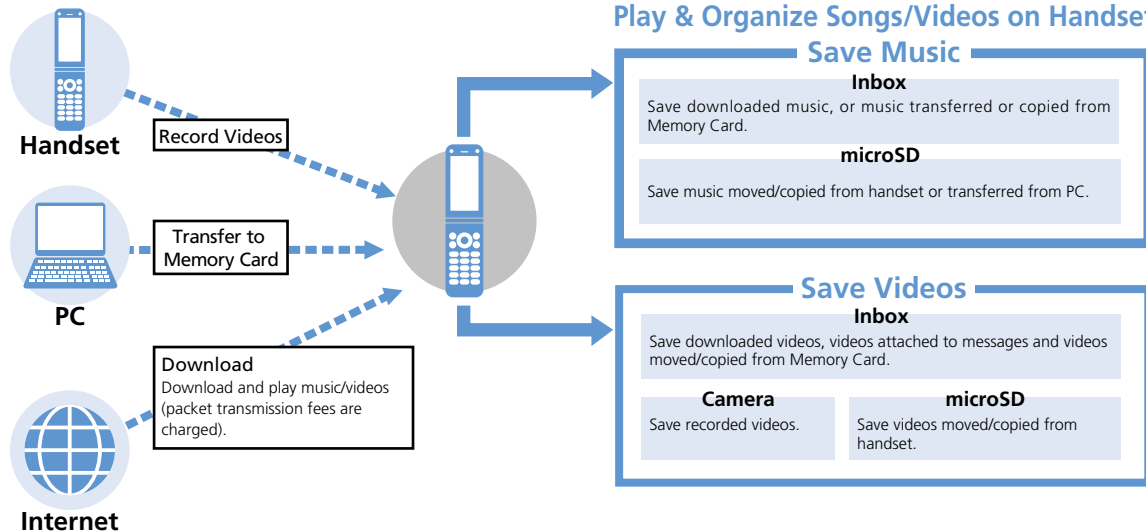



Playback Windows

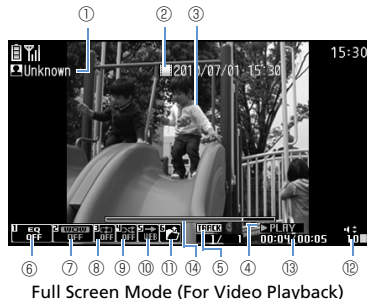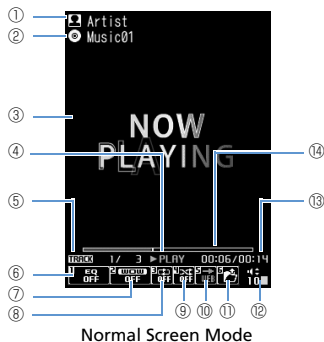  

①	Artist Name <Creator> ¹
②	Title
③	Playback Image <Video> ¹
④	Playback Status ▶ PLAY Play ⏸ PAUSE Pause ⏩ FF Fast Forward ⏪ REW Rewind ⏴ SLOW Slow Play ² ⏴ PLAY Fast Play ²
⑤	Current Track/Total Tracks in Folder (Current File Number/Total Files in Folder)
⑥	Equalizer ⏻ OFF Bass Bass Treble Treble Treble Reducer Treble Reducer Pop Jazz Rock Techno Classical For each genre of music Speech For audio playback
⑦	Sound Effect ⏻ OFF ⏻ +1 ⏻ +2 ⏻ +3 Bass correction (+1 to +3) ⏻ (S) Surround ⏻ +1(S) ⏻ +2(S) ⏻ +3(S) Bass correction (+1 to +3)/surround ⏻ User1 ⏻ User2 ⏻ User3 User settings
⑧	Repeat Mode ⏻ OFF ⏻ Repeat All ³ ⏻ Repeat One ³

⑨	Shuffle Mode ⏻ ON ³ ⏻ OFF
⑩	To Web Connect to the URL in the song.
⑪	Song/file Selection
⑫	Volume
⑬	Elapsed Playback Time/Total Playback Time
⑭	Playback Position indicates the current playback position. Use ⏴ to move playback position during pause.

- 1 Descriptions in < > apply to video playback.
- 2 Available during video playback.
- 3 Available during music playback.



Downloading Music

- Check the fees, expiration date, etc. on the download site.

1 ● ⇨ **Music** ⇨ ● ⇨ **Download Music** ⇨ ● ⇨ **YES** ⇨ ●

2 Follow onscreen instructions

Transferring Music from PC

Save music from PC to memory card for playback.

- Music Player plays AAC-format music (file extension mp4 or 3gp). Use software to convert file format as needed.

1 ● ⇨ **Settings** ⇨ ● ⇨ **External Connection** ⇨ ● ⇨ **USB Mode Setting** ⇨ ● ⇨ **microSD Mode** ⇨ ●

2 **Connect handset to your PC with a USB cable**

This enables memory card data to be accessed from your PC.

3 **Copy music to memory card folder**

Copy to the following folder:

¥PRIVATE¥MYFOLDER¥My Items¥Music

4 **Remove USB cable from your PC and handset**

Follow appropriate procedure for your PC's OS when removing cable.

Note

- See software providers' websites for specifications and usage of file format conversion software. SoftBank provides no guarantees regarding operation of any specific software.
- Music is for personal use only.
- Files created with PC software, etc. may not play.
- Do not infringe on third party/intellectual property rights.

Tip

- After saving music, return *USB Mode Setting* to *Communication Mode*.



Playing Music

 
1 **Music**

2 Select a folder

■ To Play Music in Memory Card


microSD **Music**

Select a folder



Song List

 3 Select a song

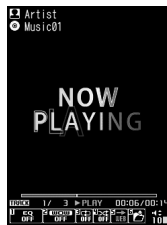

Music Playback Window
(Video Playback Window)

Tip

- Alternatively, play music from *Ring Songs* • *Music* in Data Folder.
- Alternatively, in Standby, press and hold to start Music Player. Play resumes from where it was paused last.
- If files were saved to memory card via another handset, those files may be saved to *Sound&Ringtones*. To play:
 - Music** **microSD**
 - Ring Songs** Select a folder
 - Specify music to play
- To play videos downloaded or recorded with camera:
 - Data Folder** **Videos**
 - Select a folder Specify a video to play
- When video is about to be played the first time, a confirmation appears asking whether to play video in Full Screen Mode all the time. Select **YES** or **NO** and press . Confirmation no longer appears.

Playback Operations

While Handset is Open

Pause/Play	
Adjust Volume	or press and hold
	or

Play from Beginning Play Previous Song or Video	or press and hold
Play Next Song/Video	or press and hold
Rewind	Press and hold
Fast Forward	Press and hold
Move Playback Position	during pause
Open/Close Menu	
Select a Song/File	or
Equalizer ¹	
Sound Effect ¹	
Repeat Mode ¹	
Shuffle Mode ¹	
Access the Internet	
Toggle Normal Screen and Full Screen ²	
End Playback	

¹ Press key to toggle on/off.

² Available when playing videos.



While Handset is Closed

Adjust Volume	↔ 77- or ↕ Music
Playing from Beginning Play Previous Song or Video	Press and hold ↕ 77-
Play Next Song/Video	Press and hold ↕ Music

Using Playlists

Use playlists to play songs by genre or by artist, or gather your favorite songs and arrange them in your favorite order.

- Songs saved on memory card can also be added to playlists.

Creating a Playlist

- 1 ● → **Music** → ● → **Playlist** → ●



Playlists Window

- 2 ● → **Create Playlist** → ●

- 3 Select a folder → ● → Select a song → ●

 
Repeat this step to add other songs.

- 4 When all songs are selected → ☺ → Enter playlist name → ●

Playing Songs from Playlist

- 1 [Playlists Window] → Select a playlist → ●

To play all songs in the playlist, press ☺.



Playlist

- 2 Select a song → ●

Songs play back in the listed order.

Tip

- To play all songs, select *All Tracks (Phone)* in Playlists window and press ● (twice).

More Features

Advanced

Playing Music/Video

- Resume Playback
- Use Menu
- File Information
- Repeat
- Set Preferred Sound Effect
- Change Playback Window Appearance
- Set Image Display Size
- Change Video Playback Speed
- Use a Different Function While Playing Music
- Check Operation Methods

▶ P. 9-9

Organizing Songs

- Set a Song as Ringtone
- Search for Songs
- Change Order of Songs
- Check Volume of Saved Music

▶ P. 9-10

Playlists

- Add Songs to Playlist
- Change Order of Playlist Songs
- Cancel Playlist Songs
- Edit a Playlist Name
- Copy a Playlist
- Check Playlist Information
- Delete Playlists

▶ P. 9-10



About S! Appli

S! Appli are applications designed for SoftBank handsets. Download games and other applications.

About Network S! Appli

Since network S! Appli require network (Internet) connection, transmission fees are incurred. A confirmation may appear when an application is connecting to the network. Follow onscreen instructions.

Tip

- For information on transmission fees, contact SoftBank Mobile Customer Center, General Information (P. 15-51).

About License Information

To check Java™ and JBlend™ license information:

- 1 ⇒ **S! Appli** ⇒ ⇒ ⇒ **Information** ⇒

Downloading S! Appli

- 1 ⇒ **S! Appli** ⇒ ⇒ **S! Appli List** ⇒ ⇒ **Download S! App** ⇒ ⇒ **YES** ⇒

Follow onscreen instructions.

Note

- Check the battery level before downloading S! Appli. If the battery level is low, download may fail.
- If you replace USIM Card due to damage or loss, downloaded S! Appli are no longer available.
- If you initialize handset when using an S! Appli moved to Memory Card, the S! Appli will no longer be usable. You will need to download it again.
- When using an S! Appli moved to Memory Card, using the procedures below will resave the S! Appli to your handset and the S! Appli in Memory Card will no longer be usable.
 - Download the same S! Appli with no Memory Card inserted
 - Download the same S! Appli with different Memory Card inserted
 Use an S! Appli resaved to handset as it is in handset, or again move it to Memory Card.

Tip

- See S! Appli's Help menu or the download site for operational information.

Activating S! Appli

- 1 ⇒ **S! Appli** ⇒ ⇒ **S! Appli List** ⇒



S! Appli List

- 2 Select an application ⇒

Tip

- S! Appli is paused when a call arrives. When the call ends, a prompt appears. Select **Resume** to resume the S! Appli.
- To end S! Appli: While running, ⇒ **End** ⇒



More Features

Advanced

S! Appli

- Check S! Appli Information
- Check Volume of Saved S! Appli
- Delete an S! Appli

(▶ P. 9-11)

Customize

When Running S! Appli

- Set Sound Volume
- Set Vibration
- Set Backlight
- Set Blinking of Backlight
- Allow/Prohibit S! Appli to Connect to Network
- Allow/Prohibit S! Appli to Write Personal Information
- Reset Security Settings of S! Appli

(▶ P. 14-24)

S! Appli

- Reset S! Appli Settings
- Delete All S! Appli

(▶ P. 14-24)



Music Player

Start Here

[Music Playback Window]	P. 9-5
[Video Playback Window]	P. 9-5
[Song List]	P. 9-5
[Playlists Window]	P. 9-6
[Playlist]	P. 9-6

Playing Music/Video

Resume Playback

● → **Music** → ● → **Resume Play** → ●

Use Menu

[Music Playback Window]/[Video Playback Window] → ☰ → Select an item → ●*
*Press to toggle.

File Information

[Music Playback Window]/[Video Playback Window] → ● → **File Property** or **Video Info** → ●

Repeat

[Music Playback Window] → ☰ → **Action Setting** → ● → **Repeat Setting** → ● → **All Repeat** or **Single Repeat** → ●

Set Preferred Sound Effect

[Music Playback Window]/[Video Playback Window] → ☰ → **Action Setting** → ● → **Sound Effect** → ● → **SRS_WOW** → ● → Select user setting 1 to 3 → ☺ → Set level for each effect → ●

- To return sound effect to initial state
→ Select user setting 1 to 3 → ☺ (twice) → ●

Change Playback Window Appearance

[Music Playback Window] → ☰ → **Action Setting** → ● → **Change Skin** → ● → Select a design → ●

Set Image Display Size

[Video Playback Window] → ☰ → **Action Setting** → ● → **Set Image Disp.** → ● → **Normal** or **Fit in Display** → ●

📄 Available when playing in Normal Screen mode.

Change Video Playback Speed

[Video Playback Window] → ☰ → **Play Menu** → ● → **Fast** or **Slow** → ●
📄 Press ☺ to return to normal speed.

Use a Different Function While Playing Music

[Music Playback Window] → ☰ → **Switch to BGM** → ● → Activate another function
📄 In Standby, press and hold 🎵 during BGM playback to end Music Player.

Check Operation Methods

[Video Playback Window] → ☰ → **Help** → ●



Organizing Songs

Set a Song as Ringtone

[Song List] → Select a song → → **Select Ring Tone** → → Select ringtone item →

Search for Songs

[Song List], [Playlists Window] or [Playlist] → → **Search** → → **Title** → → Enter condition →
 Select a song from search results and press to play it.

Change Order of Songs

[Song List]/[Playlist] → → **Sort** → → Select a criterion →

Check Volume of Saved Music

[Song List] → → **Memory Info** →

Playlists

Add Songs to Playlist

[Playlist] → → **Edit Playlist** → → **Add Music** → → Select a folder → → Select songs → → → **YES** →
 The songs you selected are added at the end of the playlist.

Change Order of Playlist Songs

[Playlist] → Select a song → → **Edit Playlist** → → **Sort Playlist** → → Select a position →

Cancel Playlist Songs

[Playlist] → Select a song → → **Edit Playlist** → → **Release Settings** →
● To Release the Selected Song
→ **Release This** → → **YES** →
● To Release Multiple Songs
→ **Release Selected** → → Select songs → → → **YES** →
● To Release All
→ **Release All** → → Enter Security Code → → **YES** →

Edit a Playlist Name

[Playlists Window] → Select a playlist → → **Edit Playlist Name** → → Edit playlist name →

Copy a Playlist

[Playlists Window] → Select a playlist → → **Copy to Playlist** →

Check Playlist Information

[Playlists Window] → Select a playlist → → **Playlist Info** →

Delete Playlists

[Playlists Window] → Select a playlist → → **Delete Playlist** →
● To Delete the Selected Playlist
→ **Delete This** → → **YES** →
● To Delete Multiple Playlists
→ **Delete Selected** → → Select playlists → → → **YES** →
● To Delete All
→ **Delete All** → → **YES** →





S! Appli

Start Here

[S! Appli List] P. 9-7



Check S! Appli Information

[S! Appli List] ⇨ Select an S! Appli ⇨  ⇨
Properties ⇨ 

Check Volume of Saved S! Appli

[S! Appli List] ⇨  ⇨ *Memory Info* ⇨ 

Delete an S! Appli

[S! Appli List] ⇨ Select an S! Appli ⇨  ⇨
Delete ⇨  ⇨ *YES* ⇨ 