

Media Player



Using Media Player	8-2
Downloading Media Files	8-3
Downloading Music & Movies	8-3
Saving Media Files to Phone/Memory Card	8-3
Playing Music	8-3
Media Player Music Window	8-4
Playing Music.....	8-4
Playing Movie	8-5
Media Player Movie Window	8-6
Playing Movie	8-7
Using Playlist	8-8
Creating Playlist.....	8-8
Playing Playlist.....	8-8
Streaming	8-8
Streaming from Page Link.....	8-8
Entering URL.....	8-9
Accessing from Bookmark	8-9
Accessing from History	8-9
Advanced Settings	8-9
Music Playback	8-9
Movie Playback	8-10
Playlist	8-11
Streaming	8-11

Using Media Player

This handset features a Media Player.


Download media files via Yahoo! Keitai or create personal playlists.

Playing Media Files



Play music or movies via Media Player (➔P.8-4, P.8-7).
Select a music or movie file from folders or playlists.

Saving Music/Movie from PC to Memory Card

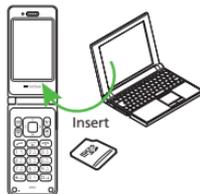

Insert Memory Card with music or movies on it that
was saved on PC into the handset (➔P.8-3).

8

Media Player

Downloading Media Files



Access Yahoo! Keitai to download music or movies.
Download movie content or play it back in Streaming
(➔P.8-3).

Creating Playlists



Add your favorite music or movies to a playlist and
create your own music or movie album (➔P.8-8).

Downloading Media Files

Access Yahoo! Keitai to download music or movies and copy them to handset.

Note

- **Downloading music or movies may incur high Packet Communication charges since they contain a large volume of data.**

Downloading Music & Movies

1  → *Media*

2 **Download music or movie**

- **To Download Music**
Music → *All music* → *Download Music*
- **To Download Movie**
Movie → *All movies* → *Download Movies*

Saving Media Files to Phone/Memory Card

To convert music or movie file formats, software is required.

- SoftBank Mobile does not guarantee proper operation with any specific software.
- For software specifications or operations, see SoftBank Mobile Website.

1 Insert Memory Card into handset

- Follow instructions (P.12-8).

- Save files to the following folders by type:

Music file: PRIVATE/MYFOLDER/My Items/Music
PRIVATE/MYFOLDER/My Items/Sounds & Ringtones

Movie file: PRIVATE/MYFOLDER/My Items/Movie

- After saving files, insert Memory Card into handset and load saved files to play the files.


Playing Music

Folder structure is as follows.

Folder	Description
Last played/Now playing	Last played or currently played file
All music	Up to 9999 music files
Playlists	View playable file in Music in created folders
Artists	All music files by Artist
Albums	All music files by Album
Genres	All music files by Genre
Folders	All music files in Ring songs · tones and Music folders of Data Folder
Recent music	100 most recently played files (most recent first)
Most played music	100 most frequently played files (most frequent first)

- Files on Memory Card may take longer to load.
- Only the files, which can be played with *Music*, appear.

Media Player Music Window

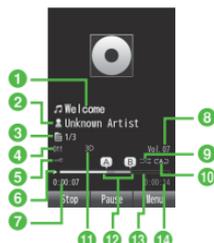

Music Playback

- 1 Title (file name when title is unknown)
- 2 Artist's name
- 3 File number/Total number of files
- 4 Equalizer
- 5 Copyright protection
- 6 Playing status: Play/Pause/Stop
- 7 Elapsed playing time
- 8 Volume level
- 9 Shuffle
- 10 Repeat mode
A : Off
1 2 : Repeat one
1 2 3 : Repeat all
- 11 3D sound

- 12 Repeat section
- 13 Progress bar
- 14 Total playing time

Shortcut Key Operations

Press shortcut assigned key to perform the operation. Available operations vary according to playing status and file type.

Key	Description
	Play/Pause
	Next song
	Previous song/Beginning of current song
	Volume up
	Volume down
	Stop
	Menu
	Repeat pattern setting
	Shuffle
	Equalizer
	Time search
	Repeat section

- May not play properly depending on the music file or the environment.

Playing Music

1 → *Media* → *Music*

2 Play a file

- To Play Most Recently Played File
Last played
 - While playing, *Last played* will be *Now playing*.
- To Select from All Files
All music → Select a file
- To Select from Playlists
Playlists → Select a playlist → Select a file
- To Select from Artists List
Artists → Select an Artist → Select a file
- To Select from Albums List
Albums → Select an Album → Select a file
- To Select from Genres list
Genres → Select a genre → Select a file
- To Select from Folder List
Folders → Select a folder → Select a file
- To Select from Recent Music List
Recent music → Select a file
- To Select from Most Played Music List
Most played music → Select a file

- When Memory Card is inserted, Memory Card files appear in **All music** and **Folders** with .
- While Media Player is active, press  repeatedly to hide Music playback window. Also, press  to choose whether to exit Music playback window or keep playing the music as BGM. In Standby, press  to end Media Player. End confirmation appears, choose **Yes**.
- If a call arrives while playing music in Music playback window, playback pauses and handset rings. After call ends, paused Music playback window returns. For BGM, playback resumes automatically after call ends.
- When the alarm is activated while music is being played in Music playback window, playback pauses, Alarm sounds and indicator appears. Press any key to stop Alarm and to clear the indicator. For BGM, playback resumes.

Advanced

Advanced Settings (☎ P.8-9)

- Searching File by Text
- Sending Files
- Sorting Files
- Purchasing/Downloading Content Key
- Viewing File Details
- Playing from Specified Point
- Viewing Lyrics
- Connecting Web Link
- Checking Shortcut Key Assignments

Settings

- Set Repeat Mode (☎ P.14-22)
- Set Shuffle (☎ P.14-22)
- Set Equalizer (☎ P.14-22)
- Set 3D Sound (☎ P.14-22)


Playing Movie

Folder structure is as follows.


Folder	Description
Last played	Play most recently played file
All movies	View all playable file in Movie up to 9999
Playlists	View playable file in Movie in created folders
Folders	View files in Movie folders of Data Folder
Recent movies	View up to 100 most recently played file (most recently played file appears first)
Most played movies	View up to 100 most frequently played file (most frequently played file appears first)

- Files on Memory Card may take longer to load.
- Only the files, which can be played with **Movie**, appear.

Media Player Movie Window

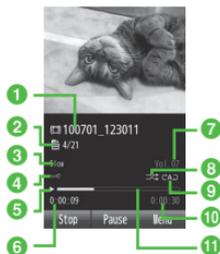

Movie Playback

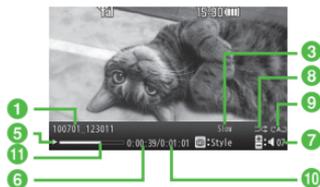

Movie Playback

- 1 Video title (or file name when title is unknown) and artist's name
- 2 File number/Total number of files
- 3 Playback speed
- 4 Copyright protection
- 5 Playing status: Play/Pause/Stop
- 6 Elapsed playing time
- 7 Volume level

- 8 Shuffle
- 9 Repeat mode
 - : Off
 - : Repeat one
 - : Repeat all
- 10 Total playing time
- 11 Progress bar

Shortcut Key Operations

Press shortcut assigned key to perform the operation. Available operations vary according to playing status and file type.

Normal Screen Display (Portrait)

Key	Description
	Play/Pause
	Next clip
	Previous movie/Beginning of current movie
	Volume up
	Volume down
	Stop
	Menu
	Fullscreen view
	Repeat pattern setting
	Shuffle
	Switch Display size
	Time search
	Capture frame
	Playback speed

Fullscreen View (Landscape)

Key	Description
	Play/Pause
	Volume up
	Volume down
	Next movie
	Previous movie/Beginning of current movie
	Standard view
	Repeat pattern setting
	Shuffle
	Screen capture
	Playback speed

Playing Movie

1 → *Media* → *Movie*

2 Play a file

■ To Play Most Recently Played File
Last played

■ To Select from All Files
All movies → Select a file

■ To Select from Playlists
Playlists → Select a playlist → Select a file

■ To Select from Folder List
Folders → Select a folder

■ To Select from Recent Movie List
Recent movies → Select a file

■ To Select from Most Played Movie List
Most played movies → Select a file

- Highlight *All movies* → press (Play) to play all the appropriate files in list.
- When Memory Card is inserted, Memory Card files appear in *All movies* and *Folders* with .
- In *All movie/Folder*, highlight file to show preview.

Advanced

Advanced Settings (P.8-10)

- Searching File by Text
- Sending Files
- Sorting Files
- Purchasing/Downloading Content Key
- Viewing File Details
- Viewing Movie in Fullscreen
- Changing Window Size
- Playing from Specified Point
- Capturing Still Image from Movie
- Connecting to Web Link
- Changing Playback Speed
- Checking Shortcut Key Assignments

Settings

- Set Repeat Mode (P.14-22)
- Set Shuffle (P.14-22)
- Set Backlight (P.14-22)
- Set Portrait Style (P.14-22)
- Set Display for Activating Movie (P.14-22)
- Show/Hide Movie Preview (P.14-22)
- Access/Ignore Linked Information (P.14-22)

Using Playlist

Create Playlist to make your own album.

Creating Playlist

Create up to 20 playlists with 100 files in each playlist.

 
- 1  → *Media* → *Music or Movie* → *Playlists* →  (New)
- 2 Enter playlist name
- 3 Select created playlist
- 4  (Add)
- 5 Check files to save →  (Add)

Playing Playlist

- 1  → *Media* → *Music or Movie* → *Playlists*
- 2 Select a playlist
- 3 Select a file

• Playlist cannot be played if a saved file has been deleted, or if file was added from Memory Card and Memory Card was removed. Insert Memory Card and load file to play.

Advanced

 **Advanced Settings** (☞ P.8-11)

- Adding Files to Playlist
- Removing Files from Playlist
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist

Streaming

Enjoy audio visual media while it is being downloaded. Access compatible files via page links, etc.

Note

- Even if streaming is paused, Internet connection remains active, incurring Packet Communication charges.

Streaming from Page Link

- 1 Open a page containing a page link
- 2 Select a link



Streaming

- Play/Stop operation while streaming is the same as that of Media Player (☞ P.8-4, P.8-6).

Entering URL

1 → *Media* → *Streaming* → *Enter URL*

- Default: "rtsp://" is set.

2 Enter URL

Accessing from Bookmark

Save up to 20 links in Streaming Bookmark.

1 → *Media* → *Streaming* → *Bookmark*

2 Select a bookmark

Accessing from History

Hold 20 previously accessed links.

1 → *Media* → *Streaming* → *History*

2 Select history

Advanced

Advanced Settings P.8-11

- Changing Display Size
- Playing from Specified Point
- Saving File to Bookmark while Streaming
- Accessing Streaming Saved as Bookmark
- Accessing Previously Accessed Stream
- Saving Streaming Bookmark via Direct Entry
- Deleting Streaming Bookmark URL

Advanced Settings

Music Playback

Setting Files to Ringtone in Normal Mode

 → *Media* → *Music* → *All music* → Highlight a file →  (Set as) → Select an item

- This operation is not available for files that cannot be added to Ringtone.

Searching File by Text

 → *Media* → *Music* → *All music* →  → *Search files* → Check *Title* or *Artist* → Select Search field → Enter title or artist name →  (Search)

Sending Files

 → *Media* → *Music* → *All music* → Highlight a file →  → *Send*

■ To Send via Message

Via message →  P.4-4 S! Mail 

■ To Send via Infrared

Via infrared → Check files →  (Send)  P.13-3

Sorting Files

 → *Media* → *Music* → *All music* →  → *Sort by* → Select an item

- Perform the same operation on files in **Folder**.
- While loading files from Memory Card, the order of music files may not be changed. Perform the same operation again.

Purchasing/Downloading Content Key

■ → **Media** → **Music** → **All music** → Highlight a file →  → **Download Content key**

Viewing File Details

■ → **Media** → **Music** → **All music** → Highlight a file →  → **Details**

- Alternatively, during playback, press  → **Details**.
- Perform the same operation in other folders.

Playing from Specified Point

In Music playback window,  → **Time search** → Enter duration → ■ (Jump)

Viewing Lyrics

In Music playback window,  → **View lyrics**

- This is not available when music file is compatible with this function.

Connecting Web Link

In Music playback window,  → **Connect web link** → **Yes**

- This is not available when web link does not exist.

Checking Shortcut Key Assignments

In Music playback window,  → **Help**

Movie Playback

Setting Files to Ringtone in Normal Mode

■ → **Media** → **Movie** → **All movies** →

Highlight a file →  (Set as)

- This operation is not available for files that cannot be added to Ringtone.

Searching File by Text

■ → **Media** → **Movie** → **All movies** →  →

Search files → Check **Title** or **Author** → Select

Search field → Enter title or author's name →

 (Search)

Sending Files

■ → **Media** → **Movie** → **All movies** →

Highlight a file →  → **Send**

■ To Send via Message

Via message → (📧P.4-4 S! Mail 📧)

■ To Send via Infrared

Via infrared → Check files →  (Send) (📧P.13-3)

Sorting Files

■ → **Media** → **Movie** → **All movies** →  →

Sort by → Select an item

- Perform the same operation on files in **Folder**.

Purchasing/Downloading Content Key

■ → **Media** → **Movie** → **All movies** → Highlight a file →  → **Download Content key**

Viewing File Details

■ → **Media** → **Movie** → **All movies** →

Highlight a file →  → **Details**

- Alternatively, in Movie playback window (Landscape view), press  → **Details**.
- Perform the same operation in other folders.

Viewing Movie in Fullscreen

In Movie playback window (Landscape view),  → **Full screen view**

Changing Window Size

In Movie playback window (Landscape view),  → **Resolution** → Select an item

- To view movie in fullscreen, the file has to be 320 x 192 resolution.

Playing from Specified Point

In Movie playback window (Landscape view),  → **Time search** → Enter duration → ■ (Jump)

Capturing Still Image from Movie

In Movie playback window (Landscape view),  → **Capture frame**

Connecting to Web Link

In Movie playback window (Landscape view),  → **Connect web link** → **Yes**

Changing Playback Speed

In Movie playback window (Landscape view),  → **Playback speed** → Select an item

- Sound is muted while changing playback speed.

Checking Shortcut Key Assignments

In Movie playback window (Landscape view),  → **Help**

Playlist

Adding Files to Playlist

 → **Media** → **Music/Movie** → **All music/All movies**

■ To Add an Item

Highlight a file →  → **Add to playlist** → **Selected** → Select a playlist

■ To Add Multiple Items

 → **Add to playlist** → **Multiple** → Check files →  (Add) → Select a playlist

Removing Files from Playlist

 → **Media** → **Music/Movie** → **Playlists** → **Select a playlist**

■ To Remove an Item

Highlight a file →  → **Remove** → **Selected**

■ To Remove Multiple Items

 → **Remove** → **Multiple** → Check files →  (Delete)

■ To Remove All Items

 → **Remove** → **All** → **Yes**

Changing Order of Files in Playlist

 → **Media** → **Music/Movie** → **Playlists**
→ Select a playlist → Highlight a file →  → **Change order** → Highlight a destination with 
→  (OK)

Renaming Playlist

 → **Media** → **Music/Movie** → **Playlists** → Highlight a playlist →  → **Rename** → Enter playlist name

Deleting Playlist

 → **Media** → **Music/Movie** → **Playlists**

■ To Delete an Item

Highlight a playlist →  → **Delete** → **Selected** → **Yes**

■ To Delete Multiple Items

 → **Delete** → **Multiple** → Check playlists →  (Delete) → **Yes**

■ To Delete All Items

 → **Delete** → **All** → **Yes**

Streaming

Playing the Last Played Stream

 → **Media** → **Streaming** → **Last played**

Changing Display Size

While streaming,  → **Resolution** → Select an item

Playing from Specified Point

While streaming,  → **Time search** → Enter duration →  (Jump)

Saving File to Bookmark while Streaming

While streaming,  → **Add bookmark** → Select Title field → Enter title → Select URL field → Enter URL →  (Save)

Accessing Streaming Saved as Bookmark

While streaming,  → **View bookmark** → Select bookmark

Accessing Previously Accessed Stream

While streaming,  → **View history** → Select history

Editing Streaming Bookmark URL

 → **Media** → **Streaming** → **Bookmark** → Highlight a bookmark →  (Edit) → Select Title field → Edit title → Select URL field → Edit URL →  (Save)

- Alternatively, while streaming, press  → **View bookmark** → Highlight a bookmark →  (Edit) → Select Title field → Edit title → Select URL field → Edit URL →  (Save).

Saving Streaming Bookmark via Direct Entry

- → **Media** → **Streaming** → **Bookmark** → 
 - **Add bookmark** → Select Title field → Edit title
 - Select URL field → Edit URL →  (Save)
 - Alternatively, while streaming, press  → **View bookmark** →  → **Add bookmark** → Select Title field → Edit title → Select URL field → Edit URL →  (Save).

Deleting Streaming Bookmark URL

- → **Media** → **Streaming** → **Bookmark**

■ To Delete an Item

Highlight a bookmark →  → **Delete** → **Selected** → **Yes**

■ To Delete Multiple Items

 → **Delete** → **Multiple** → Check bookmarks →  (Delete) → **Yes**

■ To Delete All Items

 → **Delete** → **All** → **Yes**

- Alternatively, while streaming, press  → **View bookmark** →  → **Delete**.

Editing History of Streaming

- → **Media** → **Streaming** → **History** → Highlight a history →  (Edit) → Select Title field → Edit title → Select URL field → Edit URL →  (Save)
- Alternatively, while streaming, press  → **View history** → Highlight a history →  (Edit) → Select Title field → Edit title → Select URL field → Edit URL →  (Save).

Deleting History of Streaming

- → **Media** → **Streaming** → **History**

■ To Delete an Item

Highlight a history →  (Delete) → **Selected** → **Yes**

■ To Delete Multiple Items

 (Delete) → **Multiple** → Check histories →  (Delete) → **Yes**

■ To Delete All Items

 (Delete) → **All** → **Yes**

- Alternatively, while streaming, press  → **View history** →  (Delete).