Entertainment

Entertainment Functions	
S! Applications (Japanese)	
Downloading S! Appli	9-3
Activating S! Appli	9-3
Exiting S! Appli	9-3
S! Quick News (Japanese)	
Opening List	9-3
Viewing Update Information	9-4
Registering S! Quick News List	9-4
Refreshing Entries Manually	9-4
Deleting Entries	9-4
Free Contents (Japanese)	
S! Contents Store (Japanese)	
S! Contents Store (Japanese) S! Information Channel (Japanese)	
S! Contents Store (Japanese) S! Information Channel (Japanese) Service Registration	
S! Contents Store (Japanese) S! Information Channel (Japanese) Service Registration	
S! Contents Store (Japanese) S! Information Channel (Japanese) Service Registration New Received Information Using Weather Indicator	9-5 9-5 9-5 9-6
S! Contents Store (Japanese) S! Information Channel (Japanese) Service Registration New Received Information Using Weather Indicator BookSurfing [®] (Japanese)	9-5 9-5 9-5 9-5 9-6 9-6
S! Contents Store (Japanese) S! Information Channel (Japanese) Service Registration New Received Information Using Weather Indicator. BookSurfing® (Japanese) Downloading e-Books	9-5 9-5 9-5 9-6 9-6
S! Contents Store (Japanese) S! Information Channel (Japanese) Service Registration New Received Information Using Weather Indicator BookSurfing [®] (Japanese) Downloading e-Books e-Books Viewer.	9-5 9-5 9-5 9-5 9-6 9-6 9-6 9-6 9-6
S! Contents Store (Japanese) S! Information Channel (Japanese) Service Registration New Received Information Using Weather Indicator BookSurfing® (Japanese) Downloading e-Books e-Books Viewer Advanced Settings.	9-5 9-5 9-5 9-5 9-6 9-6 9-6 9-6 9-6 9-6
S! Contents Store (Japanese) S! Information Channel (Japanese) Service Registration New Received Information Using Weather Indicator BookSurfing® (Japanese) Downloading e-Books e-Books Viewer Advanced Settings SI Quick News	9-5 9-5 9-5 9-5 9-6 9-6 9-6 9-6 9-6 9-6 9-6



Entertainment Functions

Access the Internet to view or download content. Subscribe to content for automatic updates. Learn how to download and use content.



S! Appli (**© P.9-3**)



Play downloaded or preinstalled SoftBank S! Appli games.

S! Quick News (**@P.9-3**)



View Yahoo! Keitai content update information.

Free Contents (�P.9-5)



Access free content in S! Contents Store.

S! Contents Store (P.9-5)



Search and download music, games, comics, etc.

S! Information Channel/Weather (**P.9-5**)





BookSurfing[®] (€P.9-6)



Download and view e-books, comics, photobooks (CCF files) saved in Books.

Note

These services require separate subscriptions:

- S! Quick News
- S! Information Channel/Weather

9 Entertainment

S! Applications (Japanese)

Play downloaded or preinstalled SoftBank S! Appli games.

• For detailed instructions, see S! Appli Help or information on Internet download site.

Downloading S! Appli

 → S! Appli → S! Appli List → Download S! Appli

• Follow onscreen instructions.

Activating S! Appli

1 ■ → S! Appli → S! Appli List

2 Select S! Appli item

Play Network Connection Type S! Appli

• Network (Internet) access confirmation appears. Follow onscreen instructions.

Incoming Call While S! Appli is Activated

S! Appli will be paused and Incoming call window appears.

To Check S! Appli Demand History

• Press $\blacksquare \rightarrow S!$ Appli \rightarrow Demand history.

Exiting S! Appli

1 While S! Appli is active, 📼

2 Exit

• While S! Appli is active, press ()→ Pause.

To resume paused S! Appli • Press $\blacksquare \rightarrow S!$ Appli $\rightarrow Resume$.

To end paused S! Appli • Press $\blacksquare \rightarrow S! Appli \rightarrow Exit.$

Advanced

₹ Settings

- Set S! Appli Vibration Settings (IPP P.14-23)
- Reset Settings of S! Appli (IPP P.14-23)

S! Quick News (Japanese)

View Yahoo! Keitai content update information.

- Check for updates of items saved in S! Quick News (€P.9-4).
- S! Quick News requires separate subscription.

Opening List

 $\blacksquare \rightarrow Entertainment \rightarrow S! Quick$ News



Note

• Using S! Quick News incurs Packet Communication charges.

Viewing Update Information

 $\blacksquare \rightarrow Entertainment \rightarrow S! Quick$ News

Select content

Select an entry

- Press 🖾 (List) to return to S! Quick News/ Contents list.
- To connect to Internet and check for update, select an item \rightarrow Yes.
- To view information on the next page, press 🖅 (Next).

Registering S! Quick News List

Register up to one special and five general news/ newsflash in S! Quick News list.

 $\blacksquare \rightarrow Entertainment \rightarrow S!$ Ouick

- News
- Register contents \rightarrow Yes
- 3 Select content → Follow onscreen instructions

Refreshing Entries Manually

- $\blacksquare \rightarrow Entertainment \rightarrow S! Quick$ News
- (Update)
 - To Refresh a Content Highlight a content \rightarrow *Selected*
 - To Refresh Multiple Contents $Multiple \rightarrow$ Check contents $\rightarrow \square$ (Update)
 - To Refresh All Contents All
 - Press 🖅 (Cancel) to cancel refresh in process.

Deleting Entries

- \rightarrow Entertainment \rightarrow S! Quick News
- $[\mathbf{Y}] \rightarrow Delete$
 - To Delete a Content Highlight a content \rightarrow Selected \rightarrow Yes
 - To Delete Multiple Contents *Multiple* \rightarrow Check contents $\rightarrow \square$ (Delete) \rightarrow Yes
 - To Delete All Contents All \rightarrow Enter Phone Password \rightarrow $(OK) \rightarrow Yes$

<u>Advanced</u>

- **\ Advanced Settings** I P.9-6
- Viewing Content Details
- Refreshing S! Quick News List
- Viewing S! Ouick News from List

9

Entertainment

Free Contents (Japanese)

Access free contents in S! Contents Store.

- $\blacksquare \rightarrow Entertainment \rightarrow Free$ **Contents**
 - Tada-Melody (Ringtones)/Tada-Deco (Graphic Mail)/Tada-Komi (Comics)/ Tada-Game/Tada-Utaban (Music *Programs*) \rightarrow Follow onscreen instructions

Note

 Using Free Contents incurs Packet Communication charges.

S! Contents Store (Japanese)

Search and download music, game, comics, etc. In S! Contents Store Site, ranking, new contents list, free contents, Information such as points and bush telegraph are available.

- $\blacksquare \rightarrow Entertainment \rightarrow S! Contents$ Store
- Follow onscreen instructions

Note

• Using S! Contents Store incurs Packet Communication charges.

S! Information Channel (Japanese)

S! Information Channel delivers subscribed contents such as overnight news. Weather Indicator appears in Standby.

- This service is only available in Japan.
- S! Information Channel requires separate subscription.

Note

 Using S! Information Channel incurs Packet Communication charges.

Service Registration

- $\blacksquare \rightarrow Entertainment$
 - \rightarrow S! Information Channel/Weather
 - → Registration/Cancel

Follow onscreen instructions

New Received Information

S! Information Channel contents is received automatically: notification appears in Standby.



- Follow onscreen instructions · Operations are same as Yahoo! Keitai.
- Entertainment

9

Using Weather Indicator

Upon subscription to S! Information Channel, Weather Indicator appears in Standby.

- : Clear (daytime)
- Clear (nighttime)
- 📿 : Cloudy
- 🐺 : Rain
- 🐉 : Snow
- 分 : Thunderstorm
- ▷ : Later
- / : Intermittent

Example: \bigcirc // \implies \rightarrow Cloudy, Intermittent rain

 In addition to the above, other information such as rainfall probability or seasonal information appears.

Advanced

₹ Settings

- Set Weather Indicator Display Settings (IPP.14-23)
- Set Weather Indicator Update Notification (IPP P.14-23)
- Set Weather Indicator Automatic Update (IPP.14-23)

BookSurfing[®] (Japanese)

Download and view e-books, comics, photobooks (CCF files) saved in Books. Enlarge/reduce images, scroll pages, browse images with Vibration/Sound effects.

To browse CCF files, acquire Content Key. After changing phone models, move CCF files via Memory Card. Re-download Content Key to browse those files. Note that some contents may require re-downloading CCF files.

Downloading e-Books

- $\blacksquare \rightarrow S! Appli \rightarrow S! Appli List \rightarrow J = J = J = J$
- 2) 作品をさがす (Web から) → はい
 - Follow onscreen instructions.

e-Books Viewer

- - For operation after activation, see BookSurfing[®] help.

Advanced Settings

S! Quick News

Viewing Content Details

In S! Quick News list, highlight content $\rightarrow \boxdot \rightarrow Details$

Refreshing S! Quick News List

In S! Quick News list, select content $\rightarrow \boxdot \rightarrow Update$

• Press 🖅 (Cancel) to cancel.

Viewing S! Quick News from List

In S! Quick News list, select content $\rightarrow \boxdot \rightarrow Access$ to web $\rightarrow Yes$

• Press 🖅 (Cancel) to view S! Quick News List.

Refreshing S! Quick News List Automatically

- $\blacksquare \rightarrow Entertainment \rightarrow S! \ Quick \ News \rightarrow \boxdot$ $\rightarrow Settings \rightarrow Auto \ refresh$
- To Refresh Newsflash Automatically *Flash news* → Select an item
- To Refresh General News Automatically General → On or Off
- To Refresh Special Automatically Special \rightarrow On or Off
- Auto refresh is executed based on the set time. To view next refresh time, in S! Quick News list, highlight content → ☑ → Details.
- Set General to On to refresh automatically once a day.

9

- Setting *Special* to *On* may incur high Packet Communication charges.
- Set Special to On to refresh automatically once every four hours.
- Special and Flash news auto refresh is not executed between midnight and early AM. If General is set, news is refreshed automatically during that period.
- Auto refresh is not performed while roaming. Instead, refresh manually (●P.9-4).
- Auto refresh may fail outside service area or where signal conditions are poor.
- If auto refresh fails, update news manually (●P.9-4).
- Removing/replacing USIM Card cancels auto refresh.

Deleting S! Quick News List

 $\blacksquare \rightarrow Entertainment \rightarrow S! Quick News \rightarrow \heartsuit$ $\rightarrow Settings \rightarrow Delete S! Quick News List \rightarrow$ Enter Phone Password \rightarrow \blacksquare (OK) \rightarrow Yes

S! Information Channel

Viewing after Indicator Disappears

• \rightarrow Entertainment \rightarrow S! Information Channel/Weather \rightarrow What's new?

Viewing Information Previously Received

■ → Entertainment → S! Information Channel/Weather → History → Select an item

Receiving Disrupted Information Again

 $\blacksquare \rightarrow Entertainment \rightarrow S! Information$ Channel/Weather \rightarrow Get latest contents \rightarrow Yes

Showing Weather Indicator

■ → Entertainment → S! Information Channel/Weather → Weather Indicator → Weather

Updating Weather Indicator Manually

■ → Entertainment → S! Information Channel/Weather → Weather Indicator → Manual update → Yes

Changing Settings for Weather Indicator

■ → Entertainment → S! Information Channel/Weather → Weather Indicator → Settings

- To Change Display Settings Display setting → On/Off
- To Change Missed Event Settings Missed event setting → On/Off
- To Set Auto Update Auto update $\rightarrow On/Off$



