

Handset Security



Handset Security	11-2
Changing Phone Password	11-3
Changing Phone Password	11-3
Changing PIN/PIN2	11-3
Phone Lock	11-3
Activating/Canceling Phone Lock	11-3
Password Lock	11-4
Activating/Canceling PIN Code	11-4
Activating/Canceling USIM Lock	11-4
Secure Remote Lock	11-5
Function Lock	11-5
Activating Function Lock	11-5
Activating/Canceling Secret Mode	11-5
Activating/Canceling Secret Data Folder	11-5
Activating Mobile Tracker	11-5
Restoring Default Settings	11-6
Clearing Phone Memory	11-6
Resetting Settings	11-6
All Reset	11-7

Handset Security

This handset features built-in security measures for safer handset use.

Locking & Restricting Handset Operations

Lock handset for information security. Handset operations cannot be executed while locked.


- Password

Use Phone Lock, Password Lock, or USIM Lock (P.11-3).



Function Lock

Activate to require Phone Password to use Phone Book, Messaging, or other privacy related functions.

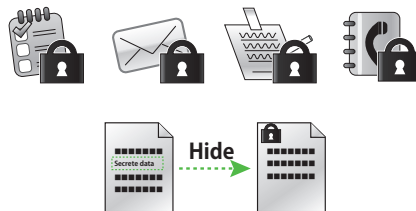

Restoring Default Settings


Clear Phone Book entries; restore function settings to defaults.

Changing Phone Password




There are two security codes; Phone Password and PIN/PIN2.

Changing Phone Password

Default: Phone Password is set to "9999".

- 1  → *Settings* → *Security* → *Change password*








- 2 Enter current Phone Password →  (OK)
- 3 Enter new Phone Password (four-to eight-digit) →  (OK)
- 4 Enter new Phone Password again →  (OK)

Advanced

Settings

- Change Phone Password ( P.14-24)

Changing PIN/PIN2

- 1  → *Settings* → *Security* → *Change PIN or Change PIN2*
 - Set *PIN certification* to *On* to enable PIN code ( P.11-4).
- 2 Enter current PIN or PIN2 →  (OK)
- 3 Enter new PIN or PIN2 (four-to eight-digit) →  (OK)
- 4 Enter new PIN or PIN2 again (four-to eight-digit) →  (OK)



Phone Lock

The following lock functions are available:

- Phone Lock
- Password Lock
- PIN Certification
- USIM Lock
- Secure Remote Lock

Activating/Canceling Phone Lock

Activate this function to require Phone Password each time handset is powered on.

- 1  → *Settings* → *Security*
- 2 *Phone lock* → *On or Off*
- 3 Enter Phone Password →  (OK)

- All operations including receiving calls are not accepted unless you enter Phone Password.

Password Lock

After Password Lock is activated, in Standby, press any key to show Phone Password entry window. Enter Phone Password to unlock.

- 1 → *Settings* → *Security*
- 2 *Password lock* → *On or Off*
- 3 Enter Phone Password → (OK)

- Even if Password Lock is set, some operations such as receiving calls can be performed.
- Upon Password Lock activation, Standby Display reappears. Press any key to show Phone Password entry window. Enter Phone Password to unlock, *Password lock* is automatically set to *Off*.

Activating/Canceling PIN Code

PINs are security codes for USIM Card. For details, see "USIM Card" (P.1-4).

To activate PIN Certification each time the power is turned on, set this function to *On*.

Setting

- 1 → *Settings* → *Security*
- 2 *PIN certification* → *On or Off*
- 3 Enter PIN → (OK)

Canceling

If PIN or PIN2 is incorrectly entered three consecutive times, PIN Lock or PIN2 Lock is activated to restrict handset operations.

Note

- For more information about PUK and PUK2, contact SoftBank Mobile Customer Center, General Information (P.15-31).
- Entering incorrect PUK Code ten consecutive times locks USIM Card (turning handset off does not reset the count).
- Once locked, USIM Card cannot be unlocked. Contact SoftBank Mobile Customer Center, General Information (P.15-31).

To cancel PIN Lock or PIN2 Lock, perform following operations.

- 1 In PUK Code entry window, enter PUK Code → (OK)
- 2 Enter new PIN or PIN2 (four- to eight-digit) → (OK)
- 3 Enter new PIN or PIN2 again (four- to eight-digit) → (OK)

Advanced

Settings

- Activate/Cancel PIN Certification (P.14-24)
- Change PIN (P.14-24)
- Change PIN2 (P.14-24)

Activating/Canceling USIM Lock

Activate this function to require USIM Password to use handset with a different USIM Card.

- 1 → *Settings* → *Security*
- 2 *USIM lock* → *On or Off*
- 3 Enter USIM Password (four- to eight-digit) → (OK)

- To set to *On*, enter USIM Password (four- to eight-digit) again and press (OK).

- USIM Password is dedicated to USIM Card authentication. If USIM Password matches, another USIM Card can be used in handset. Change USIM Password each time *USIM lock* is set to *On*.
- If you forget USIM Password, insert USIM Card with *USIM lock* set to *On* and reset all settings (P.11-7).

Advanced

Settings

- Activate/Cancel USIM Lock (P.14-24)

Secure Remote Lock

If handset is lost, lock handset functions or clear handset data remotely from PCs or other mobile phones.

The following functions are available in **Secure Remote Lock**.


- Lock
- Unlock
- Clear data
- Confirm handset status
- Show history

• For details, see SoftBank Mobile Website, or contact SoftBank Mobile Customer Center, General Information (☎P.15-31).

Function Lock



Activating Function Lock

Activate this function to require Phone Password to open Phone Book, Calendar/Notepad/Tasks, Yahoo! Keitai, Messages, Call Log, or Data Folder.

- 1  → **Settings** → **Security** → **Function lock**
- 2 **Check functions** →  (Save)
- 3 **Enter Phone Password** →  (OK)

Activating/Canceling Secret Mode



Select **Hide** to activate this function and hide secret Phone Book entries, Messaging folders, Calendar schedules, or Tasks.

- 1  → **Settings** → **Security** → **Secret mode**
- 2 **Enter Phone Password** →  (OK)
- 3 **Show or Hide**

• Powering handset off then back on activates **Secret Mode**.

Activating/Canceling Secret Data Folder



Activate **Secret mode** to see additional Secret folders within **Data Folder**.

- 1  → **Settings** → **Security** → **Secret data folder**
- 2 **Enter Phone Password** →  (OK)
- 3 **Show or Hide**

• Powering off handset then back on activates **Secret data folder**.

Activating Mobile Tracker

Activate this function to send SMS notification to a specified address when a different USIM Card is inserted. Specify up to two addresses.

- 1  → **Settings** → **Security** → **Mobile tracker**
- 2 **Enter Phone Password** →  (OK)
- 3 **Select Activation field** → **On**
- 4 **Select Recipients field**

5 Select To field → *Direct input* → Enter address → (Done)

- To enter an address from Phone Book, select To field → **Phonebook** → Search and select entry (P.2-14) → Select a phone number.

6 Select Sender field → Enter sender name

7 (Save)

- When a different USIM Card is inserted, SMS notification is sent to the specified address upon handset activation. Nothing appears on handset whose USIM Card is replaced. If Phone Password is incorrectly entered three consecutive times when trying to set Mobile Tracker, SMS notification is also sent.
- To delete a recipient address, press and select **Remove** in Step 6.

Advanced

Settings

- Activate/Cancel Phone Lock (P.14-24)
- Activate/Cancel Password Lock (P.14-24)
- Activate/Cancel Function Lock (P.14-24)
- Activate/Cancel Secret Mode (P.14-24)
- Set Secret Mode on Sub-folder in Data Folder (P.14-24)
- Set Mobile Tracker (P.14-24)

Restoring Default Settings

Clearing Phone Memory

Clear Data Folder, Messaging, handset Phone Book entries, Calendar/Tasks, Notepad, or User's Dictionary. Alternatively, clear all handset files at once.

1 → Settings → Memory settings → Phone memory → (Clear)

2 Check items → (Clear)

3 Enter Phone Password → (OK) → Yes

Resetting Settings


Reset settings to clear saved contents/settings and resort default settings.


The following settings are affected.

Item	Affected Settings
Tools	• Alarms
TV	• Set channels • Settings
Settings	• Every setting

The following settings are not affected.

Item	Unaffected Settings
Tools	• Calendar • Tasks • Exchange rate in Currency • Notepad
Data Folder	• Contents in each folder
TV	• TV links • Program guide • TV player • Reservation list
Phone	• Phonebook • Call log • Numbers in My details • Group name • Favorites • Mail group
Settings	
Phone settings	• User's dictionary
Security	• USIM lock • PIN certification • Change PIN • Change PIN2
Call settings	• Voice mail on settings • Call forwarding on settings • Call waiting settings • Call barring settings • Edit Black list contents
Messaging	• Messages in folders


1  → *Settings* → *Security* → *Reset*
→ *Reset settings*


2 Enter Phone Password →  (OK)
→ *Yes*

- Handset restarts.

All Reset

Restore handset to defaults and delete Phone Book entries (Phone), Call Log, Messaging, and Data Folder contents/settings. However, preinstalled files are not deleted.

1  → *Settings* → *Security* → *Reset*
→ *All reset*

2 Enter Phone Password →  (OK)
→ *Yes*

- Handset restarts.

Advanced

Settings

- Restore Settings to Default Values ( P.14-24)

Memo

A series of horizontal dotted lines for writing.