

 
Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Power On/Off	1-6
Handset Power On/Off	1-6
Display & Indicators	1-7
Display	1-7
Indicators	1-9
Accessing Functions	1-12
Main Menu	1-13
Function Shortcuts	1-14
Toggling Active Functions (Multi Job)	
.....	1-15
Standby Shortcuts	1-16
Using Simplified Menus (Simple Menu)	
.....	1-17

Mobile Manners	1-18
Security Codes	1-19
Basic Tools	1-20
My Details & Basic Tools	1-20
Double Number	1-21
Using Double Number	1-21
Modes	1-22
Additional Functions	1-24

1

Getting Started

Parts & Functions

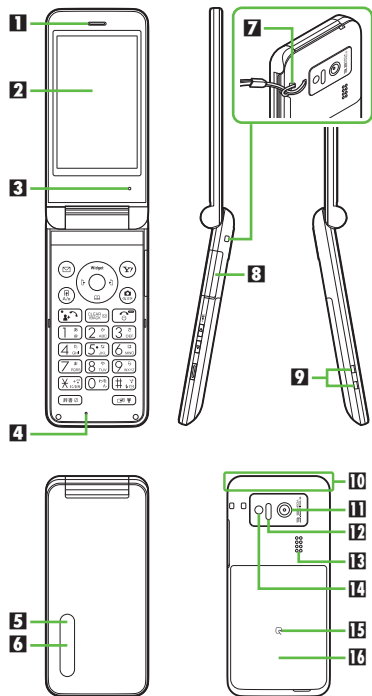

- 1** Earpiece
- 2** Display
- 3** Pressure Vent
- 4** Microphone
- 5** Small Light
- 6** Sub Display
- 7** Strap Eyelet
- 8** External Device Port (with Port Cover)
- 9** Charging Terminals
- 10** Internal Antenna Location
- 11** Camera (lens cover)
- 12** Infrared Port
- 13** Speaker
- 14** Mobile Light
- 15** Logo
- 16** Battery Cover

- Do not cover or place stickers, etc. over Pressure Vent or Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Handset Positions

Handset Closed



Keep handset closed when not in use.

 
Handset Open



Open handset to place or answer calls, enter text, etc.

Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with **^** via Set Key Shortcut as needed.

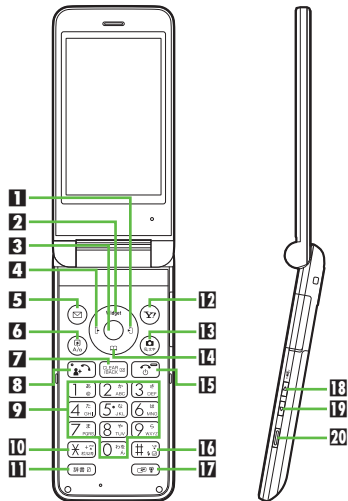

- 1 Multi Selector (right)**
- Open Call Log (Received). Long Press to activate/cancel Infrared[®].
- 2 Multi Selector (up)**
- Open Mobile Widget window. Long Press to open PC Site Browser menu^{*}.

- 3 Center Key**
- Open Main Menu. Long Press to activate/cancel Keypad Lock.
- 4 Multi Selector (left)**
- Open Call Log (Dialed). Long Press to activate/cancel Bluetooth[®].
- 5 Mail Key**
- Open Messaging menu. Long Press to open S! Mail Composition window^{*}.
- 6 Shortcuts & A/a Key**
- Open Shortcuts menu. Long Press to show active indicators (Status Icon List).
- 7 Clear/Back Key**
- Play Answer Phone messages. Long Press to activate/cancel Answer Phone.
- 8 Start & Rakutomo Link Key**
- Open Rakutomo Link window. Long Press to open Double Number Mode menu.
- 9 Keypad**
- Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- 10 * Key**
- Enter *****, **+**, **P**, **?** and **-**. Long Press to open S! Friend's Status member list.
- 11 Dictionary Key**
- Open Dictionary. Long Press to activate/cancel VeilView.
- 12 Yahoo! Keitai Key**
- Open Yahoo! Keitai portal. Long Press to open Yahoo! Keitai menu^{*}.
- 13 Camera & Text Key**
- Activate mobile camera. Long Press to open Change Menu window.

- 14 Multi Selector (down)**
- Open Phone Book. Long Press to open Exchange Profile menu^{*}.
- 15 Power On/Off & End Key**
- Toggle Standby display. Long Press to power handset off.
- 16 # Key**
- Enter **#**. Long Press to activate/cancel Manner mode.
- 17 Multi Job & Manner Key**
- Select handset mode. Long Press to activate/cancel Manner mode.

Side Keys

- 18 Volume Up Key**
- Long Press to illuminate Mobile Light.
- 19 Volume Down Key**
- Open:** Show/hide Softkeys.
- 20 Shutter Key**
- Open:** Long Press to activate mobile camera.
- Closed:** Toggle Clock view.

Multi Selector

- In this guide, Multi Selector operations are indicated as follows:

Press or	
Press or	
Press , , or	

1 Charging Battery

Battery must be inserted in handset to charge it.

Charging Battery Outside Japan

- SoftBank Mobile is not liable for problems resulting from charging battery abroad.

Desktop Holder

Together with Desktop Holder, use specified AC Charger ZTDAA1 (sold separately) only.

 
- In this guide, ZTDAA1 is referred to as "AC Charger."
- **AC Charger and Desktop Holder are not waterproofed or dustproofed. Do not charge battery while handset is wet.**
- Handset and AC Charger may warm while charging.

Important AC Charger Usage Note

- Fold back blades after charging. Do not pull, bend or twist the cord.

Important Desktop Holder Usage Notes


- Do not subject to force/pressure.
- Do not attempt to open handset while placed in Desktop Holder.

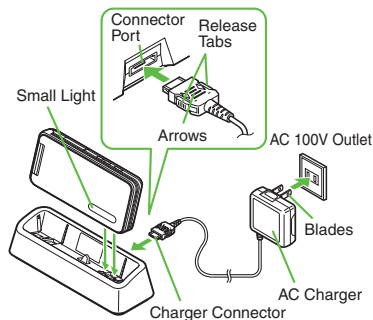

1 Insert Charger Connector into Desktop Holder

- With arrows up, insert connector until it clicks.

 2 Extend blades and plug AC Charger into AC outlet



3 Place handset onto Desktop Holder

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

4 Disconnect 841SH from Desktop Holder

5 Unplug AC Charger

- Squeeze Charger Connector release tabs and pull straight out to remove.

When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.

 
Desktop Holder Materials

- Desktop Holder includes a part containing plant-derived resin, a new eco-friendly material which is expected to reduce CO₂ emissions and oil usage in the entire product life cycle compared to conventional petroleum resin.

Charging with AC Charger Only

Insert Charger Connector into External Device Port.

Using Desktop Holder helps secure External Device Port waterproofing and dustproofing.

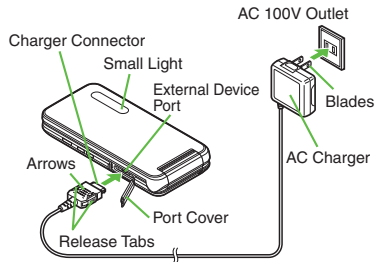**USB Charge**

Connect handset (with power on) to PC via USB Cable to charge battery.

 
- Download and install USB Cable driver beforehand.
- Handset must be on to charge battery.
- Battery may not charge if handset is connected through a USB hub.

Advanced

- 👉 Disabling USB Charge (P.1-24)

In-Car Charger

In-Car Charger may be purchased separately.

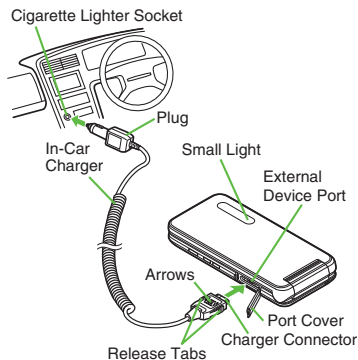**1 Open Port Cover****2 Insert Charger Connector**

- With arrows up, insert connector until it clicks.

3 Plug Charger into cigarette lighter socket**4 Start car engine**

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

5 Unplug Charger**6 Disconnect handset**

- Squeeze Charger Connector release tabs and pull straight out to remove.

7 Replace Port Cover**Important In-Car Charger Usage Notes**

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

Display

Standby

 


Indicators (signal strength, battery strength, etc.) appear.

Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)


1 (Long)

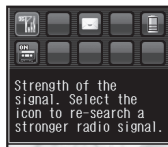

- Active indicators are enlarged; description for selected indicator appears.
- Use to select indicators to view their descriptions.
- Press to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

Information

 Information window opens at the bottom for Missed Calls, new mail, etc.

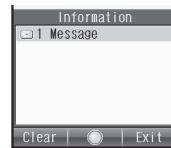




Information Window

Information label (e.g., **Message**, etc.) and count appear in Information window. Select an item and press to open it.

Advanced


- Handling Information list (P.1-24)

Softkeys

 

Functions/operations assigned to ,  and  appear at the bottom of Display.



Display Saving

Display goes dark after Display Saving time elapses. Press any key (except  during a call) to activate it.

Backlight


- Backlight turns off after Time Out time elapses. Press  -  to illuminate it (key press may affect active function).
- Display goes dark during a call. (Backlight does not turn off first.)

Indicators

Display Indicators

In Dual Mode, line type appears bottom right of some indicators.

Basic Status




1		Within 3G range
		Within GSM range
		International roaming in progress
2		Signal strength ¹
3		Battery strength ²

¹The more bars the better.


²Battery strength % (appears when Display activates, etc.) is an approximation.

Function Status




1		Active S! Application
		Paused S! Application
		Music playback in progress
		Memory Card inserted
2		Accessing Memory Card
		Reading Memory Card
		Formatting Memory Card
3		Music playback in progress (via Bluetooth [®])
4		Multiple functions (Multi Job) active

Notifications




1		Unread mail
		Unread Delivery Report
2		Answer Phone active & message recorded
		Answer Phone canceled & message recorded
3		New Voicemail
4		Missed Call or new mail on idle line
5		S! Appli Notification
6		Contents Key received
7		Unread S! Information Channel info
		Software Update result
		Unread S! Quick News info
8		Unread S! Friend's Status notification

Warnings



1		Mail memory low
2		Message delivery failure
3		Memory Card unusable/misinserted

 ■ Transmissions




1		SSL browsing in progress ¹
		Packet transmission protocol ready
2		Receiving mail
		Sending mail
3		S! Friend's Status online
		Positioning in progress ²
4		Software Update in progress
		USB Cable connected
5		USB transmission in progress
		Infrared transmission in progress
		Infrared file transfer in progress
		Bluetooth® transmission ready
		Bluetooth® transmission in progress (⊘ appears for multiple connections)
		Bluetooth® talk in progress
		IC Transmission in progress
		S! Addressbook Back-up transmission in progress
		PC Site Browser in use

6		RSS-compatible site
7		Weather Indicator
8		Infrared transmission ready

¹Hidden while Mobile Widget is in use.

²Flashes while positioning.

 ■ Settings

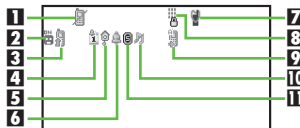

1		Offline Mode active
		Answer Phone active
3		Call Forwarding or Voicemail active (forwarding condition: Always) [*]
		Schedule/Task (Alarm set)
4		Schedule/Task (Alarm unset)
		Hour Minder active
6		Alarm set
		Manner mode active
7		Drive mode active
		Original mode active
		VeilView active

8		Keypad Lock active
		IC Card Lock active
9		Auto Answer or Remote Monitor active
		Ringtone (Silent)
10		Ringtone (Increasing Volume)
		Vibration for incoming Voice/Video Calls active
11		Show Secret Data active
		Function Lock (Once) active

^{*}Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

Sub Display Indicators

Basic Status



1	Signal strength*
2	Battery strength

*The more bars the better.

Notifications

	Missed Calls
	Answer Phone message recorded
	Missed Call Notification
	New Voicemail
	Unread mail
	Unread Delivery Report
	Contents Key received
	Unread S! Information Channel info
	Weather Indicator update
	S! Appli Notification
	Unread S! Friend's Status notification
	Location Info request

Warnings

	Message delivery failure
	S! Information Channel info reception failure
	IP Service connection failure
	Weather Indicator update failure


Handset Status

	Alarm
	Schedule Alarm
	Task Alarm

Activating Backlight




Sub Display Clock

- Press  to toggle view.


Accessing Functions

Use the following methods as needed.

Main Menu



Repeat menu item selection.




Select menu items

Enter numbers

 
Use shortcuts

Quick Operations




Enter numbers to access functions. To activate functions, press the corresponding key.

Shortcuts

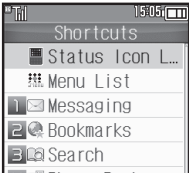


Access assigned functions (changeable).

 Key Shortcut

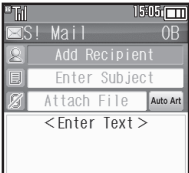

Long Press , or to access assigned functions (changeable).

Standby Shortcuts



Save functions to Standby.

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.


Main Menu

 
Menu Item Selection



1 



- Main Menu opens.

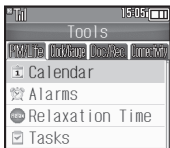2  Select menu item → 



- Menu/window opens.
- If Sub Menu opens, use  to select an item and press .


Tabs

- Menus/lists in a single window appear on separate tabs; use  to toggle tabs.




Tab

Reverse Navigation

- Press . If a confirmation appears, follow onscreen prompts.

Returning to Standby

- Press . If a confirmation appears, follow onscreen prompts.

Simple Menu

- Simplify menus and enlarge fonts; ideal for users who use only basic handset functions.

Main Menu Items


Messaging	Open/create messages, etc.
Yahoo!	Browse the Internet
S! Appli	Use S! Applications including games
Entertainment	Read e-Books, receive news updates, etc.
Camera	Capture images or record video
Media	Play/download media files
Tools	Manage schedules, set Alarm, scan QR Codes, etc.
Data Folder	Open files saved on handset/Memory Card
Widget	Use Mobile Widgets
Infrared	Transfer files via infrared
Phone	Search contacts, add entries, etc.
Settings	Customize handset interface, sounds, etc.

Function Shortcuts

Shortcuts Menu

Access assigned functions via Shortcuts menu.

 1

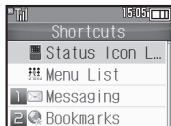

Shortcuts Menu

2 **Select function** →

- Menu/window opens.

Changing Default Shortcuts

In 2, select numbered function →
 → **Assign Function** → →
 Select menu item → → Select
 new item →

- To assign menu items, select one and press .

Assigning Files & Folders

In 2, select numbered function →
 → **Assign Data** → → Select
 file/folder →

- For folders, select **Set this folder** and press .

Key Shortcut

In Standby, Long Press , or to access assigned functions.

	Open S! Mail Composition window
	Open PC Site Browser menu
	Open Exchange Profile menu
	Activate/cancel Bluetooth®
	Activate/cancel Infrared
	Open Yahoo! Keitai menu

Changing Assigned Functions

Follow these steps to assign Calculator to
 (Long Press):

1 → **Settings** → →
Phone/

2 **Set Key Shortcut** →

3 **Long press** →

4 **From Appli** →

5 **Tools** → → In PIM/Life
 menu, **Calculator** →

Bookmark

In 4, **From Bookmark** → →

Select title → → **Yes** →

Infrared, Show Secret Data, Etc. On/Off
 In 4, **From Other** → → Select
 item →

Canceling Assigned Function

In 4, **Off** →

Advanced

 
- Changing item order
- Restoring default shortcuts (P.1-24)

Toggle Active Functions (Multi Job)

Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet

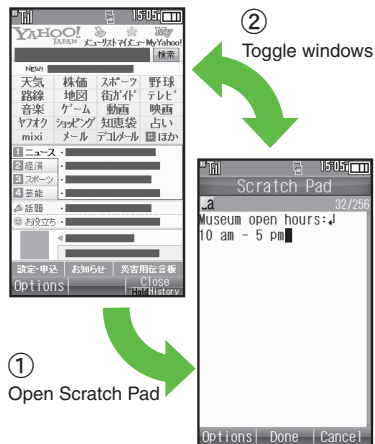


2
Toggle windows







 Jot down information

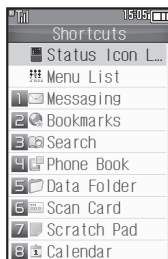1
Open Scratch Pad

Using Multi Job

- 1 In a function window,  
In text entry/dial windows, Long Press .



- 2 Select function  
• Menu/window opens.
- 3 To toggle active windows,  
- 4   **Multi Job ends**
• If a confirmation appears, follow onscreen prompts.

Multi Job may not activate from some menus/windows.

 
Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

Saving Shortcuts to Standby

1 

2  Select  (OPEN) 

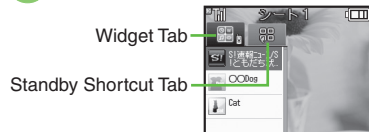

3  




4 Select item 


 
- Corresponding icon appears.
- >> appears when more items are available.

5  Specify target location 

Saving from Menu/Window

- In Options menu, select *Set as StbyShortcut* (may not appear for some items) and press ; select sheet as needed.

Using Pointer

- After 1, Long Press  to activate pointer navigation; select widgets, etc. (To cancel pointer navigation, Long Press .)

Using Shortcuts

 
 
1   Select icon 

- Menu/window opens or command is executed.

Toggleing Sheets

Toggle sheets to use Standby Shortcuts and widgets pasted on each sheet.

1  

- To toggle further, press  or .
- Sheet name appears at the top, then disappears.
- Save Standby Shortcuts as needed; corresponding icons appear on the current sheet.

Using Locked Sheets

  Select   Enter
Handset Code 

Removing Shortcuts from Standby








1   Select icon 

2 Operation 

3 Remove 

4 Yes 

Advanced

-  Sorting icons
-  Moving icons
-  Moving icons to front/back
-  Removing multiple icons at once
-  Slowing pointer speed
-  Editing sheet names
-  Locking sheets (P.1-24)

 
Using Simplified Menu (Simple Menu)

1

Getting Started

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.

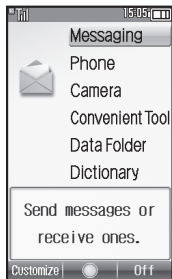

- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).


Menu Items

Messaging	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
Phone	Phone Book, Add New Entry, Call Log, Play Messages, Answer Phone, Call Voicemail, My Details, Rakutomo Link, Speed Dial/Mail
Camera	Photo Camera, Video Camera, Scan Barcode, Scan Card, Kanji Grabber, Review
Convenient Tool	Calendar, Exchange Profile, Alarms, Calculator, Assignment, Notepad, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
Data Folder	Saved files
Dictionary	-

Key assignments are largely the same as those in Standard Menu.

Activating Simple Menu

 1 (Long)

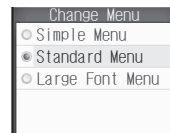

2 Simple Menu →

While Using an Incompatible Function

- End the function before activating Simple Menu.

Canceling Simple Menu

(Long) → Standard Menu →

Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Power it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.




1  (Long)



 
• Manner mode is set.

When Manner Mode is Active

- Ringtones and other sounds are muted.
- 841SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.
- To unmute Speaker temporarily while playing music, etc., follow these steps:

During playback,  ➔  ➔ **Yes or No** ➔  ➔ **Adjust volume**

Canceling Manner Mode

 (Long)

Offline Mode

Temporarily suspends all transmissions.



1  ➔ **Settings** ➔  ➔ 
Network

2 **Offline Mode** ➔ 

3 **On** ➔ 

• Offline Mode is set.

Canceling Offline Mode

In  **Off** ➔ 

Advanced

-   Changing handset modes  Creating a custom mode  Resetting Mode Settings  Suppressing Manner mode audio output confirmation (P.1-25)

Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

Handset Code*	9999 by default; use or change some functions
Administrator Code*	9999 by default; required for Reset Settings and Reset All
Center Access Code (Network Password)	Four-digit code selected at contract; access Optional Services via landlines, change service options, or set call restrictions

*Changeable on handset.

Incorrect Code Entry

- Message appears for incorrect code entries; retry.
- Incoming/outgoing call restriction settings will be locked if incorrect code is entered three times consecutively during the setting. To resolve, Center Access Code (Network Password) must be changed.
 - If you have previously changed Network Password on a SoftBank handset, enter the latest code.

 
Changing Security Codes

Enter four to eight digits.

Changing Handset Code

1   **Settings**   

2 **Locks** 






Locks Menu

3 **Chg. Handset Code** 

4 **Enter current Handset Code**
 

5 **Enter new Handset Code**
 

6 **Re-enter new Handset Code**
 
 • To change Administrator Code subsequently, choose **Yes** and press .

7 **No**  

Changing Administrator Code

1 **In Locks menu, Administrator Setting**  

2 **Change Administrator Code**
 

3 **Enter current Administrator Code**  

4 **Enter new Administrator Code**  

5 **Re-enter new Administrator Code**  

1 My Details & Basic Tools

My Number



- Handset phone number and the name entered at initial setup appear.

Editing My Details

After 1, (select tab) → Select item → → Select item → → Edit →

VeilView

Activate VeilView to prevent peeking.



Canceling VeilView

(Long)

Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
- does not power handset off.

Incoming Calls while Keypad Lock is Active

- Keypad Lock is temporarily canceled; press to answer calls. Keypad Lock reactivates after the call.

Canceling Keypad Lock



Pen Light



- Mobile Light illuminates.



Important Pen Light Usage Note

- Do not shine Pen Light in eyes.

Battery Meter



Clock/Gauge



- Approximate battery strength appears.

Battery Strength %

- 100% may not appear even when battery is full. This is by design; not a malfunction.

Phone Help

Access this handy guide to handset settings and key functions/shortcuts.



Doc./Rec.



Phone Help



- For **Indicators**, select a category and press .

Advanced

 
- Selecting My Details items to send
- Clearing My Details
- Toggling My Details in Dual Mode
- Changing battery strength indicator pattern
- Changing VeilView pattern/density (P.1-25)

Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- Outside Japan, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.14-40).

Two Phone Numbers & Two Mail Addresses

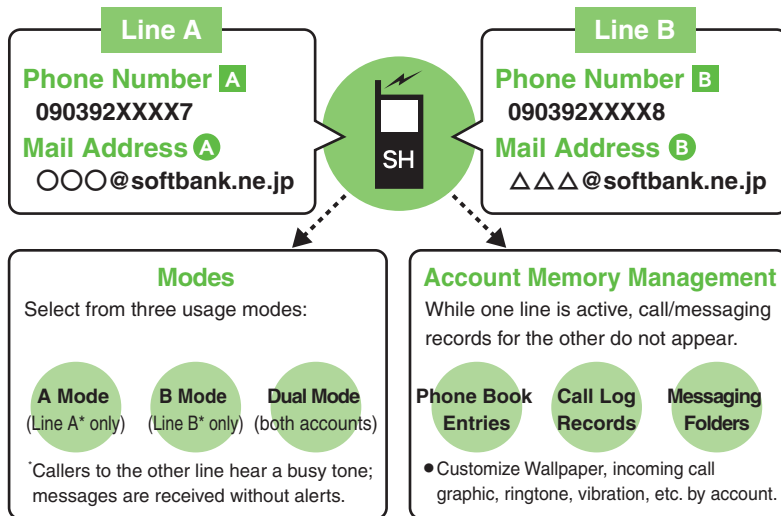

Activating Double Number

Make sure signal is stable.

- 1 → **Settings** → → **Phone/☎**
- 2 **Double Number** →
- 3 **Switch On/Off** →
- 4 **On** →
- 5 **Enter Handset Code** → → **Yes** →

Canceling Double Number

- In 4, **Off** → →
- When Double Number is canceled:
 - Line B calls and SMS messages are redirected to Line A Phone Number.
 - Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
 - Double Number account is not affected.

Modes

Activate **A Mode** to use Line A only, **B Mode** to use Line B only, or **Dual Mode** to use both accounts.

A Mode

Receive Calls to Line A Only

- Place calls or send messages via Line A.

A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

B Mode

Receive Calls to Line B Only

- Place calls or send messages via Line B.

B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status and S! Circle Talk are unavailable.

Advanced

- Omitting Handset Code entry when switching modes
- Renaming Double Number modes
- Showing indicator for calls missed or new mail on idle line
- Hiding Internet connection confirmation (P.1-26)

Dual Mode

Receive Calls to Both Accounts

- Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

Phone Book Entries

Specify A, B or Dual.

Messaging


Select Line A or Line B.
Sender Address changes accordingly.

Calling

Select Line A or Line B.
Caller ID changes accordingly.

 
- Line indicators appear in Phone Book entries, message lists, Call Log records, etc.

Switching Modes

-  (Long)
- Enter Handset Code ➔ ●
- Select mode ➔ ●
 - For *B Mode*, a confirmation appears.
- Yes ➔ ●

In Dual Mode

During an operation, if prompt window below appears, select a line and press ●.



If customizable by line, line indicator appears bottom right; press ⌵ to switch.



If line selection is otherwise required, follow onscreen prompts.

Advanced

-  ● Rejecting calls to either line in Dual Mode
- Setting main line for Dual Mode (P.1-26)

USB Charge	
Disabling USB Charge	<ul style="list-style-type: none"> ● → <i>Tools</i> → ● → <i>Connectivity</i> → <i>USB Charge</i> → ● → <i>Disable</i> → ●
Information	
Handling Information list	<ul style="list-style-type: none"> [Start Here] ● → <i>Phone</i> → ● → See below
	<ul style="list-style-type: none"> <i>Opening List Manually Information</i> → ● <i>Clearing List Information</i> → ● → <i>Yes</i> → ●
Shortcuts	
Changing item order	<ul style="list-style-type: none"> Ⓜ → Select numbered function → <i>Move</i> → ● → Select target location → ●
Restoring default shortcuts	<ul style="list-style-type: none"> Ⓜ → Select numbered function → <i>Set to Default</i> → ● → <i>Yes</i> → ●
Standby Shortcut	
■ Operations in Standby	
Sorting icons	<ul style="list-style-type: none"> Ⓜ → <i>Sort Icon</i> → ● → Select option → ● • Widgets may also be sorted depending on the size.
Moving icons	<ul style="list-style-type: none"> Ⓜ → <i>Select icon</i> → <i>Operation</i> → ● → <i>Change Layout</i> → ● → Specify target location → ●

Moving icons to front/back	<ul style="list-style-type: none"> Ⓜ → <i>Select icon</i> → <i>Operation</i> → ● → <i>To Front or To Back</i> → ●
Removing multiple icons at once	<ul style="list-style-type: none"> [Start Here] Ⓜ → <i>Operate from List</i> → ● → <i>Remove</i> → ● → See below <p>All Icons</p> <ul style="list-style-type: none"> <i>Remove All</i> → ● → <i>Shortcut</i> → Select sheet → <i>Yes</i> → ● <p>Selected Icons</p> <ul style="list-style-type: none"> <i>Select & Remove</i> → ● → <i>Shortcut</i> → Select icon → ● (✓) → Complete selection → <i>Yes</i> → ●
	Slowing pointer speed

■ Sheets

Editing sheet names	<ul style="list-style-type: none"> [Start Here] Ⓜ → <i>Settings</i> → ● → <i>Sheet Settings</i> → ● → <i>Change Sheet Name</i> → ● → See below <p>Renaming</p> <ul style="list-style-type: none"> Select sheet → ● → Enter name → ● <p>Resetting All Sheet Names</p> <ul style="list-style-type: none"> <i>Yes</i> → ●
	Locking sheets

Mode Settings

Changing handset modes	<p>Start Here \rightarrow Settings \rightarrow \rightarrow In Sound/Display menu, Mode Settings \rightarrow \rightarrow See below</p> <p>Selecting a Handset Mode</p> <p>Select mode \rightarrow </p> <p>Customizing Handset Modes</p> <p>Select mode \rightarrow \rightarrow Select item \rightarrow \rightarrow</p> <p>Adjust settings</p> <ul style="list-style-type: none"> • Not available for Normal mode.
	<p> \rightarrow Settings \rightarrow \rightarrow In Sound/Display menu, Mode Settings \rightarrow \rightarrow Original \rightarrow \rightarrow</p> <p>Select item \rightarrow \rightarrow Adjust settings</p>
	<p> \rightarrow Settings \rightarrow \rightarrow In Sound/Display menu, Mode Settings \rightarrow \rightarrow Select mode \rightarrow</p> <p> \rightarrow Enter Handset Code \rightarrow \rightarrow Yes \rightarrow </p>
Creating a custom mode	<p> \rightarrow Settings \rightarrow \rightarrow In Sound/Display menu, Mode Settings \rightarrow \rightarrow Original \rightarrow \rightarrow</p> <p>Select item \rightarrow \rightarrow Adjust settings</p>
Resetting Mode Settings	<p> \rightarrow Settings \rightarrow \rightarrow In Sound/Display menu, Mode Settings \rightarrow \rightarrow Select mode \rightarrow</p> <p> \rightarrow Enter Handset Code \rightarrow \rightarrow Yes \rightarrow </p>
Suppressing Manner mode audio output confirmation	<p> \rightarrow Settings \rightarrow \rightarrow In Sound/Display menu, Mode Settings \rightarrow \rightarrow Manner \rightarrow \rightarrow Audio Confirmation \rightarrow \rightarrow Do not Show \rightarrow </p>

My Details

Selecting My Details items to send	<p> \rightarrow \rightarrow \rightarrow Set Send Items \rightarrow \rightarrow</p> <p>Select item \rightarrow (<input type="checkbox"/>/<input checked="" type="checkbox"/>) \rightarrow </p>
Clearing My Details	<p> \rightarrow \rightarrow \rightarrow Reset My Details \rightarrow \rightarrow Yes \rightarrow </p>

Toggle My Details in Dual Mode

\rightarrow \rightarrow \rightarrow **Switch to B or Switch to A** \rightarrow

Battery Meter

Changing battery strength indicator pattern

\rightarrow **Settings** \rightarrow \rightarrow In Sound/Display menu, **Display** \rightarrow \rightarrow **Mini Battery** \rightarrow \rightarrow

Select pattern \rightarrow

- Battery strength (appears as a percentage) is for reference only.

VeilView

Changing VeilView pattern/density

Start Here \rightarrow **Settings** \rightarrow \rightarrow In Sound/Display menu, **Display** \rightarrow \rightarrow **VeilView** \rightarrow

\rightarrow See below

Pattern

Pattern Setting \rightarrow \rightarrow Select pattern \rightarrow

Pattern Scale

Scale Setting \rightarrow \rightarrow Select scale or **Animation** \rightarrow

Pattern Color

Color Setting \rightarrow \rightarrow Select color \rightarrow

Density

Density Setting \rightarrow \rightarrow Adjust density \rightarrow

- For **Density:2** or **Density:3**, use before pressing to adjust the pattern appearance for straight view.

Double Number

■ All Modes

Omitting Handset Code entry when switching modes	● → Settings → ● → Phone/☎ → Double Number → ● → Password Entry → ● → Off → ● → Enter Handset Code → ●
Renaming Double Number modes	● → Settings → ● → Phone/☎ → Double Number → ● → Mode Name → ● → Select mode → ● → Enter name → ● → Select icon → ●

■ A Mode & B Mode

Showing indicator for calls missed or new mail on idle line	● → Settings → ● → Phone/☎ → Double Number → ● → Show Missed → ● → On → ●
Hiding Internet connection confirmation	● → Settings → ● → Phone/☎ → Double Number → ● → Packet Warning → ● → Off → ● • Available for B Mode.

■ Dual Mode

Rejecting calls to either line in Dual Mode	● → Settings → ● → Phone/☎ → Double Number → ● → Reject By Line → ● → Select line → ● → On → ●
Setting main line for Dual Mode	● → Settings → ● → Phone/☎ → Double Number → ● → Send Priority → ● → Select option → ●