

<b>Data Folder (Pictures etc.)</b> .....	11-2
Opening Data Folder .....	11-3
Opening Files .....	11-4
Managing Files & Folders .....	11-5

<b>Memory Card</b> .....	11-6
Using Memory Card .....	11-6
<b>Additional Functions</b> .....	11-8
<b>Troubleshooting</b> .....	11-10

# 11

## Data Folder (Pictures etc.) & Memory Card



## Data Folder (Pictures etc.)

Handset files are organized in folders by file format.

### ■ Preset Folders

	Contents
<b>Pictures*</b>	Still images
<b>DCIM</b>	Still images on Memory Card (images captured with save location set to <b>DCIM</b> )
<b>Ring Songs-Tones*</b>	Downloaded melodies and other sound files
<b>S! Appli*</b>	S! Applications
<b>Widget*</b>	Widgets
<b>Music*</b>	Downloaded Chaku-Uta Full® files
<b>Videos*</b>	Video images
<b>Lifestyle-Appli*</b>	Lifestyle-Appli required to use Osaifu-Keitai®
<b>Books*</b>	Downloaded e-Books, etc.
<b>Customized Screen*</b>	Downloaded Customized Screen files
<b>Status Templates</b>	Combinations of Status Icon and Status Label for S! Friend's Status
<b>Flash®</b>	Downloaded Flash® (animation) files
<b>Other Documents</b>	Other files (Dictionary files, etc.)

\*Contains corresponding Yahoo! Keitai menu shortcut.



 
## Opening Data Folder

Data Folder appears as *Pictures etc.* on handset.

1 





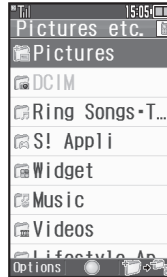

2 *Pictures etc.*  



Data Folder











### Checking Memory Status

[Data Folder] *Memory Status*   
 *Phone Memory or Memory Card*  
 

- The category **Others**: includes Data Folder management files, Saved Pages, etc.
- Delete messages/files when memory is low. Handset performance may be affected when memory is full.

### Switching File List View

 
Not available for some folders.

- 1 **In Data Folder, select folder**  
   
- 2 **Manage Items**  
- 3 **Change List View**  
- 4 **Select option**  



## Opening Files

### 1 Pictures etc.

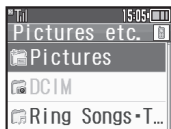

- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press .

### 2 Select folder

To open a sub folder, select it and press .



File List

### 3 Select file



- The content plays or appears.
- To return to file list, press .

#### Handling Open Images

- Press to enlarge, or press or to open next or previous image. Press to rotate 90 degrees clockwise.

#### Attaching to Mail

After , select file **Send/ Blog** **As Message**

- If a confirmation appears, follow onscreen instructions.

#### Copy Protected Files ( or )

- Some functions may be unavailable.

### Slide Show

Available for Pictures or DCIM folder.

#### 1 In file list, select file

#### 2 Slide Show

- Slide Show starts.

#### 3 Slide Show stops

#### Changing Interval

After , **Speed** **Select speed**

- When Speed is set to **Manual**, press / or / to advance or reverse frame.

#### Note

- Backlight stays on during Slide Show; exit to save battery power.

### Advanced

- Changing image quality
- Showing images in original size
- Changing Slide Show settings
- Using files as Wallpaper
- Using files as ringtones
- Using files as ringvideos (And more on P.11-8)



# Managing Files & Folders

## Adding Folders

May be unavailable for some folders.

- 1**  ➔ **Pictures etc.** ➔  ➔ **Select folder** ➔



File List

- 2**     
 If **Download** is selected or folder is empty, skip ahead to **4**.
- 3** **Manage Items** ➔
- 4** **Create Folder** ➔  ➔ **Enter name** ➔

## Moving/Copying Files

Some files may not be moved/copied.

- 1** **In file list, select file** ➔
- 2** **Move or Copy** ➔  ➔ **Phone or Memory Card** ➔ 
  - For still images, select **Pictures** or **Mail Art** and press .
- 3** **Select folder** ➔
- 4** **Move here or Copy here** ➔

## Selecting Multiple Files

- 1** **In file list,**
- 2** **Select file** ➔ 
  - Repeat **2** as needed. (To uncheck, select a file with  and press .)

## Hiding Folders

Restrict access to created folders. Only handset folders can be hidden.

- 1** **In file list, select folder** ➔
- 2** **Set Secret** ➔  ➔ **Enter Handset Code** ➔

## Accessing Secret Folders (Unlock Temporarily)

[File List]  ➔ **Unlock Temp.** ➔  ➔ **Enter Handset Code** ➔

## Canceling Secret

**Unlock Secret folders temporarily and select Secret folder** ➔  ➔ **Unset Secret** ➔  ➔ **Enter Handset Code** ➔

## Advanced

- Renaming folders  Opening file properties  Renaming files  Sorting files  Deleting files & created folders  Handling SVG files (P.11-9)



## Using Memory Card

Use microSD/microSDHC Memory Card (hereafter "Memory Card") to save and organize files for use on 841SH s.

- Use recommended Memory Cards only. For details, see P.14-23 "microSD Memory Card Compatibility."
- If inserted, captured images, downloads and other files save to Memory Card. (My Pictograms and Graphic Mail templates save to handset.)

 
### Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never power handset off or remove battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

### Inserting & Removing

First, power handset off.

- 1 Remove battery (P.14-4)
- 2 Insert card

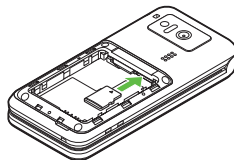

- With terminal side down, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.


- 3 Insert battery, then close cover

### If Appears after Power On

 - Memory Card may not be inserted properly; reinsert the card.





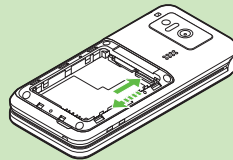





### Removing Memory Card

- Gently push in card and release it; card pops out. Pull card straight out gently.



## Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.

- 1  ➔ **Settings** ➔  ➔   
**Phone/** ➔ **Memory Card**  
➔ 
- 2 **Format Card** ➔  ➔ **Yes**  
➔ 
  - Offline Mode is set. Handset transmissions are suspended until format is complete.
- 3 **Enter Handset Code** ➔ 
- 4 **Yes** ➔ 
  - To cancel, choose **No** and press .




## Precaution



- Never remove Memory Card or battery while formatting; may cause damage.

## Opening Memory Card Files



Follow these steps to open files via Data Folder:

(Memory Card Data Folder opens first.)



- 1  ➔ **Pictures etc.** ➔ 
  - Memory Card Data Folder opens.
- 2 **Select folder** ➔ 

To open a sub folder, select it and press .
- 3 **Select file** ➔ 

## Opening Handset Data Folder Files

After 1,  ➔ **Change to Phone** ➔  
 ➔ **From** 2

## Advanced

-   Using HTML files on Memory Card (P.11-9)



## File/Folder View Settings

Changing image quality	<p>● → Pictures etc. → ● → Select folder → ● → Select file → ● → <b>Image Quality</b> (Picture Quality for Flash® files) → ● → Select quality → ●</p>	
Showing images in original size	<p>● → Pictures etc. → ● → Select folder → ● → Select file → ● → <b>Switch Display</b> → ● → <b>Original Size</b> → ●</p>	
Changing Slide Show settings	<p><b>Start Here</b> → ● → Pictures etc. → ● → Select folder → ● → Select file → ● → <b>Slide Show</b> → ● → <b>See below</b></p> <p><b>Playing Once</b> Repeat → ● → Off → ●</p> <p><b>Playing Music</b> BGM Settings → ● → Switch On/Off → ● → On → ●</p> <p><b>Changing Music</b> BGM Settings → ● → Play Ring Tones → ● → Select folder → ● → Select file → ●</p> <p><b>Changing Key Illumination Pattern</b> Illumination → ● → Key Pattern → ● → Select pattern → ● → <b>Y</b></p> <p><b>Disabling Key Illumination</b> Illumination → ● → Switch On/Off → ● → Off → ● → <b>Y</b></p>	
	Hiding Softkeys in image view	<p>● → Pictures etc. → ● → Select folder → ● → Select file → ● → <b>SW Guide Display</b> → ● → Off → ●</p>

## Using Files/Folders

Using files as Wallpaper	<p>● → Pictures etc. → ● → Select folder → ● → Select file → ● → <b>Set as Wallpaper</b> → ● → ●</p> <ul style="list-style-type: none"> <li>For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.</li> </ul>
Using files as ringtones	<p>● → Pictures etc. → ● → Select folder → ● → Select file → ● → <b>Set as Ringtone</b> → ● → Select item → ●</p> <ul style="list-style-type: none"> <li>If prompted, enter ring time and press ●.</li> <li>If a confirmation appears, follow onscreen instructions.</li> </ul>
Using files as ringvideos	<p>● → Pictures etc. → ● → Videos → ● → Select file → ● → <b>Set as Ring Video</b> → ● → Select item → ●</p> <ul style="list-style-type: none"> <li>If prompted, enter ring time and press ●.</li> </ul>
Saving Phone Book entries	<p>● → Pictures etc. → ● → Select folder → ● → Select file → ● → <b>Save to Ph.Book</b> → ● → <b>As New Entry</b> → ● → Complete other fields → <b>Y</b></p> <ul style="list-style-type: none"> <li>To add to an existing entry, select <b>As New Detail</b>.</li> </ul>
Activating mobile camera, etc. in corresponding folders	<p>● → Pictures etc. → ● → Select folder → ● → ● → <b>Take Picture, Record Video or Record Voice</b> → ●</p>





## Managing Files/Folders

Renaming folders	<ul style="list-style-type: none"> <li>● → Pictures etc. → ● → Select folder → ●</li> <li>→ Select folder → &lt;img alt="arrow left" data-bbox="315 155 330 170"/&gt; → Manage Items → ●</li> <li>→ Rename → ● → Enter name → ●</li> <li>● Assign different names to folders within a layer.</li> </ul>
Opening file properties	<ul style="list-style-type: none"> <li>● → Pictures etc. → ● → Select folder → ●</li> <li>→ Select file → &lt;img alt="arrow right" data-bbox="315 255 330 270"/&gt; → Details → ●</li> </ul>
Renaming files	<ul style="list-style-type: none"> <li>● → Pictures etc. → ● → Select folder → ●</li> <li>→ Select file → &lt;img alt="arrow right" data-bbox="315 315 330 330"/&gt; → Manage Items → ● → ●</li> <li>→ Rename → ● → Enter name → ●</li> </ul>
Sorting files	<ul style="list-style-type: none"> <li>● → Pictures etc. → ● → Select folder → ●</li> <li>→ &lt;img alt="arrow left" data-bbox="315 395 330 410"/&gt; → Manage Items → ● → Sort → ● → ●</li> <li>Select method → ●</li> </ul>
Deleting files & created folders	<ul style="list-style-type: none"> <li>Start Here ● → Pictures etc. → ● → Select folder → ● → See below</li> </ul>
	<p><b>Single Files</b></p> <ul style="list-style-type: none"> <li>Select file → &lt;img alt="arrow right" data-bbox="315 525 330 540"/&gt; → Delete → ● → Yes → ●</li> </ul> <p><b>Folder &amp; Files Within</b></p> <ul style="list-style-type: none"> <li>Select folder → &lt;img alt="arrow right" data-bbox="315 575 330 590"/&gt; → Delete → ● → Enter Handset Code → ● → Yes → ●</li> </ul>

## Handling SVG files

Start Here ● → Pictures etc. → ● → Other Documents → ● → Select file → ● → See below

## Line Scroll



## Page Scroll

<img alt="arrow left" data-bbox="645 235 660 250"/> (Up), <img alt="arrow right" data-bbox="785 235 800 250"/> (Down), <img alt="arrow up" data-bbox="765 235 780 250"/> (Right), <img alt="arrow down" data-bbox="845 235 860 250"/> (Left)

## Zoom

<img alt="arrow left" data-bbox="645 290 660 305"/> (Zoom out), <img alt="arrow right" data-bbox="745 290 760 305"/> (Zoom in)

## Rotate

<img alt="arrow left" data-bbox="645 344 660 359"/> (Counterclockwise), <img alt="arrow right" data-bbox="785 344 800 359"/> (Clockwise)

## Key Action Mode

<img alt="arrow left" data-bbox="645 398 660 413"/> <img alt="arrow right" data-bbox="665 398 680 413"/>

## Default View

<img alt="arrow left" data-bbox="645 451 660 466"/> <img alt="arrow right" data-bbox="665 451 680 466"/>

## Memory Card

## Using HTML files on Memory Card

● → Settings → ● → <img alt="phone icon" data-bbox="785 555 800 570"/> Phone/<img alt="memory card icon" data-bbox="845 555 860 570"/> → Memory Card → ● → SD Local Cont. → ● → Select title → ●



## Managing Files/Folders

### ? Cannot copy files

- Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)

### ? Copied/moved files cannot be used on PCs, etc.

- Some files may not be usable on other SoftBank handsets or PCs, etc.

### ? Cannot sort files properly

- Check the number of files/folders in the folder. Files/folders in folders containing 961 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.

### ? Cannot use some characters in file/folder names

- Single-byte Symbols ¥, /, :, ;, ,, <, >, /, ?, # and " are not supported.

