

<b>USIM Card.....</b>	<b>1-2</b>
About USIM Card.....	1-2
USIM Card Installation.....	1-3
USIM PINs.....	1-3
<b>Parts &amp; Functions.....</b>	<b>1-4</b>
Handset .....	1-4
One-push Open Button.....	1-6
Key Operations in Standby .....	1-6
Display Indicators .....	1-8
<b>About Battery.....</b>	<b>1-10</b>
Before Charging .....	1-10
Battery Installation .....	1-12
Charging Battery .....	1-13
<b>Handset Power On/Off.....</b>	<b>1-14</b>
<b>Manner Mode.....</b>	<b>1-15</b>
Minding Mobile Manners.....	1-15
Manner-related Features.....	1-15
Activating Manner Mode .....	1-15
Activating Offline Mode.....	1-16
Activating Driving Mode .....	1-16
<b>Handset Menus.....</b>	<b>1-16</b>
Main Menu .....	1-16
Menu Numbers .....	1-17
Accessing Functions/Info from Standby .....	1-18

 
<b>Standby Options &amp; Event Indicators .....</b>	<b>1-19</b>
Event Indicators.....	1-19
Mobile Widget (Japanese).....	1-20
S! Quick News (Japanese).....	1-20
Shortcuts.....	1-20
<b>Customizing User Interface .....</b>	<b>1-21</b>
Customized Screen .....	1-21
Changing Display Font.....	1-22
<b>Private Menu.....</b>	<b>1-23</b>
Opening Private Menu .....	1-23
Customizing Private Menu .....	1-23
Adding Shortcuts.....	1-23
<b>Simple Menu.....</b>	<b>1-24</b>
Activating Simple Menu.....	1-24
Simple Menu .....	1-25
<b>Passwords.....</b>	<b>1-25</b>
Phone Password .....	1-25
Center Access Code.....	1-25
Security Code .....	1-26
<b>Multi Task .....</b>	<b>1-26</b>
Activating Another Function.....	1-27
Ending Current Functions.....	1-27
<b>View Blind .....</b>	<b>1-28</b>
<b>My Number.....</b>	<b>1-28</b>

# USIM Card

## About USIM Card

**Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited Phone Book entry and SMS message storage. USIM must be inserted to use handset or Network services (calling, messaging, Internet, etc.). Turn handset off before inserting/removing USIM Card.**

USIM Card



- Insert USIM Card into other compatible SoftBank handset to use information saved on USIM Card.
- Use SoftBank specified USIM Card only; non-specified USIM Cards may not function properly.
- Do not insert USIM Card into other IC card devices. SoftBank is not liable for any resulting damages.
- Keep IC portion clean.
- Do not damage, carelessly touch or short-circuit IC chip; doing so may result in loss of data or malfunction.
- Remove dust/debris with a soft, dry cloth.
- Do not place labels, etc. on USIM Card; may cause failure.
- If handset is dropped/subjected to shock, handset may return to Standby. This is not a malfunction.

If **USIM not inserted After power-off Insert USIM** appears, re-insert USIM Card properly then restart handset.

## Important

- USIM Card is the property of SoftBank.
- Return USIM Card to SoftBank upon service cancellation.
- USIM Card will be reissued for a fee if lost or damaged.
- If USIM Card/handset with USIM Card inserted is lost or stolen, contact SoftBank Mobile Customer Center or Global Call Center (☎P.18-33).
- Back up USIM Card files. SoftBank is not liable for lost files.
- USIM Card specifications/performance may change without prior notice.
- Pre-installed S! Appli may be unusable while a different or replacement USIM Card is inserted into handset.
- Returned USIM Cards are recycled.

## Note

 
- Some downloaded files may be inaccessible after upgrades/repairs, USIM Card/handset replacement.

## USIM Card Installation

- Remove battery (☞ P.1-12) then follow steps below.


### Inserting

- 1 With IC chip down, insert USIM Card

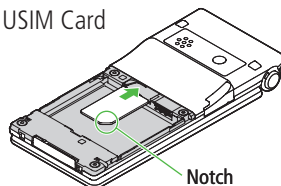

### Removing

 - 1 Slide out USIM Card gently

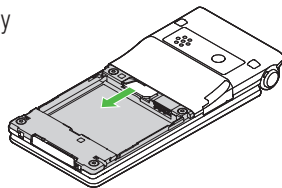

#### Note

- Do not force USIM Card into or out of handset; may damage handset/USIM Card.
- Be careful not to lose the removed USIM Card.
- Avoid touching USIM Card terminals or IC chip; doing so may hinder performance/USIM Card recognition.

## USIM PINs

### There are two USIM Card security codes: PIN & PIN2

- PIN and PIN2 are set to **9999** by default.
- PIN/PIN2 can be changed (☞ P.12-3).

PIN	4 to 8-digit code used to prevent unauthorized handset use. ● When <b>PIN Authentication</b> is <b>ON</b> (☞ P.12-2), PIN entry is required each time handset is turned on (with USIM Card inserted).
PIN2	Required to clear call times/costs or set maximum cost (☞ P.17-8).

### PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering the PIN Unblocking Key (PUK/PUK2) (☞ P.12-3).

 
- For information on PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞ P.18-33).

#### Note







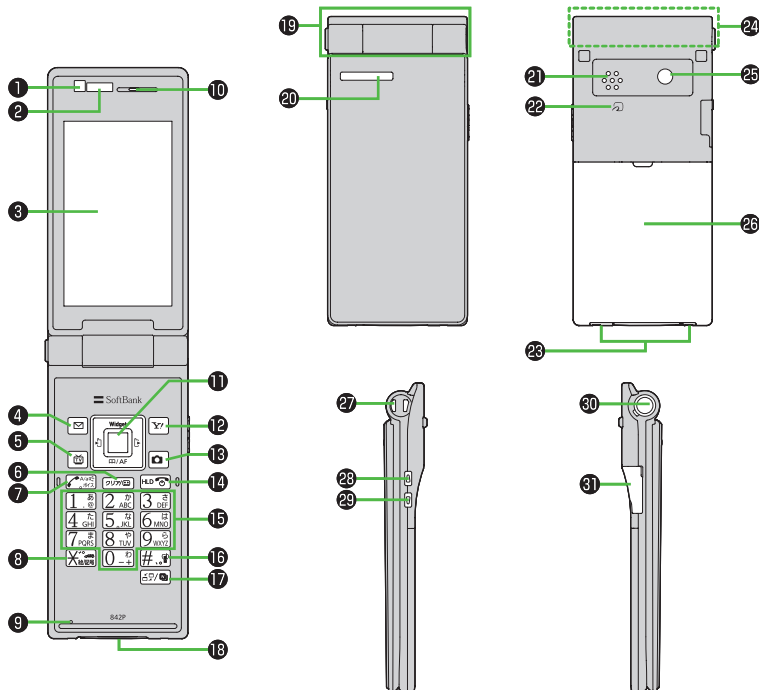


 

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞ P.18-33).



# Parts & Functions

## Handset




- 1 Light Sensor**
  - Detects ambient light
- 2 Infrared Port**
  - Transfer data via Infrared
- 3 Display**
- 4 Mail Key**
  - Open Messaging menu
  - Execute Upper Left Softkey function (P.i.x)
- 5 TV Key**
  - Activate TV
  - Execute Lower Left Softkey function (P.i.x)
- 6 Clear/Memo Key**
  - Delete characters
  - Cancel menus
  - Use Answer Phone
- 7 Send Key**
  - Initiate or answer calls
  - Toggle upper/lower case in text entry windows
  - Use Voice Dial
- 8 \* Key**
  - Enter " \* "
  - Access pictographs in text entry windows
  - Set/cancel Driving Mode
- 9 Microphone**
- 10 Earpiece**

 - 11  **Multi Selector**
  - Scroll up/down/left/right to navigate menus and text (➡P.ix)
  -  Select widgets/S! Quick News
  -  Open Phone Book
  -  Open Incoming Call Logs
  -  Open Redial logs
- 12  **Yahoo! Keitai Key**
  - Open Yahoo! Keitai top menu
  - Execute Upper Right Softkey function (➡P.ix)
- 13  **Camera Key**
  - Activate Camera/Video Camera
  - Execute Lower Right Softkey function (➡P.ix)
- 14  **End/Escape & Power Key**
  - Power on/off (➡P.1-14)
  - End calls
  - Return to Standby
- 15  **Keypad**
  - Enter phone number/text
- 16  **#/Manner Key**
  - Enter "#"
  - Set/cancel Manner Mode
- 17  **MULTI Key**
  - Open TASK MENU
  - Open list of available widgets
- 18 **External Port**
  - Connect AC Charger (sold separately), Earphone Microphone or other accessories here
- 19 **Hinge**

- 20 **Notification Light/Charging Indicator**
  - Flashes for incoming transmissions
  - Flashes while Camera is active
  - Lights in red for charging
- 21 **Speaker**
- 22  **Logo**
  - Place Logo over a reader/writer when using Osaifu-Keitai® (➡P.13-11)
- 23 **Charging Terminals**
- 24 **Antenna**
- 25 **Camera**
- 26 **Battery Cover**
- 27 **Strap Eyelet**
- 28  **Upper Side Key**
  - Increase earpiece/TV volume
  - Open Yahoo! Keitai Bookmarks

**[Handset Closed]**

  - Turn on illumination
- 29  **Lower Side Key**
  - Decrease earpiece/TV volume

**[Handset Closed]**

 
  - Set/cancel Manner Mode
  - Check missed calls/new messages
- 30 **One-push Open Button** (➡P.1-6)
- 31 **microSD Card Slot**
  - Insert microSD Card here (➡P.10-17)

**Note**

- Do not press microphone button when connecting Earphone Microphone. Doing so may cause malfunction. If pressed accidentally, unplug then reconnect earphone.

## One-push Open Button

Press One-push Open Button to open handset.

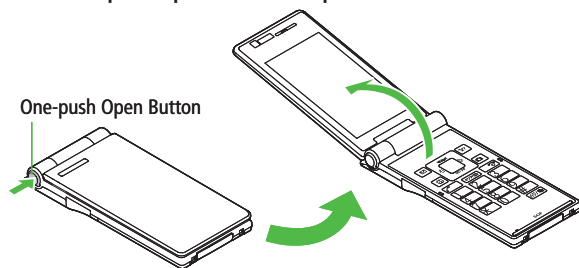
 
 
 
 

 

 
 

 
 





- Close handset manually. If handset does not close, open completely before closing handset again.
- Customize handset to answer/end calls, etc. by opening/closing handset (P.17-7, P.17-9).
- Handset may spring open. Be careful not to drop handset.

## Key Operations in Standby

 
Press or press and hold (more than one second) a key in Standby to execute the following.

Key Operations		Functions
	Short Press	Initiate a call
	Long Press	Voice dial
	Short Press	Show/hide widgets
	Long Press (2 + sec)	Turn off power
	Short Press	Open Main Menu
	Long Press	Activate/cancel Keyguard
	Short Press	Play Answer Phone
	Long Press	Activate/cancel Answer Phone
	Short Press	Activate Camera
	Long Press	Activate Video Camera
	Short Press	Activate Digital TV
	Long Press	Activate/cancel IC Card Lock
	Short Press	Open Messaging Menu
	Long Press	Open S! Mail Composition window
	Short Press	Access Yahoo! Keitai
	Long Press	Open Yahoo! Keitai Menu
	Short Press	Select widgets, Event Indicators, shortcuts, status indicators or S! Quick News ticker
	Long Press	—
	Short Press	Open Phone Book search window
	Long Press	Open Phone Book entry window
	Short Press	Open Incoming Call Logs
	Long Press	Open Received address logs

Key Operations	Functions
	Short Press Open Redial logs Long Press Open Sent address logs
	Short Press Enter "1" Long Press Open Phone Book page "あ"
	Short Press Enter "2" Long Press Open Phone Book page "か"
	Short Press Enter "3" Long Press Open Phone Book page "さ"
	Short Press Enter "4" Long Press Open Phone Book page "た"
	Short Press Enter "5" Long Press Open Phone Book page "な"
	Short Press Enter "6" Long Press Open Phone Book page "は"
	Short Press Enter "7" Long Press Open Phone Book page "ま"
	Short Press Enter "8" Long Press Open Phone Book page "や"
	Short Press Enter "9" Long Press Open Phone Book page "ら"
	Short Press Enter "0" Long Press Open Phone Book page "わ"
	Short Press Enter "＊" Long Press Set/cancel Driving Mode
	Short Press Enter "#" Long Press Set/cancel Manner Mode

Key Operations	Functions
	Short Press Increase earpiece volume Long Press Open Yahoo! Keitai Bookmarks
	Short Press Decrease earpiece volume Long Press
	Short Press Activate TASK MENU Long Press Open Widget List

# Display Indicators

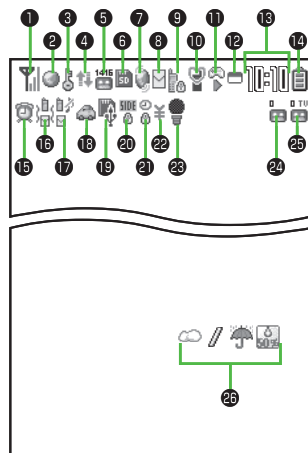

- 15 - 25 are Status Indicators. Access functions from respective indicators (P.1-18).

## 1 Signal Strength

Strong Moderate Weak Low

Offline Mode

Out-of-Range

## 2 Packet Transmission in Progress (PC)

Dial-up Connection Established on PC

3G/GSM Packet Transmission Enabled

3G/GSM Packet Transmitting

Operator (set for Select Operator)  
Out-of-Range

3G/GSM 3G/GSM Packet Transmission Available\*

3G/GSM 3G/GSM Packet Transmission Unavailable\*  
\* Appears only while abroad

## 3 Secure Content

S! Addressbook Back-up Synchronizing

Auto Sync Settings Active

## 4 PC Site Browser Active

Infrared Transmission

IC Transmission

USB Cable Connected

Keyguard Active

## 5 Software Update (Notification/Updating/Result)

1415 Voice Mail

## 6 microSD Card

Inserted

Reading/Writing Data

Write-protected

Unsupported

Unusable

**USB Cable (Not Included) Connected**

microSD Mode

MTP Mode

**During Call**

During Video Call

During Voice Call

## 7 Positioning

New S! Quick News Information

New S! Information Channel info
















## 8 Unsent Message

Unread Message























Incoming Mail Memory Full


















## 9 Security


-  Privacy Key Lock Active
  -  Personal Data Lock Active
  -  Key Pad Dial Lock Active
  -  IC Card Lock Active
  -  Secret Mode and Secret Data Only Active
  -  Key Pad Dial Lock, Secret Mode and Secret Data Only Active
  -  Key Pad Dial Lock and Personal Data Lock Active
  -  Secret Mode, Secret Data Only and IC Card Lock Active
  -  Privacy Key Lock and IC Card Lock Active
  -  Personal Data Lock and IC Card Lock Active
  -  Key Pad Dial Lock and IC Card Lock Active
  -  Key Pad Dial Lock, Secret Mode, Secret Data Only and IC Card Lock Active
  -  Key Pad Dial Lock, Personal Data Lock and IC Card Lock Active
- 10  Manner Mode Active
-  Manner Mode (set in User Mode)

## 11 S! Appli

-  Paused
  -  Active
  -  Auto Start Request Received
  -  Start Request Received while Paused
  -  Start Request Received while Active
- 12  One Function Active
-  Multiple Functions Active
  -  Digital TV Active
  -  Recording TV Program
  -  During Timer Recording
  -  TV Recording Paused
  -  Music Playback
  -  Music Paused
- 13 Time
- 14 **Battery Level**
-  →  →  →  (Red)
- 15  (Red) Alarm Set (Today)
-  (Blue) Alarm Set (After Today)
- 16  Vibration Active (Incoming Call)
-  Vibration Active (Incoming Message)
  -  Vibration Active (Incoming Call & Message)

- 17  Incoming Call Ringtone Disabled
-  Incoming Message Ringtone Disabled
-  Incoming Call & Message Ringtone Disabled
- 18  Driving Mode
- 19  microSD Mode set for USB Mode
-  MTP Mode set for USB Mode
- 20  Side Key Disabled when Handset Closed
- 21  Timer Lock at Close Active
- 22  Call Charge Reached Upper Limit
- 23  Back Light OFF
-  View Blind ON
-  Back Light OFF; View Blind ON
- 24  Answer Phone Active (Number of Recorded Messages (Voice Calls))
- 25  Answer Phone Active (Number of Recorded Messages (Video Calls))
- 26  Weather Indicator (P.8-3)

## Note

- To show indicator description: **Main Menu**  
 ► **Settings** ► **Display Settings**  
 ► **Describe Icons** ►  to highlight an indicator

## About Battery


### Before Charging

Charge battery before use or after a period of disuse (AC Charger sold separately).

### Charging Time & Operating Time Estimates

		3G	GSM
Charging Time		100 minutes*	
Standby Time		460 hours*	240 hours*
Talk Time	Voice Call	180 minutes*	180 minutes*
	Video Call	120 minutes*	—

\* Approximate value

- 3G Mode/GSM Mode:  P.2-10
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).

## About Battery

- Clean handset, battery & charger with dry cotton swab.
- Replace battery if operating time shortens noticeably.
- Charge battery at least once every six months.
- Use a case when carrying battery separately.


### Charging

- Battery must be installed to charge it.
- It may take longer for charging when handset is on.
- Move charger away from TV/radio if interference occurs.

## Battery Time

 
- Using handset in the following conditions may shorten battery time.
  - Extreme temperatures
  - Handset/battery/AC Charger terminals are dirty.
  - Weak signal/out-of-range
  - Handset is left mid-operation (not in Standby)
  - Playing Music Player, TV or S! Appli is active, etc.
- Extending battery time  
Example:
  - Turn Back Light Time **OFF** or set a shorter time for Power Saver mode (☞P.17-5)
  - Select **OFF** for Key Tone (☞P.17-3)

## When Battery Runs Out

- **Unless a Call is in Progress**  
A message appears and warning tone sounds for 10 seconds. Handset power turns off automatically after one minute; press any key except  to cancel warning tone manually. Charge or replace battery.
  - If Manner Mode is active, nothing sounds.
- **During a Call**  
A message appears and warning tone sounds via Earpiece or Speaker. After 20 seconds, call ends and handset shuts down in one minute. Charge or replace battery.

## Battery Strength Indicator

- Battery Strength indicator changes as remaining usage time decreases. Charge or replace battery when battery level is low (☞P.1-9) or a message appears on Display.

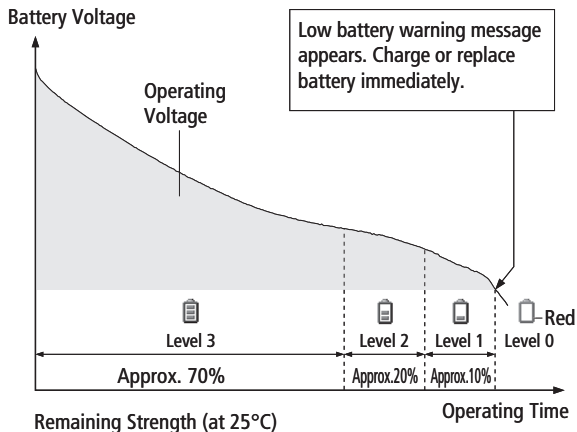


### Note

- Alternatively, check battery level from **Main Menu** ► **Settings** ► **Phone Settings** ► **Battery** ► **Battery Level**

## Battery Installation


- Always turn off handset power before removing battery.
 
### 1 Press and slide to remove cover

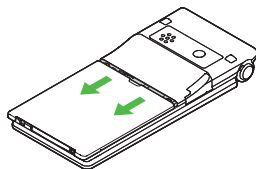

### 2 Insert Battery

 
Align battery tabs with handset grooves and slide in battery.

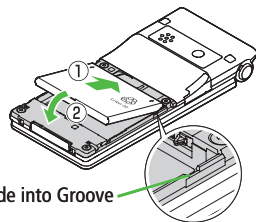

Slide into Groove


### Remove Battery

 Lift battery out as shown.

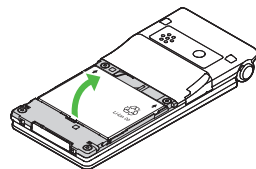

### 3 Replace battery cover

 Shut battery cover completely, until it clicks into place.

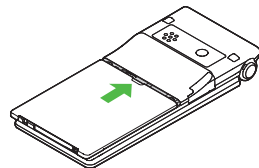

#### Note

- Lithium-ion batteries are valuable and recyclable resources.
  - Recycle used lithium-ion battery at a shop displaying the symbol shown to the right.
  - To avoid fire or electric shock, do not:
    - Short-circuit battery
    - Disassemble battery
- Battery cover edges are sharp. Close battery cover fully to avoid injury.

 


Li-ion 00

## Charging Battery

Use only specified AC Charger (sold separately).

**Charging Time: Approximately 100 minutes**

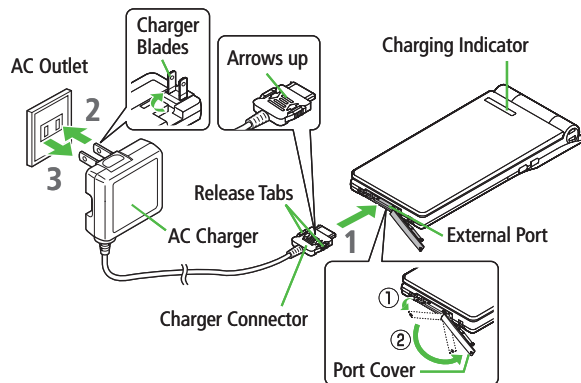

### 1 Connect AC Charger to handset

Insert Charger Connector (arrows up) into External Port.

### 2 Plug AC Charger into AC Outlet

Extend Charger Blades.

Charging Indicator illuminates and charging starts.

When charging is complete, Charging Indicator goes out.

- When Charging Indicator flashes, remove AC Charger and battery from handset then attach them again.

- Charge Sound is heard when charging starts/ends.

When handset is turned off or in Manner Mode, nothing sounds.

### 3 When charging is complete, unplug AC Charger, then disconnect handset

Squeeze Release Tabs to remove Charger Connector, and replace Port Cover.

#### Note

- For details, read AC Charger instructions.
- Alternatively, charge battery by using Desktop Holder (not included).

#### Tip

**Settings** ● Set Charge Start/End Sound Off (P.17-3)

# 1 Handset Power On/Off

## 1 Press and hold

Start-up window appears and handset enters Standby.

- Enter PIN if PIN Authentication is ON (P.12-2).

## 2 Press for 2+ seconds

Handset shuts down.

- Do not turn on handset immediately after turning off. Wait a few seconds.



Standby

## ■ Initial Setup

The first time handset powers up and Initial setting window appears, select **YES** and set the following: (Each item can be set separately.)

<b>Date &amp; Time*</b> (P.17-8)	Set date and time
<b>Phone Password</b> (P.12-2)	Enter <b>9999</b> , and enter new Phone Password (4 - 8 digits)
<b>Key Tone</b> (P.17-3)	Select <b>ON</b> or <b>OFF</b>
<b>Font Size</b> (P.17-6)	Set Display font size all at once

\* May be automatically set

## ■ View Information Messages

At time of purchase, information messages are provided for your convenience.





-  to highlight Event Indicator (P.1-19), then press 
-  → **Incoming Mail** → **Received** → Select a message

Widgets appear in Standby after a message is opened.

### Note

- If **USIM not inserted After power-off Insert USIM** appears, clean and properly re-insert USIM Card then restart handset.
- When handset is open, Display turns off after a period of inactivity.

## Retrieving Network Information

When ,  or  is pressed for the first time in Standby, handset initiates Network Information retrieval; press  to retrieve it.

- Update Network Information to use messaging, Internet, etc.
- Update Network Information manually: **Main Menu** ► **Settings**  
► **Connectivity** ► **Retrieve NW Info** ► **YES**

### Tip

### Settings

- Change Wallpaper ● Add Calendar to Wallpaper ● Change Wallpaper Randomly (P.17-3)
- Change Start-up Window (P.17-4)

# Manner Mode

## Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from use in restaurants, lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

## Manner-related Features

<b>Manner Mode</b> (☞Right)	Press Manner key to mute handset tones and activate vibration for incoming transmissions.
<b>Vibration Mode</b> (☞P.17-2)	Activate in public places, meetings, etc. for silent call/message alerts.
<b>Alarm/Ringer Volume</b> (☞P.13-7, P.17-2)	Adjust Alarm and incoming call/message tone volumes.
<b>Offline Mode</b> (☞P.1-16)	Suspend all handset transmissions.
<b>Answer Phone</b> (☞P.2-15)	Use to handle incoming calls when inappropriate/unsafe to answer.
<b>Driving Mode</b> (☞P.1-16)	While driving, send a voice message informing the caller that you cannot answer the call (Handset does not ring).

## Activating Manner Mode

Press one key to mute handset tones and activate vibration for incoming transmissions.

- Manner Mode settings can be changed (☞P.17-6).
- When Manner Mode is active, 📞 appears.

1 In Standby, press and hold (#)

- To cancel: Press and hold (#) again
- To activate/cancel while handset is closed: Press and hold 📞



### Note

- Shutter click and incoming tone via Earphone (**Level 1**) sound even in Manner Mode.
- When activating Music Player or Digital TV in Manner Mode, confirmation appears asking whether to cancel Manner Mode.
- When **Prefer manner mode** is **OFF** (☞P.13-7), Alarm sounds even if Manner Mode is active.

### Tip

- Settings** ● Set Manner Mode Type (☞P.17-6)

## Activating Offline Mode

Temporarily suspend all handset transmissions; when active, all calls/messages and incoming information are blocked.

- When Offline Mode is active,  appears.

**Main Menu** ▶ **Settings** ▶ **Call Settings** ▶ **Offline Mode**

### 1 YES

- To cancel: Follow the same steps.

#### Note

- Offline Mode disables Infrared/IC transmissions.

## Activating Driving Mode

Handset does not ring for incoming calls. Voice guidance informs the caller you are unavailable and handset records voice/video messages.

- When Driving Mode is active,  appears.

### 1 In Standby, press and hold

 
- To cancel: Follow the same steps.

#### Note

- When Answer Phone memory is full, incoming calls are rejected.
- Ringtone sounds through Earphone Microphone when connected.


## Handset Menus

### Main Menu

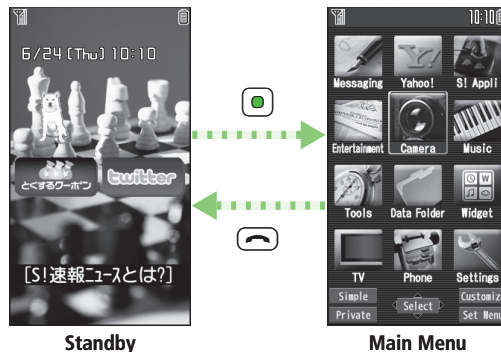

### 1 In Standby,

Main Menu appears.

- To change Main Menu theme:  
 **[Set Menu]** → Select a theme

### 2 to highlight an icon → **[Select]**

Selected function menu appears.













- To return to Standby: 

#### Note

- Standby window returns after 15 seconds of inactivity in Main Menu.



## Main Menu Icons

<b>Messaging</b>  Create new/view received messages	<b>Yahoo! (Yahoo! Keitai)</b>  Enjoy Mobile Net & PC Site browsing...	<b>S! Appli</b>  Download, set and use S! Appli
<b>Entertainment (News/Entertainment)</b>  Use S! Quick News or E-books	<b>Camera</b>  Capture images or record videos	<b>Music (Music Player)</b>  Use Music Player
<b>Tools</b>  Set Alarm or save Calendar entries...	<b>Data Folder</b>  Open files saved on handset/microSD Card	<b>Widget (Mobile Widget)</b>  Use Mobile Widget
<b>TV</b>  View TV or record/timer-record programs	<b>Phone</b>  Access Phone Book, save contact information...	<b>Settings</b>  Adjust/customize handset settings

### Tip

#### Settings

- Change Display Color Scheme ● Change Main Menu Icons
- Change Main Menu Background (P.17-4)

## Menu Numbers

Use keypad to select functions or menu items.


## Unnumbered Menu Items

When numbers do not appear, select items as shown.

### Main Menu

# to select **Settings** from Main Menu



- Press 0 to show Account Details. To open Phone top menu, select **Phone** using .

 
## When Menu Icons is Set to Basic or Customize

Menus cannot be selected from Main Menu by keypad.

Open menu items by entering specific number in Main Menu (Quick Open Menu: P.18-13).

### Top Menu Opened from Main Menu

(2) to select **Display Settings**

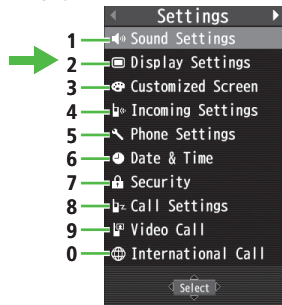


Example: Settings Top Menu

## Numbered Menu Items

 Press key corresponding to menu number to select a menu.

In Display Settings (from **Settings** Top Menu), (5) to select **Back Light Time**

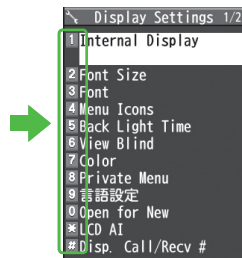

## Accessing Functions/Info from Standby

Select indicators/ticker in Standby to access functions and information.

### Available Items

- Event Indicators ( P.1-19)
- Mobile Widget ( P.7-2)
- S! Quick News ( P.8-4)
- S! Information Channel/Weather ( P.8-2)
- Shortcuts ( P.1-20)
- Status Indicators ( P.1-8)

### 1 In Standby,

Pointer () appears.

- To disable pointer: or (Pointer disappears)

### 2 to move pointer () to an indicator, icon or ticker → [Select]

Indicator, icon or ticker is selected.

Function name appears.

- Press and hold to move pointer () continuously.
- To cancel selection: or



### 3 [Select]

Function or information appears.

### When Widgets Do Not Appear

Pointer () does not appear. After Step 1, use to highlight an item

→ [Select] to show function or information

- To show/hide widgets:

## ■ Using Pointer ( )

> In Standby,  →  [Menu] → Select an item (See below)

Item	Operation/Description
to widgets list	Open Widget List
Yahoo!JAPAN Login	Open Yahoo! JAPAN log in window
Stand-by Display	Change Standby wallpaper > Select a folder → Select an image

 
## Standby Options & Event Indicators

Check various indicators and information in Standby.








- To access functions/information from indicators:  P.1-18

### Event Indicators





   


Event Indicators appear for missed calls, messages, etc.



### ■ Events

<b>Missed calls</b>	Missed calls (  P.2-13)
<b>New message</b>	New messages (  P.14-11)
<b>Have Answer Ph Msg</b>	Recorded caller messages (  P.2-15)
<b>Voice mail</b>	New Voice Mail (  P.2-19)
<b>Had incoming call(s)</b>	If Missed Call Notification is active, indicator appears for calls missed while handset is off, out-of-range, engaged, etc. (  P.2-19)
<b>New S! Info Channel</b>	S! Information Channel (received updates) (  P.8-2)
<b>New Weather</b>	Weather Indicator (received updates) (  P.8-3)

### ■ Other Information

- Missed alarm ( P.13-6)
- S! Appli startup notice ( P.16-3)
- USB Mode setting ( P.11-6)
- Timer Recording result ( P.5-13)
- Missed program ( P.5-13)
- Content Key ( P.10-5)
- Software Update result ( P.18-12)

## Mobile Widget (Japanese)

Paste various widgets to Standby to access information or tools from Standby.

- Mobile Widget: ☞ P.7-2
- To show/hide widgets: ( )



## S! Quick News (Japanese)

By default, S! Quick News appears at bottom of Display.

- S! Quick News: ☞ P.8-4
- To hide S! Quick News: ☞ P.17-17



S! Quick News

## Shortcuts

Access frequently used functions from Standby.

Shortcuts



## Adding Shortcuts




- Some functions are not available for shortcuts.


- 1 Open a function, (Y) [Menu] → **Add shortcut icon** → **YES**

## Scroll Shortcuts

Five shortcuts appear at a time. To scroll more shortcuts, first press ( ) to hide widgets, then press ( ) (→ ( )) to highlight a shortcut and use ( ) to scroll shortcuts.

## Editing/Deleting Shortcuts

- 1 In Standby,  →  to move pointer → Highlight a shortcut
- 2  [Menu] → Select an item (See below)

Item	Operation/Description
Edit title	> Edit title
Sort	> Select an item → Select a target →  [Finish] → YES
Delete this	> YES
Delete all	> YES

## Customizing User Interface

### Customized Screen

Download and set Customized Screen to personalize user interface, ringtone, etc. to a selected theme.


### Downloading Customized Screen

Main Menu ► Data Folder ► Customized Screen

#### 1 Customized Screen → YES



List of websites appears.

Select a website and follow onscreen instructions.

- To manage Customized Screen applications in Data Folder:  
 P.10-9

## Setting Customized Screen

1 In Standby,  →  [Customize]  
→ *Customized Screen*

2 Highlight a theme →  [Set]  
● To toggle thumbnail and list:  [Change]

3 **YES**

### Cancel Customized Screen

> In Standby,  →  → *Release Settings* → **YES**

#### Note

- Customized Screen cannot be set when battery is low.
- Other functions are not available while switching. For some seconds after switching is complete, all calls/messages may be blocked.
- Alternatively, **Main Menu ▶ Settings ▶ Customized Screen**
- When Simple menu is active, Customized Screen settings are not reflected. To reflect settings, cancel Simple menu.
- When Customized Screen cannot be canceled, enter **6368##** in Standby → *Release Settings* → **YES**

## Changing Display Font

Change Display font. Fonts can also be downloaded.

### Downloading Fonts

**Main Menu ▶ Settings ▶ Display Settings ▶ Font**

1 *Download Font* → **YES**

Follow onscreen instructions.

- For details on Font folder (Data Folder):  P.10-10

#### Note

- While Personal Data Lock is set, fonts cannot be downloaded.
- Alternatively, **Main Menu ▶ Data Folder ▶ Font**  
▶ **Download Font** ▶ **YES**

### Changing Font

**Main Menu ▶ Settings ▶ Display Settings ▶ Font**

1 Select a folder → Highlight a font →  [Set]

#### Note

- Alternatively, **Main Menu ▶ Data Folder ▶ Font**

## Private Menu

Save frequently used functions in Private Menu.

- Up to 12 items can be saved.
- Change preset functions as needed.

 
### Opening Private Menu

- 1 In Standby,  →  [Private]

Private Menu appears.

- To return to Main Menu:  [Normal]

- 2 Select a menu

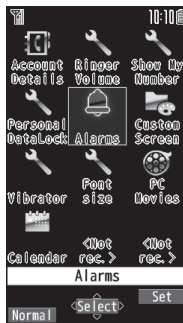





Private Menu Window


### Change Private Menu Background

- > After Step 1,  [Set] →  [Menu] → *Change BG image* →  
Select a folder → Select an image


## Customizing Private Menu

 
- 1 In Standby,  →  [Private] →  [Set]
- 2 Highlight a target →  [Menu] → *Add to menu*
- 3 Select an item (→ *YES*)

### Cancel Functions

- > In Step 2, (highlight a function →)  [Menu] → *Release this* or *Release all* → *YES*

### Reset Private Menu

- > In Step 2,  [Menu] → *Reset menu* → *YES*

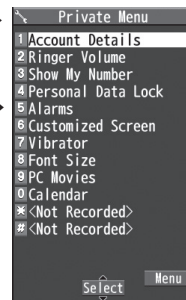

Private Menu Setting Window

## Adding Shortcuts

- 1 In Standby,  →  [Private] →  [Set]
- 2  [Menu] → *Add shortcut icon* → *YES*

### Note

- Alternatively, open Private Menu setting window from  
**Main Menu** ► **Settings** ► **Display Settings** ► **Private Menu**

 
## Simple Menu

Activate Simple menu to limit menu options to basic ones.

- Handset is limited to basic operations (➡P.1-25).



**Normal Mode  
Window**

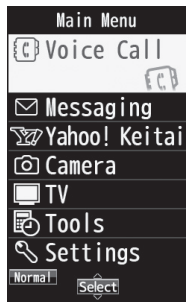

**Simple Menu  
Window**

## Activating Simple Menu

1 In Standby, → [Simple] → **YES**

2 **YES** or **NO**

- Select **YES** to set all items in Font Size (➡P.17-6) to **Large**.
- To open Simple menu: in Standby

### Cancel Simple Menu

> In Standby, → [Normal] → **YES**

#### Note

- Turning off the power does not cancel Simple menu.
- In Simple Menu, the following are unavailable from Standby.
  - Widgets
  - S! Quick News ticker
  - Customized Screen
  - Shortcuts: Tasks, Receive Ir data, Bar code reader and Private menu



## Simple Menu

Simple Menu	Page
<b>Voice Call</b>	
Outgoing Log	2-13
Incoming Log	2-13
Phone Book	4-6
Create New Phonebook	4-3
Answer Phone	2-15
Account Details	1-28
<b>Messaging</b>	
Incoming Mail	14-16
Create New	14-4
Retrieve New	14-16
Drafts	14-16
Sent Messages	14-16
Create New SMS	14-7
<b>Yahoo! Keitai</b>	
Yahoo! Keitai	15-3
Bookmarks	15-8
Saved Pages	15-8
Enter URL	15-4
<b>Camera</b>	
Take Pictures	6-6
Shoot Videos	6-7
See Pictures	6-10
Watch Videos	6-10

Simple Menu	Page
<b>TV</b>	
Watch TV	5-5
Timer Recording	5-13
Channel Setting	5-4
<b>Tools</b>	
Data Folder	10-2
Alarms	13-6
Calendar	13-2
Calculator	13-8
Notepad	13-8
Receive via Infrared	11-3
<b>Settings</b>	
Ringtones/Volume	1-15 17-2
Screen/Fonts	1-9 1-22 17-3 to 17-6
Call Time & Cost	17-8
Date & Time	17-8
Security	12-2 13-12 18-12
Call Settings	2-17 to 2-21

## Passwords

Phone Password, Center Access Code and Security Code are needed for handset use.

### Phone Password

<Default> 9999

**4 to 8-digit number required to use/change some handset functions.**

- Enter number within 15 seconds.
- \_ appears for each digit entered.
- To change Phone Password: ☞ P.12-2.

### Center Access Code

**4-digit number specified at initial subscription; required to access Voice Mail via landlines or subscribe to fee-based information.**

- Do not attempt to change Center Access Code. For details, contact SoftBank Mobile Customer Center, General Information (☞ P.18-33).

## Security Code

4-digit number specified at initial subscription, required to restrict handset services (☞P.2-20).

- Enter number within 15 seconds.
- If entered incorrectly three times, Security Code settings lock; Security Code & Center Access Code must be changed. Reach SoftBank Mobile Customer Center, General Information (☞P.18-33) for details.
- To change Security Code: ☞P.2-21

### Note

- Write down Phone Password, Center Access Code and Security Code. Do not reveal Phone Password, Center Access Code and Security Code. SoftBank is not liable for misuse or damages.
- For details, contact SoftBank Mobile Customer Center, General Information (☞P.18-33).

## Multi Task

 
Activate up to three functions; one per group from the following four groups.

Group	Function
① <b>Messaging</b>	Messaging
② <b>Yahoo! Keitai/ S! Appli</b>	Yahoo! Keitai, S! Appli, News/Entertainment
③ <b>Tools</b>	Camera, Music Player <sup>1</sup> , Tools <sup>2</sup> , Data Folder, Mobile Widget, TV, Phone
④ <b>Settings</b>	Settings

<sup>1</sup> When Music Player is active, functions from other groups may be unavailable.

<sup>2</sup> Lifestyle-Appli and ケータイTOOL<辞書> count as Yahoo! Keitai/ S! Appli functions. IC Card Settings counts as a Settings function.

- [▼] appears above the icons of an active group.
- ☐ appears for single function in use; ☐ for multiple functions in use.

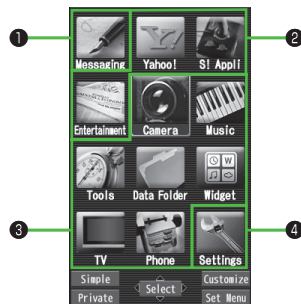

**Note**

- Transmission fees apply for calls/packet transmissions while multitasking.

**Tip**

 
- Other Functions while Watching TV (☞P.5-8)
- Background Music (☞P.9-7)

**Activating Another Function**

Activate another function from a different group. Multi Task is unavailable when Simple menu is active.

1  → *Open Menu* →

Select a function

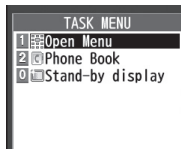

**TASK MENU Window**

**Note**

- If another function is selected from same group, confirmation appears. Select **YES** to cancel current function and start a new function.

**Ending Current Functions**

1 

■ End All Active Functions

>  →  [  END ] → **YES**

## View Blind

Activate View Blind to protect Display from prying eyes.

Main Menu ► Settings ► Display Settings ► View Blind

1 *ON*

2 Select a level



- Set level 1-3 (Level 3 is the highest level).

### Note

- Alternatively, press and hold (8) to activate/cancel. Previously selected level applies.
- View Blind is not activated/deactivated when: In Standby; S! Appli is active; Privacy Key Lock is active; All Reset is in progress; or phone number is being entered.

## My Number

Confirm handset phone number in Account Details (P.4-12). Also confirm data saved in Account Details: name, mail address, etc.

1 In Standby,  →   
Account Details appears.

