

# News/Entertainment

<b>S! Information Channel/Weather (Japanese).....</b>	<b>8-2</b>
Registering/Canceling.....	8-2
Using S! Information Channel.....	8-2
Using Weather Indicator .....	8-3
Option Menu Items.....	8-4
<b>S! Quick News (Japanese) .....</b>	<b>8-4</b>
Registering S! Quick News Items .....	8-4
Opening New Information .....	8-5
<b>E-Books (Japanese).....</b>	<b>8-6</b>

## S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear in Standby.

- Transmission fees apply for updates.
- Auto download is not available overseas.

### Registering/Canceling

Main Menu ▶ Entertainment ▶ S! Info Ch./Weather

#### 1 Register/Cancel → YES

Handset connects to the Network.  
Follow onscreen instructions.

### Using S! Information Channel

- Up to seven updates are saved.

### Viewing New Information

When information arrives,  and Event Indicator appear in Standby.

1 In Standby,  →  to move pointer → Select Event Indicator

2  [Select]

Follow onscreen instructions.

- Option Menu Items:  P.8-4



### Manually Retrieve Information

Select Event Indicator *Failed to download*

- Alternatively, Main Menu ▶ Entertainment ▶ S! Info Ch./Weather ▶ Get Latest Contents ▶ YES

### Delete Information

> Main Menu ▶ Entertainment ▶ S! Info Ch./Weather ▶ Highlight What's New? ▶  [Menu] ▶ Delete ▶ YES

#### Note

- Alternatively, Main Menu ▶ Entertainment ▶ S! Info Ch./Weather ▶ What's New? to retrieve information
- If there is unread information in both S! Quick News and S! Information Channel,  does not appear. Only Event Indicator appears.


### Viewing Previously Received Information

Main Menu ▶ Entertainment ▶ S! Info Ch./Weather

1 **History** → Select a date

 for unread news and  for read news appear.

### Delete History


> Main Menu ▶ Entertainment ▶ S! Info Ch./Weather ▶ History  
(▶ Highlight a History) ▶  [Menu] ▶ Delete or Delete All ▶ YES  
(▶ For Delete All, enter Phone Password)



## Using Weather Indicator

Weather Indicator for current forecast area appears in Standby.

### Viewing New Information

Event Indicator and Weather Indicator appear for weather updates.

1 In Standby,  →  to move pointer → Select Event Indicator or Weather Indicator

2  [Select]  
Information appears.  
Follow onscreen instructions.  
● Option Menu Items:  P.8-4



### Weather Indicator

Indicators are updated periodically.

Example:  Clear,  Rain later thunderstorm,

 Cloudy with occasional snow, etc.

● See Weather Indicator List ( P.18-23) for more indicators.

### Manually Update Weather Indicator

Select Event Indicator *Failed to download*

- Alternatively, **Main Menu** ▶ Entertainment  
▶ S! Info Ch./Weather ▶ Weather Indicator ▶ Manual Update  
▶ YES

### Hide Event Indicator

- > **Main Menu** ▶ Entertainment ▶ S! Info Ch./Weather  
▶ Weather Indicator ▶ Missed Event Settings ▶ OFF

#### Note

- Alternatively, view forecast details from **Main Menu**  
▶ Entertainment ▶ S! Info Ch./Weather ▶ Weather Indicator  
▶ Weather

### Hiding Weather Indicator


**Main Menu** ▶ Entertainment ▶ S! Info Ch./Weather  
▶ Weather Indicator ▶ Display Settings

#### 1 OFF

- When Display Settings is set to **OFF**, update is also deactivated.

## Option Menu Items

Open information and press  [Menu] for these options.

Item	Operation/Description
<b>Forward</b>	Go to next page
<b>Text Copy</b>	Copy page text
<b>Select File</b>	View, play or save file to Data Folder (From Step 2 in Downloading Image/Sound Files:  P.15-11)
<b>Jump in this page</b>	Jump to top/end of page
<b>Yahoo! Keitai</b>	View top menu
<b>Font Size*</b>	Change character size
<b>Exit viewing this</b>	Exit content

\* Linked with Font Size setting in Internet option menu.

## S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Display.

- Registering or viewing S! Quick News incurs transmission fees. No fees apply for viewing ticker information. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Auto download is not available overseas.

### Registering S! Quick News Items

- Register one **Quick** news, up to four **General** news and one **Special** news.




Main Menu ► Entertainment ► S! Quick News  
► S! Quick News List

- 1 Add News → YES**  
Yahoo! Keitai connects and contents list appears.
- 2 Select an item**  
Follow onscreen instructions.

## Opening New Information

### Viewing New Information in Standby

When new information is received,  appears in Standby.

- 1 In Standby,  →  to move pointer → Select ticker
- 2  [Select]  
Content list appears.
- 3 Select information  
Details appear.

#### Tip

#### Settings

- Show Only Unread Items in Standby
- Change Marquee Speed
- Hide S! Quick News
- Download Image (☞ P.17-17)

## Opening S! Quick News List

Main Menu ▶ Entertainment ▶ S! Quick News  
▶ S! Quick News List

- 1 Select an item  
Content list appears.
- 2 Select information  
Detailed information appears.
- 3 To connect to the Network, select a title → **YES**

#### Update Manually

> In Step 1,  [Menu] → *Update* or *All Update* → **YES**

#### View Summary

> In Step 1, highlight an item →  [Menu] → *Summary Display*

#### Delete Registered Items

> In Step 1, (highlight an item →)  [Menu] → *Delete* or *All Delete* → **YES** (→ For *All Delete*, enter Phone Password)

#### Note

- Alternatively, **Main Menu ▶ Entertainment ▶ S! Quick News ▶ Settings ▶ Del S! Quick News List ▶ YES** to delete all registered items

#### Tip

**Settings** ● Automatically Update S! Quick News List (☞ P.17-17)

## E-Books (Japanese)

Use **BookSurfing®** or **e-Book Viewer** to acquire/view e-books, comics, photo books, etc. on handset.

- BookSurfing® and e-Book Viewer are S! Appli.
- Downloading Content Keys (☞P.10-5) may be necessary to view certain files.
- Some copy protected files have extensions different from the ones below.

Application	File Format
BookSurfing®	CCF (.ccf)
e-Book Viewer	X MDF (.zbf, .zbx, .zbs)

- Some PC contents may not be viewable via e-Book Viewer.

**Main Menu ▶ Entertainment**

### 1 *BookSurfing* or *e-Book Viewer*

- See application Help menu for usage information.

#### Note

- Launch BookSurfing®/e-Book Viewer via S! Appli, or select a file from Books in Data Folder.
- When purchasing a new handset, move CCF/XMDF files via microSD Card. However, if CCF/XMDF files are copy protected, Content Keys backup may be needed (☞P.10-23). Some contents require another Content Key after being moved/copied to a new handset or cannot be moved/copied at all.