

# Settings


<b>Sound &amp; Vibration</b> .....	<b>17-2</b>
Ringtones.....	17-2
Charge Sound/Key Tone .....	17-3
<b>Display</b> .....	<b>17-3</b>
Display Settings.....	17-3
Main Menu .....	17-4
Clock .....	17-5
Back Light .....	17-5
Font .....	17-6
<b>Manner Mode</b> .....	<b>17-6</b>
<b>Incoming Settings</b> .....	<b>17-7</b>
<b>Date &amp; Time</b> .....	<b>17-8</b>
<b>Call Settings</b> .....	<b>17-8</b>
Call Time & Call Cost .....	17-8
Making & Receiving Calls .....	17-8
<b>Notification Light</b> .....	<b>17-9</b>
<b>Text Entry</b> .....	<b>17-10</b>
Text Entry Method .....	17-10
Conversion .....	17-10
Conversion Settings for Messaging .....	17-11
<b>Phone Book</b> .....	<b>17-11</b>
<b>Voice Dial</b> .....	<b>17-11</b>
<b>Video Call</b> .....	<b>17-12</b>
Function Menus.....	17-12
Engaged Video Call Settings .....	17-12

<b>Digital TV</b> .....	<b>17-13</b>
<b>Camera</b> .....	<b>17-14</b>
Camera Mode/Continuous Shooting.....	17-14
Video Camera Mode.....	17-15
<b>Mobile Widget (Japanese)</b> .....	<b>17-16</b>
<b>S! Quick News (Japanese)</b> .....	<b>17-17</b>
Display Settings.....	17-17
Auto Update/Deleting Information .....	17-17
<b>Messaging</b> .....	<b>17-18</b>
Universal Settings.....	17-18
S! Mail Settings.....	17-19
SMS Settings .....	17-19
<b>Internet</b> .....	<b>17-20</b>
Browser Display Settings.....	17-20
Memory Manager & Reset .....	17-20
Security Settings .....	17-21
Reset.....	17-21
<b>S! Appli</b> .....	<b>17-22</b>
<b>Osaifu-Keitai®</b> .....	<b>17-22</b>
<b>Location Settings</b> .....	<b>17-22</b>
<b>Default Settings</b> .....	<b>17-23</b>
<b>Confirming Settings</b> .....	<b>17-24</b>

## Settings Sound & Vibration

### Ringtones

From  Main Menu  Settings

Setting/Operation	Default
<b>Change Ringtone</b> > <i>Sound Settings</i> → <i>Ring Tones</i> → Select an item → <i>Select Ring Tone</i> → Select a type → Select a folder → Select a tone	Phone/Video Call: Pattern 1 Message: Tone3
<b>Set Machi-Uta® (Change Ringback Tone)<sup>1</sup></b> > <i>Sound Settings</i> → <i>Machi-Uta</i> → Select an item	—
<b>Change Ringer Volume</b> > <i>Sound Settings</i> → <i>Ringer Volume</i> → Select a type →  to adjust volume	Level 4
<b>Disable 3D Sound Effect (Ringtone/Melody)</b> > <i>Sound Settings</i> → <i>Stereo/3D Sound</i> → <i>OFF</i>	ON
<b>Set Ringtone Sound Output for Earphone<sup>2</sup></b> > <i>Sound Settings</i> → <i>Earphone</i> → <i>Earphone</i>	Earphone + Speaker
<b>Set Message Ringtone Duration</b> > <i>Sound Settings</i> → <i>Message Ring Tones</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i> , enter ring time)	ON (Ring time: 05 sec)
<b>Set Vibration Alert</b> > <i>Incoming Settings</i> → <i>Vibrator</i> → Select an item → Select a vibration pattern	OFF

<sup>1</sup> For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

<sup>2</sup> When earphone is connected and Sound Settings is set to **Earphone**, ringtone sounds through earphone and speaker for incoming calls/ messages or alarms after about 20 seconds. Other sounds (e.g. demo playback) are heard only from earphone.

### Pre-installed Ringtones

Title	Composer
Pinwheel	Original
WALKURENITT/DIE WALKURE	WAGNER RICHARD WILHELM
PARADE OF THE WOODEN SOLDIERS	JESSEL LEON
OUVERTURE/GUILLAUME TELL	ROSSINI GIOACCHINO ANTONIO
DANCE OF THE KNIGHTS OP 64 NO 13	PROKOFEV SERGEJ S
WALTZ/COPPELIA BALLET SUITE	DELIBES LEO CLEMENT PHILIBERT
DANSE DES MIRLITONS/CASSE NOISETTE OP 71A/ORI	CHAJKOVSKIJ PETR ILICH
PETER AND THE WOLF OP 67	PROKOFEV SERGEJ S

Names of composers given above conform to JASRAC Website. Parts of titles may not appear due to Display size.

## Charge Sound/Key Tone

From ► Main Menu ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Set Key Tone</li> <li>&gt; <i>Sound Settings</i> → <i>Key Tone</i> → <i>ON</i> or <i>OFF</i></li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Set Charge Start/End Sound Off</li> <li>&gt; <i>Phone Settings</i> → <i>Battery</i> → <i>Charge Sound</i> → <i>OFF</i></li> </ul>	ON

## Settings Display

### Display Settings

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Change Wallpaper</li> <li>&gt; <i>Internal Display</i> → <i>Stand-by Display</i> → Select an item → Select a folder → Select an image</li> </ul>	(☞P.17-23)
<ul style="list-style-type: none"> <li>■ Add Calendar to Wallpaper</li> <li>&gt; <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Calendar</i> → Select a view format → <i>BG Image ON</i> or <i>BG Image OFF</i> (→ For <i>BG Image ON</i>, select a folder → select an image)</li> </ul>	—
<ul style="list-style-type: none"> <li>■ Change Wallpaper Randomly</li> <li>&gt; <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Random Display</i> → Select a folder → <i>Every Hour</i> or <i>Every Day</i></li> </ul>	—
<ul style="list-style-type: none"> <li>■ Change Outgoing Call/Message Image</li> <li>&gt; <i>Internal Display</i> → Select an outgoing type → Select a folder → Select an image</li> </ul>	(☞P.17-23)
<ul style="list-style-type: none"> <li>■ Change Incoming Call/Message Image</li> <li>&gt; <i>Internal Display</i> → Select an incoming type → <i>Select Calling Disp.</i><sup>1</sup> → Select an image type → Select a folder → Select an image</li> </ul>	(☞P.17-23)
<ul style="list-style-type: none"> <li>■ Change Battery/Antenna Indicator</li> <li>&gt; <i>Internal Display</i> → <i>Battery Icon</i> or <i>Antenna Icon</i> → Select a pattern</li> </ul>	Pattern 1

<p>■ <b>Change Start-up Window</b>          &gt; <i>Internal Display</i> → <i>Start-up</i> → <i>OFF</i>, <i>Message</i>, <i>Pictures</i> or <i>Videos</i><sup>2</sup></p>	—
<p>■ <b>Change Display Color Scheme</b>          &gt; <i>Color</i> → Select a color</p>	(☞P.17-23)
<p>■ <b>Set Interface Language</b>          &gt; <i>言語設定</i> → <i>English</i> or <i>日本語</i></p>	日本語
<p>■ <b>Show Missed Call/New Message when Handset Opens</b>          &gt; <i>Open for New</i> → <i>ON</i></p>	OFF

- <sup>1</sup> ● Setting applies to messages retrieved manually or when Server Mail is retrieved (Incoming message window cannot be changed).
- <sup>2</sup> ● For *Pictures* or *Videos*: Select a folder → Select an image  
 ● For *Message*: Enter text

## Main Menu

From ► **Main Menu** ► **Settings** ► **Display Settings**  
 ► **Menu Icons**

Setting/Operation	Default
<p>■ <b>Change Main Menu Theme</b>          &gt; Select a pattern</p>	(☞P.17-23)
<p>■ <b>Change Main Menu Icons</b>          &gt; <i>Customize</i> → Select a menu → Select a folder → Select an image</p>	—
<p>■ <b>Change Main Menu Background</b>          &gt; <i>Customize</i> → <i>Background Image</i> → Select a folder → Select an image</p>	—

## Clock

From ► Main Menu ► Settings ► Display Settings  
► Internal Display ► Clock

Setting/Operation	Default
■ Change Standby Clock Pattern <sup>1</sup> > <i>Stand-by Clock</i> → [Pattern] → Select a pattern → [Set]	(☞P.17-23)
■ Change Standby Clock Position <sup>1 2</sup> > <i>Stand-by Clock</i> → [Position] → Select a position → [Set]	Pattern 1
■ Change Standby Clock Size <sup>1</sup> > <i>Stand-by Clock</i> → [Size] → <i>Large</i> → [Set]	Small
■ Change Standby Clock at Upper Right (Lower Right in Landscape View) > <i>Icon Clock</i> → Select a pattern	(☞P.17-23)

<sup>1</sup> Highlight *Stand-by Clock* → [Play] to view Standby Clock.

<sup>2</sup> Clock appears in **Pattern 1** when:

- Calendar, World Clock or Operator Name is set to appear in Standby.
- Time zone is set to other than GMT+9.
- Privacy Key Lock is active.

## Back Light

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
■ Turn Back Light On/Off; Set Power Saver Mode <sup>1</sup> > <i>Back Light Time</i> → <i>Lighting</i> → <i>ON</i> or <i>OFF</i> → Enter time to Power Saver mode	ON + 15secs.
■ Illuminate Back Light while Charging > <i>Back Light Time</i> → <i>Charging</i> → <i>Constant Light</i>	Standard <sup>2</sup>
■ Limit Back Light to Display Only > <i>Back Light Time</i> → <i>Area</i> → <i>LCD</i>	LCD + Keys
■ Adjust Brightness > <i>Back Light Time</i> → <i>Brightness</i> → Select a brightness level	Auto <sup>3</sup>
■ Set Soft Light Off > <i>Back Light Time</i> → <i>Soft Light</i> → <i>OFF</i>	ON
■ Disable Auto Image Compensation > <i>LCD AI</i> → <i>OFF</i>	ON

<sup>1</sup> During operation (except when in Standby or S! Appli is active), press and hold [5] to toggle **ON/OFF**.

<sup>2</sup> When set to **Standard**, Back Light illuminates with the same setting as **Lighting** setting.

<sup>3</sup> When set to **Auto**, Back Light for the part set in **Area** is automatically adjusted according to ambient light.

## Font

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Change Font Size by Function</li> <li>&gt; <i>Font Size</i> → Select an item → Select a size</li> </ul>	Standard
<ul style="list-style-type: none"> <li>■ Set Menu Font Sizes Collectively</li> <li>&gt; <i>Font Size</i> → <i>Collective Setting</i> → <i>Large</i> or <i>Small</i>*</li> </ul>	Standard
<ul style="list-style-type: none"> <li>■ Change Font Style (Incoming/Outgoing Call Window)</li> <li>&gt; <i>Disp. Call/Recv #</i> → <i>Pattern 2</i></li> </ul>	Pattern 1

\* When *Small* is set, font size for Phone Book and Incoming/Outgoing Call Logs is *Standard*.

## Settings Manner Mode

From ► Main Menu ► Settings ► Incoming Settings  
► Manner Mode Type

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Set Manner Mode Type</li> <li>&gt; <i>Manner Mode</i>, <i>Super Silent</i> or <i>User Mode</i></li> <li>(→ For <i>User Mode</i>, set individual items → ☑ [Finish])</li> </ul>	Manner Mode

### Default Settings by Mode

Manner Mode	Super Silent	Driving Mode	User Mode
<b>Answer Phone</b>			
Same as for Answer Phone	Same as for Answer Phone	ON	OFF
<b>Vibrator</b>			
ON	ON	OFF	ON
<b>Volume (In. Calls/Msg Ring T./Alarm)</b>			
Silent	Silent	Silent	Silent
<b>Rec. Check Tone</b>			
ON	OFF	ON	ON
<b>Key Tone</b>			
OFF	OFF	OFF	OFF
<b>Mic Sensitiv.</b>			
Up	Up	Up	Up
<b>LVA Tone (Low battery alarm)</b>			
OFF	OFF	OFF	OFF

## Settings Incoming Settings

From ► Main Menu ► Settings ► Incoming Settings

Setting/Operation	Default
<b>Change Answer Setting</b> (⏏Right) > <i>Answer Setting</i> → <i>Quick Silent</i> or <i>OFF</i>	Any Key Answer
<b>Answer Calls by Opening Handset</b> > <i>Open-to-Ans. Call</i> → <i>Phone</i> or <i>Video Call</i> → <i>Answer</i>	Keep Ringing
<b>Hide Caller Image Saved in Phone Book</b> > <i>Phone Book Image</i> → <i>OFF</i>	ON
<b>Set Tone to Notify of Missed Calls/New Messages by</b> (⏏Right) > <i>Info Notice Setting</i> → <i>ON</i> or <i>OFF</i>	ON
<b>Activate Auto Answer with Earphone</b> > <i>Auto Answer</i> → <i>ON</i> → Enter ring time	OFF
<b>Set Call Waiting Response</b> > <i>In-call Management</i> → <i>Call Forwarding</i> or <i>Call Rejection</i>	Answer

## Answer Setting Key Operations

<b>Any Key Answer</b>	To answer a call, press any of the following keys: Voice Call:  ,  ,  -  ,  ,  ,  , Video Call:  ,
<b>Quick Silent</b>	To stop ringtone/vibration, press any of the following keys: Voice Call/Video Call:  -  ,  ,  ,  , ,  ,
<b>OFF</b>	To answer a call, press any of the following keys: Voice Call/Video Call:  ,

## Info Notice Setting Response


<b>ON</b>	No Missed Calls/No New Messages: Triple-beep sounds Missed Calls/New Messages: Double-beep sounds twice
<b>ボイス (Voice)*</b>	No Missed Calls/No New Messages: Triple-beep sounds Missed Calls: Double-beep sounds; voice message announces that you have a missed call New Messages: Double-beep sounds; voice message announces that you have a new message

\* Japanese only

- When Vibrator is set for Incoming Settings, vibration activates with beeps. In Manner Mode, only vibration activates.
- Set *Side-keys Guard* to *OFF* beforehand (⏏P.12-9).

## Settings Date & Time

From ► Main Menu ► Settings ► Date & Time

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Change Date and Time*</li> <li>&gt; <i>Date &amp; Time</i> → Enter year, date, time and time zone</li> </ul>	—
<ul style="list-style-type: none"> <li>■ Display World Clock</li> <li>&gt; <i>World Clock</i> → ON →  to select an area</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Activate Daylight Savings Time</li> <li>&gt; <i>Daylight Savings</i> → ON</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Deactivate Alarm while Operating Other Functions</li> <li>&gt; <i>Alarm Tone</i> → Operation Preferred</li> </ul>	Alarm Preferred
<ul style="list-style-type: none"> <li>■ Deactivate Automatic Time Correction via Yahoo! Keitai</li> <li>&gt; <i>Time Correction</i> → OFF</li> </ul>	ON

\* Date & Time settings effective on handset: from 09:00 on 2000/01/01 to 23:59 on 2037/12/31 (when time zone is set to GMT+9)

## Settings Call Settings

### Call Time & Call Cost

From ► Main Menu ► Settings ► Call Settings


Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Display Call Time/Cost<sup>1</sup></li> <li>&gt; <i>Call Time/Cost</i></li> </ul>	—
<ul style="list-style-type: none"> <li>■ Reset Total Call Charge/Time</li> <li>&gt; <i>Reset</i> → Enter Phone Password → <i>Reset Total Duration</i> or <i>Reset Total Cost</i> → YES (→ For <i>Reset Total Cost</i>, enter PIN2)</li> </ul>	—
<ul style="list-style-type: none"> <li>■ Set Charge Limit<sup>2</sup></li> <li>&gt; <i>Set Max Cost Limit</i> → ON → Enter charge limit → Enter PIN2</li> </ul>	OFF

<sup>1</sup> May not be available depending on subscription status. In that case, Set Max Cost Limit is not available.

<sup>2</sup> When set to **ON**, incoming/outgoing calls including emergency number calls are not dialable if charge limit is reached.

### Making & Receiving Calls

From ► Main Menu ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Change Earpiece Volume</li> <li>&gt; <i>Call Settings</i> → Volume →  to adjust volume</li> </ul>	Level 4



<ul style="list-style-type: none"> <li>■ <b>Set Handset Response when Closed during Call</b></li> <li>&gt; <i>Call Settings</i> → <i>Closing Clamshell</i> → <i>No Tone</i> or <i>Hold Call*</i></li> </ul>	End the Call
<ul style="list-style-type: none"> <li>■ <b>Set Hold Tone</b></li> <li>&gt; <i>Call Settings</i> → <i>Hold Tones</i> → <i>On-hold Tone</i> or <i>Holding Tone</i> → Select a tone</li> </ul>	On-hold Tone: On-hold Tone 1 Holding Tone: JESU JOY OF MAN's
<ul style="list-style-type: none"> <li>■ <b>Turn Off Noise Reduction</b></li> <li>&gt; <i>Call Settings</i> → <i>Noise Reduction</i> → <i>OFF</i></li> </ul>	ON
<ul style="list-style-type: none"> <li>■ <b>Change Alarm Tone when Call is Almost Disrupted</b></li> <li>&gt; <i>Call Settings</i> → <i>Quality Alarm</i> → <i>OFF</i> or <i>Low Tone</i></li> </ul>	High Tone
<ul style="list-style-type: none"> <li>■ <b>Change Alarm Tone until Line is Reconnected</b></li> <li>&gt; <i>Call Settings</i> → <i>Reconnect Signal</i> → <i>OFF</i> or <i>Low Tone</i></li> </ul>	High Tone
<ul style="list-style-type: none"> <li>■ <b>Call Service Numbers</b> (Service not available at present)</li> <li>&gt; <i>Call Settings</i> → <i>Service Numbers</i> → Select a service number → </li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Specify Phone Book Entry to Call with Earphone</b></li> <li>&gt; <i>Phone Settings</i> → <i>Headset Switch to Call</i> → <i>Voice Call</i> → Search Phone Book → Select an entry</li> </ul>	OFF

\* When **Hold Call** is selected: **Speaker ON** (Hold tone sounds from speaker) or **Speaker OFF** (Hold tone does not sound from speaker)

## Settings Notification Light

From **Main Menu** **Settings** **Notification Light**

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ <b>Set Notification Light by Incoming Type (Voice/Video Calls or Messages)</b></li> <li>&gt; <i>Incoming</i> → <i>Select Color</i> → Select a type → Select a color</li> </ul>	P.17-23
<ul style="list-style-type: none"> <li>■ <b>Change Notification Light Color Name for Incoming Call/Message</b></li> <li>&gt; <i>Incoming</i> → <i>Color</i> → <i>Edit Color Name</i> → Select a color → Edit color name</li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Adjust Notification Light Color Tone for Incoming Call/Message</b></li> <li>&gt; <i>Incoming</i> → <i>Color</i> → <i>Adjust Color Tone</i> → Select a color → Adjust color tone</li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Set Notification Light for Missed Calls/New Messages</b></li> <li>&gt; <i>Missed Call/Unread</i> → <i>OFF When Checked</i> or <i>OFF</i></li> </ul>	OFF after 24hours
<ul style="list-style-type: none"> <li>■ <b>Custom Set Notification Light</b></li> <li>&gt; Select a function → Select <i>ON</i>, <i>OFF</i> or a color</li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Set Notification Light for Side Key </b></li> <li>&gt; <i>Side Key</i> → Select <i>OFF</i> or a color</li> </ul>	P.17-23
<ul style="list-style-type: none"> <li>■ <b>View Notification Light Status*</b></li> <li>&gt; <i>Confirm Status</i></li> </ul>	—

\* View Notification Light settings for incoming calls/messages, engaged calls or Side Key .

## Settings Text Entry

### Text Entry Method

From ► **Main Menu** ► **Settings** ► **Phone Settings**  
► **Text Entry Method**

Setting/Operation	Default
<b>■ Set Input Mode</b> > <b>Input Mode</b> → Check input modes to use → ☑ [Finish] → Select an input mode to prioritize	Input mode: All Prioritized mode: Mode 1 (5-touch)
<b>■ Hide Predictive Candidates/Context Forecast List</b> > <b>Predict</b> → <b>OFF</b>	ON (Show)
<b>■ Disable Learning in Secret Mode/Secret Data Only</b> > <b>Learn in Secret Mode</b> → Enter Phone Password → <b>OFF</b>	ON
<b>■ Reset Learned Words</b> > <b>Reset Learned Words</b> → Enter Phone Password → <b>YES</b>	—

### Conversion

From ► Text entry window, ☒ [Menu] ► **Text entry setting**

Setting/Operation	Default
<b>■ View Learned Words</b> > <b>Learned words</b> → Select a row → Select a log ● To delete learned words: Highlight a log → ☒ [Menu] → <b>Delete this</b> or <b>Delete all</b> (→ For <b>Delete all</b> , enter Phone Password) → <b>YES</b>	—
<b>■ Hide Predictive Candidates and Context Forecast Lists</b> > <b>Predict</b> → <b>OFF</b>	ON (Show)
<b>■ Hide Context Forecast List</b> > <b>Candidate display</b> → <b>OFF</b>	ON (Show)
<b>■ Fix Entered Characters Automatically</b> > <b>Character set time</b> → Select a speed	OFF
<b>■ Hide Word Suggestion Guidance for 2/NIKO-touch Input Method</b> > <b>2/NIKO-touch guide</b> → <b>OFF</b>	ON (Show)

## Conversion Settings for Messaging

From ► **Main Menu** ► Messaging ► Settings  
► Universal Settings

Setting/Operation	Default
■ Deactivate Pre-text Predict > <i>Text Predict</i> → <i>Pre-text Predict</i> → OFF	ON
■ Deactivate Season Prediction > <i>Text Predict</i> → <i>Time Season Predict</i> → OFF	ON
■ Select a Text Expression (Writing Style) > <i>Text Predict</i> → <i>Text Expression</i> → <i>Written Language</i> or <i>Colloquialism</i>	Normal Phrase
■ Deactivate Prediction for Message Reply > <i>Pred. Conv. at Reply</i> → OFF	ON

## Settings Phone Book

From ► **Main Menu** ► Phone ► Settings

Setting/Operation	Default
■ Change Save Location for New Entry > <i>Save Settings</i> → <i>USIM</i> or <i>Ask Every Time</i>	Phone
■ Change Phone Book Search Method > <i>Search Method</i> → Select a method	A-KA-SA-TA-NA
■ Change Font Size > <i>Font Size</i> → <i>Phone Book</i> or <i>Call Log</i> → <i>Large</i>	Standard
■ Forbid Forwarding Phone Book Entry Images > <i>Forwarding Image</i> → OFF	ON*

\* If **ON** is selected, images can be forwarded via Infrared or IC transmission.

## Settings Voice Dial

From ► **Main Menu** ► Settings ► Phone Settings  
► Voice Settings

Setting/Operation	Default
■ Activate Voice Dial Automatically > <i>Auto Voice Dial</i> → ON	OFF
■ Activate Voice Dial via Earphone > <i>Voice Earphone Dial</i> → ON	OFF

## Settings Video Call

### Function Menus

From ► Main Menu ► Settings ► Video Call

Setting/Operation	Default
<b>Change Incoming Image Quality</b> > <i>Incoming Video Qlty</i> → <i>Quality Prioritized</i> or <i>Motion Prioritized</i>	Standard
<b>Change Outgoing Image</b> > <i>Select Images</i> → Select a category → Highlight <i>Original</i> → [Menu] → <i>Change setting</i> → Select a folder → Select a file → [Play] to view image	Pre-installed
<b>Switch Earpiece On</b> > <i>Loud Speaker</i> → OFF	ON (Loud Speaker ON)
<b>Switch to Voice Call when Video Call Fails</b> > <i>Voice Call Auto Redial</i> → ON	OFF

### Engaged Video Call Settings

From ► During a Video Call, [Menu] ► V. Call settings

Setting/Operation	Default
<b>Change Incoming Image Quality</b> > <i>Incoming Video Qlty</i> → <i>Qlty Prioritized</i> or <i>Motion Prioritized</i>	Standard
<b>Change Brightness</b> > <i>Brightness</i> → Select a brightness level	0
<b>Adjust Outgoing Image Color Tone to Lighting Conditions</b> > <i>White balance</i> → Select an environment	Automatic
<b>Change Outgoing Image Color Tone</b> > <i>Color mode set</i> → Select a color tone	Normal
<b>Enhance Image Quality in Low Light Conditions</b> > <i>Night mode</i> → ON	OFF
<b>Set Focus</b> > <i>Focus</i> → Select a focus type	Landscape

## Settings Digital TV

From ► Main Menu ► TV ► User Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Set Default View When Activating TV</li> <li>&gt; <i>Display/operation</i> → <i>First View</i> → <i>Normal Screen</i></li> </ul>	Wide Screen
<ul style="list-style-type: none"> <li>■ Change Display Setting</li> <li>&gt; <i>Display/operation</i> → <i>V. img/Caption Setting</i> → <i>Visual image+DBC</i> or <i>Enlarged V. img+DBC</i></li> </ul>	V. img+ Caption+ DBC
<ul style="list-style-type: none"> <li>■ Change Caption Position in Landscape View</li> <li>&gt; <i>Display/operation</i> → <i>Caption Posit. In W-scr</i> → <i>Upper</i></li> </ul>	Lower
<ul style="list-style-type: none"> <li>■ Hide Indicators in Landscape View</li> <li>&gt; <i>Display/operation</i> → <i>Icons</i> → <i>OFF</i></li> </ul>	ON
<ul style="list-style-type: none"> <li>■ Change Ticker Setting for Incoming Mail Notification</li> <li>&gt; <i>Display/operation</i> → <i>Mail Ticker Display</i> → <i>Sender+Subject</i> or <i>OFF</i></li> </ul>	Receipt Notification
<ul style="list-style-type: none"> <li>■ Deactivate TV when Handset is Closed</li> <li>&gt; <i>Display/operation</i> → <i>Work When Folded</i> → <i>Suspend</i> or <i>End</i></li> </ul>	Maintain
<ul style="list-style-type: none"> <li>■ Auto-Adjust Frame Rate for Enhanced Image</li> <li>&gt; <i>Video</i> → <i>Mobile W-Speed</i> → <i>ON</i></li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Change Image Quality</li> <li>&gt; <i>Video</i> → <i>Image Quality</i> → Select an item</li> </ul>	Dynamic

<ul style="list-style-type: none"> <li>■ Set Back Light Duration while Watching TV</li> <li>&gt; <i>Display Light</i> → <i>Lighting Duration</i> → Enter duration (min.)</li> </ul>	Constant Light
<ul style="list-style-type: none"> <li>■ Deactivate Auto Volume</li> <li>&gt; <i>Sound Effect</i> → <i>Auto Volume</i> → <i>OFF</i></li> </ul>	ON
<ul style="list-style-type: none"> <li>■ Remaster Sounds from Earphone</li> <li>&gt; <i>Sound Effect</i> → <i>Remaster</i><sup>1</sup> → <i>ON</i></li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Add Listening Effect to Sound from Earphone</li> <li>&gt; <i>Sound Effect</i> → <i>Listening</i><sup>1</sup> → Select an item</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Change Quality of Sound from Earphone</li> <li>&gt; <i>Sound Effect</i> → <i>Equalizer</i><sup>1</sup> → Select an item</li> </ul>	Normal
<ul style="list-style-type: none"> <li>■ End Recording when Battery Runs Low</li> <li>&gt; <i>Recording</i> → <i>Rec. When Low Battery</i> → <i>Stop Recording</i></li> </ul>	Continue Recording
<ul style="list-style-type: none"> <li>■ Start Recording Automatically when a Call Comes in while Watching TV</li> <li>&gt; <i>Recording</i> → <i>Rec. Program When Call</i> → <i>ON</i></li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Hide Images on Data Broadcast Sites</li> <li>&gt; <i>Data Broadcasting</i> → <i>Images</i> → <i>OFF</i></li> </ul>	ON
<ul style="list-style-type: none"> <li>■ Turn Off Sounds from Data Broadcast/Sites</li> <li>&gt; <i>Data Broadcasting</i> → <i>Sound Effect</i> → <i>OFF</i></li> </ul>	ON
<ul style="list-style-type: none"> <li>■ Show Confirmation on Data Broadcast</li> <li>&gt; <i>Data Broadcasting</i> → <i>Reset Settings</i> → <i>YES</i></li> </ul>	—
<ul style="list-style-type: none"> <li>■ Set Power Saving Mode<sup>2</sup></li> <li>&gt; <i>ECO Mode</i> → <i>YES</i></li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Reset Channel List</li> <li>&gt; <i>Reset Channel Setting</i> → Enter Phone Password → <i>YES</i></li> </ul>	—

<p>■ <b>Delete Information in Broadcasting Storage Area</b></p> <p>&gt; <b>Reset Storage Area</b> → (Highlight an affiliated channel →) [Y] [Menu] → <b>Delete</b> → <b>Delete this</b> or <b>Delete all</b> (→ For <b>Delete all</b>, enter Phone Password) → <b>YES</b></p>	—
<p>■ <b>Reset TV Settings</b></p> <p>&gt; <b>Reset TV Settings</b> → Enter Phone Password → <b>YES</b></p>	—
<p>■ <b>Check TV Settings</b></p> <p>&gt; <b>Check TV Settings</b></p>	—

<sup>1</sup> Remaster/Listening/Equalizer settings: ⏏P.5-7

<sup>2</sup> To cancel ECO Mode, perform same operation. When ECO Mode is set, following settings automatically activate and cannot be changed. When ECO mode is canceled, original settings return.

**Mobile W-Speed:** OFF

**Image Quality:** Normal

**Remaster:** OFF

**Listening:** OFF

**Equalizer:** Normal

## Settings Camera

- Change settings before capturing images (⏏P.6-5).
- Some settings are not available depending on camera mode, image size or photo mode.

### Camera Mode/Continuous Shooting

#### Camera Mode

From ▶ **Main Menu** ▶ **Camera** ▶ **Camera** ▶ [Y] [Menu]

#### Continuous Shooting (Action Mode)

From ▶ **Main Menu** ▶ **Camera** ▶ **Camera** ▶ [Video]  
▶ [Cont.] ▶ [Y] [Menu]

Setting/Operation	Default
<p>■ <b>Change Camera Mode</b></p> <p>&gt; <b>CHG camera-mode</b> → Select a mode</p>	—
<p>■ <b>Change Photo Mode</b></p> <p>&gt; <b>Photo mode</b> (⏏P.6-8)</p>	Normal
<p>■ <b>Change Image Size</b></p> <p>&gt; <b>Image size</b> → Select a size</p>	Camera mode: Stand-by (240x427) Action mode: VGA (480x640)
<p>■ <b>Change Image Quality</b></p> <p>&gt; <b>Image quality</b> → Select an item</p>	Fine
<p>■ <b>Change Brightness</b></p> <p>&gt; <b>Camera settings</b> → <b>Brightness</b> → Select a level</p>	±0

<ul style="list-style-type: none"> <li>■ Adjust Color Balance According to Lighting Conditions</li> <li>&gt; <i>Camera settings</i> → <i>White balance</i> → Select an item</li> </ul>	Auto
<ul style="list-style-type: none"> <li>■ Change Color Mode</li> <li>&gt; <i>Camera settings</i> → <i>Color mode set</i> → Select an item</li> </ul>	Normal
<ul style="list-style-type: none"> <li>■ Change Focus Setting</li> <li>&gt; <i>Camera settings</i> → <i>Focus</i> → Select an item</li> </ul>	Camera mode: Face Detection Action mode: Auto
<ul style="list-style-type: none"> <li>■ Deactivate Image Stabilizer</li> <li>&gt; <i>Camera settings</i> → <i>Img. stabilizer</i> → OFF</li> </ul>	Auto
<ul style="list-style-type: none"> <li>■ Add Frames</li> <li>&gt; <i>Camera settings</i> → <i>Shoot with frame</i> → ON → Select a frame → Capture an image</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Change Shutter Click Sound</li> <li>&gt; <i>Camera settings</i> → <i>Shutter sound</i> → Select an item</li> </ul>	Sound 1
<ul style="list-style-type: none"> <li>■ Minimize Flicker while Shooting near Fluorescent Light</li> <li>&gt; <i>Camera settings</i> → <i>Flicker correction</i> → <i>Mode 1 (50Hz)</i> or <i>Mode 2 (60Hz)</i></li> </ul>	Automatically
<ul style="list-style-type: none"> <li>■ Change Save Location</li> <li>&gt; <i>Storage setting</i> → <i>Store in</i> → <i>microSD</i></li> </ul>	Phone
<ul style="list-style-type: none"> <li>■ Capture Images with High Sensitivity</li> <li>&gt; <i>High sensitiv.</i> → ON</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Set Auto Timer</li> <li>&gt; <i>Auto timer</i> (☞P.6-7)</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Change Continuous Shooting Setting</li> <li>&gt; <i>Cont. shooting set.</i> (☞P.6-8)</li> </ul>	—
<ul style="list-style-type: none"> <li>■ Change Viewfinder Size</li> <li>&gt; <i>Display size</i> → <i>Fit in display</i></li> </ul>	Actual size

<ul style="list-style-type: none"> <li>■ Hide Display Indicators</li> <li>&gt; <i>Icon</i> → OFF</li> </ul>	ON (Show)
<ul style="list-style-type: none"> <li>■ View Memory Information</li> <li>&gt; <i>Memory Status</i></li> </ul>	—

## Video Camera Mode

From ▶ **Main Menu** ▶ **Camera** ▶ **Video Camera**  
▶ [Y] [Menu]

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Change Camera Mode</li> <li>&gt; <i>CHG camera-mode</i> → Select a mode</li> </ul>	—
<ul style="list-style-type: none"> <li>■ Change Photo Mode</li> <li>&gt; <i>Photo mode</i> (☞P.6-8)</li> </ul>	Normal
<ul style="list-style-type: none"> <li>■ Change Image Size</li> <li>&gt; <i>Image size</i> → Select a size</li> </ul>	QCIF (176x144)
<ul style="list-style-type: none"> <li>■ Change Recording Time</li> <li>&gt; <i>File size setting</i> → <i>Long time</i></li> </ul>	Mail restrict'n (S)
<ul style="list-style-type: none"> <li>■ Change Image Quality<sup>1</sup></li> <li>&gt; <i>Image quality</i> → Select an item</li> </ul>	Normal
<ul style="list-style-type: none"> <li>■ Change Brightness</li> <li>&gt; <i>Camera settings</i> → <i>Brightness</i> → Select a level</li> </ul>	±0
<ul style="list-style-type: none"> <li>■ Adjust Color Balance According to Lighting Conditions</li> <li>&gt; <i>Camera settings</i> → <i>White balance</i> → Select an item</li> </ul>	Auto
<ul style="list-style-type: none"> <li>■ Change Color Mode</li> <li>&gt; <i>Camera settings</i> → <i>Color mode set</i> → Select an item</li> </ul>	Normal

<ul style="list-style-type: none"> <li>■ Change Focus Setting</li> <li>&gt; <i>Camera settings</i> → <i>Focus</i> → Select an item</li> </ul>	Auto
<ul style="list-style-type: none"> <li>■ Change Shutter Click Sound</li> <li>&gt; <i>Camera settings</i> → <i>Shutter sound</i> → Select an item</li> </ul>	Sound 1
<ul style="list-style-type: none"> <li>■ Minimize Flicker while Shooting near Fluorescent Light</li> <li>&gt; <i>Camera settings</i> → <i>Flicker correction</i> → <i>Mode 1 (50Hz)</i> or <i>Mode 2 (60Hz)</i></li> </ul>	Automatically
<ul style="list-style-type: none"> <li>■ Change Save Location<sup>2</sup></li> <li>&gt; <i>Storage setting</i> → <i>Store in</i> → <i>microSD</i></li> </ul>	Phone
<ul style="list-style-type: none"> <li>■ Set Auto-Save Off<sup>2</sup></li> <li>&gt; <i>Storage setting</i> → <i>Auto save set</i> → <i>OFF</i></li> </ul>	ON (Automatically save)
<ul style="list-style-type: none"> <li>■ Set Auto Timer</li> <li>&gt; <i>Auto timer</i> (📷P.6-7)</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Forbid Recording Audio</li> <li>&gt; <i>Movie type set</i> → <i>Video</i></li> </ul>	Normal
<ul style="list-style-type: none"> <li>■ Change Viewfinder Size</li> <li>&gt; <i>Display size</i> → <i>Fit in display</i></li> </ul>	Actual size
<ul style="list-style-type: none"> <li>■ Change to Mail Attachment Mode</li> <li>&gt; <i>Attach S!Mail mode</i> → <i>YES</i></li> </ul>	—
<ul style="list-style-type: none"> <li>■ Hide Display Indicators</li> <li>&gt; <i>Icon</i> → <i>OFF</i></li> </ul>	ON (Show)
<ul style="list-style-type: none"> <li>■ View Memory Information</li> <li>&gt; <i>Memory Status</i></li> </ul>	—

<sup>1</sup> Available when File size setting is set to **Long time**

<sup>2</sup> When File size setting is set to **Long time**, save location is set to microSD and auto-save setting is set to ON. Save location and auto-save setting cannot be changed.

## Settings Mobile Widget (Japanese)

From ► Main Menu ► Widget ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Deactivate Auto Update</li> <li>&gt; <i>Auto Refresh</i> → <i>OFF</i></li> </ul>	ON (Activate)
<ul style="list-style-type: none"> <li>■ Activate Auto Network Connection when Roaming Abroad</li> <li>&gt; <i>Auto Roaming</i> → <i>ON</i></li> </ul>	OFF (Deactivate)
<ul style="list-style-type: none"> <li>■ Hide Confirmation when Roaming Abroad</li> <li>&gt; <i>Roaming Notification</i> → <i>OFF</i></li> </ul>	ON (Show)
<ul style="list-style-type: none"> <li>■ Forbid Sending/Receiving Cookies</li> <li>&gt; <i>Cookies</i> → <i>OFF</i></li> </ul>	ON (Send/Receive)
<ul style="list-style-type: none"> <li>■ Delete Cookies</li> <li>&gt; <i>Delete Cookies</i> → <i>YES</i></li> </ul>	—
<ul style="list-style-type: none"> <li>■ Change Pointer Speed</li> <li>&gt; <i>Pointer Speed</i> → <i>High Speed</i> or <i>Low Speed</i></li> </ul>	Medium Speed



## Settings S! Quick News (Japanese)

### Display Settings

From ► Main Menu ► Settings ► Display Settings  
► Internal Display ► S! Quick News Settings

Setting/Operation	Default
■ Show Only Unread Items in Standby > <i>Unread/Read Setting</i> → <i>Unread</i>	Unread + Read
■ Change Marquee Speed > <i>Marquee Speed</i> → <i>Fast</i> or <i>Slow</i>	Normal
■ Hide S! Quick News > <i>Display Always</i> → <i>OFF</i>	ON (Show)
■ Download Image > <i>Image Display</i> → <i>ON</i>	OFF

### Auto Update/Deleting Information

From ► Main Menu ► Entertainment ► S! Quick News  
► Settings

Setting/Operation	Default
■ Automatically Update Quick News in S! Quick News List <sup>1 2</sup> > <i>Auto Refresh</i> → <i>S! Quick News</i> → Set update frequency	OFF
■ Automatically Update General News (Once a day) <sup>1 2</sup> > <i>Auto Refresh</i> → <i>General</i> → <i>ON</i>	OFF
■ Automatically Update Special News (Every 4 hours) <sup>1 2</sup> > <i>Auto Refresh</i> → <i>Special</i> → <i>ON</i>	OFF
■ Delete All Registered Contents > <i>Del S! Quick News List</i> → <i>YES</i> → Enter Phone Password	—

<sup>1</sup> If calls are in progress at update time, auto update does not occur until next update.

<sup>2</sup> Video Calls are rejected during auto update.

## Settings Messaging

### Universal Settings

From **Main Menu** ► Messaging ► Settings  
 ► Universal Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Change Font Size*</li> <li>&gt; <i>Message Display</i> → <i>Font Size</i> → <i>Small</i> or <i>Large</i></li> </ul>	Normal
<ul style="list-style-type: none"> <li>■ Set Scroll Unit in Text Entry/Preview Window</li> <li>&gt; <i>Message Display</i> → <i>Scroll Unit</i> → <i>Half Screen</i> or <i>Whole Screen</i></li> </ul>	Single Line
<ul style="list-style-type: none"> <li>■ Set Whether to Quote Original Message in Reply</li> <li>&gt; <i>Quote Message</i> → <i>ON(S! Mail/SMS)</i> or <i>OFF</i></li> </ul>	ON(S! Mail)
<ul style="list-style-type: none"> <li>■ Request Delivery Confirmation (Available when messaging to SoftBank handset numbers)</li> <li>&gt; <i>Delivery Report</i> → <i>ON</i></li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Change Anti-Spam Measures</li> <li>&gt; <i>Anti-Spam Measures</i> → <i>Report Spam</i></li> <li>→ <input type="checkbox"/> [Edit] → Edit recipient address → <input type="checkbox"/> [Finish]</li> <li>→ <i>YES</i></li> </ul>	stop@meiwaku. softbankmobile. co.jp
<ul style="list-style-type: none"> <li>■ Reset Anti-Spam Measures</li> <li>&gt; <i>Anti-Spam Measures</i> → <i>Report Spam</i> →</li> <li><input type="checkbox"/> [Menu] → <i>Reset Address</i> → <input type="checkbox"/> [Finish] →</li> <li><i>YES</i></li> </ul>	—
<ul style="list-style-type: none"> <li>■ Set Auto Delete Off (For Sent/Unsent)</li> <li>&gt; <i>Auto Delete</i> → <i>Auto Sent Msg Del</i> → <i>OFF</i></li> </ul>	ON

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Set Auto Delete Off (For Incoming Mail)</li> <li>&gt; <i>Auto Delete</i> → <i>Auto Received Msg Del</i> →</li> <li><i>ON(Read Msg Only)</i> or <i>OFF</i></li> </ul>	ON(All Msg)
<ul style="list-style-type: none"> <li>■ Hide Incoming Message Window while Other Function is Active</li> <li>&gt; <i>Receiving Settings</i> → <i>Receiving Display</i> →</li> <li><i>Operation Preferred</i></li> </ul>	Alarm Preferred (Show)
<ul style="list-style-type: none"> <li>■ Hide Sender Info in Incoming Message Window</li> <li>&gt; <i>Receiving Settings</i> → <i>Sender Display</i> → <i>OFF</i></li> </ul>	ON (Show)
<ul style="list-style-type: none"> <li>■ Hide Outgoing Message Window</li> <li>&gt; <i>Sending Display</i> → <i>OFF</i></li> </ul>	ON (Show)
<ul style="list-style-type: none"> <li>■ Disable Auto Resend of Unsent Messages</li> <li>&gt; <i>Auto Resend</i> → <i>OFF</i></li> </ul>	ON (Resend)

\* Font size does not change while creating S! Mail or SMS. Check preview to see actual size.

## S! Mail Settings

From ► **Main Menu** ► Messaging ► Settings  
 ► S! Mail Settings

Setting/Operation	Default
<b>■ Set Reply-to Address</b> > <i>Sending Options</i> → <i>Set Reply-To</i> → <i>ON</i> → Select reply-to address entry field → Select a reply-to address or enter directly →  [Finish]	OFF (Not set)
<b>■ Set Signature</b> > <i>Sending Options</i> → <i>Set Signature</i> → <i>ON</i> or <i>ON When New</i> → Select signature entry field → Enter signature →  [Finish]	OFF (Not set)
<b>■ Disable Auto-Compression of Image Files</b> > <i>Sending Options</i> → <i>Image Compression</i> → <i>OFF</i>	ON (Compress) <sup>1</sup>
<b>■ Set Preference for Amount of Pictographs in AutoArt</b> > <i>Sending Options</i> → <i>AutoArt Settings</i> → <i>Amount of Pictograph</i> → <i>Many</i> or <i>Little</i>	Standard
<b>■ Enable Font Color Function (AutoArt)</b> > <i>Sending Options</i> → <i>AutoArt Settings</i> → <i>Font Color</i> → <i>ON</i>	OFF
<b>■ Enable Font Size Function (AutoArt)</b> > <i>Sending Options</i> → <i>AutoArt Settings</i> → <i>Font Size</i> → <i>ON</i>	OFF
<b>■ Disable Background Color Function (AutoArt)</b> > <i>Sending Options</i> → <i>AutoArt Settings</i> → <i>Background Color</i> → <i>OFF</i>	ON

Setting/Operation	Default
<b>■ Disable Auto Retrieval</b> > <i>Incoming Options</i> → <i>Auto Retrieve</i> → <i>OFF</i>	ON
<b>■ Limit Auto Retrieval by Message Type</b> > <i>Incoming Options</i> → <i>Auto Retrieve for</i> → <i>Selected Messages</i> → Check <i>Address Stored in PB</i> and/or <i>SoftBank Domain Only</i> <sup>2</sup> →  [Finish]	All Messages
<b>■ Play Attached Music Files Automatically</b> <sup>3</sup> > <i>Incoming Options</i> → <i>Auto Sound Play</i> → <i>ON</i>	OFF (Not play)

<sup>1</sup> JPEG files only

<sup>2</sup> Including messages received from Disney Mobile

<sup>3</sup> When multiple music files are attached, the first file plays.

## SMS Settings

From ► **Main Menu** ► Messaging ► Settings  
 ► SMS Settings

Setting/Operation	Default
<b>■ Change SMS Center Number*</b> > <i>Message Center</i> →  [Select] → Enter SMS Center number →  [Finish]	+819066519300
<b>■ Set Input Character to English</b> > <i>Set Input Character</i> → <i>English (160char.)</i>	Japanese (70char.)

\* Do not change Message Center number unless instructed so by SoftBank. Changing Message Center number may disable SMS.

Settings **Internet****Browser Display Settings**

Yahoo! Keitai

From ► **Main Menu ► Yahoo! ► Set Yahoo! Keitai**

PC Site Browser

From ► **Main Menu ► Yahoo! ► PC Site Browser  
► Set PC Site Browser**

Setting/Operation	Default
<input type="checkbox"/> <b>Font Size</b> > <i>Font Size</i> → <i>Large</i> or <i>Small</i>	Normal
<input type="checkbox"/> <b>Scroll Unit</b> > <i>Scroll Unit</i> → <i>Whole Screen</i> or <i>Half Screen</i>	Single Line
<input type="checkbox"/> <b>Images Off</b> > <i>Downloads</i> → <i>Display Image</i> → <i>OFF</i>	ON
<input type="checkbox"/> <b>Sound Off</b> > <i>Downloads</i> → <i>Play Sounds</i> → <i>OFF</i>	ON
<input type="checkbox"/> <b>Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai*</b> > <i>Warning Messages</i> → <i>PC Site Browser</i> (when activating) or <i>Yahoo! Keitai</i> (when switching) → <i>OFF</i>	ON

\* PC Site Browser only

**Memory Manager & Reset**

Yahoo! Keitai

From ► **Main Menu ► Yahoo! ► Set Yahoo! Keitai**

PC Site Browser

From ► **Main Menu ► Yahoo! ► PC Site Browser  
► Set PC Site Browser**

Setting/Operation	Default
<input type="checkbox"/> <b>Clear Cache</b> > <i>Memory Manager</i> → <i>Clear Cache</i> → <i>YES</i>	—
<input type="checkbox"/> <b>Delete Cookies</b> > <i>Memory Manager</i> → <i>Delete Cookies</i> → <i>YES</i>	—
<input type="checkbox"/> <b>Delete User ID or Password Entered when Authentication was Required</b> > <i>Memory Manager</i> → <i>Delete Certificates</i> → <i>YES</i>	—
<input type="checkbox"/> <b>Set Data Storage Location to microSD Card*</b> > <i>Save Settings</i> → <i>microSD</i>	Phone

\* Yahoo! Keitai Browser only

## Security Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Set Yahoo! Keitai  
► Security

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser  
► Set PC Site Browser ► Security

Setting/Operation	Default
<p>■ Set Auto Send Off for Manufacturer's Number (for Authentication) &gt; <i>Manufacture Number</i> → OFF</p>	ON (Send)
<p>■ Forbid Sending Referer Information &gt; <i>Send Referer</i> → OFF</p>	ON (Send)
<p>■ Select Whether or Not to Allow Cookies to Be Stored on Handset &gt; <i>Cookies</i> → OFF or <i>Ask Every Time</i></p>	ON (Save)
<p>■ View Server Certificates Issued by Certificate Authorities &gt; <i>Root Certificates</i> → Select an item</p>	—
<p>■ Select Whether or Not to Retain Authentication Information &gt; <i>Certificate Retention</i> → <i>Always Keep</i> or <i>Not Keep</i></p>	Keep While Browsing
<p>■ Hide Confirmation when Connecting to Secure Site &gt; <i>Secure Prompt</i> → OFF</p>	ON

## Reset

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Reset


PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser  
► Reset

Setting/Operation	Default
<p>■ Reset Browser Settings &gt; <i>Restore Defaults</i> → YES → Enter Phone Password</p>	—
<p>■ Initialize Browser &gt; <i>Initialized Browser</i> → YES → Enter Phone Password</p>	—

## Settings S! Appli

From ► Main Menu ► S! Appli ► S! Appli Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Volume</li> <li>&gt; <i>Volume</i> →  to adjust volume</li> </ul>	Level 4
<ul style="list-style-type: none"> <li>■ Backlight On/Off<sup>1</sup></li> <li>&gt; <i>Display Backlight</i> → <i>Always ON</i> or <i>Always OFF</i></li> </ul>	Follow General Setting <sup>2</sup>
<ul style="list-style-type: none"> <li>■ Deactivate Vibration</li> <li>&gt; <i>Vibration</i> → <i>OFF</i></li> </ul>	ON (Activate)
<ul style="list-style-type: none"> <li>■ Update S! Appli Information in microSD Card from Another Handset</li> <li>&gt; <i>Synchronize microSD</i></li> </ul>	—

<sup>1</sup> Back Light does not go out completely when S! Appli is active.

<sup>2</sup> Back Light Time setting (P.17-5) applies.

## Settings Osaifu-Keitai®

From ► Main Menu ► Tools or S! Appli ► Osaifu-Keitai  
► IC Card Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ View IC Card Status</li> <li>&gt; <i>IC Card Status</i></li> </ul>	—
<ul style="list-style-type: none"> <li>■ Disable Handset Response to Commands from Reader/Writer</li> <li>&gt; <i>Interface Settings</i> → Enter Phone Password → Select an item → <i>OFF</i></li> </ul>	All ON

## Settings Location Settings

From ► Main Menu ► Tools ► Location Settings  
► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Hide Notification of Incoming Positioning Request</li> <li>&gt; <i>Notification Setting</i> → Enter Phone Password → <i>OFF</i></li> </ul>	ON
<ul style="list-style-type: none"> <li>■ Set Ringtone/Vibrator/Ringtone Duration for Incoming Location Request</li> <li>&gt; <i>Recv Location Request</i> → <i>Ringtone</i>, <i>Vibration Alert</i> or <i>Ringtone Duration</i> → Set individual item</li> </ul>	Ringtone: Pattern 2 Vibration Alert: Pattern 1 Ringtone Duration: 05seconds

## Default Settings

Default settings vary by handset color as below.

- For operations, refer to respective setting sections.

Setting		Bravery Black	White	Gold	Pink	
<b>Notification Light</b> (☞P.17-9)	Incoming	Voice Call	A-Signal	B-Signal	C-Signal	D-Signal
		Video Call	A-Signal	B-Signal	C-Signal	D-Signal
		Message	A-Rhythm	B-Rhythm	C-Rhythm	D-Rhythm
	Side Key (Upper Side Key)		A-Wave	B-Wave	C-Wave	D-Wave
<b>Display Settings</b> (☞P.17-3 to P.17-5)	Stand-by Display		Black	White	Gold	Pink
	Stand-by Clock	Pattern	Pattern 4	Pattern 2	Pattern 3	Pattern 2
	Icon Clock		Pattern 4	Pattern 2	Pattern 3	Pattern 2
	Outgoing Image (Call/Message)		Black	White	White	Pink
	Incoming Image (Call/Message)		Black	White	White	Pink
	Menu Icons		Black	White	Gold	Pink
	Color Scheme		Black	White	Gold	Pink

# Confirming Settings

Main Menu ► Settings ► Phone Settings  
► Confirm Settings

## ■ Confirmable Settings

- Back Light Time
  - View Blind
  - Volume
  - Shikkari Talk
  - Noise Reduction
  - Select Network
- ★ appears for items changed from default settings.