

Appendix

Function List	18-2
Troubleshooting.....	18-9
Warning Signs	18-11
Software Update	18-11
Updating Software Manually.....	18-12
Updating Software Automatically	18-12
Quick Open Menu	18-13
Key Assignments (5-touch Mode)	18-14
Key Assignments (2-touch Mode)	18-15
Key Assignments (NIKO-touch Mode)	18-16
Symbol List	18-17
Character Code List	18-18
Weather Indicator List.....	18-23
Memory List.....	18-24
Specifications	18-25
Index.....	18-26
Warranty & Service.....	18-32
Warranty	18-32
After-Sales Service	18-32
Customer Service.....	18-33

Function List

From Main Menu, press key corresponding to a menu number for direct access (☞P.1-17).

Example: To select **S! Mail Settings** in Messaging menu:

1 first column **9** second column **3** third column

① (Messaging) → **⑨ (Settings)** → **③ (S! Mail Settings)**

- To select ①: → ; To select ②: →
- When Menu Icons are set to **Basic** or **Customize**, first column of function number is not available. Select a menu from Main Menu; then select a function number (second column in table).

Messaging		
	Menu Number/Function Name	Page
1	Messaging	—
1	Incoming Mail	—
1	Received	P.14-2
2	ユーザーフォルダ1	P.14-2
3	ユーザーフォルダ2	P.14-2
4	ユーザーフォルダ3	P.14-2
5	Spam Folder	P.14-2
2	Create New	P.14-4
3	Retrieve New	P.14-16
4	Drafts	P.14-16
5	Templates	—
1	Download Templates	P.14-10
6	Sent/Unsent	—
1	Sent/Unsent	P.14-2
2	ユーザーフォルダ1	P.14-2
3	ユーザーフォルダ2	P.14-2
4	ユーザーフォルダ3	P.14-2

1	7	Server Mail	—
	1	Retrieve Mail List	P.14-15
	2	Retrieve All	P.14-15
	3	Delete All	P.14-15
	4	Server Mail Memory	P.14-16
	8	Create New SMS	P.14-7
	9	Settings	—
	1	Custom Mail Address	P.14-3
	2	Universal Settings	P.17-18
	3	S! Mail Settings	P.17-19
	4	SMS Settings	P.17-19
0	Memory Status	P.14-3	

Yahoo! (Yahoo! Keitai)		
	Menu Number/Function Name	Page
2	Yahoo!	—
1	Yahoo! Keitai	P.15-3
2	Menu List	P.15-3
3	Bookmarks	P.15-8
4	Saved Pages	P.15-8
5	Enter URL	—
1	Direct Entry	P.15-4
2	URL History List	P.15-4
6	History	P.15-4
7	PC Site Browser	—
1	Homepage	P.15-5
2	Bookmarks	P.15-8
3	Saved Pages	P.15-8
4	Enter URL	P.15-5
5	History	P.15-5

2	7	6	Yahoo! Keitai	P.15-5
		7	Set PC Site Browser	P.17-20
		8	Reset	P.17-21
	8		Set Yahoo! Keitai	—
		1	Font Size	P.17-20
		2	Scroll Unit	P.17-20
		3	Downloads	P.17-20
		4	Memory Manager	P.17-20
		5	Security	P.17-21
		6	Save Settings	P.17-20
	9		Reset	—
		1	Restore Defaults	P.17-21
		2	Initialized Browser	P.17-21

 S! Appli				
Menu Number/Function Name			Page	
3	S! Appli		—	
	1	S! Appli List	—	
		1 Download S! Appli	P.16-2	
	2	Osaifu-Keitai	—	
		1 Lifestyle-Appli	P.13-10, P.16-2	
		2 IC Card Settings	P.13-12	
	3	S! Appli Settings	—	
		1 Volume	P.17-22	
		2 Display Backlight	P.17-22	
		3 Vibration	P.17-22	
		4 Synchronize microSD	P.17-22	
	4	S! Appli History	P.16-3	
	5	Information	P.16-2	

 Entertainment (News/Entertainment)				
Menu Number/Function Name		Page		
4	Entertainment	—		
	1	S! Info Ch./Weather	—	
		1	What's New?	P.8-2
		2	History	P.8-2
		3	Register/Cancel	P.8-2
		4	Get Latest Contents	P.8-2
		5	Weather Indicator	P.8-3
	2	S! Quick News	—	
		1	S! Quick News List	P.8-4
		2	Settings	P.17-17
	3	BookSurfing	P.8-6	
	4	e-Book Viewer	P.8-6	

		Camera	
Menu Number/Function Name		Page	
5	Camera		—
	1	Camera	P.6-3, P.6-6
	2	Video Camera	P.6-3, P.6-7
	3	Pictures	P.6-10
	4	Videos	P.6-10

		Music (Music Player)	
		Menu Number/Function Name	Page
6	Music		—
	1	Player	—
		1 All Tracks	P.9-6

6	1	2	Artist	P.9-6
		3	Album	P.9-6
		4	Genre	P.9-6
		5	Play List	P.9-6
	2		Data Manager	—
		1	Main Folder	P.9-3, P.9-7
		2	WMA	P.9-7

 Tools				
Menu Number/Function Name			Page	
7	Tools			—
	1	Alarms		P.13-6
	2	Calendar		P.13-2
	3	Calculator		P.13-8
	4	Notepad		P.13-8
	5	Tasks		P.13-5
	6	Osai-fu-Keitai		—
		1	Lifestyle-Appli	P.13-10, P.16-2
		2	IC Card Settings	P.13-12
	7	Dictionary		P.13-13
	8	Sound Recorders		—
		1	Voice Call Data	P.2-15
		2	Video Call Data	P.2-15
		3	Answer Phone Setting	P.2-15
		4	Voice Recorder	P.13-14
		5	Voice Announce	P.13-14
	9	Bar Code Reader		—
		1	Scan Barcodes	P.13-15
		2	Saved Data List	P.13-16

7	0	Location Settings		—
		1	Location Logs	P.13-17
	2	Settings		P.13-17, P.17-22
		①	Receive via Infrared	—
	1	Receive		P.11-3
		2	Receive All	P.11-4
	2	microSD Backup		—
		1	Phone Book	P.10-20
	2	Calendar		P.10-20
		3	Tasks	P.10-20
	4	Incoming Mail		P.10-20
		5	Sent Messages	P.10-20
	6	Unsent Messages		P.10-20
		7	Drafts	P.10-20
	8	Notepad		P.10-20
		9	Bookmarks	P.10-20
	3	Templates/Users Dic.		—
		1	Templates	P.3-6
		2	User's Dictionary	P.3-11
		3	Download Dictionary	P.3-11

			Data Folder	
			Menu Number/Function Name	Page
8	Data Folder			—
	1	Pictures		—
		1	Download Pictures	P.10-2
		2	Main Folder	P.10-2
		3	Camera	P.10-2
		4	My Pictograms	P.10-2
		5	Mail Art	P.10-2

8	1	6	Pre-installed	P.10-2
		7	Original Animation	P.10-12
	2	Ring Songs&Tones		—
		1	DL Ring Songs&Tones	P.10-2
		2	Main Folder	P.10-2
		3	Pre-installed	P.10-2
		4	Voice Announce	P.10-2
		5	Play List	P.10-2
	3	S! Appli		—
		1	Download S! Appli	P.16-2
	4	Widget		—
		1	Download Widget	P.7-4
	5	Music		—
		1	Main Folder	P.9-3, P.9-7
		2	WMA	P.9-7
	6	Videos		—
		1	Download Videos	P.10-3
		2	Main Folder	P.10-3
		3	Camera	P.10-3
		4	Pre-installed	P.10-3
		5	Play List	P.10-3
	7	PC Movies		—
		1	microSD	P.10-3
		2	Position Memory	P.10-3
		3	Play History	P.10-3
	8	TV		—
		1	Image	P.5-13
		2	Video	P.5-12
		3	Position Memory	P.10-3

8	9	Lifestyle-Appli		—
		1	Download	P.13-10, P.16-2
	0	Books		—
		1	Download Books	P.10-3
	①	Customized Screen		—
		1	Customized Screen	P.1-21
	②	Templates		—
		1	Download Templates	P.14-10
	③	Font		—
		1	Download Font	P.1-22
		2	Main Folder	P.1-22
		3	Pre-installed	P.1-22
		Other Documents		—
		1	Main Folder	P.10-3

 Widget (Mobile Widget)		
Menu Number/Function Name		Page
9	Widget	—
	1 Widget Store	P.7-4
	2 Widget Contents	—
	1 Download Widget	P.7-4
	3 Settings	—
	1 Delete Content	P.7-2
	2 Auto Refresh	P.17-16
	3 Auto Roaming	P.17-16
	4 Roaming Notification	P.17-16
	5 Cookies	P.17-16
	6 Delete Cookies	P.17-16
	7 Pointer Speed	P.17-16

TV		
Menu Number/Function Name		Page
✱	TV	—
1	Watch TV	P.5-5
2	Program List	P.5-7
3	Timer Watching	P.5-13
4	Timer Recording	P.5-13
5	Recording Result	P.5-14
6	TV Link	P.5-10
7	Channel List	P.5-4
8	Channel Setting	—
1	Select Area	P.5-4
2	Automatic	P.5-4
9	User Settings	—
1	Display/operation	P.17-13
2	Video	P.17-13
3	Display Light	P.17-13
4	Sound Effect	P.17-13
5	Recording	P.17-13
6	Data Broadcasting	P.17-13
7	ECO Mode	P.17-13
8	Reset Channel Setting	P.17-13
9	Reset Storage Area	P.17-14
0	Reset TV Settings	P.17-14
✱	Check TV Settings	P.17-14

Phone		
Menu Number/Function Name		Page
Phone		—
1	Phone Book	P.4-2
2	Create New Entry	P.4-3
3	Call Log	—
1	Outgoing Call Logs	P.2-13
2	Incoming Call Logs	P.2-13
4	Group	P.4-5
5	Account Details	P.1-28, P.4-12
6	S! Addressbook BkUp	—
1	Start Sync	P.4-10
2	Auto Sync Settings	P.4-11
3	Sync Log	P.4-11
7	Memory Manager	P.4-9
8	Restrictions	P.12-12
9	Settings	—
1	Save Settings	P.17-11
2	Search Method	P.17-11
3	Font Size	P.17-11
4	Voice Dial	P.4-13
5	Mail Group	P.14-19
6	Forwarding Image	P.17-11
0	Memory Status	P.4-9

● Number in first column is not available for Phone.

Settings		
#	Menu Number/Function Name	Page
#	Settings	—
1	Sound Settings	—
1	Ring Tones	P.17-2
2	Machi-Uta	P.17-2
3	Ringer Volume	P.17-2
4	Key Tone	P.17-3
5	Stereo/3D Sound	P.17-2
6	Earphone	P.17-2
7	Message Ring Tones	P.17-2
2	Display Settings	—
1	Internal Display	P.17-3
2	Font Size	P.17-6
3	Font	P.1-22
4	Menu Icons	P.17-4
5	Back Light Time	P.17-5
6	View Blind	P.1-28
7	Color	P.17-4
8	Private Menu	P.1-23
9	言語設定	P.17-4
0	Open for New	P.17-4
✳	LCD AI	P.17-5
#	Disp. Call/Recv #	P.17-6
①	Describe Icons	P.1-9
3	Customized Screen	—
1	Customized Screen	P.1-22
2	Release Settings	P.1-22

#	4	Incoming Settings		—
		1	Vibrator	P.17-2
		2	Manner Mode Type	P.17-6
		3	Answer Setting	P.17-7
		4	Open-to-Ans. Call	P.17-7
		5	Call Logs	P.12-9
		6	Phone Book Image	P.17-7
		7	Ring Time Settings	P.12-12
		8	Info Notice Setting	P.17-7
		9	Auto Answer	P.17-7
	0	In-call Management	P.17-7	
	5	Phone Settings		—
		1	Side-keys Guard	P.12-9
		2	Text Entry Method	P.17-10
		3	Battery	P.17-3
		4	Pause Dial	P.2-3
		5	Headset Switch to Call	P.17-9
		6	Voice Settings	P.17-11
		7	Confirm Settings	P.17-24
		8	Software Update	P.18-11
	6	Date & Time		—
		1	Date & Time	P.17-8
		2	World Clock	P.17-8
		3	Daylight Savings	P.17-8
		4	Alarm Tone	P.17-8
		5	Time Correction	P.17-8

#	7	Security	—
	1	Privacy Key Lock	P.12-4
	2	Personal Data Lock	P.12-5
	3	IC Card Lock	P.13-12
	4	Secret Mode	P.12-10
	5	Secret Data Only	P.12-10
	6	Key Pad Dial Lock	P.12-8
	7	Reject Unknown	P.12-13
	8	Call Setting w/o ID	P.12-13
	9	All Reset	P.12-14
	0	Reset Settings	P.12-13
	✕	PIN Authentication	P.12-2
	#	Change Phone Password	P.12-2
	①	Timer Lock at Close	P.12-6
	②	Lock OFF at Open	P.12-7
	③	Content Key	P.10-23
	④	Lock Message	P.12-8
	8	Call Settings	—
	1	Call Time/Cost	P.17-8
	2	Reset	P.17-8
	3	Set Max Cost Limit	P.17-8
	4	Voice Mail/Call Fwding	P.2-17, P.2-18
	5	Call Waiting	P.2-20
	6	Call Barring	P.2-20
	7	Missed Call Notifi.	P.2-19
	8	Prefix	P.2-3
	9	Volume	P.17-8
	0	Shikkari Talk	P.2-5
	✕	Closing Clamshell	P.17-9
	#	Hold Tones	P.17-9
	①	Noise Reduction	P.17-9

#	8	② Quality Alarm	P.17-9
		③ Reconnect Signal	P.17-9
		④ Offline Mode	P.1-16
		⑤ Show My Number	P.2-21
		⑥ Service Numbers	P.17-9
	9	Video Call	—
		1 Incoming Video Qlty	P.17-12
		2 Select Images	P.17-12
		3 Loud Speaker	P.17-12
		4 Voice Call Auto Redial	P.17-12
	0	International Call	—
		1 Int'l Dial Assist	P.2-10
		2 Select Operator	P.2-10
		3 PLMN Setting	P.2-11
		4 Operator Name	P.2-11
		5 Select Network	P.2-10
	①	Connectivity	—
		1 USB Mode	P.11-6
		2 Retrieve NW Info	P.1-14
	②	Notification Light	—
		1 Incoming	P.17-9
		2 Online	P.17-9
		3 Missed Call/Unread	P.17-9
		4 Clamshell Close	P.17-9
		5 Music	P.17-9
		6 IC Card	P.17-9
		7 Side Key	P.17-9
		8 Confirm Status	P.17-9

Troubleshooting

Handset does not turn on

- Was  pressed for more than one second?
- Is battery level sufficient?
- Is battery inserted properly? (☞P.1-12)

Handset functions do not work after turning power on

- Does PIN Entry window appear?
PIN Authentication is **ON**. Enter PIN (☞P.12-2).

USIM not inserted After power-off Insert USIM or Inserted USIM is unavailable to this mobile phone Please insert valid one appears when handset is turned on or operations attempted

- Is USIM Card inserted correctly? (☞P.1-3)
- Is SoftBank specified USIM Card inserted? (☞P.1-2)
- USIM Card IC chip may be dirty.
Wipe with a clean cloth, then insert USIM Card correctly.

Keypad does not respond

- Does  appear in Standby?
Keyguard is active (☞P.12-4). Cancel it.
- Does  appear?
Privacy Key Lock is active (☞P.12-4). Cancel it.

Display is blurred

- Adjust Back Light brightness (☞P.17-5).
- Is View Blind active?
Cancel View Blind (☞P.1-28).

Side Keys do not work while handset is closed

- Does  appear?
Side-keys Guard (☞P.12-9) is **ON**.
Set to **OFF**.

Outgoing calls will not connect or message and Internet connections are unavailable

- Does  or  appear?
Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.
- Does  appear?
Cancel Offline Mode (☞P.1-16).
- Are you using handset overseas?
Set international settings (e.g. Select Operator) to use abroad (☞P.2-10).
- Does  appear?
Personal Data Lock is set (☞P.12-5). Deactivate Personal Data Lock.

Outgoing calls will not connect

- Is area code entered?
- Is Call Barring restricting outgoing calls? (☞P.2-20)
- Does  appear in Standby?
Total cost has reached upper limit. Set Max Cost Limit to **OFF** or execute **Reset** (☞P.17-8).

Outgoing calls will not connect; only busy signal sounds

- Is area code entered?
- Is Call Barring restricting outgoing calls? (☞P.2-20)

Call is interrupted or disconnected

- Does  appear?
Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.

Cannot start any more functions appears when a menu is opened.

- Maximum number of functions are active at the same time. Cancel current function and try again (☞P.1-27).

Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.
- Activate Secret Mode or Secret Data Only (☞P.12-10).
- Does ☐ appear?
Personal Data Lock is set (☞P.12-5). Deactivate Personal Data Lock.

Digital TV does not work

- Is handset out of terrestrial Digital TV broadcasting service area or in a location where airwaves are weak?
Move to a location where airwaves are strong (☞P.5-3).

Osaifu-Keitai® does not work

- Does ☎ appear?
Deactivate IC Card Lock (☞P.13-12).

Display clock is reset

- Replacing battery does not reset Display clock; however, if battery is removed for long periods, the clock may be reset. Set Date & Time (☞P.17-8) or Retrieve NW Info (☞P.1-14) again.

Cannot charge battery

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder (not included)? (☞P.1-13)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in handset correctly? (☞P.1-12)
- Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Battery may not charge beyond +5°C and +35°C.
- Battery may need to be replaced.

Handset/accessories feel warm

- AC Charger/Desktop Holder may warm during charging.
Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.

Battery Operating Time is greatly reduced

- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (☞P.1-10) and "Battery Time" (☞P.1-11).

Warning Signs

Problem	Causes and Remedies
 appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Side-keys Guard is ON (☞P.12-9). To activate Side Keys while handset is closed, set Side-keys Guard to OFF .
 appears	Keyguard is active (☞P.12-4). Cancel it to use keys. It is possible to answer calls even if Keyguard is active.
 appears	Privacy Key Lock is active (☞P.12-4). Cancel it to use handset. It is possible to answer calls even if Privacy Key Lock is active.
Low battery message appears and battery alarm tone sounds	Battery is low. Charge (☞P.1-13) or replace battery (☞P.1-12).

Software Update

 
Check for 842P software updates and download as required.
Choose to begin update or schedule update.

- Transmission fees do not apply to updates and checking for updates.
- Update may take approximately 30 minutes.
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Other functions are unavailable during update.
- It is recommended that you create a backup copy of any important data (note that some downloaded files cannot be copied).
Although Software Update does not affect saved entries and contents, data saved in handset may be lost depending on handset conditions (e.g. failure). SoftBank is not liable for damages resulting from loss of data.
- Never remove battery/USIM Card nor turn off power during update. Update will fail.
- Failure of Software Update may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (☞P.18-33).

Updating Software Manually

Main Menu ► Settings ► Phone Settings
► Software Update ► Software Update

- 1  [Yes] → Follow onscreen instructions
After download is complete, handset automatically restarts and update begins.
When update is complete, **Software has been successfully updated.** appears.
Handset restarts then Event Indicator appears. Entire process takes approximately 60 seconds.



Updating Software Automatically

Main Menu ► Settings ► Phone Settings
► Software Update ► Regular Updates

- 1 **YES** → Follow onscreen instructions
 - Internet connection is required for updates (transmission fees do not apply to updates). For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Update Results

When Event Indicator appears, **Update** →


- When Event Indicator does not appear,
Main Menu ► Settings
► Phone Settings
► Software Update
► Update Results



Scheduled Update

Follow onscreen instructions for setup.
Confirmation appears at scheduled update time. Press  or wait about ten seconds for update to start.

- Software Update will not start while handset is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.

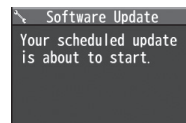

Note

- If handset does not power on after Software Update, remove then re-insert battery and try again. If handset still does not power on, contact SoftBank Mobile Customer Center, Customer Assistance (☎P.18-33).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Quick Open Menu

When *Menu Icons* is set to *Basic* or *Customize* (☞P.17-4), press menu numbers in Main Menu to open the following functions.

Example: To open Notepad:

In Standby,  →  

Menu	#
Alarm	44
Calendar	45
Calculator	85
Notepad	42
Tasks	95
Sound Recorders	55
Receive via Infrared	79
Templates/Users Dictionary	38
Pictures folder	46
Ring Songs&Tones folder	16
Phone Book Settings	26
Ring Tones	13
Ring Volume	50
Key Tone	30
Stereo/3D Sound	64
Earphone/Speaker Settings	51
Message Ring Tones	68

Menu	#
Internal Display	56
Font Settings	66
Menu Icons	57
Back Light Time	70
Color Theme	86
Private Menu Settings	52
Language	15
Describe Icons	36
Vibrator	54
Manner Mode Type	20
Answer Setting	58
Ring Time Settings	90
Info Notice Setting	65
Auto Answer	94
Text Entry Method	35
Date & Time	31
Secret Mode	40
Secret Data Only	41
Call Setting w/o ID	10
Reset Settings	23
Change Phone Password	29
Call Time/Cost	61
Reset Total Duration/Cost	60
Closing Clamshell	18

Menu	#
Noise Reduction	76
Quality Alarm	75
Reconnect Signal	77
Show My Number	17
Notification Light	89

Key Assignments (5-touch Mode)

Display Key	漢	カナ	abc	123
①	あいうえおあいうえお	アイウエオアイウエオ ¹	. / @ - :  ² _ 1	1
②	かきくけこ	カキクケコ ²	a b c A B C 2	2
③	さしすせそ	サシスセソ ³	d e f D E F 3	3
④	たちつてとっ	タチツテトツ ⁴	g h i G H I 4	4
⑤	なにぬねの	ナニヌネノ ⁵	j k l J K L 5	5
⑥	はひふへほ	ハヒフヘホ ⁶	m n o M N O 6	6
⑦	まみむめも	マミムメモ ⁷	p q r s P Q R S 7	7
⑧	やゆよやゆよ	ヤユヨヤユヨ ⁸	t u v T U V 8	8
⑨	らりるれろ	ラリルレロ ⁹	w x y z W X Y Z 9	9
⑩	わをんわー	ワワン  ² ー0	0	0 [Press and hold] + ⁴
*	 ³ / Pictograph List ⁵		Pictograph List ⁵	*
	[Press and hold] Templates			
#	、 。 ? ! ・ (Single-byte Space)		. , ? ! ' - & () ¥ (Single-byte Space)	#
	[Press and hold] Symbols List ⁶			

¹ Appears when entering single-byte character.

² Appears when entering double-byte character.

³ Added to highlighted character.

⁴ Not available in S! Mail text entry window

⁵ Press (*) to toggle symbol list/pictograph list while pictograph list is open.

⁶ In number mode, symbol list may not appear.

● In alphanumeric mode, last entered case appears first.

● To toggle input modes:  [Mode]

● To toggle double-byte/single-byte characters:  [Menu] → **2bytes character** or **1byte character**

● To toggle upper/lower case characters:  after entering hiragana, katakana or alphanumeric

● To insert line feeds:  [Line FD]

Key Assignments (2-touch Mode)

Kanji (Hiragana) Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&			
	8	や	(	ゆ	)	よ	*	#			
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん	°	°	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	や		ゆ		よ					
	9										
	0	わ			、	。					

Katakana Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&			
	8	ヤ	(	ユ	)	ヨ	*	#			
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン	°	°	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	ヤ		ユ		ヨ					
	9										
	0	ワ ¹									

Alphanumerics Mode

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	"	\$	%	'	+	a	b	c	d	e
	2	.	.	:	:	<	f	g	h	i	j
	3	=	>	@	[	]	k	l	m	n	o
	4	^	_	' ¹ ' ²	{		p	q	r	s	t
	5	}	~ ¹ ' ²				u	v	w	x	y
	6						z	?	!	-	/
	7						¥	&			
	8		(		)		*	#			
	9						1	2	3	4	5
	0						6	7	8	9	0

■ Toggle upper/lower case

¹ Appears when entering double-byte character.

² Appears when entering single-byte character.

Note

- A space is entered by pressing key corresponding to a blank where no character is assigned.
- In kanji (hiragana) or katakana mode, "" or "" is entered by pressing (✳) after entering characters. Press (✳) once for "", twice for "".
- For number mode, see "Key Assignments (5-touch Mode)" (P.18-14).

Key Assignments (NIKO-touch Mode)

Kanji (Hiragana) Mode

		Second digit									
First digit		1	2	3	4	5	6	7	8	9	0
	1	あ	い	う	え	お	.	-	@	_	1
	2	か	き	く	け	こ		a	b	c	2
	3	さ	し	す	せ	そ		d	e	f	3
	4	た	ち	つ	て	と	っ	g	h	i	4
	5	な	に	ぬ	ね	の		j	k	l	5
	6	は	ひ	ふ	へ	ほ		m	n	o	6
	7	ま	み	む	め	も		p	q	r	7
	8	や	ゆ	よ	ゃ	ゅ	ょ	t	u	v	8
	9	ら	り	る	れ	ろ		w	x	y	9
	0	わ	を	ん	.	。	-	.	!	?	0

Katakana Mode

		Second digit									
First digit		1	2	3	4	5	6	7	8	9	0
	1	ア	イ	ウ	エ	オ	.	-	@	_	1
	2	カ	キ	ク	ケ	コ		a	b	c	2
	3	サ	シ	ス	セ	ソ		d	e	f	3
	4	タ	チ	ツ	テ	ト	ッ	g	h	i	4
	5	ナ	ニ	ヌ	ネ	ノ		j	k	l	5
	6	ハ	ヒ	フ	ヘ	ホ		m	n	o	6
	7	マ	ミ	ム	メ	モ		p	q	r	7
	8	ヤ	ユ	ヨ	ャ	ュ	ョ	t	u	v	8
	9	ラ	リ	ル	レ	ロ		w	x	y	9
	0	ワ	ヲ	ン	.	。	-	.	!	?	0

Note

- Press [Mode] to toggle kanji (hiragana) and single-byte number modes.
- To switch to katakana mode: In kanji (hiragana) mode, [Menu] → **1 byte character**
- To toggle lower/upper case: Enter a character →
- A space is entered by pressing key corresponding to a blank where no character is assigned.
- Enter " " or " " by pressing after entering characters. Press once for " ", twice for " ".
- For number mode, see "Key Assignments (5-touch Mode)" (P.18-14).

[illegible]

First Three Digits										Last Digit									
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9
050	051	052	053	054	055	056	057	058	059	060	061	062	063	064	065	070	071	072	073
オ	ア	イ	エ	ウ	ク	グ	エ	オ	コ	ア	カ	キ	ケ	ク	コ	ア	カ	キ	ケ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	ベ
コ	サ	シ	セ	ス	ソ	ズ	セ	ソ	ソ	ア	バ	ビ	ベ	ブ	ボ	ア	バ	ビ	

Appendix

Weather Indicator List

- Indicators and categories are subject to change without prior notice.

Weather	
	Clear (day)
	Clear (night)
	Cloudy
	Rain
	Snow
	Thunderstorm
	Precipitation 0%-100%
	Later
	Occasionally

Pollen Level	
	Low
	Moderate
	High
	Very High

Cherry Blossom	
	Blossoms Opening
	Near Full Bloom
	Peak Bloom
	Past Peak

Fall Foliage	
	No Color
	Moderate Color
	Peak Color
	Past Peak

UV Level	
	Low
	Moderate
	High
	Very High

Typhoon	
	Formed
	Approaching
	Severe

Other Information	
	Heavy Rain
	Strong Winds
	Notifications

Memory List

Data Folder	Up to 3500 items/up to 100 MB (Including pre-installed data)
--------------------	---

- Shared with S! Appli List
(One S! Appli corresponds up to 6 MB.)

Calendar Events	Up to 1000 items
------------------------	------------------

Phone Book	Up to 1000 items
-------------------	------------------

Messaging	Incoming Mail	Up to 1000 items
	Sent/Unsent	Up to 500 items
	Drafts	Up to 10 items

- Combined total of S! Mail and SMS

Yahoo! Keitai	Saved Pages	[Yahoo! Keitai] Up to 20 items/750 KB [PC Site Browser] Up to 20 items/1150 KB
	Bookmarks	[Yahoo! Keitai] Up to 100 items [PC Site Browser] Up to 100 items
	URL History	[Yahoo! Keitai] URL Entry: Up to 20 items URL Access: Up to 100 items* [PC Site Browser] URL Entry: Up to 20 items URL Access: Up to 100 items*
	Cache	[Yahoo! Keitai] 750 KB [PC Site Browser] 1150 KB

* The number of savable items varies depending on URL length.

Specifications

842P

Weight (including battery)		108 g*
Dimensions (closed)		50 x 110 x 10 mm (thinnest part)*
Standby Time	3G	460 hours*
	GSM	240 hours*
Talk Time	3G	180 minutes*
	Video Call	120 minutes*
	GSM	180 minutes*
TV Reception Time	Normal Mode	5.5 hours*
	ECO Mode	7.1 hours*
Charging Time	AC Charger	100 minutes*
	In-Car Charger	100 minutes*
Maximum Output	3G	0.25 W
	GSM	2.0 W

* Approximate value

- Values above were calculated with battery installed.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- TV-Reception Time is an average measured using Earphone Microphone, with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when an S! Appli is active.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	600 mAh
Dimensions	45 x 3.8 x 37 mm*

* Approximate value

- Specifications and appearances are subject to change without notice.

Index

Numerics

3G 2-10

A

AC Charger	1-13
Access History	
PC Site Browser	15-5
Yahoo! Keitai	15-4
Account Details	1-28, 4-12
Action Mode	6-6
Address (Adding/Editing/Deleting)	14-9
After-Sales Service	18-32
Alarms	13-6
All Reset	12-14
Alternative Image	2-6
Answer Phone	2-15
Answering Calls	
Video Calls	2-8
Voice Calls	2-5
Attachments	
Adding	14-9
Deleting	14-9
Opening/Saving	14-14
Auto Answer	17-7
Auto Focus Lock	6-10
Auto Save (Camera)	17-16
Auto timer	6-7
AutoArt	14-7
Auto-sort	14-17

B

Back Light	
Display	17-5
S! Appli	17-22
Video Calls	2-12
Background Music	9-7
Backup	
microSD Card	10-20
S! Addressbook Back-up	4-9
Bar Code Reader	13-15
Basic Operations	
Internet	15-6
User Guide	x
Battery	1-10
Battery Level	1-9, 1-11
Bookmarks	15-8
Books folder	10-3
BookSurfing®	8-6
Brightness	
Back Light	17-5
Camera	6-5, 17-14, 17-15
Digital TV	5-9
Video Calls	17-12
Browser (Initializing)	17-21

C	
Cache Memory.....	15-2
Calculator	13-8
Calendar	13-2
Calendar Events.....	13-2
Call Barring.....	2-20
Call Cost	17-8
Call Forwarding	2-17
Call Log.....	2-13
Show/Hide	12-9
Call Operations.....	2-11
Call Rejection	
Calls without Caller ID	12-13
Specified Numbers	12-12
Unknown Callers	12-13
Call Restrictions.....	12-12
Call Settings	17-8
Call Time	17-8
Call Waiting	2-20
Caller ID.....	2-3, 2-21
Camera [Section Contents].....	6-1
Center Access Code	1-25
Channel Setting.....	5-4
Character Code (Kuten code)	
Character Code List	18-18
Input.....	3-6
Charge Limit	17-8
Charging Time	1-10
Clock Display	17-5
Closing Clamshell	17-9
Color Scheme.....	17-4
Confirming Settings	17-24

Content Key	10-5
Continuous Shooting.....	6-6
Conversion Candidates.....	3-7
Conversion Methods.....	3-7
Cookies Setting/Deleting	
Internet	17-20, 17-21
Mobile Widget.....	17-16
Copy Protected Files.....	10-5
Country/Region Code	2-9
Customer Service.....	18-33
Customized Screen	1-21

D	
Data Folder	10-2
Date & Time Settings.....	17-8
Deleting	
Calendar	13-4, 13-5
Messages.....	14-22, 14-23
Phone Book	4-8, 4-9
S! Appli.....	16-4
Delivery Report	14-11, 17-18
Dictionary	13-13
Digital TV [Section Contents]	5-1
Digital TV Settings.....	17-13
Display.....	1-4
Display Indicators.....	1-8
Display Settings.....	17-3
Download	
Customized Screen	1-21
Fonts.....	1-22
From web pages.....	15-11

Lifestyle-Appli	13-10, 16-2
Music	9-3
S! Appli.....	16-2
Templates	14-10
Widgets	7-4
Download Dictionary.....	3-11
Drafts.....	14-16
Driving Mode.....	1-16, 17-6

E	
Earpiece Volume	
Video Calls	2-12
Voice Calls	2-11, 17-8
e-Book Viewer	8-6
Emergency Calls (110, 119, 118)	2-4
Emergency Positioning Request	2-4
Event Indicators.....	1-19

F	
Face Detection.....	6-9
Focus Setting	6-9
Folder/files.....	10-15
Font Settings	1-22
Font Size	
Call Logs	17-6
Character Input	17-6
Collective Setting.....	17-6
Internet	17-6, 17-20
Message	17-6
Phone Book	17-6
Function List	18-2

G	
Global Roaming Service	2-9
Graphic Mail	14-5
Group Settings (Phone Book)	4-5
GSM	2-10
H	
Handset	
Menus	1-16
Parts & Functions	1-4
Power On/Off	1-14
Handset Security [Section Contents]	12-1
Help (Text Entry)	3-2
Hide Call Logs/Address List	12-9
Hold	
Video Calls	2-12
Voice Calls	2-11
HTML messages	14-5
I	
IC Card Lock	13-12
IC Transmission	11-4
IDD Prefix	2-9
Image Quality (Camera)	6-5, 17-14, 17-15
Image Size (Camera) ...	6-5, 6-8, 17-14, 17-15
Incoming Call Logs	2-13
Infrared	11-2
Internal Display	17-3
International Call	
From Abroad	2-9

From Japan	2-9
International Call Settings	2-10
Internet [Section Contents]	15-1

K

Key Assignments	
Mode 1 (5-touch)	18-14
Mode 2 (2-touch)	18-15
Mode 3 (NIKO-touch)	18-16
Key Pad Dial Lock	12-8
Key Tone	17-3
Keyguard	12-4
Kuten code (Character Code)	3-6, 18-18

L

Language	17-4
Lifestyle-Appli	13-9, 16-2
Location Settings	13-17
Lock Message	12-8
Lock OFF at Open	12-7

M

Mail Group	14-19
Mail Security	12-11
Main Menu	1-16
Making Calls	
International Calls	2-9
Video Calls	2-7
Voice Calls	2-2
Manner Mode	1-15, 2-11, 2-12, 17-6

Manufacture Number	17-21
Memory List	18-24
Memory Manager (Internet)	17-20
Menu Icons	17-4
Menu Numbers	1-17
Messaging [Section Contents]	14-1
microSD Card	10-17
Backup	10-20
Check	10-22
Formatting	10-18
Synchronizing	17-22
Missed Call Notification	2-19
Mobile Widget [Section Contents]	7-1
Mobile W-Speed	5-2
Multi Selector	ix
Music folder	10-2
Music Player [Section Contents]	9-1
My original setting	6-5, 6-9
My Pictograms	3-4

N

Narrowing Down Predictive Candidates ...	3-9
Network Information	1-14
New Messages	
Receiving	14-16
Viewing	14-11
Night mode	
Camera	6-5
Video Calls	17-12
Normal Mode (Simple Menu)	1-24
Notepad	13-8
Notification Light Settings	17-9

O

Offline Mode	1-16
One-push Open Button	1-6
Open For New	17-4
Open-to-Ans. Call	17-7
Operator	2-10
Operator Name	2-11
Optional Services	2-17
Original Animation	10-12
Osaifu-Keitai®	13-9
Other Documents folder	10-3
Outgoing Call Logs	2-13

P

Passwords	1-25
Passwords (Changing)	
Center Access Code	1-25
Phone Password	12-2
Security Code	2-21
PC Site Browser	15-2
Access	15-5
Display Settings	17-20
Memory Manager & Settings	17-20
Reset/Initialize	17-21
Security Settings	17-21
Personal Data Lock	12-5
Phone Book [Section Contents]	4-1
Phone Password	1-25
Changing	12-2
Photo mode	6-5, 6-8
Pictographs	3-4

Pictures (Still Images)

Capturing	6-6
Editing	10-11
Pictures folder	10-2
PIN/PIN2	1-3
Changing	12-3
PIN Authentication	12-2
PIN Lock & Cancellation (PUK)	12-3
Play List	9-10
Play mode setting	9-6
Predictive Candidates	3-7
Privacy Key Lock	12-4
Private Menu	1-23
PUK/PUK2	1-3, 12-3

Q

QR Code	13-15
Quick Open Menu	18-13

R

Recipients (Adding/Editing/Deleting) ...	14-9
Referer Information	17-21
Remote Lock	13-12
Reset	
All Reset	12-14
Browser Settings	17-21
Settings	12-13
Total Call Charge/Time	17-8
TV Settings	17-14
Ring Songs&Tones folder	10-2
Ring Time (Answer Phone)	2-16

Ring Time Settings	12-12
Ringer Volume	17-2
Ringtones	10-7, 17-2
Ringtones Duration (Message)	17-2
Root Certificates	17-21

S

S! Addressbook Back-up	4-9
S! Appli [Section Contents]	16-1
S! Information Channel	8-2
S! Mail	14-2
Creating/Sending	14-4
S! Mail Notice	14-12
S! Mail Settings	17-19
Universal Settings	17-18
S! Quick News	1-20, 8-4
Save	
Alarms	13-7
Calendar Events	13-2
Notepad	13-8
Phone Book	4-3
S! Information Channel	8-2
S! Quick News	8-4
Shortcuts	1-20
User's Dictionary	3-11
Save Location	
Camera	6-5, 17-15, 17-16
Phone Book	17-11
Saved Pages	15-8
Scroll Unit	17-20
SD Audio	9-2

Secret Data Only.....	12-10
Secret Mail Display.....	12-11
Secret Mode	12-10
Secure Remote Lock	12-7
Security	
Data Folder.....	10-15
Internet	17-21
S! Appli.....	16-4
Security Code	1-26
Security Functions	12-2
Server Mail	14-15
Settings [Section Contents].....	17-1
Shikkari Talk	2-5
Shortcuts	1-20
Shutter sound	17-15, 17-16
Side-keys Guard	12-9
Signal Strength.....	1-8
Simple Menu.....	1-24
Smiley.....	3-5
SMS.....	14-2
Creating/Sending.....	14-7
SMS Settings	17-19
Universal Settings	17-18
Snooze	13-7
SoftBank Utility Software	11-6
Softkeys.....	ix
Software Update	18-11
Spam Filter	14-18
Speaker ON/OFF	2-11, 2-12
SSL.....	15-3
Status Indicators	1-8
Still Images (Pictures)	

Capturing	6-6
Editing	10-11
Streaming	15-12
Symbols	3-4
Symbol List.....	18-17

T

Tasks	13-5
Templates (Graphic Mail).....	14-5
Text Entry [Section Contents].....	3-1
Time Correction.....	17-8
Timer Lock at Close	12-6
TLS	15-3
Trimming (Editing Still Images)	10-11

U

URL History	
PC Site Browser.....	15-5
Yahoo! Keitai.....	15-4
USB	11-6
User Mode (Manner Mode)	17-6
User's Dictionary	3-11
USIM Card.....	1-2
USIM Card Phone Book	4-3
USIM PINs	1-3

V

Vibrator	
Incoming Alert.....	17-2
S! Appli.....	17-22
Videos (Recording)	6-7
Videos folder	10-3
View Blind	1-28
Viewfinder	
Camera Mode	6-4
Video Camera Mode.....	6-4
Voice Announce	13-14
Voice Dial.....	4-13
Voice Mail.....	2-18
Voice Recorder.....	13-14
Volume	
Ringtone.....	2-5, 17-2
S! Appli.....	17-22
Video Calls	2-12
Voice Calls	2-11, 17-8

W

Wallpaper	1-19, 17-3
Warning Messages (PC Site Browser)...	17-20
Warranty.....	18-32
Weather Indicator.....	8-3
White balance	
Camera Mode.....	6-5, 17-15
Video Calls	17-12
Video Camera Mode.....	6-5, 17-15
Widgets	1-20, 7-2
WMA Files.....	9-2

World Clock 17-8

Y

Yahoo! Keitai 15-2

Access..... 15-3

Display Settings 17-20

Memory Manager & Settings 17-20

Reset/Initialize..... 17-21

Security Settings 17-21

Z

Zoom..... 6-8

Warranty & Service

Warranty

Warranty is provided when you purchase an 842P.

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

SoftBank is not liable for any damage resulting from use of this product.

After-Sales Service

See "Troubleshooting" (🔧P.18-9) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (📞P.18-33) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

Check phone number before you dial.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at
**157 for General Information or
113 for Customer Assistance**

SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(Please take care to dial the correct number.
International charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Toll Free Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113