

Handset Customization

14





Phone Settings	14-2
Handset Settings	14-2
Touch Panel Settings	14-3
Sounds & Vibration & External Light Settings	14-3
Sounds & Vibration	14-3
External Light Settings	14-4
Display & Font Settings	14-4
Manner Mode Settings	14-5
Call Settings	14-5
Phone Book Settings	14-8
Messaging Settings	14-8
Custom Mail Address	14-8
S! Mail & SMS	14-8
S! Mail	14-11
SMS	14-12
Internet Settings	14-12
Yahoo! Keitai	14-12
PC Site Browser/Direct Browser	14-13
Communities	14-14
PC Site Browser	14-15
Direct Browser	14-15
Digital TV Settings	14-15
TV Alarm	14-15
Data Broadcast	14-16
Display & Sound	14-16
Recording	14-17
Incoming Calls & Alarms	14-17
Auto Power Off	14-17

Camera Settings	14-18
Camera & Video	14-18
Photo	14-18
Video	14-19
Media Player Settings	14-20
Music/Movie	14-20
Music	14-20
Movie	14-20
Entertainment Settings	14-21
Widgets	14-21
S! Information Channel	14-21
S! Applications	14-22
Osaifu-Keitai®	14-22
S! GPS Navi	14-22
Security Settings	14-22
Memory Settings	14-23
Connectivity Settings	14-23
Bluetooth®	14-23
Infrared	14-24
IC Transmission	14-24
USB	14-25
Network	14-25

Phone Settings

Handset Settings

Start Here Tap Menu → *Settings* → *Phone settings*

Change User Interface Language	Default 日本語	言語選択 → Select an item
Set Date		<i>Date & Time</i> → <i>Set date & time</i> → <i>Date</i> → Enter date <ul style="list-style-type: none"> Some functions are disabled until date is set.
Set Time		<i>Date & Time</i> → <i>Set date & time</i> → <i>Time</i> → Enter time <ul style="list-style-type: none"> Some functions are disabled when time is not set.
Set Time Correction	Default On	<i>Date & Time</i> → <i>Set date & time</i> → <i>Time correction</i> → Under <i>Auto correction</i> , On or Off <ul style="list-style-type: none"> To specify when to correct the time, tap <i>Correction timing</i> → Check an item → Tap Save. Tapping <i>Manual correction</i> → Yes immediately corrects the time.
Set Time Zone Updating	Default Ask when update	<i>Date & Time</i> → <i>Set time zone</i> → <i>Time zone updating</i> → Select items
Change Home Zone Time	Default GMT+09:00	<i>Date & Time</i> → <i>Set time zone</i> → <i>Home zone</i> → Scroll a window and tap a city → Tap Save <ul style="list-style-type: none"> Alternatively, tap the tab located at the top of the window to change the zone. Select the zone closest to your locality. Complete this setting before selecting Dual Clock
Activate/Cancel Daylight Savings Time	Default 	<i>Date & Time</i> → <i>Set time zone</i> → <i>Home zone</i> → Scroll a window and tap a city →  <ul style="list-style-type: none"> Tap Save Tap  to switch to .
Change Date Format	Default YYYY/MM/DD	<i>Date & Time</i> → <i>Set format</i> → <i>Date format</i> → Select an item
Change Time Format	Default 24 hour	<i>Date & Time</i> → <i>Set format</i> → <i>Time format</i> → Select an item
Set Earphone Settings	Default Earphone	<i>Earphone settings</i> → Select item
Activate/Cancel Prediction	Default On	<i>Text input settings</i> → Under <i>Prediction</i> , On or Off
Activate/Cancel Learning Function	Default On	<i>Text input settings</i> → Under <i>Learning</i> , On or Off
Activate/Cancel Auto Capitalization	Default On	<i>Text input settings</i> → <i>Auto capitalization</i> → On or Off
Activate/Cancel Flexible Search	Default On	<i>Text input settings</i> → <i>Flexible search</i> → On or Off
Reset Learning Function		<i>Text input settings</i> → <i>Reset learning</i> → Enter Phone Password → Tap OK → Yes

Clear History for Pictograms/Emoticons		<i>Text input settings</i> → <i>Clear history</i> → <i>Yes</i>
Change Cursor Speed	Default Off	<i>Text input settings</i> → <i>Auto cursor</i> → <i>On/Slow/Normal/Fast/Very fast</i>
Change Input Mode	Default Keypad	<i>Text input settings</i> → <i>Input mode</i> → <i>Keypad/Handwriting</i>
Edit User's Dictionary Entries		<i>User's dictionary</i> → <i>Japanese dictionary/English dictionary</i> → Select entry → Edit word and reading → Tap Save

Touch Panel Settings

Start Here Tap Menu → *Settings* → *Touch panel*

Set Lock Key	Default Lock	<i>Lock key</i> → <i>Lock/Screen off</i>
Set Touch Panel Tone Volume Level & Vibration Level for Operating Touch Panel	Default Volume: Level 0, Touch vibration: Level 3	<i>Operation feedback</i> → Adjust volume/Set strength of Vibration

Sounds & Vibration & External Light Settings

Sounds & Vibration

Start Here Tap Menu → *Settings* → *Sound settings*

Set Ringtone Duration to Something Other than Voice Call	Default 5 Seconds	<i>Ringtone</i> → Select an item → <i>Duration</i> → Enter duration
Search Machi-Uta®		<i>Machi-Uta</i> → <i>Music search</i> → Follow onscreen instructions
Set Machi-Uta®		<i>Machi-Uta</i> → <i>Settings</i> → Follow onscreen instructions
Register/Cancel Machi-Uta®		<i>Machi-Uta</i> → <i>Register/Cancel</i> → Follow onscreen instructions
Set System Sounds		<i>System sounds</i> → Check items → Tap Save
Default Pop up box alerts/Call end tone/Alerts on call: On, Minute minder/Call connect tone/Power On/Power Off: Off		

- Open *Sound settings* to change sounds for Normal mode. Settings cannot be changed for other modes.


External Light Settings

Start Here Tap Menu → *Settings* → *Sound settings*

Set External Light Color for Incoming Transmissions

Default Voice call/Video call/Message/S! Friend's Status/Missed call notif./Alarm/Delivery report: Green, S! Quick News: Off

Incoming light → Select an item → Select a color

- When selecting **Off**, Notification light does not blink.
- Tap  to blink a light.

Set External Light Color for Missed Calls

Default Missed call/Missed call notif.: Blue, Message/Delivery report: Green, S! Friend's Status: Light blue, Answering machine: White, Missed alarm: Pink

Notification light → Select an item → Select a color

- When selecting **Off**, Notification light does not blink.
- Tap  to view color.

Display & Font Settings

Start Here Tap Menu → *Settings* → *Display settings*

Change Main Menu Style

Default Pattern (brown)

Main menu style → Select a style → Select a color → Tap Select

Set the Color Theme of Menu

Default Blue

Color theme → Select an item

Set Wallpaper for Lock Screen

Default Harbour at night

Lock screen → Select file → Tap Set

Set Main Menu Effect

Default Off

Under **Main menu effect**, **On** or **Off**

Set Display Rotation

Default Yahoo! Keitai, PC Site Browser, TV, Media Player, Photo album, Photo movie, Image Viewer, File Viewer: On

Screen rotation → Under **Yahoo! Keitai/PC site browser/TV/Media Player/Photo album/Photo movie/Image viewer/File viewer**, **On** or **Off**

Set Font Weight

Default Regular

Font weight → Select an item

Change Message Text Font Size

Default Standard

Font size → **Messages** → Select an item

Set Text Size in Yahoo! Keitai Pages

Default Standard

Font size → **Yahoo! Keitai** → Select an item

Set Text Size in PC Site Browser

Default Standard

Font size → **PC site browser** → Select an item

Change Scrolling Speed

Default Normal

Text scroll speed → Select an item



Adjust Display Brightness	Default Auto	Backlight → Backlight on → Brightness → Under <i>Auto/Manual</i> , <i>Auto</i> or <i>Manual</i> <ul style="list-style-type: none"> When <i>Manual</i> is selected, adjust brightness on Level field.
Set Backlight Time	Default 15 seconds	Backlight → Backlight on → Duration → Select an item <ul style="list-style-type: none"> When Backlight time is set to Off, Display becomes dim. Display becomes dimmer when Backlight time elapses.
Set Backlight Dimmer Time	Default 15 seconds	Backlight → Backlight dim duration → Select an item <ul style="list-style-type: none"> When Backlight time elapses, Display turns off.
Set Battery Saving Mode	Default On	Battery saving mode → On or Off
Set Operator Name	Default Off	Under Operator name , On or Off

Manner Mode Settings


Switch Manner Mode	Tap Menu → Settings → Manner mode settings → Select an item <ul style="list-style-type: none"> To edit each setting in Manner mode, tap Edit → Select a mode → Set each item.
--------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Call Settings

Start Here Tap Menu → **Settings** → **Call settings**

Confirm Current Voicemail/Call Forwarding Settings	Optional services → Voice mail/Call forwarding → Get status
Listen to Voicemail Message	Optional services → Voice mail/Call forwarding → Call voice mail →  or tap Call
Set Answering Machine Response Time	Default 18seconds Answering machine → Ringing duration → Select an item <ul style="list-style-type: none"> If Other is selected, enter time.
Set Answering Machine Response Language	Default 日本語 Answering machine → Sound language → Select an item <ul style="list-style-type: none"> Tap  to play message.
Set Preset Picture as Outgoing Image	Video call → Alternative picture → Preset picture → Tap Set

Set Alternative Picture as Outgoing Image		<i>Video call</i> → <i>Alternative picture</i> → <i>Pictures</i> → Select a file → Tap Set • When Memory Card is inserted, Digital camera is selectable.
Adjust Incoming Video Quality	Default Standard	<i>Video call</i> → <i>Incoming video quality</i> → Select an item
Adjust Outgoing Video Quality	Default Standard	<i>Video call</i> → <i>Outgoing video quality</i> → Select an item
Set Preset Picture to Appear When Video Call is on Hold		<i>Video call</i> → <i>Hold settings</i> → <i>Hold during call</i> → <i>Preset picture</i> → Tap Set
Set Hold Settings		<i>Video call</i> → <i>Hold settings</i> → <i>Hold during call</i> → <i>Pictures</i> → Select a file → Tap Set • When Memory Card is inserted, Digital camera is selectable.
Set Preset Picture to Appear When Video Call is on Hold without Answering		<i>Video call</i> → <i>Hold settings</i> → <i>Hold answer</i> → <i>Preset picture</i> → Tap Set
Set Hold Answer Settings		<i>Video call</i> → <i>Hold settings</i> → <i>Hold answer</i> → <i>Pictures</i> → Select a file → Tap Set • When Memory Card is inserted, Digital camera is selectable.
Activate/Cancel Mute for Video Call	Default Off	<i>Video call</i> → Under <i>Mute my voice, On</i> or <i>Off</i> • If On , tap Unmute to temporarily send voice.
Activate/Cancel Speakerphone during Video Call	Default On	<i>Video call</i> → Under <i>Speaker, On</i> or <i>Off</i>
Set Backlight	Default On	<i>Video call</i> → Under <i>Backlight, On</i> or <i>Off</i> • When Off is set, Display becomes dim.
Set Handset Response When Video Call Cannot Be Connected	Default Always ask	<i>Video call</i> → <i>Retry with</i> → Select an item • None : Calls are disconnected with no notification. • When a Video Call cannot be connected, prompt appears to retry with the selected setting. • If Auto redial is set to On , Auto redial takes priority.
Answer Video Call from Specified Party Automatically	Default Off	<i>Video call</i> → <i>Auto answer</i> → Under <i>On/Off, On</i> or <i>Off</i> • When a Video Call arrives from the specified party, a tone sounds and the call is automatically answered.
Create Auto Answer List		<i>Video call</i> → <i>Auto answer</i> → <i>Auto answer list</i> → Tap Add → Select an item → Enter Phone Password → Tap OK → Add an entry • To delete the specified party, after selecting Auto answer list , tap Delete → Check entries → Tap Delete → Yes .
Show/Hide Your Own Image for Video Calls	Default On	<i>Video call</i> → Under <i>Show my image, On</i> or <i>Off</i>

Save International Code	Default 0046010	<i>International call</i> → <i>International code</i> → Enter Phone Password → Tap OK → Enter an international code
Add/Change/Delete Country Number	Default 日本 (Japan), 韓国 (KOR), イギリス (GBR), イタリア (ITA), スイス (CHE), スペイン (ESP), ドイツ (DEU), ポルトガル (PRT), オランダ (NLD), フランス (FRA), モナコ (MCO), アメリカ合衆国 (USA), スウェーデン (SWE), オーストラリア (AUS), 中国 (CHN), 香港 (HKG), 台湾 (TWN)	<i>International call</i> → <i>Country number</i> → Add, change, or delete item <ul style="list-style-type: none"> To add, tap Add → <i>Country name</i> → Enter country name → <i>Country code</i> → Enter country code → Tap Save. To change, select an item from country code → <i>Country name</i> → Enter country name → <i>Country code</i> → Enter country code → Tap Save. To delete, tap Delete → Check country codes → Tap Delete → <i>Yes</i>.
Set Roaming Dial Assistant	Default On	<i>International call</i> → Under <i>Roaming dial assistant, On or Off</i> <ul style="list-style-type: none"> If <i>Roaming dial assistant</i> is set to <i>On</i>, popup appears while dialing. If you add international number before phone number, popup does not appear.
Set Handset to Automatically Redial Busy Numbers	Default Off	Under <i>Auto redial, On or Off</i> <ul style="list-style-type: none"> <i>On</i>: Handset automatically disconnects call and redials busy numbers. Auto redial repeats up to ten times until Cancel is tapped or  is pressed. If called party uses Call Forwarding or Voicemail, call is forwarded accordingly.
Activate/Cancel Automatic Ringer Reduction	Default On	Under <i>Ringtone reducer, On or Off</i> <ul style="list-style-type: none"> When Ringtone volume level is high, the volume level is reduced to Level 1 for the first four seconds, then returns to the set level.
Enable/Disable Calling via Stereo Earphone Microphone	Default Off	<i>Earphone call</i> → <i>Call number</i> → Select an item → Add a phone number → Under <i>On/Off, On or Off</i> <ul style="list-style-type: none"> <i>On</i>: Press Stereo Earphone Microphone (optional) switch for 1 + seconds to call specified number. To change specified number, repeat setup operation, saving the new number.
Set Clear Talk	Default Off	<i>Clear talk</i> → Select item
Set High-tone Setting	Default Off	<i>High-tone setting</i> → Select item
Adjust Earpiece Volume	Default Level 3	Adjust volume in Hearing volume field

Phone Book Settings

Start Here Tap Menu → *Phone Func.* → *Settings*

Select Phone Book Save Location	Default Phone	<i>Save to</i> → Select an item • <i>Ask each time</i> : A confirmation appears each time a new entry is saved.
Change Phone Book Preference (Phone/USIM)	Default Phone	<i>Change view</i> → Select an item
Change Search Method	Default ABC	<i>Search method</i> → Select an item
Copy All Phone Book Entries & Save on Handset & USIM Card		<i>Copy all</i> → <i>Phone to USIM/USIM to Phone</i> → <i>Yes</i>

Messaging Settings



Custom Mail Address

Customize/Change Handset Mail Address	Tap Messaging → <i>Settings</i> → <i>Custom mail address</i> → Follow onscreen instructions • Change mail account name (alphanumerics before @). Default: Account name consists of random alphanumerics.
---------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

S! Mail & SMS

Start Here Tap Messaging → *Settings* → *Universal settings*

Request/Cancel Delivery Report	Default Off	<i>Sending settings</i> → Under <i>Delivery report</i> , <i>On</i> or <i>Off</i> • <i>On</i> : Receive a message confirming successful delivery of a sent message.
Quote Text From Received Message	Default On (Except SMS & Graphic mail)	<i>Sending settings</i> → <i>Reply with history</i> → Select an item
Select Reply Setting	Default Off	<i>Sending settings</i> → Under <i>Reply setting</i> , <i>On</i> or <i>Off</i> <i>On</i> : Replies to sent messages are automatically addressed to " <i>Reply to</i> " address <i>Off</i> : Replies to sent messages are addressed to handset number/mail address • Set address that appears in To: field of message recipient handset.
Set "Reply to" Address		<i>Sending settings</i> → " <i>Reply to</i> " address → Select an item → Select/Enter address

Change Quick Reply Message		<i>Sending settings</i> → <i>Quick reply setting</i> → Select an item → Enter message
Show/Hide Transmission Progress Bar	Default On	<i>Sending settings</i> → Under <i>Sending progress setting</i> , <i>On</i> or <i>Off</i>
Set Received Message Notice Content/Hide Notice	Default From	<i>Receiving settings</i> → <i>Message notice</i> → <i>View setting</i> → Select an item <ul style="list-style-type: none"> Received message notice scrolls above active function windows.
Select Secret Folder Message Notice Setting	Default Show	<i>Receiving settings</i> → <i>Message notice</i> → <i>Secret folder</i> → Enter Phone Password → Tap OK → <i>Secret folder</i> → Select an item <ul style="list-style-type: none"> <i>Not show</i>: Incoming message notice window for messages sorted to secret folders or <i>Message notice</i> does not appear.
Link External Light to Incoming Feeling Mail	Default On	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Light color</i> → Under <i>On/Off</i> , <i>On</i> or <i>Off</i>
Link External Light Color to Incoming Feeling Mail Default Happy/Glad: Pink, OK/Good: Green, Sad/Sorry: Blue, NG/Bad: Red, Important/Notice: Yellow		<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Light color</i> → <i>Light color</i> → Select a feeling → Select a color <ul style="list-style-type: none"> Tap  to view color.
Link Vibration to Incoming Feeling Mail	Default On	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Vibration pattern</i> → Select an item
Set Whether to Sound Handset When Feeling Mail Arrives	Default Off	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → Under <i>On/Off</i> , <i>On</i> or <i>Off</i>
Link Ringtone to Incoming Feeling Mail Default Happy/Glad: One Fine Day, OK/Good: Sunny day, Sad/Sorry: Jazzy House_Pleasure, NG/Bad: Vintage Cinema, Important/Notice: On my way home		<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → <i>Assign tone</i> → Select a feeling → Select a save location → Select a Ringtone <ul style="list-style-type: none"> Tap  to playback the file.
Set Feeling Mail Ringtone Duration	Default 5 Seconds	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → <i>Duration</i> → Enter time
Change Font Size	Default Standard	<i>Display settings</i> → <i>Font size</i> → Select an item
Change Scroll Unit	Default Single line	<i>Display settings</i> → <i>Scroll unit</i> → Select an item
Show/Hide Navigation Bar	Default On	<i>Display settings</i> → Under <i>Navigation bar</i> , <i>On</i> or <i>Off</i>
Change Received Message View	Default Folder view	<i>Display settings</i> → <i>Received msg. view</i> → Select an item
Change Sent Message View	Default Folder view	<i>Display settings</i> → <i>Sent msg. view</i> → Select an item

Set/Cancel Auto Delete for Received Messages When Received Memory is Full Default On (Except protected)	<p><i>Auto delete</i> → <i>Received msg.</i> → Select an item</p> <p>On (Except protected) : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is Off, memory full confirmation appears. Delete messages and retry.</p> <p>On (Only read) : Unprotected messages are automatically deleted from the oldest one to make room for new ones. If <i>Auto delete</i> is Off, memory full confirmation appears. Delete messages and retry.</p> <p>Off: Memory full confirmation appears. Delete messages and retry.</p>
Set/Cancel Auto Delete for Sent Messages When Sent Memory is Full Default On (Except protected)	<p><i>Auto delete</i> → <i>Sent msg.</i> → Select an item</p> <p>On (Except protected) : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is Off, memory full confirmation appears. Delete messages and retry.</p> <p>Off: Memory full confirmation appears. Delete messages and retry.</p>
Sort Unregistered Mobile Address as Spam Default Off	<p><i>Anti-spam measures</i> → Enter Phone Password → Tap OK → Unregistered → On</p>
Sort Message with Spam Filter Default Off	<p><i>Anti-spam measures</i> → Enter Phone Password → Tap OK → Spam filter → On</p> <ul style="list-style-type: none"> To specify list, Spam filter → Tap Edit → (If address already exists in the list, tap Add filter) → Sender/Sender (Partial match)/Subject.
Add Address to Permitted List Default Off	<p><i>Anti-spam measures</i> → Enter Phone Password → Tap OK → Permitted list → On</p> <ul style="list-style-type: none"> To specify list, Permitted list → Tap Edit → (If address already exists in the list, tap Add filter) → Sender/Sender (Partial match)/Subject. Available only when Unregistered/Spam filter is On.
Set Address for Report Spam Default stop@meiwaku.softbankmobile.co.jp	<p><i>Anti-spam measures</i> → Enter Phone Password → Tap OK → Address for report spam</p> <p>→ Enter mail address</p>
Set a Destination to Save Attached File Default Memory card prior	<p>Save to → Select an item</p> <ul style="list-style-type: none"> If Always ask is selected, confirmation appears every time message is saved.

S! Mail

Start Here Tap Messaging → *Settings* → *S! Mail settings*

Set Max Creation Size	Default 2MB	<p><i>Sending options</i> → <i>Max creation size</i> → Select an item</p> <ul style="list-style-type: none"> In S! Mail creation window, tap <i>Settings</i> → <i>Sending options</i> → <i>Max creation size</i> can change maximum size temporarily.
Set Message Sending Priority	Default Normal	<i>Sending options</i> → <i>Priority</i> → Select an item
Set Max Size of Image to be Sent	Default 500KB	<i>Sending options</i> → Picture auto resize → Select item
Set Max Receiving Size	Default 2MB	<i>Receiving options</i> → <i>Max receiving size</i> → Select an item
Set S! Mail Receiving Options	Default On (Up to 1MB)	<p><i>Receiving options</i> → <i>Auto receiving</i> → <i>Select an item</i></p> <p><i>On (Up to 1MB)</i>: Mail Service Center sends S! Mail of max 1MB automatically.</p> <p><i>On (Up to 300KB)</i>: Mail Service Center sends S! Mail of max 300KB automatically.</p> <p><i>Off</i>: Mail Service Center sends S! Mail Notice only.</p>
Set Auto Receiving Condition	Default All messages	<p><i>Receiving options</i> → <i>Auto receiving conditions</i> → <i>All messages/Specified address</i></p> <p><i>All messages</i>: Mail Service Center sends complete S! Mail messages automatically.</p> <p><i>Specified address</i>: Tap <i>Edit</i> to set <i>Registered address/Individual address</i>.</p> <p><i>Registered address</i> is set to <i>On</i> send message using number in Phone Book is received.</p> <p><i>Individual address</i> is set to <i>On</i>, tap <i>Edit</i> → Select address to set message to receive.</p>
Insert/Hide Signature	Default Off	<i>Signature</i> → <i>Auto insert</i> → Select an item
Edit Signature		<i>Signature</i> → <i>Signature texts</i> → Enter a signature
Set Attached Image Appearance	Default Double-sized	<i>Picture appearance</i> → Select an item
Set Attached Image Auto Playback	Default On	<i>Auto play file</i> → Under <i>Picture</i> , <i>On</i> or <i>Off</i>
Set Attached Sound Auto Playback	Default Off	<i>Auto play file</i> → Under <i>Sound</i> , <i>On</i> or <i>Off</i>

SMS

Start Here Tap Messaging → *Settings* → *SMS settings*

Set Mail Service Center Message Expiry Time	Default None	<i>Expiry time</i> → Select an item • Upon expiry Mail Service Center SMS messages are automatically deleted.
Set Message Center Number	Default Setting 1 +819066519300	<i>Message center</i> → Select an item
Change Character Code	Default Unicode	<i>Char-code</i> → Select an item

Internet Settings

Yahoo! Keitai

Start Here Tap Menu → Tap Yahoo! → *Browser settings*

Show/Hide Navigation Bar in a Page	Default On	Under <i>Navigation bar</i> , <i>On</i> or <i>Off</i>
Change Page Font Size	Default Standard	<i>Font size</i> → Select an item
Set Page Scroll Unit	Default Single line	<i>Scroll unit</i> → Select an item
Show/Hide Page Images	Default On	<i>Downloads</i> → Under <i>Display image</i> , <i>On</i> or <i>Off</i> • Set <i>Off</i> to help reduce download time.
Play/Mute Page Sounds	Default On	<i>Downloads</i> → Under <i>Play sounds</i> , <i>On</i> or <i>Off</i> • Set <i>Off</i> to help reduce download time.
Set Save Location for Images in a Page, etc.	Default Memory card prior	<i>Save to</i> → <i>Memory card prior/Phone/Always ask</i>
Delete Cache/Cookie/Certificates		<i>Memory manager</i> → Select an item → <i>Yes</i>
Show/Hide Manufacture Number	Default On	<i>Security</i> → Under <i>Manufacture number</i> , <i>On</i> or <i>Off</i> • <i>On</i> : Handset automatically sends Manufacture Number to websites upon request as user ID.
Send/Hide Referrer	Default Send	<i>Security</i> → <i>Send referer</i> → Select an item • Referrer is a link source URL information. It is sent to Web server when accessing websites.

Select Cookie Setting	Default Enabled	<i>Security</i> → <i>Cookies</i> → Select an item <ul style="list-style-type: none"> Select Confirm for acceptance confirmation every time before a cookie is saved. Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.
Select Script Setting	Default On	<i>Security</i> → <i>Script</i> → Select an item
Confirm Root Certificate		<i>Security</i> → <i>Root certificates</i> → Select a certificate <ul style="list-style-type: none"> View electronic certificate preinstalled on handset.
Set Certificate Retention Period	Default Per browsing	<i>Security</i> → <i>Certificate retention</i> → Select an item
Show/Hide Secure Prompt	Default On	<i>Security</i> → Under <i>Secure prompt</i> , On or Off
Initialize Browser		<i>Initialized browser</i> → Enter Phone Password → Tap OK → Yes <ul style="list-style-type: none"> Initialize browser settings or information such as Bookmarks or Saved pages.
Reset Settings		<i>Reset settings</i> → Enter Phone Password → Tap OK → Yes

PC Site Browser/Direct Browser

Start Here Tap Menu → Tap Yahoo! → *PC site browser/Direct browser* → *PC site browser settings/Direct browser settings*

Change Page Font Size	Default Standard	<i>Font size</i> → Select an item
Show/Hide Page Navigation When Zooming	Default On	Under <i>Page navigation</i> , On or Off
Show/Hide Page Images	Default On	<i>Downloads</i> → Under <i>Display image</i> , On or Off <ul style="list-style-type: none"> Set Off to help reduce download time.
Play/Mute Page Sounds	Default On	<i>Downloads</i> → Under <i>Play sounds</i> , On or Off <ul style="list-style-type: none"> Set Off to help reduce download time.
Set Save Location for Images in a Page, etc.	Default Memory card prior	<i>Save to</i> → <i>Memory card prior/Phone/Always ask</i>
Delete Cache/Cookie/Certificates/RSS Feed List		<i>Memory manager</i> → Select an item → Yes <ul style="list-style-type: none"> To delete RSS Feed list, select Delete RSS feed list → Enter Phone Password → Tap OK → Yes.
Send/Hide Referrer	Default Send	<i>Security</i> → <i>Send referer</i> → Select an item <ul style="list-style-type: none"> Referrer is a link source URL information. It is sent to Web server when accessing websites.

Select Cookie Setting	Default Enabled	<i>Security</i> → <i>Cookies</i> → Select an item <ul style="list-style-type: none"> • Select Confirm for acceptance confirmation every time before a cookie is saved. • Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.
Select Script Setting	Default On	<i>Security</i> → <i>Script</i> → Select an item
Confirm Root Certificate		<i>Security</i> → <i>Root certificates</i> → Select a certificate <ul style="list-style-type: none"> • View electronic certificate preinstalled on handset.
Set Certificate Retention Period	Default Per browsing	<i>Security</i> → <i>Certificate retention</i> → Select an item
Show/Hide Secure Prompt	Default On	<i>Security</i> → Under <i>Secure prompt</i> , On or Off
Initialize Browser		<i>Initialized browser</i> → Enter Phone Password → Tap OK → Yes <ul style="list-style-type: none"> • Initialize browser settings or information such as Bookmarks or Saved pages.
Reset Settings		<i>Reset settings</i> → Enter Phone Password → Tap OK → Yes

Communities

Start Here Tap Menu → *Photo Library* → *Communities* → Tap Settings

Set Community to View		<i>Display Setting</i> → Check community → Tap Save
Set Image Size to Upload	Default Standard	<i>Picture auto resize</i> → <i>Small/Standard/Original</i>
Log in to Community		<i>Account manager</i> → Select community → Follow onscreen instructions
Log out from Community		<i>Account manager</i> → Select community → Yes
Show/Hide Uploading Progress	Default On	Under <i>Uploading progress</i> , On or Off
Update SNS List		<i>Update SNS list</i>
View Disclaimer		<i>Disclaimer</i> → Tap OK

PC Site Browser

Start Here Tap Menu → Tap Yahoo! → *PC site browser* → *PC site browser settings*

Show/Hide Manufacture Number	Default On	<p><i>Security</i> → Under <i>Manufacture number</i>. <i>On</i> or <i>Off</i></p> <ul style="list-style-type: none"> • <i>On</i> : Handset automatically sends Manufacture Number to websites upon requested as user ID.
Show/Hide Warning	Default On	<p>Under <i>Warning messages</i>, <i>On</i> or <i>Off</i></p> <ul style="list-style-type: none"> • Show or hide PC Site Browser activation, or Yahoo! Keitai/PC Site Browser switching warning.

Direct Browser

Start Here Tap Menu → Tap Yahoo! → *Direct browser* → *Direct browser settings*



Set Proxy	Default Off	<p><i>Proxy settings</i> → Enter Admin Password → Tap OK → Under <i>On/Off</i>, <i>On</i> or <i>Off</i></p> <ul style="list-style-type: none"> • If Proxy URL is set to 0.0.0.0, move to <i>Proxy URL</i> continuously.
Set Proxy URL	Default 0.0.0.0	<p><i>Proxy settings</i> → Enter Admin Password → Tap OK → <i>Proxy URL</i> → Enter IP Address/URL</p> <ul style="list-style-type: none"> • To set this function, set <i>Proxy settings</i> to <i>On</i>.
Set Port Number	Default 80	<p><i>Proxy settings</i> → Enter Admin Password → Tap OK → <i>Port number</i> → Enter Port number</p> <ul style="list-style-type: none"> • To set this function, set <i>Proxy settings</i> to <i>On</i>.
Enter Exception URL		<p><i>Proxy settings</i> → Enter Admin Password → Tap OK → <i>Exception URL</i> → Tap Add → Enter IP Address/URL</p> <ul style="list-style-type: none"> • To set this function, set <i>Proxy settings</i> to <i>On</i>.
Set Home Page		<p><i>Home page settings</i> → Enter URL</p>

Digital TV Settings

TV Alarm


Start Here Tap Menu → *TV* → *Settings* → *TV alarm*

Set Alarm	Default On	Under <i>Alarm</i> , <i>On</i> or <i>Off</i>
-----------	-------------------	----------------------------------------------

Set Alert Tone	Default Samsung Tune	Alert tone → Select a save location → Select a file • Tap  to playback.
Set Volume	Default Level 3	Adjust Volume on Volume field
Set Vibration	Default Off	Vibration → Select an item • Tap  to view a pattern.
Set Notification Light	Default On	Under Light, On or Off
Set Reminder Time	Default 1 minute before	Reminder time → Select an item
Set Alarm Duration	Default 10 seconds	Duration → Select an item
Set Alarm Sound/Vibration in Manner Mode	Default Alarm sound:Off, Vibration:On	Manner mode setting → Under Alarm sound/Vibration, On or Off

Data Broadcast

Start Here Tap Menu → TV → Settings → Set broadcast data

Set Recording Type	Default Image+Text	Set recording → Select an item
Select Save Location	Default Memory card prior	Image location → Select an item
Select Connection Notification Type	Default Always ask	Notify connection → Select an item
Show/Hide Manufacture Number	Default On	Under Manufacture number, On or Off
Delete Station Data		Delete station data →  → Yes • To delete all stations, tap Delete all → Enter Phone Password → Tap OK → Yes.

Display & Sound

Start Here Tap Menu → TV → Settings



Show/Hide Indicators in Landscape View	Default On	Display → Under Display pict, On or Off
----------------------------------------	-------------------	--------------------------------------------------------------

Set Whether to Show 4:3 Videos in Landscape View	Default Normal	<i>Display</i> → <i>Landscape style</i> → Select an item
Set Whether to Show 4:3 Videos in Portrait View	Default Normal	<i>Display</i> → <i>Portrait style</i> → Select an item
Adjust Display Brightness	Default Level 3	<i>Display</i> → Adjust brightness on Setting field • This setting is only effective when the Backlight brightness is set to <i>Manual</i> .
Adjust Sound Quality	Default Off	<i>Sound</i> → <i>Sound mode</i> → Select an item
Select Language	Default Main	<i>Sound</i> → <i>Sound language</i> → Select an item
Set Smart Volume Control	Default On	<i>Sound</i> → Under <i>Smart volume control</i> , <i>On</i> or <i>Off</i>
Select Output Device	Default Phone/Earphone	<i>Sound</i> → <i>Sound output</i> → Select an item

Recording

Set Save Location	Default Memory card prior	Tap Menu → <i>TV</i> → <i>Settings</i> → <i>Save recording to</i> → Select an item
-------------------	----------------------------------	------------------------------------------------------------------------------------

Incoming Calls & Alarms


Handle Incoming Calls & Alarms Default Voice call/Video call: Call priority, Alarms: Alarm priority	Tap Menu → <i>TV</i> → <i>Settings</i> → <i>Calls & Alarms</i> → Select an item → Select action • When <i>Call priority</i> or <i>Alarm priority</i> is set, TV window pauses temporarily and Incoming call window or Alarm window appears. • When <i>Notice a call</i> or <i>Alarm notice</i> is set, a notification appears at top of Display and handset vibrates (TV reception continues). Press  to accept a call; press  to hold a call.
---------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Auto Power Off

End TV after Setting Duration	Default Off	Tap Menu → <i>TV</i> → <i>Settings</i> → <i>Auto power off</i> → Select an item
-------------------------------	--------------------	---------------------------------------------------------------------------------


Camera Settings

Camera & Video




Start Here Tap Menu → *Camera* → *Camera/Video camera* → 

Set Contrast	Default 0	<i>Contrast</i> → Select an item
Set Saturation	Default 0	<i>Saturation</i> → Select an item
Set Sharpness	Default 0	<i>Sharpness</i> → Select an item
Set Effects	Default None	<i>Effects</i> → Select an item
Set Anti-Shake	Default Off	<i>Setup</i> → Under <i>Anti-shake</i> , On or Off <ul style="list-style-type: none">For still Image, <i>Anti-Shake</i> is not available when <i>Wide Dynamic Range</i> is set to On.
Show/Hide Guideline	Default Off	<i>Setup</i> → Under <i>Guideline</i> , On or Off
Set Shutter Sound	Default Pattern1	<i>Setup</i> → <i>Shutter sound</i> → Select an item
Set Timer Sound	Default Pattern1	<i>Setup</i> → <i>Timer sound</i> → Select an item

Photo

Start Here Tap Menu → *Camera* → *Camera* → 

Add/Eliminate Location Info	Default Off	<i>Setup</i> → Under <i>Add location info</i> , On or Off <ul style="list-style-type: none">Add captured location information to image.
Select Quality	Default Super Fine	<i>Quality</i> → Select an item
Set ISO	Default Auto	<i>ISO</i> → Select an item
Set Exposure Metering	Default Center-weight	<i>Exposure metering</i> → Select an item
Set Wide Dynamic Range	Default Off	Under <i>Wide dynamic range</i> , On or Off <ul style="list-style-type: none">Setting this to On automatically adjusts your image captured in a backlit situation or environment where the brightness difference is extreme that would otherwise be too bright or too dark.<i>Wide Dynamic Range</i> is not available when <i>Anti-Shake</i> is set to On.

Activate/Cancel Auto Save	Default On (Preview manual)	<p>Setup → Auto save → On (Preview off)/On (2 sec.)/On (Preview manual)/Off</p> <ul style="list-style-type: none"> • On (Preview off) : Image is automatically saved. After saving, handset returns to Viewfinder without showing preview. • On (2 sec.) : Image is automatically saved. After saving, preview appears for two seconds, and handset returns to Viewfinder. • On (Preview manual) : After capturing, images are saved automatically. After images are saved, image preview appear, tap Set as/Edit/Send/Upload to web. • Off : Select save or cancel the image. To redo, press . To save, tap  / .
Set Save Location When Memory Card is Inserted	Default Memory card prior	<p>Setup → Save to → Select an item</p> <ul style="list-style-type: none"> • If Memory Card is not inserted, images are automatically saved to Phone.
Set Face Link Display	Default Off	<p>Setup → Under Face link display, On or Off</p> <ul style="list-style-type: none"> • When you set this On, after the face you captured is recognized, the name appears.

Video

Start Here Tap Menu → **Camera** → **Video camera** → 

Select Quality	Default Fine	Quality → Select an item
Set Whether to Record Sound	Default On	Under Sound , On or Off
Activate/Cancel Auto Save	Default On	Setup → Under Auto save , On or Off
Set Save Location	Default Memory card prior	<p>Setup → Save to → Memory card prior/Phone</p> <ul style="list-style-type: none"> • To save a file to Memory Card, insert Memory Card.

Media Player Settings

Music/Movie

Set Sound Output Settings	Default Phone/Earphone	Tap Menu → <i>Entertainment</i> → <i>Media Player</i> → <i>Settings</i> → <i>Sound output setting</i> → Select item
---------------------------	-------------------------------	---------------------------------------------------------------------------------------------------------------------

Music

Start Here Tap Menu → *Entertainment* → *Media Player* → *Settings* → *Music settings*

Set Repeat Mode	Default All	<i>Repeat mode</i> → Select an item • Play a single track repeatedly, all music, or all files in playlist repeatedly.
Set Shuffle	Default Off	Under <i>Shuffle, On</i> or <i>Off</i>
Set Sound Effects	Default Off	<i>Sound effects</i> → Select an item → Tap OK • This setting is not available for Bluetooth®-compatible stereo headphone.
Set Mood	Default Normal	Under <i>Mood</i> , tap + / - • If <i>Sound effects</i> is set to <i>Off</i> or <i>Manual</i> , this setting is unavailable.

Movie

Start Here Tap Menu → *Entertainment* → *Media Player* → *Settings* → *Movie settings*

Set Repeat Mode	Default All	<i>Repeat mode</i> → Select an item • Play a single file repeatedly, all movies, or all files in playlist repeatedly.
Set Shuffle	Default Off	Under <i>Shuffle, On</i> or <i>Off</i>
Set Backlight	Default Always On	<i>Backlight</i> → Select an item

Set Portrait Style	Default 480*360	<i>Portrait style</i> → Select an item
Show/Hide Movie Thumbnails	Default On	Under <i>Thumbnail display</i> , On or Off
Access/Ignore Linked Information	Default On	Under <i>Web link</i> , On or Off <ul style="list-style-type: none"> • On: After playing a file with linked info, access confirmation appears.
Set Sound Effects	Default Off	<i>Sound effects</i> → Select an item → Tap OK <ul style="list-style-type: none"> • This setting is not available for Bluetooth®-compatible stereo headphone.
Set Mood	Default Normal	Under <i>Mood</i> , tap + / - <ul style="list-style-type: none"> • If <i>Sound effects</i> is set to Off or Manual, this setting is unavailable.

Entertainment Settings

Widgets

Start Here Tap Menu → *Widget* → *Settings*

Set Downloaded Widget Automatic Update	Default On	Under <i>Auto refresh</i> , On or Off
Set Roaming Automatic Connection	Default Off	Under <i>Roaming auto connect</i> , On or Off
Show/Hide Confirmation When Using Overseas	Default On	Under <i>Roaming confirmation</i> , On or Off
Accept/Reject Cookies	Default On	Under <i>Cookies</i> , On or Off
Deleting Cookies		<i>Delete cookies</i> → Yes

S! Information Channel

Start Here Tap Menu → *Entertainment* → *S! Information Channel/Weather* → *Weather Indicator* → *Settings*

Set Weather Indicator Update Notification	Default On	Under <i>Weather notification</i> , On or Off
Set Weather Indicator Automatic Update	Default On	Under <i>Icon update</i> , On or Off

S! Applications

Start Here Tap Menu → *Data Folder* → *S! Appli* → Tap More → *Permission*

Set S! Appli Security	Select S! Appli → <i>Net access</i> → Select item → Tap OK
Reset S! Appli	Select S! Appli → <i>Reset</i> → <i>Yes</i>

Osaiфу-Keital[®]

Set Security to Lifestyle-Appli	Tap Menu → <i>Data Folder</i> → <i>Lifestyle-Appli</i> → Tap More → <i>Permission</i> → Select an item → Select an item
---------------------------------	-------------------------------------------------------------------------------------------------------------------------

S! GPS Navi

Start Here Tap Menu → *Tools* → *S! GPS Navi* → *Navi settings*

Select Navi Appli to Activate	<i>Select Navi appli</i> → Select Navi appli
Register URL to View Map Default Default URL	<i>Map URL settings</i> → <i>Map URL 1/Map URL 2</i> → Enter URL
Activate Positioning Lock Default Off	Under <i>Positioning lock, On</i> → Enter Phone Password → Tap OK
Hide Confirmation When Sending Location Information Default Always ask	<i>Send location info</i> → <i>Always ask/Send/Not send</i>
Hide Information When Providing Location Information Automatically Default Show	<i>Notification setting</i> → <i>Show/Not show</i>

Security Settings

Set IP Service Setting Default On	Tap Menu → <i>Settings</i> → <i>Security</i> → Under <i>IP service setting, On</i> or <i>Off</i> <ul style="list-style-type: none">Some functions are only available when you set IP service setting to <i>On</i>.
------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Memory Settings

Start Here Tap Menu → *Settings*

Check Memory Card Details		<i>Memory settings</i> → <i>Memory card</i> • Check Memory Card name, memory capacity, or remaining memory.
Rename Memory Card	Default NO NAME	<i>Memory settings</i> → <i>Memory card</i> → <i>Name</i> → Enter name
Format Memory Card		<i>Memory settings</i> → <i>Memory card</i> → Tap Format → Enter Phone Password → Tap OK → <i>Yes</i>
Confirm Total/Remaining Phone Memory		<i>Memory settings</i> → <i>Phone memory</i> • View Phone memory capacity or remaining memory.
Clear Phone Memory		<i>Memory settings</i> → <i>Phone memory</i> → Tap Clear → Check items → Tap Clear → Enter Phone Password → Tap OK → <i>Yes</i>
Set Default Memory to Phone/Memory Card	Default Memory card prior	<i>Connectivity</i> → <i>Save to</i> → Select an item • With Memory Card inserted, select <i>Phone</i> or <i>Memory card</i> . Available when editing images, saving S! Mail attachments, downloading files, receiving files via Bluetooth®, etc. • If Memory Card is not inserted, files are automatically saved to handset.
View Memory Status		<i>Memory settings</i> → <i>Memory status</i> → Select an item • If <i>Data Folder</i> is selected, select <i>Phone memory/Memory card</i> . • To delete viewed memory, tap Delete (P.12-13 Deleting Registered/Saved Data).

Connectivity Settings

Bluetooth®

Start Here Tap Menu → *Settings* → *Connectivity* → *Bluetooth* → *Settings*

Edit Handset Name	Default 941SC	Tap Bluetooth name → Edit name
Confirm Handset Device Address		In Bluetooth Address field, confirm address

Search/Save from Bluetooth® Devices	Default Show my phone	<i>My phone's visibility</i> → Select an item • To search and save from other Bluetooth® devices, make handset visible.
Set Default Output Device While Watching TV	Default Phone/Earphone	<i>Sound output setting</i> → <i>Phone/Earphone/Bluetooth device</i>
Set Secure Mode	Default On	Under <i>Secure mode</i> , <i>On</i> or <i>Off</i> • <i>On</i> : A confirmation appears before transfers.
Adjust Handsfree Setting	Default Private mode	<i>Handsfree</i> → Select an item <i>Private mode</i> : Use Microphone for handset calls or handsfree device for device calls. <i>Handsfree mode</i> : Talk via handsfree device.
Set Answering Mode	Default Normal	<i>Answering mode</i> → Select an item
Set Answer Time	Default 4 seconds	<i>Answer time</i> → Select an item • To set Answer time, select <i>Automatic</i> in <i>Answering mode</i> .
Activate/Cancel S! Appli Confirmation	Default On	Under <i>S! Appli request</i> , <i>On</i> or <i>Off</i>
Confirm Available Bluetooth® Functions		<i>Bluetooth services</i> → Select an item

Infrared

Start Here Tap Menu → *Settings* → *Connectivity* → *Infrared*

Transfer Account Details	<i>Transfer account details</i>
Transfer Files	<i>Transfer files</i> → Select Data Folder → Select files → <i>Send</i>

IC Transmission

Activate/Cancel IC Transmission	Default Off	Tap Menu → <i>Settings</i> → <i>Connectivity</i> → <i>IC transmission</i> → Under <i>Receive setting</i> , <i>On</i> or <i>Off</i> → <i>Yes</i>
---------------------------------	--------------------	-------------------------------------------------------------------------------------------------------------------------------------------------

USB

Start Here Tap Menu → *Settings* → *Connectivity*

Activate Sync Mode to PC	<i>USB mode</i> → <i>MTP synch mode</i> → <i>Yes</i> → Enter Phone Password → Tap OK → Exchange files with PC <ul style="list-style-type: none">You need to connect handset and your PC before this operation.
Enable/Disable USB Charger Default Enable	USB charger → Enable/Disable

Network

Start Here Tap Menu → *Settings* → *Network settings*

Retrieve Network Information Manually	<i>Retrieve NW info</i> → <i>Yes/No</i>
Seek the Most Prioritized Network	<i>Re-search signal</i> → <i>Yes/No</i>