


Settings


Sound & Vibration	18-2
Ringtones.....	18-2
Charge Sound/Key Tone.....	18-3
Display	18-3
Display Settings.....	18-3
Main Menu	18-4
Clock	18-5
Backlight.....	18-5
Font.....	18-6
Motion Control	18-6
Viewer Position	18-7
Manner Mode	18-7
Incoming Settings	18-8
Date & Time	18-9
Call Settings	18-9
Call Time & Call Cost.....	18-9
Making & Receiving Calls.....	18-9
Notification Light	18-10
Text Entry	18-11
Text Entry Method.....	18-11
Conversion.....	18-11
Conversion Settings for Messaging	18-11
Phone Book	18-12
Voice Dial	18-12
Video Call	18-12
Function Menus	18-12
Engaged Video Call Settings	18-13

Digital TV	18-13
Camera	18-15
Camera Settings.....	18-15
Video Camera Settings	18-17
Mobile Widget (Japanese)	18-18
S! Quick News (Japanese)	18-18
Bluetooth®	18-19
Messaging	18-20
Universal Settings.....	18-20
S! Mail Settings.....	18-21
PC Mail Settings.....	18-22
SMS Settings.....	18-22
Internet	18-23
Browser Display Settings/Memory Manager	18-23
Security Settings.....	18-24
Reset	18-24
S! Appli	18-25
Osaifu-Keitai®	18-25
S! GPS Navi Settings	18-26
Default Settings	18-27
Confirming Settings	18-28

Settings Sound & Vibration

Ringtones

From  Main Menu  Settings

Setting/Operation	Default
Ringtone > <i>Sound Settings</i> → <i>Ring Tones</i> → Select an item → <i>Select Ring Tone</i> → Select a type → Select a folder → Select a tone	Phone/Video Call: Pattern 1 Message: Tone3
Machi-Uta® (Change Ringback Tone)¹ > <i>Sound Settings</i> → <i>Machi-Uta</i> → Select an item	—
Ringer Volume > <i>Sound Settings</i> → <i>Ringer Volume</i> → Select a type →  to adjust volume	Level 4
3D Sound Effect (Ringtone/Melody) > <i>Sound Settings</i> → <i>Stereo/3D Sound</i> → <i>ON</i> or <i>OFF</i>	ON
Ringtone Sound Output to Earphone² > <i>Sound Settings</i> → <i>Earphone</i> → <i>Earphone</i>	Earphone + Speaker
New Message Ringtone Duration > <i>Sound Settings</i> → <i>Message Ring Tones</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i> , enter ring time)	ON (Ring time: 05 sec)
Vibration > <i>Incoming Settings</i> → <i>Vibrator</i> → Select an item → Select a vibration pattern	OFF

¹ For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

² When earphone is connected and Sound Settings is set to **Earphone**, ringtone sounds through earphone and speaker for incoming calls/messages or alarms after about 20 seconds. Other sounds (e.g. Demo playback) are heard only from earphone.

Pre-installed Ringtones

Title	Composer
Pinwheel	Original
SINFONIA NR 101 THE CLOCK HOB I 101	HAYDN FRANZ JOSEPH
JE TE VEUX	SATIE ERIK ALFREDI LE
DANSE DES MIRLITONS // CASSE NOISETTE OP 71A /ORI	CHAJKOVSKIJ PETR ILICH
HEIGH HO // SNOW WHITE AND THE SEVEN DWARFS /INST	CHURCHILL FRANK E
DANCE OF THE KNIGHTS OP 64 NO 13	PROKOFEV SERGEJ S
WALTZ/COPPELIA BALLET SUITE	DELIBES LEO CLEMENT PHILIBERT
PETER AND THE WOLF OP 67	PROKOFEV SERGEJ S

Names of composers given above conform to JASRAC Website. Parts of titles may not appear due to Display size.

Charge Sound/Key Tone

From **Main Menu** ► **Settings**

Setting/Operation	Default
■ Key Tone > <i>Sound Settings</i> → <i>Key Tone</i> → <i>ON</i> or <i>OFF</i>	OFF
■ Start/End Charging Tone > <i>Phone Settings</i> → <i>Battery</i> → <i>Charge Sound</i> → <i>ON</i> or <i>OFF</i>	ON

Settings **Display**

Display Settings

- Viewer Position Menu/Main Menu Background (☞ P.18-7)

From **Main Menu** ► **Settings** ► **Display Settings**

Setting/Operation	Default
■ Wallpaper > <i>Internal Display</i> → <i>Stand-by Display</i> → Select an item (→ Select a folder) → Select an image	(☞ P.18-27)
■ Add Calendar to Wallpaper > <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Calendar</i> → Select a view format → <i>BG Image ON</i> or <i>BG Image OFF</i> (→ For <i>BG Image ON</i> , select a folder → select an image)	—
■ Change Wallpaper Randomly > <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Random Display</i> → Select a folder → <i>Every Hour</i> or <i>Every Day</i>	—
■ Outgoing Call/Message Image > <i>Internal Display</i> → Select an outgoing type → Select a folder → Select an image	(☞ P.18-27)
■ Incoming Call/Message Image > <i>Internal Display</i> → Select an incoming type → <i>Select Calling Disp.</i> ¹ → Select an image type → Select a folder → Select an image	(☞ P.18-27)

Battery/Antenna Indicator > <i>Internal Display</i> → <i>Battery Icon</i> or <i>Antenna Icon</i> → Select a pattern	Pattern 1
Start-up Window > <i>Internal Display</i> → <i>Start-up</i> → Select an item ²	—
Display Color Scheme > <i>Color</i> → Select a color	(☞ P.18-27)
Interface Language > <i>言語設定</i> → <i>日本語</i> or <i>English</i>	日本語
Show/Hide New Call/Message when Handset Opens > <i>Open for New</i> → <i>ON</i> or <i>OFF</i>	OFF

¹ ● Setting applies to messages retrieved manually or when Server Mail is retrieved (Retrieve New window cannot be changed).

² ● For *Pictures* or *Videos*: Select a folder → Select an image
 ● For *Message*: Enter text

Main Menu

From ► **Main Menu** ► **Settings** ► **Display Settings**
 ► **Menu Icons**

Setting/Operation	Default
Main Menu Theme > Select a pattern	(☞ P.18-27)
Main Menu Icons > <i>Customize</i> → Select a menu → Select a folder → Select an image	—
Main Menu Background > <i>Customize</i> → <i>Background Image</i> → Select a folder → Select an image	—

Clock

From ► **Main Menu** ► **Settings** ► **Display Settings**
 ► **Internal Display** ► **Clock**

Setting/Operation	Default
Standby Clock Pattern ¹ > <i>Stand-by Clock</i> → [Pattern] → Select a pattern → [Set]	Pattern 4
Standby Clock Position ^{1 2} > <i>Stand-by Clock</i> → [Position] → Select a position → [Set]	Pattern 1
Standby Clock Size ¹ > <i>Stand-by Clock</i> → [Size] → <i>Small</i> → [Set]	Large
Icon Clock at Upper Right (lower right in Landscape View) > <i>Icon Clock</i> → Select a pattern	Pattern 4

¹ Highlight *Stand-by Clock* → [Play] to view Standby Clock.

- ² ● Clock appears in **Pattern 1** when:
- Calendar, World Clock or Operator Name is set to appear in Standby
 - Time zone is set to other than GMT+9
 - Privacy Key Lock is active
- Standby Clock position can be changed manually (☞ P.1-22).

Backlight

From ► **Main Menu** ► **Settings** ► **Display Settings**

Setting/Operation	Default
Turn Backlight On/Off; Set Power Saver Mode ¹ > <i>Back Light Time</i> → <i>Lighting</i> → <i>ON</i> or <i>OFF</i> → Enter time to Power Saver mode	ON + 15secs.
Illuminate Backlight while Charging > <i>Back Light Time</i> → <i>Charging</i> → <i>Long Time Light</i> or <i>Standard</i>	Standard ²
Set Backlight for Display Only or Display and Keypad > <i>Back Light Time</i> → <i>Area</i> → <i>LCD</i> or <i>LCD + Keys</i>	LCD + Keys
Brightness > <i>Back Light Time</i> → <i>Brightness</i> → Select a brightness level	Auto ³
Soft Light > <i>Back Light Time</i> → <i>Soft Light</i> → <i>ON</i> or <i>OFF</i>	ON
Auto Image Compensation > <i>LCD AI</i> → <i>ON</i> or <i>OFF</i>	ON

¹ During operation (except when in Standby or S! Appli is active), press and hold [5] to toggle **ON/OFF**.

² When set to **Standard**, backlight illuminates with the same setting as **Lighting** setting.

³ When set to **Auto**, backlight for Display/Keypad is automatically adjusted according to ambient light.

Font

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Font Size by Function > <i>Font Size</i> → Select an item → Select a size 	Standard
<ul style="list-style-type: none"> ■ Change Menu Font Size > <i>Font Size</i> → <i>Collective Setting</i> → Select a size* 	Standard
<ul style="list-style-type: none"> ■ Change Font (Incoming/Outgoing Call Window) > <i>Disp. Call/Recv #</i> → <i>Pattern 1</i> or <i>Pattern 2</i> 	Pattern 1

* When **Small** is set, font size for Phone Book and Incoming/Outgoing Call Logs is **Standard**.

Motion Control

From ► Main Menu ► Settings ► Phone Settings
► Motion Control Setting

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Motion Control > <i>ON</i> or <i>OFF</i> 	ON (Except Y! Keitai)
<ul style="list-style-type: none"> ■ Customize Motion Control > Highlight <i>Customize</i> → [Edit] → Select an item → <i>ON</i> or <i>OFF</i> → [Finish] 	ON (Except Y! Keitai)

Viewer Position

From ► Main Menu ► Settings

Setting/Operation	Default
<p>■ Set Function to Activate Upon Switching to Viewer Position (from Standby)</p> <p>> <i>Phone Settings</i> → <i>Work with Style</i> → Select an item</p>	OFF
<p>■ Main Menu Background</p> <p>> <i>Display Settings</i> → <i>Internal Display</i> → <i>Stand-by Disp. Viewer</i> → <i>Pictures</i> → Select a folder → Select an image</p>	(👉 P.18-27)

Settings Manner Mode

From ► Main Menu ► Settings ► Incoming Settings ► Manner Mode Type

Setting/Operation	Default
<p>■ Set Manner Mode Type</p> <p>> Select a mode (→ For <i>User Mode</i>, set individual items → [Finish])</p>	Manner Mode

Default Settings by Mode

Manner Mode	Super Silent	Driving Mode	User Mode
Answer Phone			
Value set for Answer Phone	Value set for Answer Phone	ON	OFF
Vibrator			
ON	ON	OFF	ON
Volume (In. Calls/Msg Ring T./Alarm)			
Silent	Silent	Silent	Silent
Rec. Check Tone			
ON	OFF	ON	ON
Key Tone			
OFF	OFF	OFF	OFF
Mic Sensitiv.			
Up	Up	Up	Up
LVA Tone (Low battery alarm)			
OFF	OFF	OFF	OFF

Settings Incoming Settings

From ► Main Menu ► Settings ► Incoming Settings

Setting/Operation	Default
Change Answer Setting (☞ Right) > <i>Answer Setting</i> → Select an item	Any Key Answer
Answer Calls by Opening Handset > <i>Open-to-Ans. Call</i> → <i>Phone</i> or <i>Video Call</i> → <i>Answer</i>	Keep Ringing
Show/Hide Caller Image Saved in Phone Book > <i>Phone Book Image</i> → <i>ON</i> or <i>OFF</i>	ON
Set Tone for Missed Call/New Message Notification Set to ☐ (☞/☞) (☞ Right) > <i>Info Notice Setting</i> → <i>ON</i> or <i>OFF</i>	ON
Auto Answer with Earphone > <i>Auto Answer</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i> , enter ring time)	OFF
Call Waiting Response > <i>In-call Management</i> → Select an item	Answer

Answer Setting Key Operations

Any Key Answer	To answer a call, press any of the following keys: Voice Call: , , - , , , , , , , (☞/☞) Video Call: ,
Quick Silent	To cancel ringtone/vibration, press any of the following keys: Voice Call/Video Call: - , , , , , , , (☞/☞)
OFF	To answer a call, press any of the following keys: Voice Call/Video Call: ,

- When [Voice Mail] is assigned to indicated at the bottom of Display, press to start voice or video recording.

Info Notice Setting Response


ON	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls/Received Messages: Double-beep sounds twice
ボイス (Voice)*	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls: Double-beep sounds; voice message announces that you have a missed call Received Messages: Double-beep sounds; voice message announces that you have a new message

- When Vibrator is set for Incoming Settings, vibration activates with beeps. In Manner Mode, only vibration activates.
- Set Side-keys Guard (☞ P.12-9) to **OFF** beforehand.

* Japanese only

Settings Date & Time

From ► Main Menu ► Settings ► Date & Time

Setting/Operation	Default
■ Set Date and Time* > <i>Date & Time</i> → Enter year, date, time and time zone	—
■ World Clock > <i>World Clock</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i> ,  to select an area)	OFF
■ Daylight Savings Time > <i>Daylight Savings</i> → <i>ON</i> or <i>OFF</i>	OFF
■ Set Alarm Action while Other Functions are Active > <i>Alarm Tone</i> → <i>Operation Preferred</i> or <i>Alarm Preferred</i>	Alarm Preferred
■ Auto-Time Correction via Yahoo! Keitai > <i>Time Correction</i> → <i>ON</i> or <i>OFF</i>	ON

* Date & Time Settings effective on handset: from 09:00 on 2000/01/01 to 23:59 on 2037/12/31 (when time zone is set to GMT+9).

Settings Call Settings

Call Time & Call Cost

From ► Main Menu ► Settings ► Call Settings


Setting/Operation	Default
■ View Call Time/Cost¹ > <i>Call Time/Cost</i>	—
■ Reset Total Call Charge/Time > <i>Reset</i> → Enter Phone Password → <i>Reset Total Duration</i> or <i>Reset Total Cost</i> → <i>YES</i> (→ For <i>Reset Total Cost</i> , enter PIN2)	—
■ Set Charge Limit² > <i>Set Max Cost Limit</i> → <i>ON</i> → Enter charge limit → Enter PIN2	OFF


¹ May not be available depending on subscription status. In that case, Set Max Cost Limit is not available.

² When set to *ON*, incoming/outgoing calls including emergency number calls are not dialable if charge limit is reached.

Making & Receiving Calls

From ► Main Menu ► Settings

Setting/Operation	Default
■ Change Earpiece Volume > <i>Call Settings</i> → <i>Volume</i> →  to adjust volume	Level 4

<ul style="list-style-type: none"> ■ Set Handset Response when Closed during Call > <i>Call Settings</i> → <i>Closing Clamshell</i> → Select an item* 	End the Call
<ul style="list-style-type: none"> ■ Hold Tone > <i>Call Settings</i> → <i>Hold Tones</i> → <i>On-hold Tone</i> or <i>Holding Tone</i> → Select a tone 	On-hold Tone: On-hold Tone 1 Holding Tone: JESU JOY OF MAN'S
<ul style="list-style-type: none"> ■ Noise Reduction > <i>Call Settings</i> → <i>Noise Reduction</i> → <i>ON</i> or <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Alarm Signal (Tone Sounds before Call is Disconnected) > <i>Call Settings</i> → <i>Quality Alarm</i> → Select an item 	High Tone
<ul style="list-style-type: none"> ■ Reconnect Signal (Tone Sounds until Line is Reconnected) > <i>Call Settings</i> → <i>Reconnect Signal</i> → Select an item 	High Tone
<ul style="list-style-type: none"> ■ Call Service Numbers (Service currently unavailable) > <i>Call Settings</i> → <i>Service Numbers</i> → Select a service number →  	—
<ul style="list-style-type: none"> ■ Specify Phone Book Entry to Call with Earphone > <i>Phone Settings</i> → <i>Headset Switch to Call</i> → <i>Voice Call</i> → Search Phone Book → Select an item 	OFF

* When **Hold Call** is selected: **Speaker ON** (Hold tone sounds from speaker)/**Speaker OFF** (Hold tone does not sound from speaker)

Settings Notification Light

From ► **Main Menu** ► **Settings** ► **Notification Light**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set by Incoming Type (Voice/Video Calls or Messages) > <i>Incoming</i> → <i>Select Color</i> → Select a type → Select a color 	(☞ P.18-27)
<ul style="list-style-type: none"> ■ Change Color Name for Incoming Call/Message > <i>Incoming</i> → <i>Color</i> → <i>Edit Color Name</i> → Select a color → Edit color name 	—
<ul style="list-style-type: none"> ■ Adjust Color Tone for Incoming Call/Message > <i>Incoming</i> → <i>Color</i> → <i>Adjust Color Tone</i> → Select a color → Adjust color tone 	—
<ul style="list-style-type: none"> ■ Set for Missed Calls/New Messages > <i>Missed Call/Unread</i> → Select an item or <i>OFF</i> 	OFF after 24hours
<ul style="list-style-type: none"> ■ Custom Set Notification Light > Select a function → <i>ON</i> or <i>OFF</i>, or select a color 	—
<ul style="list-style-type: none"> ■ View Status* > <i>Confirm Status</i> 	—

* View Notification Light settings for incoming calls/messages, engaged calls.

Settings Text Entry

Text Entry Method

From ► **Main Menu** ► Settings ► Phone Settings
► Text Entry Method

Setting/Operation	Default
■ Character Input Method > <i>CHG Input Method</i> → 5-touch or 2-touch	5-touch
■ Show/Hide Predictive Candidates and Context Forecast > <i>Predict</i> → ON or OFF	ON
■ Reset Learned Words > <i>Reset Learned Words</i> → Enter Phone Password → YES	—

Conversion

From ► Text entry window, [?][Menu] ► Text entry setting

Setting/Operation	Default
■ Show/Hide Predictive Candidates and Context Forecast > <i>Prediction OFF</i>	Prediction ON
■ Fix Entered Characters Automatically > <i>Character set time</i> → Select a speed	OFF

Conversion Settings for Messaging

From ► **Main Menu** ► Messaging ► Settings
► Universal Settings

Setting/Operation	Default
■ Pre-text Predict > <i>Pre-text Predict</i> → ON or OFF	ON
■ Prediction for Message Reply > <i>Pred. Conv. at Reply</i> → ON or OFF	OFF

Settings Phone Book

From ► Main Menu ► Phone ► Settings

Setting/Operation	Default
■ Save Location for New Entry > <i>Save Settings</i> → Select an item	Phone
■ Search Method > <i>Search Method</i> → Select a method	A-KA-SA-TA-NA/ Reading
■ Font Size > <i>Font Size</i> → <i>Phone Book</i> or <i>Call Log</i> → Select a size	Standard
■ Forwarding Phone Book Entry Images > <i>Forwarding Image</i> → <i>ON</i> or <i>OFF</i>	ON*

* If *ON* is selected, images can be forwarded via Infrared, IC transmission or Bluetooth®.

Settings Voice Dial

From ► Main Menu ► Settings ► Phone Settings
► Voice Settings

Setting/Operation	Default
■ Auto Voice Dial > <i>Auto Voice Dial</i> → <i>ON</i> or <i>OFF</i>	OFF
■ Set Voice Dial via Earphone or Bluetooth® Device > <i>Voice Earphone Dial</i> → <i>ON</i> or <i>OFF</i>	OFF

Settings Video Call

Function Menus

From ► Main Menu ► Settings ► Video Call

Setting/Operation	Default
■ Incoming Image Quality > <i>Incoming Video Qlty</i> → Select an item	Standard
■ Outgoing Image > <i>Select Images</i> → Select a category → Highlight <i>Original</i> → [Menu] → <i>Change setting</i> → Select a folder → Select a file → [Play]	Pre-installed
■ Earpiece On/Off > <i>Loud Speaker</i> → <i>ON</i> or <i>OFF</i>	ON
■ Switch to Voice Call when Video Call Fails > <i>Voice Call Auto Redial</i> → <i>ON</i> or <i>OFF</i>	OFF
■ Toggle Outgoing/Incoming Image Setting > <i>Switch Images</i> → Select an item	Receiving Priority

Engaged Video Call Settings

From During a Video Call, [Menu] V. Call settings

Setting/Operation	Default
<p> Incoming Image Quality <i>IncomingVideo Qlty</i> → Select an item</p>	Standard
<p> Brightness <i>Brightness</i> → Select a brightness level</p>	0
<p> Adjust Outgoing Image Color Tone to Lighting Conditions <i>White balance</i> → Select an environment</p>	Automatic
<p> Outgoing Image Color Tone <i>Color mode set</i> → Select a color tone</p>	Normal
<p> Image Quality in Low Light Conditions <i>Night mode</i> → <i>ON</i> or <i>OFF</i></p>	OFF
<p> Set Focus <i>Focus</i> → Select a focus type</p>	Landscape

Settings Digital TV

From **Main Menu** **TV** **User Settings**

Setting/Operation	Default
<p> Change Display Setting <i>Display/Operation</i> → <i>V. img/Caption Setting</i> → Select an item</p>	V. img+ Caption+ DBC
<p> Change Caption Position in Wide Screen <i>Display/Operation</i> → <i>Caption Posit. in W-scr</i> → <i>Upper</i> or <i>Lower</i></p>	Lower
<p> Show/Hide Indicators in Wide Screen <i>Display/Operation</i> → <i>Icons</i> → <i>ON</i> or <i>OFF</i></p>	ON
<p> Ticker Setting for Incoming Mail Notification <i>Display/Operation</i> → <i>Mail Ticker Display</i> → Select an item</p>	Receipt Notification
<p> End TV when Handset is Closed <i>Display/Operation</i> → <i>Work When Folded</i> → Select an item</p>	Maintain (Continue Viewing)
<p> Auto-adjust Frame Rate <i>Video</i> → <i>Mobile W-Speed</i> → <i>ON</i> or <i>OFF</i></p>	ON
<p> Image Quality <i>Video</i> → <i>Image Quality</i> → Select an item</p>	Dynamic
<p> Set Backlight Duration while Watching TV <i>Display Light</i> → <i>Lighting Duration</i> → Enter duration (min.)</p>	Constant Light
<p> Auto-adjust (Increase) Volume <i>Sound Effect</i> → <i>Auto Volume</i> → <i>ON</i> or <i>OFF</i></p>	ON

<p>■ Sound Remaster for Earphone or Bluetooth® Device > <i>Sound Effect</i> → <i>Remaster</i>¹ → <i>ON</i> or <i>OFF</i></p>	OFF
<p>■ Listening Effect for Earphone or Bluetooth® Device > <i>Sound Effect</i> → <i>Listening</i>¹ → Select an item</p>	OFF
<p>■ Change Sound Quality for Earphone or Bluetooth® Device > <i>Sound Effect</i> → <i>Equalizer</i>¹ → Select an item</p>	Normal
<p>■ Record Program when Battery Runs Low > <i>Recording</i> → <i>Rec. When Low Battery</i> → <i>Continue Recording</i> or <i>Stop Recording</i></p>	Continue Recording
<p>■ Auto-record TV when Interrupted by Call > <i>Recording</i> → <i>Rec. Program When Call</i> → <i>ON</i> or <i>OFF</i></p>	OFF
<p>■ Download Images from Data Broadcast Sites > <i>Data Broadcasting</i> → <i>Images</i> → <i>ON</i> or <i>OFF</i></p>	ON
<p>■ Set Sound On/Off for Data Broadcast Sites > <i>Data Broadcasting</i> → <i>Sound Effect</i> → <i>ON</i> or <i>OFF</i></p>	ON
<p>■ Show Confirmation for Data Broadcast > <i>Data Broadcasting</i> → <i>Reset Settings</i> → <i>YES</i></p>	—
<p>■ Set Power Saving Mode² > <i>ECO Mode</i> → <i>YES</i></p>	OFF
<p>■ Reset Channel List > <i>Reset Channel Setting</i> → Enter Phone Password → <i>YES</i></p>	—

<p>■ Delete Information in Broadcasting Storage Area > <i>Reset Storage Area</i> → (Highlight an affiliated channel →) (☒) [Menu] → <i>Delete</i> → <i>Delete this</i> or <i>Delete all</i> (→ For <i>Delete all</i>, enter Phone Password) → <i>YES</i></p>	—
<p>■ Reset TV Settings > <i>Reset TV Settings</i> → Enter Phone Password → <i>YES</i></p>	—
<p>■ Check TV Settings > <i>Check TV Settings</i></p>	—

¹ Remaster/Listening/Equalizer Settings: ☞ P.5-7

² To cancel ECO Mode, perform same operation. When ECO Mode is set, following settings automatically activate and cannot be changed. When canceled, original settings return.

Mobile W-Speed: OFF

Image Quality: Normal

Remaster: OFF

Listening: OFF

Equalizer: Normal

Settings Camera

- Change settings before capturing images. (☞ P.6-4).
- Some settings are not available depending on camera mode, image size or photo mode.

Camera Settings

- Most operation descriptions are based on Digicam mode in Normal Position. Actual screenshots and operations may differ from Viewer Position or Photo mode/Action mode.

Digicam Mode

From ► **Main Menu** ► **Camera** ► **Digicam Mode**
► [Menu]

Photo Mode

From ► **Main Menu** ► **Camera** ► **Photo Mode**
► [Menu]

Action Mode

From ► **Main Menu** ► **Camera** ► **Photo Mode**
► [Menu] ► **CHG camera-mode**
► **Action mode** ► [Menu]

Setting/Operation	Default
Photo Mode > Photo mode (☞ P.6-14)	Digicam mode/ Photo mode: iA (Intelligent Auto) Action mode: Normal
Change Image Size > Image size → Select a size	Digicam mode: 2M Wide Photo mode: Stand-by (480x854) Action mode: VGA(480x640)
Image Quality > (Camera settings →) ¹ Image QLTY → Select an item	Super fine
Change Continuous Shooting Setting² > Cont. set. (☞ P.6-12)	—
Photo Light > Photo light → ON or OFF	OFF
Focus Setting > (Camera settings →) ¹ Focus → Select an item	Camera mode: FaceDetect Action mode: Auto
Brightness > (Camera settings →) ¹ Brightness → Select a level	±0
Adjust Color Balance According to Lighting Conditions > (Camera settings →) ¹ White BAL → Select an item	Auto

<p>■ Color Mode > (Camera settings →)¹ Color mode → Select an item</p>	Normal
<p>■ Save Location > (Storage setting →)¹ Store in → Phone or microSD</p>	Phone
<p>■ Auto Shutter³ > AutoShutter (👉 P.6-13)</p>	OFF
<p>■ Touch AF/AE (in Viewer Position) > TouchAF/AE → Valid or Invalid</p>	Valid
<p>■ Set Auto Timer > Auto timer (👉 P.6-12)</p>	OFF
<p>■ ISO Sensitivity^{3 5} > ISO setting → Select an item</p>	1600 auto
<p>■ Viewfinder Display Pattern³ > Kisekae → Pattern 1 or Pattern 2</p>	Pattern 1
<p>■ View Image before Saving³ > Auto review → Select a time, OFF or Hold</p>	2 seconds
<p>■ Camera Mode > Camera-mode → Select a mode</p>	—
<p>■ Image Stabilizer⁴ > Camera settings → Img. stabilizer → Auto or OFF</p>	Auto
<p>■ Add Frames⁴ > Camera settings → Shoot with frame → ON → Select an frame → Capture an image</p>	OFF

<p>■ Shutter Click Sound¹ > Camera settings → Shutter sound → Select an item</p>	Sound 1
<p>■ Minimize Flicker while Shooting near Fluorescent Light¹ > Camera settings → Flicker correction → Select an item</p>	Automatically
<p>■ Auto-Save¹ > Storage setting → Auto save set → ON or OFF</p>	ON
<p>■ Viewfinder Size¹ > Display size → Actual size or Fit in display</p>	Actual size
<p>■ Display Indicators¹ > Icon → ON or OFF</p>	ON
<p>■ Memory Information¹ > Memory Status</p>	—

¹ Photo mode/Action mode only

² Digicam mode/Action mode only

³ Digicam mode only

⁴ Photo mode only

⁵ When ISO setting is set to **1600 auto** or higher, image size is reduced to less than 3M.

Video Camera Settings

From **Main Menu** ► **Camera** ► **Video Camera**
 ► [Menu]

Setting/Operation	Default
Camera Mode > <i>CHG camera-mode</i> → Select a mode	—
Photo Mode > <i>Photo mode</i> (☞ P.6-14)	Normal
Image Size > <i>Image size</i> → Select a size	QVGA (320x240)
Recording Time > <i>File size setting</i> → Select an item	Mail restrict'n (L)
Brightness > <i>Camera settings</i> → <i>Brightness</i> → Select a level	±0
Adjust Color Balance According to Lighting Conditions > <i>Camera settings</i> → <i>White balance</i> → Select an item	Auto
Color Mode > <i>Camera settings</i> → <i>Color mode set</i> → Select an item	Normal
Focus Setting > <i>Camera settings</i> → <i>Focus</i> → Select an item	Face Detection
Image Quality > <i>Camera settings</i> → <i>Image quality</i> → Select an item	Super fine
Image Stabilizer > <i>Camera settings</i> → <i>Img. stabilizer</i> → <i>Auto</i> or <i>OFF</i>	Auto

Shutter Click Sound > <i>Camera settings</i> → <i>Shutter sound</i> → Select an item	Sound 1
Minimize Flicker while Shooting near Fluorescent Light > <i>Camera settings</i> → <i>Flicker correction</i> → Select an item	Automatically
Save Location* > <i>Storage setting</i> → <i>Store in</i> → <i>Phone</i> or <i>microSD</i>	Phone
Auto-Save* > <i>Storage setting</i> → <i>Auto save set</i> → <i>ON</i> or <i>OFF</i>	ON
Photo Light > <i>Photo light set.</i> → <i>ON</i> or <i>OFF</i>	OFF
Auto Timer > <i>Auto timer</i> (☞ P.6-12)	OFF
Audio Recording > <i>Movie type set</i> → <i>Normal</i> or <i>Video</i>	Normal
Viewfinder Size > <i>Display size</i> → <i>Actual size</i> or <i>Fit in display</i>	Actual size
Mail Attachment Mode > <i>Attach msg. mode</i> → <i>YES</i>	—
Display Indicators > <i>Icon</i> → <i>ON</i> or <i>OFF</i>	ON
Memory Information > <i>Memory Status</i>	—

* When File size setting is set to **Long time**, save location is set to microSD.

Settings Mobile Widget (Japanese)

From ► Main Menu ► Widget ► Settings

Setting/Operation	Default
■ Auto Update > <i>Auto Refresh</i> → Select an item	8 hours
■ Auto Roaming > <i>Auto Roaming</i> → ON or OFF	OFF
■ Show/Hide Confirmation when Roaming Abroad > <i>Roaming Notification</i> → ON or OFF	ON
■ Cookies Sending/Receiving > <i>Cookies</i> → ON or OFF	ON
■ Delete Cookies > <i>Delete Cookies</i> → YES	—
■ Pointer Speed > <i>Pointer Speed</i> → Select a speed	Medium Speed

Settings S! Quick News (Japanese)

From ► Main Menu ► News/Entertainment
 ► S! Quick News ► Settings

Setting/Operation	Default
■ Auto Update Quick News^{1 2} > <i>Auto Refresh</i> → S! Quick News → Select an item	1 hour
■ Auto Update General News (Once a day) > <i>Auto Refresh</i> → General → ON or OFF	ON ^{1 2}
■ Auto Update Special News (Every four hours)^{1 2} > <i>Auto Refresh</i> → Special → ON or OFF	OFF
■ Delete All S! Quick News Information > <i>Del S! Quick News List</i> → YES → Enter Phone Password	—
■ Show/Hide Only Unread Items in Standby > <i>S! Quick News Settings</i> → Unread/Read Setting → Unread or Unread + Read	Unread + Read
■ Marquee Speed > <i>S! Quick News Settings</i> → Display Speed → Select a speed	Normal
■ Image Download > <i>Image Display</i> → ON or OFF	OFF

¹ If calls are in progress at update time, auto update does not occur until next update.

² Video Calls are rejected during auto update.


Settings Bluetooth®

From ► **Main Menu** ► **Tools** ► **Bluetooth**
► **My Devices Settings**

Setting/Operation	Default
■ Authentication/Encryption Setting for Phone Book Transfer > <i>Set Authentications</i> → ON or OFF (→ For ON , ON or OFF)	OFF/OFF
■ Password Entry for Sending All Phone Book Entries > <i>Session Number Setting</i> → ON or OFF	OFF
■ Duration to Search for Bluetooth® Devices > <i>Time-out to Search</i> → Enter duration (sec.)	05 sec
■ Ringtone Output to Headset/Handsfree Device > <i>Forward Ring Tone</i> → ON or OFF	ON
■ End Calls when Bluetooth® Headset/Handsfree Device Disconnects > <i>Disconnection Settings</i> → End the Call or Continue on the Phone	End the Call
■ Dial from Handset (When Headset Device is Connected) > <i>Dial from Handset</i> → Activate or Deactivate	Activate
■ Always Use Handsfree Device to Make/Receive Calls > <i>Handsfree Setting</i> → Handsfree Mode	Private Mode ¹
■ Bluetooth® Properties > <i>Device Properties</i> ²	—

¹ In **Private Mode**, device that makes/answers call takes priority.

² Device name, address, class and supported services appear.

To change device name:  **[Edit]**

Settings Messaging

Universal Settings

From **Main Menu** ► **Messaging** ► **Settings**
 ► **Universal Settings**

Setting/Operation	Default
Font Size¹ > <i>Message Display</i> → <i>Font Size</i> → Select a size	Normal
Scroll Unit in Text Entry/Preview Window > <i>Message Display</i> → <i>Scroll Unit</i> → Select an item	Single Line
Quote Original Message in Reply > <i>Quote Message</i> → Check items → [Finish]	SMS: OFF S! Mail/ PC Mail: ON
Attachment Size² > <i>Image Compression</i> → Select a size or <i>OFF</i>	500KB
Request Delivery Confirmation (Compatible only with SoftBank handset numbers) > <i>Delivery Report</i> → <i>ON</i> or <i>OFF</i>	OFF
Anti-Spam Measures > <i>Anti-Spam Measures</i> → <i>Report Spam</i> → [Edit] → Edit recipient address → [Finish] → <i>YES</i>	stop@meiwaku. softbankmobile. co.jp

Reset Anti-Spam Measures > <i>Anti-Spam Measures</i> → <i>Report Spam</i> → [Y] [Menu] → <i>Reset Address</i> → [Finish] → <i>YES</i>	—
Auto Delete (For Sent/Unsent) > <i>Auto Delete</i> → <i>Auto Sent Msg Del</i> → <i>ON</i> or <i>OFF</i>	ON
Auto Delete (For Incoming Mail) > <i>Auto Delete</i> → <i>Auto Received Msg Del</i> → Select an item	ON (All Msg)
Show/Hide Incoming Mail Notification during Handset Operations > <i>Receiving Settings</i> → <i>Receiving Display</i> → <i>Alarm Preferred</i> or <i>Operation Preferred</i>	Alarm Preferred
Incoming Mail Display > <i>Receiving Settings</i> → <i>Sender Display</i> → <i>ON</i> or <i>OFF</i>	ON
Outgoing Mail Notification > <i>Sending Display</i> → <i>ON</i> or <i>OFF</i>	ON
Auto Resend Unsent Messages > <i>Auto Resend</i> → <i>ON</i> or <i>OFF</i>	ON

¹ Character size in SMS or S! Mail subject field does not change. Check preview to see actual size.

² JPEG files only

S! Mail Settings

From **Main Menu** ► **Messaging** ► **Settings**
 ► **S! Mail Settings**

Setting/Operation	Default
■ Set Reply-to Address > <i>Sending Options</i> → <i>Set Reply-To</i> → <i>ON</i> → Select reply-to address entry field → Select a reply-to address or enter directly → [Finish]	OFF
■ Auto Signature > <i>Sending Options</i> → <i>Set Signature</i> → <i>ON</i> , <i>ON When New</i> or <i>OFF</i> (→ For <i>ON</i> or <i>ON When New</i> , select signature entry field → Enter signature → [Finish])	OFF
■ Maximum Outgoing Message Size > <i>Sending Options</i> → <i>Create Msg. Size</i> → <i>300KB</i> or <i>2MB</i>	2MB
■ Set Preference for Amount of Pictographs in AutoArt > <i>Sending Options</i> → <i>AutoArt Settings</i> → <i>Amount of Pictograph</i> → Select an item	Standard
■ Font Color Function (AutoArt) > <i>Sending Options</i> → <i>AutoArt Settings</i> → <i>Font Color</i> → <i>ON</i> or <i>OFF</i>	OFF
■ Font Size Function (AutoArt) > <i>Sending Options</i> → <i>AutoArt Settings</i> → <i>Font Size</i> → <i>ON</i> or <i>OFF</i>	OFF

■ Background Color Function (AutoArt) > <i>Sending Options</i> → <i>AutoArt Settings</i> → <i>Background Color</i> → <i>ON</i> or <i>OFF</i>	ON
■ Maximum Incoming Message Size > <i>Incoming Options</i> → <i>Download Size Limit</i> → <i>300KB</i> or <i>2MB</i>	2MB
■ Auto Retrieval > <i>Incoming Options</i> → <i>Auto Retrieve Size</i> → Select an item	Up to 1MB
■ Limit Auto-retrieval by Message Type > <i>Incoming Options</i> → <i>Auto Retrieve for</i> → <i>Selected Messages</i> → <i>Address Stored in PB</i> or <i>SoftBank Domain Only</i> ¹ → [Finish]	All Messages
■ Auto-play Attached Music Files ² > <i>Incoming Options</i> → <i>Auto Sound Play</i> → <i>ON</i> or <i>OFF</i>	OFF

¹ Including messages received from Disney Mobile

² When multiple sound files are attached, the first file plays.

PC Mail Settings

From ► Main Menu ► Messaging ► Settings
► PC Mail Settings

Setting/Operation	Default
■ Auto-retrieve for New Messages > <i>Check New Mail</i> → <i>Auto Check</i> → Select an account (<input type="radio"/> to toggle ON/OFF) → [Finish]	ON*
■ Set Auto-retrieve Interval/Condition > <i>Check New Mail</i> → <i>Check Interval</i> → Select an item	2 hours
■ Auto-retrieve (while Abroad) > <i>Check New Mail</i> → <i>Auto Check in Roaming</i> → <i>ON</i> or <i>OFF</i>	OFF
■ Disable Auto-retrieval between Set Time Period > <i>Check New Mail</i> → <i>Inactivate Time</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i> , enter time)	ON (Start time: 22:00/End time: 06:00)

* Setting automatically turns **ON** once account is registered.

SMS Settings

From ► Main Menu ► Messaging ► Settings
► SMS Settings

Setting/Operation	Default
■ Change SMS Center Number* > <i>Message Center</i> → <input type="radio"/> [Select] → Enter SMS Center number → [Finish]	+819066519300
■ Default Text Entry Language > <i>Set Input Character</i> → <i>Japanese (70 char.)</i> or <i>English (160char.)</i>	Japanese (70char.)

* Do not change Message Center number unless instructed so by SoftBank. Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings/Memory Manager

Yahoo! Keitai

From ► Main Menu ► Yahoo! ► Set Yahoo! Keitai

PC Site Browser

From ► Main Menu ► Yahoo! ► PC Site Browser
► Set PC Site Browser

Direct Browser

From ► Main Menu ► Yahoo! ► Direct Browser
► Set Direct Browser

Setting/Operation	Default
■ Font Size > <i>Font Size</i> → Select a size	Normal
■ Scroll Unit > <i>Scroll Unit</i> → Select an item	Single Line
■ Images On/Off > <i>Downloads</i> → <i>Display Image</i> → ON or OFF	ON
■ Sound On/Off > <i>Downloads</i> → <i>Play Sounds</i> → ON or OFF	ON
■ Change Pointer (Scroll) Speed¹ > <i>Pointer Speed</i> → Select a speed	Medium Speed

■ Show/Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai² > <i>Warning Messages</i> → <i>PC Site Browser</i> (when activating) or <i>Yahoo! Keitai</i> (when switching) → ON or OFF	ON
■ Clear Cache > <i>Memory Manager</i> → <i>Clear Cache</i> → YES	—
■ Delete Cookies > <i>Memory Manager</i> → <i>Delete Cookies</i> → YES	—
■ Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → <i>Delete Certificates</i> → YES	—
■ Set Data Storage Location to microSD Card³ > <i>Save Settings</i> → <i>Phone</i> or <i>microSD</i>	Phone

¹ PC Site Browser/Direct Browser only

² PC Site Browser only

³ Yahoo! Keitai Browser only

Security Settings

Yahoo! Keitai

From ► **Main Menu** ► **Yahoo!** ► **Set Yahoo! Keitai**
 ► **Security**

PC Site Browser

From ► **Main Menu** ► **Yahoo!** ► **PC Site Browser**
 ► **Set PC Site Browser** ► **Security**

Direct Browser

From ► **Main Menu** ► **Yahoo!** ► **Direct Browser**
 ► **Set Direct Browser** ► **Security**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Auto Send Manufacturer's Number (for Authentication)¹ > <i>Manufacture Number</i> → ON or OFF 	ON
<ul style="list-style-type: none"> ■ Referer Information > <i>Send Referer</i> → ON or OFF 	ON
<ul style="list-style-type: none"> ■ Cookie Storage > <i>Cookies</i> → Select an item 	ON
<ul style="list-style-type: none"> ■ Script Execution in PC Site/Direct Browser² > <i>Script</i> → Select an item 	ON
<ul style="list-style-type: none"> ■ View Server Certificates Issued by Certificate Authorities > <i>Root Certificates</i> → Select an item 	—

<ul style="list-style-type: none"> ■ Authentication Information > <i>Certificate Retention</i> → Select an item 	Keep While Browsing
<ul style="list-style-type: none"> ■ Show/Hide Confirmation when Connecting to Secure Site > <i>Secure Prompt</i> → ON or OFF 	ON

¹ Yahoo! Keitai Browser/PC Site Browser only

² PC Site Browser/Direct Browser only

Reset

Yahoo! Keitai

From ► **Main Menu** ► **Yahoo!** ► **Reset**

PC Site Browser

From ► **Main Menu** ► **Yahoo!** ► **PC Site Browser**
 ► **Reset**


Direct Browser

From ► **Main Menu** ► **Yahoo!** ► **Direct Browser** ► **Reset**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Reset Browser Settings > <i>Restore Defaults</i> → YES → Enter Phone Password 	—
<ul style="list-style-type: none"> ■ Initialize Browser > <i>Initialized Browser</i> → YES → Enter Phone Password 	—

Settings S! Appli

From ► Main Menu ► S! Appli ► S! Appli Settings

Setting/Operation	Default
■ Volume > <i>Volume</i> →  to adjust volume	Level 4
■ Backlight On/Off ¹ > <i>Display Backlight</i> → Select an item	Follow General Setting ²
■ Vibration > <i>Vibration</i> → <i>ON</i> or <i>OFF</i>	ON
■ Update S! Appli Information on microSD Card from Another Handset > <i>Synchronize microSD</i>	—

¹ Backlight does not go out completely when S! Appli is active.

² Back Light Time setting (☞ P.18-5) applies.

Settings Osaifu-Keitai®

From ► Main Menu ► Tools ► Osaifu-Keitai
► IC Card Settings

Setting/Operation	Default
■ View IC Card Status > <i>IC Card Status</i>	—
■ Set Handset Response to Commands from Reader/Writer > <i>Interface Settings</i> → Enter Phone Password → Select an item → <i>ON</i> or <i>OFF</i>	All ON

Settings S! GPS Navi Settings

From ► **Main Menu** ► **Tools** ► **S! GPS Navi**
 ► **NAVI Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Select Navi Appli to Activate > <i>Select Navi Appli</i> → Select a Navi Appli 	NAVITIME
<ul style="list-style-type: none"> ■ Save Current Map URL > <i>Map URL Settings</i> → Highlight <Not Recorded> → [Edit] → <i>URL Name</i> → Enter a name → <i>Map URL</i> → Enter a URL ("http://" or "https://") → [Finish] 	—
<ul style="list-style-type: none"> ■ Select Map URL > <i>Map URL Settings</i> → Select a name 	NAVITIME
<ul style="list-style-type: none"> ■ Edit/Delete Map URL* > <i>Map URL Settings</i> → Highlight a name → [Menu] → <i>Edit</i> or <i>Delete</i> 	—
<ul style="list-style-type: none"> ■ Positioning Lock On/Off > <i>Positioning Lock</i> → Enter Phone Password → <i>ON</i> or <i>OFF</i> 	OFF
<ul style="list-style-type: none"> ■ Show/Hide Confirmation when Sending Location Information > <i>Send Location Info</i> → Enter Phone Password → <i>Send with Check</i> (Show confirmation every time) or <i>Send without Check</i> (Send location information without showing confirmation) 	Send with Check

<ul style="list-style-type: none"> ■ Show/Hide Notification of Incoming Location Provision Request > <i>Notification Setting</i> → Enter Phone Password → <i>ON</i> or <i>OFF</i> 	ON
<ul style="list-style-type: none"> ■ Set Positioning Ringtone/Vibrator/Ringtone Duration > <i>Recv Location Request</i> → <i>Ringtone</i>, <i>Vibration Alert</i> or <i>Ringtone Duration</i> → Set individual item 	Ringtone: Pattern 2 Vibrator Alert: Pattern 1 Ringtone Duration: 05 seconds

* Pre-installed NAVITIME cannot be edited or deleted.

Default Settings

Default settings vary by handset color as below.

- For operations, refer to respective setting sections.

Setting		White	Black	Pompadour Pink	Gold	
Notification Light (☞ P.18-10)	Incoming	Voice Call	A-Signal	B-Signal	C-Signal	D-Signal
		Video Call	A-Signal	B-Signal	C-Signal	D-Signal
		Message	A-Rhythm	B-Rhythm	C-Rhythm	D-Rhythm
Display Settings (☞ P.18-3 to 7)	Stand-by Display (Normal Position)	White 1	Black 1	Pink 1	Gold 1	
	Stand-by Display (Viewer Position)	White 2	Black 2	Pink 2	Gold 2	
	Outgoing Image (Call/Message)	White	Black	White	Gold	
	Incoming Image (Call/Message)	White	Black	White	Gold	
	Menu Icons	White	Black	Pink	Gold	
	Color Scheme	White	Black	Pink	Gold	

Confirming Settings

Main Menu ► Settings ► Phone Settings
► Confirm Settings

■ Confirmable Settings

- Back Light Time
 - View Blind
 - Volume
 - Shikkari Talk
 - Noise Reduction
 - Select Network
 - Work with Style
 - Motion Control Setting
- ★ appears for items changed from default settings.