| Accessing Functions | 2-2 |
|---------------------------------------|------|
| Main Menu | 2-3 |
| Using Simplified Menus (Simple Me | nu) |
| | 2-4 |
| Shortcuts Menu & Key Shortcut | 2-5 |
| Toggling Active Functions (Multi Job) | .2-6 |
| Standby Shortcuts | 2-7 |
| Motion Control | 2-8 |

| Illumi Display | 2-10 |
|-------------------------------------|-------|
| Customizing Illumi Display Settings | .2-10 |
| Mobile Manners | 2-12 |
| Security Codes | 2-13 |
| Basic Tools | 2-14 |
| My Details & Basic Tools | .2-14 |
| Double Number | 2-15 |
| Using Double Number | .2-15 |
| Modes | .2-16 |
| Additional Functions | 2-18 |

2

Basic Operations



Accessing Functions

Use the following methods as needed.



2-2

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.

Main Menu

Menu Item Selection



Ó Camera Entertainmen Media Data Folde Widget

Main Menu opens.



闷 🚱 Select menu item 🕈 💽

1505

SI Apoli

| ۳. | 1505 |
|----------------------|------------------------|
| To | ols |
| PIM/Lite Click/Gauge | Doc./Rec. Cornectivity |
| 🥫 Calendar | |
| 🖿 Exchange | Profile |
| 👮 Alarms | |
| 🐗 Wakeup TV | 1 |
| 😔 Relaxatic | n Time |

- Menu/window opens.
- If Sub Menu opens, use 🔇 to select an item and press ().

Tabs

• Menus/lists in a single window appear on separate tabs; use 📀 to toggle tabs.



Reverse Navigation

• Press . If a confirmation appears, follow onscreen prompts.

Returning to Standby

• Press . If a confirmation appears, follow onscreen prompts.

Simple Menu

· Simplify menus and enlarge fonts; ideal for users who use only basic handset functions.

|--|

| Messaging | Open/create messages, etc. | |
|---------------|---|--|
| Yahoo! | Browse the Internet | |
| S! Appli | Use S! Applications including games | |
| Entertainment | Read e-Books, receive news updates, etc. | |
| Camera | Capture images or record video | |
| Media | Play/download media files | |
| Tools | Manage schedules, set Alarm, scan QR Codes, etc. | |
| Data Folder | ata Folder Open files saved on handset/Memory Card | |
| Widget | Use Mobile Widgets | |
| TV | Watch/record TV programs | |
| Phone | Search contacts, add entries, etc. | |
| Settings | Customize handset interface, sounds, etc. | |



Using Simplified Menus (Simple Menu)

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.



- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).

Menu Items

| Messaging | Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS |
|--------------------|---|
| Phone | Phone Book, Add New Entry, Call Log, Play Messages, Answer Phone, Call Voicemail, My Details, Speed Dial/Mail |
| Camera | Photo Camera, Video Camera, Hand Mirror, Scan Barcode, Scan Card, Kanji Grabber, Review |
| Convenient Tool | Calendar, Exchange Profile, Alarms, Calculator, Assignment, Dictionary, Notepad, S! GPS Navi, Pedometer, Compass, S! Friend's Status, S! Circle Talk, Double Number, Change Menu |
| Data Folder | - |
| TV | - |

Key assignments are largely the same as those in Standard Menu.

Activating Simple Menu



🦻 Simple Menu 🕈 💽

While Using an Incompatible Function

• End the function before activating Simple Menu.

Canceling Simple Menu

(Long) ➡ Standard Menu ➡ ●



Basic Operations

Shortcuts Menu & Key Shortcut

Shortcuts Menu

Access assigned functions via Shortcuts menu.



Advanced

Key Shortcut

In Standby, Long Press (2), 😨 or (2) to access assigned functions.

Open S! Mail Composition window (⊠) () Open PC Site Browser menu Open Exchange Profile menu \bigcirc \odot Activate/cancel Bluetooth® 0 Activate/cancel Infrared (Y) Activate Familink Remote



Follow these steps to assign Calculator to () (Long Press):

- 🕈 Settings 🕈 🕈 📀 Phone/
- Set Key Shortcut 🜩 🖲
- Long press 🔘 🕈 💽
- From Appli Þ 🖲



Tools ♦ ● ♦ In PIM/Life menu. *Calculator* \Rightarrow \bigcirc

Bookmark

In (a). From Bookmark 🕈 💿 🜩 Select title \Rightarrow (\bullet) \Rightarrow Yes \Rightarrow (\bullet) Infrared, Show Secret Data, Etc. On/Off In (4), From Other (•) (•) Select item 🗭 🖲 **Canceling Assigned Function** In (2). Off 🌩 🔘



Toggling Active Functions (Multi Job)

1505 💷

接索

FUK"

論 Res Z/STA-MANA

映画 動画

Basic Operations

Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet



Using Multi Job







Multi Job ends Ô

• If a confirmation appears, follow onscreen prompts.

Jot down information

 Multi Job may not activate from some menus/ windows (e.g., ringtone/ringvideo selection, etc.).



2-6

Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.







Select item

(

)

- Corresponding icon appears.
- >> appears when more items are available.



Saving from Menu/Window

- In Options menu, select Set as StbyShortcut (may not appear for some items): select sheet as needed.
- Using Pointer
- After 1, Long Press (*) to activate pointer navigation; select widgets, etc. (To cancel pointer navigation. Long Press (2).)

Using Shortcuts



🜔 🗭 😳 Select icon 🗭 🗩

 Menu/window opens or command is executed.

Toggling Sheets

Toggle sheets to use Standby Shortcuts and widgets pasted on each sheet.



- To toggle further, press (*) or (*).
- Sheet name appears at the top, then disappears.
- Save Standby Shortcuts as needed; corresponding icons appear on the current sheet.

Using Locked Sheets

(^ˆ) ♦ Select 🖪 ♦ (●) ♦ Enter Handset Code 🜩 🖲





Motion Control

Motion Control

- Motion Sensor tracks handset orientation or movement. Move handset to navigate pages, access functions, etc.
- Cancel Keypad Lock and activate Display first. (Not necessary for activating Quick Silent.)
- Adjust Motion Sensor (P.2-18) before using Motion Control for the first time.
- Activate Motion Control by function beforehand.





Activating Show Secret Data Temporarily

- Enter Handset Code
 Shake
 handset left or right
- Close handset in Standby to cancel Show Secret Data.

Important Motion Control Usage Notes

- Hold/shake handset correctly to avoid unintended results.
- Motion Control may be unavailable while handset is ringing/vibrating.
- Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently to avoid injury/breakage. Do not shake handset roughly; handset may slip, resulting in injury or damage.

Advanced



Illumi Display



Advanced



Changing Clock pattern Hiding Clock while charging Showing caller info Changing scroll speed Changing illumination time Changing information display time Adjusting brightness Disabling display transition effects (P.2-19)



Showing Information

Show these items on Illumi Display with handset closed: press = to toggle view.

| Clock | Pedometer |
|---------|--|
| Data | MARKET AND |
| Date | weather Indicator |
| _ | |
| Battery | Signal & Battery |
| | |

Cannot be unchecked





Select item $\Rightarrow \bigcirc (\square/\square) \Rightarrow$ Complete selection \Rightarrow



Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Power it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.



Manner mode is set.

When Manner Mode is Active

- Ringtones and other sounds are muted.
- 942SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.
- To unmute Speaker temporarily while playing music, etc., follow these steps:
 During playback, (3) → (●) → Yes or
 No → (●)

Canceling Manner Mode

🖃 (Long)

Offline Mode

Temporarily suspends all transmissions.





2-12

Basic Operations

Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

| Handset Code [*] | 9999 by default; use or change some functions |
|------------------------------------|---|
| Administrator Code [*] | 9999 by default; required for Reset Settings and Reset All |
| Center Access Code | 4-digit code selected at contract; access Optional Services via landlines or change contract details |
| Network Password [°] | 4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring) |

*Changeable on handset.

Incorrect Code Entry

- Message appears for incorrect code entries; retry.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed.



🛐 Chg. Handset Code 븆 🖲





My Details & Basic Tools

Mv Number

2

• Handset phone number and the name entered at initial setup appear.

VeilView

Activate VeilView to prevent peeking.

🟥 🖉 (Long)

Canceling VeilView

(Long)

Hand Mirror

 $\bullet \Rightarrow Camera \Rightarrow \bullet \Rightarrow Hand$ Mirror
(
)

Internal Camera image appears.

Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
- 🕤 does not power handset off.

Incoming Calls while Keypad Lock is Active

 Keypad Lock is temporarily canceled; press () to answer calls. Keypad Lock reactivates after the call. Canceling Keypad Lock

(Long)

Pen Light



💶 (Long) Mobile Light illuminates.

Side Key Mobile Light aoes out

Important Pen Light Usage Note

• Do not point Pen Light at people or look at it directly.

Battery Meter





Battery Meter

(

)

Approximate battery strength appears.

Battery Strength %

• 100% may not appear even when battery is full. This is by design; not a malfunction.

Phone Help



Phone Help

(
)



• For Indicators, select a category and press ().

Advanced



🕙 Editing My Details Clearing My Details Selecting My Details items to send Toggling My Details in Dual Mode Changing battery strength indicator pattern Changing VeilView pattern/density (P.2-19 - 2-20)

Activating Double Number

Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- Outside Japan, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.17-42).

Two Phone Numbers & Two Mail Addresses



Modes

Activate A Mode to use Line A only, B Mode to use Line B only, or Dual Mode to use both accounts.



Receive Calls to Line A Only

A Mode • Place calls or send messages via Line A.

A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- •When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).



Advanced



🕙 🔍 Omitting Handset Code entry when switching modes 🔍 Renaming Double Number modes 🔍 Showing indicator for calls missed or new mail on idle line Hiding Internet connection confirmation (P.2-20)

2

Basic Operations





If customizable by line, line indicator appears bottom right; press $\textcircled{\mbox{sol}}$ to switch.

If line selection is otherwise required, follow onscreen prompts.



Bejecting calls to either line in Dual Mode Setting main line for Dual Mode (P.2-20)

Advanced

Additional Functions

| Shortcuts | | | Sheets | |
|--|--|--------------------------|---|--|
| Changing item order Restoring default shortcuts | Select numbered function ⇒ ⊙ ⇒ Move Select target location ⇒ ⊙ Select numbered function ⇒ ⊙ ⇒ Set to Default ⇒ ⊙ ⇒ Yes ⇒ ⊙ | | Editing sheet names | Start H Settin See b Rena Selec |
| Standby Shortc | ut | | | Rese |
| Operations in S Sorting icons | tandby ③ ◆ ◎ ◆ Sort Icon ◆ ● ◆ Select option ◆ ● ● Widgets may also be sorted depending on the size. | | | Start H Settin Hand |
| Moving icons | ③ ◆ ◆ Select icon ◆ ● Operation ◆ ● ◆ Change Layout ◆ ● ◆ Specify target location ◆ ● | - Locking sheets - | Locking sheets | Activ Selec |
| Moving icons to front/back | ♦ ♦ Select icon ♦ ♦ Operation ♦ ● ♦ To Front or To Back ♦ ● | | | Unlo Pre she |
| | [Start Here] (*) | | Motion Control | |
| Removing icons at once | Remove All → ● → ⊖ Shortcut → Select sheet → ● → Yes → ● Selected Icons | | Disabling automatic Display rotation | ● ⇒ Cont Selec |
| | Select & Remove $\Rightarrow \odot \Rightarrow \odot$ Shortcut \Rightarrow Select icon $\Rightarrow \odot (\bigcirc) \Rightarrow$ Complete selection $\Rightarrow \odot \Rightarrow Yes \Rightarrow \odot$ | | Practicing Motion Control actions | ● ⇒ Cont item |

| Sheets | |
|----------------|--|
| Editing about | Start Here (*) (*) ★ Settings ★ (*) ★ Sheet Settings ★ (*) ★ Change Sheet Name ★ (*) ★ See below |
| ames | Renaming Select sheet ⇒ ● ⇒ Enter name ⇒ ● |
| | Resetting All Sheet Names (☑) → Yes → (●) |
| | Start Here (*) (*) ★ Settings ★ (*) ★ Sheet Settings ★ (*) ★ Set Sheet Lock ★ (*) ★ Enter Handset Code ★ (*) ★ See below (*) ★ See See |
| Locking sheets | Activating Lock Select sheet ⇒ ● → On ⇒ ● |
| | Changing Method for Temporary Access Unlock Method ⇒ ● ⇒ No Password ⇒ ● ● Press ③, then select ■ and press ● to unlock sheet temporarily. |

| Disabling automatic Display rotation | ● ◆ Settings ◆ ● ◆ ⓒ Phone/冨 → Motion Control ◆ ● ◆ Display Change ◆ ● ◆ Select function ◆ ● ◆ Off ◆ ● |
|---|--|
| Practicing Motion Control actions | ● Settings ● ● ◆ O Phone/ ♀ ◆ Motion Control ● ● ◆ Action Test ◆ ● ◆ Select item ◆ ● Follow onscreen instructions. |
| Adjusting Motion Sensor | Settings Settings Settings |



Additional Functions

| Illumi I | Disp | lay |
|----------|------|-----|
|----------|------|-----|

| | $\textcircled{egin{array}{c} \bullet \end{array}}$ \clubsuit \clubsuit \clubsuit \clubsuit In Sound/Display |
|--------------------------------|---|
| Changing Clock pattern | menu, Illumi & Light ➡ |
| | ● → Display Date&Time → ● → Select |
| | |
| Hiding Clock while charging | Settings In Sound/Display |
| | $(\bullet) \Rightarrow Charging Time \Rightarrow (\bullet) \Rightarrow Off \Rightarrow (\bullet)$ |
| | • Even if <i>Off</i> , Clock appears for the first few seconds. |
| | ● <i>♦ Settings ♦</i> ● <i>♦</i> In Sound/Display |
| Showing caller info | menu, Illumi & Light 🔶 🗭 🕨 Illumi Display 🔶 |
| | ● ◆ Caller Display ◆ ● ◆ On ◆ ● |
| Changing scroll | ● <i>Settings →</i> ● <i>→</i> In Sound/Display |
| | menu, Illumi & Light 🏓 🔍 🕈 Illumi Display 🔷 |
| • | Scroll Speed Select speed Select speed |
| Changing illumination time | • <i>Settings</i> • • In Sound/Display menu, |
| | Illumi & Light 🖉 🔍 Illumi Display 🖉 🗣 |
| Ohanaina | |
| information | Illumi & Light |
| display time | Info Display Time $\Rightarrow \bigcirc \Rightarrow$ Select time $\Rightarrow \bigcirc$ |
| Adjusting | ● |
| | menu, Illumi & Light 🔶 🗩 Illumi Display 🔶 |
| 2 | $(\bullet) \Rightarrow Brightness \Rightarrow (\bullet) \Rightarrow Select option \Rightarrow (\bullet)$ |

| Disabling display transition effects | ● Settings ● ● In Sound/Display menu, Illumi & Light ● ● → Illumi Display → ● Display Effect ● ● Off ● ● |
|---|--|
| Mode Settings | |
| Changing handset modes | Start Here ● → Settings → ● → In Sound/Display menu, Mode Settings → ● → See below |
| | Selecting a Handset Mode Select mode ⇒ ● |
| | Customizing Handset Modes Select mode \Rightarrow (2) \Rightarrow Select item \Rightarrow (1) \Rightarrow Adjust settings |
| | Not available for Normal mode. |
| Creating a custom mode | ● → Settings → ● → In Sound/Display menu, Mode Settings → ● Original → ⓒ → Select item → ● → Adjust settings |
| Resetting Mode Settings | ● ◆ Settings ◆ ● h Sound/Display menu, Mode Settings ◆ ● ◆ Select mode ◆ ● ◆ Enter Handset Code ◆ ● ◆ Yes ◆ ● |
| Suppressing Manner mode audio output confirmation | ● ◆ Settings ◆ ● ◆ In Sound/Display menu, Mode Settings ◆ ● ◆ Manner ◆ ◎ ◆ Audio Confirmation ◆ ● ◆ Do not Show ◆ ● |

My Details

Editing My Details ● → ○ → ○ Select tab → Select item → ♥ → Select item → ● → Edit → ♥



Additional Functions

| Clearing My Details | ● ◆ ① ● ◆ ⊗ ◆ Reset My Details ◆ ● ◆ Yes ◆ ● |
|-------------------------------------|--|
| Selecting My Details items to send | ● ◆ ○ ☆ ◆ ○ ◆ Set Send Items ◆ ● ◆ Select item ◆ ● (/ ✓) ◆ Complete selection ◆ ♡ |
| Toggling My Details in Dual Mode | ● → ① → ອ → Switch to B or Switch to A → ● |

Battery Meter

| | ● <i>♦ Settings ♦</i> ● <i>♦</i> In Sound/Display |
|--------------------|---|
| Changing battery | menu, Display 🔶 💿 🔶 Mini Battery 🔶 单 |
| strength indicator | Select pattern 🔶 🖲 |
| pattern | Battery strength (appears as a percentage) is for |
| | reference only. |

VeilView

| Changing VeilView pattern/density | Start Here ● > Settings ● > In Sound/ Display menu, Display ● > VeilView ● > See below |
|--------------------------------------|--|
| | Pattern |
| | Pattern Setting ♦ ● ♦ Select pattern ♦ ● |
| | Scale |
| | Scale Setting 🔶 🔍 🔶 Select scale 🔶 🔘 |
| | Scale is unselectable for some patterns. |
| | Density |
| | Density Setting 🔶 🔿 🔶 Adjust density 🔶 🔘 |
| | • For <i>Density:2</i> or <i>Density:3</i> , use 📀 before pressing |
| | • to adjust the pattern appearance for straight view. |

Double Number

All Modes

| Omitting Handset | ● 🔶 Settings 🔶 ● 🔶 Phone/📪 🔶 |
|------------------|--|
| Code entry when | Double Number 🔶 💿 🔶 Password Entry 🔶 💽 |
| switching modes | ♦ Off ♦ ● ♦ Enter Handset Code ♦ ● |
| | ● 🔶 Settings 🔶 ● 🔶 Phone/🔛 🔶 |
| Renaming Double | Double Number 🔶 💿 🔶 Mode Name 🔶 🔵 🔶 |
| Number modes | Select mode 🔶 🖲 🔶 Enter name 🔶 🔘 🔶 |
| | Select icon 🔶 🖲 |

A Mode & B Mode

| Showing indicator for calls missed or new mail on idle line | ● ◆ Settings ◆ ● ◆ ◇ Phone/ |
|---|---|
| Hiding Internet connection confirmation | ● Settings ● ● ◆ Phone/ ■ ● Double Number ● ● Packet Warning ● ● ● Off ● ● ● Available for B Mode. |
| Dual Mode | |
| Rejecting calls to | ● → Settings → ● → · Phone/🔛 → |

| Rejecting calls to either line in Dual Mode | Settings Settings Reject By Line Select line On |
|---|---|
| Setting main line for Dual Mode | ● → Settings → ● → ↔ Phone/ → Double Number → ● → Send Priority → ● → Select option → ● |

