Digital TV	7-2
Basics	7-2
Area Setup	7-3
Watching TV	7-4
Obtaining Program Information	7-7
Recording/Playing	7-8
Recording Programs	7-8
Playing Recorded Programs	7-9

TV Timer	7-10
TV Timer & TV Recording Timer	7-10
Time Shift	7-1 1
Time Shift Recording & Playback	7-11
Additional Functions	7-12
Troubleshooting	7-19

7

Digital TV



Basics

942SH supports One Seg terrestrial digital television broadcast services developed for mobile devices in Japan.

Watch Live Television

Set up a channel list for your service area to access available programming. Capture screenshots while watching TV.

Multi Job

Watch TV in one half of Display using the other to access messaging functions, browse the Internet or open Phone Book, etc.

TV Listing (EPG) & Program Info

Find program channels and times, or open program details via current channel's schedule.

View Data Broadcasts

In addition to audio and visuals, enjoy text, program-related information and interactive services.

Record Shows/Time Shift

Record current program for later viewing; if interrupted by incoming calls while watching TV, record it temporarily for delayed playback.

Reserve TV Programs

Record a show or activate TV at a specified time; enter dates & times manually or reference TV Listing electronic program guide.

Important Digital TV Usage Notes

- 942SH TV is exclusively for use in Japan.
- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- When using TV while charging battery, separate AC Charger and Antenna to avoid interference.
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programs may not be viewable or record properly when:
 - Too far from or too close to broadcasting stations
 - In mountainous areas or near tall buildings
 - Aboard trains or in moving vehicles
 - Near high-voltage lines, neon lights or wireless base stations
 - Near railroad tracks or highways
 - Anywhere a jamming signal is broadcast/reception is unstable



Area Setup

When activating TV for the first time, follow these steps to set up channels by area:





Setup confirmation appears.





Select region **→ ●**





• After setup, channel list appears.





• To watch TV, select Digital TV and press (•).

 
Watching TV without Completing Area Setup In ⓒ, No Preference → ⑥ **Adding Reception Areas**

Set Area Info → ● From <</p>

Digital TV Antenna

TV Antenna is located behind Display. Move handset to find best reception.







Watching TV

First, complete Area setup (P.7-3).







TV Window

Use Keypad to select a channel

- Use to switch channels one by one; Long Press to find channel with stable signal automatically.
- ③ **→** *Yes* **→ →** TV ends

Watching TV in Portrait Position

- Data Broadcast appears below TV image. **Incoming Calls**
- Press to answer calls.

When Answering Voice Calls with **Memory Card Inserted**

• Current program is temporarily recorded; start playback after the call. (Time Shift)

Incoming Messages


• Double beep sounds and New Message notice appears. Long Press (to access messages.

Key Assignments

Open Options Menu	
Toggle Panel On/Off	\vary
Activate TV/Change Area	(i, 27)
Volume Control	4 Þ
Toggle Display Size (portrait)	(3) B

Multi Selector

Multi Selector response changes with TV orientation.

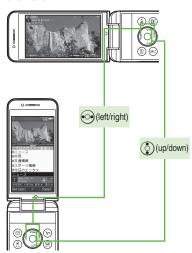



- 🤔 Opening Help OSearching for current program on the Internet OSelecting an audiovisual mode OChanging panel pattern in portrait position
 - Changing handset responses to incoming transmissions (And more on P.7-12 7-14)
 - Changing subtitle settings Changing sound settings (P.7-15)

Panel Description



	■今日のエンタメ	
4 -	ニュース	=
7-	Tokyo 23 ii	_6
H_	And EPG (And I are P(1)) 8	-3
#	Options Panel	— 8
5 -	<u> </u>	

1	Area name	5	Station name
2	Channel key	6	Signal strength*
3	Channel	7	Sound Channel
4	Program name	8	Volume

*The more bars the better Indicator position varies with display content. etc.

Data Broadcast (Japanese)

In portrait position, Data Broadcast appears below TV image. Use (3) to select an item and press

 
to access program-related information and interactive services.



Data Broadcast Window

Data Broadcast Fees

- Data Broadcast information viewing is free, however, using data links/related services incurs Internet connection fees.
- A confirmation appears the first time a fee-based Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed.





Still Image Capture

Capture screenshots while watching TV.

- May be unavailable if TV was activated by TV Timer, etc.
- Saved images cannot be forwarded, edited, set as Wallpaper or attached to messages.



In TV window,





Digital TV



Opening Saved Images

While Watching TV

From Standby

● **TV → O → TV-Image Folder**

→ (•) → Select image **→ (•)**

Enlarging Image Portion

In landscape position, temporarily enlarge a portion of widescreen image. May be unavailable depending on viewing



In TV window, 1 5 - 9 whyz (Long)



• Key Assignments:

3 ♣ Upper Left	Upper Center	Upper Right
2 & Center Left	5 ± Center	8 and Center Right
Lower Left	Lower Center	7.50 Lower Right



Obtaining Program Information

Find program channels and times, or open program details via current channel's schedule.

TV Listing	Start EPG S! Application to find program channels and times for specified area
Program Info	Open program details via current channel's schedule set Reservations to record shows or activate TV

TV Listing (Japanese)



- EPG application starts; refer to the application's help menu for operational instructions.
- When using EPG application for the first time, a confirmation appears. Follow onscreen instructions.

Program Info

- In TV window, (□) → OperateProgram

 ◆

 ●
- Program Info. **⇒**



Program Info Window

Select program **→** • • To return to TV window, press wice. Setting Recording Timer via Program Info [Program Info Window] Select program **→** (y) **→** (•)

• Timer entries set via Program Info are updated with program changes automatically. Program cancellations cancel corresponding Timer entries. (Poor signal conditions may inhibit updates or cancellations.)

Setting TV Timer via Program Info [Program Info Window] Select program → 🖾 → Watching → 💿



Recording Programs

Clip is saved to handset (or Memory Card, if inserted).

Precautions

- Saved files cannot be forwarded or attached to messages.
- 942SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank Mobile is not liable for any damages resulting from accidental loss or alteration of recorded content.

Dubbing 10

 
 942SH supports Dubbing 10 copy protection scheme that allows recordings to be copied from handset to Memory Card. Open file properties to check the remaining number of copies allowed to be made.

In TV window, ● (Long) ▶ Recording starts



Recording Window

- Changing volume, etc. does not affect recordings.
- When Small Light flashes yellow, reception is poor; change location to improve it: Small Light illuminates green for moderate, or blue for strong reception.



- To stop, Long Press while recording.

 Chase Play (Playing while Recording)

 [Recording Window]

 (Long)

 Playback starts

 (Long)

 Playback stops
- Watch a program from the beginning while recording it on Memory Card.
 Memory/Battery Runs Low or Video Call/S! Circle Talk Request is Accepted
- Recording stops. (Recorded clip is saved.)
 Saving Files via the Internet while Recording
- While recording programs to handset, confirm there is enough free memory before saving files.



Playing Recorded Programs





Video List

• mi indicates the file is unplayable.





Playback Window

 Playback starts. (The last played file plays from where it stopped.)



Major Playback Operations

Adjust volume or temporarily enlarge a portion of widescreen image following the same operations used while watching TV.

Fast Forward	⊙ ¹
Rewind	⊙ 1, 2
Skip Forward	(#,ĕ)
Skip Backward	¥ and
Pause ³	● (❤ in portrait)
Split File	(Long) ⁴
Set Marker	□ ⁴
Toggle Panel On/Off	(17)

¹Each press increases speed. To resume normal playback, press (y) in portrait).

Advanced

Splitting files by specifying a time point Playing files repeatedly Playing split files Playing video files transferred from Blu-ray Disc recorders Checking memory status Renaming files Deleting files Copying files to Memory Card Opening file properties Playing files with Markers (And more on P.7-16 - 7-17)

²Long Press to replay. (Available when no Marker is saved.)

⁴Not available during Time Shift playback.

TV Timer & TV Recording Timer

Reservation List ▶ ● ▶ 🖾

New Entry **→** •

Manual ⇒ ● Watching or Recording ⇒ ●

Enter start date/time

● ●
Enter end date/time

● ●

Channel: ♦ ● Select channel ♦ ● ♥

 If a confirmation appears, read the message and press (•). **Setting Timer via EPG**

In ②, From TV Listing ▶ ●

Refer to the application's help menu for operational instructions.

Timer Recording Precautions

Confirm target channel reception; keep handset open.

- End the current operations.
- Confirm battery is adequately charged and there is enough free memory.

At Timer Time (TV Alarm Time)

TV and Alarm activate. Alarm ends after the set duration.

Reservation time for watching TV will come soon.

Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.

While Using Another Function

 TV activates via Multi Job and target program/recording starts. However, if Multi Job cannot activate in the current state, TV may remain off, or the current function may end automatically (unsaved images, messages, Phone Book entries, etc. may be deleted). End all active functions/applications before Timer time.



Time Shift Recording & Playback

 
Record current program temporarily for delayed playback.

- Recorded content is deleted after playback.
- First, insert Memory Card.





Recording in progress



- Playback starts from where recording was started.
- Recording and playback stop when Time Shift playback has caught up to the real-time program.

Major Play	back O	perations
------------	--------	-----------

Fast Forward	⊙ *
Skip Forward	#,5
Skip Backward	× **

*Press (P) to resume normal Time Shift playback.

Time Shift Recording Automatic Activation

When a Voice Call is answered while watching TV with Memory Card inserted, Time Shift recording starts automatically; Long Press (29) after the call for playback.



Area & Channel	
Switching reception Areas	While watching TV, ⊕ → Select Area → ●
Renaming Areas	While watching TV, ⊚ Set Channels Change Area Select Area Change Area Name Enter name
	Start Here While watching TV,
Changing/disabling function	Toggling All Receivable Channels By Manual → ●
	Disabling Disable → ●
Editing channels	Start Here While watching TV,
	Switching Channel Positions Flip
	Deleting Channels Delete ◆ ● → Yes ◆ ●
Deleting all channels in Area	While watching TV, ⊚ → Set Channels → ● Change Area → ● → Select Area → ⊚ → Reset Settings → ● → Yes → ●
Adding new channels to Area	While watching TV, ⊜ → Set Channels → ● Change Area → ● → Select Area → ℮ Channel Update → ● → Update Further → ●
Updating all channels in the Area	While watching TV, ⊚ Set Channels • ● * Change Area • ● Select Area • ○ * Channel Update • ● Update All • ● Yes • ●

Watching

matoring	
Opening Help	While watching TV, → Help → Also available while recording or playing programs.
Searching for current program on the Internet	While watching TV, ⊚ → OperateProgram → ● → Program Info. Search → ● → Search → ● • Follow onscreen instructions.
Enlarging display size for portrait position	While watching TV, ⊚ → AV Settings → ● → Screen Size → ● → Enlarge(Portrait) → ●
Canceling image smoothing	While watching TV, (□) → AV Settings → ● → Smooth Mode → ● → Off → ●
Saving current channel	While watching TV, → Save Channel → → Select key → ● To overwrite a saved channel, choose Yes and press ●.
Selecting an audiovisual mode	While watching TV, (๑) ❖ AV Settings ❖ • ❖ AV Mode ❖ • ❖ Select mode ❖ • TV reception time may shorten depending on the mode.



Adjusting current AV Mode parameters	Start Here While watching TV,
	Brightness Image → ● ⇒ Brightness → ● → Adjust level → ●
	Disabling/Enabling Brightness Adjustment via Light Sensor Image → ● → Brightness → ● ⊕ (
	Adjusting Brightness Automatically by Scene Image → ● → Control by Scene → ● → On(Light) or On → ●
	Other Image-Related Parameters Image → ● → Select item → ● → Adjust level → ● • Adjust Contrast, Blackness (black level), Color (color density), Tint (skin color tone) and Sharpness.
	Restoring Default Image Settings Image → ● → Reset → ● → Yes → ●
	Selecting Sound Option Tone Select option Output Select option Output
Changing panel pattern in portrait position	With TV in portrait, (a) → Advanced → ● → Panel Type → ● → Select pattern → ●

Customizing viewing options for landscape position	Start Here With TV in landscape, Advanced Set Landscape See See below
	Showing Indicators Always Display Icon → ● → On → ●
	Disabling Partial Image Enlargement Magnify Area ● ● Off ● ●
	Using Portrait Position Key Assignments Key Direction → ● → Off → ●
Switching One Seg service	While watching TV, ⊗ → Set Channels → ◆ Select Serv. Station → ◆ Select service → ◆ Available for programs with multiple services.
Listening to audio from Speaker	While watching TV,
Switching audio output to wireless device	→ TV →
Using wireless Headphones	While watching TV, (a) (Long) • Pair SCMS-T DRM scheme compliant Bluetooth headphones beforehand.
Setting TV to end automatically after a period of time	While watching TV, ⑤ → Advanced → ● → Auto Exit → ● → Auto Exit Time → ● Select time → ●
Disabling auto shut-off when handset is closed	While watching TV, ⊚ → Advanced → ● → Auto Exit → ● → Close Action → ● → Watch TV → ●



	Start Here ● → TV → ● → Settings → ● → Calls & Alarms → ● → See below
Changing handset	Showing Alarm Notice
responses to	Alarm → ● → Alarm Notice → ●
incoming	Showing Voice Calls, Etc.
transmissions	Select item
	Showing New Message Window
	Incoming Message → ● → Calls & Alarms → ●

Data Broadcast

Changing view	With Data Broadcast in portrait, SetBroadcastData Output Change View (Data) Output To return to TV window, press Output Description:
Returning to initial window	With Data Broadcast in portrait,
Deleting information saved from Data Broadcasts	Start Here While watching TV,
	Deleting by Station Select station
	Deleting All ③ → Delete All → ● ★ Enter Handset Code → ● → Yes → ●
Hiding Network connection confirmation	While watching TV, (□) → SetBroadcastData → ● → Notify Connection → ● → Off → ●

Sending/hiding Location Information	Start Here While watching TV, ⊚ ⇒ SetBroadcastData ⇒ ● Location ⇒ ● ⇒ See below
	Sending Always On
	Hiding Always Off
Hiding manufacture number and other information	While watching TV, (a) → SetBroadcastData → Manufacture Number → ● → Off → ●

TV Link (Japanese)

Saving links to Data Broadcasts or related information	While viewing Data Broadcast, select link source
Using TV links	Start Here ● → TV → ● → TV Link → ● → See below
	Opening TV Links Select link • • Connection fees may apply.
	Opening Properties Select link ⇒ ⊠ ⇒ Details ⇒ ●
Deleting TV links	Start Here ● → TV → ● → TV Link → ● → See below
	One Entry Select link ⇒ ⊠ ⇒ Delete ⇒ ● → Yes ⇒ ●
	All Entries ③ → Delete All → ● ➤ Enter Handset Code → ● → Yes → ●



Subtitle & Sound Start Here While watching TV, (□) → Subtitle/ Sound ⇒ (•) ⇒ See below • May be unavailable depending on program content or viewing style (TV orientation, etc.). **Showing Subtitles Always Hiding Subtitles Always** Display Subtitle ⇒ ● → Off ⇒ ● Changing subtitle Changing Subtitle Language settinas **Showing Subtitle Area Always** Showing Subtitles at the Top Subtitle Position ⇒ ● Upper ⇒ ● Increasing Subtitle Lines Subtitle ScrollMode ⇒ ● On ⇒ ● Start Here While watching TV, Start Here While Sound ⇒ • See below Selecting Sound Option Sound Type → ● Sound2 → ● **Changing sound** • Available when multiple sounds are supported. settings Listening to Sub Language Sound Channel ⇒ ● Sub ⇒ ● Listening to Main & Sub Languages

Sound Channel ⇒ ● Main + Sub ⇒ ●

Recording programs without Data Broadcasts	While watching TV, ⊚ → SetBroadcastData → ● → Set Recording → ● → Image Only → ●
Saving Data	While watching TV, ⊚ ⇒ SetBroadcastData
Broadcast images	→ ● Image Location → ● → Memory Card
to Memory Card	→ •
Disabling Time Shift recording automatic activation	→ TV → ● → Settings → ● → Set Call Time Shift → ● → Off → ●
Recording programs	● → TV → ● → Settings → ● → Save
to handset	Recording to

Recording

Recorded Programs

Playback


,	
Splitting files by specifying a time point	During playback, ⊚ → Split File → ● → Select Point → ● → ⊖ Specify point → ● → Confirm → ●
Playing files repeatedly	● → TV → ● → TV Player → ● → □ → Playback Pattern → ● → Repeat → ●
Playing split files	● → TV → ● → TV Player → ● → Select split file → ♡ → Select file → ●
Playing video files transferred from Blu-ray Disc recorders	● *** TV *** ● *** Recorder Contents *** ● ** Select file *** ● ● • During playback, press ③③ to switch sound channels [L (Main), R (Sub) or L + R (Main + Sub)]. (Available for programs supporting sub language.) For more operations, see P.9-5 "Video Playback Operations." • In Recorder Contents file list, press ⑤ to rename files, change playback mode (repeat, random, etc.), check memory status, open properties or delete files.

■ Managing

■ Managing	
Checking memory status	● → TV → ● → TV Player → ● → 🖾 → Memory Remaining → ●
Renaming files	● → TV → ● → TV Player → ● → Select file → ⊗ → Rename → ● → Enter name → ●
Deleting files	Start Here $\bullet \Rightarrow TV \Rightarrow \bullet \Rightarrow TV Player \Rightarrow \bullet \Rightarrow$ See below
	Single Files Select file
	All Files ② → Delete All → ● ⇒ Enter Handset Code → ● → Yes → ●
Copying files to Memory Card	● TV ● TV Player ● © ● © ● Change to Phone ● ● Select file ● © ● Copy to Card ● ● Yes ● ● File is moved from handset to Memory Card when the number of copies made exceeds the limit.
Moving files to Memory Card	● TV → ● TV Player → ● □ → □ → Change to Phone → ● → Select file → □ → Move to Card → ● → Yes → ● • Files moved to Memory Card cannot be moved back to handset.
Opening file properties	● → TV → ● → TV Player → ● → Select file → □ → Details → ●



Markers	
Playing files with Markers	Start Here During playback ⇒ See below
	Skipping between Markers ⊙ (Long) or ⊙ (Long)
	Moving to Specific Markers
Using Marker List	Start Here During playback, ⊕ ⇒ Set Marker ⇒ • → Marker List ⇒ • > See below
	Starting Playback Select number ●
	Deleting a Marker Select number → ⊗ → Delete → ●
	Deleting All Markers □ → Delete All → ● → Yes → ●

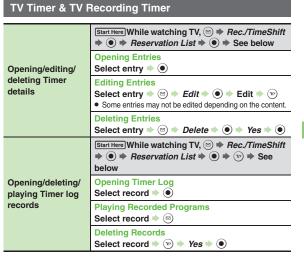



Changing TV Alarm tone/ vibration settings	Start Here While watching TV, (S) → Rec./TimeShift
	Changing TV Alarm Time Alarm Time
	Disabling Tone/Vibration Alarm or Vibration
	Changing Duration Duration Select time
Changing TV Alarm Illumi Display settings	Start Here While watching TV,
	Using Preset Pattern Pattern Setting
	Using Custom Pattern Pattern Setting
	Disabling Illumi Display Switch On/Off → ● → Off → ● → №
Changing TV Alarm Small Light & Key Illumination settings	Start Here While watching TV,
	Changing Light Color Light Color Select color
	Changing Key Illumination Pattern Key Pattern → ● → Select pattern → ● → >>
	Disabling Small Light & Key Illumination Switch On/Off → ● → Off → ● → ⊙

Prioritizing current operation over TV Timer/TV Recording Timer



Watching



TV won't activate

• Battery may be low. Charge battery or install a charged battery.



Cannot watch TV

- · Reception may be poor; change location to improve it. (TV signal strength is independent of handset signal strength.)
- Handset may not have been used for a period of time; retrieve Network Information.
- TV is disabled upon subscription termination



Area setup does not complete correctly

• Perform Update All in Channel Update. Area setup may not complete correctly depending on the area or service availability.

Recording



Ringtone does not sound as set while recording

• When a Chaku-Uta® file, etc. is set as ringtone, default ringtone may sound for incoming transmissions while recording.

TV Recording Timer



Could not start recording. appeared as recording result

 Recording failed due to low battery/ memory, active function, etc.



Recording aborted. appeared as recording result

 Recording was interrupted due to low memory, Memory Card removal, etc.

