

Media Player	9-2
Media Player Basics	9-2
Music	9-4
Playing Music.....	9-4
Video	9-5
Playing Video.....	9-5

Playlists	9-6
Using Playlists	9-6
Additional Functions	9-7
Troubleshooting	9-10

9

Media Player



Media Player Basics

Use Media Player to play music/video on 942SH.

- Download media files from Mobile Internet sites via Media Player or transfer files from PCs or AQUOS Blu-ray Disc recorders (hereafter "Blu-ray Disc recorders").
- Transfer PC music files and save them on Memory Card.

Music File Support

My Music

(Handset/Memory Card)

Downloads/Transferred Files

SD AUDIO

(Memory Card)

Transferred SD-Audio Files

WMA

(Memory Card)

Transferred WMA Files

Video File Support

My Videos

(Handset/Memory Card)

Downloads/Recorded Files

Recorder Contents/ SD VIDEO

(Memory Card)

Transferred SD-Video Files

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming/progressive download). Packet transmission fees apply even while playback is paused.

Compatibility

- Files transferred from PCs cannot be used as ringtones or System Sounds.



Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

1  **Media**  



2 **Music or Videos**  

3 **Download Music or Download Videos**  

- Follow the links to download media.

Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.


Saving AAC Files

Convert PC music files to 942SH-compatible format (P.17-20), then save to corresponding Memory Card folder (P.17-24) via Mass Storage. Install USB Cable driver beforehand.

Saving WMA Files

Follow these steps to save WMA files via compatible software:
(Copy protected files can only be played on the handset with which the files were transferred.)

1 **Connect handset to a PC via USB Cable**

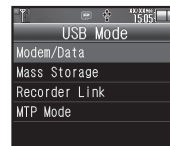

2 **MTP Mode**  










- Copy music from PC. Refer to the software's help menu for operational instructions.

3  **Yes**  

Connection ends

- Disconnect USB Cable.

If Menu in 1 Does Not Appear

- Follow these steps:
 -   **Tools**    **Connectivity**
 -  **USB Mode**    **From 2**
- Operations on the PC may be required; if prompted, follow onscreen instructions.



Playing Music

1 → **Media** → → **Music**
→

2 **My Music** → → **Select tab (folder)**



Music Playlists Window

3 **All Music** →

4 **Select file** →



Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files. (WMA album art is not supported.)

Using Other Functions while Playing Music

After , or

- To stop playback, follow these steps in Standby:

→ **Yes** →

Playing SD AUDIO or WMA Files

In , **SD AUDIO** or **WMA** → → From

Searching Music Files

After , → **Search** → → Enter search text →

Lyric Display-Compatible Files

- Press to display lyrics.

Music Playback Operations

Replay	(Long Press: Rewind')
Skip Forward	(Long Press: Fast Forward')
Volume Down	(Long Press: Mute)
Volume Up or Cancel Mute	
Pause	
Stop	In Pause,
Switch Sound Output	(Long)
Open Help	

'Release for playback.

Music Playback Window Description



1	Title	6	Elapsed time
2	Artist name	7	Volume
3	Track number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

Advanced

- Resuming from stopped point
- Specifying start point
- Playing repeatedly or randomly
- Changing Sound Effects (And more on **P.9-7**)



Playing Video

1 → **Media** → → **Videos**
→

2 **My Videos** → → **Phone Memory or Memory Card**
→



Video Playlists Window

3 **All Videos** →

4 **Select file** →



Video Playback Window

5 → **Playback stops**

Playing Video Files Transferred from Blu-ray Disc Recorders

In 2, **Recorder Contents** → → 4

Playing SD VIDEO Files

In 2, **SD VIDEO** → → 4

Searching Video Files

After 3, 4 → **Search** → → Enter search text →

At Alarm Time

- Playback pauses.
- Video recorded on other devices
- Video image may appear rotated.

Video Playback Operations

For pause, volume up/down, sound output or help, see P.9-4 "Music Playback Operations."

Replay	(Long Press: Rewind')
Skip Forward	(Long Press in Pause: Advance Frame, Long Press: Fast Forward')
Toggle Display Size	

*Release for playback.

Video Playback Window Description



1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

Advanced

- Resuming from stopped point ● Specifying start point ● Accessing linked information ● Switching audio output to wireless device ● Playing repeatedly or randomly ● Changing Sound Effects ● Changing playback size ● Setting Backlight status ● Hiding linked information (P.9-7)




Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.

Adding to Playlist

Follow these steps to add a music file to **プレイリスト1**:

- 1 → **Media** → → **Music**

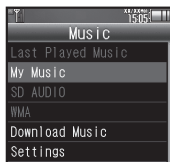

- 2 **My Music** →
- 3 **All Music** → → **Select file** →
- 4 **Add to Playlist** → → **プレイリスト1** →

Renaming Playlists

- 1 In **Playlists** window, select **Playlist** →
- 2 **Edit List Title** → → **Enter name** →

Advanced

- Organizing Playlists
- Sorting files
- Opening properties
- Deleting/editing SD AUDIO files
- Deleting All WMA files
- Downloading Contents Keys (P.9-8)
- Organizing Playlists
- Sorting files
- Downloading Contents Keys
- Opening properties
- Deleting SD VIDEO files
- Renaming files transferred from Blu-ray Disc recorders (And more on P.9-9)



Media Playback

Music & Video

Resuming from stopped point	● → <i>Media</i> → ● → <i>Music or Videos</i> → ● → <i>Last Played Music or Last Played Video</i> → ●
Specifying start point	During playback, (⏮) → <i>Time Search</i> → ● → Enter time → ●
Accessing linked information	During playback, (⏮) → <i>Access Web Link</i> → ● → <i>Yes</i> → ●
Switching audio output to wireless device	● → <i>Media</i> → ● → <i>Music or Videos</i> → ● → <i>Settings</i> → ● → <i>Sound Output</i> → ● → <i>Bluetooth Device</i> → ●

Music

Playing repeatedly or randomly	(Start Here) During playback, (⏮) → <i>Playback Mode</i> → ● → See below
	Repeat One File <i>Repeat</i> → ●
	Repeat All Files <i>Repeat All</i> → ●
	Play Randomly <i>Random</i> → ●
	Repeat Randomly <i>Random Repeat</i> → ●
Changing Sound Effects	During playback, (⏮) → <i>Sound Effects</i> → ● → Select effect → ●

Video


Some functions may be unavailable depending on file.

Playing repeatedly or randomly	(Start Here) During playback, (⏮) → <i>Settings</i> → ● → <i>Playback Mode</i> → ● → See below
	Repeat One File <i>Repeat</i> → ●
	Repeat All Files <i>Repeat All</i> → ●
Changing Sound Effects	During playback, (⏮) → <i>Settings</i> → ● → <i>Sound Effects</i> → ● → Select effect → ●
	During playback, (⏮) → <i>Settings</i> → ● → <i>Display Size</i> → ● → Select size → ●
Setting Backlight status	During playback, (⏮) → <i>Settings</i> → ● → <i>Backlight</i> → ● → Select option → ● • Selecting Normal Settings applies Display Backlight settings.
Hiding linked information	During playback, (⏮) → <i>Settings</i> → ● → <i>Web Link Setting</i> → ● → Off → ●



Managing Music Files

Organizing Playlists	<p>Start Here → Media → Music → My Music → Select tab (folder) → See below</p> <p>Adding New Playlists Add New Playlist → Enter name</p> <p>Deleting Playlists Select Playlist → Delete Playlist → Yes</p> <p>Deleting Playlist Files Select Playlist → Select file → Delete → Yes</p> <p>Changing File Order Select Playlist → Select file → Change Order → Select target location</p>
	<p>Sorting files Media → Music → My Music → Select tab (folder) → All Music → Sort → Select option</p>
	<p>Start Here → Media → Music → See below</p> <p>SD AUDIO Files SD AUDIO → All Music → Select file → Details</p> <p>Other Files My Music → Select tab (folder) → Select Playlist → Select file → Details</p>
	<p>Opening properties</p>

Deleting/editing SD AUDIO files	<p>Start Here → Media → Music → SD AUDIO → See below</p> <p>Deleting Single Files All Music → Select file → Delete Track → Yes • Source files will be deleted.</p> <p>Deleting All Files All Music → Delete All Tracks → Yes → Yes • Source files will be deleted.</p> <p>Editing Title/Artist All Music → Select file → Edit → Select item → Enter title or name</p>
	<p>Deleting All WMA files Media → Music → Settings → Delete All WMA → Enter Handset Code → Yes • Source files will be deleted.</p>
	<p>Downloading Contents Keys Media → Music → My Music → Select tab (folder) → Select Playlist → Select file (with  → Yes • Follow onscreen instructions.</p>



Managing Video Files

Organizing Playlists	<p>Start Here → Media → Videos → My Videos → Phone Memory or Memory Card → See below</p> <p>Adding New Playlists Add New Playlist → Enter name →</p> <p>Deleting Playlists Select Playlist → Delete Playlist → Yes →</p> <p>Deleting Playlist Files Select Playlist → Select file → Delete → Yes →</p> <p>Changing File Order Select Playlist → Select file → Change Order → Select target location →</p>
	<p>→ Media → Videos → My Videos → Phone Memory or Memory Card → All Videos → Sort → Select option →</p>
	<p>→ Media → Videos → My Videos → Phone Memory or Memory Card → All Videos → Select file (with) → Yes →</p> <p>• Follow onscreen instructions.</p>
Sorting files	
Downloading Contents Keys	

Opening properties	<p>Start Here → Media → Videos → See below</p> <p>SD VIDEO Files SD VIDEO → Select file → Details →</p> <p>Files Transferred from Blu-ray Disc Recorders Recorder Contents → Select file → Details →</p> <p>Other Files My Videos → Phone Memory or Memory Card → Select Playlist → Select file → Details →</p>
	<p>→ Media → Videos → SD VIDEO → Select file → Delete → Yes →</p> <p>• Source files will be deleted.</p>
	<p>→ Media → Videos → Recorder Contents → Select file → Rename → Enter name →</p>
	<p>→ Media → Videos → Recorder Contents → Memory Remaining →</p>
Deleting SD VIDEO files	
Renaming files transferred from Blu-ray Disc recorders	
Checking Memory Card memory status	
Deleting files transferred from Blu-ray Disc recorders	<p>Start Here → Media → Videos → Recorder Contents → See below</p> <p>Single Files Select file → Delete → Yes →</p> <p>All Files Delete All → Enter Handset Code → Yes →</p>



Music

? How do I delete files in All Music?

- Delete All Music files in My Music via Data Folder (Music or Ring Songs-Tones).

? WMA files do not appear (WMA files are not transferable)

- Did you use 942SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform **Delete All WMA** and re-transfer the files.
- Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)
- WMA files may be corrupted; perform **Delete All WMA** and retry.

? Cannot play WMA files

- Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform **Delete All WMA** and retry.

Video

? How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

? Cannot play video files

- Files created with PC software, etc. may not play.

