Calendar & Tasks	11-2
Calendar	. 11-
Tasks	. 11-
Alarms	. 11-8
Using Alarms	
Wakeup TV	11-10
Using Wakeup TV	11-10
Relaxation Time	11-12
Playing Animation with Music &	
Illumination	11-12
Household Accounts	11-13
Managing Household Expenses	11-13
Calculator	11-13
Using Calculator	11-1
Expenses Memo	11-18
Adding Expenses	11-18
Osaifu-Keitai®	11-19
Osaifu-Keitai® (Japanese)	11-19
Locking IC Card	11-2
Simulated Call	11-23
Faking Incoming Calls	11-2
Stopwatch	11-24
Using Stopwatch	11-24
Countdown Timer	11-2
Using Countdown Timer	11-2
World Clock	11-20
Opening World Clock	11-2

Hour Minder	11-27
Using Hour Minder	11-27
Pedometer	11-28
Using Pedometer	11-28
Compass	11-30
Using Compass	11-30
S! GPS Navi	11-31
Using S! GPS Navi	11-31
Document Viewer	11-34
Opening PC Documents	11-34
Notepad	11-35
Saving Text	11-35
ASCII Art	11-36
Using ASCII Art	11-36
Voice Recorder	11-37
Recording/Playing Voice	11-37
Scan Barcode	11-38
Scanning Barcodes	11-38
Create QR Code	11-39
Creating QR Codes	11-39
Scan Card	11-40
Scanning Business Cards	11-40
Scan Text	11-41
Scanning Text	11-41
Kanji Grabber	
Using Kanji Grabber	11-42
Additional Functions	11-43
Troubleshooting	11-60

11

Handy Extras



Calendar

Opening Calendar



Calendar Window

Toggling View

Press v to toggle Calendar window:



1Month View



3Month View



6Month View



Week View

Key Assignments

All Views

Open Previous Page	¥ ***
Open Next Page	(#, ; ;
Open Help	() 10 m

■ 1Month/3Month View

Ì	Select Date	③
Ī	Go to Current Date	5 .5.

 
■ 6Month View

Go to Current Month	5 ±
Select Month	•••

Week View

Select Date	••
Select Time Block	③





Saving Schedules

 
Follow these steps to save subject, Category, start/end date/time, Alarm and schedule details:

(Enter Subject or Description to save entry.)

In Calendar window, select date **→** (•)









- Preset → Select Category **⇒** (●)
- Enter start date/time

 ◆ ●

 


date/time

◆ (●)











● **Enter date/time ●** ● **P**

From (3)





At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm to Return to Standby

- While Alarm sounds/vibrates, press ①,
 or .
- Stopping Alarm to Open Schedule
- While Alarm sounds/vibrates, press a key other than , or ...

When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

Opening Schedules/Tasks

In Calendar window, select date → ●



Schedule List

- Select schedule or task ▶ ●

Opening Task List

In ②, select task ▶ ⊚ ▶ Go to

Tasks **→** •

Accessing Secret Entries

[Calendar Window]

→ Unlock

Temporarily →

→ Enter Handset

Code **→** (•)

Opening Related Message

Open schedule-related messages saved from Messaging message list.

- In schedule list, select schedule ▶ ●
- - Related message opens.To return to schedule window.
 - To return to schedule window, press .

Deleting Message from Schedule After ①, ⑥ → Related Mail: → ⑥ → Yes → ⑥ → ♡

Advanced



Searching entries Checking memory status Deleting all entries Deleting entries by specifying week (Week View) Deleting entries by specifying month (1Month/3Month View) Deleting entries in six months (6Month View) (P.11-45 - 11-46)

Information Link

Set to show or hide the following information in Calendar.

Reservation List	TV Timer and TV Recording Timer entries	
Birthday	Birthdays entered in Phone Book	
What is today? (Japanese)	Preset anniversaries, commemorative days, etc.	

- In Calendar window,
- Calendar Settings

 ◆ ●
- Data to Show **▶**
 - Select item **→** (✓/ ()



Editing TV Timer/TV Recording Timer

- In schedule list, select entry
- Edit **→** (•)
- Edit **→** (∑7)

Deleting Entries

In ②. Delete → ③ → Yes → ④ ■ Timer is canceled.

- **Making Birthday Calls**
- In schedule list, select entry
 - Call

 ◆

 Select phone number **→** (•)
 - Omit number selection step if only one number is saved.

Sending Birthday Messages

In ②, Mail → ● Select number/ address

◆

O

Complete message **▶** (Y)

- Omit number/address selection step if only one number or address is saved.
- For phone numbers, select S! Mail or SMS and press .

Deleting Schedules

- One Entry
- In schedule list, select schedule **→** (□)
- Delete → This Appointment **→** (•) **→** Yes \rightarrow (\bullet)
- All Entries of the Day
- In Calendar window, select date **→** (□)
- Delete

 
 ◆ (•)

 All This Day

Tasks

Saving Tasks

Follow these steps to save subject, due date/time, Alarm and task details: (Enter Subject or Description to save entry.)











Enter due date/time → ●



- 📄 Alarm: 🖈 💿
- Description:

 ● Enter task details ●
- Saved

 Saved





At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm to Return to Standby

 While Alarm sounds/vibrates, press or Signal.

Stopping Alarm to Open Task

 While Alarm sounds/vibrates, press a key other than , or .

 
When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

· Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

Opening Tasks





Task List

- Use to open Completed or Incomplete task list.
- Select task **▶** (•)



Standby returns

After ①, select task ▶ 💬

Accessing Secret Entries

After ①. ☑ Unlock Temporarily **→** • **→** Enter Handset Code **→** • Marking Tasks as Completed

Deleting Tasks

 
- One Entry
- In task list, select task ▶ (🖾)
- Delete **→** (•)
- This Task → (•) → Yes → (•)
- **All Completed Tasks**
- In task list, (☑)
- Delete **→** (•)
- All Comp. Tasks ▶ (•) ▶ Yes **▶** (•)



Using Alarms

Setting Alarm

Follow these steps to set Alarm to sound at a specific time on a specific day of the week: (Set Snooze--Alarm repeats at set interval--Alarm Volume and Duration.)





Alarm List









- Selected Days → ●
- Select day **→ ●** (□/✓) **→** Complete selection **→** 😿
- 🕞 Snooze: 🕈 💿
- Select interval

 For custom intervals, select Other.
- Alarm Volume: → ●
- Adjust level → ●
- Duration: ▶ ●

- Select time

 For custom Duration, select Other.
- (v) → Saved
- For more settings, repeat ② ⑫.
- 👔 💿 🕈 Standby returns

Activating Alarm Once or Daily In ②, Once or Every Day (All) → ● From ③

Selecting/Canceling All Days
In ⊕, ⊗ → Check All or Uncheck All

Advanced



At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm

• Press a key.

When Another Function is Active

 Alarm may not activate until handset returns to Standby.

Incoming Calls

 Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

When Snooze is Set

 
Alarm repeats at the set interval. Other Alarms do not activate while handset is Snoozing.

 
Canceling Snooze

While Snoozing, ● Yes • ●

■ Snooze is automatically canceled after a period of time.

Canceling Alarm






 Reactivate entry to use the same settings.

Reactivating Entry

In ②, Switch On ▶ ●

Deleting Alarm

 One Entry





All Entries

In Alarm list, select entry



Enter Handset Code **→** (●)

Using Wakeup TV

Setting Wakeup TV

Follow these steps to activate TV at a specific time on a specific day of the week:

- Complete TV Area Setup beforehand.
- TV may not activate in poor signal conditions.
- → Tools → In PIM/ Life menu, Wakeup TV → ●



Wakeup TV List

2-:-- → ● → Enter hour (24-hour format) → Enter minutes → ●



Wakeup TV Menu

- Repeat: ▶ 💿
- Selected Days → ●
- Select day → (□/☑) → Complete selection → ☑
- Channel: → ●
- Select channel 🕈 💿
- S → Saved
 For more settings, repeat ② ⑤.
- Standby returns

Activating TV Once or Daily
In ②, Once or Every Day (All) ▶ ●
From ⑤

Selecting/Canceling All Days
In ⑤, ⑥ ❖ Check All or Uncheck All
❖ ⑥

Canceling Alarm

 Alarm activates at Wakeup TV time. To cancel Alarm, follow these steps:
 [Wakeup TV Menu] Alarm On/Off: →

● → Off → ● From ③

Adjusting Alarm Volume

[Wakeup TV Menu] Alarm Volume: →

● Adjust level → ● From ③





© Editing entries Changing Alarm tone/video Changing Illumi Display settings Changing Small Light & Key Illumination settings Sounding Alarm tone even in Manner mode (P.11-48 - 11-49)

At Wakeup TV Time

TV activates after Alarm.



Stopping Alarm Instantly

- While Alarm sounds/vibrates, press a key. When Another Function is Active
- TV may not activate depending on the function

After TV is On for a Period of Time

• A confirmation appears. Choose Yes and press () to exit TV.

Canceling Wakeup TV

- In Wakeup TV list, select entry **→** (□)
- Wakeup TV Off **→** • Reactivate entry to use the same
 - settings.

Reactivating Entry

 
In ②, Wakeup TV On → •

 
Deleting Wakeup TV

- One Entry
- In Wakeup TV list, select entry **→** (□)
- Reset Alarm **→** •
- Yes **▶** (•)
- All Entries
- In Wakeup TV list, select entry **▶** 🖾
- Enter Handset Code **→** Yes → ●

Playing Animation with Music & Illumination

Play preset animations or downloaded Flash® files with music and illumination. Set playback time, volume and illumination pattern as needed.





- Animation appears.
- For *Flash*®, select a file and press •).
 - Key LEDs do not illuminate for soundless Flash® files.
- Message appears when Playback Time is set to Continuous Play (except when charging battery); press () to proceed.

Setting Relaxation Time

Follow these steps to set playback time, volume and Key Illumination pattern:

- Tools → () → In PIM/ Life menu, Relaxation Time
- Settings **→** (•)



Settings Menu

- Playback Time **→** (•)
- Select time **→** (•)
 - For custom playback time, select Other.
- Volume **→** (•)
- Adjust level **⇒** ●

- Set Key Illumi **→** ●
- Key Pattern **→** Select pattern **→** (**v**)
- Standby returns

Changing Illumi Display Pattern [Settings Menu] Illumi Display ▶ ● → Pattern Setting → ● Preset Pattern → • Select pattern → • **▶** (Y)

■ To use custom pattern, select *Original* instead of Preset Pattern

Disabling Illumi Display [Settings Menu] Illumi Display

● **⇒** Switch On/Off **⇒ • • •** • Off **⇒ •**

Disabling Key Illumination In ③. Switch On/Off → ④ → Off →




Managing Household Expenses

Scan receipts with mobile camera to manage expenses on handset.

Setup

Specify closing day, closing month and budget for the month.

● **→** *Tools* **→** ● **→** In PIM/ Life menu, Household Accounts **→** (•)

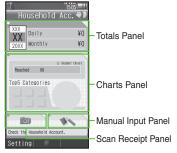

Household Accounts Window





Account Setup Menu



 


date (end of the month): use • to move between date and month fields









Restricting Access to Household **Accounts by Handset Code** [Account Setup Menu] Locks → • **→** On **→** (•)

Resetting Household Accounts [Account Setup Menu] Master Reset

- **→ →** Enter Handset Code **→**
 - Yes → ●





Saving Entries

Scanning Receipts

Scan receipts with mobile camera to enter date, expense items, fees/prices and total amount automatically.

Scan may fail if receipt is too long, folded, faded, etc.; some formats are not supported.

In Household Accounts window, select scan receipt panel **→ ●**

Frame receipt on Display



• Frame date, expense items and total amount. Align text parallel to guide lines.





• To cancel, press (Y).







• To add, delete or edit expense items, see P.11-15 "Entering Manually."





Entry is saved.

Opening Help

[Scan Window] (Yr)

■ Press to return to scan window.

■ Kev Assignments in Scan Window

,	
Toggle Focus Mode	3 *
Focus Lock	(ž)
Mobile Light On/Off	(ä,#)
Adjust Brightness	•••
Open Help	() v*



Entering Manually

In Household Accounts window, select manual input panel **→** •



Expense Input Window

- Enter date

 
 ◆
- Shop

 ◆ (•)

 ◆ Select shop/ facility **→** ●
- Paid

 ◆

 Select payment method **→** ●





- *Item* → **Enter name** → ●
- Category

 ◆ Select Category **→** ●
- Value

 ◆ (•)

 Enter amount
- Saved

Adding Expense Items

After ③, select item field ▶ 🖾 ▶ Add Items

◆

● From

● **Deleting Expense Items →** () **→** Yes **→** () **→** ()

Changing Categories of All Items at Once [Expense Input Window] Category

⇒ Select Category ⇒ ⊙ ⇒ ⑤

Opening Expense Records

- Opening Entries
- In Household Accounts window, select totals panel
- 🔁 Select date 🕈 💿



Daily Expense Log

- Deleting an Entry

[Daily Expense Log] Select entry → 🖾 → Delete Receipt → 🍥 → Yes → 🌖

Deleting All Entries

[Daily Expense Log]

→ Delete

Day Receipt Data or Delete Month

Receipt Data → → Yes → ●

Viewing Expense Trends

Follow these steps to view monthly expenses, budgets and balances:

- In Household Accounts window, select charts panel
- Results by Month → ●



Viewing Other Expense Trends In ②, select item **→** ●

Using Calculator

● **Tools →** In PIM/ Life menu, Calculator

◆

●



Calculator Window

- Use Keypad to enter digits Calculate
- Standby returns

Key Assignments	
+ (Add)	•
- (Subtract)	<u>•</u>
× (Multiply)	<u></u>
÷ (Divide)	②
= (Sum)	•
C·CE (Clear)	7.55° a
CM (Clear Memory)	(I) (i, 27)
RM (Recall Memory)	<u>\$</u>
M+ (Add to Memory)	¥7)
. (Decimal)	★ + **
+/- (Positive/Negative Value)	(i, t)
% (Percentage)	(A/D

Memory Calculation

- Clear Memory before starting new Memory calculations.
- Numbers saved in Memory remain until handset is powered off.

Incoming Calls

· Calculations are not affected. End the call to return to Calculator.

Using % Function

Use (8) to find definite percentage of a known value.

Example: Calculate 30% of 800,000

Enter 800,000 → x → 30 → %

240,000 appears.





11

 
Adding Expenses

Entering Expenses

 
(•) **→** *Tools* **→** (•) **→** In PIM/ Life menu, Expenses Memo ightharpoonup



Expenses Memo Menu









Select Category **→** (•) **→** Saved

Saving under Custom Category In \bigcirc , Other \Rightarrow \bigcirc \Rightarrow Enter name \Rightarrow \bigcirc

Checking Entries

- In Expenses Memo menu, select list

 ●
- Totals **▶** •



Expenses Memo List



Saving Entries to Notepad Notepad **→** ●

Deleting Entries

One Entry

- In Expenses Memo list, select entry **→** (□)
- Delete Item **→** (•)
- *Yes* **▶** (•)
- All Entries
- In Expenses Memo list, ⋈
- Delete All

 ◆
- Enter Handset Code **→** (•) Yes → (•)
 - All entries on the list are deleted.

Osaifu-Keitai® (Japanese)

Osaifu-Keitai® describes IC Card-equipped handsets that support e-money or credit functions/services. Osaifu-Keitai® encompasses a range of IC Card-based services on FeliCa-compatible SoftBank handsets. 942SH supports Osaifu-Keitai®. To use e-money, e-ticketing and reward points, etc., hold handset over a compatible reader/writer at shops, restaurants, and other retail outlets, etc.

Basics

Before using Osaifu-Keitai®, activate Lifestyle-Appli, complete registration, customize settings and charge accounts.

Starting Lifestyle-Appli

 
- Tools → In PIM/Life menu,
 Osaifu-Keitai → → Lifestyle-Appli
 → Select application → ●
- Important Lifestyle-Appli Usage Notes
- Contact Osaifu-Keitai[®] service providers for Lifestyle-Appli registration and usage details.
- Keep service passwords/customer service contact information, etc. in a separate place.

Using Osaifu-Keitai®

Follow these steps to conduct a transaction: Example: Making an electronic payment

- Lifestyle-Appli activation is not necessary.
- Transactions are possible even while handset power is off (if battery is adequately charged).
- Calls/Internet transmissions do not affect transactions.





Place this part

Align handset parallel to reader/writer.

Important Osaifu-Keitai® Usage Note

 
 SoftBank Mobile is not liable for damages resulting from accidental loss/alteration of IC Card data/settings.

When Placed Over Sensor

- If recognition is slow, move handset around slightly.
- Handset may respond automatically for some services.













IC Card Settings Menu





Canceling IC Card Lock In ②, IC Card Lock → ③ → Off → ④ **▶** Enter Handset Code **▶ ●**




Advanced

💮 Customizing handset response to reader/writer commands Opening IC Card properties Ochanging IC Card Lock notice recipient Ochanging required Missed Call count for Call Remote Lock Restoring default Osaifu-Keitai® settings (P.11-50 - 11-51)


Remote Lock

Disable Osaifu-Keitai® remotely by mail or phone.

Lock	Send mail to activate Remote Lock
Call Remote Lock	Call from a specified phone to activate Remote Lock

 

Preparation on Handset

 









Mail Remote Lock Menu

- Remote Lock PW **⇒** (●)
- Enter password **▶** ●
- - On **♦ (**12)

Canceling Mail Remote Lock In ⑤, Switch On/Off → ⑥ → Off → (Y)

■ Activating Remote Lock via Mail If handset cannot receive mail IC Card Lock is not set.

- Send S! Mail or e-mail to handset with password as subject
 - After handset receives message, IC Card Lock is set and notice is sent as a reply.

- Call Remote Lock
- Preparation on Handset
- IC Card Settings → ●
- Remote Lock

 ● Enter
 Handset Code

 ●
- Call Remote Lock → ●



Call Remote Lock Menu

Phone No. to Lck 1 or Phone No. to Lck 2 → ●



- Phone Book → Select entry → → Select phone number →
 - Select Phone Number to enter directly.
- Switch On/Off → ●
- 🛜 On **→** 💿 **→** 🐨

Enabling Activation via Public Phone
In ⊕, Set Public Phone → ● → On
→ ● → From ②
Canceling Call Remote Lock

In \bigcirc , Switch On/Off \Rightarrow \bigcirc \Rightarrow Off \Rightarrow \bigcirc \Rightarrow \bigcirc

- Activating Remote Lock via Phone
 If handset cannot receive calls IC Card
 Lock is not set
- Using one of the specified phones, call handset

 Send Caller ID.
- Handset receives call

 End the call
- The call is recorded as a Missed Call.
- Within three minutes, repeat

 O ② twice



- After the third Missed Call, IC Card Lock is set; a message announces Remote Lock activation. Confirm the message and end the call.
- If Series is Interrupted by Another Call
- Missed Call count is reset. Start over from the beginning.



Faking Incoming Calls

Handset rings to emulate an incoming call.

- Save name and phone number to show as Caller ID.
- Ringer may be muted by handset settings.
 To override Silent setting, see P.11-51.

Setting Simulated Call

① ◆ Tools ◆ ② ◆ In PIM/ Life menu, Simulated Call ◆ ③

 


Simulated Call Menu









- Assign Tone → Select tone/file → ●

When Name and Phone Number are Unset
• Handset rings with Caller ID "Withheld."
Canceling Simulated Call

[Simulated Call Menu] Switch On/Off \Rightarrow \bigcirc \Rightarrow Off \Rightarrow \bigcirc \Rightarrow \bigcirc

Setting Wait Time

[Simulated Call Menu] Receive Timing

 → ● Select time → ● → ②

Using Simulated Call

- With handset closed, ► (Long)
 - Handset rings and incoming Voice Call window opens.
 - Ringtone stops after a period of time.
- In incoming Voice Call window, press
 - Voice Call window opens. (Softkeys are dummies.)
- Standby returns

When Receive Timing is Not Immediately

- Press or during wait time to cancel Simulated Call activation.
- Simulated Call activation is canceled by incoming calls, Alarms, etc. during wait time.

Using Stopwatch

Stopwatch stops if battery runs low.

 \bullet \rightarrow Tools \rightarrow \bullet **→** •



Stopwatch Window

- Stopwatch starts
- Stopwatch stops
 - Press (•) to resume.
- 🙃 🖈 Yes 🕈 💿 🖈 Stopwatch ends
 - · Records are deleted when Stopwatch ends.

Recording Lap Times While Stopwatch is running, Saving Records to Notepad Resetting Records After €, 🐨 🖈 From 🕗 **Incoming Calls** Stopwatch is not affected by incoming calls. End the call to return.



Using Countdown Timer

 \bullet \rightarrow Tools \rightarrow \bullet Clock/Gauge

→ Countdown Timer **→** (•)



Timer Entry Window

Enter minutes **→** Enter seconds

 




Countdown Timer Window

sounds

- Countdown starts Press to stop/resume countdown.
- Set time elapses **→** Tone



Using Timer Records After ①, ⊗ → Input History → ⊙ → **Resetting Countdown Timer** Stop countdown and **Incoming Calls**

 Countdown is not affected by incoming calls. End the call to return.

When Set Time Elapses

Tone sounds.



Stopping Tone Instantly

• Press • or a Side Key. (Tone stops automatically after a period of time.)

When Timer Time Elapsed during a Call

Tone sounds after the call

Opening World Clock

① ◆ Tools ◆ ● ◆ ↔ Clock/Gauge ◆ World Clock



Select area → ●

Advancing One Hour (Daylight Saving) [Set Time Zone Window] 💬

■ To cancel, press 🔊.

Adding Custom Time Zone

[Set Time Zone Window] ⑤ → Enter city name → ⑥ → + or - → ⑥ → Enter time difference → ⑥

Opening World Clock in Standby

● Settings → ● In Sound/Display menu, Display → ●

Standby Display 🕈 💿

👸 Clock/Calendar 🕈 🍥

World Clock (L), etc. → ●

🕞 💿 **♦** Standby returns

20



Set Time Zone Window



Using Hour Minder

Setting Hour Minder

Follow these steps to activate the hourly time signal at selected hours:





Hour Minder Menu















In ②, Advanced → ● Duration:

 → ● Select time → ●

 From

■ For custom Duration, select *Other*.

Selecting/Canceling All Hours

In ②, ⋈ → Check All or Uncheck All

At Hour Minder Time

Hour Minder activates; sounds/vibrates by related settings.



Stopping Tone Instantly

Press a key.

When Another Function is Active

Hour Minder does not activate.

Incoming Calls

Active Hour Minder stops for incoming calls.

Canceling Hour Minder

In Hour Minder menu,

Switch On/Off → ● → Off

→ ● → ♡



Handy

Using Pedometer

Getting Started

- Count based on a pace of approximately 100 steps per minute over even terrain.
- Accuracy may be affected by course, terrain, walking style, etc.
- Avoid holding the handset; use a body worn case or a strap, or place handset inside a pocket or bag.
 - Avoid sudden/erratic movements.
- Steps are not counted in the following cases:
 - While handset is off
 - For the first few steps
 - While handset vibrates
- Handset use may affect accuracy.
- Weight and pace entry required to view full Pedometer data.
- Use Pedometer only as a rough guide.

Adjusting Counter Sensitivity

- → Tools → → ⊕ Clock/Gauge
- Pedometer → → □ →
 Settings → → Step Sensitivity →
- Select Low when steps seem overcounted; select High when they seem undercounted.

Saving Body Information





Pedometer Window

- If Pedometer is inactive, choose Yes or No and press .
- Settings → → Body Info. → ●
- Enter Handset Code → ●



Body Info Menu

- Height → Enter height → ●
- Weight → ► Enter weight → ●
- automatically based on height.
- Enter pace → ★ ⑤

Editing Body Information [Body Info Menu] Select item ▶ ●

- **→** Enter value **→ ⑤ → ⑤**
- For Pace, automatic calculation confirmation appears (when height is entered).

Activating Pedometer

In Pedometer window, ⊠ **→**Pedometer On **→**①



Pedometer Indicator

When Pedometer is active, today's step count appears in Standby.



Viewing Step Count Records

🚹 In Pedometer window, 💿

- H		1505
*	Steps	
XX/XX	1500	3000
15:00		
14:00		
13:00		
12:00▮		
11:00		
10:00		
09:00		
08:00		
07:00		

Steps Window

- Press (y) to toggle Hourly/Daily view.
- Press #.3 or ** to scroll down or up by one page.



- Select time/date ▶
 - Hourly/daily step counts appear.



Pedometer Window Tabs

Press to open Exercise and then Calories.

Resetting Today's Step Count
[Pedometer Window]

Reset

Reset

Day's Data → ● Yes → ●

 
Resetting Log

[Steps Window] ^② → Walk Data
Reset → ^③ → Enter Handset Code
→ ^③ → Yes → ^③

■ Todav's data is also reset.

Setting Targets

Information window opens, etc. when target is achieved for these items:



- In Pedometer window,

 Settings

 Target

 Target

 O
- Select item

 ● Enter value/time

 ●
 - Other target settings may consequently change.

Editing Targets

Settings

Select item

Select item

Select item

Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Select item
Se

⇒ Enter value/time ⇒ ●

 
When Target is Achieved

 A tone sounds and Information window opens. (Select *Goal Achievement* and press to open Pedometer Calendar.)
 Follow these steps to mute achievement tone:

Announce → ● → Off → ●

About Exercise (Ex)

 Ex and MET indicate amount and intensity of physical activity, respectively.
 Ex for walking is calculated by multiplying 3 METs by walking duration (hour).





Using Compass

Opening Compass





Compass Window

· Compass opens; use as a rough guide.

Adjusting Compass

- - Follow onscreen instructions.

Compass Indicator

- When map is open, compass indicator appears; follow these steps to hide it:
 - **Tools ● ● Olock/Gauge** ⇒ S! GPS Navi ⇒ • NAVI
 - Settings → Compass Indicator **→ (•) →** Off **→ (•)**



Using S! GPS Navi

Use this GPS navigation service to pinpoint current location, find routes to destinations, and more.

Provide current location to administrator upon request.

Precautions

- Location Information accuracy may be affected when GPS satellite/radio station signal reception is poor. Use S! GPS Navi under the open sky.
- SoftBank Mobile is not liable for any damages resulting from the provided Location Information.

Positioning

• Pinpoints current location using signals transmitted from GPS satellites.

Location Information Accuracy

- Probable distance from the actual position is classified into three accuracy levels, from level 1 (low) to 3 (high), indicated by the number of &s.
- A confirmation appears when accuracy level is 1 or 2; follow these steps: Yes or No ▶ •

Starting Navi-Appli





SLGPS Navi Menu



Navi Appli **→** (•)

• To disable confirmation, press before (6).



Opening Navi Appli List [S! GPS Navi Menu] Navi Appli List

▶ (**0**)

■ To activate Navi Appli, select one and press .

Selecting a Navi-Appli for S! GPS Navi

[S! GPS Navi Menu] NAVI Settings ▶

Select Navi Appli→ Select application

◆

●





™ List returns

Pinpointing Current Location

In S! GPS Navi menu, Locate Me

◆ (●)



 To disable confirmation, press before 2.



Saving Location Information

Follow these steps to save current location as a new entry:

In S! GPS Navi menu, My Location List

◆



My LocationList Menu

New Entry **→ ●**

Name

◆

●

Enter name

Location Info

◆

●

From Current Loc. **→** (•) Positioning complete

• When accuracy level is 1 or 2, choose **No** and press \bullet to proceed to \bigcirc .

Saving as Home

In ②. 自宅 → ① → From ④ Saving from Location Log In ⑤. From Location Logs ▶ ⑥ ▶

Opening Entries

In My LocationList menu, select entry **→** (•)

Location Info **→** (●) Details window appears.

Details window closes

Deleting Entries

In My LocationList menu. select entry

 
Delete → (•) → Yes



Using Ichi Navi (Japanese)

Locate other S! GPS Navi-compatible handset users or lost handset.

- Ichi Navi requires a separate contract and initial settings.
- If Double Number is active, service uses Line A regardless of usage mode setting.
- For more about Ichi Navi, see SoftBank Mobile Website (P.17-23).



 Handset connects to the Internet. Follow onscreen instructions.

Providing Location Information

Provide current location to administrator upon request.

- Location may be provided automatically upon administrator's request without confirmation.
- May be unavailable depending on subscription. For details, contact the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (P.17-42).
- Location Information request arrives



 A confirmation appears. (Message shown above is for reference only.)



(provide) or (reject)

Information

Information window opens after your location is provided manually (by pressing (☑)) upon Location Information request or automatically upon administrator's request.

Select the item and press () to open log.









Opening PC Documents

Supported File Formats:

Supported File Formats.
PDF (.pdf)
Microsoft® Excel® (.xls)
Microsoft® Word (.doc)
Microsoft® PowerPoint® (.ppt)
Some files may not appear correctly.

- Downloaded files are also supported. • When transferring files from PCs, save to
- corresponding Memory Card folder (P.17-24).




Select file **→** •

Zooming In/Out with Loupe (Magnifier) In open file, [®] (Long) → Specify portion → 🖾 → Zoom Out or Zoom In **▶ ●**

Key Assignments	
View Whole Page	•
Scroll	③
View Upper Left	1 8
Toggle Full Screen View On/Off	2 */ (@ *)
View Upper Right	3 top
Zoom Out	4 to 1
Continuous Zoom Out	(Long) (Long) (Long)
View Center	5 .5.
Zoom In	6 kg /
Continuous Zoom In	6 th (Long) Long)
View Lower Left	7 #
Jump to Page	8 m
View Lower Right	9 6
Open Help	() **
Next Page	(š,#)
Previous Page	X ***
Fit Width	<u>\$</u>
Rotate 90 Degrees	\(\forall \)

Saving Text

 New Notepad Entry





Notepad List

- ∠ <Add New Entry>
 - 😮 Enter text 🕈 💿
- Select Category

 ◆ ●

 Saved

Sorting Entries Temporarily

[Notepad List] 🖭

 Press to toggle sort options (Modified, Created, Category and Accessed).

Inserting Notepad Text during Text Entry

[Text Entry Window]

→ Notepad

→ ○ → Call Notepad → ○ →

Opening Notepad

- - Text appears.
- 🔰 🕬 Þ List returns

Deleting Entries

■ One Entry

- In Notepad list, select entry

 → ≅
- Delete Item → Yes → ●
- Selected Entries
- In Notepad list, select entry →

 Setting/Manage →

 O
- Multiple Selection
 Select entry

 (□/√)
 Complete selection

 ∞
 - 👔 Delete 🖈 💿 🕈 Yes 🕈 💿

Unchecking All

 
In ³, *Uncheck All* → **1**

All Entries

- In Notepad list, select entry →

 Setting/Manage →

 O
- Delete All → → Enter Handset Code → → Yes → ●





Using ASCII Art

Inserting ASCII Art

- In message text entry window, ⊕ → Call ASCII Art → ●
- Select entry → ●



 
Previewing ASCII Art
In ②, select entry ▶ ☺
■ Press ⑥ to insert ASCII Art.

Editing Entries





ASCII Art List



Opening Entries In ⊘, select entry ⇒ ⊚ ⇒ View ⇒ ● Adding New Entries In ⊘, <Empty> ⇒ ● Create ASCII Art ⇒ ●

Deleting Entries

- In ASCII Art list, select entry

 → □ → Delete → ●
- Yes → ●



Recording/Playing Voice

Recording

- Recording stops if battery runs low while recording.
- Record conversations during calls via Record Caller Voice.





Recording Window



- → Recording starts
- Recording ends



• For Extended Voice, recording is saved automatically.





 
Playback

- Ring Songs Tones

 ◆

 ●
- Select file **→** (•)






Volume Control	③
Pause/Resume	•
Stop	SHAP SO

Scanning Barcodes

Scan UPC/JAN (1D barcodes) or QR Codes (2D barcodes).

 - Membership file or password may be required when scanning barcodes.
- Some barcodes may not be scanned.







Frame barcode in center of Display



Focus Adjustment Bar

Scan Window

- Use Focus Adjustment Bar as a guide (better focus in darker blue).
- 4
- Scan starts
 - If recognition takes time, slowly adjust the distance between handset and barcode.
 - To cancel, press 🖭.

Tone sounds **→** Scan results appear



Split Data

- After scanning, a confirmation appears.
 Follow onscreen prompt(s).
- Scan results do not appear until all split data is scanned.

Starting Over



Key Assignments in Scan Window

Toggle Focus Mode	(3 *)
Switch to Photo Camera	7 pose
Focus Lock	ئ
Mobile Light On/Off	#sö
Adjust Brightness	••
Open Help	() to #

Advanced



Scanning during text entry Scanning continuously Reading saved barcode images Saving scan results Saving to Notepad Saving linked info to Phone Book Opening saved scan results Using linked info Using images as Wallpaper Saving images & melodies Copying text (And more on P.11-55 - 11-57)

Creating QR Codes

Create QR Codes from these items on handset:

Phone Book

Codes.

My Details

Text Input

Ring Songs Tones

Pictures Notepad Large items are divided into multiple QR

Procedure

Follow these steps to create QR Codes from Data Folder files:



- Create QR Code **→** (•)
- Data Folder **→** (●)
- Select folder **→** (•) **→** Select file or entry **→** (•) • QR Code is created.
- - QR Code is saved to Data Folder (Pictures).

From Phone Book Entries

In ⓒ, Phone Book ▶ ⊙ ▶ Select entry **♦ (•) ♦ (=)** From My Details

In ⓒ, My Details ♦ ● ♦ 🖾 ♦ 🖯

From Entered Text

In ⑤, Text Input ▶ ⑥ ▶ Enter text **→** () **→** ()

Switching Storage Media

In \bigcirc , \bigcirc \Rightarrow Save to \Rightarrow \bigcirc \Rightarrow Phone or *Memory Card* **→ (•) → (•)**

Attaching to S! Mail

In ⑤, ৷ Send As Message → ⑥

Complete message → (Y)

Incoming Calls

 QR Code creation is not affected by incoming calls. End the call to return.

Scanning Business Cards

Scan business cards and save names. addresses, etc. to Phone Book.

- English business cards may not be scanned correctly.
- Some cards may not be scanned.

 




Frame card on Display



Scan Window









• New Phone Book entry is saved.

If Text Exceeds Phone Book Entry Item **Character Limit**

 A confirmation appears. Follow these steps to delete overage:

Yes **▶** (•)

Switching Storage Media

After ⑤, ⋈ → Save to → ⑥ →

Saving Scanned Image as Phone Book Picture

After ⑤, ☒ → Add Image → ⑥ → On **▶ (•**) **♦ (: Starting Over**

After \bigcirc , \bigcirc \Rightarrow Yes \Rightarrow \bigcirc \Rightarrow From \bigcirc

Key Assignments in Scan Window

Toggle Focus Mode	3 *
Switch to Photo Camera	7 s
Focus Lock	- ÷
Mobile Light On/Off	#:
Adjust Brightness	•••
Open Help	() to #



Advanced

Scanning Text

Scan text and save it to Notepad, etc. Available Modes:

	Capture text in full screen and scan a selected line
Line	Capture a few lines of text and scan a selected line

- To toggle mode, press 🖭 in scan window.
- Some text may not be scanned.





• To change mode, press 🐑 in scan window.

Frame text in center of Display



- Scan starts
 To cancel, press 🐨.







Correcting Text Type After ⑤, ⑧ → Change Mode → ⑥

Select type → ● From ⑤

Editing Scanned Text


After ⊕, ⊚ → Select/Edit → ● →
Select character → Select alternative
from list or edit directly → From ⊕

Starting Over In ⑤, ఄ → Yes → ⑥ → From ⑥

Key Assignments in Scan Window

Toggle Focus Mode	3 *
Switch to Photo Camera	7.3
Focus Lock	(¢)
Mobile Light On/Off	
Adjust Brightness	•
Open Help	() to the

 Advanced






Using Kanji Grabber

Scan a word of up to ten kanji and look it up in dictionaries.

 Some text may not be scanned.





Frame kanji in Loupe



Scan results (kanji) appear.







Starting Over

In ⑤, ౕ Þ From ⓒ

Key Assignments in Scan Window

Toggle Focus Mode	3 %
Switch to Photo Camera	7.5
Focus Lock	ů
Mobile Light On/Off	(i, t)
Adjust Brightness	••
Open Help	() v*



Calendar View Settings ● → Tools → ● In PIM/Life menu, Changing default Calendar → ● → □ → Calendar Settings → view Default View Select type Select type Jumpina to Calendar → • • ■ Enter date → • specified date Start Here Tools In PIM/Life menu. Calendar ⇒ • See below By Days of the Week By Week Select day Select day Select color ⇒ ● Changing date **Bv Date** color Not available in 6Month View. Resetting "By Date" Colors Reset Color → ● Select option → ● → Yes → ● Selecting task view Calendar → ● → 🖾 → Calendar Settings → option Adding stamps Calendar → ● Select date → 2 → Select (1Month/3Month View) stamp | ● → Tools → ● In PIM/Life menu, Calendar Hiding schedules ⇒ Select date ⇒ ○ ⇒ Select entry ⇒ ○ **♦** () **♦** Secret: **♦** () **♦** On **♦** ()

	Start Here
Saving additional holidays	Adding Holidays <empty> → ● → Enter name → ● → Enter date → ● → Select frequency → ● → ⊙</empty>
	Editing Added Holidays Select holiday © Dedit Name: Enter name © Date: Enter date © Select frequency © ©
Hiding/showing holidays	 Tools In PIM/Life menu, Calendar Set Holiday Select holiday (□/√)

■ Saving/Editing Schedules

Saving/Editing Schedules	
Setting Location	● * Tools * ● * In PIM/Life menu, Calendar * ● * Select date * ● * Select entry * ● * ● * Location: * ● * Enter location * ● * ♡
Creating Categories	Start Here ● → Tools → ● → In PIM/Life menu, Calendar → ● → ③ → Calendar Settings → ● → Set Category → ● → See below
	Renaming Categories Select Category
	Changing Icons Select Category
	Resetting ③ → Reset Settings → ● → Enter Handset Code → ● → Yes → ●
Saving repetitive schedules	 Tools In PIW/Life menu, Calendar Select date Select entry Repeat: Select frequency Enter repeat time ♥ • Repeat time is not available for Every Year.

Saving S! Friend's Status information	Start Here
	Comment: Omment: Enter text Omega Omega Omega Omega Omega Omega Omega
Editing entries	Tools → In PIM/Life menu, Calendar → → Select date → → Select entry → → → Select item → → Edit in the same manner as saving schedules → →
	Start Here
Changing Alarm tone/video & duration	Alarm Tone/Video Assign Tone/Video: Select folder Select tone/file Select start point if required.
	Duration Duration: Select time
Changing Alarm volume	● * Tools * ● * In PIM/Life menu, Calendar * ● * ② * Alarm Settings * ● * Alarm Volume: * ● * Adjust level * ●
Selecting Vibration option	● * Tools * ● * In PIM/Life menu, Calendar * ● * □ * Alarm Settings * ● * Vibration: * ● * Select option * ●

Sounding Alarm tone even in Manner mode	● Tools ● In PIM/Life menu, Calendar ● © Alarm Settings ● For Manner Mode: ● Ring ● Property Propert
Changing Illumi Display settings	Start Here ● → Tools → ● → In PIM/Life menu, Calendar → ● → ⑤ → Alarm Settings → ● ## Illumi Display: → ● → See below
	Using Preset Pattern Pattern Setting
	Using Custom Pattern Pattern Setting
	Disabling Illumi Display Switch On/Off → ● → Off → ● → ♥
	Start Here ● → Tools → ● → In PIM/Life menu, Calendar → ● → ⊕ → Alarm Settings → ● Light & Key Illumi: → ● → See below
Changing Small	Setting Ringtones to Control Illumination Switch On/Off
Light & Key	Changing Light Color Light Color Select color
settings	Changing Key Illumination Pattern Key Pattern → ● → Select pattern → ● → ⊙ Not effective when Switch On/Off is set to Link to Sound.
	Disabling Small Light & Key Illumination Switch On/Off

■ Managing Schedules

Searching entries	Start Here ● → Tools → ● In PIM/Life menu, Calendar → ● → See below	
	By Part of Subject ⑤ ⇒ Enter text ⇒ ●	
	By Category Select Category ●	
Checking memory status	● → Tools → ● In PIM/Life menu, Calendar → ● → Select date → ② → Memory Status → ●	
Deleting all entries	● Tools ● In PIM/Life menu, Calendar ● ● ◎ Delete ● All Appointments ● ■ Enter Handset Code ● Yes ● ●	
	Start Here → Tools → In PIM/Life menu, Calendar → See below	
Deleting entries by specifying week (Week View)	Within One Week Select date ⇒ ② ⇒ Delete ⇒ ● → All This Week ⇒ ● ⇒ Yes ⇒ ●	
	Up to the End of Previous Week Select date ⇒ ⊚ ⇒ Delete ⇒ ● ⇒ Up to Last Week ⇒ ● ⇒ Yes ⇒ ●	

	Start Here ● → Tools → ● In PIM/Life menu, Calendar → ● → See below
Deleting entries by	Within One Month
specifying month	Select date ⇒ 🖾 ⇒ Delete ⇒ • → All This
(1Month/3Month	Month ⇒ ● → Yes ⇒ ●
View)	Up to the End of Previous Month Select date → ② → Delete → ● → Up to Last Month → ● → Yes → ●
Deleting entries in	● → Tools → ● → In PIM/Life menu,
six months	Calendar → ● → 🖾 → Delete → ● → All
(6Month View)	This 6Months Nos Nos

Tasks

Task List

● → Tools → ● In PIM/Life menu, Tasks →
● Select task → 🖾 → Edit → ● → Secret:
→ • • • • • • • • • • • • • • • • • • •

■ Saving/Editing Tasks

Editing tasks	● * Tools * ● * In PIM/Life menu, Tasks * ● * Select task * ® * Edit * ● * Select item * ● * Edit in the same manner as saving tasks * ♥ •
Setting priority	Tools In PIM/Life menu, Tasks Select task Edit Tools Select task

Changing Alarm tone/video & duration	Start Here ● → Tools → ● In PIM/Life menu, Tasks → ● → Select task → □ → Edit → ● Alarm: → ● → See below
	Alarm Tone/Video Assign Tone/Video: Select folder Select tone/file Select start point if required.
	Duration Duration: ♦ ● ♦ Select time ♦ ● ♦ ♥ ♦ ♥
Changing Alarm volume	● * Tools * ● * In PIM/Life menu, Tasks * ● * © * Alarm Settings * ● * Alarm Volume: * ● * Adjust level * ●
Selecting Vibration option	 Tools In PIM/Life menu, Tasks In PIM/Life men
Sounding Alarm tone even in Manner mode	● Tools ● ■ In PIM/Life menu, Tasks ■ □ ■ Alarm Settings ● ■ For Manner Mode: ■ ■ Ring ■ ■ Yes ■ ■
Changing Illumi Display settings	Start Here
	Using Preset Pattern Pattern Setting → ● Preset Pattern → ● → Select pattern → ● → ♡
	Using Custom Pattern Pattern Setting → ● → Original → ● → ♡
	Disabling Illumi Display Switch On/Off → ● → Off → ● → ♥

		Start Here ● → Tools → ● → In PIM/Life menu, Tasks → ● → ② → Alarm Settings → ● → Light & Key Illumi: → ● → See below	
	Setting Ringtones to Control Illumination Switch On/Off → ● → Link to Sound → ● →		
	Changing Small Light & Key Illumination settings	Changing Light Color Light Color Select color	
		Changing Key Illumination Pattern Key Pattern → ● → Select pattern → ● → ∞ Not effective when Switch On/Off is set to Link to Sound.	
		Disabling Small Light & Key Illumination Switch On/Off → ● → Off → ● → ♡	
	■ Managing Tasks		
	Searching tasks		
		By Part of Subject By Subject → ● ➤ Enter text → ●	
		By Due Date By Due Date ● Enter date ●	
	Sorting tasks by	Tools In PIM/Life menu, Tasks	

priority

status

Checking memory

Deleting all tasks

● ⇒ Sort ⇒ ● Priority ⇒ ●

Enter Handset Code → ● Yes → ●

● → Tools → ● In PIM/Life menu, Tasks →

 → Tools → ● → In PIM/Life menu, Tasks → ● ⇒ 🖾 ⇒ Delete ⇒ ● ⇒ All Tasks ⇒ ● ⇒

Alarms	
Editing entries	● → Tools → ● → In PIM/Life menu, Alarms • ● → Select entry → ● → Select item → ● • Edit in the same manner as saving entries • □
Saving entry name	● → Tools → ● In PIM/Life menu, Alarms → ● → Select entry → ● → Subject: → ● → Enter name → ● → ♡
Changing Alarm tone/video	Start Here
	Using Preset Tone or Data Folder File Select folder → ● ⇒ Select tone/file → ⊕ ⇒ Select start point if required.
	Using Customized Screen Tone/Video Customized Screen
Setting handset to vibrate at Alarm Time	● Tools ● In PIM/Life menu, Alarms ● Select entry ● Vibration: ● ● On or Link to Sound ● ● ⑤ • Select Link to Sound to allow compatible SMAF files to control vibration.

Changing Illumi Display settings	Start Here ● → Tools → ● → In PIM/Life menu, Alarm → ● → Select entry → ● → Illumi Display: → ● → See below
	Using Preset Pattern Pattern Setting
	Using Custom Pattern Pattern Setting
	Using Customized Screen Pattern Pattern Setting
	Disabling Illumi Display Switch On/Off → ● → Off → ● → ♥ → ♥
Changing Small Light & Key Illumination settings	Start Here
	Setting Ringtones to Control Illumination Switch On/Off
	Changing Light Color Light Color → ● → Select color → ● → ∞ → ∞
	Changing Key Illumination Pattern Key Pattern → ● → Select pattern → ● → ♡ → ♡
	Not effective when Switch On/Off is set to <i>Link to Sound</i> .
	Disabling Small Light & Key Illumination Switch On/Off \Rightarrow $\textcircled{o} \Rightarrow$ Off \Rightarrow $\textcircled{o} \Rightarrow$ $\textcircled{v} \Rightarrow$ \textcircled{v}

Sounding Alarm	● → Tools → ● → In PIM/Life menu, Alarms
tone even in	▶
Manner mode	Ring Yes Ring
Wallie Illoue	<u> </u>
Activating Alarm	● → Tools → ● → In PIM/Life menu, Alarms
based on World	⇒ ◆ Settings ⇒ Link to World Clk ⇒
Clock time	● → On → ●

Wakeup TV	
Editing entries	● → Tools → ● → In PIM/Life menu, Wakeup TV → ● → Select entry → ● → Select item → ● → Edit in the same manner as saving entries → ⋯
	Start Here
Changing Alarm tone/video	Using Preset Tone or Data Folder File Select folder → ● → Select tone/file → ● → ∞ • Select start point if required.
	Using Customized Screen Tone/Video Customized Screen
Changing Illumi Display settings	Start Here
	Using Preset Pattern Pattern Setting Preset Pattern Prese
	Using Custom Pattern Pattern Setting Original Owwww
	Disabling Illumi Display Switch On/Off → ● → Off → ● → ♡ → ♡

Changing Small Light & Key Illumination settings	Start Here
	Setting Ringtones to Control Illumination Switch On/Off Link to Sound Link to Sound
	Changing Light Color Light Color Select color W W W
	Changing Key Illumination Pattern Key Pattern → ● → Select pattern → ● → ♥ → ♥ • Not effective when Switch On/Off is set to Link to
	Sound.
	Disabling Small Light & Key Illumination Switch On/Off → ● → Off → ● → ♥ → ♥
Sounding Alarm tone even in Manner mode	● Tools ● ● In PIM/Life menu, Wakeup TV ● For Manner Mode ● ● Ring ● Yes ● ●

Household Accounts	
Renaming icon labels	Start Here ● → Tools → ● → In PIM/Life menu, Household Accounts → ● → Select manual input panel → ● → See below
	Shops Shop → ● Select icon → ⊕ → Enter name → ●
	Payment Methods Paid → ● → Select icon → ◎ → Enter name → ●
	Categories Category → ● → Select icon → ② → Enter name → ●
Exporting Household Accounts data	● Tools ● In PIM/Life menu, Household Accounts ● ● □ Export All ● ● Yes ● Data is exported as a CSV file and saved to handset Data Folder (Other Documents). Files are saved to Memory Card, if inserted.

Calculator

Copying calculation results	While result appears,
Changing exchange rate for currency conversion	● * Tools * • * In PIM/Life menu, Calculator * • * * * Money Converter * • * Exchange Rate * • Domestic or Foreign * • Enter rate * •
Converting currencies	● Tools ● ● In PIM/Life menu, Calculator ● ● Enter amount of money ● ■ Money Converter ● ● To Domestic or To Foreign ● ● • Set Exchange Rate first.

Expenses Memo

Changing Category of saved entry	● * Tools * ● * In PIM/Life menu, Expenses Memo * ● * Select list * ● * Totals * ● * Select entry * ● * Select Category * ●
Changing amount	● * Tools * ● In PIM/Life menu, Expenses Memo * ● * Select list * ● * Totals * ● * Select entry * ⑤ * Change Amount * ● * Edit * ●
Renaming Categories	● * Tools * ● In PIM/Life menu, Expenses Memo * ● * Edit Category * ● Select Category * ● * Enter name * ●

Osaifu-Keitai®

Enabling to view e-money balances	● Tools ● In PIM/Life menu, Osaifu-Keitai ● IC Card Settings ● Balance Info ● Enter Handset Code ● Empty> ● Lifestyle-Appli or S! Appli ● Select application ● ● For use with compatible Lifestyle-Applications. ● Start Lifestyle-Appli once before adding it to Balance Info list.
Checking e-money balance	In Standby, (Long) Service name/balance appears Standby returns Save Lifestyle-Appli to Balance Info list beforehand. Not available when IC Card Lock is active.
Moving applications up/down Balance Info list	● * Tools * ● In PIM/Life menu, Osaifu-Keitai * ● * IC Card Settings * ● * Balance Info * ● * Enter Handset Code * ● * Select application * ⑤ * Move * ● * Select target location * ●
Removing applications from Balance Info list	● Tools ● In PIM/Life menu, Osaifu-Keitai ● IC Card Settings ● Balance Info ● Enter Handset Code ● Select application ● Delete ● ●
Customizing handset response to reader/writer commands	● Tools ● In PIM/Life menu, Osaifu-Keitai ● IC Card Settings ● Interface Settings ● Enter Handset Code ● Select item ● Off ●
Opening IC Card properties	● ▼ Tools ▼ ● ➡ In PIM/Life menu, Osaifu-Keitai ▼ ● ➡ IC Card Settings ▼ ● ■ IC Card Status ▼ ●

Changing IC Card	Start Here		
Lock notice recipient	Changing Recipient To Set Recipient Select method Select/tenter number/address Omit step of pressing when selecting Phone Book as setting method.		
	Disabling Notice Off → ● → → ▽		
Changing required Missed Call count for Call Remote Lock	● Tools ● In PIM/Life menu, Osaifu-Keitai ● IC Card Settings ● Famote Lock ● Enter Handset Code ■ Call Remote Lock ● Count for Lock ● Enter Missed Call count ● © ©		
Restoring default Osaifu-Keitai® settings	● → Tools → ● → In PIM/Life menu, Osaifu-Keitai → ● → IC Card Settings → ● Set to Default → ● → Enter Handset Code → ● → Yes → ●		

Starting via Simulated Call menu	● Tools ● In PIM/Life menu, Simulated Call ● Paceive Simulated Call ● Simulated Call starts immediately regardless of Receive Timing setting. • Settings remain even after starting Simulated Call during setup.				
Clearing caller information	● → Tools → ● → In PIM/Life menu, Simulated Call → ● → Set Caller → ● → ⊗ → Yes → ● → ⊗ → ⊗				
Overriding Silent volume setting	● → Tools → ● → In PIM/Life menu, Simulated Call → ● → For Silent Mode → ● Ring → ● → Yes → ● → ⊙				
.	7 Timing 7 (3) 7 100 7 (3) 7 (3)				
Countdown Tim					
	Start Here ● → Tools → ● → ❖ Clock/Gauge → Countdown Timer → ● → ◎ → Illumi				
Countdown Tin	Start Here				

Simulated Call



Changing Small Light & Key Illumination	Start Here
	Changing Light Color Light Color Select color
settings	Changing Key Illumination Pattern Key Pattern
	Disabling Small Light & Key Illumination Switch On/Off → ● → Off → ● → ∞

Hour Minder

Changing Hour Minder tone/video	● Tools • • Clock/Gauge Hour Minder • Advanced • Assign Tone/Video: • Select folder • Select tone/file • • Select start point if required.	
Setting handset to vibrate at Hour Minder Time	● Tools ● ● ○ Clock/Gauge Hour Minder ● ● Advanced ● Vibration: ● ● On or Link to Sound ● ● ○ ● ○ ● ○ ● ○ ● ○ ● ○ ● ○ ● ○ ● ○	

	Start Here
Changing Illumi Display settings	Using Preset Pattern Pattern Setting Preset Pattern Pres
	Using Custom Pattern Pattern Setting
	Disabling Illumi Display Switch On/Off
	Start Here
	Setting Ringtones to Control Illumination Switch On/Off
Changing Small Light & Key Illumination	Changing Light Color Light Color ● ● Select color ● ● ≫ ≫
settings	Changing Key Illumination Pattern Key Pattern → ● → Select pattern → ● → ∞ → ∞ → ∞ • Not effective when Switch On/Off is set to Link to Sound.
	Disabling Small Light & Key Illumination Switch On/Off \Rightarrow $\textcircled{0} \Rightarrow$ Off \Rightarrow $\textcircled{0} \Rightarrow$ $\textcircled{0} \Rightarrow$ $\textcircled{0} \Rightarrow$ $\textcircled{0} \Rightarrow$

Sounding Hour Minder tone even in Manner mode	● Tools ● O Clock/Gauge Hour Minder ● Advanced ● For Manner Mode: ● Ring ● Yes ● ⊙			
Activating Hour Minder based on	● → Tools → ● → ⊙ Clock/Gauge → Hour Minder → ● → Advanced → ● → Link to			
World Clock time	World Clk: On On World Clk: World C			

Pedometer

Changing Pedometer indicator	Settings Settings In Sound/Display menu, Display Standby Display Pedometer Select item Select item				
Using Pedometer Calendar	● * Tools * ● * • Clock/Gauge * Pedometer * ● * • Select date * ● • Degree of achievement appears. • Press ※ or ※ to view previous or next month.				
Checking accumulated data	● ▼ Tools ▼ ● ♥ ⓒ Clock/Gauge ▼ Pedometer ▼ ● ♥ ⑤ ▼ Accumulated Data ▼ ● • Change in body information is reflected in the data.				
Resetting accumulated data	● Tools ● ● ○ Clock/Gauge Pedometer ● ● ○ Accumulated Data ● ○ Peset Walk Data ● Enter Handset Code ● Yes ● ● Averages are also reset.				
Setting daily step count reset time	● Tools ● ● ⊖ Clock/Gauge → Pedometer ● ● ⊜ → Settings ● → Count Reset Time ● ● Enter time ● ● Yes ●				



S! GPS Navi

Sending current location via mail	● **Tools ** ● **	
Changing map source URL	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	
	Adding URLs <not set=""> → ● ■ Enter URL → ●</not>	
	Setting Destination URL Select URL ●	
	Viewing/Editing/Deleting URLs	
	Select URL → 🖾 → Display, Edit or Delete → •	
	Follow onscreen prompt.	



	_
Disabling positioning	● Tools ● ● ⊖ Clock/Gauge S! GPS Navi ● NAVI Settings ● → Positioning Lock ● On ● Enter Handset Code ●
Selecting Location Information transmission option	
	Start Here Tools Clock/Gauge S! GPS Navi My Location List or Location Logs Select entry or record See below
	Opening Map
Using My Location & Location Log	Showing Routes via Navi Appli
	Inserting into Message Text ③ → As Msg. Text → ● Complete message → ♡
	Saving to Phone Book (a) → Save to Ph.Book → (a) → As New Entry → (b) → Complete other fields → (b) • To add to an existing entry, select As New Detail.
Saving Location Log records to My Location	Image: Street of the control of th
Deleting Location Log records	● Tools ● ● ○ Clock/Gauge > S! GPS Navi ● Location Logs ● ○ Select record □ □ Delete or Delete All ● ○ Yes ■ ● Omit record selection step when deleting all records.

Suppressing Information window after sending Location Information automatically	● → Tools → ● → ۞ Clock/Gauge → S! GPS Navi → ● → NAVI Settings → ● → Inform Location → ● → Do not Show → ● → Enter Handset Code → ●
---	--

м.						
M	O	te	n	а	d	

Notepad	
Editing Notepad	Start Here
	Editing Text Edit Text ● ■ Edit ●
	Changing Category Change Category Select Category O
Searching text within all entries	● ** Tools ** ● ** • Doc./Rec. ** Notepad ** ● ** Select entry ** ⑤ ** Search ** ● ** Enter text ** ●
Inserting Notepad text into message text	● Tools ● Doc./Rec. Notepad ● Select entry ⑤ Send ● As Message Text ● SI Mail or SMS ● Complete message ♡ ● SI Mail Composition window opens automatically depending on character count.
Sending entries via S! Mail	● Tools • ● • Doc./Rec. Notepad • • Select entry • □ • Send • • • Via Message • • Complete message • •
Creating text files	● Tools ● ● Doc./Rec. Notepad ● Select entry ⑤ Setting/Manage ● Create Text File ● Enter name ● Save here ●

Importing text files	● * Tools * ● * ⊙ Doc./Rec. * Notepad * ● * Select entry * ⑤ * Setting/Manage * ● * Import Text File * ● * Select file * ●
Checking memory status	 Tools Ooc./Rec. Notepad Select entry Setting/Manage Memory Status O
Opening properties	 Tools Doc./Rec. Notepad Details Details

Voice Recorder

Saving longer recordings	● Tools ● ● ⊙ Doc./Rec. ➤ Voice Recorder ● ● ○ ★ Record Time ★ ● ★ Extended Voice ★ ● ★ Recording starts ● ★ Recording ends ■ Insert Memory Card to record in Extended Voice mode. (Recording is saved automatically.)
Sending Voice files via S! Mail	● ** Tools ** ● ** ◆ Doc./Rec. ** Voice Recorder ** ● ** ● ** Recording starts ** ● ** Recording ends ** Save and Send ** ● ** Complete message ** ○ • Available in For Message mode.
Switching storage media	● Tools ● ● ○ Doc./Rec. Voice Recorder ● ● ② Save Recording to ● Select option ● ● • Available in For Message mode. • Set to Ask Each Time to select media after every recording.

Scan Barcode	
Scanning during text entry	Start Here In a text entry window, (a) ⇒ Scan ⇒ (b) ⇒ Scan Code ⇒ (b) ⇒ Frame barcode in center of Display ⇒ (c) ⇒ See below
	Pasting All Scan Results
	Pasting a Part of Scan Results ⑤ → Select first character → ● → Highlight text range → ●
Scanning continuously	Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● © Continuous Scan ● On ● Frame barcode in center of Display ● Choose Yes to continue scanning or No and press ● to view scan results.
Reading saved barcode images	● * Tools * ● * • Doc./Rec. * Barcode/ Scan * ● * Open Barcode * ● * Select file * ●
Saving scan results	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * ② * Save * ●
Saving to Notepad	● Tools ● ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● ● ⑤ Notepad ● ●

Saving linked info to Phone Book	● Tools ● ODC./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select number or mail address ● O Save to Ph.Book ● As New Entry ● ● Complete other fields ● O To add to an existing entry, select As New Detail. ● When MEMORY: appears in scan results, press ● to enter the items underlined with a dotted line automatically in Phone Book entry window.
Opening saved scan results	● Tools ● ● Doc./Rec. ■ Barcode/ Scan ● Scanned Results ● ● Select file ● ● • Select a file and press ⊕ to rename files, open properties or delete files. • Some files may not open.
Using linked info	Start Here ● → Tools → ● → Doc./Rec. → Barcode/Scan → ● → Scan Barcode → ● → Frame barcode in center of Display → ● See below
	Dialing Numbers Select phone number ● ● ●
	Sending Messages Select mail address ▶ ● Complete message ▶ ♥ • When MAILTO: appears in scan results, press • to enter the items underlined with a dotted line automatically in Mail Composition window.
	Accessing Internet Sites Select URL

Using images as Wallpaper	● Tools ● ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select image ◎ Set as Wallpaper ● ● • For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.
Saving images & melodies	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * Select file * ⑤ * To Data Folder * ●
Opening or playing files	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * Select file • ●
Using images for System Graphics	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select image ● As System ● Select item ● Specify image area ● ● • Some images may be usable without specifying image area.

Pasting to message text	Start Here ● → Tools → ● → ○ Doc./Rec. → Barcode/Scan → ● → Scan Barcode → ● → Frame barcode in center of Display → ● → Send Message → ● → See below
	All Text
	Selected Text ② → Select first character → ● → Highlight text range → ● → S! Mail or SMS → ● → Complete message → ⊙ • S! Mail Composition window opens automatically depending on character count.
Copying text	Start Here
	Text ③ → Copy → ● → Select first character → ● → Highlight text range → ●
	Number, Address or URL Select number, mail address or URL → ⑤ → Copy Telephone, Copy Address or Copy URL → ⑥

Scan Card	
Saving to Notepad	● * Tools * • * • Doc./Rec. * Barcode/ Scan * • * Scan Card * • * Frame card in center of Display * • • • ® * Notepad * •
Pasting to message text	Start Here ● → Tools → ● → Doc./Rec. → Barcode/Scan → ● → Scan Card → ● → Frame card in center of Display → ● → ● → ® → Send Message → ● → See below
	All Text
	Selected Text ③ Select first character → → Highlight text range → → SI Mail or SMS → → Complete message → ○ • SI Mail Composition window opens automatically depending on character count.
Copying text	● → Tools → ● → ⊙ Doc./Rec. → Barcode/ Scan → ● → Scan Card → ● → Frame card in center of Display → ● → ◎ → Copy → ● → Select first character → ● → Highlight text range → ●

Scan	Text


Court Text	
Scanning and pasting during text entry	In a text entry window, ^(a) → Scan → (b) → Scan Text → (c) → Frame text in center of Display → (c) → Select line → (c) → (c)
Scanning more text	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Text ● Frame text in center of Display ● Select line ● ● Continue Part or Scan More ● Select Continue Part to enter additional text or Scan More to enter text after a line break.
Saving scan results	● Tools ● ODOC/Rec. Barcode/ Scan ● Scan Text ● Frame text in center of Display ● Select line ● ● ■ Save ●
Saving linked info to Phone Book	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Text ● Frame text in center of Display ● Select line ● Select number or mail address ⑤ Save to Ph.Book ● As New Entry ● Complete other fields ♥ ♡ • To add to an existing entry, select As New Detail.
Opening saved scan results	● Tools ● ● Doc./Rec. Barcode/ Scan ● Scanned Results ● Select file ● ● • Select a file and press ⑤ to rename files, open properties or delete files. • Some files may not open.

Using linked info	Start Here
	Sending Messages Select mail address → ● Complete message → ♡
	Accessing Internet Sites Select URL
Pasting to message text	Start Here
	All Text
	Selected Text ③ → Select first character → ● → Highlight text range → ● → SI Mail or SMS → ● → Complete message → ○ • S! Mail Composition window opens automatically depending on character count.


Kanji Grabber

Scanning and pasting during text entry window, ③ → Scan → ⑥ → Kanji Grabber → ⑥ → Frame kanji in Loupe → Scan results appear → ⑥

 Osaifu-Keitai®



  Battery may be low. Charge battery or install a charged battery.



• Check logo area. Foreign articles can block/hamper recognition.

Call Remote Lock does not activate even after specified number of Missed Calls

- Missed Call count is reset by calls from other numbers. If series is interrupted, start over from the beginning.
- When Call Forwarding is active,
 Missed Calls may not be recorded.

Wakeup TV

TV does not activate with specified channel

 If Wakeup TV Time arrives while TV is active, channel does not switch to the specified one.

 
Voice Recorder



 If incompatible microphone is connected, recording may fail.



 Avoid shocks to handset while recording; may cause noise or skipping.



 Recording window may take longer to open as more Voice files are saved on Memory Card.

Scanning Barcode/Card/Text

Cannot read barcodes properly

- Scan may fail if barcode is dirty or unclear.
 Scan may fail if barcode is scanned under inadequate light.
- Scan may fail if multiple barcodes are captured at one time.

Cannot read barcodes during text entry

 Scanning is not available during calls or when mobile camera is active.

Cannot read split QR Codes in Data Folder automatically

 When scan fails, follow onscreen instructions and select next barcode image manually.

Cannot scan business cards properly

- Scan fails if business card is printed in light-colored text on a dark background, handwritten or printed in casual/ decorative fonts, decorated with a background pattern, or designed with both vertical and horizontal text.
- Scan may fail if business card is printed in light-colored text on a light background, printed in italics or extremely small fonts, decorated with a logo or logo-like text, printed on a glossy paper or other material, or dirty/folded.

8

Cannot scan text properly

- Scanning over 35 characters at one time may yield poor results.
- Adjust to frame text in []. Letters at the ends may be distorted.

