

Data Folder	14-2
Opening Files	14-3
Managing Files & Folders.....	14-4

Memory Card.....	14-5
Using Memory Card	14-5
Additional Functions	14-7
Troubleshooting.....	14-10

14

Data Folder & Memory Card



Data Folder

Handset files are organized in folders by file format.

■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Still images on Memory Card (images captured with save location set to DCIM)
Ring Songs-Tones*	Downloaded melodies and other sound files
S! Appli*	S! Applications
Widget*	Widgets
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Lifestyle-Appli*	Lifestyle-Appli required to use Osaifu-Keitai®
Books*	Downloaded e-Books, etc.
Customized Screen*	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Decoration Call*	Decoration Call files created on handset or obtained via mail
Flash®	Downloaded Flash® (animation) files
Other Documents	Other files (Dictionary files, etc.)

*Contains corresponding Yahoo! Keitai menu shortcut.

Checking Memory Status


● ➔ Data Folder ➔ ● ➔ Memory Status ➔ ● ➔ Phone Memory or Memory Card ➔ ●

- The category **Others**: includes Data Folder management files, Saved Pages, etc.
- Delete messages/files when memory is low. Handset performance may be affected when memory is full.



Opening Files

1 → Data Folder →

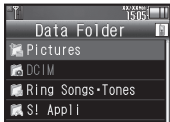

- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press .

2 Select folder →

- To open a sub folder, select it and press .



File List

3 Select file →



- The content plays or appears.
- To return to file list, press .

Handling Open Images

- Press to enlarge, or press / or / to open next or previous image. Press to rotate 90 degrees clockwise.

Attaching to Mail

After , select file → → *Send/ Blog* → → *As Message* →

- If a confirmation appears, follow onscreen instructions.

Copy Protected Files (or)

- Some functions may be unavailable.

Slide Show

Available for Pictures or DCIM folder.

1 In file list, select file →

2 *Slide Show* →

- Slide Show starts.

3 → Slide Show stops

Changing Interval

After , → *Speed* → → *Select speed* →

- When Speed is set to **Manual**, press / or / to advance or reverse frame.

Note

- Backlight stays on during Slide Show; exit to save battery power.

Advanced

- Switching file list view
- Changing image quality
- Changing Slide Show settings
- Using files as Wallpaper
- Using files as ringtones
- Using files as ringvideos (And more on P.14-7 - 14-8)



Using Memory Card

Use microSD/microSDHC Memory Card (hereafter "Memory Card") to save and organize files for use on 942SH.

Use recommended Memory Cards only. For details, see **P.17-23** "microSD Memory Card Compatibility."


Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never remove Memory Card or battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

Inserting & Removing


First, power handset off.

1 Remove cover

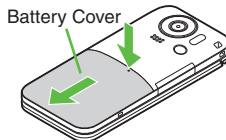


- Press and slide as shown.

2 Insert card

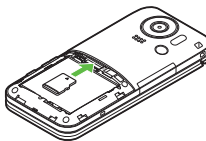

- With terminal side down, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.

3 Close cover

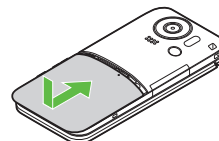

- Position and slide the cover gently as shown until it stops.

If Appears after Power On

- Memory Card may not be inserted properly; reinsert the card.
- Removing Memory Card**
- Gently push in card and release it; card pops out. Pull card straight out gently.



Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.

1 **Settings** **Phone/** **Memory Card**

2 **Format Card** **Yes**

- Offline Mode is set. Handset transmissions are suspended until format is complete.

3 **Enter Handset Code**

4 **Yes**
• To cancel, choose **No** and press .

Precaution

- Never remove Memory Card or battery while formatting; may cause damage.

Opening Memory Card Files

1 **Data Folder**

2 **Change to MemoryCard**

- Memory Card Data Folder opens.

3 **Select folder**


To open a sub folder, select it and press .

4 **Select file**

Advanced

- Using HTML files on Memory Card (P.14-9)



File/Folder View Settings	
Switching file list view	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → ☰ → Manage Items → ● → Change List View → ● → Select option → ●
Changing image quality	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select file → ● → ☰ → Switch Display (Picture Quality for Flash® files) → ● → Select quality → ●
Changing transition effect when using 	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select file → ● → ☰ → Switch Effect → ● → Select effect → ●
Changing Slide Show settings	<ul style="list-style-type: none"> Start Here ● → Data Folder → ● → Select folder → ● → ● → Select file → ● → ☰ → Slide Show → ● → ☰ → See below
	<p>Playing Once</p> <p>Repeat → ● → Off → ●</p>
	<p>Playing Music</p> <p>BGM Settings → ● → Switch On/Off → ● → On → ●</p>
	<p>Changing Music</p> <p>BGM Settings → ● → Play Ring Tones → ●</p> <p>Select folder → ● → Select file → ●</p>

Changing Slide Show settings	<ul style="list-style-type: none"> Start Here ● → Data Folder → ● → Select folder → ● → ● → Select file → ● → ☰ → Slide Show → ● → ☰ → See below
	<p>Changing Key Illumination Pattern</p> <p>Set Key Illumi → ● → Key Pattern → ● → Select pattern → ● → ▼</p>
	<p>Disabling Key Illumination</p> <p>Set Key Illumi → ● → Switch On/Off → ● → Off → ● → ▼</p>
	<p>Hiding Softkeys</p> <p>SW Guide Display → ● → Off → ●</p>
Showing Softkeys in image view	<p>Setting Backlight to Turn Off after a Period of Time</p> <p>Always Backlight → ● → Off → ●</p> <ul style="list-style-type: none"> ● Choosing Off applies Display Backlight settings. (Display remains on during Slide Show regardless of Display Saving setting.)
	<p>Changing Image Transition Effect</p> <p>Switch → ● → Select effect → ●</p>




Using Files/Folders

Using files as Wallpaper	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ☰ → <i>Set as Wallpaper</i> → ● → ● • For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.
Using files as ringtones	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ☰ → <i>Set as Ringtone</i> → ● → ● <i>Select item</i> → ● • If prompted, enter ring time and press ●. • If a confirmation appears, follow onscreen instructions.
Using files as ringvideos	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Videos</i> → ● → ● <i>Select file</i> → ☰ → <i>Set as Ring Video</i> → ● → ● <i>Select item</i> → ● • If prompted, enter ring time and press ●.
Saving Phone Book entries	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ☰ → <i>Save to Phone Book</i> → ● → <i>As New Entry</i> → ● → <i>Complete other fields</i> → ▼ • To add to an existing entry, select <i>As New Detail</i>.
Activating mobile camera, etc. in corresponding folders	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → ☰ → <i>Take Picture, Record Video or Record Voice</i> → ●

Managing Files/Folders

Renaming folders	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select folder</i> → ☰ → <i>Manage Items</i> → ● → <i>Rename</i> → ● → <i>Enter name</i> → ● • Assign different names to folders within a layer.
Opening file properties	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ☰ → <i>Details</i> → ●
Renaming files	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → <i>Select file</i> → ☰ → <i>Manage Items</i> → ● → ● <i>Rename</i> → ● → <i>Enter name</i> → ●
Sorting files	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → ☰ → <i>Manage Items</i> → ● → ● → <i>Sort</i> → ● → ● <i>Select method</i> → ●
Deleting files & created folders	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <small>[Start Here]</small> ● → <i>Data Folder</i> → ● → <i>Select folder</i> → ● → ● → <i>See below</i> </div> <p>Single Files</p> <ul style="list-style-type: none"> <i>Select file</i> → ☰ → <i>Delete</i> → ● → <i>Yes</i> → ● <p>Folder & Files Within</p> <ul style="list-style-type: none"> <i>Select folder</i> → ☰ → <i>Delete</i> → ● → <i>Enter Handset Code</i> → ● → <i>Yes</i> → ●



Handling SVG files	<input type="radio"/> Start Here → <input type="radio"/> Data Folder → <input type="radio"/> Other Documents → <input type="radio"/> Select file → <input type="radio"/> See below
	Line Scroll 
	Page Scroll <input type="button" value="2 ↵"/> (Up), <input type="button" value="8 ↵"/> (Down), <input type="button" value="6 ↵"/> (Right), <input type="button" value="4 ↵"/> (Left)
	Zoom <input type="button" value="1 ↵"/> (Zoom out), <input type="button" value="3 ↵"/> (Zoom in)
	Rotate <input type="button" value="7 ↵"/> (Counterclockwise), <input type="button" value="9 ↵"/> (Clockwise)
	Key Action Mode <input type="button" value="0 ⇨"/>
	Default View <input type="button" value="5 ↵"/>

Memory Card

Using HTML files on Memory Card	<input type="radio"/> Settings → <input type="radio"/> Phone/☎ → Memory Card → <input type="radio"/> SD Local Contents → <input type="radio"/> Select title → <input type="radio"/>
---------------------------------	---



Managing Files/Folders

? Cannot copy files

- Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)

? Copied/moved files cannot be used on PCs, etc.

- Some files may not be usable on other SoftBank handsets or PCs, etc.

? Cannot sort files properly

- Check the number of files/folders in the folder. Files/folders in folders containing 961 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.

? Cannot use some characters in file/folder names

- Single-byte Symbols ¥, /, :, ;, ,, <, >, /, ?, # and " are not supported.

