Introduction

Thank you for purchasing SoftBank 944SH.

- For proper handset use, read "Quick Tips" (in the box) and this guide beforehand.
- Accessible SoftBank Mobile services may vary by service area, subscription, etc.

SoftBank 944SH is compatible with both 3G and GSM network technologies.

Notes

- Copying this guide in whole or part without authorization is prohibited.
- Guide content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this guide. Please contact SoftBank Mobile Customer Center, General Information (**P.17-43**) about unclear or missing information.

Chapter Contents At A Glance

Getting Started	1
Basic Operations	2
Universal Operations, Etc.	3
Calling	4
Messaging	5
Internet	6
Digital TV	7
Camera & Imaging	8
Video & Music	9
S! Applications & Widgets	10
Handy Extras	11
Entertainment	12
Handset Security	13
Data Folder & Memory Card	14
Connectivity & File Backup	15
Handset Customization	16
Appendix	17

i



- •Most operation descriptions are based on default settings^{*} with handset open (**P.1-2**) in Standby (**P.1-6**).
- •Operations and results may differ by handset status.
- •Sample screenshots, etc. are provided for reference only.
- •Actual handset windows, menus, etc. may differ in appearance.
- •"(Japanese)" appears next to functions or applications which require Japanese ability to use as intended.
- In this guide and on handset, "abroad" means "outside Japan" with regard to handset/service usage.

^{*}With the exception that Handset Code and Administrator Code are set.

Table of Contents

Guide Usage Notes ii
Table of Contents iii
Accessoriesv
Safety Precautions vi

- -

1 Getting Started

Handset Parts	1-2
Charging Battery	1-4
Power On/Off	1-6
Display & Indicators	1-7
Security Codes	1-11

2 Basic Operations

Interface & Storage	2-2
Menu Operations	2-4
Spinguru Menu	2-6
Accessing Functions	2-9
Sub Display2	-13
Mobile Manners 2	-21
Motion Control2	-22
Basic Tools2	-24
Double Number2	-25
Additional Functions2	-28
2 Universal Operations Etc.	

Font Size	3-2
Wallpaper	3-3
Customized Screen	3-4
Sounds & Alerts	3-5
Text Entry	3-6
User Dictionary	3-11
Dictionary	3-12
Search	3-15
Scratch Pad	3-16

Рпопе Воок
Additional Functions3-20
Troubleshooting
4 Calling
Emergency Calls
Voice Calling 4-3
Video Calling
Speed Dial & Rakutomo Link 4-6
Call Log
Call Time
Call Barring4-10
Optional Services 4-12
Additional Functions4-14
Troubleshooting4-21
5 Messaging
Messaging5-2
Sending Messages 5-4
Incoming Messages5-13
Handling Messages5-16
Chat Folder 5-19
Mail Groups5-20
PC Mail5-21
Additional Functions5-24
Troubleshooting5-41
6 Internet
Internet Services6-2
Yahoo! Keitai6-3
PC Sites6-5
Browsing6-6
Bookmarks & Saved Pages 6-8
RSS Feeds6-9

· · -

Additional Functions6-10
Troubleshooting6-18
7 Digital TV
Digital TV7-2
Recording/Playing7-7
TV Timer7-9
Time Shift7-10
Additional Functions7-11
Troubleshooting7-17
8 Camera & Imaging
Camera8-2
Photo Camera8-5
Video Camera8-16
Opening Files8-18
Editing Images8-22
DPOF8-26
Additional Functions8-27
Troubleshooting8-33
9 Video & Music
Videos/Music9-2
Media Player9-3
Music9-5
Video9-6
Playlists
Additional Functions9-8
Troubleshooting9-12
10 S! Applications & Widgets
S! Appli10-2
Mobile Widget 10-3
Additional Functions10-6

Table of Contents

Troubleshooting 10-10
11 Handy Extras
Calendar & Tasks 11-2
Alarms 11-8
Wakeup TV 11-10
Relaxation Time 11-12
Household Accounts 11-13
Calculator 11-17
Expenses Memo 11-18
Osaifu-Keitai [®] 11-19
Simulated Call 11-23
Stopwatch 11-24
Countdown Timer 11-25
World Clock 11-26
Hour Minder 11-27
Pedometer 11-28
Compass 11-30
S! GPS Navi 11-31
Document Viewer 11-34
Notepad 11-35
ASCII Art 11-36
Voice Recorder 11-37
Scan Barcode 11-38
Create QR Code 11-39
Scan Card 11-40
Scan Text 11-41
Kanji Grabber 11-42
Additional Functions 11-43
Troubleshooting 11-56
12 Entertainment
S! Quick News 12-2

S! Information Channel 12-3
Content Downloads 12-4
e-Books12-5
S! Friend's Status 12-6
S! Circle Talk 12-9
Blog Tool 12-11
Additional Functions 12-13
Troubleshooting 12-17
13 Handset Security
Handset Security 13-2
Function Control 13-4
Additional Functions 13-5
14 Data Folder & Memory Card
Data Folder 14-2
Memory Card 14-5
Additional Functions 14-7
Troubleshooting 14-10
15 Connectivity & File Backup
Wi-Fi 15-2
Infrared15-7
IC Transmission 15-11
Bluetooth [®] 15-13
External Device Connection 15-17
Backup 15-18
S! Addressbook Back-up (SAB)15-20
Additional Functions 15-23
Troubleshooting 15-27
16 Handset Customization
Date & Time 16-2
Display & Illumination16-3

Incoming Transmissions	
Sounds	
Connectivity	16-7
Reset	16-8
17 Appendix	
USIM Card	17-2
Battery	17-4
Software Update	17-5
Cleaning Handset	17-6
Troubleshooting	17-7
Text Entry Key Assignments	17-9
Pager Codes	. 17-11
Character Codes	. 17-12
Weather Indicators	. 17-18
Specifications	. 17-19
Menu List	. 17-26
Index	. 17-34
Warranty & Service	. 17-42
Customer Service	. 17-43



• Use specified Charger or Headphones (each sold separately) only.


Read safety precautions before using handset.

- Observe precautions to avoid injury to self or others, or damage to property.
- SoftBank Mobile is not liable for any damages resulting from use of this product.

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

Great risk of death or serious injury from improper use
Risk of death or serious injury from improper use
Risk of serious injury or damage to property from improper use

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

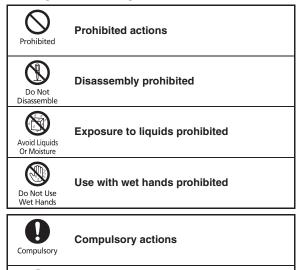

Unplug Charger from outlet

Disconnect Power Source

Handset, Battery, USIM Card, Desktop Holder, Charger (Sold Separately) & Memory Card (Sold Separately)



Use specified battery, Desktop Holder and Charger only.



Do Not

Disassemble

Non-specified equipment use may cause battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.

Do not disassemble, modify or solder handset or related hardware. May cause fire, injury, electric shock or malfunction. Battery may leak.

overheat, burst or ignite.

Modifying handsets is prohibited by the Radio Law and subject to a penalty.

Do not expose internal handset parts, battery, Desktop Holder or Charger to liquids.

Do not let liquid-exposed internal parts Or Moisture remain wet; do not charge wet battery. May cause overheating, electric shock, fire, injury or malfunction. Use handset/ related hardware properly/appropriately.



Do not charge battery in or expose handset or related hardware to extreme heat (e.g., near fire or sources of heat, in direct sunlight. inside vehicles, etc.).

May cause warping/malfunction; battery may leak, overheat, ignite or burst Handset or related hardware may become hot to the touch. leading to burn injuries, etc.

Do not force battery/Charger into handset. Check the direction and retrv.


Battery may leak, overheat, burst, ianite. etc.

WARNING

Do not place handset, battery, Desktop Holder or Charger in/on ovens, microwave ovens, pressure cookers, induction stoves or other cooking appliances.

Battery may leak, overheat, burst or ignite. Handset, Desktop Holder or Charger may overheat, emit smoke, ignite, malfunction, etc.



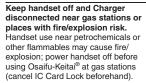


Do not apply strong shocks or impacts.

Do not drop/throw handset or related hardware. Battery may leak, overheat, burst or ignite, resulting in fire, electric shock, malfunction, etc.

If there is unusual sound/odor. smoke or any other abnormality: Continued use may cause fire, electric shock, etc.; grasp plug to disconnect Charger, power handset off, then remove battery, being careful not to burn or injure yourself.



Prohibited

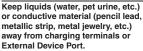

May cause short circuit, resulting in fire, malfunction, etc.



vii





Prohibited



Prohibited



Do not charge battery while handset is wet.

May cause electric shock or short Prohibited circuit, resulting in fire, malfunction, etc.

Do not expose handset or related hardware to hot air from dryers, etc. to dry them or for any other



Prohibited purpose. Avoid saunas or hot water. Battery may leak, overheat, burst or ignite. Handset, Desktop Holder or Charger may overheat, emit smoke, ignite or malfunction, etc.



Do not place handset or related hardware on unstable surfaces. Handset or related hardware may fall. resulting in injury, malfunction, etc.: take added care when Vibration is set



Keep handset and related hardware out of infants' reach.

or while charging.

Infants may choke from swallowing handset or related hardware or be iniured. etc.

If your child is using handset/ related hardware, explain all instructions and supervise usage. Misuse may cause injury, etc.



Read battery label to confirm battery type: use/dispose of battery accordingly.

Symbol on Label	Battery Type
Li-ion00	Lithium-ion

Do not dispose of battery in fire. Battery may leak, burst, ignite, etc.



Prohibited

Compulsory

Do not damage battery (with a nail, hammer, foot, etc.) or subject it to strong impacts or shocks. Battery may leak, overheat, burst, ignite, etc.

Keep wire or other metal objects away from battery terminals. Do not carry/store battery with conductive

Prohibited material (pencil lead, metallic strip, metal jewelry, etc.). Battery may leak, overheat, burst,

ignite, etc.

If battery fluid gets in eyes, do not rub: rinse with water and consult a doctor immediately.

Eyes may be severely damaged.



If battery fluid contacts skin or clothes, discontinue handset use and rinse with clean water immediately. May cause skin damage.



If battery does not charge properly. stop trying.



Battery may leak, overheat. burst. ianite. etc.



If there is abnormal odor, excessive heat, discoloration or distortion, remove battery, being careful not to burn or injure yourself. Avoid fire sources.



Continued use may cause battery to leak, overheat, burst, ignite, etc.

Keep battery away from pets. Pet bites may cause battery to leak, burst, overheat, ignite, etc.



Compulsory



Do not dispose of an exhausted battery with ordinary refuse. Tape over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.







Compulsory

Handset

Prohibited

EN60825-1:1994 A1:2002 & A2:2001

CLASS 1

LED Product

Do not use Mobile Light near people's faces.

Evesight may be temporarily affected leading to accidents.

CAUTION:


Use of controls.

adjustments or

performance of procedure other than those specified

herein may result in hazardous radiation

exposure. As the emission level from Mobile Light LED used in this product is harmful to the eyes, do not attempt to disassemble the cabinet. Servicing is limited to qualified servicing station only.

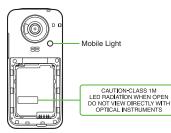

Mobile Light LED Properties

- a) Emission Duration: Continuous
- b) Wavelength

White: 400 - 700 nm

c) Maximum Emission Output White: 740 µW (1.2 mW inside handset) Do not use handset while driving or cycling.

Accidents may result.

Phone use while driving or cycling is prohibited by law and subject to a penalty; park legally beforehand.

Power handset off near electronic devices that employ high precision control systems or weak signals. May cause electronic malfunctions, etc.

Take added care near these devices: Hearing aids, implanted pacemakers/ defibrillators and other electronic medical equipment; fire alarms, automatic doors and other automatic control devices

Power handset off before boarding aircraft to avoid possible radio wave interference with aircraft operations. If mobile phone use is allowed on


board, follow airline or cabin crew instructions regarding handset use.

Users with a heart condition should adjust ringtone Vibration and Volume as needed. May cause heart damage.

If thunder is heard while outdoors. power handset off: find cover. There is a risk of lightning strike or electric shock



Compulsory

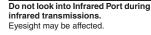





Do not use handset when it may affect a vehicle's electronic equipment. Handset use inside vehicles may



cause electronic equipment to malfunction, resulting in accidents.

If you experience any skin irritation associated with handset use. discontinue handset use and consult a doctor.



Metal and other materials (P.17-19) may cause skin irritation, rashes, or itchiness depending on your physical condition.

Keep handset away from magnetic cards. etc.



Data on bank cards, credit cards, telephone cards, floppy disks, etc. may be lost.

Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently.

Handset may slip, resulting in injury or breakage.



Prohibited









Do not swing handset by strap. May harm self or others; strap may break, resulting in injury or handset malfunction/breakage.



Handset may become hot while in use, especially at high temperature. Prolonged contact with skin may cause burn iniuries.



Prohibited

Compulsory

Always maintain some distance from Speaker while ringtones, music or other handset sounds play.

Excessive volume may damage ears or hearing.

Keep fingers, straps, etc, outside when opening/closing handset. May cause injury, breakage, etc.


Watch TV from a distance in good liaht.

Compulsory

Watching in poor light or too close may affect eyesight.

Moderate handset volume when using Headphones.

Excessive volume may damage ears Compulsory or hearing.

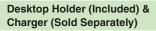

Do not cover/wrap Charger/Desktop Holder while charging.

Charger/Desktop Holder may Prohibited overheat, resulting in fire, malfunction, etc

Use only the specified voltage.

Non-specified voltages may cause fire, malfunction, etc.

• AC Charger: AC 100V-240V Input

• In-Car Charger (use in negative earth vehicles only): DC 12V/24V Input Do not use power adapters. Using Charger with step-up/step-down transformer may cause fire, electric shock or malfunction

Leave Charger unplugged during periods of disuse; grasp plug to disconnect it.

May cause electric shock, fire or malfunction

Use only the specified fuse for In-Car Charger.

Non-specified fuse may cause fire or malfunction. See In-Car Charger manual for details.

Disconnect

heard.

May cause electric shock, etc.



Do Not Use Wet Hands

Do not touch Charger if thunder is

Prohibited



May cause fire, etc. Use in negative

Do not use In-Car Charger in

positive earth vehicles.

earth vehicles only.

Prohibited

Compulsory



Plug Charger firmly into the outlet, keeping the plug and Charger/ Desktop Holder charging terminals away from conductive material (pencil lead, metallic strip, metal iewelry. etc.).

If liquids (water, pet urine, etc.) seep

inside Charger, grasp plug and

May cause electric shock, smoke or

disconnect it immediately.








Power Source



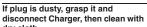





Prohibited

fire.

drv cloth.

Fire may result.

May cause electric shock, short circuit, fire, etc.



Do not touch Charger plug with wet









Compulsory

hands. May cause electric shock, malfunction. etc.

Do not use Desktop Holder inside vehicles.

Extreme temperature or vibration may cause fire or damage handset, etc.

Do not expose Desktop Holder or Charger to liquids/high humidity (e.g., precipitation, bath/shower rooms, restrooms, etc.).



Prohibited

May cause fire, electric shock or malfunction.

Grasp plug and disconnect Charger before cleaning.

May cause electric shock, etc.

Always grasp plug (not cord) to disconnect Charger.



o≟⊂

Pulling the plug by cord may damage Compulsory cord, causing electric shock, fire, etc.


Do not subject AC Charger to strong shocks or impacts while it is plugged into the outlet.

May cause malfunction or injury.

Do not touch charging terminals of Desktop Holder while it is connected to the outlet. May cause burn injuries.



Prohibited

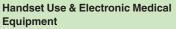

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment,

etc." (Association of Radio Industries and Businesses, March 2001).

Persons with implanted pacemaker/ defibrillator should keep handset more than 22 cm away.

Radio waves may interfere with implanted pacemakers or defibrillators.

If you intend to use electronic medical equipment other than implanted pacemaker/defibrillator outside medical facilities, consult the vendor on radio wave effects. Radio waves may interfere with electronic medical equipment.

Observe these rules inside medical facilities to avoid effects of radio waves on electronic medical equipment:




- Do not enter an operating room or an Intensive or Coronary Care Unit while carrying a handset.
- Keep handset off in hospitals.
- Even in lobbies or other places where handset use is permitted, keep handset off near electronic medical equipment.
- Obev medical facility rules on mobile phone use.

Power handset off in crowds or trains where persons with implanted pacemaker/defibrillator may be near. Radio waves may interfere with implanted pacemakers or defibrillators



causing such devices to malfunction.

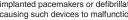



Compulsory

Compulsory

General Notes

General Use

- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of handset/Memory Card files or settings. Keep separate copies of Phone Book entries, etc.
- Handset transmissions/TV signal reception may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- For proper use of Memory Card (sold separately), read the manual beforehand.
- Beware of eavesdropping.

Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

 An export license may be required to carry the handset into other countries if it is to be used by or transferred to another person. However, no such license is required when you take the handset abroad for personal use on a vacation or business trip and then bring it back.
 Export control regulations in the United States provide that an export license granted by the US government is required to carry the handset into Cuba, Iran, North Korea, Sudan or Syria.

Handset & Hardware Care

- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank Mobile is not liable for any resulting damages.
- Use handset within 5°C 35°C (up to 40°C for brief periods in bath/shower rooms, etc.) and 35% - 90% humidity.
- Avoid extreme temperatures or direct sunlight.
- Malfunction resulting from misuse is not covered by the warranty.
- Exposing lens to direct sunlight may damage color filter and affect image color.
- Battery may not charge properly if ports/ terminals are obstructed by dust, etc. Clean with dry cloth, cotton swab, etc.
- Clean handset with soft dry cloth. Using alcohol, thinner, etc. may damage it.
- Avoid scratching Display.
- Avoid heavy objects or excessive pressure. May cause malfunction or injury.
 - Do not sit on handset in back pants pocket.
 - Do not place heavy objects on handset inside handbags, packs, etc.
- Connect only specified products to External Device Port. Other devices may malfunction or cause damage.
- Always power handset off before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.
- Do not power handset off while using Memory Card; may result in data loss or malfunction.
- When walking outside, moderate handset volume to avoid accidents.

Bluetooth® Function

SoftBank Mobile is not liable for any damages resulting from data/information leakage due to use of handset Bluetooth[®] function.

Precautions

The frequency band utilized by handset Bluetooth[®] function is shared with industrial, scientific or medical equipment, including household microwave ovens, etc., and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

- 1 Before using Bluetooth[®], visually confirm that no other radio stations sharing the same frequency band are in use nearby.
- 2 Should interference occur between handset and other radio stations, move or cancel Bluetooth[®] function immediately.
- 3 For additional information and support, contact SoftBank Mobile Customer Center, General Information: From a SoftBank handset, call toll free at 157. To call toll free from landlines, see P.17-43 "Customer Service."

Frequency Band

This radio station utilizes 2.4 GHz band with FHSS modulation. Maximum transmission radius is 10 meters (32 feet). It is not possible for the radio station to avoid using the frequency band of the mobile unit identification apparatus.



Wi-Fi (Wireless LAN)

Wireless LAN (hereafter "Wi-Fi") uses radio waves to enable communication between compatible devices, thus allowing connection to a local area network from anywhere within the range. However, there is a risk of data interception unless security is established. It is advisable for the user to configure security settings on their own responsibility before using Wi-Fi.

- Do not use Wi-Fi near electrical appliances, audiovisual equipment or office automation equipment; may affect Wi-Fi transmission speed, availability, clarity, etc. (There is a possibility of interference especially when a microwave oven is in use.)
- The target access point may not be detected correctly if there are multiple access points nearby.

Precautions

The frequency band utilized by handset Wi-Fi is shared with industrial, scientific or medical equipment, including household microwave ovens, etc., and used by radio stations, amateur radio stations, etc. (hereafter "other radio stations").

- Before using Wi-Fi, visually confirm that no other radio stations sharing the same frequency band are in use nearby.
- 2 Should interference occur between handset and other radio stations, move or disable Wi-Fi immediately.

3 For additional information and support, contact SoftBank Mobile Customer Center, General Information: From a SoftBank handset, call toll free at 157. To call toll free from landlines, see P.17-43 "Customer Service."

Frequency Band

This radio station utilizes 2.4 GHz band with DSSS-OFDM modulation. Maximum transmission radius is 40 meters (131 feet).



Simultaneous Use with Bluetooth®

Both Wi-Fi (IEEE 802.11b/g) and Bluetooth[®] use the 2.4 GHz band. Therefore, Wi-Fi transmission speed, availability and clarity may be affected when Bluetooth[®] device is used near handset or when handset Bluetooth[®] is active. Should interference occur, discontinue use of the Bluetooth[®] device or cancel handset Bluetooth[®].

- This handset supports Wi-Fi channels 1 13. Handset will not connect to access points set to other channels.
- Available channels vary by country.
- For use of Wi-Fi aboard aircraft, check with airline beforehand.
- In some countries/regions, such as France, there are restrictions on the use of Wi-Fi. If you intend to use Wi-Fi on the handset abroad, check the local laws and regulations beforehand.

Function Usage Limits

These functions are disabled after handset upgrade/replacement or service cancellation: Camera; Media Player; S! Applications; TV. After a period of disuse, these functions may be unusable; retrieve Network Information (**P.16-7**) to restore usability.

Mobile Camera

- Mind your manners when using handset camera.
- Test the camera before capturing/recording special moments.
- Do not use handset camera in places where photography or videography is prohibited.

In-Call/Transmission Caution

During calls/transmissions, calling/transmission charges/fees apply even if other functions or operations are simultaneously in use.

Electromagnetic Waves

For body-worn operation, this phone has been tested and meets RF exposure guidelines when used with accessories containing no metal, that position handset a minimum of 15 mm from the body. Use of other accessories may not ensure compliance with RF exposure guidelines.

CE Declaration of Conformity

€€0168

In some countries/regions, such as France, there are restrictions on the use of Wi-Fi. If you intend to use Wi-Fi on the handset abroad, check the local laws and regulations beforehand.

Hereby, Sharp Telecommunications of Europe Ltd, declares that 9445H is in compliance with the essential requirements and other relevant provisions of Directive 1999/EFC. A copy of the original declaration of conformity for each model can be found at the following Internet address: http://www.sharp.co.jp/k-tai/

Battery - CAUTION

Use specified battery or Charger only.

Non-specified equipment use may cause malfunctions, electric shock or fire due to battery leakage, overheating or bursting.

Do not dispose of an exhausted battery with ordinary refuse; always tape over battery terminals before disposal. Take battery to a SoftBank Shop, or follow the local disposal regulations.

Charge battery in ambient temperatures between 5°C and 35°C; outside this range, battery may leak/overheat and performance may deteriorate.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kz. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide'. Highest SAR value:

Model	At the Ear"	On the Body	
944SH	0.528 W/kg	0.660 W/kg	

As SAR is measured utilizing the device's highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the Network. The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a handsfree device to keep the mobile phone away from the head and body.

Please see Electromagnetic Waves on the left for important notes regarding body-worn operation. "Measured in accordance with international guidelines for testing.

Headphone Signal Level

The maximum output voltage for the music player function, measured in accordance with EN 50332-2, is 30.0 mV.

FCC Notice

 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient/relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Highest SAR value:

Model	FCC ID	At the Ear	On the Body
944SH	APYHRO00123	0.454 W/kg	0.374 W/kg

This device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found at http://www.fcc.gov/oet/fccid under the Display Grant section after searching on the corresponding FCC ID (see table on the left). Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Website at <u>http://www.phonefacts.net</u>.

Water & Dust Resistance

944SH Water & Dust Resistance

944SH complies with IPX5 (former JIS protection level 5)¹ and IPX7 (former JIS protection level 7)² water protection standards as well as IP5X (JIS protection level 5)³ dust protection standard, with Port Cover and Battery Cover closed firmly.

¹ IPX5 compliant means that a handset continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min.) discharged from a nozzle (inner diameter: 6.3 mm), from all directions (approximately 3 m from handset) for at least 3 minutes.

- ²IPX7 compliant means that a handset continues to function as a phone after being gently submerged to the depth of 1 m in still tap water at room temperature, left there for approximately 30 minutes, then removed from it.
- ³IP5X compliant means that a handset continues to function as a phone and its safety is maintained after being agitated in a device containing dust of 75 µm or smaller in diameter for 8 hours, then removed from the device.
- Water/dust resistance may be affected under some circumstances. Malfunction resulting from misuse is not covered by the warranty.
- 944SH is compliant with IPX5, IPX7 and IP5X water/dust protection standards. However, ingress of dirt, sand, mud, metal powder, food, beverage, etc. may cause malfunction.

Important Notes

- Close Battery Cover and Port Cover firmly. Debris (hair, sand, fibers, etc.) trapped between cover and base may expose handset to liquid/ dust.
- If Battery/Port Cover is left open liquid exposure may cause handset malfunction/electric shock.
 Power handset off, then remove battery.
- If handset is wet, wipe it with dry cloth.
- Do not open/close Battery/Port Cover with wet hands or while handset is wet.
- Handset is resistant to fresh/tap water at normal temperature (5°C - 35°C) only.

Precautions

- Do not subject handset to soap, detergent, bath powder/oil, sea/pool/spa water, hot water, etc.
- Wash off sea/pool water, beverage, dirt, sand, mud, etc. immediately; residue may cause malfunction if allowed to dry.
- Wash off sand, dirt, etc. completely before use; any residue may damage handset causing malfunction.
- Do not soak handset in bath or pool; never use it in water (including opening/closing of handset and pressing keys).
- Handset is not resistant to water pressure. Avoid high-pressure water/shower (over 6 liters/ min.) or water immersion.
- Do not expose handset to extreme humidity for long periods; avoid prolonged use in bath/ shower rooms.

- Do not use in saunas. Avoid hot air from dryers, etc.
- Use handset within 5°C 35°C (up to 40°C for brief periods in bath/shower rooms, etc.) and 35% - 90% humidity.
- Avoid extreme temperatures (e.g., near stoves, inside refrigerators, etc.).
- Volume may be low when Microphone/Earpiece/ Speaker is wet; dry handset before use.
- Battery, Desktop Holder and optional accessories are not waterproofed or dustproofed.
- Do not subject handset to strong shocks or impacts; do not poke Microphone, Earpiece, Speaker, etc. with a cotton swab or sharp object; water/dust resistance may be affected.
- Avoid placing handset directly on sand. Sand may penetrate Earpiece, Speaker, etc., resulting in low volume.
- Sand, etc. trapped in the hinge may cause excessive friction or noise when opening/closing handset.
- Touch Panel (Sub Display) may not respond properly if wet or touched with wet fingers.
- Do not move handset directly from a cold place to a warm humid place; condensation may occur. Should this happen, dry handset naturally at room temperature.
- 944SH does not float on water.
- Keep handset out of heavy rain.
- Do not let liquid-exposed handset remain wet; exposure to cold may freeze liquid causing malfunction.
- Damaged Battery/Port Cover affects water/dust resistance; contact a SoftBank Shop.

Charging Precautions

- Battery, Desktop Holder and optional accessories are not waterproofed or dustproofed. Avoid exposure to liquids/high humidity (e.g., precipitation, bath/shower rooms, restrooms, etc.); may cause fire, electric shock or damage.
- Never charge battery while handset is wet; may cause fire or damage due to electric shock or short-circuit.
- Close Port Cover firmly after charging via External Device Port. Use Desktop Holder to prevent ingress of water and dust via External Device Port.
- Do not touch Desktop Holder or Charger with wet hands. Electric shock may occur.
- Do not use Desktop Holder or Charger in rooms in which water is regularly in use (kitchens, bath/shower rooms, etc.); may cause fire or electric shock.

Gasket Care & Maintenance

Proper care of the rubber seals around Port Cover and Battery Cover is crucial for continued handset water/dust resistance.

- Do not remove or damage gaskets. Keep them clean.
- Do not insert sharp objects through Port/Battery Cover gaps; may damage gasket and affect water/dust resistance.
- If Port/Battery Cover gasket is damaged or deformed, replace it with a new one.
- To maintain water/dust resistance, replace gaskets every two years regardless of their condition.
- For gasket replacements, contact a SoftBank Shop.
- Damaged Port Cover affects water/dust resistance; contact a SoftBank Shop.
- If Battery Cover is damaged, replace it with a new one. Use of damaged cover may cause electric shock, battery corrosion, etc. due to water seepage.

Rights, Trademarks & Patents

Portrait Rights

Portrait rights protect individuals' right to refuse to be photographed or to refuse unauthorized publication/use of their photographs. Portrait rights consist of the right to privacy, which is applicable to all persons, and the right to publicity, which protects the interests of celebrities. Therefore, photographing others including celebrities and publicizing/distributing their photographs without permission is illegal; use handset camera responsively.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

The software contained in handset is copyrighted material; copyright, moral right and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile or reverse-engineer the software; do not separate it from hardware in whole or part. Video recording and playback are based on **MPEG-4**.

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA.

See http://www.mpegla.com.

This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional license and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and/or (iii) data which is paid for on a title by title basis and is transmitted to an end user for permanent storage and/or use. Such additional license may be obtained from MPEG LA, LLC.

See http://www.mpegla.com for additional details. This product is licensed under the AVC Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use. Additional information may be obtained from MPEG LA, LLC. See http://www.mpegla.com.



Handset employs RSA[®] BSAFE[™] software developed by RSA Security Inc.

RSA is a registered trademark of RSA Security Inc.

BSAFE is a registered trademark of RSA Security Inc. in the United States and/or other countries.

Blend

This product is equipped with JBlend[™] designed to accelerate the performance of Java[™] Application.

Powered by JBlend[™]. Copyright 1997-2010 Aplix Corporation. All rights reserved.

JBlend and JBlend-related brands are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

Java and Java-related brands are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.



The microSD and microSDHC logos are trademarks of SD-3C, LLC.

The Twitter name and logo are registered trademarks of Twitter, Inc.

NetFront

This product employs NetFront Browser (Internet browser) and NetFront SMIL Player developed by ACCESS Co., Ltd.

Copyright© 2010 ACCESS Co., Ltd.

ACCESS and NetFront are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan or other countries.

This product includes a module developed by Independent JPEG Group.

IrSimple[™], IrSS[™] and IrSimpleShot[™] are trademarks of the Infrared Data Association[®].

Bluetooth is a registered trademark of the Bluetooth SIG, Inc.

Bluetooth[®]

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by SHARP is under license.

944SH wireless LAN is based on the IEEE 802.11 standard and is "Wi-Fi CERTIFIED^{TMm} by the Wi-Fi Alliance[®]; interoperability with other devices with the Wi-Fi logo is guaranteed.

944SH is compatible with IEEE 802.11b and IEEE 802.11g standards.



944SH employs Wi-Fi Protected Setup[™] (WPS) which simplifies the wireless LAN security setup (SSID, authentication method, security key, etc.) by using the PBC method or PIN method.



Wi-Fi[®], Wi-Fi Alliance[®], WPA[®], WPA^{2®} and the Wi-Fi CERTIFIED logo are registered trademarks of the Wi-Fi Alliance.

Wi-Fi CERTIFIED[™] and Wi-Fi Protected Setup[™] are trademarks of the Wi-Fi Alliance.

Microsoft, PowerPoint and Excel are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Powered by MascotCapsule[®].

Powered by MascotCapsule[®]/3DView package[™]. MascotCapsule is a registered trademark of HI Corporation.

©2002-2010 HI Corporation. All rights reserved.

FeliCa is a contactless IC card technology developed by Sony Corporation.

FeliCa is a registered trademark of Sony Corporation.

D is a registered trademark of FeliCa Networks, Inc.

Osaifu-Keitai is a registered trademark of NTT DOCOMO, INC.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.



This product contains Adobe[®] Flash[®] Lite[™] player software under license from Adobe Systems Incorporated.

Adobe Flash Lite Copyright © 2003-2007 Adobe Systems Incorporated. All rights reserved. Adobe, Flash and Flash Lite are either registered trademarks of trademarks of Adobe Systems Incorporated in the United States and other countries.

Wakeup TV, VeilView, Smartlink, Simulated Call, AQUOS, Chase focus, Spinguru Menu, Shot Memo, Pretty Arrange Camera, Animation View, Rakutomo Link and MARIMOTCHI are trademarks or registered trademarks of SHARP Corporation.



Document Viewer is enabled by Picsel Technologies.

Picsel, Picsel Powered, Picsel Viewer, Picsel File Viewer, Picsel Document Viewer, Picsel PDF Viewer and the Picsel cube logo are trademarks or registered trademarks of Picsel Technologies Ltd.

Chaku-Uta and Chaku-Uta Full are registered trademarks of Sony Music Entertainment (Japan) Inc.

BookSurfing $^{\otimes}$ is a registered trademark of CELSYS Inc., Voyager Japan, Inc. and INFOCITY Inc.

Genius English-Japanese Dictionary ©2005-2008 Taishukan

Genius Japanese-English Dictionary ©2005-2008 Taishukan

Meikyo Japanese Dictionary ©2005-2008 Taishukan

- Genius English-Japanese Dictionary MX.net ©KONISHI Tomoshichi, MINAMIDE Kosei & Taishukan, 2009
- Genius Japanese-English Dictionary MX.net ©KONISHI Tomoshichi, MINAMIDE Kosei & Taishukan, 2009
- Meikyo Japanese Dictionary MX.net ©KITAHARA Yasuo & Taishukan, 2009
- Imidas Encyclopedia ©SHUEISHA Inc.
- Complete Japanese Encyclopedia (Encyclopedia Nipponica 2001) including "Nipponica Plus," Digital Dai-ji-sen Japanese Dictionary, Shogakukan Progressive English-Japanese Dictionary, Shogakukan Progressive Japanese-English Dictionary @Shogakukan Inc.
- Amazon.co.jp is a trademark of Amazon.com, Inc. or its affiliates.
- Hot Pepper FooMoo ©RECRUIT
- Family Medical Encyclopedia ©Houken 2004
- Guide to Prescription Drugs ©Shigeru Kimura/ Iyakuseidokenkyukai 2008
- Yahoo! Answers ©Yahoo Japan



EUPHONY[™] (a comprehensive sound enhancement system utilizing a virtual sound source processing technology) is a trademark of DiMAGIC Co., Ltd.



Dynamic Range Adjustment is based on iridix technology by Apical Limited.

- Household Accounts[™] is a trademark of Information System Products Co., Ltd.
- Kanji Grabber[®] is a registered trademark of Information System Products Co., Ltd.

PhotoSolid[®], FaceSolid[®], MovieSolid[®], FrameSolid[®], PhotoScouter[®], TrackSolid[®] and Morpho Effect Library[™] are registered trademarks or trademarks of Morpho, Inc. Handset employs Face Sensing Engine (FSE) developed by Oki Electric



Industry Co., Ltd. FSE and the FSE logo are trademarks of Oki Electric Industry Co., Ltd.

AOSS[™] is a trademark of BUFFALO Inc.

Chara Time and MOBILE KAKARICHO[®] are registered trademarks of Primeworks.

Machi-Uta[®] is a registered trademark of KDDI CORPORATION.

SOFTBANK, SoftBank and the SoftBank logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and other countries.

Yahoo! and the Yahoo! and Y! logos are trademarks or registered trademarks of Yahoo! Inc.

CP8 PATENT

mirumo, SI Application, SI GPS Navi, Mobile Widget, SI Quick News, SI Information Channel, SI Friend's Status, SI Circle Talk, SI Addressbook Back-up, Weather Indicator, Double Number, Customized Screen, Video Call, Lifestyle-Appli, Input Memory, PC Mail, PC Site Browser, Multi Job, Graphic Mail, SI Mail, Feeling Mail, Ichi Navi, Sky Mail, Sha-mail, Movie Sha-mail, Secure Remote Lock, Auto Art and Keitai Wi-Fi are trademarks or registered trademarks of SOFTBANK MOBILE Corp.

Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

Specific Absorption Rate (SAR)

944SH meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the body, shall not exceed 2 W/kg². This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-Ionizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

All mobile phones, prior to product launch, must be certified as compliant with government requirements as stipulated by the Radio Law. 944SH has been granted Technical Regulations Conformity Certification by TELECOM ENGINEERING CENTER. Its highest SAR value is 0.609 W/kg. This value was obtained by TELECOM ENGINEERING CENTER as part of the certification process. SAR tests were conducted with handset transmitting at its highest certified power level in accordance with testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network.

Additional information on SAR can be obtained on the following Websites.

Ministry of Internal Affairs and Communications http://www.tele.soumu.go.jp/e/sys/ele/index.htm Association of Radio Industries and Businesses (ARIB) http://www.arib-emf.org/ (Japanese)

*Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

Handset Parts1	-2
Parts & Functions 1	1-2
Charging Battery1	-4
Power On/Off1	-6
Handset Power On/Off 1	1-6


Display & Indicators	1-7
Display	1-7
Indicators	1-9
Security Codes	1-11


Getting Started


Handset Parts

Parts & Functions



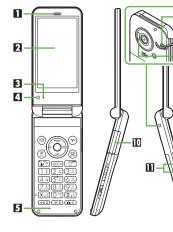

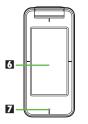

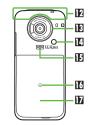

Earpiece
Display
Pressure Vent

8

- 4 Light Sensor
- 5 Microphone
- Sub Display
- 7 Small Light
- Strap Eyelet
- Infrared Port
- External Device Port (with Port Cover)
- Charging Terminals
- I Internal Antenna Location
- E Camera (lens cover)
- Mobile Light
- E Speaker
- 🖸 🕗 Logo
- Battery Cover
- Do not cover or place stickers, etc. over Pressure Vent, Light Sensor or Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Handset Positions





Keep handset closed when not in use.

Handset Open




Open handset to place or answer calls, enter text, etc.

Handset Parts

Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with ^{*} via Set Key Shortcut as needed.

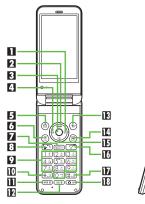

🛯 Multi Selector (right) ⊙

Open Icon View. Long Press to access last opened Icon View page^{*}.

Multi Selector (up) 💿

Open Mobile Widget window. Long Press to open PC Site Browser menu^{*}.

Center Key 🖲

Open Main Menu. Long Press to activate/ cancel Keypad Lock.

🛿 Multi Selector (left) 📀

Open Call Log (All). Long Press to activate/cancel Bluetooth $^{\ensuremath{\mathbb{B}^*}}.$

🖸 Mail Key 🖾

Open Messaging menu. Long Press to open S! Mail Composition window .

Shortcuts & A/a Key 🗷

Open Shortcuts menu. Long Press to show active indicators (Status Icon List).

Clear/Back Key

Play Answer Phone messages. Long Press to activate/cancel Answer Phone.

🖸 Start Key 🔊

Open Rakutomo Link window. Long Press to open Double Number Mode menu.

9 Keypad 0 ** - 9 ***

Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.

🔟 🗙 Key 🔠

19

20

ภา

Enter #, +, P, ? and -. Long Press to activate/cancel Wi-Fi.

Dictionary Key (INTER) Open Dictionary. Long Press to activate/ cancel VeilView

E Multi Job & Manner Key (?) Select handset mode. Long Press to activate/cancel Manner mode.

- E Yahoo! Keitai Key > Open Yahoo! Keitai portal. Long Press to activate Familink Remote.
- 🖪 TV & Text Key 🐵

Activate TV. Long Press to open Change Menu window.

Deen Phone Book, Long Press to open

Exchange Profile menu^{*}.

Power On/Off & End Key 💿

Long Press to power handset off.

🖬 # Key 🏨

Enter #. Long Press to activate/cancel Manner mode.

Camera Key 💿

Activate mobile camera. Long Press to open Album.

Side Keys

🚯 Volume Up Key 💶

Open: Long Press to switch to Sub Display. **Closed:** Toggle Side Light on/off.

🖸 Volume Down Key 💌

Open: Show/hide Softkeys.

Closed: Toggle Home Panels.

2 Shutter Key

Long Press to illuminate Mobile Light. **Closed:** Enable/disable Touch Panel.

Multi Selector & Side Keys

• In this guide, Multi Selector and Side Key operations are indicated as follows:

Press 💿 or 📀	٢
Press 💿 or 🎯	•
Press ⓒ, ⓒ, ⓒ or ⊙	•
Press I or I	

Vector Pad

 Multi Selector touch sensor area. Adjust finger pressure to control scroll speed, or make circular motion for Spinguru Menu.

Charging Battery

Charging Battery

Battery must be inserted in handset to charge it.

- **Charging Battery Outside Japan**
- SoftBank Mobile is not liable for problems resulting from charging battery abroad.

Desktop Holder

Together with Desktop Holder, use specified AC Charger ZTDAA1 (sold separately) only.


- In this guide, ZTDAA1 is referred to as "AC Charger."
- AC Charger and Desktop Holder are not waterproofed or dustproofed. Do not charge battery while handset is wet.
- Handset and AC Charger may warm while charging.

Important AC Charger Usage Note

 Fold back blades after charging. Do not pull, bend or twist the cord.

Important Desktop Holder Usage Notes

- Do not subject to force/pressure.
- Do not attempt to open handset.

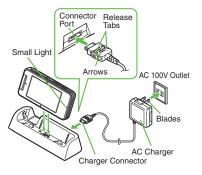

Insert Charger Connector into Desktop Holder

 With arrows up, insert connector until it clicks.

Extend blades

and plug AC **Charger into AC** outlet



Place handset onto Desktop

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.
- **Disconnect 944SH from Desktop Holder**

- **Unplug AC Charger** Squeeze Charger Connector release
- tabs and pull straight out to remove.

When Small Light Flashes

• Battery is unchargeable; may be defective or simply at the end of its life; replace it.

Desktop Holder Materials

 Desktop Holder includes a part containing plant-derived resin, a new eco-friendly material which is expected to reduce CO₂ emissions and oil usage in the entire product life cycle compared to conventional petroleum resin.


Getting Started

Getting Started

Charging with AC Charger Only


Insert Charger Connector into External Device Port.

Using Desktop Holder helps secure External Device Port waterproofing and dustproofing.

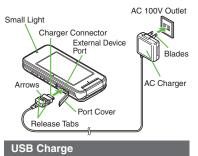

Connect handset (with power on) to PC via USB Cable to charge battery.


- Download and install USB Cable driver beforehand.
- Handset must be on to charge battery.
- Battery may not charge if handset is connected through a USB hub.

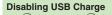

● ➡ Tools ➡ ● ➡ ☺ Connectivity
 ➡ USB Charge ➡ ● ➡ Disable ➡ ●

In-Car Charger

In-Car Charger may be purchased separately.

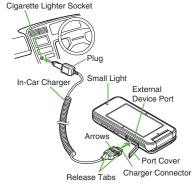

Open Port Cover

Insert Charger Connector

 With arrows up, insert connector until it clicks. Plug Charger into cigarette lighter socket

Start car engine

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

Unplug Charger

Disconnect handset

• Squeeze Charger Connector release tabs and pull straight out to remove.



Important In-Car Charger Usage Notes

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

Power On/Off

Handset Power On/Off

Power On

Follow these steps when powering on 944SH for the first time:

ি (Long)

 Waterproofing/dustproofing guidance appears following Power On Graphic; follow the steps below.

○ ◆ ○ ◆ ○ ◆ ② ◆ ● ◆ 設定
 ◆ ● ◆ Language ◆ ● ◆ English
 ◆ ● ◆ ○ (Long) ◆ ○ (Long) ◆

Change Menu window opens




Select option \Rightarrow \bigcirc

Guide descriptions are based on Standard Menu.




 After Change Menu guidance, My Details setup starts.

6

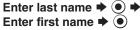

• Change Menu display option confirmation appears.

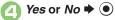



Standby

 Choose No to enter Standby immediately after powering on.

When USIM Card is Not Installed
Insert USIM Card appears; insert the card to use handset.

Retrieving Network Information

Handset initiates Network Information retrieval when O, O, O or V is pressed for the first time.



Follow these steps to retrieve Network Information to use Network-related services and TV; retrieval automatically sets Clock:

Yes **♦ ● Petrieval starts**

 When subscribed to Keitai Wi-Fi, BB mobilepoint setup menu opens; follow onscreen instructions.

Power Off



🕤 (Long)

• After Power Off Graphic, handset shuts down.

Display

Standby



Hereafter, most screenshots omit Mobile Widgets and other icons.

Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)

D		(Lor	ng)
---	--	------	-----



- Active indicators are enlarged; description for selected indicator appears.
- Use 🔄 to select indicators to view their descriptions.
- Press

 to open menu/window
 (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

Information

Information window opens at the bottom for Missed Calls, new mail, etc.



Information Window

Information label (e.g., *Message*, etc.) and count appear in Information window. Select an item and press (•) to open it.

Dpening Information List Manually
$\textcircled{O} \Rightarrow Phone \Rightarrow \textcircled{O} \Rightarrow Information \Rightarrow \textcircled{O}$
Clearing Information List
● ♦ Phone ♦ ● ♦ Information ♦
●

Softkeys

Functions/operations assigned to B, O and D appear at the bottom of Display.



Display Saving

Display goes dark after Display Saving time elapses. Press any key (except c) during a call) to activate it.

Backlight

- Display goes dark during a call.
- (Backlight does not turn off first.)

Indicators

Display Indicators


In Dual Mode, line type appears bottom right of some indicators.

Basic Status

ļ	2	E
	36	Within 3G range
1	GSM	Within GSM range
	1	International roaming in progress
2	Ĩ	Signal strength ¹
3	Ē	Battery strength ²


¹The more bars the better.

²Battery strength % (appears when Display activates, etc.) is an approximation.

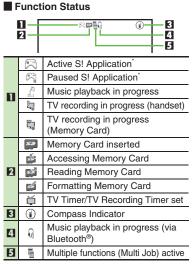


Appears gold for some S! Applications.

Notifications

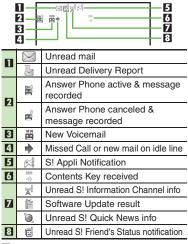

Warnings

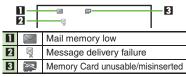

Display & Indicators




Transmissions			
i	1	- - - - - - - - - - - - - -	
п	SSL M	SSL browsing in progress ¹	
•	۲	Packet transmission protocol ready	
A	Z	Receiving mail	
		Sending mail	
3		S! Friend's Status online	
	*	Positioning in progress ²	
4		Software Update in progress	
5	44	Wi-Fi transmission in progress	
Ð		Keitai Wi-Fi available	
6	٣	RSS-compatible site	
7	*	Weather Indicator	
8	(t• 15	Connected to Wi-Fi network ³	

	Ŷ	USB Cable connected
	¢¢	USB transmission in progress
	Į.	Infrared transmission in progress
	<u>ii</u>	Infrared file transfer in progress
	*	Bluetooth [®] transmission ready
9	Ø	Bluetooth [®] transmission in progress (0) appears for multiple connections)
	£	Bluetooth [®] talk in progress
	ũ	IC Transmission in progress
	ð	S! Addressbook Back-up transmission in progress
		PC Site Browser in use
		Direct Browser in use
10		Infrared transmission ready

¹Hidden while Mobile Widget is in use.

²Flashes while positioning. ³The more blue bars the stronger the connection.

Settings

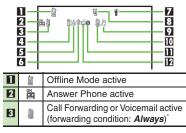

-		
4	1	Schedule/Task (Alarm set)
•	1	Schedule/Task (Alarm unset)
5	Â	Alarm set
6	ø	Hour Minder active
	¢,	Manner mode active
7	a	Drive mode active
		Original mode active
	Ø	VeilView active
8	0	Keypad Lock active
0	8	IC Card Lock active
	1	Ringtone (Silent)
9		Ringtone (Increasing Volume)
-	\$	Vibration for incoming Voice/
	7	Video Calls active
10	1	Auto Answer or Remote Monitor
	-288	active
m	6	Show Secret Data active
		Function Lock (Once) active
12	ů	Wakeup TV set

*Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

Security Codes

Security Codes

These codes are required for handset use. (Set Handset Code and Administrator Code beforehand.)

- · Guide descriptions are based on the assumption that Handset Code and Administrator Code are set.
- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

Handset Code	Use or change some functions
Administrator Code [*]	Required for Reset Settings and Reset All
Center Access Code (Network Password)	Four-digit code selected at contract; access Optional Services via landlines, change service options, or set call restrictions

*Setable on handset

If Security Code is Unset

- Code setup message/window appears whenever Security Code is required.
- Incorrect Code Entry
- Message appears for incorrect code entries; retry.
- Incoming/outgoing call restriction settings will be locked if incorrect code is entered three times consecutively during the setting. To resolve, Center Access Code (Network Password) must be changed.
 - If you have previously changed Network Password on a SoftBank handset, enter the latest code.

Saving Handset Code

Enter four to eight digits.





Locks 🗭 🔘



Locks Menu



Re-enter Handset Code 🌩 🖲

Changing Handset Code

- After ②, enter current Handset Code 🗭
- ➡ Enter new Handset Code ➡ ●
- Re-enter new Handset Code

Getting Started

Saving Administrator Code

Enter four to eight digits.

- In Locks menu, Administrator Setting
 • •



Re-enter Administrator Code **▶** ●

Changing Administrator Code After ⊘, enter current Administrator Code ● ● Enter new Administrator Code ● ● Re-enter new Administrator Code ● ●

Need/UnNeed Setting

Once Handset Code is set, code entry is omitted for some operations by default. For enhanced security, change Need/ UnNeed Setting to require Handset Code entry whenever possible; follow these steps:

- In Locks menu, *Handset* Code Setting **→** ●
- Need/UnNeed Setting

Need **♦ ● ♦** Enter Handset Code **♦ ●**

Interface & Storage	2-2
Handset Interface & Media File	
Storage	2-2
Accessing Functions	2-3
Menu Operations	2-4
Main Menu	2-4
Using Simplified Menus (Simple M	/lenu)
	2-5
Spinguru Menu	2-6
Using Spinguru Menu	2-7
Accessing Functions	2-9
Function Shortcuts	2-9
Toggling Active Functions (Multi J	ob)
	. 2-10
Standby Shortcuts	. 2-11
Icon View	0 10

Sub Display	. 2-13
Sub Display Basics	2-13
Using Sub Display	2-14
Mobile Manners	. 2-21
Motion Control	. 2-22
Basic Tools	. 2-24
My Details & Basic Tools	2-24
Double Number	. 2-25
Using Double Number	2-25
Modes	2-26
Additional Functions	. 2-28

Basic Operations

2



Handset Interface & Media File Storage

Handset Operations

Use handset keys, Touch Panel or Motion Control.

Handset Keys

Use Keypad, etc.; supports all handset operations.



Vector Pad

Multi Selector touch sensor area. Adjust finger pressure to control scroll speed; make circular motion for Spinguru Menu.




Use center area for operations; using edges may inhibit cursor movement/scroll speed.

Motion Control

Move handset (e.g., shake it left or right, turn it over, etc.) to access functions, enlarge/reduce fonts or images, navigate functions, and more. (Complete setup beforehand.)

Touch Panel (Sub Display)

Touch Sub Display to view menus/ information items and navigate functions.

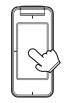

Media File Storage


While a Memory Card is inserted, captured images, downloads and some other files are saved to the card; change this setting in each function as needed.

- My Pictograms and Graphic Mail templates are saved to handset.
- Without a Memory Card, files are saved to handset automatically.



Accessing Functions

Use the following methods as needed.

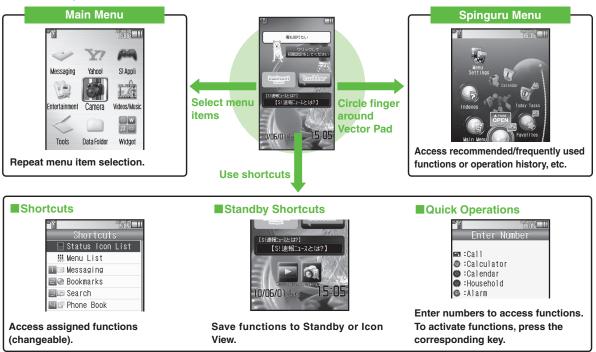

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.

Menu Operations

Main Menu





Select menu item ⇒ ●

	šos 💷 🛙
Tools	
<u>PIM/Lite</u> Clock/Gauge Doc./Rec.	Connectivity
🧰 Calendar	
៉ Exchange Profil	e
🛱 Alarms	
🗊 Wakeup TV	
🗢 Relaxation Time	

- Menu/window opens.
- If Sub Menu opens, use (2) to select an item and press (0).

Tabs

● Menus/lists in a single window appear on separate tabs; use _☉ to toggle tabs.



Reverse Navigation

• Press . If a confirmation appears, follow onscreen prompts.

Returning to Standby

• Press . If a confirmation appears, follow onscreen prompts.

Simple Menu

• Simplify menus and enlarge fonts; ideal for users who use only basic handset functions.

Main Menu Items

	1
Messaging	Open/create messages, etc.
Yahoo!	Browse the Internet
S! Appli	Use S! Applications including games
Entertainment	Read e-Books, receive news updates, etc.
Camera	Capture images or record video
Videos/Music	Access various media services
Tools	Manage schedules, set Alarm, scan QR Codes, etc.
Data Folder	Open files saved on handset/Memory Card
Widget	Use Mobile Widgets
ти	Watch/record TV programs
Phone	Search contacts, add entries, etc.
Settings	Customize handset interface, sounds, etc.



Using Simplified Menus (Simple Menu)

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.



- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).


Menu Items	
Messaging	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
Phone	Phone Book, Add New Entry, Call Log, Play Messages, Answer Phone, Call Voicemail, My Details, Rakutomo Link, Speed Dial/Mail
Camera	Photo Camera, Video Camera, Album, Scan Barcode, Scan Card, Kanji Grabber, Review
Convenient Tool	Calendar, Exchange Profile, Alarms, Calculator, Assignment, Dictionary, Notepad, S! GPS Navi, Pedometer, Compass, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
Data Folder	-
TV	-

Key assignments are largely the same as those in Standard Menu.







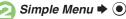

While Using an Incompatible Function

• End the function before activating Simple Menu.

Canceling Simple Menu

(Long) ➡ Standard Menu ➡ ●

Spinguru Menu

Spinguru Menu

Basics

Circle finger around Vector Pad; keep moving finger to select functions suitable for time of day/situation, or frequently used/recently opened files/records, etc. Available in Standby and while using functions. If Spinguru Menu is opened while using functions, corresponding menu items also appear.






Spinguru Menu

Menu Description

Example: Spinguru Menu opened in Standby

• Favorites (gateway to frequently used functions) appears from the second day after the first use of handset.

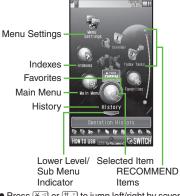

● Press 讀 or ∰i to jump left/right by seven items; Long Press ● to return to initial item.

Menu Navigation

Press ③ when — appears to access lower level/Sub Menu; press ③ (when — appears) to return.




Lower level opens

Sub Menu opens



Using Spinguru Menu

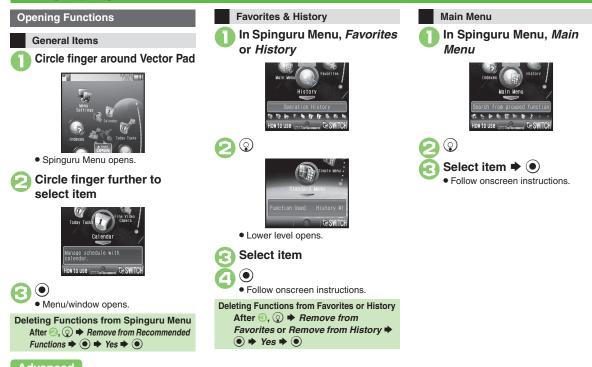



Spinguru Menu

Basic Operations

Indexes (Japanese)

Search for functions by initial character of terms or keywords.

In Spinguru Menu, Indexes










Spinguru Menu Settings

Follow these steps to reset Spinguru Menu:

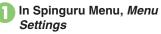





Toggling View

Press 🐨 to toggle Spinguru Menu between linear and spiral views. In linear view, press () to access lower level items/Sub Menu; press 📀 to return.





Spinguru Menu (linear view)

Lower level/ Sub Menu opens

Opening Help

Press in Spinguru Menu to open operational instructions.




🕗 🕒 Changing scroll speed 🔍 Setting Spinguru Menu opening method 🔍 Changing Spinguru Menu spin speed 🔍 Calibrating Vector Pad (P.2-28)

2-8

Function Shortcuts

Shortcuts Menu

Access assigned functions via Shortcuts menu.

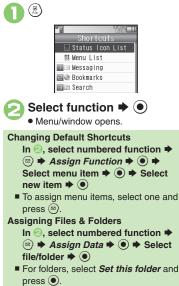

Kev Shortcut

In Standby, Long Press (2), 😨 or (2) to access assigned functions.

- Open S! Mail Composition window
- ٨ Open PC Site Browser menu \bigcirc
- Open Exchange Profile menu
- \odot Activate/cancel Bluetooth®
- 0 Access last opened Icon View page
- (17) Activate Familink Remote

Changing Assigned Functions

Follow these steps to assign Calculator to (Long Press):

- 🕈 Settings 🕈 🕈 📀 Phone/
- Set Key Shortcut 🕈 💽 🕈 Long press 🕲 🗭 💽

From Appli 🕈 🖲

Tools
♦ (●)
♦ In PIM/Life

menu. Calculator 🕈 🖲

Bookmark

In 😔, From Bookmark 🕈 🔘 🗭 Select title \Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc Infrared, Show Secret Data, Etc. On/Off In ⓒ, From Other ➡ ◉ ➡ Select item 🗭 🔘 **Canceling Assigned Function** In ⓒ, *Off* **♦** ●



Basic Operations

Toggling Active Functions (Multi Job)

FUK

動画

Basic Operations

Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet



Jot down information

- Multi Job may not activate from some menus/windows





In a function window, (?) In text entry/dial windows, Long Press (?).



• Menu/window opens.



To toggle active windows, 🖙 🐑

🕤 🗭 Multi Job ends

· If a confirmation appears, follow onscreen prompts.

Basic Operations

Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

Paste Icon 🜩 🖲

88


Saving Shortcuts to Standby


Widget Tab-Paste Sticky Nr Bookmarks

Standby Shortcut Tab-

Select item

- Corresponding icon appears.
- >> appears when more items are available.

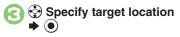

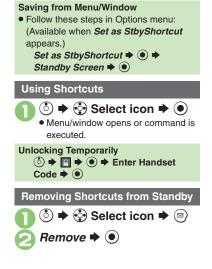





Icon View

Save shortcuts to functions, files, folders, widgets, etc. to Icon View for easy access.

Saving Shortcuts to Icon View

- If selected page is full, remove icons first.
- Installed widgets are saved automatically.





- Icon View Page
- Press () or () to open next or previous page. (Press) in Page 1 to return to Standby.)

• Select tab
Select item (\bullet)

- Corresponding icon appears.
- >> appears when more items are available.

••• Specify target location

Saving from Menu/Window

• Follow these steps in Options menu: (Available when Set as StbvShortcut appears.)

Set as StbvShortcut

Select page or *New Page* • • • Specify target location

When Five or More Pages Exist

- A confirmation appears after 1. Choose Yes or No and press ().
- To disable confirmation, press (□).

Using Shortcuts

- On Icon View page, select icon 🗭 (•)
 - Press () or () to open next or previous page. (Press) in Page 1 to return to Standby.)

Accessing Last Opened Page (Lona) Showing Hidden Icons Temporarily Handset Code 🕈 🔘

Removing Shortcuts



On Icon View page, select icon
(Long)



Cancel Icon ♥ ●



2-12

Sub Display Basics

Features

944SH employs a large Sub Display supporting Touch Panel; touch to select menu/information items, open functions, etc --all with handset closed. Customize Standby Sub Display (Home Panel) with Wallpaper. Paste widgets/ shortcuts to Home Panel and touch icons. to open details.





Details Window

Using Touch Panel

Press - to enable/disable Touch Panel. Activate Keypad Lock to prevent accidental operation/function activation.

Basic Operations

Tap



Tap item to open corresponding function; execute operations.

Drag



Touch and drag items; release item to drop it at target location.

Swipe





Swipe Sub Display to scroll.

Important Touch Panel Usage Notes

- Touch Panel may not respond in these situations:
 - Use with gloves/long fingernails
- Use of pens, pencils or sharp objects
- When Sub Display is wet
- Use with objects on/against Sub Display
- To prevent malfunctions, do not:
- Touch Sub Display with wet fingers
- Use if Sub Display is wet
- Subject Sub Display to force/pressure
- Place labels or stickers over Sub Display
- Calibrate Touch Panel (P.2-30) to improve response.



Advanced

Basic Operations

Using Sub Display

Home Panel

Wallpaper (clock, etc.) appears on Sub Display with handset closed in Standby by default.

• To open Home Panel with handset open, Long Press **I** in Standby. (Display goes dark.)



Home Panel


• Change Wallpaper or paste widgets/ shortcuts to Home Panel as needed.

Illuminating Sub Display

 Press
 to toggle Side Light on/off. (Side Light goes out automatically after a period of inactivity.)

Toggling Home Panels

Use To toggle three Home Panels. Alternatively, press Then swipe Sub Display left or right.

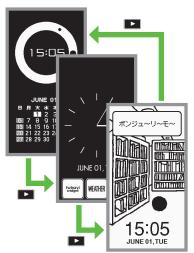

Customize each Home Panel separately as needed.

Opening Information


Indicator and number of calls/messages, etc. appear for Missed Calls, new mail, etc. Indicators may appear within Wallpaper graphic depending on Home Panel Wallpaper.







Basic Operations

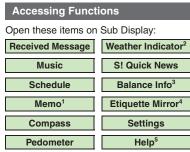

- ¹Open notes pasted on Standby display or Icon View.
- ²Register with S! Information Channel for related information.
- ³Check e-money balances.
- ⁴Use Sub Display as a mirror.
- ⁵Access guide to Sub Display settings/ operations.



Menu



- Item opens.
- If folders or item list appears, tap one to open it.
- Tap *Back* to return to previous window, or *End* to return to Home Panel.

Advanced

Selecting Home Panel Wallpaper Selecting images for incoming calls, etc. Hiding caller info Changing Clock view for charging Selecting Sub Display view (handset open) (And more on P.2-29 - 2-30)



Sub Display

2 Basic Operations

Display Link

While details window appears, open handset to open related window on Display. Follow these steps to use Display Link for Mail:

Open message window on Sub Display

NEW MAIL
Lueda Wikio Wikio Wedding %06/01 15:05 Please bring a camera an d a triood to Wr. Yamamo to and Wiss Kawahashi's wedding next Sunday. I w iil bring a camcorder.
▼Key:Switch Quality

Open handset lease bring a camera an Reply Message by display Sub-Display? No Don't ask again. To disable confirmation, press ☺ (♥). Yes 🌩 💿 Ueda Mikio Re: Wedding Auto Art Please bring a camera a nd a tripod to Mr. Yama moto and Miss Kawahashi 's wedding next Sunday. will bring a camcord ler. Mail Composition window opens.

 Mail Composition window opens. Original message text is quoted (except for SMS and Graphic Mail). Complete and send message.

Opening Message Window Only In ⓒ, No ♥ ●

Display Link for Other Items

Display Link is available only in Standby.

Music	Open All Music file list
Schedule	Open Calendar ¹
Pedometer	Open Pedometer ²
Weather Indicator	Open weather forecast page ³
S! Quick News	Open S! Quick News information page ³
Widgets	Activate widget ⁴

¹Spinguru Log Calendar opens depending on the previous Calendar status.
²If body information is not set, a confirmation appears; follow onscreen prompt.

³Access the Mobile Internet via the page to obtain more information.

⁴Available for compatible widgets.





- Tap **QUICK REPLY** and tap fixed text to reply.
- Tap 😪 to open folder list. (😪 appears when message is opened via Information.)
- Tap *DOWNLOAD* to retrieve remaining portions.
- Press **I** to toggle image quality.
- Graphic Mail, messages with image attachments, etc. may be difficult to read.

Music



- Tap 🛃 to replay, or 🔛 to skip forward.
- Tap 🛄 to pause, then 💽 to resume.
- Press
- Long Press **I** to illuminate Side Light.

Schedule	
	4 2010/06/01 (Tue) ≫ 写真の日
	S M T W T F S 11:2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30
	¥15:00 Conference ©19:00 Meet-up
	Back End

- Tap 🕻 or 🚺 to open previous or next month.
- Tap 🕻 or 🕨 to select previous or next date.
- If entries continue beyond view, drag or swipe up or down across list.



Sub Display

Memo




- MEMO 001/002 Weeting spot XX Park
- Drag or swipe up or down to scroll pages.
- Swipe left or right to open next or previous memo.
- Compass



Tap **ADJUST** to adjust Motion Sensor. (Follow onscreen instructions.)

Pedometer

• Enable Pedometer beforehand.

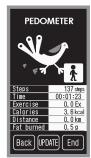


 Tap UPDATE or press I to update step count immediately. (Auto update interval is approximately one minute.)

Weather Indicator



Drag or swipe up or down to scroll pages.

S! Quick News

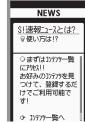

Drag or swipe up or down to scroll pages.

Balance Info



- Drag or swipe up or down to scroll pages.
- Home Panel returns after a period of inactivity.



Etiquette Mirror



Settings



- Tap *Correct Touch Panel* to calibrate Touch Panel. (Follow onscreen instructions.)
- Follow these steps to move or delete Home Panel icons:

Tap *Move Mode* \Rightarrow Tap panel \Rightarrow Drag icon \Rightarrow Tap *OK*

To delete an icon, drag it to <a>b.

ľ	Help
	Settings Method
	Side-Key Operation
	Sub-View Functions
	Access guide to basic operations of Sub-Display.
	Back End

Help

- Drag or swipe up or down to scroll pages.
- Swipe left or right to open next or previous item.



Sub Display

Adding Widgets/Items to Home Panel

- Paste clocks, widgets and function shortcuts to Home Panel.
- Tap a shortcut icon to access the function immediately from Home Panel.
- Icons may not be pasted to some areas depending on Home Panel Wallpaper.

 $\textcircled{\bullet} \Rightarrow Settings \Rightarrow \textcircled{\bullet}$

In Sound/Display menu, Sub-Display ➡ ●

] Home Panel 븆 🖲

Panel 1 Paste to Panel 3 Paste $\Rightarrow \odot$

• A list of pasted items/widgets appears.



	1505
Add	
Widget	
Clock (Black)	
Clock (White)	
Date(Black)	
Date(White)	
Calendar	



Select item or *Widget* 🕈 🖲

- For *Widget*, select a widget and press **()**.
- 🕑 🗭 Saved

Moving Icons

After ⓒ, ⓒ ➡ Close handset ➡ Tap MOVE MODE ➡ Drag icon ➡ Tap OK Removing Icons In ⓒ, select item or widget ➡ ● ➡ Yes ➡ ● ➡ ♡

Viewing Internet Pages

Press 🗖 after 🕗 to enable Touch Panel.

On a page, 🗷 (Long)

Close handset 🌩 Page opens

- Drag or swipe to scroll pages.
- Some pages may not open completely or be difficult to see.
- Internet page closes when handset is opened.

- Updating Page on Sub Display
 - On a page, tap UPDATE ➡ Tap Update Now
- Updating Automatically
 - On a page, tap UPDATE ➡ Tap Auto Update Setting ➡ Tap OK ➡ Tap interval ➡ Tap period ➡ Tap UPDATE ➡ Tap Auto Update
 - To cancel Auto Update Setting, tap STOP UPDATE.

Switching View (Quality/Size) On a page, tap *Switch*

- Tap to toggle view. (Alternatively, press .)
- Size toggles on Yahoo! Keitai only.



2 - 20

Advanced

🕙 Changing camera-in-use graphic Changing music playback graphic (And more on P.2-31)

Basic Operations

Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Power it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.



• Manner mode is set.


When Manner Mode is Active

- Ringtones and other sounds are muted.
- 944SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.
- To unmute Speaker temporarily while playing music, etc., follow these steps:
 During playback, (³) ⇒ (●) ⇒ Yes or No ⇒ (●)
- **Canceling Manner Mode**

(Long)

Offline Mode

Temporarily suspends all transmissions.

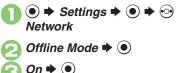



Offline Mode is set.


Canceling Offline Mode In ⓒ, Off ➡ ●

2-21

Motion Control


Motion Control

- Motion Sensor tracks handset orientation or movement. Move handset to navigate pages, access functions, etc.
- Cancel Keypad Lock and activate Display first. (Not necessary for activating Quick Silent.)
- Adjust Motion Sensor (P.2-31) before using Motion Control for the first time.
- Activate Motion Control by function beforehand.

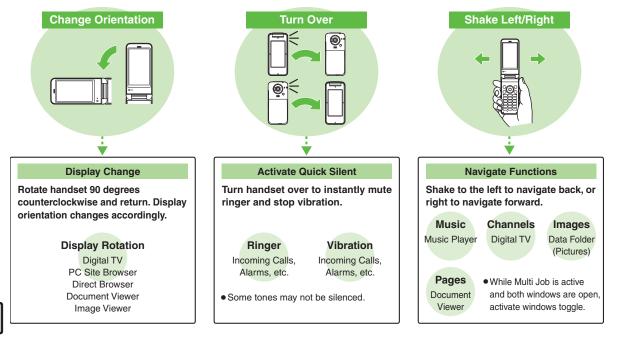

2

Basic Operations

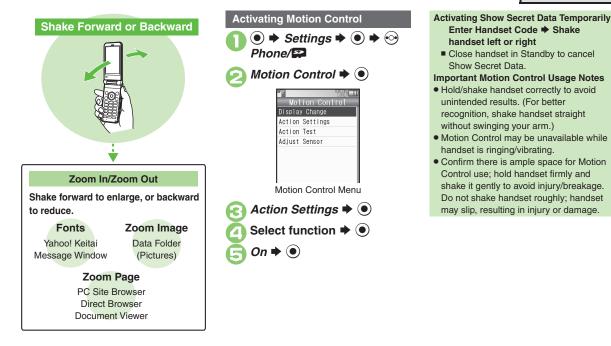



My Details & Basic Tools



Mv Number



• Handset phone number and the name entered at initial setup appear.



VeilView

Activate VeilView to prevent peeking.



ﷺ (Lona)

Canceling VeilView (Long) ﷺ⊘

Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
- 🕤 does not power handset off.

Incoming Calls while Keypad Lock is Active

 Keypad Lock is temporarily canceled; press in to answer calls. Keypad Lock reactivates after the call. Canceling Keypad Lock

(Long)

Pen Light



(Long) Mobile Light illuminates.

Side Key Mobile Light aoes out

Important Pen Light Usage Note

Do not shine Pen Light in eyes.

Battery Meter






Battery Meter 🕈 🖲

Approximate battery strength appears.

Battery Strength %

• 100% may not appear even when battery is full. This is by design: not a malfunction.

Phone Help

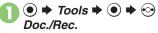





Select item

 For Indicators. select a category and press . For What's Spinauru? (Japanese), select a menu item and press O.

Advanced



🕙 Clearing My Details 🔍 Selecting My Details items to send 🔍 Toggling My Details in Dual Mode 🔍 Changing battery strength indicator pattern Changing VeilView pattern/density (P.2-31 - 2-32)


Activating Double Number

Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- Outside Japan, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.17-43).

Two Phone Numbers & Two Mail Addresses

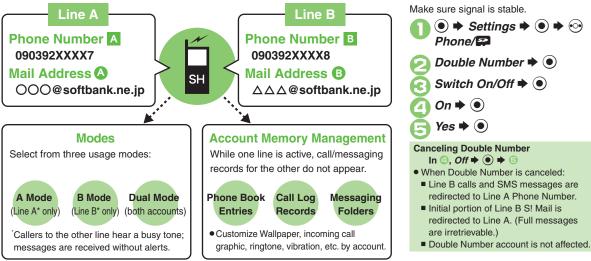




Modes

Activate A Mode to use Line A only, B Mode to use Line B only, or Dual Mode to use both accounts.



lists, Call Log records, etc.

•When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

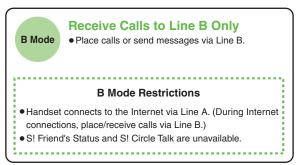




2 - 26

2

Basic Operations

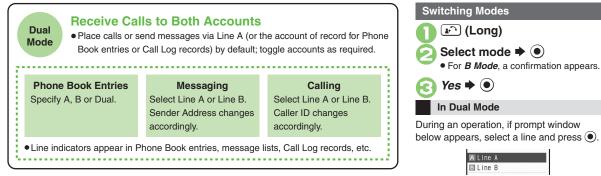

If customizable by line, line indicator appears bottom right; press 🐑 to switch.

B

If line selection is otherwise required, follow onscreen prompts.



Additional Functions

Spinguru Menu

Sorting Favorites items	Open Spinguru Menu → <i>Menu Settings</i> → ② → <i>Sort Favorites</i> → ● → <i>Yes</i> → ●
Deleting all Favorites items	Open Spinguru Menu → Menu Settings → ♀ → Delete All Favorites → ● → Yes → ●
Deleting all History items	Open Spinguru Menu → <i>Menu Settings</i> → ♀ → <i>Delete All Histories</i> → ● → Yes → ●
Restoring deleted general items	[Start Here]Open Spinguru Menu ⇒ Menu Settings ⇒ ② ⇒ See below
	All Items Restore All Recommended Functions Deleted
	One Item Select <i>Restore XX</i> ⇒ ● ⇒ <i>Yes</i> ⇒ ●
Changing scroll speed	● ◆ Settings ◆ ● ◆ ⊙ Phone/ ♀ ◆ Vector Pad Settings ◆ ● ◆ Scroll Speed ◆ ● ◆ Select speed ◆ ●
Setting Spinguru Menu opening method	● → Settings → ● → ⊙ Phone/ ♀ → Vector Pad Settings → ● → Launch Spinguru Menu by → ● → Select method → ●
Changing Spinguru Menu spin speed	● ◆ Settings ◆ ● ◆ ⊙ Phone/ ♀ ◆ Vector Pad Settings ◆ ● ◆ Jog Speed ◆ ● ◆ Select speed ◆ ●
Calibrating Vector Pad	● ◆ Settings ◆ ● ◆ ⊙ Phone/ ♀ ◆ Vector Pad Settings ◆ ● ◆ Correct Vector Pad ◆ ● ◆ ⊡ (Long)

Shortcuts

Changing item order	 Select numbered function ⇒ ⊗ ⇒ Move ● ⇒ Select target location ⇒ ●
Restoring default shortcuts	$ \overset{\textcircled{R}}{\textcircled{R}} \Rightarrow \text{Select numbered function} \Rightarrow \textcircled{R} \Rightarrow \text{Set to} $ Default $\Rightarrow \textcircled{R} \Rightarrow \text{Yes} \Rightarrow \textcircled{R} $

Standby Shortcut

Operations in Standby

Sorting icons	 (S) → (Operation → (O) → Sort Icon → (O) → Select option → (O) • Widgets may also be sorted depending on the size.
Moving icons	 (5) ⇒ (5) Select icon ⇒ (2) ⇒ Move ⇒ (0) ⇒ Specify target location ⇒ (0)
Moving icons to front/back	 (3) ⇒ (3) Select icon ⇒ (2) → Operation ⇒ (0) ⇒ To Front or To Back ⇒ (0)
Removing multiple icons at once	(☉) + (☉) + Operate from List + (☉) + Remove (····································
Locking icons	 (Ŝ) ⇒ (Settings ⇒ (Interpretation) → Lock Settings ⇒ (Interpretation) → (Interpretation) → (Interpre

2-28

Icon View	
Moving icons	⁽) ◆ ⁽) (Long) → <i>Move</i> → ⁽) → Select icon ⁽) ◆ Specify target location → ⁽) ◆ ⁽)
Pasting to Standby	 Isometric (widget) ⇒ (a) (Long) ⇒ Set as StbyShortcut ⇒ (a) ⇒ Specify target location ⇒ (a)
Removing multiple icons at once	Start Here ⊕ ♦ ⊜ ⊕ ♦ See below
	Selected Icons Select & Remove ⇒ ● ⇒ ☺ Select tab ⇒ Select icon ⇒ ● (() ⇒ Complete selection ⇒ ♡ ⇒ Yes ⇒ ●
	Whole Page Remove All ⇒ ● Select page ⇒ ⊕ ★ ●
Switching pages	
Changing page order	
Inserting pages	
Editing page names	Start Here Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Image Ima
	Renaming Select page ⇒ ● ⇒ Enter name ⇒ ●
	Resetting All Page Names (☞) → Yes → ●

 (S ⇒ (Long) ⇒ Settings/Manage ⇒ (S) ⇒ Hide Icons ⇒ (S) ⇒ Select page ⇒ (S) ⇒ On ⇒ (S) Handset Code is required to re-select Off. 			
 Select icon (widget) ⇒ (Long) ⇒ Details ⇒ 			
 (Long) → Settings/Manage → ● → Remove Invalid Icon → ● → Yes → ● 			
 (☉) ⇒ (≅) ⇒ Settings ⇒ (●) ⇒ (⊕) Key Settings (●) ⇒ Last Visited Page ⇒ (●) 			
Sub Display			
Home Panel			
$Start Here$ \blacksquare \Rightarrow Settings \blacksquare \Rightarrow In Sound/Display menu, Sub-Display \blacksquare \blacksquare \Rightarrow HomePanel \blacksquare \blacksquare Panel1Wallpaper to Panel 3Wallpaper \blacksquare \blacksquare See below			
Preset Graphics Select graphic ⇒ ●			
Data Folder Images Pictures ⇒ ● ⇒ Select image ⇒ ● ⇒ Select option ⇒ ● ● • Select Cut to specify image area or zoom in/out.			
Chara Time Chara Time ⇒ ●			
Customized Screen Customized Screen ▶ ●			



Additional Functions

				View Cettings		
	2 Basic Operations	Selecting images for incoming calls, etc.	Start Here ◆ > Settings ◆ > In Sound/Display menu, Sub-Display ◆ > System Graphics ● > Select item ● > See below ● Data Folder images and Customized Screens may be unsetable depending on item. Preset Graphics Select pattern ● Data Folder Images Pictures ● Select Cut to specify image area or zoom in/out. Customized Screen	View Settings	Start Here ● > Settings ● > In Sound/ Display menu, Sub-Display ● ● Open View ● ● See below Preset Graphics Pattern ● > Select pattern Data Folder Images Pattern ● > Select option ● > Select option ● ● • Select Cut to specify image area or zoom in/out. Mirror Startertte Mirror ●	
		Showing indicators (battery	Customized Screen		Etiquette Mirror	
		strength, etc.)	● → On → ●	Changing orientation	● → Settings → ● → In Sound/Display menu, Sub-Display → ● → Display Direction → ● → Normal or Charging → ● → Vertical	
		Incoming Calls & Charging		onentation	or Horizontal	
		Hiding caller info	● → Settings → ● → In Sound/Display menu, Sub-Display → ● → Caller Display → ● → Off → ●	Sub Display Tou	uch Panel	
		Hiding Phone Book Categories for incoming calls	 ● Settings ● ● In Sound/Display menu, Sub-Display ● ● Category Display ● ● Off ● ● 	Enabling Touch	Start Here ● > Settings ● > Phone/III ◆ Touch Panel(Sub-Display) ● > Touch Reaction ● > See below	
		Changing Clock view for charging	[Start Here] ● ⇒ Settings ⇒ ● ⇒ In Sound/ Display menu, Sub-Display ⇒ ● ⇒ Desk Clock Mode ⇒ ● ⇒ See below	vibration	Enabling Always On(Vibrating)	
			Changing Pattern Pattern Setting + • • + Select pattern + •		On(Except Manner Mode)	
			Hiding Clock Switch On/Off ⇒ ● → Off ⇒ ●	Panel	 Panel ⇒ ● → Yes ⇒ ● → Close handset Follow onscreen instructions. 	
	Ŀ					

2-30

2 Basic Operations

Function Menu Settings

Disabling Display Link for Mail	 Settings ★ ● ★ Create/Send Settings ★ Peply Settings ★ ● ★ Viewing on Sub-Display ★ ● ★ Off ★ ●
Changing camera-in-use graphic	In Photo/Video Viewfinder, ⓒ 拳 Settings ⇒ ● ⇒ Sub-Display ⇒ ● ⇒ Select pattern ⇒ ●
Changing music playback graphic	During playback, ⓐ ♦ Sub Pattern Setting ♦ ● ♦ Select pattern ♦ ●
Hiding Osaifu-Keitai [®] transaction graphic	● → Tools → ● → In PIM/Life menu, Osaifu-Keitai → ● → IC Card Settings → ● → Sub-Display → ● → Off → ●

Motion Control

Disabling automatic Display rotation	● ◆ Settings ◆ ● ◆ ⊖ Phone/ ♀ ◆ Motion Control ◆ ● ◆ Display Change ◆ ● ◆ Select function ◆ ● ◆ Off ◆ ●
Practicing Motion Control actions	 ● Settings ● ● ◆ O Phone/ ♀ Motion Control ● ● Action Test ● ● Select item ● ● Follow onscreen instructions.
Adjusting Motion Sensor	 Settings Settings Settings

Start Here) Settings () In Sound/Display menu, Mode Settings See below Selecting a Handset Mode **Changing handset** modes **Customizing Handset Modes** Adjust settings Not available for Normal mode. • *Settings* • • In Sound/Display Creating a custom menu. Mode Settings + • + Original + • mode Select item + • + Adjust settings • *Settings* • • In Sound/Display **Resetting Mode** menu. Mode Settings + • • Select mode + Settings 🖅 🔶 Yes 🔶 🖲 • *Settings* • • • In Sound/Display menu. Suppressing Mode Settings + • Audio Manner mode audio output confirmation Confirmation $\Rightarrow \bigcirc \Rightarrow$ Do not Show $\Rightarrow \bigcirc$ My Details Reset My Details 🔶 🖲 🔶 **Clearing My Details** Yes 🔶 🖲 Selecting My Details

Mode Settings



Battery Meter		
Changing battery strength indicator pattern	 ♦ Settings ♦ ● In Sound/Display menu, Display ♦ ● ★ Mini Battery ♦ ● ★ Select pattern ♥ ● ● Battery strength (appears as a percentage) is for reference only. 	
VeilView		
	Start Here ● > Settings > ● > In Sound/ Display menu, Display > ● > VeilView > ● > See below > >	
	Pattern Pattern Setting	
Changing VeilView pattern/density	Pattern Scale Scale Setting	
	Pattern Color Color Setting ⇒ ● ⇒ Select color ⇒ ●	
	Density Density Setting ⇒ ● ⇒ Adjust density ⇒ ● • For Density:2 or Density:3, use ☺ before pressing ● to adjust the pattern appearance for straight view.	

Double Number

All Modes

	● → Settings → ● → 😔 Phone/🔛 →
	Double Number ⇒ ● ⇒ Mode Name ⇒ ● ⇒
Number modes	Select mode 🔶 🖲 🔶 Enter name 🔶 🌒 🔶
	Select icon 🗼 🖲

A Mode & B Mode

Showing indicator for calls missed or new mail on idle line	 ● ◆ Settings ◆ ● ◆ ◇ Phone/ Double Number ◆ ● ◆ Show Missed ◆ ● ◆ On ◆ ● 		
Hiding Internet connection confirmation	 ● Settings ● ● ◇ Phone/日 ● Double Number ● ● Packet Warning ● ● Off ● ● Available for B Mode. 		
Dual Mode			
Rejecting calls to either line in Dual Mode	 ● ◆ Settings ◆ ● ◆ ◇ Phone/		
Setting main line for Dual Mode	 ● ◆ Settings ◆ ● ◆ ○ Phone/□ ◆ Double Number ◆ ● ◆ Send Priority ◆ ● ◆ Select option ◆ ● 		



Font Size	3-2
Changing Font Size	3-2
Wallpaper	3-3
Customized Screen	3-4
Customized Screen (Japanese)	3-4
Sounds & Alerts	3-5
Customizing Handset Responses	3-5
Text Entry	3-6
Entering Characters	3-7
Editing Characters	. 3-10
User Dictionary	.3-11
Saving Frequently Used Words	
(Japanese)	. 3-11

Dictionary Using Dictionaries (Japanese)	
Search	
Searching Text	3-15
Scratch Pad	3-16
Phone Book	3-17
Creating Phone Book Entries	3-17
Creating Phone Book Entries Using Phone Book Entries	
0	3-19


3

Universal Operations, Etc.



3-2

Changing Font Size

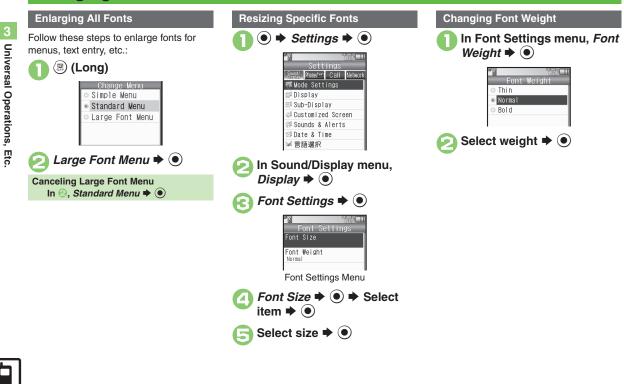

Wallpaper

● **♦** Settings **♦** ● **♦** In Sound/Display menu, Display Wallpaper 🌩 🖲 Preset Pictures Pictures Flash® Chara Time Slide W paper Other Documents Customized Screen Search by Y! Keitai Blank


Wallpaper Menu

Select folder

Select file ()


 (\bullet)

- Some files may not be usable.
- Omit the next step when Preset Pictures is selected in 🕤
- Use () to zoom in/out or press () to rotate

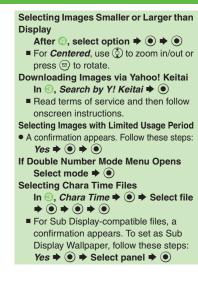

Slide Show Wallpaper

Set Slide Show to appear in Standby. Some images may not appear.

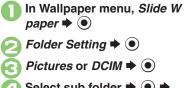


- Select sub folder

 (•) Set this folder 🜩 🖲
 - Omit steps for sub folder if none is applicable.

If There is No Image in Set Folder • Preset images appear. Using Preset Images In 📀, Preset Pictures 🗭 💿 **Changing Pattern** In 2, Pattern Setting
Select pattern 🌩 🔘 To check patterns, select one and

press (.....).

Customized Screen (Japanese)

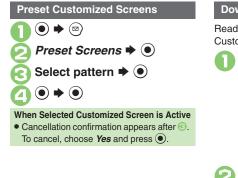

Downloading Customized Screens

Read information (price, etc.) on Customized Screen download page.


● → Data Folder → ● → Customized Screen



Customized Screen Menu



• Follow onscreen instructions.

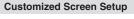

In Customized Screen menu, select Customized Screen ➡ ●



Applying Fee-Based Customized Screen

- If Contents Key is required, follow these steps:
 - After (1), $(1) \Rightarrow Yes \Rightarrow (1)$
 - Read terms of service and then follow onscreen instructions.







Canceling Customized Screen Canceling Customized Screen unconditionally Deleting Customized Screens Accessing Customized Screen source sites (P.3-20)

Universal Operations, Etc

Customizing Handset Responses

Ringtone

● ◆ Settings ◆ ● ◆ In Sound/Display menu, Sounds & Alerts ◆ ●



Sounds & Alerts Menu



Ringtone/videos 🕈 🖲



 For For New Message, etc., select Assign Tone and press .



Select tone/file 🕈 🖲

Setting Ring Time for Incoming Mail, etc.

- After (3), start point selection window opens. Follow these steps:
 - Select start point 🕈 🖲

Selecting Files with Limited Usage Period

Machi-Uta[®] Service Registration (Japanese)

Use Machi-Uta[®] to play music instead of the standard ringback tone for the other party.

Machi-Uta[®] requires a separate contract and basic monthly fee.

In Sounds & Alerts menu, Machi-Uta ➡ ●



Register/Cancel

• Follow onscreen instructions.



Setting Ringtones to Control Vibration In ⓒ. Link to Sound ♥ ④

Important Vibration Usage Note

• Cancel Vibration when charging battery to help avoid accidents.



Universal Operations, Etc

Text Entry

Text Entry

Unless noted otherwise, text entry descriptions are for text entry windows.



Opening Help

🖻 🔶 Help 🕈 🖲

Note

Pressing repeatedly may not close text entry windows.

Switching Entry Modes

Input Mode
⊙ Kanji
○ アイウ
💿 アイウ
O A b c
Abc
0 123

• Available entry modes appear.

Select mode 🕈 🖲

• Entry Mode Indicators:

あ _. *	Kanji (Hiragana)
ア / ア	Double/Single-byte Katakana
<u>A/a</u>	Double-byte Alphanumerics (upper/lower case)
<u>_A/_a</u>	Single-byte Alphanumerics (upper/lower case)
1	Single-byte Number
X	Character Code

★ appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle character options for

Press a key to toggle character options for that key.

Example: In Double-byte Katakana mode, press (1)) three times.



• Press in to toggle options in reverse. To type characters assigned to the same key, press () first.

Example: In Single-byte Alphanumerics mode, enter *no*.

•	6 th 6 th 6	i# MNO
\rightarrow	n 🗕 🗾	no

• Long Press a key to enter the current character and advance cursor.



Entering Characters

Hiragana

Follow these steps to enter **##** in Kanji (Hiragana) mode:

 3 m 3 m 3 m 3 m 3 m 4
 (**đ**) ⇒

 3 m 3 m 3 m 3 m 4
 (**đ**) ⇒

 ★ 2 m 2 m 4
 (**đ**)

 Message:
 0/000

 1 1

🔁 🖲 (Confirm)



Convert すずき to 鈴木.

Type *すずき*

	1505
Message:	
ā,	
すずき	

- In Kanji (Hiragana) mode, word suggestions change as hiragana are typed. (Predictive)
- Long Press I to toggle suggestion mode between Standard, Business, Male, Female and Automatic. (Personal Mode)





 Words likely to follow the entry appear based on previous entries. (Previous Usage)

When Target Word is Not Listed

- Press ☺ or ☺ to segment hiragana to convert separately.
 - Press (*) to toggle Predictive and Non-Predictive suggestions.

Single Kanji Conversion

Type reading in hiragana ♦ 🕑 (Long)

Advanced

Inserting line breaks Inserting spaces Clearing entry log Changing Font Size Disabling suggestions based on entered characters Disabling suggestions based on entered words Disabling emotion/Pictogram suggestions based on entered words Lowering type priorities in suggestion list Selecting a suggestion mode (P.3-20 - 3-21)



Text Entry


Entering from Dictionaries (Search Word)

Enter text by referring to word definitions, translations, etc.

Type hiragana → Before completing entry,





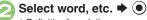

Definition/translation appears.



One-Hiragana Conversion

Type the first hiragana to access previously selected words. Example: *すずき* was previously converted to *鈴木*.



Correction Conversion

After mistyping hiragana assigned to the same key (e.g., l instead of \bar{J}), follow these steps to enter intended word/phrase from suggestion list without retyping: (Available when three or more hiragana are typed.)

Type hiragana ➡ Before selecting word/phrase, ([®]) (Long)

• Corrected word suggestions appear.



Select word/phrase
• •

Katakana

Follow these steps to switch to Double-byte Katakana mode and enter $\cancel{22}$.



Message:	
ア	6/30K
ジュン	

Pictograms & Symbols


May be unavailable depending on the entry mode.



- Pictogram or Symbol List appears. (Log appears if Pictogram/Symbol has been used.)

Connon	My Pict	Symbol s	۵.
*	* 00) 🗟 🕼	61
	0 🖑 🛍		٩I
	00 🔎 📢		
11 16	Y J S	;8 6	
	🔊 👬 🖉) 🚙 📖 (
	941] 🗠 🍂	₩[
Pict 1	0	Pict	t 3

 While entering message text, press (a) in Pictogram List to toggle Cross-Carrier Pictograms and all Pictograms.
 Alternatively, press (a) to switch to My Pictogram or Symbol List.

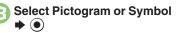


• Pictograms are double-byte even in single-byte entry modes.



List closes



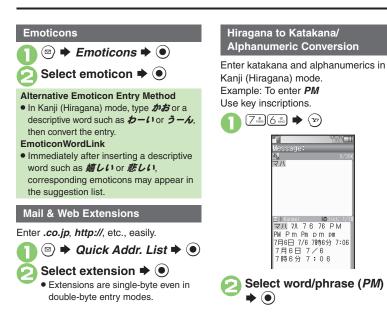

Quick Conversion (for Hiragana) A list of word suggestions appears based on the key pressed. Example: To enter 終電





Editing Characters

Deleting & Editing

Follow these steps to correct また、お願 いします to また明日お願いします:

Select character



18 Message: <u>す</u>16/30K また**訪**願いします

• The highlighted character is deleted.

Select target location Enter characters

17 Message: あ。20/30k また明日<mark>お</mark>願いします

Recovering Deleted Characters

• Press in to recover characters deleted with Internet.


Deleting All Text

• Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press .

Jumping to the End or Top of Text


- Image: Second secon
- to End or Jump to Top 🕈 💽



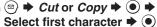



 \bullet To cancel and start over, press $\textcircled{\sc black}$.

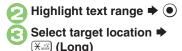



• Text is entered.

 Pasting Previously Cut/Copied Text

 Select target location ⇒ (a) ⇒ Paste

 ⇒ (a) ⇒ Select text ⇒ (a)

 ■ Available when Paste List appears.

Advanced

Undo conversion or recover deleted characters Inserting Phone Book entry items (P.3-20)

3-<mark>10</mark>

Saving Frequently Used Words (Japanese)

Saving Words

Saved words appear among suggestions. ● 🕈 Settings 🕈 ● 🕈 📀 Phone/ (\bullet) User Dictionary New Entry Acquire Dictionary User Dictionary Menu *New Entry* \Rightarrow \bigcirc \Rightarrow Enter word Þ 🖲 Enter reading **Editing Entries** In 🕗. Saved Word List 🕈 🖲 🗭 Edit reading \Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc

944SH Download Dictionary


Get specialized 944SH Download Dictionaries via SH-web Mobile Internet site (*i+-) i-i ii/iSH-web* in Bookmarks; see **P.6-8**). Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions. Some dictionary files may not be usable.

In User Dictionary menu, Acquire Dictionary ➡ ●

Select number ♦ ● ♦ Select file ♦ ●

• Existing dictionary is replaced.



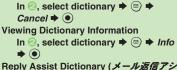

 スト辞書)
 When replying, this dictionary prioritizes original message words (katakana or alphanumerics) in suggestion list.

• Effective in Kanji (Hiragana) mode.





Dictionary

Using Dictionaries (Japanese)

Available Dictionaries:

	lionalles.	
Preloaded Dictionaries	Meikyo Japanese Dictionary, Genius English-Japanese Dictionary, Genius Japanese-English Dictionary	
Online Dictionaries	Yahoo! Answers, Meikyo Japanese Dictionary MX.net, Genius English-Japanese Dictionary MX.net, Genius Japanese-English Dictionary MX.net, Imidas Encyclopedia, Complete Japanese Encyclopedia, Complete Japanese Encyclopedia (Encyclopedia Nipponica 2001) including "Nipponica Plus," Digital Dai-ji-sen Japanese Dictionary, Shogakukan Progressive English-Japanese Dictionary, Shogakukan Progressive Japanese-English Dictionary, Hot Pepper FooMoo, Amazon.co.jp, Family Medical Encyclopedia, Guide to Prescription Drugs	

^{*}Download and add dictionaries as needed.

Online Dictionaries


- Online dictionary use requires Internet connection incurring packet transmission fees. Information fees may also apply. Read terms of service and then follow onscreen instructions.
- Update dictionary list for most recent versions.



Enter reading (spelling for English-Japanese dictionary)

『 シ [*] ーニアスモハ* イル和写	鬣■Ⅱ 英
ヨミ ケイタイ	
けいたい [形態]	
けいたい [携帯]	
けいたいがく [形態!	斧]

- Enter reading in katakana.
- Search results appear as you type.

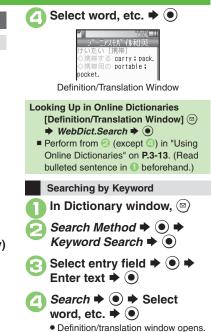

Advanced



3-12



Universal Operations,

Etc

Index Word Only

In definition/translation window, 🖾

In definition/translation

Select first character **+** •

Highlight text range

Copy Index Word 🕈 🖲

Copying Text

Selected Portions

window, (•)

Adding Downloaded Dictionary

🕽 Add Dictionary 🕈 💽

👌 Select file 🕈 💽

Advanced

Canceling Added Dictionary In ⊘, Cancel Dictionary ♦ ● ♦ Yes ♦ ●



Using Online Dictionaries

, 🕑

🐨 🔿 ネット辞書

Terms of service (Japanese) appear

time; read and then press ().

when using online dictionary for the first

Subsequently, image download options

• Select *f***~***T* to look up in all dictionaries at once.

Select entry field ⇒ ● ⇒ Enter text ⇒ ●



Press to return to Dictionary window.

🖑
Selecting dictionaries for use
Selecting search method
Selecting search area (And more on P.3-21 - 3-22)

Using History & Bookmarks

Saving Bookmarks

In definition/translation window, 🖾

Bookmark 🌩 💽


Opening History or Bookmarks

In Dictionary window,

History List or Bookmark List 🗭 💿

Select word, etc. **>** •

- Definition/translation window opens.
- Not available in History List of online dictionaries.

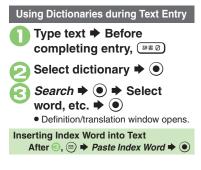



Universal Operations, Etc.

Searching Text

Web Search

Packet transmission fees apply.



• Web Search is selected by default.

3 Select entry field ⇒ ●
 Enter search text ⇒ ●
 A Search ⇒ ●

Search results appear.

Switching Browsers

Mail Search





Scratch Pad

Scratch Pad

Open Scratch Pad to jot down text, and more.



Other Scratch Pad Usage	
Usage	Operation in 🕗
Paste to Standby or Icon View	Set as StbyShortcut ⇒ ● ⇒ Select target location ⇒ ●
Enter Mail Message Text	Create Message →
Enter Schedule Subject/Details	Save to Calendar ➡ ●
Enter Task Subject/Details	Save to Tasks ➡ ●
Add Last Name/ Phone Number/ Mail Address to Phone Book	Save to Phone Book ⇒ ③ ■ Reading is not entered.
Save Text File	Save as Text File ➡ (●) ➡ Enter name ➡ (●) ➡ Save here ➡ (●) ■ Saved to Data Folder (Other Documents).
Search Internet	Web Search ♦ ● ♦ Select browser ♥ ●

For more, see corresponding function description or follow onscreen instructions.




Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.



• Characters entered for names (reading for kanji) appear.

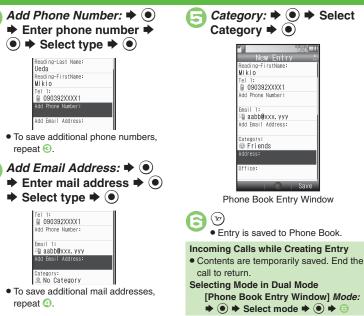

Our Universal Operations, Etc

ns, Etc.

ring time



Advanced

Saving other information Setting Small Light status Changing vibration pattern Editing Phone Book entries Setting incoming mail ring time
Renaming Categories Changing Category icons Changing Category order Changing modes of all entries at once (And more on P.3-22 - 3-24)

Phone Book

Personal Ringtone


Set tone for calls from saved numbers.

Saving Secret Entries

Hide Phone Book entries to require Handset Code for access.



● ► Enter Handset Code ► ●

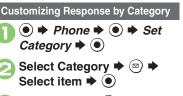


- Select item ⇒ ⇒ Select
 item, e.g., Assign Tone ⇒
 ⇒ Customize responses
 - Customize responses in the same way as Phone Book entries.
 - Not available for USIM Card.

Responses Set by Phone Book Entry

• Settings for each entry take priority.


Saving Numbers After Calls

After a call, save number to Phone Book.

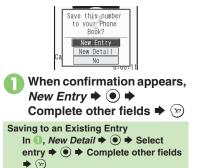



Using Phone Book Entries

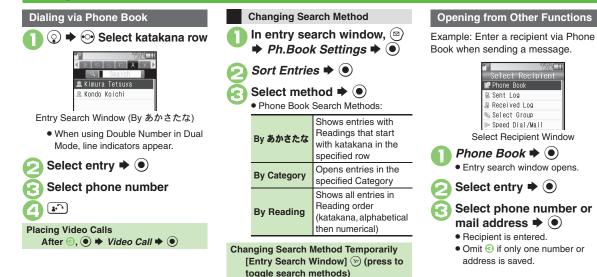

Advanced

Changing view for entry search window
 Assigning images to Phone Book entries for incoming transmissions
 Messaging via Phone Book
 Deleting Phone Book entries
 Checking memory status
 Copying Phone Book entries (And more on P.3-22 - 3-24)



Universal Operations, Etc

Additional Functions

Customized Screen	
Canceling Customized Screen	$\textcircled{\bullet} \Rightarrow \textcircled{o} \Rightarrow \textit{Off} \Rightarrow \textcircled{\bullet} \Rightarrow \textit{Yes} \Rightarrow \textcircled{\bullet}$
Canceling Customized Screen unconditionally	 In Sound/Display menu, Customized Screen ⇒ Off ⇒ (0) ⇒ Yes ⇒ (0)
Deleting Customized Screens	 ● Data Folder ● ● Customized Screen ● ● Select Customized Screen ● ◎ ● Delete ● ● ● Yes ● ● • When the corresponding Contents Key has been downloaded, choose Yes or No and press ●.
Accessing Customized Screen source sites	 ● → Data Folder → ● → Customized Screen → Select Customized Screen → → Web Access → ● • Follow onscreen instructions.
Machi-Uta®	
	Start Here) ● > Settings ● > In Sound/ Display menu, Sounds & Alerts ● > > Machi-Uta ● > See below
Using Machi-Uta [®] (Japanese)	Searching Music Music Search ⇒ ● ● Follow onscreen instructions.
	Changing Settings Settings ⇒ ●

 Follow onscreen instructions.
 Viewing Machi-Uta[®] Information What's Machi-Uta

 Machi-Uta
 Machi-Uta

Text Entry

Entry & Edit

Using Character Codes	In a text entry window, () → Character Code → () → Enter four digits
Using Pager Code	In a text entry window, (a) → Input/Conversion → (a) → Input Method → (a) → Pager Code → (a) • Return to text entry window and enter two digits.
	At the End of Text In a text entry window, ②
Inserting line breaks	Mid-Entry In a text entry window, $\bigotimes \Rightarrow$ (a) or $() \Rightarrow)$ (a) or $() \Rightarrow)$ (a) or $() \Rightarrow)$
Inserting spaces	In a text entry window, 🎯
Clearing entry log	In a text entry window, (○) → Input/Conversion → (●) → Reset Log → (●) → Yes → (●)
Undo conversion or recover deleted characters	In a text entry window, ☺ ⇒ <i>Undo/Recover</i> ⇒ ●
Inserting Phone Book entry items	In a text entry window, ⇒ <i>Insert/Font Size</i> ⇒ <i>Phone Book</i> ⇒ ● ⇒ Select entry ⇒ ● ⇒ Select item ⇒ ●
Changing Font Size	In a text entry window, ☺ ⇒ <i>Insert/Font Size</i> ⇒ ● ⇒ <i>Font Size</i> ⇒ ● ⇒ Select size ⇒ ●

3-20

Additional Functions

Conversion

Disabling suggestions based on entered characters	In a text entry window, ⓐ ⇒ Input/Conversion ⇒ ● ⇒ Predictive ⇒ ● ⇒ Off ⇒ ●
Disabling suggestions based on entered words	In a text entry window, ☺ ⇒ <i>Input/Conversion</i> ⇒ ● ⇒ <i>Previous Usage</i> ⇒ ● ⇒ <i>Off</i> ⇒ ●
Disabling emoticon/ Pictogram suggestions based on entered words	In a text entry window, ☺ ⇒ Input/Conversion ⇒ ● ⇒ EmoticonWordLink ⇒ ● ⇒ Off ⇒ ●
Lowering type priorities in suggestion list	In a text entry window, ⓐ → Input/Conversion → ● → Set Low Priority → ● → Select type → ● (♥) → ♡
Selecting a suggestion mode	In a text entry window, (a) → <i>Input/Conversion</i> → ● → <i>Personal Mode</i> → ● → Select mode → ●

User Dictionary

Deleting entries	● → Settings → ● → ⊗ Phone/♀ → User Dictionary → ● → Saved Word List → ● →
	Select word

Dictionary

Preloaded & Online Dictionaries

Changing Font Size	Image: Barbon Size → ● → Select size → ●
Looking up copied	After copying text, (■=2) → ③ → Search by Copied Text → ④ → Search → ④ → Select word, etc. → ●

	Start Here Image: Bar Bookmark List ⇒ ● Image: Bar Bookmark	
Deleting history records or bookmarks	One Word Select word ⇒ ≅ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●	
	All Words	
Looking up scanned kanji in dictionaries	Imme Imme Imme Imme kanji in Loupe → ● → ● → Search → ● → Select word, etc. → ● Imme ● Definition/translation window opens.	
Looking up scanned text in dictionaries	Immediate Immediate	
Preloaded Diction	onaries	
Viewing dictionary information	Information ⇒ ●	
Online Dictionaries		
Updating dictionary list	□ ● ⑦ ● オット辞書 ● ● ● ◎ ● Update Dictionaries ● ● ◆ Yes ● ●	
Selecting dictionaries for use	■	
Selecting image download option	Image ⇒ ● ⇒ Select option ⇒ ●	
aonnoaa opnon	 For Auto, choose Yes and press . 	



Selecting search method	 ● シ ◆ オット辞書 ◆ ● ◆ Select pull-down menu ◆ ● ◆ Select dictionary ◆ ● ◆ ② ◆ Set Search Method ◆ ● ◆ Select option ◆ ● Not available when ずべてor unsupported dictionary is selected.
Selecting search area	 ● マ キット辞書 ● ● Select pull-down menu ● ● Select dictionary ● ● ● Select dictionary ● ● ● Select Area ● ● Select area ● ● Not available when ずべて or unsupported dictionary is selected.
Opening Help	■■□ + マ + オット辞書 + ● + Select pull-down menu + ● + Select dictionary + ● + ◎ + Help + ● + Yes + ●

Phone Book

View Settings

Changing view for entry search window	 Phone Settings/Manage Ph.Book Settings View Settings List Only
Assigning images to Phone Book entries for incoming transmissions	Start Here ● > Phone > > Add New Entry > ● > Picture: > > See below
	Assigning Images Select folder ⇒ ● ⇒ Select image ⇒ ● ⇒ ● • To specify image area or zoom in/out, press ⊕ • Edit window may open depending on selected image size. To proceed, specify image area or zoom in/out and press ●.
	Capturing Images <i>Take a Photo</i> ⇒ ● ⇒ Frame image on Display ⇒ ● ⇒ ●

Hiding	● ♦ Phone ♦ ● ♦ Settings/Manage
confirmation after	Ph.Book Settings
calls to/from	Prompt 🗼 🖲 🔶 Incoming Call or Outgoing
unsaved numbers	Prompt \Rightarrow (\bigcirc \Rightarrow Incoming Call or Outgoing Call \Rightarrow (\bigcirc \Rightarrow Off \Rightarrow (\bigcirc

Press (*) at the end to save entry. (At least a name, phone number or mail address must be entered.)

Saving other information	Start Here ● > Phone > > Add New Entry > ● > See below >
	Address Address: → ● → Select item → ● → Complete field → ● → ♡
	Office Office: ⇒ ● ⇒ Select item ⇒ ● ⇒ Enter text ⇒ ● ⇒ ♡
	Homepage Homepage: ⇒ ● ⇒ Enter URL ⇒ ● ⇒ Select type ⇒ ●
	Note Note: → ● → Enter text → ●
	Birthday Birthday: ▶ ● ▶ Enter date ▶ ●
	Location Information Location Info.: ⇒ ● ⇒ Select option ⇒ ● • Subsequent operation varies by option; complete setting accordingly.



3-22

Universal Operations, Etc.

Setting Small Light status	Start Here ● > Phone ⇒ ● > Add New Entry ⇒ ● ⇒ Select item, e.g., Light-Voice Call: ⇒ ● ⇒ See below
	Activating Small Light Switch On/Off → ● → On or Link to Sound → ● →
	Changing Light Color Light Color → ● → Select color → ● →
Changing vibration pattern	 ♦ Phone ♦ ● Add New Entry ♦ ● ♦ Select item, e.g., Vibration-Message: ♦ ● ♦ Switch On/Off ● ● ♦ Select option ♦ ● ♦ Vibration Pattern ♦ ● ♦ Select pattern ♥ ● ♦

Editing Entries & Categories

Editing Phone Book entries	 (2) → Select entry → (2) → Edit → (0) → Select item → (0) → Edit → (0) → (2) Edit Reading after editing names.
Setting incoming mail ring time	 (2) ◆ Select entry ◆ (2) ◆ Edit ◆ (2) ◆ Tone-New Message: ◆ (2) ◆ Duration ◆ (2) ◆ Enter time ◆ (2) ◆ (2) Available for compatible ringtones.
Renaming Categories	● ◆ Phone ◆ ● ◆ Set Category ◆ ● ◆ Select Category ◆ ● ◆ Edit Name ◆ ● ◆ Enter name ◆ ●

Changing Category icons	● → Phone → ● → Set Category → ● → Select Category → ● → Change Icon → ● → Select Pictogram → ●
Changing Category order	 ● Phone ● ● ● Set Category ● ● ● Select Category ● ● Select target location ● ● View for By Category Phone Book search changes accordingly.
Using Entries	
	Start Here ♀ ◆ Select entry ◆ ● ◆ See below
Messaging via Phone Book	Phone Numbers Select phone number ⇒ ● → Create Message → ● → S! Mail or SMS → ● → Complete message ⇒ ♡
	Mail Addresses Select mail address ⇒ ● ⇒ Complete message
Initiating S! Circle Talk via Phone Book	 ② ⇒ Select entry ⇒ ③ ⇒ Select phone number ⇒ ④ ⇒ Call S! Circle Talk ⇒ ④ ⇒ ● ● Set Connection status to Online first.
Placing international calls via Phone Book	② ◆ Select entry ● ◆ Select phone number ● ◆ Int'l Call ◆ ● ◆ Select country ● ◆ Int'l Call ◆ ● ◆ Select
Using Location Information via Phone Book	 Q ⇒ Select entry ⇒ ● ⇒ ⊗ Settings ⇒ (Å) ⇒ ⊗ ⇒ Set to Destination ⇒ ● Follow onscreen instructions.



Additional Functions

Managing Entries

3
Universal
Operations,
Etc.

Deleting Phone Book entries	One Entry Image: Select entry Image: Delete Image: Select entry I
Checking memory status	● → Phone → ● → Settings/Manage → ● → Manage Entries → ● → Memory Status → ●
Copying Phone Book entries	One Entry (Handset → USIM Card) ③ ★ Select entry ★ @ ★ Manage Entries ★ ● ★ Copy Entry to USIM ★ ● ★ Yes ★ ● One Entry (USIM Card → Handset) ③ ★ @ ★ Ph.Book Settings ★ ● ★ Select Phone Book ★ ● ★ USIM Memory ★ ● ★ Select entry ★ @ ★ Manage Entries ★ ● ★ Copy Entry to Phone ★ ● All Entries
	 (c) ⇒ (c) ⇒ Manage Entries ⇒ (c) ⇒ Copy All (c) ⇒ Select method ⇒ (c) ⇒ Yes ⇒ (c) If handset/USIM Card memory is low, some entries may not be copied.

Editing Categories on USIM Card	Start Here ● Phone ● Set Category ● ● ● ● Change to USIM ● See below
	Renaming Categories Select Category ⇒ ● → Edit Name → ● → Enter name → ●
	Changing Order Select Category ⇒ ⊕ ⇒ Select target location ⇒ ●
	Changing Icons Select Category ⇒ ● ⇒ Change Icon ⇒ ● ⇒ Select Pictogram ⇒ ●
Changing default storage media for new entries	● ◆ Phone ◆ ● ◆ Settings/Manage ◆ ● ◆ Ph.Book Settings ◆ ● ◆ Save New Entry ◆ ● ◆ USIM Memory or Ask Each Time ◆ ●
Switching reference Phone Book	 ● Phone ● ● ◆ Settings/Manage ◆ ● ◆ Ph.Book Settings ◆ ● ◆ Select Phone Book ◆ ● ◆ USIM Memory or Both ◆ ●

Mode (Double Number) First, activate Double Number.

Changing modes of all entries at once	 ● Phone ● ● > Settings/Manage ● ● Manage Entries ● ● > Change Mode(AII) ● ● > Select mode > ●
Changing modes of multiple entries	(2) ⇒ (3) ⇒ Manage Entries ⇒ (1) ⇒ Multiple Selection ⇒ (1) ⇒ Select entry ⇒ (1) ⇒ (2) ⇒ Change Mode ⇒ (3) ⇒ Select mode ⇒ (3)
Changing modes of entries by Category	 Q ⇒ Select Category ⇒ @ ⇒ Manage Entries ⇒ @ ⇒ Change Mode(Category) ⇒ ● ⇒ Select mode ⇒ ● ● Set search method to By Category first.



Customized Screen

2

Customized Screen is not applied

 Some Customized Screens may not contain files for Wallpaper, System Graphics, ringtones or ringvideos; default settings apply for these functions.

Phone Book

Assigned images do not appear for incoming transmissions

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images may not appear when another function is active, etc.



Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Memory Card with source files may be removed; reinsert the card to restore settings.

Cannot enter 16 characters for Category names

• Character entry limit for Category names may be lower depending on the USIM Card in use.



Emergency Calls	4-2
Voice Calling	4-3
Video Calling	4-5
Speed Dial & Rakutomo Link	4-6
Placing Calls Easily	4-6
Call Log	4-8
Call Time	4-9

Call Barring	. 4-10
Restrict Destinations	4-10
Reject Numbers	4-11
Optional Services	. 4-12
Additional Functions	. 4-14
Troubleshooting	. 4-21

Calling

4



Emergency Calls

Your location is automatically reported to the corresponding agency (police, etc.) when you place emergency calls (110, 119 or 118) with SoftBank 3G handsets. (Emergency Location Report) 944SH reports Location Information based on positioning signals from radio stations.

- Registration/transmission fees do not apply.
- Positioning accuracy is affected by location/signal conditions. Always provide your location and purpose on the phone.
- Location Information is not reported when emergency calls are placed without Caller ID (such as when the number is prefixed with *184*). However, the corresponding agency may obtain your Location Information in a life threatening situation.
- Location Information is not reported during international roaming.

Handset Restrictions & Emergency Calls

Emergency calls are possible even while some handset restrictions are active.

Active Restriction	Emergency Calls	
Function Lock	Possible	
Bar Outgoing Calls	FUSSIBLE	
Offline Mode		
Keypad Lock	Restricted	
PIN Entry		



Voice Calling

Answering a Voice Call

Incoming Call window opens for a call.



Incoming Voice Call Window

to accept the call Call connects.

```
Call ends
```

Muting Ringer Temporarily When a call arrives, (?? **Earpiece Volume**

During a call, () or After Calls to/from Unsaved Numbers

 Save to Phone Book confirmation appears. Select New Entry or New Detail and press • to save number; Phone Book entry window

or entry search window opens, respectively.

Placing a Voice Call

Enter phone number with area code

• To correct entry, use • to place cursor under the digit and press (To delete the digits above and after the cursor, Long Press .



Wait for receiver to accept the call.



Call ends 6

Specifying Line in Dual Mode After 1, • + Select Line(Voice) ● ◆ Select line ◆ ●









Calling

Call ends 0

Calling Unlisted Countries	
In 🐵, <i>Enter Code</i> 🕈 💽 🕈 Ent	ter
country code 🕈 💽 🌩 🔊	

Advanced

Rejecting calls Placing calls on hold Answering with Headphones Adjusting Earpiece Volume Sending/blocking Caller ID Muting Microphone Recording caller voice (And more on P.4-14 - 4-16)



Placing Calls from Outside Japan

See below to place a call to Japan from abroad. Apply for Global Roaming beforehand. See SoftBank Mobile Website for details:


http://mb.softbank.jp/en/global services/ Access roaming area/rate information or print it out to carry with you while traveling abroad.

Enter phone number with area code → (□) → Int'l Call ▶)

日本(JPN) ➡ ● ➡ ☞

Handset dials the number.

 To call other countries, select the target country instead of **E\$**(JPN).

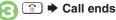

Calling SoftBank Handsets

• In ②, always select 日本(JPN). **Calling Landlines & Mobiles within the** Same Country

Enter phone number with area code

Dial to Your Stay

Calls Overseas

 Calling may not be possible outside Japan. Connections depend on available network, signal strength, and handset settings.

Advanced



Calling

🕙 🕒 Recording messages when Answer Phone is inactive 🔍 Changing ring time 🌑 Sampling outgoing message 🔍 Muting Earpiece (P.4-14) Placing calls by entering country code directly Using Roaming Dial Assistant to place international calls while outside Japan (And more on P.4-15)

Answer Phone

Record caller messages on handset. Answer Phone cannot be used while handset is off or out-of-range. Use Voicemail to record caller messages when Answer Phone is not available.





Answer Phone is set

Canceling Answer Phone

(Long)

Answering Calls while Recording

• Press (*). (No message will be recorded.)




Calling

Video Calling

View the other party's image or send an Outgoing Image to compatible handsets. Handle Video Calls like Voice Calls. This page describes functions/operations unique to Video Call.

Window Description

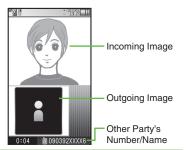

Important Video Call Usage Notes

- If both parties are using handset models without internal cameras, Video Call cannot be used as intended.
- If both parties are not using the same Video Call system, call may be interrupted. (Video Call charges apply.)
- Video Calls cannot be placed while TV is active.

Advanced

Answering Video Calls automatically (And more on P.4-14)

Adjusting Outgoing Image brightness Sending camera image when initiating Video Calls Disabling Loudspeaker for Video Calls Muting Microphone when initiating Video Calls (And more on P.4-16 - 4-20)



Incoming Call window opens for a call.



Incoming Video Call Window

to accept the call

• Alternative Image is sent. (Video Call charges apply to the caller.)

🕤 🗭 Call ends

Answering with Camera Image [Incoming Video Call Window] ● No ◆ ●

Engaged Video Call Operations

0
ullet
• Help 🕈 🖲

Placing a Video Call





• Image appears when call is accepted.

3 <a>Image: Solution

Specifying Line in Dual Mode After ●, Select Line(Video) ◆ ● ◆ Select line ◆ ●





Save phone numbers to Speed Dial/Mail list or Rakutomo Link for easy dialing.

Using Speed Dial Saving Entries 1 ● → Phone → ● 2 Speed Dial/Mail → ● 3 <Empty> → ● → Select entry → ●

A Sele	ct phone number 🕈 🖲
	Image: Speed Dial/Mail Speed Dial/Mail O Ueda Mikio Select mail address for speed mail. M 090392XXXX1 Imabbexxx. yyy Imabbexxx. yyy Imabbexxx. junction
To sa mes	t mail address prompt appears. ave mail address for easy saging, select one and press (). it ().

Do not Assign 🕈 💽



• To save additional entries, repeat 3 - 3.

Using Headphones for Speed Dial ● Save a phone number to . Removing Speed Dial Entries In ③, select entry ◆ ③ ◆ Remove Selected or Remove All ◆ ④ ◆ Yes ◆ ④ ■ Omit entry selection step when removing all entries. Placing a Call



Placing Video Calls

 $\ln \oslash, \textcircled{\bullet} \Rightarrow Speed \ Video \Rightarrow \textcircled{\bullet}$


Using Headphones

******•••

• In Standby, Long Press Call Button until a double beep sounds; handset dials the number saved in <a>[. To end the call, Long Press Call Button until a beep sounds.




Calling

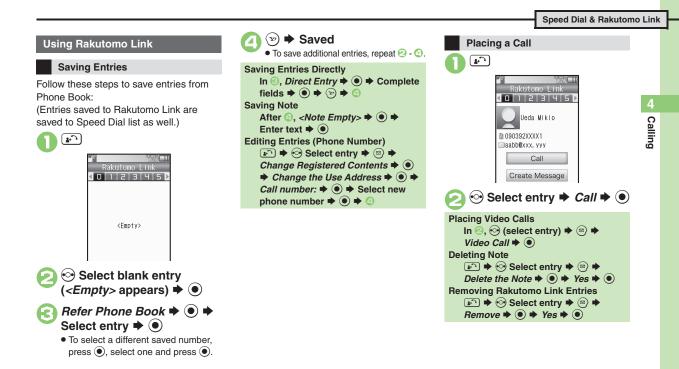




Open recent dialed/received call records.

 All records appear; press () to open Dialed, Dialed Ranking and then Received records.

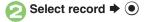

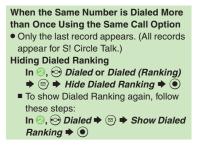



Calling

Call Time

Check estimated time of the most recent call and all calls.





Advanced


🖑
Setting handset to beep during Voice Calls
Checking accumulated data transmission volume
Resetting Data Counter (And more on P.4-17)

Call Barring

Calling

Restrict Destinations

Allow calls to numbers saved in Phone Book or Call Permitted List only.

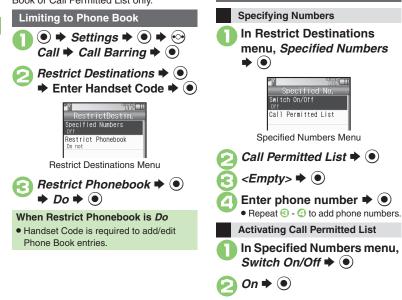



Designating Call Permitted List numbers from saved information Editing Call Permitted List (P.4-17)

Limiting to Call Permitted List

4-10

Reject Numbers


Reject calls from specified/unsaved numbers, calls without Caller ID, etc.

Rejecting Specified Numbers

Specifying Numbers ● 🕈 Settings 🕈 ● 🕈 📀 Call
Call Call Barring
Call Reject Numbers 🌩 💿 Reject Numbers Specified Numbers Not registered Numbers Not Reject Withheld Call Not Reject Payphone Not Reject Unavailable Not Reject Record on Call Log Record **Reject Numbers Menu**



Rejecting Unsaved Numbers

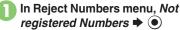

Saved Numbers Containing P (Pause)

• Calls from the number before P are rejected.

Rejecting Other Calls

Reject calls without Caller ID, calls from public phones or calls with undisplayable

> In Reject Numbers menu, Withheld Call, Payphone or Unavailable 🕈 🖲



Advanced



Optional Services

Call Forwarding and Voicemail can only be set simultaneously when Call Forwarding is set to Video Calls.

-orwarding is set to video Calls.			
Call Forwarding	Automatically divert all or all unanswered incoming calls to another preset phone number		
Voicemail	nail Redirect all or unanswered calls to Voicemail Center; access messages from handset/touch tone phones		
Call Waiting	Answer incoming calls or open another line during a call		
Group Calling [*]	or connect multiple lines at		
Caller ID	Caller ID Show or hide your own number when placing calls		
Call Barring	Restrict incoming/outgoing calls depending on conditions		

*A separate contract is required.

Initiating Call Forwarding

Follow these steps to divert calls to a phone number saved in Phone Book after selected ring time (*No Answer* set): (Numbers starting with *1*, *00*, *0120* or *0990* cannot be saved.)

 \bigcirc \blacklozenge Settings \blacklozenge \bigcirc \blacklozenge \bigcirc Call

Voicemail/Divert 🕈 🖲



Voicemail/Divert Menu

Diverts ➡ Select call type ➡ No Answer ➡ Phone Book ➡ entry ➡





Advanced

Initiating Voicemail

Follow these steps to divert calls to Voicemail Center after selected ring time (No Answer set):



Missed Call Notification

Activate this function for records of calls missed while handset is off/out-of-range and Voicemail is active.

● ♦ Settings ♦ ● ♦ ⊙ Call



- out Missed Calls \Rightarrow \bigcirc \Rightarrow \bigcirc
- Follow the voice guidance for further operations.



Canceling Call Forwarding/Voicemail

In Voicemail/Divert menu. Cancel All

```
Yes 🌩 💿
```

Advanced

🕙 🛎 Activating Call Waiting 🖲 Talking on multiple lines simultaneously 🔍 Setting/canceling outgoing call restriction 🔍 Setting/canceling incoming call restriction (And more on P.4-18 - 4-19)



Calling

Additional Functions

	Receiving a Call		Remote Monitor (Video Call)	
	Handling Incoming Calls			Start Here ● > Settings ⇒ ● ○ Call ⇒ Video Call ⇒ ● ⇒ Remote Monitor ⇒ ● ⇒ See below > > > >
4	Rejecting calls	When a call arrives, ⇒ Reject ⇒ ● Video Call When a call arrives, >		Saving Numbers from Phone Book Auto Answer List $\Rightarrow \textcircled{O} \Rightarrow < Empty > \textcircled{O} \Rightarrow$ Change $\Rightarrow \textcircled{O} \Rightarrow$ From Phone Book $\Rightarrow \textcircled{O} \Rightarrow$
Calling	Placing calls on hold	When a call arrives, ☺ ● Press ♪ to answer the call on hold.		 Select entry ⇒ ● ⇒ Select phone number ⇒ ● To enter a phone number directly, select <<i>Empty</i>> and press ●.
	Answering with Headphones	 When a call arrives, Long Press Call Button To end the call, Long Press Call Button. 	Answering Video Calls automatically	Saving Numbers from Call Log Auto Answer List ⇒ ● → <empty> ⇒ © ⇒</empty>
	Answer Phone Recording	· · · · · · · · · · · · · · · · · · ·		Change $\Rightarrow \textcircled{O} \Rightarrow$ From Call Log $\Rightarrow \textcircled{O} \Rightarrow$ Select record $\Rightarrow \textcircled{O}$
	messages when Answer Phone is inactive	When a Voice Call arrives, ⊚ ▶ Record Message	Editing Auto	Activating Remote Monitor Switch On/Off ⇒ ● → On → ● → ● • When Remote Monitor is active, auto answer tone
	Changing ring time	● ◆ Settings ◆ ● ◆ ⊙ Call ◆ Answer Phone ◆ ● ◆ Answer Time ◆ ● ◆ Enter time ◆ ●		 sounds even in Manner mode; cancel afterward. Calls cannot be answered automatically with handset closed.
	Sampling outgoing message	 Settings Settings Outgoing Message Press to stop playback. 		Start Here \bullet > Settings \bullet \bullet \odot CallVideo Call \bullet \bullet Remote Monitor \bullet \bullet Auto Answer List \bullet \bullet See below
	Muting Earpiece	● → Settings → ● → ⊗ Call → Answer Phone → ● → Volume → ● → Silent → ●	Answer List	Editing Numbers Select entry ⇒ ● ⇒ Edit ⇒ ●
				Deleting Entries Select entry $\Rightarrow \odot \Rightarrow$ Delete $\Rightarrow \odot \Rightarrow$ Yes $\Rightarrow \odot$
			Changing ring time	 Settings → ⊙ → ⊙ Call → Video Call → Remote Monitor → ⊙ → Answer Time → Enter time → ⊙



Placing a Call

Basic Operations

Adjusting Earpiece	 ● ◆ Settings ◆ ● ◆ In Sound/Display
Volume	menu, Earpiece Volume ◆ ● ◆ Adjust level ●
Sending/blocking Caller ID	After phone number entry, $$ \Rightarrow <i>Hide My ID</i> or <i>Show My ID</i> \Rightarrow $$

International Calls

Placing calls by entering country code directly	★ appears) ◆ Enter country code Enter phone number with area code ◆ ● Omit the first 0 of the area code except when calling ltaly or some other countries. ● ● Pressing ★ ● Inter the first 0 of the area code except when calling ltaly or some other countries. ●	
Using Roaming Dial Assistant to place international	Start Here) Enter phone number with area code ⇒ Image: The set of the set	
calls while outside Japan	Calling Japan (Landlines & Mobiles) Dial to Japan ⇒	
	Calling Other Countries (Landlines & Mobiles) Dial to Other Country ⇒ ● ⇒ Select country ⇒ ● ⇒ ≧	
Disabling Roaming Dial Assistant		

Saving frequently used international prefix	 ● ★ Settings ★ ● ★ ☆ Call ★ Int'l Calling ◆ ★ Int'l Prefix ★ ● ★ Enter prefix ★ ● 	
	Start Here ● ◆ Settings ● ◆ Call ⇒ Int'I Calling ⇒ ● ⇒ Country Codes ⇒ ● ⇒ See below ● ● > See See See	
Adding/changing/ deleting country codes	Adding < <i>Empty</i> > ⇒ ● ⇒ Enter name ⇒ ● ⇒ Enter country code ⇒ ●	
	Changing Select country ⇒ ● ⇒ Change ⇒ ● ⇒ Enter name ⇒ ● ⇒ Enter country code ⇒ ●	
	Deleting Select country \bullet	

During a Call

Voice Call & Video Call Voice Call During a call, (>) (press again to cancel) Muting Video Call Microphone During a call, $\textcircled{a} \neq Mute \neq \textcircled{b}$ • To cancel, select Unmute. Activating Loudspeaker for Voice Call During a call, O \clubsuit While message appears, OActivating/canceling • To cancel, press . Loudspeaker Canceling Loudspeaker for Video Call During a call, (b) (press again to activate) During a call, a \Rightarrow Transfer Audio \Rightarrow b \Rightarrow To Switching sound Phone or To Bluetooth \Rightarrow \bigcirc output • For To Bluetooth, select a device and press .

Additional Functions

Opening Phone Book	During a call, (a) ⇒ Phone Book ⇒ ● Select entry ⇒ ● ● Press (a) twice to return to call window.
Saving Phone Book entries	During a call, ● Phone Book ● ● Add New Entry ● ● Complete fields ● ● • Press ● to return to call window.
Placing calls on hold	 During a call, <a> Hold <a> ● Subscription to Call Waiting or Group Calling is required to place Voice Calls on hold. To resume Voice Calls, press <a>, select Retrieve and press <a>. To resume Video Calls, press <a>.
Voice Call Only	
Recording caller voice	During a call, ● ▶ Record Caller Voice ● ▶ Recording starts ● ▶ Recording ends • To play recorded messages, see P.4-4 "Playing Messages."
Opening messages	During a call, ● Messaging ◆ ● Select Messaging folder ● ● Select folder ● ◆ Select message ● ● ● Press ●● ● ●
Creating messages	During a call, (◎) → Messaging → (●) → Create Message or Create New SMS → (●) → Complete message → (▷)
Sending saved touch tones	During a call, ☺ → <i>Touch-Tone Signal List</i> →
Sending touch tones via Phone Book	During a call, ⇒ <i>Phone Book</i> Select entry ⇒ <i>Send Push Tone</i> ⇒ Select phone number ⇒ ●

Video Call Only Adjusting During a call. (a) + Exposure + (a) + Adjust Outgoing Image level 🔶 🖲 briahtness Alternative Image brightness is fixed. **Disabling touch** During a call, $\textcircled{a} \Rightarrow Disable DTMF \Rightarrow \bigcirc$ tone sending Call Log \odot \Rightarrow Select record \Rightarrow **Dialing from** • To place Video Calls, press instead of . , then records select Video Call and press . Sending messages • • • *S! Mail* or *SMS* • • • Complete from records message 🔶 💬 Saving Phone Book \Rightarrow (\bullet) \Rightarrow As New Entry \Rightarrow (\bullet) \Rightarrow Complete Book entries from other fields \Rightarrow records • To add to an existing entry, select As New Detail. (\circ) \Rightarrow Select record \Rightarrow (a) \Rightarrow *Display Phone* **Opening Phone** Book 🔶 🖲 Book entries from • Available when selected record (phone number) is records saved in Phone Book. ⊙ → Select record → (=) → Call S! Circle Talk **Initiating S! Circle** Talk from records • Set Connection status to Online first. One Record (\circ) \Rightarrow Select record \Rightarrow (\circ) \Rightarrow Delete (Delete *Item* in Dialed Ranking) $\Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc$ **Deleting log** records All Records • Delete All (Reset in Dialed Ranking) $\Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc$



Calling

Hiding Dialed Ranking		Restrict Destinations		
· ·······	 ▶ ● 		$[\texttt{Start Here}] \textcircled{\bullet} \Rightarrow \texttt{Settings} \Rightarrow \textcircled{\bullet} \Rightarrow \textcircled{\bullet} \texttt{Call} \Rightarrow \texttt{Call}$	
Call Time & Data Communication			Barring ♦ ● ♦ Restrict Destinations ♦ ● ♦ Enter Handset Code ♦ ● ♦ Specified	
Call Time			Numbers ⇒ ● ⇒ Call Permitted List ⇒ ● ⇒ <empty> ⇒ ◎ ⇒ See below</empty>	
Setting handset to beep during Voice Calls	● → Settings → ● → ⊙ Call → Call Time/ Data Counter → ● → Minute Minder → ● → On → ●	Designating Call Permitted List numbers from saved information	From Phone Book <i>Ph.Book List</i> \Rightarrow \textcircled{O} \Rightarrow Select entry \Rightarrow \textcircled{O} \Rightarrow Select phone number \Rightarrow \textcircled{O}	
Hiding Call Time during calls	● → Settings → ● → Call → Call Time/ Data Counter → ● → Call Time Counter → ● → Off → ●		From Call Log Records From Call Log	
Resetting Call Timers	● ◆ Settings ◆ ● ◆ ⊙ Call ◆ Call Time/ Data Counter ◆ ● ◆ Call Timers ◆ ● ◆ Reset ◆ ● ◆ Yes ◆ ●		From S! Friend's Status Member List From Friend's Status → ● → Select member → ●	
Data Communication			Start Here ● > Settings ● • Call > Call Barring ● > Restrict Destinations ● >	
Checking accumulated data transmission	● → Settings → ● → ⊖ Call → Call Time/ Data Counter → ● → Data Counter → ● → All Data → ●	Editing Call Permitted List	Enter Handset Code ⇒ ● ⇒ Specified Numbers ⇒ ● ⇒ Call Permitted List ⇒ ● ⇒ See below	
volume	<u> </u>		Editing Numbers Select number/name ⇒ ● ⇒ Edit ⇒ ●	
Resetting Data Counter	Data Counter + • + Data Counter + • + Clear Counter + • + Yes + •		Deleting Numbers Select number/name ⇒ ☺ ⇒ Delete ⇒ ● ⇒	
Resetting Data		Permittea List	Select number/name	



Reject Numbers

	Start Here ● ◆ Settings ● ◆ Call ◆ Call Barring ● ● Reject Numbers ● ● > Specified Numbers ● ● ● Reject Numbers List ● + Empty> ● > See below
Designating numbers to reject from saved	From Phone Book Ph.Book List ⇒ ● ⇒ Select entry ⇒ ● ⇒ Select phone number ⇒ ●
information	From Call Log Records From Call Log ⇒ ● ⇒ Select record ⇒ ●
	From S! Friend's Status Member List From Friend's Status ⇒ ● ⇒ Select member ⇒ ●
Editing Reject Numbers List	Start Here \Rightarrow \Rightarrow Settings \Rightarrow \Rightarrow CallCallBarring \Rightarrow \Rightarrow Reject Numbers \Rightarrow \Rightarrow Specified Numbers \Rightarrow \Rightarrow Reject NumbersList \Rightarrow \Rightarrow See below
	Editing Numbers Select number/name
	Deleting Numbers Select number/name ⇒ ☺ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●
Excluding rejected calls from Call Log	 Settings Settings Reject Numbers Record on Call Log Do not Record

Optional Services

All Services

Checking service status	 Settings Settings Settings Status Available for Voicemail/Divert, Show My Number, Call Barring and Call Waiting. For Call Barring, select restriction and press 	
Call Waiting (Co	ntract Required)	
Activating Call Waiting	● → Settings → ● → \odot Call → Call Waiting → ● → On → ●	
Placing Line 1 on hold to answer Line 2	 A tone sounds during a Voice Call ▶ Image: Press → to switch between lines. Press → to end active line and re-engage the party on hold. 	
Group Calling (Contract Required)		
Opening another line during a call	 During a Voice Call, enter phone number → ♪ Long Press ♪ to dial via Rakutomo Link. 	
Switching between open lines (Swap Calls)	During a Voice Call, ເ≏ົ ● Press ເ≏ົ to switch between lines.	
Talking on multiple lines simultaneously	While switching between lines, ☺ ⇒ Group Calling ⇒ ● ⇒ Conference All ⇒ ●	
Switching to private conversation	During Group Calling, select number/name ◆ <i>Private</i> ◆ ●	



Call Barring	
	Start Here] ● > Settings ● > Call > Call Barring ● ● > Bar Outgoing Calls > ● See below > > > > >
Setting/canceling outgoing call restriction	Setting Restriction Select restriction ★ ● ★ On ★ ● ★ Enter Center Access Code ★ ● ● Outgoing SMS messages are also restricted. ● Outgoing SI Circle Talk requests are not affected. ● Following restrictions are available: ■ All Outgoing Calls: Restrict all non-emergency calls ■ Bar Int'l Call: Restrict all international calls ■ Local & Home Only: Restrict all international calls except to Japan
	Canceling All Restrictions Cancel All ⇒ ● ⇒ Enter Center Access Code ⇒ ●
Setting/canceling incoming call restriction	Start Here ● ◆ Settings ● ◆ Call ◆ Call ● ○ ● <t< th=""></t<>
	Setting Restriction Select restriction ⇒ ● ⇒ On ⇒ ● Enter Center Access Code ⇒ ● Incoming SMS messages are also restricted. Incoming S! Circle Talk requests are not affected. Following restrictions are available: All Incoming Calls: Reject all calls Bar if Abroad: Reject calls when outside Japan
	Canceling All Restrictions Cancel All ⇒ ● ⇒ Enter Center Access Code ⇒ ●

4 Calling

Caller ID

	● → Settings → ● → ⓒ Call → Show My Number → ● → On or Off → ●
--	---

Settings

Voice Call

	$\underbrace{\text{Start Here}}_{\text{Start Here}} \textcircled{\bullet} \Rightarrow \underbrace{\text{Settings}}_{\text{Start Here}} \textcircled{\bullet} \Rightarrow \underbrace{\text{Settings}}_{\text{Set below}} \textcircled{\bullet} \underbrace{\text{Call}}_{\text{Set Auto}} Auto$			
Answering calls automatically when using Headphones	 Activating Auto Answer Switch On/Off			
	Changing Ring Time Answer Time ⇒ ● ⇒ Enter time ⇒ ●			
Saving frequently used touch tones	 Phone Touch-Tone Signal List Select number Enter name Enter digits Send saved tones from Voice Call window via Options menu. 			
Saving touch tones for White Office	 Phone Touch-Tone Signal List S Change to White Office Tone Touch tones for White Office are saved to S. When touch tones are already saved in S, choose Yes and press E. 			
	Start Here ● > Phone ● > Touch-Tone Signal List ● ● See below			
Deleting touch tones	One Entry Select number ⇒ ☺ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●			



Video Call

Sending camera image when initiating Video Calls	 ● Settings ● ● ◆ ○ Call ● Video Call ● ● Camera Picture ● ● ◆ Default Image ● ● External Camera ● ●
Disabling Loudspeaker for Video Calls	● → Settings → ● → ⊖ Call → Video Call → ● → Loudspeaker → ● → Off → ●
Muting Microphone when initiating Video Calls	 ● ⇒ Settings ⇒ ● ⇒ ⊖ Call ⇒ Video Call ⇒ ● ⇒ Mute Microphone ⇒ ● ⇒ On ⇒ ●
Changing Alternative Image that is sent when initiating Video Calls	 ● Settings ● ● ○ Call ● Video Call ● ● Camera Picture ● ● Alternative Image ● ● > Select folder ● ● Select file ● ● ●
Changing Incoming/Outgoing Image quality	 ♦ Settings ♦ ● ♦ ⊙ Call ♦ Video Call ♦ ♦ Incoming Picture or Outgoing Picture ♦ ♦ Select option ♦ ●
Setting image that is sent while call is on hold	 Settings Settings Hold Guidance Pict Select folder Select file Select file Select file Select file Select file Select file
Setting Backlight status	 Settings Backlight Select option Selecting Normal Setting applies Display Backlight settings.



Troubleshooting

Receiving a Call

Cannot use Answer Phone or **Becord Caller Voice**

- Answer Phone and Record Caller Voice are disabled when less than 12 seconds of recording capacity remain or 20 messages are recorded. Delete messages.
- Answer Phone and Record Caller Voice are not available for Video Calls.

Placing a Call



Cannot place call via Speed Dial

· Speed Dial is not available when Phone Book access is restricted by Application Lock.



Cannot place call

 Cancel Keypad Lock, Function Lock and Offline Mode, if active.



Call won't connect

- Did you include the area code or the first 0? Dial the number including the area code or 0.
- Handset may be out-of-range (out appears). Move to a place where signal is strong and retry.

During a Call

Outgoing Image is distorted during Video Calls

 Rapid motion can make images appear choppy or distorted.



Camera image switches to Alternative Image during Video Calls

 Prolonged camera use may cause camera area to heat up, resulting in automatic shutdown: wait a while and retry.



Conversation is hampered

- Conversations may be hampered by ambient noise
- Check Earpiece Volume when using Loudspeaker. Increasing Earpiece Volume may cause feedback/interference.

Call is choppy or cut off

- · Network signal may be weak. Move to a place where signal is strong and retry.
- Battery may need to be charged or replaced. Charge battery or install a charged battery.

Clicking noise is heard during call

 Handset may be moving into another service area. Noise is heard when Network signal switches. This is normal.

Cannot hear other party's voice

- · Earpiece Volume may be low. Increase Earpiece Volume (P.4-3).
- · Sound output may be set to use handsfree device. Set Transfer Audio (P.4-15) to To Phone.



Messaging	5-2
Basics	5-2
Customizing Handset Address	5-3
Sending Messages	5-4
Sending S! Mail	5-4
Sending Graphic Mail	5-7
Using Signature	. 5-10
Sending SMS	. 5-11
Restricting Outgoing Messages	. 5-12
Incoming Messages	.5-13
Opening & Replying	. 5-13
Customizing S! Mail Retrieval	. 5-15

Handling Messages	. 5-16
Managing & Using Messages	5-16
Sorting Messages	5-18
Chat Folder	. 5-19
Using Chat Folders	5-19
Mail Groups	. 5-20
Creating Groups for Broadcast Mail.	5-20
PC Mail	. 5-21
Additional Functions	. 5-24
Troubleshooting	. 5-41

5

Basics

Use the following messaging services.

SMS

Exchange up to 160 alphanumerics with SoftBank handsets.

S! Mail

Exchange up to 30,000 characters with e-mail compatible handsets, PCs, etc.; attach media files, etc.

Large Size Messages Transmit messages of up to 2 MB including large images or multiple files; may incur high charges depending on subscribed price plan.

PC Mail

Receive or reply to PC mail account messages. Use 944SH to handle PC Mail messages like SMS or S! Mail.

Available Entry Items

	Recipient	Subject	Message	Attachment
SMS	Available*	N/A	Available	N/A
S! Mail	Available	Available	Available	Available
PC Mail	Available	Available	Available	Available

*SoftBank handset numbers only.

- A separate contract is required to use S! Mail and receive e-mail from PCs, etc.
- For more information, see SoftBank Mobile Website (**P.17-24**).

Auto Retry Function

If recipient's handset is off/out-of-range, a sent message is saved in Server Mail Box and delivery attempted at regular intervals. (Undeliverable messages are deleted.)

Auto Resend

When Auto Resend is active, handset makes up to two attempts to send unsent messages automatically. Cancel to disable (**P.5-37**).

Customizing Handset Address

Change alphanumerics before @ of the default handset mail address. For more information, see SoftBank Mobile Website (**P.17-24**).

Changing Address

- Settings ➡
 - Address Settings
 → • Handset connects to the Internet.
 - Select *English* and press (), then follow onscreen instructions.

Saving Address

When handset address is changed, SoftBank Mobile sends new address confirmation via S! Mail.



To save new address to My Details, follow these steps. (New address is effective even if not saved.)

D	Mes	sage I	• •)
		Perce	eived M	
		Mail		sy. 2/
		💷 Inform	nation i Tetsuya	
		M KTIIIUT2	i letsuya	1
2	Infor	matic	on 🗭	$oldsymbol{O}$



(Y)

4

Edi	t My	Details
Last Nam Yamada		
First Na Takako	me:	
Reading- Yamada	Last Na	me:
Reading- Takako	FirstNa	ne:
Tel 1//:	92XXX>	(5
Add Phon	e Numbe	r:
Email 1#		/v
Add Emai		





Sending Messages



Follow these steps to send S! Mail to a number/address saved in Phone Book:

> Create Message When a PC Mail Account exists, select S! Mail and press .





- Phone Book 🗭 🗩
- Select entry
- Select number or mail address 🌩 🔘
- Omit if only one number or address is saved
- When a mail address is entered, do not use single-byte katakana in message text or subject.



to return. Personal Mode When recipient is entered via Phone Book, text entry window word suggestions change according to recipient type. Previewing Outgoing Message After ②, ☑) Preview Message ● Pictogram Entry • In Pictogram List, press (1) to toggle Cross-Carrier Pictograms and all Pictograms. Pictogram appearance may differ by carrier. Specifying Line in Dual Mode [S! Mail Composition Window] (S) Switch Line
Select line
Selec **Converting to Graphic Mail** After 😔, Auto Art 🕈 🔘 🗭 Select decoration type \Rightarrow (Next) or (Prev.) To cancel conversion, follow these steps before (3): Cancel Arrangement Yes 🌩 💿

Incoming Calls while Creating Message

Content is saved temporarily. End the call

Advanced




🕙 🔍 Using other recipient entry methods 🔍 Adding recipients 🔍 Converting mail type (SMS/S! Mail) 🔍 Saving without sending 🔍 Requesting delivery confirmation Designating/editing reply-to address (And more on P.5-24 - 5-26)

Hiding progress bar while sending messages Disabling automatic resend of unsent messages Designating/editing reply-to address (And more on P.5-37 - 5-38)

Using Quick Phrase

Use fixed text (Japanese) or previously entered text for quick entry. Quick Phrase Options:

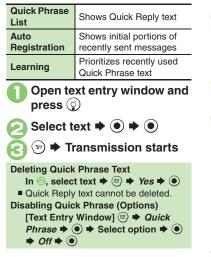

Attaching Files

Send attachments to compatible handsets. Follow these steps to attach images to S! Mail:

- In S! Mail Composition window after composing message, select attachment field **•** •
 - $\begin{array}{c} Picture \blacklozenge \textcircled{\bullet} \textcircled{\bullet} \blacklozenge \\ folder \blacklozenge \textcircled{\bullet} \end{array}$
 - Select file ♦ ●



Attaching Non-Image Files

• In ②, select a folder other than *Picture* and press ④, then select a file.

Attaching Multiple Files

After (:), Attach (1) \Rightarrow $(i) \Rightarrow$ Attach File \Rightarrow $(i) \Rightarrow$ Picture \Rightarrow $(i) \Rightarrow$ Select folder \Rightarrow $(i) \Rightarrow$ Select file \Rightarrow $(i) \Rightarrow$ $(i) \Rightarrow$

X in Attach (X) indicates the number of attached files.

Auto Image Resize

Large images may be automatically reduced to approximately 400 - 500 KB by default. Change resize setting via Picture Auto Resize (**P.5-37**).

If Recipient Cannot Receive Large Messages (Up to 2 MB)

• Message may be truncated or attachments may be lost.

Advanced

Changing attached image size Set Auto Play File (And more on P.5-26 - 5-27)

Limiting outgoing S! Mail message size Selecting size to which images are reduced when attaching (P.5-37)

Attaching captured/recorded files unsaved (P.5-38)



Sending Messages

Sending Feeling Mail

Set emotion (happiness, sadness, etc.) to messages; recipient handset responds accordingly.

In S! Mail Composition window after composing message, ☺ ➡ Feeling Settings ➡ ●

Select category, e.g., $Happy/Glad \Rightarrow \odot$

6

os 🗖
547B
Auto Art
era a Yama nashi nday. ncord




Transmission starts

Canceling Feeling Mail [S! Mail Composition Window] Select subject field ◆ ● ◆ Select Pictogram ◆ ◆ ●



5-6

Sending Graphic Mail

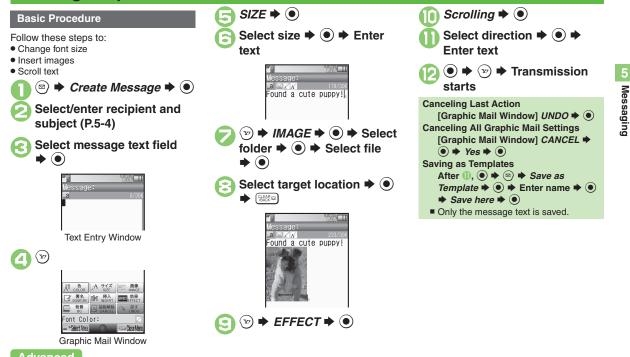

Advanced

Changing text color, size & effect Changing text color Inserting background sound Inserting Flash[®] file Inserting horizontal line Flashing text Aligning text (left/right/center) (And more on P.5-27)



____¥

Using My Pictograms

My Pictograms are grouped by category; add or rename categories as needed.


- Source files are saved in Data Folder (My Pictograms).
- Save up to 1,000 additional My Pictograms on handset.
- Some preloaded My Pictograms appear in suggestion list when corresponding reading is typed.

In text entry window, 🖽

- My Pictogram List appears. (Log appears if My Pictogram has been used.)
- Press (#...) or Kall to open next or previous Category.
- Category List Add New Entry> All Category ●顔 ●装飾 Select Category My Pict Nex 0 10 10 My Pictogram List • Press (>) or (>) to open next or previous page, if any. Select file 🗭 🔘 To suppress message, press
 ♥ (♥).

 ♥

 - List closes; enter text, add other decorative effects, etc.

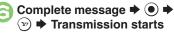






5-8

Advanced

Converting from S! Mail

Convert S! Mail to Graphic Mail easily.

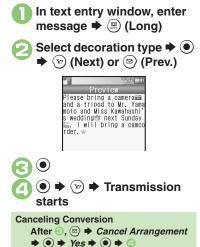

Using Templates

Create Graphic Mail from templates.

- → Templates → ●
 2 Select template → ●
 Complete message → ∞ → Transmission starts
- Template size may change when used for creating messages.

Opening Templates from Text Entry Window (S! Mail)

[Text Entry Window] 🖾 🗭 Launch

- Template ⇒ ⇒ Select template ⇒
- ◆ Complete message ◆ 🦻
- If message text has already been entered, follow onscreen prompt to insert it.





Using custom decoration type (**P.5-27**)

Sending Messages


Using Signature

Save signature and insert it into message text automatically upon opening S! Mail Composition window. Alternatively, insert signature manually during text entry.

- Last saved/edited Decoration Signature or Text Signature is set as default signature.
- Created Decoration Signatures are saved to Templates folder (デコレメ署名).

Saving Signature

Follow these steps to create Decoration Signature for the first time:

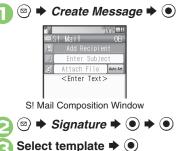

Save () • To disable confirmation, press (2). Yes or No 🌩 🖲 R For No. a message appears: press . Auto Insert Setting • In . choose Yes to insert signature automatically upon opening S! Mail Composition window. To insert signature manually, follow these steps: [S! Mail Composition Window] 🖾 🗭 Signature Auto Insert Setting 🕈 💿 🕈 Off 🕈 🖲 Saving Text Signature • Follow these steps after saving Decoration Signature: [S! Mail Composition Window] 🖾 🗭 Signature ♦ ● ♦ Set/Edit Signature ♦ ● ♦ Text Signature ♦ • Finter signature • • • Yes or No 🌩 🔘

Create signature **♦** ●

Inserting Signature Manually

In S! Mail Composition window, ⊠




• Last saved/edited signature is inserted.



5 - 10

Advanced

Editing Decoration Signatures Saving additional Decoration Signatures Inserting signature during text entry (P.5-25)

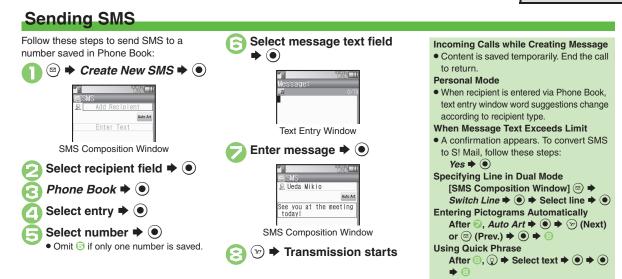

Advanced


Using other recipient entry methods Adding recipients Using Speed Dial/Mail list Converting mail type (SMS/S! Mail) Saving without sending Requesting delivery confirmation Changing SMS Server storage limit for outgoing message (And more on P.5-24 - 5-26)

Changing SMS Server sent message storage limit Changing SMS Server number Changing character encoding for composing messages (P.5-40)

Restricting Outgoing Messages

Limiting to Permitted List

Allow messaging to handset numbers/ addresses saved in Phone Book or Permitted List only.

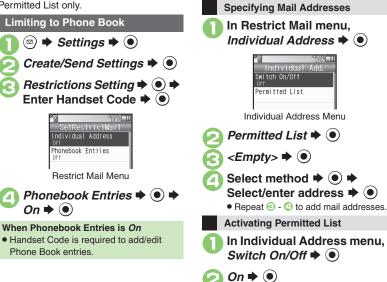



Advanced

Opening & Replying

Opening New Messages

Information window opens for new mail. See **P.5-23** to receive PC Mail.

Information Information

Important Message Retrieval Notes

- By default, if message size is around 1 MB or less, the complete message including attachments is retrieved in and outside Japan; transmission fees apply depending on subscribed price plan.
- Automatic message retrieval outside Japan may incur high charges since flat-rate packet transmission plans do not apply during international roaming.
- To retrieve only the initial portion of message text automatically, set Auto Settings to *Off*, retrieve complete message manually as needed.

Delivery Report

 Information window opens for Delivery Report. Follow these steps to open it: *Delivery Report* ⇒ (●) ⇒ Select message with report ⇒ (●) ⇒ (▽)

📔 Message 🕈 💽	
afr <mark>es mensenu</mark> Received Msg. Mail s⁄ s ■ Ueda Mikio	
i⊒Ueda Mikio ● Kimura Tetsuya	
How's it going? %06/01 15:05 mi've just finished my work. How about you? I'll be at the place at around 8 pm.	
Message List	
Select message ➡ ●)
Received Msg. 0003 EUeda Mikio How's it going? %06/01 15:05 I've Just finished my wo rk. How about you? I'll be at the place at around d 8 pm.	
 Message window opens. 	

Receiving Feeling Mail

• Illumination, Vibration and ringtone respond according to settings.

Attached Images

• Attached images open automatically. **Messages with Quiz**

Enter or select answer 🕈 🖲

Message opens when the correct answer is entered or selected.

Animation View

- When a specific Pictogram is entered as the first character of subject or included in message text, corresponding animation appears in message window background. Mail Notice
- Depending on the setting (e.g., Auto Settings is *Off*), Server sends initial portion of message text in each of the following cases:
 - The message was sent to multiple recipients
 - Files are attached to the message
- If message size exceeds 1 MB, Server sends only initial portion of message text regardless of Auto Settings status.
 (Approximate size appears in message text.)

Advanced

- 🖑 Accessing new mail out of Standby Retrieving new S! Mail manually Retrieving remaining portions (And more on P.5-28)
 - Limiting incoming S! Mail message size Muting ringer, etc. for messages sorted into Secret folders Changing ringtone settings (And more on P.5-36 5-37)





Message Type/Status

	Unread		Mail Notice (remaining portion exists)
	Read	習	Unread Delivery Report
X	Sent	Θ	Attachments
\square	Failed	Ŧ	Protected
É	Replied	0	Priority (High)
	Forwarded	€	Priority (Low)
	Send Reservation set		USIM Card SMS

"SMS" or "PC" appears accordingly on indicators.

Advanced



Messaging

🕙 Saving attachments to Data Folder Saving to Phone Book Ousing linked info Reporting unsolicited message sources as spammers Oselecting mail type/guote option Replying guickly using fixed text Selecting auote option (P.5-38)

Message Window



Press (\bigstar) to open next (newer) message. or (#,š) to open previous (older) one.

Changing Font Size [Message Window] 3 - (Long) to enlarge or 1 (Long) to reduce

Replying to Messages



In message window, 💬

- Mail Composition window opens.
- Original message text is guoted (except for SMS and Graphic Mail).
- Complete message 🌩 🐨 🗭 Transmission starts

Replying to Messages Addressed to **Multiple Recipients**

After 1, To Sender or Reply All +

Reply Assist Dictionary (メール返信アシ スト辞書)

• When replying in Kanji (Hiragana) mode, this dictionary prioritizes original message words (katakana or alphanumerics) in suggestion list.


Auto Reply

 Handset sends a reply automatically when receiving messages from saved numbers or addresses in specified mode (Manner mode, etc.).


Customizing S! Mail Retrieval

Set complete S! Mail retrieval to manual (Server sends only initial portion of message text without attachments) or set handset to retrieve complete messages automatically by specifying sender type, mail address, etc.



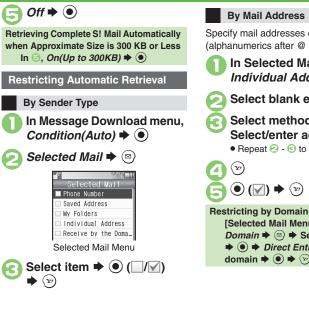

Specify mail addresses or domains (alphanumerics after @ of mail addresses).

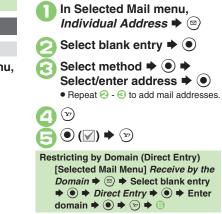

Advanced

Retrieving remaining portions (P.5-28)

Retrieving all messages (including spam) automatically Deleting addresses/domains specified for complete message retrieval (P.5-36)



Handling Messages

Managing & Using Messages

Messaging Folders

Messages are organized in folders by type.

Messaging Received Messages 🖾 Received Msg. -Create Message Incomplete/ 🖃 Retrieve New Msg. Unsent Messages Drafts-Sent Messages Templates Failed or Send 🖾 Sent Messages -**Reservation Messages** CUnsent Messages

Auto Delete

Messaging

- Oldest received/sent messages are deleted automatically to save new ones when memory is full. Protect important messages to avoid unintentional deletion. **Opening Help**
- Follow these steps in folder list, message list or message window:

- When Failed Message is Saved
- A reminder message appears upon opening Messaging menu.

Checking Messages Received Msg. or Sent

Messages 🗭 🖲



Folder List

- When a PC Mail Account exists. PC Mail folder (folder with the name specified in Account Name) appears.
- Select Mail folder or PC Mail folder and press (>>) to hide/show sub folders. To open full message list. hide sub folders and press .

Select folder **>** Received Msg. 魪 Ueda Mikio 🌨 Ueda Mikio 📥 Kimura Tetsuva Message List Select message 🌩 🔘 eceived Msg. 0003 Ueda Mikio How's it going? 06/01 15:05 l've just finished my wo rk. How about you? [']] be at the place at arour d 8 pm. Message Window **Protecting Messages** In message list, select message 🖾 🌩 Manage Msg. 🜩 💽 Lock **Canceling Protection** In 🕗, Unlock 🗭 🔘

Advanced



Selecting multiple messages Deleting messages Deleting Server Mail via Server Mail list (And more on P.5-31 - 5-32) Forwarding messages Sending from Drafts Checking Server Mail message count and volume Changing view for Received Msg. folder Changing view for Sent Messages folder Showing complete sent/received message addresses (And more on P.5-34 - 5-35)

5 - 16

Moving Messages to Spam Folder



• For PC Mail, skip ahead to 📀.



Go to Spam Measures Folder. ➡ ●

 If a confirmation appears, choose Yes or No and press (). Choose Yes to proceed with Sort Spam Mail settings; follow onscreen instructions.

Searching Messages

Search messages by message text, sender/recipient address, etc.

 Received Msg. or Sent Messages

 Received Msg. or Sent
 Search

 Search All Msg.

 Select method

 Select/enter address or text

Searching by Folder

In O, select folder \clubsuit O \clubsuit Search

♦ ● ♦ Search Folder ♦ ● ♦ ④

Searching Message Text

- Follow these steps to find specific words/
- phrases; limit search by character type.

- $Text \Rightarrow \textcircled{O} \Rightarrow Enter text \Rightarrow \textcircled{O}$
- Press (v) or (v) to jump to next/previous search result.

Hiding Folders

Hide Received Msg./Sent Message folder to require Handset Code for access to the folder and messages within. Chat Folders are not affected.



After **1**, ⁽²⁾ **→** Unlock Temporarily

♦ ● ♦ Enter Handset Code ♦ ●

We Moving messages manually Renaming folders Deleting folders Deleting Spam Folder messages Adding folders Moving folders Changing status of all messages within folders to read Canceling automatic deletion of messages within folders Canceling Secret (P.5-32 - 5-33)



Sorting Messages

Sorting into Designated Folders


Sort messages by sender/recipient or partially matching text in subject or SMS message text.

⇒ Received Msg. or Sent
 Messages ⇒ ●





B

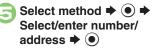

🕑 Þ Saved

```
Sorting by Domain (Direct Entry)
In ②, Sender(Domain)
(Recipient(Domain) for Sent
Messages) ➡ ④ ➡ Direct Entry
➡ ④ ➡ Enter domain ➡ ● ➡ ☉
Sorting by Part of Subject/SMS
Message Text
In ②, Subject ➡ ● ➡ Enter text
➡ ● ➡ ☉
```

Filtering Spam

Follow these steps to filter messages from handset numbers/addresses not saved in Phone Book into Spam Folder: (Alternatively, set sort keys to filter messages.)

- Settings ⇒ ⇒
 Receive Settings ⇒ ●
- Spam Mail Settings ♦ Sort Spam Mail ♦ ●







5-18

Messaging

Using Chat Folders

Organize messages exchanged between handset and Chat members' handsets. To hide messages, set Chat Folder to Secret.

Saving Members



Chat Folder List





Select blank entry **>**

- Select saved member to edit number/ address.
- Select method Select/enter number/ address ♥ ●
 - Repeat 2 🕞 to add members.



Select message **▶** ●



Advanced

Mail Groups

Creating Groups for Broadcast Mail

Create Mail Groups to send messages to multiple recipients at one time.

First, save target recipients to Phone Book.

• Settings • $\overline{\bullet}$ (⊠) Mail Groups 🕈 🔘 1516 Mail Groups → <Add New Group> Mail Group Entry Window <Add New Group> ♦ ●

Select Group

Select entry







 Omit i only one number or address is saved.

Saved

(Y?)




5-20

Messaging

PC Mail

Receive or reply to PC mail account messages.

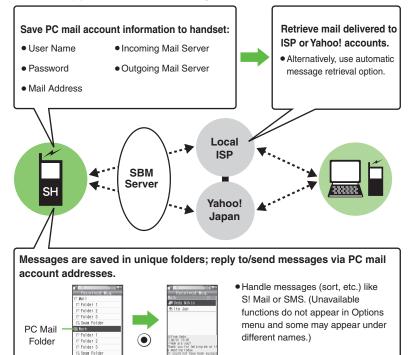

Important PC Mail Usage Notes

- Receiving PC Mail for the first time after PC Mail Account setup may incur high charges due to large-volume packet transmissions.
- Setting handset to retrieve PC Mail automatically may incur high packet transmission fees; remember this, especially when using handset outside Japan.
- Other functions may slow while handset is checking for new messages.
- Checking for new messages may incur packet transmission fees even when none exists.
- Single-byte katakana and Pictograms are not supported.
- When messages sent from handset to PC mail account are retrieved by handset (then opened, replied with quotes, forwarded, etc.), included Pictograms may not appear or may appear as different characters.



PC Mail

PC Mail Account Setup

- Proceed with setup according to information supplied by ISP.
- PC Mail services may be unavailable depending on the services, settings or contract details for your PC mail account. Confirm compatibility with POP/SMTP message retrieval/transmission via e-mail software beforehand.

Mandatory Items for Retrieval


User Name	Required to connect to incoming mail server	
Password	Required to connect to incoming mail server	
ReceivingServer	Incoming mail server address	

Mandatory Items for Transmission

	Address to use PC Mail	
Sender Server	Outgoing mail server address	

Setting Other Items

• Edit information as needed; for description, select an item and press .

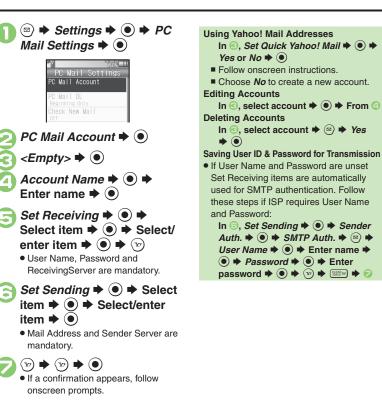

5-22

Retrieving New PC Mail

Retrieve new messages from created accounts. If message count is high, some may not be received on the first attempt.



Retrieving Messages by Account

After $\mathbf{0}$, select account $\Rightarrow \mathbf{O} \Rightarrow \mathbf{O}$

Omit if only one message is retrieved.

Checking Received PC Mail

⇒ Received Msg. ⇒ ●
 ⇒ Select folder ⇒ ●
 Massage list appears Massage list

 Message list appears. Message list is similar to that of S! Mail.

🕽 Select message 🗭 💽

• Message window opens.

Replying to PC Mail

- In message window, 🐑
 - PC Mail Composition window opens.
 - Original message text is quoted (except for HTML messages).
- Complete message ♦ ☞ ♦ Transmission starts

Replying without Quoting Original Message Text [Message Window]
→ Reply → → PC Mail → → Complete message → → Changing Account for Outgoing Messages [PC Mail Composition Window] Select recipient field → → From:

 $\bullet \odot \bullet$ Select account $\bullet \odot$

Sending PC Mail

Follow these steps to create and send PC Mail:

- ☞ ◆ Create Message ◆ ●
 Select PC Mail Account ◆ ●
 Complete message ◆ ♡ ◆
 - Transmission starts
- Converting to S! Mail After ⊘, ⊚ ➡ Convert to S! Mail ➡ (●) ➡ Yes ➡ (●)

Note

• Single-byte katakana and Pictograms are not supported.

Advanced

Retrieving complete PC Mail messages Retrieving new messages automatically Retrieving PC Mail for specified folder Disabling automatic word wrap Retrieving complete messages from specified addresses Deleting addresses/domains specified for complete message retrieval Restricting complete message retrieval size (P.5-38 - 5-39)



Creating/Sending Messages			Saving Recipients
Recipient			 Settings → ● → Speed Dial/Mail → ●
Using other recipient entry	In Mail Composition window, select recipient field	Using Speed Dial/	Select number or mail address $\Rightarrow \textcircled{O} \Rightarrow Do not$ Assign $\Rightarrow \textcircled{O} \Rightarrow \textcircled{O}$
methods Adding recipients	enter number/address * • In Mail Composition window, select recipient field * • + Add Recipient * • + Select method * • + Select/enter number/address * • + + + + + + + + + + + + + + + + + +	Mail list	Creating Messages In Standby, 0 ::: - ♡→ ○→ entry number) ⇒ ∞ • When messaging to SoftBank handset numbers, select S! Mail or SMS and press ●.
Switching	In Mail Composition window, select recipient field ⇒ ● → Select recipient ⇒ ⊚ → Select		[Start Here]In Mail Composition window, select recipient field ⇒ ● ⇒ See below
recipient status (To, Cc and Bcc)	 status → ● → ∞ Other recipients cannot see numbers/addresses set 	Editing/deleting	Editing Recipients Select recipient ⇒ ● ⇒ Edit ⇒ ● ⇒ ⊙
	to Bcc. Start Here	recipients	Deleting a Recipient Select recipient ⇒ ☺ ⇒ Delete ⇒ ● ⇒ 沙
Using Rakutomo	Saving Recipients (from Phone Book) ● ⇒ Refer Phone Book ⇒ ● ⇒ Select entry ● ⇒ ⊕ ⊕		Deleting All Recipients Select recipient ◆ ② ◆ Delete All ◆ ● ◆ Yes ◆ ● ◆ ♡
Link	 Creating Messages Create Message ⇒ ● When messaging to SoftBank handset numbers, select S! Mail or SMS and press ●. 		Start Here → Select entry → ⇒ See below
		Editing/removing Rakutomo Link entries	Editing Entries Change Registered Contents ⇒ ● ⇒ Change the Use Address ⇒ ● ⇒ Mail address: ⇒ ● ⇒ Select new number/address ⇒ ● ⇒ ♡
			Removing Entries Remove ⇒ ● → Yes ⇒ ●



	Start Here Image: S
Editing Speed Dial/	Editing Entries Select entry ⇒ (2) ⇒ Change ⇒ (3) ⇒ Mail address: ⇒ (4) ⇒ Select new number/address ⇒ (4) ⇒ (2)
Mail list	Removing Entries Select entry ⇒ ⊚ ⇒ Remove Selected ⇒ ● → Yes ⇒ ●
	$ \begin{array}{c} \textbf{Removing All Entries}\\ \textcircled{\begin{tabular}{lllllllllllllllllllllllllllllllllll$
Message Text	
Editing Decoration Signatures	In Mail Composition window,
Saving additional Decoration Signatures	In Mail Composition window, ⇒ Signature → Set/Edit Signature New Decoration Signature ⇒ Create Signature → Save as New → Enter name → Yes or No → Saved file is set as default signature.
Inserting signature during text entry	 In text entry window, (a) → Insert/Font Size → Signature → (a) If Switch to Graphic Mail confirmation appears, press (a). Signature is inserted below message text.
Inserting ASCII Art	In text entry window, ☺ → Call ASCII Art → ● → Select entry → ●
Converting mail type (SMS/S! Mail)	In Mail Composition window, $\textcircled{B} + Change to$ SMS or Convert to S! Mail $\Rightarrow \textcircled{O} + Yes \Rightarrow \textcircled{O}$

Save, Send Reservation & Sent Cancel

Saving without sending	After completing message, ☺ ⇒ Save to Drafts ⇒ ●	
	Start Here After completing message, ☺) ⇒ Send Reservation ⇒ ● ⇒ See below	
Sending automatically later	Auto Send when Signal Returns Within the Network	
	Designating Send Date/Time (within 30 days) Date & Time ⇒ ● ⇒ Enter date/time ⇒ ● ⇒ Yes ⇒ ●	
Canceling sent Image: Canceling sent S! Mail Select message Image: Canceling sent Image: Canceling sent Image: Canceling sent Select message Image: Canceling sent Image: Canceling sent Image: Canceling sent Select message Image: Canceling sent Image: Canceling sent Image: Canceling sent Select message Image: Canceling sent		

Messaging Settings

• For SMS, only Delivery Report and Expiry Time are available.

• For PC Mail, only Reply to Settings and Priority are available.

Requesting delivery confirmation	In Mail Composition window, Messaging Settings Delivery Report + On ● Delivery Report + On ● Delivery Report + On ● On ● On ●
Setting priority	In Mail Composition window, (a) → Messaging Settings → ● → Priority → ● → Select priority → ●
Setting message to	In Mail Composition window, 🐵 🔶 Messaging
be deleted from	Settings 🔶 🔍 🔶 Set Auto Delete 🔶 🍥 🔶 On
recipient handset	
once read	 Effective for messages addressed to SoftBank handsets.

		Adding a reply request	In Mail Composition window, ● Messaging Settings ● ● Reply Request ● ● ● • Effective for messages addressed to SoftBank handsets.	Lowering for outgo S! Mail n
		Restricting forward/delete	In Mail Composition window, (a) → Messaging Settings → (I) → Forward NG or Delete NG → (I) → On → (I) • Effective for messages addressed to SoftBank handsets.	Designa
	5 Messaging		Start Here]In Mail Composition window, ● Messaging Settings + ● > Quiz + ● Switch On/Off + ● > On + ● > See below • Effective for messages addressed to SoftBank handsets.	reply-to
	ging		Using Preset Questions (Multiple Choice) Select question → ● → Selection → ● → Select number → ● → Enter/edit option → ● → Enter/ edit all options → Select answer → ⊙ → @ → @ • May be unavailable for some questions.	Changin Server s limit for message
			Using Preset Questions (Exact Answer Entry)	Attac
		Locking message with Quiz	 Select question ◆ ● ◆ Match Characters ◆ ● ◆ Enter answer ◆ ● ◆ ◎ • May be unavailable for some questions. 	Changin image si
			Creating Custom Quiz (Multiple Choice) <create original=""> ● Selection ● Select number ● Enter option ● Select answer ●</create>	
			Creating Custom Quiz (Exact Answer Entry) <create original=""> ⇒ (●) ⇒ Enter question ⇒ (●) ⇒ Match Characters ⇒ (●) ⇒ Enter answer ⇒ (●) ⇒ (●)</create>	Capturin recordin attaching
	N	Editing assigned Quiz	In Mail Composition window, (a) → Messaging Settings → ④ → Quiz → ④ → Edit Question → ● → Edit question/options/answer → (a) ((a) again after editing options) ● Effective for messages addressed to SoftBank handsets.	
5-	26			

In Mail Composition window, ☺ → Messaging Settings → ● → Create Msg. Size → ● → 300KB → ●		
[Start Here] In Mail Composition window, Messaging Settings ⇒ ● Provide the set of the s		
Designating Switch On/Off ⇒ ● ⇒ On ⇒ ● ⇒ Select method ⇒ ● ⇒ Select/enter address ⇒ ●		
Editing Edit Address ⇒ ● ⇒ Edit ⇒ ●		
In Mail Composition window,		
Select attached file → (©) → <i>Resize Picture</i> → (●) → Select size → (●) • May be unavailable for some images.		
Start Here In Mail Composition window, select attachment field ⇒ ● > See below		
Still Images Picture ⇒ ● ⇒ Take Picture ⇒ ● ⇒ ● to shoot ⇒ ●		
Video Video ⇒ ● ⇒ Record Video ⇒ ● ⇒ ● to start recording ⇒ ● to stop ⇒ Accept ⇒ ● ⇒ Select storage media ⇒ ●		
Sounds Sound ⇒ ● ★ Record Voice ⇒ ● ★ ● to start recording ⇒ ● to stop ⇒ Accept ⇒ ● ★ Select storage media ★ ●		

Additional Functions

Set Auto Play File	Select attached file → ② → Set Auto Play File → ③ → Switch On/Off → ③ → On → ④ → Enter Message → ④ → Enter comment → ●	Deleting Flash [®] file	In text entry window after inserting Flash [®] file, move cursor before Flash [®] icon ⇒ • When Graphic Mail window is open, press ☺ first.
	 ▶ ⇒ 𝔅 Not available for PC Mail. 	Inserting horizontal line	In text entry window, ☺ ⇒ INSERT ⇒ ● ⇒ Line ⇒ ●
Graphic Mail			Start Here In text entry window, ⊕ ⇒ See below
Changing text color, size & effect	In text entry window, (>>>> (>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>	Flashing text	Flashing EFFECT ⇒ ● ⇒ Blink ⇒ ● ⇒ Blink On ⇒ ● ⇒ Enter text
Changing text color	In text entry window, $ \Rightarrow COLOR \Rightarrow \Rightarrow$ Select color $\Rightarrow \Rightarrow Enter text$		Canceling (a) \Rightarrow Select start point \Rightarrow (b) \Rightarrow Highlight text range \Rightarrow (c) \Rightarrow EFFECT \Rightarrow (c) \Rightarrow Blink \Rightarrow (c) \Rightarrow
Changing background color	In text entry window, $\textcircled{P} \Rightarrow BG \Rightarrow \textcircled{O} \Rightarrow$ Select color $\Rightarrow \textcircled{O}$		
	Start Here In text entry window, ⊕ ⇒ INSERT ⇒ ● ⇒ See below	Aligning text (left/ right/center)	In text entry window, (>>> <i>■ EFFECT</i> → (●) → <i>Alignment</i> → (●) → Select option → (●) → Enter text
Inserting background sound	Inserting BGM Sound $\Rightarrow \odot \Rightarrow$ Select folder $\Rightarrow \odot \Rightarrow$ Select file $\Rightarrow \odot$		Start Here In text entry window, enter message ⇒ (a) (Long) ⇒ Original ⇒ (a) (b) (b) (c) (c) (c)
	Deleting Delete BGM ⇒ ● ⇒ Yes ⇒ ●		Disabling My Pictograms Pictograms Type ◆ ● ◆ Pictograms ◆ ● ◆ (∞) ◆ (∞) (Next) or (∞) (Prev.) ◆ ●
Inserting Flash [®] file	In text entry window, ⊗ → <i>INSERT</i> → ● → <i>Flash</i> → ● → Select file → ●		Inserting Pictograms/My Pictograms at the
Previewing Flash [®] file	In text entry window after inserting Flash [®] file, (a) → <i>Preview</i> → (a) • When Graphic Mail window is open, press (b) first.	Using custom decoration type	End of Text Only Insert Pictograms Position ⇒ ● > Page Bottom ⇒ ● ⇒ ⊗ (Next) or ⊗ (Prev.) ⇒ ●
			Changing Pictogram/My Pictogram Quantity Insert Pictograms Volume ★ ● ★ Select option ★ ● ★ ⊕ ★ ⊕ (Next) or ⊕ (Prev.) ★ ●
			Enabling/Disabling Text Color/Size & Background Color Auto Change Change Font Color, Change Font Size or Change Background Color ⇒ ● Do or Do not ⇒ ● ⇒ ⊕ ⇒ (Next) or ⊕ (Prev.) ⇒ ●

My Pictograms

Creating Categories	In text entry window, ★
Editing Categories	In text entry window, ★
Changing Category order	In text entry window, ★
Opening Category properties	In text entry window, 🗺 🔶 🖲 🔶 Select Category 🔶 🖾 🏓 Details 🔶 ●
Deleting Categories	In text entry window, ★

Receiving/Opening Messages

Receiving

Accessing new mail out of Standby	☺ (Long)
Retrieving new S! Mail manually	 (B) → (B) When a PC Mail Account exists, select <i>S! Mail</i> and press ●. Retrieve messages missed while handset is out-of-range.
Retrieving Server Mail list	 Server Mail Box ⇒ ● → Mail List ⇒ ● Yes ⇒ ●
	Via Mail Notice In message list, select Mail Notice ● If retrieve size options appear, select one and press
Retrieving remaining portions	 Via Server Mail List (a) → Server Mail Box → (•) → Mail List → (•) → Select message → (•) • If retrieve list confirmation appears, choose Yes and press (•).
	[Start Here] ☺ ➡ Server Mail Box ➡ ● ➡ See below
Retrieving all	Directly from Server Retrieve All
Server Mail	Via Server Mail List Mail List ⇒ ● ⇒ ⊕ ● If retrieve list confirmation appears, choose Yes and press ●.

	Saving Sender Address
r name ⇒ ● ⇒ Save nplate appears. (Omit Saving to Phone	In message window, (◎) → Save Address → (●) → Select number or mail address → (●) → As New Entry → (●) → Complete other fields → (♡) • To add to an existing entry, select As New Detail. Saving Linked Info
t file → 🐵 → Install	In message window, select number or mail address \Rightarrow $\textcircled{O} \Rightarrow$ <i>Save to Phone Book</i> or <i>Save</i> <i>Address</i> \Rightarrow $\textcircled{O} \Rightarrow$ <i>As New Entry</i> \Rightarrow $\textcircled{O} \Rightarrow$ <i>Complete other fields</i> \Rightarrow \textcircled{O} \Rightarrow To add to an existing entry, select <i>As New Detail.</i>
w, select file ⇒ ⊚ ⇒	
-	Dialing Numbers In message window, select number ⇒ ● ⇒ Call or Video Call ⇒ ●
Ring Video 🔶 🖲 🗭	Sending Messages In message window, select number or mail address → ● → Create Message → ● → S! Mail or SMS → ● → Complete message → ዏ ● For mail addresses, omit mail type selection step.
for New PC Mail, enter Using linked info	
	 Choose Select Br. to select a browser.
	Saving Location Information URLs In message window, select URL ★ ● ★ <i>RegisterMyLocation</i> ★ ● ★ <i>Name</i> ★ ● ★ Enter name ★ ● ★ ◎
	Enter name

5 Messaging



 Setting Location Information as Destination

 In message window, select URL ⇒ ● ⇒ Set to

 Destination ⇒ ● ⇒ Yes ⇒ ●

	Copying text	Start Here In message window, ☺ ⇒ Copy ⇒ ● ⇒ See below Sender/Recipient Number/Address	Saving My Pictograms within Graphic Mail	Start Here In Graphic Mail message window, ☺ → Save Items → ● → Save My Pictograms → ● → See below	
		Address		All Files	
		Subject or Message Text Subject or Message Text ⇒ ● ⇒ Select first		Save All → ● → Select folder → ● → Save here → ●	
F		character 🔶 🗩 Highlight text range 🔶 🖲		One File	
5	Looking up message text words in dictionaries	In message window, (a) → Copy & Search Dict. → (●) → Select first character → (●) →		Select file \Rightarrow (\bigcirc \Rightarrow Enter name \Rightarrow (\bigcirc \Rightarrow Select folder \Rightarrow (\bigcirc \Rightarrow Save here \Rightarrow (\bigcirc	
Messaging		Highlight text range ◆ ● ◆ Select dictionary ◆ ● ◆ Search ◆ ● ◆ Select word ◆ ●		Selected Files ⓒ ➡ Select file ➡ ● (□/√) ➡ Complete	
-	Jumping to message top/bottom	In message window,		selection $\Rightarrow \heartsuit \Rightarrow$ Select folder $\Rightarrow \textcircled{O} \Rightarrow$ Save here $\Rightarrow \textcircled{O}$	
			Saving Graphic Mail as templates	In Graphic Mail message window, 🐵 🔶 Save	
	Deleting attachments	In message window, select file ⇒ ☺ ⇒ Remove File ⇒ ● → Yes ⇒ ●		as Template ⇒ ● ⇒ Enter name ⇒ ● ⇒ Save here ⇒ ●	
	Reporting	In message window, ☺ → <i>Report Spam</i> → ●	Replying		
	unsolicited	• 🐨	O a la calla se se call	In message window, 🐵 🔶 Reply 🔶 🔍 🔶	
	message sources • Signature is not inserted automatically. as spammers • Not available for PC Mail.	Not available for PC Mail.	Selecting mail type/quote option	Select type/option → ● → Complete message → ∞	
	Saving attachments within Graphic Mail	In Graphic Mail message window,	Opening received message for reference	In message window, (2) → <i>Rep. with View</i> → (2) → Select option → (2) → Complete message → (2)	
				Editing Quick Reply Text	

Replying quickly

using fixed text

⇒ Settings ⇒ ● ⇒ Create/Send Settings
 ⇒ ● ⇒ Reply Settings ⇒ ● ⇒ Set Quick


 $Reply \Rightarrow \textcircled{O} \Rightarrow Select text \Rightarrow \textcircled{O} \Rightarrow Edit \Rightarrow \textcircled{O}$

In message window, 🐨 (Long) 🗼 Select text

Using Quick Reply

••



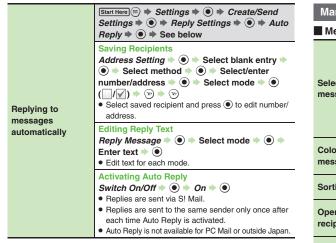

Managing Messages

Message List

	Selecting In message list, ● To uncheck, press ● again.		
Selecting multiple messages	Selecting Up to 50 Messages at Once In message list, ☺) → Manage Msg. → ● → Check in Block → ●		
	Unchecking All In message list, ☺ ➡ Uncheck All ➡ ●		
Color-tagging messages	In message list, select message ⇒ (®) ⇒ <i>Manage Msg.</i> ⇒ (●) ⇒ <i>Color Label</i> ⇒ (●) ⇒ Select color ⇒ (●)		
Sorting messages	In message list, ☺ ⇒ View Settings ⇒ ● ⇒ Sort ⇒ ● ⇒ Select option ⇒ ●		
Opening sender/ recipient details	In message list, select message ⇒ ③ ⇒ View Mail Address ⇒ ④ ⇒ Select sender or recipient ⇒ ●		
Checking memory status	 Memory Status Press to check memory status by service (SMS & S! Mail or PC Mail). USIM Card SMS message count and volume do not appear. 		
Opening properties	In message list, select message ⇒ ☺ ⇒ Message Details ⇒ ●		
Changing Graphic Mail template name display	 (a) → Templates → (b) → (b) → Item Displayed (b) → Select item → (b) 		

5-**31**

Saving SMS messages to USIM Card Changing received	In message list, select SMS message ◆ ③ ◆ <i>Manage Msg.</i> ◆ ④ ◆ <i>Move to USIM</i> ◆ ● ● Not available for some SMS messages. In message list, select message ◆ ④ ◆	Deleting Server	 Start Here ☺ ⇒ Server Mail Box ⇒ ● ⇒ Mail List > ● ⇒ See below If retrieve list confirmation appears, choose Yes and press ●.
message status (read/unread)	Manage Msg. ⇒ ● ⇒ Switch to Unread or Switch to Read ⇒ ●	Mail via Server Mail list	One Message Select message ⇒ © ⇒ Delete ⇒ ● > Yes ⇒ ●
Deleting Messages			All Messages
	One Message In message list, select message ⇒ ⊕ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●	Deleting all Server Mail directly from Server	$ \begin{array}{c} \hline \texttt{Start Here} & \textcircled{\texttt{Start Here}} & \textcircled{Start Here}} & \textcircled{\texttt{Start Here}} & \textcircled{Start Here}} & \textcircled{\texttt{Start Here}} & \textcircled{Start Here} & \textcircled{Start Here}} $
	Alternatively, delete an open message. All Messages In message list,		All Retrieved Messages Except New Msg.
			All Messages Delete All
Deleting messages	All Messages in Spam Folder In message list (Spam Folder),	Folders	
Deleting Server		Moving messages manually	In message list, select message ⇒ (∞) ⇒ Manage Msg. ⇒ (●) ⇒ Move to Folder ⇒ (●) ⇒ Select folder ⇒ (●) • If sort messages confirmation appears, choose Yes and press (●); messages sent to/received from the
	 ⇒ Delete All ⇒ ● ⇒ Yes ⇒ ● In message list, select Mail Notice ⇒ 		number/address will be sorted into selected folder automatically.
Mail via Mail Notice	$Delete \Rightarrow \textcircled{\bullet} \Rightarrow Select option \Rightarrow \textcircled{\bullet} \Rightarrow Yes \Rightarrow \textcircled{\bullet}$	Renaming folders	In folder list, select folder ⇒ ☺ ⇒ Rename ⇒ ● ⇒ Enter name ⇒ ● ● Available in Chat Folder list as well.



⇒ Chat Folder ⇒ ● ⇒ Select folder ⇒ ⊗
 ⇒ Delete Folder ⇒ ● ⇒ Yes ⇒ ●

• When Double Number is active, corresponding folders in other modes are also deleted.

	In folder list, select folder $\Rightarrow \boxdot$ \Rightarrow <i>Delete</i> \Rightarrow \bigcirc	Sorting into Formation		
Deleting folders		Re-sorting	In folder list, select folder $\Rightarrow \textcircled{e} \Rightarrow Classify \Rightarrow \textcircled{e}$	
-	 When Double Number is active, corresponding folders in other modes are also deleted. 	messages	Available in Chat Folder list as well.	
Deleting Spam Folder messages	In folder list, Spam Folder ⇒ (a) → Delete → (●) → Delete Spam Measures. → (●) → Yes or No → (●)	Sorting spam by setting keys	□ Settings ● Receive Settings ● Spam Mail Settings ● Sort Spam Mail ● Individual(Common) ● ● Select blank entry ● Select key ●	
Adding folders	In folder list,		Select/enter number/address/subject ●	
Moving folders	In folder list, select folder $\Rightarrow \circledast \Rightarrow Relocate$ Folder $\Rightarrow \circledast \Rightarrow$ Select target location $\Rightarrow \circledast$		<i>Folders</i> ♦ ● ♦ Select entry ♦ See below	
Changing status of all messages within	In folder list, select folder $\Rightarrow \textcircled{a} \Rightarrow To All Read$ $\Rightarrow \textcircled{b} \Rightarrow Yes \Rightarrow \textcircled{b}$		Editing Sender/Recipient Key (a) * Replace * (a) * Select method * (b) * Select/enter number/address * (b) * (b)	
folders to read		Editing/deleting sort keys	Editing Subject Key	
automatic deletion	anceing nutomatic deletion In folder list, select folder			
of messages				
Canceling Secret			Deleting All Entries $\textcircled{\begin{aligned} \hline \end{aligned} \hline \end{aligned} \Rightarrow Clear All \Rightarrow \textcircled{\end{aligned} \Rightarrow Yes \Rightarrow \textcircled{\end{aligned} \Rightarrow \end{aligned} \Rightarrow \end{aligned} \end{aligned} \end{aligned}$	

Deleting folders

ហ Messaging



Deleting all messages	 Shat Folder ★ ● ★ Select folder ★ ● Anage Msg. ★ ● ★ Delete All ★ ● Yes ★ ● 		
Resetting Chat Folders	 S → Chat Folder → ● → ○ → Reset → ● → Yes → ● 		

Mail Groups

Renaming Mail Groups	 Settings → ● → Mail Groups → ● → Select Group → ○ → Edit Name → ● → Enter name → ● → Yes → ●
	Start Here ⓐ ⇒ Settings ⇒ ● ⇒ Mail Groups ⇒ ● ⇒ Select Group ⇒ See below
Deleting Mail	
Groups/Group members	Group Members ● Select member → ● → Remove Entry → ● → Yes → ● → ♡ • Source Phone Book entries remain even after
	deleting members.
Changing Mail Group members	Image: Settings Image: Settings Image: Sete set of the set

Using Messages

Forwarding messages	In message window, (2) + Forward + (2) + Select recipient field + (2) + Select method + (2) + Select/enter number/address + (2) + (2) • Attached files are forwarded. • To forward SMS messages, select <i>S! Mail</i> or <i>SMS</i> and press (2).	
Sending from Drafts	 ⇒ Drafts ⇒ ● ⇒ Select message ⇒ ● ⇒ Complete message ⇒ ∞ 	
	Start Here Image:	
Sending unsent messages	Sending without Editing Resend	
	Edit & Send Edit → ● → Complete message → ♡	
Using sent messages	 Sent Messages ⇒ ● ⇒ Select folder ⇒ Select message ⇒ ⊕ ⇒ Edit & Send ⇒ Complete message ⇒ ⊕ 	
Saving schedules from message list	In message list, select message (a) (b) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c	



	Via Mail Notice In message list, select Mail Notice + (a) Forward + (a) Notifi. Forward (forward Mail Notice text only) or Remote Forward + (a) Select recipient field + (a) Select method + (a) (a) Select/enter number/address + (a)	
Forwarding Server Mail	Via Server Mail List (a) ◆ Server Mail Box ◆ (b) ◆ Mail List ◆ (c) ◆ Select message ◆ (c) ◆ Remote Forward ◆ (c) ◆ Select recipient field ◆ (c) ◆ Select method ◆ (c) ◆ Select/enter number/address ◆ (c) ◆ (c) ◆ (c) ◆ (c) ● (c) ◆ (c)	
Opening Server Mail properties	 Server Mail Box Mail List Select message Message Details Message Details If retrieve list confirmation appears, choose Yes and press 	
Checking Server Mail message count and volume	 Server Mail Box ⇒ ● ⇒ Mailbox Volume ● 	

View Settings		
Changing view for	 Settings ⇒ ● > View Settings ⇒ ● ⇒ Received Msg. View ⇒ ● ⇒ Select option ⇒ ● 	
Received Msg.	Folder View by Account is selectable when a PC	
folder	Mail Account exists.	
0	Settings < • View Settings < • •	
Changing view for	Sent Msg. View $\Rightarrow \textcircled{0} \Rightarrow$ Select option $\Rightarrow \textcircled{0}$	
Sent Messages	• Folder View by Account is selectable when a PC	
folder	Mail Account exists.	
Changing message	Settings < O	
list view	Message List View	
Changing message	🐵 🔶 Settings 🔶 🔍 🔶 View Settings 🔶 🌒 🔶	
window scroll unit	Scroll Unit 🔶 🖲 🔶 Select unit 🔶 🖲	
Enabling sound	Settings < • View Settings	
auto-play	Auto Play Attached Sound 🗼 🖲 🔶 On 🔶 💿	
auto-piay	 Setting applies to PC Mail as well. 	

 \odot + Settings + • + View Settings + • +

Settings → ● → View Settings → ● →

Settings → ● → View Settings → ● →

Picture Appearance \Rightarrow \bigcirc \Rightarrow Normal \Rightarrow \bigcirc

· Setting applies to PC Mail as well.

Address View + • + Show All + •

Disabling image

Animation View

sent/received

Showing complete

message addresses

auto-resize

Disabling

Messaging



Receive Setting			Start Here Settings ⇒ ● Receive Settings ⇒ ● Other Than Standby Screen
Limiting incoming S! Mail message size	 Settings Rescive Settings Message Download DL Size Limit Restricted(300KB) Exceeding attachments are reduced (images) or deleted (other files) at Server. Settings Rescive Settings Message Download Condition(Auto) All Message 	Changing alerts for messages received during handset use	 See below Showing New Message Window Incoming Display Setting On
Retrieving all messages (including spam)			View Setting → ● → Select option → ● Muting Alert Sound Alert Sound → ● → Off → ●
automatically	Available when Sort Spam Mail is active. Start Here Available when Sort Spam Mail is active.	Muting ringer, etc. for messages sorted into Secret folders	 Settings ⇒ ● ⇒ Receive Settings ⇒ ● Secret Folder ⇒ ● ⇒ No Response ⇒ ●
	Settings () Message Download () Condition(Auto) () Selected Mail () () Selected Mail () () () Selected Mail () () () () () () () () () () () () ()	Hiding graphics above Information window	 Settings → ● → Receive Settings → ● Link to Feeling → ● → Standby Screen Info. → ● → Off → ●
Deleting addresses/ domains specified	One Entry (Mail Address) Individual Address ♦ @ ♦ Select entry ♦ @ ♦ Delete ♥ ● ♥ Yes ♥ @ ♥ ♡		Start Here ● ◆ Settings ◆ ● ◆ Receive Settings ◆ ● ↓ Link to Feeling ◆ ● ↓ Ligh ◆ ● ◆ See below
for complete message retrieval	All Entries (Mail Address) Individual Address ⇒ (2) ⇒ Select entry ⇒ (2) ⇒ Clear All ⇒ (0) ⇒ Yes ⇒ (0) ⇒ (∞)	Select entry Select entry Select entry Select entry Select entry Select entry	Disabling Illumination Switch On/Off ⇒ ● → Off ⇒ ●
	One Entry (Domain) Receive by the Domain ⇒ (□) ⇒ Select entry ⇒ (□) ⇒ Delete ⇒ (●) ⇒ Yes ⇒ (●) ⇒ (∞)		Changing Color Light Color ♦ ● ♦ Select category ♦ ● ♦ Select color ♥ ●
	All Custom Entries (Domain) Receive by the Domain ⇒ (a) ⇒ Select entry ⇒ (a) ⇒ Clear All ⇒ (a) ⇒ Yes ⇒ (a) ⇒ (b)		Setting Key Illumination Pattern Key Pattern → ● → Select item → ● → Select pattern → ● • Not effective when Switch On/Off is set to Link to Sound
Selecting automatic deletion option for received messages	 Settings ⇒ ● ★ Receive Settings ⇒ ● Auto Delete Received Msg. ⇒ ● ★ Select option ⇒ ● 		



	Selecting Vibration option	 Settings ◆ ● ◆ Receive Settings ◆ ● Link to Feeling ◆ ● ◆ Vibration Pattern ◆ Select option ◆ ● 	Create/
		[Start Here] ● ◆ Settings ◆ ● ◆ Receive Settings ◆ ● ◆ Link to Feeling ◆ ● ◆ Ringtone ◆ ● ◆ See below	Limiting o S! Mail me size
	Changing ringtone settings	Muting Ringer Switch On/Off ⇒ ● → Off → ●	Selecting
		Changing Ringtones Assign Tone ⇒ ● ⇒ Select category ⇒ ● ⇒ Select folder ⇒ ● ⇒ Select tone/file ⇒ ●	which ima reduced w attaching
		Changing Duration Duration ⇒ ● ⇒ Enter time ⇒ ●	Hiding pro
	Changing spam	Settings < •	messages
	report recipient	 Spam Mail Settings ⇒ ● ⇒ Report Spam ⇒ Edit address ⇒ ● ⇒ Yes ⇒ ● 	Disabling a resend of

Create/Send Settings

Limiting outgoing S! Mail message size	 (a) ◆ Settings ◆ ● ◆ Create/Send Settings (b) ◆ Create Msg. Size ◆ ● ◆ 300KB or Confirm(When exceed 300KB) ◆ ● Images are resized automatically when message size exceeds the limit upon attaching them. 	
Selecting size to which images are reduced when attaching	 (B) → Settings → Oreate/Send Settings → O → Picture Auto Resize → O → Select option → O • Set to Ask Each Time to select size every time an image is attached. 	
Hiding progress bar while sending messages	 Settings ★ ● ★ Create/Send Settings ★ ● ★ Sending Status ★ ● ★ Off(Background) ★ ● 	
Disabling automatic resend of unsent messages	 Settings ⇒ ● → Create/Send Settings → ● → Auto Resend ⇒ ● → Off → ● 	
Canceling automatic deletion of oldest sent messages	 (□) → Settings → (●) → Create/Send Settings (□) → Auto Delete Sent Msg. → (●) → Not Auto Del → (●) 	
Requesting Delivery Report for all messages	 Settings → ● → Create/Send Settings → Send Option → ● → Delivery Report → → On → ● Effective for messages addressed to SoftBank handsets. 	



Designating/ editing reply-to address	$\begin{tabular}{ c c c c } \hline Sint Here (B) & Settings & O & Create/Send \\ \hline Settings & O & Send Option & O & Reply \\ to Settings & O & See below \\ \hline \hline Designating \\ Switch On/Off & O & O & Select \\ method & O & Select/enter address & O \\ \hline \end{array}$
	Editing Edit Address Edit
Selecting quote option	 Settings ⇒ ● Create/Send Settings Peply Settings ⇒ ● Reply With Text ⇒ ● Select option ⇒ ●
Attaching captured/recorded files unsaved	 Settings Settings Send File Settings Setting applies to PC Mail as well. Depending on camera settings (Auto Save and Background Save), files are saved when opening Mail Composition window via newly captured image or newly recorded video regardless of the setting above.
Deleting Permitted List entries	Start Here ● > Settings ● > Create/Send Settings ● > Restrictions Setting ● > Enter Handset Code ● > Individual Address ● > Address ● > Permitted List ● > Select entry ● > One Entry ● > Yes ● All Entries Clear All ● > Yes ●

PC Mail Settings

Retrieving complete PC Mail messages	 Settings → ● PC Mail Settings → ● PC Mail DL → ● → PC Mail DL → ● → All Contents → ●
	Start Here Image: Start Here Image: Start Here Image: Start Here
Retrieving new	checking for new messages may incur packet transmission fees even when none exists. Remember this, especially when using handset outside Japan. • Handset does not check for new messages between 10:00 PM and 6:00 AM; change/cancel Inactive Time as needed.
messages automatically	Enabling Automatic Retrieval Outside Japan Abroad → ● → Enable → ● → ● • Automatically retrieving messages abroad may incur high charges. Changing Automatic Retrieval Interval
	Interval 🔶 🔿 🔶 Select interval 🔶 🖲
	Changing Inactive Time Inactive Time → ● → Start Time: → ● → Enter start time → ● → End Time: → ● → Enter end time → ●
	Canceling Inactive Time Inactive Time ⇒ ● ⇒ Switch On/Off ⇒ ● ⇒ Off ⇒ ●



Retrieving PC Mail for specified folder	In folder list, select PC Mail folder ⇒ ⊚ ⇒ Retrieve New ⇒ ●		$ \underbrace{ \text{Start Here}}_{\text{Start Here}} \otimes \Rightarrow Settings \Rightarrow \bigcirc \Rightarrow PC Mail \\ Settings \Rightarrow \bigcirc \Rightarrow PC Mail DL \Rightarrow \bigcirc \Rightarrow PC Mail $
Disabling automatic word wrap	 Settings ⇒ ● ⇒ PC Mail Settings ⇒ ● Word wrap ⇒ ● ⇒ Off ⇒ ● 		DL ⇒ ● ⇒ DL All From List ⇒ ◎ ⇒ See below One Entry (Mail Address)
	$ \begin{array}{c} \hline \\ \hline $	Deleting addresses/	Individual Address ⇒ (a) → Select entry ⇒ (a) ⇒ Delete → (i) → Yes → (i) → (ii)
	$DL \Rightarrow \textcircled{O} \Rightarrow DL All From List \Rightarrow \textcircled{O} \Rightarrow See below$ Selecting Sender Types Select item $\Rightarrow \textcircled{O} ([//]) \Rightarrow \textcircled{V}$	domains specified for complete	All Entries (Mail Address) Individual Address ♦ (a) ♦ Select entry ♦ (a) ★ Clear All ♦ (a) ♦ Yes ♦ (a) ♦ (b)
Retrieving complete messages from specified addresses	Specifying Addresses Individual Addresses Select blank entry Select blank entry Select blank entry	message retrieval	One Entry (Domain) Receive by the Domain ⇒ (a) ⇒ Select entry ⇒ (a) ⇒ Delete ⇒ (a) ⇒ Yes ⇒ (a) ⇒ (b)
	address ⇒ (•) ⇒ (•) Specifying Domains (Direct Entry) Receive by the Domain ⇒ (•) ⇒ Select blank		All Entries (Domain) Receive by the Domain ⇒ (a) ⇒ Select entry ⇒ (a) ⇒ Clear All ⇒ (a) ⇒ Yes ⇒ (a) ⇒ (b)
	entry $\Rightarrow \textcircled{o} \Rightarrow Direct Entry \Rightarrow \textcircled{o} \Rightarrow Enter domain \Rightarrow \textcircled{o} \Rightarrow \textcircled{o}$	Restricting complete message	Settings PC Mail Settings PC Mail DL Amount Max DL Size Select account
		retrieval by size	• Effective when PC Mail DL is set to <i>All Contents</i> or

DL All From List.



Messaging

SMS Settings

Changing SMS Server sent message storage limit	 Settings → ● → SMS Settings → ● → Expiry Time → ● → Select option → ● 	
Changing SMS Server number	Start Here Image:	
	Editing Setting1(Default) to Setting3 ⇒ ● ⇒ Edit number ⇒ ● • Do not change Server number unless instructed to do so.	
	Deleting Setting2 or Setting3 ⇒ ☺ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●	
	Activating Setting2 or Setting3 → (a) → Set Default → (•) • Activated number moves to Setting1(Default) and shifts the others down.	
Changing character encoding for composing messages	 (a) ⇒ Settings ⇒ ● ⇒ SMS Settings ⇒ ● ⇒ Char-code ⇒ ● ⇒ Select encoding ⇒ ● 	







Messaging Settings are not applied

- Settings are valid for one message, and effective when viewed on compatible handsets/applications.
- Delivery Report/Priority setting may not be effective when sent to mail addresses.
- Priority setting does not affect delivery speed.

Cannot set Messaging Settings

 These settings cannot be applied to a message simultaneously (select one): Set Auto Delete, Reply Request, Forward NG, Delete NG, Quiz, Set Auto Play File.

Signature is not inserted automatically

Not available for SMS.



Cannot cancel sent messages

- Short messages may not be canceled.
- Set Sent Cancel is available for S! Mail only.



Cannot send PC Mail

 Some ISPs require SMTP authentication setup in addition to Set Receiving setup. Follow these steps to check User Name and Password for SMTP authentication: Settings ⇒ ● ⇒ PC Mail Settings + • PC Mail Account ♦ ● ♦ Select account ♦ ● ♦ Set Sending + • + Sender Auth. \Rightarrow \bigcirc \Rightarrow SMTP Auth. \Rightarrow \bigcirc \Rightarrow User



Incoming Messages

Handset won't ring or vibrate for some incoming messages

- · Handset does not ring or vibrate for messages with Low Priority.
- Handset does not ring, vibrate or open Information window for messages filtered as spam.

A confirmation requesting a reply appears

• To reply, choose Yes and press (). Confirmation does not appear for replied messages.

Handset won't respond according to Feeling Mail settings

- · Responses set in Phone Book take priority.
- Feeling Mail settings are disabled when:
 - Sender is saved in Phone Book as Secret entry
 - The message was filtered as spam
 - The message was sorted to a Secret folder



Message text appears distorted

• Follow these steps to change encoding: [Message Window] () + View Select option

Handling Messages

- Cannot move messages into some folders
 - To move to Secret folders, unlock temporarily or cancel Secret beforehand.

Cannot receive messages

- If appears, memory is full; delete messages (P.5-32).
- If out appears, move to a place where signal is strong.

S! Mail is not delivered as sent

 Recipient must be subscribed to S! Mail, Super Mail or Long Mail. The maximum size of messages/ attachments handsets can receive varies by make and model. Confirm compatibility with recipient handsets.

Still images are not delivered as sent

· Recipient handset may not be JPEG-compatible. Convert JPEG files to PNG.



Video files are not delivered as sent

 Send video files to S! Mail- or VGS-compatible SoftBank handsets supporting MPEG-4.

Messaging



Internet Services	6-2
Service Basics	6-2
Yahoo! Keitai	6-3
Using Yahoo! Keitai	6-3
PC Sites	6-5
Browsing PC Sites	6-5
Browsing	6-6

Bookmarks & Saved Pages	. 6-8
Using Bookmarks & Saved Pages	6-8
RSS Feeds	. 6-9
Updating Blogs & News	6-9
Additional Functions	6-10
Troubleshooting	6-18

6

Internet

6-1

Internet Services

Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser or Direct Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SoftBank Mobile Website (P.17-24).
- Outside Japan, Yahoo! Keitai and PC Site Browser cannot be used over Wi-Fi.

Transmission/Information Fees

Security

Some page content may automatically activate Internet connection incurring transmission fees. (Information fees may also apply.) To prevent automatic connection, select an appropriate option for *Script Settings*, *Flash*® *auto-download* and *Get Video Settings* (P.6-17). Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

Opening Secure Pages

- A confirmation appears. Choose *Yes* and press (•) to proceed.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GMO GlobalSign, RSA Security, SECOM Trust Systems and Comodo Japan cannot be held liable for any damages associated with the use of SSL.



Yahoo! Keitai

Using Yahoo! Keitai

Access Yahoo! Keitai sites via 3G Network or Wi-Fi.

- To use Wi-Fi, subscribe to Keitai Wi-Fi and complete related settings.
- Within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Internet pages may not open depending on connection/Server status, etc.

Using Yahoo! Keitai Main Menu

Browse Yahoo! Keitai sites from Yahoo! Keitai Main Menu.

] 河 🕈 Connection starts




Internet Page

- Yahoo! Keitai Main Menu opens.
- \bullet To disconnect, press $\textcircled{\sc v}$.



- Corresponding page opens.
- Repeat 🕗 to open additional links.
- C → Yes → → Page closes

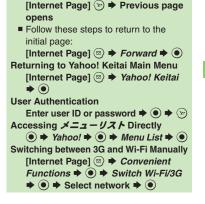

Returning to Previous Pages





Switching browsers Clearing cache (temporarily saved information) Clearing authentication information (And more on P.6-10)
Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.) (And more on P.6-17)




Yahoo! Keitai

Playing Media during Download

Play files while they transfer from the server (progressive download) or stream media files.

- · Save progressive download files, as needed, after playback. (Copy protected files cannot be saved.)
- Streaming media files cannot be saved even after plavback.
- Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.


On a page, select file **+** • Plavback starts.

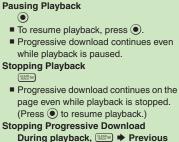



Plavback Sound

 Sound is heard from Speaker/Headphones regardless of Sound Output setting.

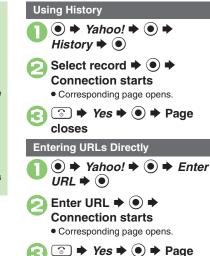

closes



Internet

Browsing PC Sites

View PC Internet sites via PC Site Browser or Direct Browser. (Direct Browser requires Wi-Fi connection.)

- To use Wi-Fi, subscribe to Keitai Wi-Fi and complete related settings.
- When using PC Site Browser within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Browsing PC sites via PC Site Browser may incur high charges depending on subscribed price plan.
- Internet pages may not open depending on connection/Server status, etc.
- PC Site Browser and Direct Browser share Bookmarks, Saved Pages, History, etc.

● ◆ Yahoo! ◆ ●
PC Site Browser or


- PC Site Browser or Direct Browser ➡ ●
- *Homepage* → → Connection starts




- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, press 💬.

Highlight menu item () • Corresponding page opens.

Repeat
 to open additional links.

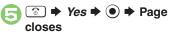

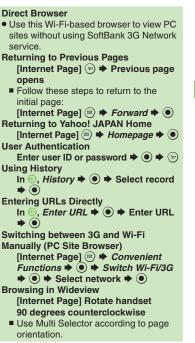

Advanced

🕙 Switching browsers SUsing previously entered URLs Deleting History records Depening History properties (And more on P.6-10)

Showing navigation map for continuous scroll Changing scroll unit Hiding PC Site Browser messages Setting up proxy Setting search engine URLs (And more on P.6-13)

6

Internet

Basic Operations

Page Browsing

Scrolling Pages

If page content continues beyond view, use O to scroll pages. Long Press O to scroll continuously.



Switching Frames

On framed pages, Long Press (B) to switch active frame.



- Otherwise, use 💮 to select one.



Open another page in a new tab and switch between tabs.

Opening a New Tab





Switching Tabs



• In pointer navigation, point to a tab and press (•) to open it.

Closing Tabs

Advanced



Ocoking up copied words in dictionaries Saving files to Data Folder Changing Font Size Enlarging specific areas Disabling automatic image display/sound playback Changing scroll unit (And more on P.6-11 - 6-13)

Browsing

Selecting Text

Activate Drag Mode in pointer navigation to enable text selection. Select text to copy or look up words in dictionaries. Follow these steps to use a dictionary: (Text may not be selectable or linked page may open depending on the site or page.)

Drag Mode is activated.

Highlight text range






Using Entered Text (Input Memory) [Internet page] Select text entry field ◆ ● ◆ ◎ ◆ Insert/Font Size ◆ ●

- → () → () → Insert/Font Size → ()
- Input Memory ⇒ Select text
- •

Starting Over

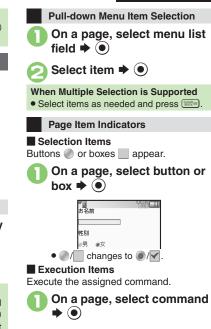



Using Bookmarks & Saved Pages

Bookmarks

Bookmark sites for quick access.



```
Switching Bookmarks Lists

After ①, ③ ✦ Change List ✦ ④ ✦

Select type ✦ ④

Opening Bookmarks Online

[Internet Page] ③ ✦ Bookmarks ✦

④ ✦ Select title ✦ ●
```

Saved Pages

Save page content; handset opens saved pages without connecting to the Internet.


Saving Pages

Some pages may not be saved.

On a page, ☺ ➡ Saved Pages ➡ ● ➡ Save (or Register(Image Only)) ➡ ●

 Select Register(Image Only) to capture page content as a screenshot.

🔰 Check/edit title 븆 🖲

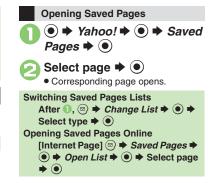





Internet

Deleting titles Editing titles Changing title order Sorting titles into folders Deleting pages Editing page titles Changing page order (And more on P.6-14 - 6-15)

6-8

Internet

Updating Blogs & News

Register RSS-compatible sites: view content updates without opening source sites. Packet transmission fees apply (except when handling RSS feeds via Wi-Fi).

Subscribing to RSS Feeds

Indicator below appears for RSS-compatible sites.

- RSS Indicator

Available for PC Site Browser and Direct Browser.



On a compatible page. 🖾 🗭 Register In RSS Feed **>**



Select feed \Rightarrow (\square/\square) \Rightarrow Complete selection \Rightarrow

Save 🔿 🔘

 Choose Yes to update immediately or *No* and press (•).

Via RSS Icons

Use RSS icons to subscribe to RSS feeds from sites that are not RSS-compatible. Available for PC Site Browser and Direct Browser.




Follow these steps to update all feeds: 🖲 🔶 Yahoo! 🔶 🖲 PC Site Browser or Direct Browser 🜩 💿 🜩 RSS Feed





• If a message appears, follow onscreen prompts.

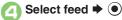





Select title 🌩 🔘 Information appears.

Updating Single RSS Feeds [RSS Feed List] Select feed 🗭 🖾 🗭

Reload 🗭 🖲

If a message appears, follow onscreen prompts.

Accessing Source Sites


- After 🕞, select linked title 🕈 💽 🕈 Yes 🌩 💿
- If a message appears, follow onscreen prompts.



Disabling feed updates Sorting feeds into folders Deleting feeds Sorting feeds Opening feed properties Exchanging feeds with other devices Sending feeds via mail (P.6-16)



General

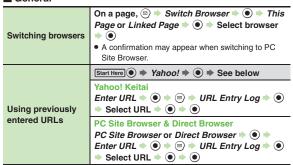

History

Follow these steps to switch History lists:

 \bigcirc \blacklozenge *Change List* \blacklozenge \bigcirc \blacklozenge Select browser \blacklozenge \bigcirc

	Start Here ● → Yahoo! → ● → History → ● → See below
Deleting History records	One Record Select record ⇒ ⊚ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●
	All Records $\textcircled{\begin{array}{c} \blacksquare \blacksquare \blacksquare} \blacksquare $

Opening History	● → Yahoo! → ● → History → ● → Select		
properties	record → ◎ → Details → ●		
Sorting History	● → Yahoo! → ● → History → ● → ◎ →		
records	Sort → ● → By Domain or By Date → ●		
Sending History records via mail	 ♦ Yahoo! ♦ ● History ♦ ● Select record ♦ ○ ♦ Send URL ♦ ● ♦ S! Mail or SMS ♥ ● Complete message ♥ ♡ §! Mail Composition window opens automatically depending on character count. 		

Memory Operation

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** \Rightarrow (**•**).

PC Site Browser (or Direct Browser) → ● PC Site Browser Settings (or Set Direct Browser) → ●

Clearing cache (temporarily saved information)	 ♦ Yahoo! ♦ ● Browser Settings ♦ ● Memory Operation ♦ ● Delete Cache ♦ ♦ Yes ♥ ●
Clearing cookies	 ♦ Yahoo! ♦ ● Browser Settings ♦ ● Memory Operation ♦ ● > Delete Cookies ♦ ♦ Yes ♦ ●
Clearing authentication information	 ♦ Yahoo! ★ ● ★ Browser Settings ★ ● Memory Operation ★ ● ★ Delete Auth Info ♦ ★ Yes ★ ●



Page Operations		Handling Flash [®]	Start Here)On a page, (a) Convenient Functions
All Browsers			
	Dialing Numbers On a page, highlight number ⇒ ● ⇒ <i>Call</i> or <i>Video Call</i> ⇒ ●	files	Pause, Resume or Replay
Using linked info	Sending Messages On a page, highlight number or mail address → ● + Create Message + ● → S! Mail or		Start Here On a page, ⊕ ⇒ Save Items ⇒ ● ⇒ See below Files on Page
	 SMS ⇒ ● ⇒ Complete message ⇒ ⊗ For mail addresses, omit mail type selection step. 		Select file → ● → Save → ● → Enter name
Copying text	On a page, ☺ <i>Copy Text</i>		 Save here On a page with background image, select Save <i>Items</i> and press first. Some files are saved automatically. End memory-consuming operations (TV recording, etc.) beforehand. Confirm signal is strong, battery is adequately charged and that there is enough free memory beforehand.
Looking up copied words in dictionaries	On a page, (a) ◆ Convenient Functions ◆ ● ◆ Copy & Search Dict. ◆ ● ◆ Select first character ◆ ● ◆ Highlight text range ◆ ● ◆ Select dictionary ◆ ● ◆ Search ◆ ● ◆ Select word, etc. ◆ ●	Saving files to Data Folder	
Using Web Search	On a page, (a) → Convenient Functions → (e) → Web Search → (e) → Enter search text → (e)		Background Images Save Background Image → ● → Save → ● → Enter name → ● → Save here → ●
Searching current page	On a page, ☺ Convenient Functions ◆ Search ● ● Press ● to jump to next search result, if any.	Updating page content	On a page, (a) → <i>Reload</i> → ● • To update content in Saved Pages, open a page and
Jumping to page top/bottom	On a page, ☺ Convenient Functions ● Jump In Page ● Page Top or Page Bottom ●	Changing encoding to read	follow the steps above. On a page, (a) → Settings → (b) → Char-code → (b) → Select option → (c)
Opening page properties	On a page, ☺ ⇒ <i>Convenient Functions</i> ⇒ ● ⇒ <i>Details</i> ⇒ ● ⇒ Select item ⇒ ●	garbled text Opening function	On a page, (≅) ⇒ <i>Help</i> ⇒ ●
Sending URLs via mail	On a page, (a) ◆ Send URL ◆ (a) ◆ S! Mail or SMS ◆ (a) ◆ Complete message ◆ (b) • S! Mail Composition window opens automatically	shortcuts	

depending on character count.



Yahoo! Keitai

Changing Font Size	On a page, 3륜 (Long) to enlarge or 1 히 (Long)	
Changing Font Size	to reduce	
Enlarging pages	On a page, 🖙 🖲	
200%	 Press region to toggle size. 	
	 Size may not change depending on the page. 	

PC Site Browser & Direct Browser

Switching view	 On a page, ● <i>PC Screen</i> or <i>Small Screen ◆</i> ● In Small Screen view, PC sites are redesigned to fit Display. 	
Zooming on pages (Zoom Factor)	On a page, 3 de (Long) to enlarge or 1 de (Long) to reduce	
Jumping to specific locations	On a page, 5≗ (Long) ⇒ Quick Movement map appears ⇒ Select target location ⇒ ●	
Enlarging specific areas	 On a page, point to area ⇒ ∑ (Long) Use to move pointer in enlarged view; highlight item and press o to execute it. To close enlarged view, press a key other than to close? 	
Hiding Softkeys	On a page, (a) ◆ Convenient Functions ◆ ● ◆ Softkey Area ◆ ● ◆ Off ◆ ● • To show Softkeys temporarily, press ■	
Enlarging images 200%	 On a page, (P =) Press (P =) Size may not change or layout may be affected depending on the page. 	

Internet Page Settings

All Browsers

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** \Rightarrow (**•**).

PC Site Browser (or Direct Browser) $\Rightarrow \bigcirc \Rightarrow$ PC Site

Browser Settings (or Set Direct Browser)

Disabling	Start Here ● Yahoo! ● Browser Settings ● ● Downloads ● ● See below	
automatic image display/sound	Image Display Images ⇒ ● ⇒ Do not Show ⇒ ●	
playback	Sound Playback Sounds $\Rightarrow \odot \Rightarrow$ Do not Play $\Rightarrow \odot$	
Changing Font Size	● → Yahoo! → ● → Browser Settings → ● → Font Size → ● → Select size → ●	
Using pointer navigation	Start Here ● Yahoo! ● Browser Settings ● ● Cursor Settings ● ● See below	
	Activating Cursor Mode Settings ⇒ ● ⇒ Normal Mode ⇒ ●	
	Changing Pointer Speed Speed Settings ⇒ ● ⇒ Select speed ⇒ ●	
Using handset as primary download storage	 Yahoo! Browser Settings Download to Phone Preferred Some files may be saved to Memory Card regardless of this setting. 	



Editing

Select URL + (2) + (0) + Edit + (0)

Yahoo! Keitai Changing scroll unit	● → Yahoo! → ● → Browser Settings → ● → Scroll Unit → ● → Select unit → ●		Start Here ● > Direct Browser ● ● Set Direct Browser ● > Proxy Setting ● > Enter Administrator Code ● ● + Use ● > See below
PC Site Browser & Direct Browser For Direct Browser, perform the following sequence instead of PC Site Browser $\Rightarrow \bigcirc \Rightarrow PC$ Site Browser Settings $\Rightarrow \bigcirc$.		Setting up proxy	Entering Address Proxy Address
Direct Browser 🌩 💌 🕈 Set Direct Browser 🕈 🔍			Port Number $\Rightarrow \bigcirc \Rightarrow$ Enter number $\Rightarrow \bigcirc \Rightarrow \bigcirc$
Showing navigation map for continuous scroll	 ♦ Yahoo! ♦ ● PC Site Browser ♦ ● PC Site Browser Settings ● ● Scroll Settings ● ● Page Navigation ● ● On ● 		Specifying Addresses to Bypass Proxy Exempted Address ⇒ ● ⇒ ● ★ Enter address → ● ⇒ ∞
Changing scroll unit	● Yahoo! ◆ ● PC Site Browser ◆ ● ◆ PC Site Browser Settings ◆ ● ◆ Scroll Settings ◆ ● ◆ Scroll Unit ◆ ● ◆ Select unit ◆ ●	Editing proxy settings	 Yahoo! Direct Browser Proxy Setting Enter Administrator Code Select item Edit
PC Site Browser		Changing home page	
Hiding PC Site Browser messages	● Yahoo! → ● PC Site Browser → ● → PC Site Browser Settings → ● → Warning Message → ● → Off → ●		 Enter URL Enter URL Filtere Yahoo! Direct Browser Set Direct Browser Search
Direct Browser			Page ⇒ ● ⇒ See below
Restricting Direct	● → Yahoo! → ● → Direct Browser → ● → Set Direct Browser → ● → Direct Browser	Setting search engine URLs	Adding <empty> ⇒ ● ⇒ ● ⇒ Enter URL ⇒ ●</empty>
Browser use	Lock \Rightarrow \bigcirc \Rightarrow On \Rightarrow \bigcirc \Rightarrow Enter Administrator Code \Rightarrow \bigcirc	ongine OnLa	Changing Select URL ⇒ ●



Switching

networks during

media playback

Streaming & Progressive Download	
General	
	Start Here During playback, ☺ ♦ Settings ♦ ● ♦ See below
Customizing	Changing Playback Size Display Size ⇒ ● ⇒ Select size ⇒ ● • Playback size may not change depending on file.
media playback settings	Setting Backlight Status Backlight ⇒ ● ⇒ Select option ⇒ ● ● Selecting Normal Settings applies Display Backlight settings.
	Adjusting Sound Effects Sound Effects
Streaming	
	Start Here) ● Entertainment ● ● > Media Player ● ● > Streaming ● ● > See below
Streaming from Media Player	Resuming from Stopped Point Last Played
	Using Bookmarks Bookmarks ⇒ ● ⇒ Select title ⇒ ●
	Using History History ⇒ ● ⇒ Select record ⇒ ●

Select network


During playback, a \Rightarrow *Switch Wi-Fi/3G* \Rightarrow o

Bookmarks

Deleting titles	Start Here ● → Yahoo! → ● → Bookmarks → ● → See below
	One Title Select title $\Rightarrow @ \Rightarrow Delete \Rightarrow • \Rightarrow Yes \Rightarrow •$
Editing titles	 ♦ Yahoo! ♦ ● ★ Bookmarks ♦ ● ★ Select title ♦ © ♦ Edit ♦ ● ★ Title: ♥ ● ★ Enter title ♥ ● ♥ ♥
Editing bookmarked URLs	 ♦ Yahoo! ♦ ● ★ Bookmarks ♦ ● ★ Select title ♦ ◎ ★ Edit ♦ ● ★ URL: ♦ ● ★ Edit ♦ ● ★ ♥
Sending bookmarked URLs via mail	 Yahoo! ◆ ● Bookmarks ◆ ● * Select title ◆ ⊕ * Send * ● * As Message ◆ * S! Mail or SMS * ● * Complete message * ♡ S! Mail Composition window opens automatically depending on character count.
Changing title order	● → Yahoo! → ● → Bookmarks → ● → Select title → ◎ → Change Order → ● → Select target location → ●
Opening title properties	● → Yahoo! → ● → Bookmarks → ● → Select title → ◎ → Details → ●



Internet

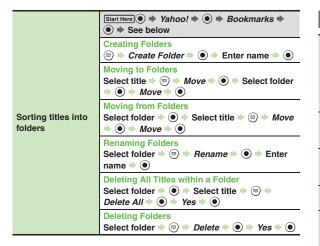

Saved Pages	
	Start Here ● Yahoo! ● Saved Pages ● ● ◆ See below
Deleting pages	One Page Select page ⇒ ☺ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●
	All Pages
Editing page titles	● ◆ Yahoo! ◆ ● ◆ Saved Pages ◆ ● ◆ Select page ◆ ② ◆ Rename ◆ ● ◆ Enter title ◆ ●
Changing page order	● ◆ Yahoo! ◆ ● ◆ Saved Pages ◆ ● ◆ Select page ◆ ③ ◆ Change Order ◆ ● ◆ Select target location ◆ ●
Opening page properties	● → Yahoo! → ● → Saved Pages → ● → Select page → ◎ → Details → ●
Switching page list view	● ◆ Yahoo! ◆ ● ◆ Saved Pages ◆ ● ◆ Select page ◆ ◎ ◆ List View or Preview View ◆ ●



RSS Feeds

For Direct Browser, select *Direct Browser* instead of *PC Site Browser*.

Disabling feed updates	 ♦ Yahoo! ♦ ● PC Site Browser ♦ ● + RSS Feed ♥ ● ◆ Select feed ♥ ◎ ◆ Manage RSS Feed ♥ ● ♥ Restrict Update ♥ ●
Sorting feeds into folders	Start Here ● Yahoo! ● PC Site Browser ● ● RSS Feed ● ● See below
	Creating Folders (a) → Manage RSS Feed → (a) → Create Folder → (a) → Enter name → (a)
	Moving to Folders Select feed ⇒ ☺ ⇒ Manage RSS Feed ⇒ ● → Move ⇒ ● > Select folder ⇒ ● ★ ●
	Renaming Folders Select folder ⇒ ☺ ⇒ Manage RSS Feed ⇒ ◉ ★ Rename ⇒ ◉ ⇒ Enter name ⇒ ◉
	Deleting FoldersSelect folder $\Rightarrow @ \Rightarrow Delete \Rightarrow • \Rightarrow Yes \Rightarrow •$
Deleting feeds	Start Here ● Yahoo! ● PC Site Browser ● ● RSS Feed ● ● See below
	One Entry Select feed ⇒ ☺ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●
	All Entries (a) ⇒ Manage RSS Feed ⇒ (a) ⇒ Delete All ⇒ (a) ⇒ Yes ⇒ (a) • Alternatively, perform Delete RSS Feed List in
	Memory Operation (PC Site Browser Settings or Set Direct Browser) to delete all feeds.

Sorting feeds	 ♦ Yahoo! ♦ ● PC Site Browser ♦ ● ♦ RSS Feed ♦ ● ♦ ⊕ ♦ Manage RSS Feed ♦ ♦ Sort ♦ ● ♦ Select option ♥ ●
Opening feed properties	● → Yahoo! → ● → PC Site Browser → ● → RSS Feed → ● → Select feed → ◎ → Manage RSS Feed → ● → Details → ●
Exchanging feeds with other devices	Start Here ● Yahoo! ● PC Site Browser ● ● PSS Feed ● ● > Manage RSS Feed ● ● > > Manage RSS
	Exporting All FeedsExport All \Rightarrow (\bigcirc) \Rightarrow Select storage media \Rightarrow (\bigcirc)
	Importing (Adding Feeds) Import ⇒ ● ⇒ Select file ⇒ ● ⇒ As New Items ⇒ ● ⇒ Yes or No ⇒ ● • If a confirmation appears, follow onscreen prompts.
	Importing (Overwriting Existing Feeds) Import → ● → Select file → ● → Delete All → ● → Enter Handset Code → ● → Yes → ● → Yes or No → ● ● If a confirmation appears, follow onscreen prompts.
Sending feeds via mail	● ◆ Yahoo! ◆ ● ◆ PC Site Browser ◆ ● ◆ RSS Feed ◆ ● ◆ Select feed ◆ ◎ ◆ Manage RSS Feed ◆ ● ◆ As Message ◆ ● ◆ Complete message ◆ ♡



Security Settings

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** \Rightarrow (**)**.

PC Site Browser (or Direct Browser) ♦ ● PC Site

Browser Settings (or Set Direct Browser) **•** •

Disabling manufacture number auto send for authentication	 Yahoo! Browser Settings Security Settings Manufacture Number Off Not available for Direct Browser.
Disabling referer information delivery to the Server	 ♦ Yahoo! ♦ ● Browser Settings ♦ ● ♦ Security Settings ♦ ● > Send Referer > ♦ Not Send > ●
Enabling/disabling cookies	 ♦ Yahoo! ♦ ● Browser Settings ♦ ● ♦ Security Settings ♦ ● ♦ Cookies ♦ ● ♦ Select option ♦ ●
Selecting script execution option	 Yahoo! Browser Settings Security Settings Select option
Selecting automatic Flash [®] file download option	 ♦ Yahoo! ♦ ● Browser Settings ♦ ● ★ Security Settings ♥ ● ★ Flash® auto-download ♦ ♦ Select option ♥ ●
Disabling Flash [®] video download	 ♦ Yahoo! ♦ ● Browser Settings ♦ ● ♦ Security Settings ♦ ● ♦ Get Video Settings ♥ ● ♦ Not Acquire ♥ ●
Opening electronic certificates saved on handset	 Yahoo! Browser Settings Security Settings Root Certificates Select certificate

Changing validity of entered user ID/ password	 Yahoo! Browser Settings Security Settings Keep Auth Info Select option Select option Or retains such authentication information even after powering handset off. Authentication information may not be retained depending on the site.
Suppressing confirmation before entering/exiting secure pages	 Yahoo! Browser Settings Security Settings Secure Prompt Do not Show

Resetting

For PC Site Browser and Direct Browser, perform the following sequence instead of *Browser Settings* ♦ .

PC Site Browser (or Direct Browser) ➡ ● ➡ PC Site Browser Settings (or Set Direct Browser) ➡ ●

Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.)	 Yahoo! Browser Settings Initialized Browser Yes For Direct Browser, Administrator Code is required to proceed.
Restoring default handset settings	 Yahoo! Browser Settings Reset Settings Yes For Direct Browser, Administrator Code is required to proceed.

6-17

Internet

Troubleshooting

Connecting & Browsing Page Operations Internet page does not open What is the bar at Display bottom? completely • This is a data progress bar; the · Portions of page content may not appear number beside it indicates transmitted in tabbed browsing; close other tabs. (green) or received (red) data. Text overlaps • The site may be designed for browsing on PCs; try Tiny font size. • Text may overlap when Zoom Factor is used; adjust scale. Cannot access other functions while browsing the Internet • Multi Job may be active. When

switching between browsers, additional function activation is disabled; close either browser and retry.

Bookmarks

Cannot add Bookmarks

• <Add New Entry> is unselectable if storage limit is reached; delete titles.



Digital TV	7-2
Basics	7-2
Area Setup	7-3
Watching TV	. 7-4
Obtaining Program Information	7-6
Recording/Playing	7-7
Recording Programs	7-7
Playing Recorded Programs	7-8

TV Timer	7-9
TV Timer & TV Recording Timer	.7-9
Time Shift7	'-10
Time Shift Recording & Playback7	7-10
Additional Functions 7	'-11
Troubleshooting7	'-17

Digital TV

7



Basics

944SH supports One Seg terrestrial digital television broadcast services developed for mobile devices in Japan.

Watch Live Television

Set up a channel list for your service area to access available programming. Capture screenshots while watching TV.

Multi Job

Watch TV in one half of Display using the other to access messaging functions, browse the Internet or open Phone Book, etc.

TV Listing (EPG) & Program Info

Find program channels and times, or open program details via current channel's schedule.

View Data Broadcasts

In addition to audio and visuals, enjoy text, program-related information and interactive services.

Record Shows/Time Shift

Record current program for later viewing; if interrupted by incoming calls while watching TV, record it temporarily for delayed playback.


Reserve TV Programs

Record a show or activate TV at a specified time; enter dates & times manually or reference TV Listing electronic program guide.

Important Digital TV Usage Notes

- 944SH TV is exclusively for use in Japan.
- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- When using TV while charging battery, separate AC Charger and Antenna to avoid interference.
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programs may not be viewable or record properly when:
 - Too far from or too close to broadcasting stations
 - In mountainous areas or near tall buildings
 - Aboard trains or in moving vehicles
 - Near high-voltage lines, neon lights or wireless base stations
 - Near railroad tracks or highways
 - Anywhere a jamming signal is broadcast/reception is unstable



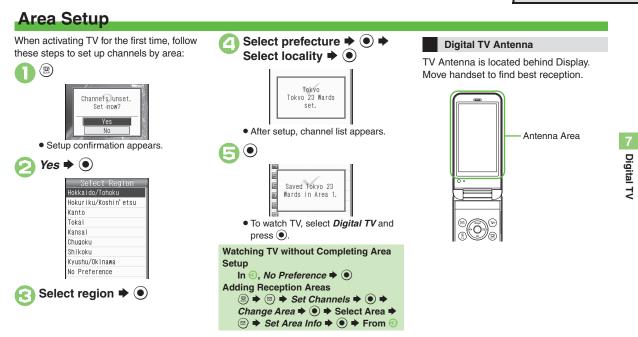

Advanced

Switching reception Areas Renaming Areas Changing/disabling function Editing channels Deleting all channels in Area Adding new channels to Area Updating all channels in the Area (P.7-11)



Watching TV

First, complete Area setup (P.7-3).



TV Window

Use Keypad to select a channel

 Use I to switch channels one by one; Long Press to find channel with stable signal automatically.

⑦ ♦ Yes ♦ ● ♦ TV ends

Watching TV in Portrait Position

- Data Broadcast appears below TV image. Incoming Calls
- Press 🔊 to answer calls.

When Answering Voice Calls with Memory Card Inserted

• Current program is temporarily recorded; start playback after the call. (Time Shift)

Incoming Messages

Key Assignments

Open Options Menu

Toggle Panel On/Off

Volume Control

Activate TV/Change Area

Toggle Display Size (portrait)

• Double beep sounds and New Message notice appears. Long Press (®) to access messages.


◙

Y

(۽ ھ

Multi Selector

Multi Selector response changes with TV orientation.

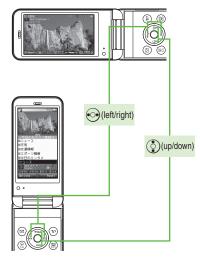

Advanced




7-4

Opening Help Searching for current program on the Internet Selecting an audiovisual mode Changing panel pattern in portrait position Changing handset responses to incoming transmissions (And more on P.7-11 - 7-13)

Changing subtitle settings Changing sound settings (P.7-14)

Panel Description

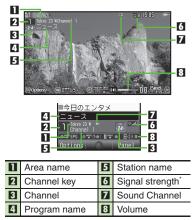

The more bars the better. Indicator position varies with display content, etc.

Data Broadcast (Japanese)

In portrait position, Data Broadcast appears below TV image. Use () to select an item and press () to access program-related information and interactive services.




Data Broadcast Fees

- Data Broadcast information viewing is free, however, using data links/related services incurs Internet connection fees.
- A confirmation appears the first time a fee-based Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed.

Still Image Capture

Capture screenshots while watching TV.

- May be unavailable if TV was activated by TV Timer, etc.
- Saved images cannot be forwarded, edited, set as Wallpaper or attached to messages.

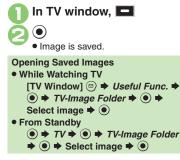

Digital TV

Advanced

Changing view Returning to initial window Deleting information saved from Data Broadcasts Suppressing Network connection confirmation Saving links to Data Broadcasts or related information (And more on P.7-13)



Digital TV

Obtaining Program Information

Find program channels and times, or open program details via current channel's schedule.

TV Listing	Start EPG S! Application to find program channels and times for specified area
Program Info	Open program details via current channel's schedule; set Reservations to record shows or activate TV

TV Listing (Japanese)

- In TV window, 🐨 (Long)
- · EPG application starts; refer to the application's help menu for operational instructions.
- When using EPG application for the first time, a confirmation appears. Follow onscreen instructions.

gram Info	
In TV window, ☺ ♥ <i>OperateProgram</i> ♥ (•
Program Info. 🕈 🖲	
Program Info Window	



Prog

Select program **▶** ● • To return to TV window, press (

twice.

Setting Recording Timer via Program Info [Program Info Window] Select program \Rightarrow \bigcirc \Rightarrow \bigcirc Timer entries set via Program Info are updated with program changes automatically. Program cancellations

cancel corresponding Timer entries. (Poor signal conditions may inhibit updates or cancellations.)

Setting TV Timer via Program Info [Program Info Window] Select

program $\Rightarrow \boxdot$ \Rightarrow *Watching* $\Rightarrow \odot$



Recording/Playing

Recording Programs

Clip is saved to handset (or Memory Card, if inserted).

Precautions

- Saved files cannot be forwarded or attached to messages.
- 944SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank Mobile is not liable for any damages resulting from accidental loss or alteration of recorded content.

Dubbing 10

 944SH supports Dubbing 10 copy protection scheme that allows recordings to be copied from handset to Memory Card. Open file properties to check the remaining number of copies allowed to be made.



Recording Window

- Changing volume, etc. does not affect recordings.
- When Small Light flashes yellow, reception is poor; change location to improve it: Small Light illuminates green for moderate, or blue for strong reception.

● (Long) ➡ Recording ends

Recording Programs in Portrait [TV Window] 🗖 (Long)

- To stop, Long Press while recording.
 Chase Play (Playing while Recording)
 - [Recording Window] (இ) (Long) ♥ Playback starts ♥ (Long) ♥ Playback stops
 - Watch a program from the beginning while recording it on Memory Card.

Memory/Battery Runs Low or Video Call/S! Circle Talk Request is Accepted

• Recording stops. (Recorded clip is saved.)

Saving Files via the Internet while Recording

• While recording programs to handset, confirm there is enough free memory before saving files.

Advanced



Playing Recorded Programs



In TV window, $\boxdot \Rightarrow TV$ Player $\Rightarrow \odot$



Video List

• M indicates the file is unplayable.

Select file 🕈 🖲



Playback Window

• Playback starts. (The last played file plays from where it stopped.)



🕑 (Long) Þ Playback stops

Major Playback Operations

Adjust volume or temporarily enlarge a portion of widescreen image following the same operations used while watching TV.

Fast Forward	⊙ ¹
Rewind	⊙ ^{1, 2}
Skip Forward	<u>ق</u> ، #
Skip Backward	
Pause ³	 () in portrait)
Split File	Long) ⁴
Set Marker	
Toggle Panel On/Off	

³In pause, use ⊙ to reverse/advance frame. ⁴Not available during Time Shift playback.

Advanced



Splitting files by specifying a time point
 Playing files repeatedly
 Playing split files
 Playing video files transferred from Blu-ray Disc recorders
 Checking memory status
 Renaming files
 Deleting files
 Copying files to Memory Card
 Opening file properties
 Playing files with Markers (And more on P.7-15 - 7-16)

TV Timer & TV Recording Timer

In TV window, ☺ ➡ Rec./ TimeShift ➡ ●

Reservation List 🕈 🖲 🕈 🖾

💦 New Entry 🕈 🖲

Manual ♦ ● ♦ Watching or Recording ♦ ●

Enter start date/time ⇒ ●
 ♦ Enter end date/time ⇒ ●

- Channel:
 ♦
 ♦ Select channel
 ♦ ●
 ♦
 ♥
 - If a message appears, read and then press ().

Setting Timer via EPG

- In ②, From TV Listing 🕈 🖲
- Refer to the application's help menu for operational instructions.

Timer Recording Precautions

Confirm target channel reception; keep handset open.

- End the current operations.
- Confirm battery is adequately charged and there is enough free memory.

At Timer Time (TV Alarm Time)

TV and Alarm activate.



Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.

While Using Another Function

 TV activates via Multi Job and target program/recording starts. However, if Multi Job cannot activate in the current state, TV may remain off, or the current function may end automatically (unsaved images, messages, Phone Book entries, etc. may be deleted). End all active functions/applications before Timer time.

Advanced



Time Shift Recording & Playback

Record current program temporarily for delayed playback.

- Recorded content is deleted after playback.
- First, insert Memory Card.

● While watching TV, (Long) ➡ Recording starts



Recording in progress

While recording, (Long)

- Playback starts
- Playback starts from where recording was started.
- Recording and playback stop when Time Shift playback has caught up to the real-time program.

Major Playback Operations

Fast Forward	⊙ *
Skip Forward	(#,; <u>;</u>)
Skip Backward	(X ant)

*Press 🕮 to resume normal Time Shift playback.

Time Shift Recording Automatic Activation

When a Voice Call is answered while watching TV with Memory Card inserted, Time Shift recording starts automatically; Long Press () after the call for playback.



Additional Functions

Area & Channel		Watching	
Switching reception Areas	While watching TV, இ ⇒ Select Area ⇒ ●	Opening Help	• Also
Renaming Areas	While watching TV, ☺ → Set Channels → ● → Change Area → ● → Select Area → ☺ → Change Area Name → ● → Enter name → ●	Searching for current program on the Internet	While Prove Follow
Changing/disabling	Start Here While watching TV, ☺) ⇒ Set Channels ⇒ ● ⇒ Channel Key Setting ⇒ ● ⇒ See below Toggling All Receivable Channels	Enlarging image portion in landscape	With • Corr • May
 	By Manual → ● Disabling Disable → ●	Enlarging display size for portrait position	With Scree
Editing channels	Start Here While watching TV, ☺ ⇒ Set Channels 	Canceling image smoothing	While Smoo
	 See below Switching Channel Positions Flip ● ● Select target key ● ● 	Saving current channel	 While ⇒ Sa ● To o
	Deleting Channels Delete ⇒ ● ⇒ Yes ⇒ ●	Selecting an audiovisual mode	While AV M • TV r
Deleting all channels in Area	While watching TV, ☺ ⇒ Set Channels ⇒ ● ⇒ Change Area ⇒ ● ⇒ Select Area ⇒ ☺ ⇒ Reset Settings ⇒ ● ⇒ Yes ⇒ ●		<u> </u>
Adding new channels to Area	While watching TV, ☺ ⇒ Set Channels ⇒ ● ⇒ Change Area ⇒ ● ⇒ Select Area ⇒ ☺ ⇒ Channel Update ⇒ ● ⇒ Update Further ⇒ ●		
Updating all channels in the Area	While watching TV, ☺ → Set Channels → ● → Change Area → ● → Select Area → ☺ → Channel Update → ● → Update All → ● → Yes → ●		

Opening Help	 While watching TV, <a>♥ Help <a>● Also available while recording or playing programs. 		
Searching for current program on the Internet	While watching TV, ● > OperateProgram → ● ● Program Info. Search → ● ● > Search → ● ● Follow onscreen instructions.		
Enlarging image portion in landscape	With TV in landscape, I:: - (9) (Long) • Corresponding image portion is enlarged. • May be unavailable depending on viewing style.		
Enlarging display size for portrait position	With TV in portrait, ☺ ⇒ AV Settings ⇒ ● ⇒ Screen Size ⇒ ● ⇒ Enlarge(Portrait) ⇒ ●		
Canceling image smoothing	While watching TV, ☺ → AV Settings → ● → Smooth Mode → ● → Off → ●		
Saving current channel	While watching TV, (a) → Set Channels → (a) → Save Channel → (a) → Select key → (b) • To overwrite a saved channel, choose Yes and press (b).		
Selecting an audiovisual mode	While watching TV, ☺ ⇒ AV Settings ⇒ ● AV Mode ⇒ ● ⇒ Select mode ⇒ ● • TV reception time may shorten depending on the mode.		



7-11

Add	ditional Functions]		
7 Dioital TV	Adjusting current AV Mode parameters	Start Here] While watching TV, ⇒ AV Settings ⇒ ● > See below • Change AV Mode (select mode other than Link to	Customizing viewing options for landscape position	Start Here With TV in landscape, (a) → Advanced → ● → Set Landscape → ● → See below Showing Indicators Always
		Genre) first. Brightness Image ♦ ● ♦ Brightness ♦ ● ♦ Adjust		Display Icon ⇒ ● ⇒ On ⇒ ● Disabling Partial Image Enlargement Magnify Area ⇒ ● ⇒ Off ⇒ ●
		level Disabling Brightness Adjustment via Light Sensor Traver Disabling Adjustment via Light Sensor Traver Disabling Brightness Adjustment via Light Sensor Disabling Brightness Adjustment via Light Sensor		Using Portrait Position Key Assignments Key Direction
		$Image \Rightarrow \textcircled{O} \Rightarrow Brightness \Rightarrow \textcircled{O} \Rightarrow \textcircled{O} (\bigcirc) \Rightarrow \textcircled{O}$ Adjusting Brightness Automatically by Scene Image \Rightarrow \textcircled{O} \Rightarrow Control by Scene \Rightarrow \textcircled{O} \Rightarrow On(Light) or On \Rightarrow \textcircled{O}	Switching One Seg services	While watching TV, ● Set Channels ● ● ● Select Serv. Station ● ● ● Select service ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●
		Other Image-Related Parameters Image → ● → Select item → ● → Adjust	Listening to audio from Speaker	While watching TV, ☺ ⇒ Advanced ⇒ ● ⇒ Sound Output ⇒ ● ⇒ Loudspeaker ⇒ ●
		 Adjust Contrast, Blackness (black level), Color (color density), Tint (skin color tone) and Sharpness. 	Switching audio output to wireless device	(● → TV → ● → Settings → ● → ⊗ Sound Output → ● → Bluetooth Device → ●
		Restoring Default Image Settings Image ◆ ● ◆ Reset ◆ ● ◆ Yes ◆ ● Selecting Sound Option Terret® ◆ ● ◆ Option	Using wireless Headphones	 While watching TV, (2) (Long) Pair SCMS-T DRM scheme compliant Bluetooth[®] headphones beforehand.
	Changing panel pattern in portrait	Tone ● Select option ● With TV in portrait, ● Advanced ● Panel Type ● > Select pattern ●	Setting TV to end automatically after a period of time	While watching TV, ⊚ → Advanced → ● → Auto Exit → ● → Auto Exit Time → ● → Select time → ●
	position		Disabling auto shut-off when handset is closed	While watching TV, ⊚ → Advanced → ● → Auto Exit → ● → Close Action → ● → Watch TV → ●



Additional Functions

	[Start Here] ● TV ● ● Settings ● ● Calls & Alarms ● ● > See below
Changing handset responses to incoming transmissions	Showing Alarm Notice Alarm ⇒ ● ⇒ Alarm Notice ⇒ ●
	Showing Voice Calls, Etc. Select item $\Rightarrow \odot \Rightarrow$ Notice a Call $\Rightarrow \odot$
	Showing New Message Window Incoming Message ⇒ ● ⇒ Calls & Alarms ⇒ ●

Data Broadcast

Changing view	With Data Broadcast in portrait, SetBroadcastData ⇒ ● Change View (Data) ●	
Returning to initial window	With Data Broadcast in portrait, ☺ ♦ SetBroadcastData ♦ ● ♦ Back to Top ♦ ●	
Deleting information	Start Here While watching TV, ● SetBroadcastData ● ● Delete StationData ● ● See below	
saved from Data Broadcasts	Deleting by StationSelect station $\Rightarrow @ \Rightarrow Delete \Rightarrow • • Yes \Rightarrow •$	
	Deleting All $\textcircled{a} \Rightarrow$ Delete All \Rightarrow $\textcircled{b} \Rightarrow$ Yes \Rightarrow \textcircled{b}	
Suppressing Network connection confirmation	While watching TV, ☺ ⇒ SetBroadcastData ⇒ ● → Notify Connection → ● → Off → ●	

Sending/hiding	Start Here] While watching TV, ☺ ✦ SetBroadcastData ✦ ● ✦ Location ✦ ● ✦ See below	
Location Information	Sending Always On ⇒ ●	
	Hiding Always Off ⇒ ●	
Hiding manufacture number and other information	While watching TV, ☺ ⇒ SetBroadcastData ⇒ ● ⇒ Manufacture Number ⇒ ● ⇒ Off ⇒ ●	
TV Link (Japanese)		
Saving links to Data Broadcasts or related information	While viewing Data Broadcast, select link source → ● • Link navigation varies by program. Follow onscreen instructions to save links.	
Using TV links	$\underbrace{[\text{Start Here}]}_{\text{Start Here}} \textcircled{\bullet} \Rightarrow TV \Rightarrow \textcircled{\bullet} \Rightarrow TV Link \Rightarrow \textcircled{\bullet} \Rightarrow \text{See}$ below	
	Opening TV Links Select link • • • • • • • • • • • • • • • • • •	
	Opening Properties Select link ⇒ ☺ ⇒ Details ⇒ ●	
Deleting TV links	$\underbrace{\text{Start Here}}_{\text{Start Here}} \textcircled{\bullet} \Rightarrow TV \Rightarrow \textcircled{\bullet} \Rightarrow TV Link \Rightarrow \textcircled{\bullet} \Rightarrow \text{See}$ below	
	One Entry Select link $\Rightarrow \odot \Rightarrow$ Delete $\Rightarrow \odot \Rightarrow$ Yes $\Rightarrow \odot$	
	All Entries $\textcircled{\label{eq:all} \Rightarrow Delete All \Rightarrow \textcircled{\label{eq:all} \Rightarrow Yes \Rightarrow \textcircled{\label{eq:all} = for the set of the $	

Subtitle & Sound

	 Start Here] While watching TV, (◎) → Subtitle/ Sound → (●) → See below May be unavailable depending on program content or viewing style (TV orientation, etc.).
	Showing Subtitles Always Display Subtitle ⇒ ● → On ⇒ ●
Changing subtitle	Hiding Subtitles Always Display Subtitle ⇒ ● → Off ⇒ ●
settings	Changing Subtitle Language Subtitle Language
	Showing Subtitle Area Always Auto Subtitle Off ⇒ ● → Off ⇒ ●
	Showing Subtitles at the Top Subtitle Position ⇒ ● ↓ Upper ⇒ ●
	Increasing Subtitle Lines Subtitle ScrollMode ⇒ ● → On → ●
	Start Here While watching TV, ☺ ♥ Subtitle/Sound ♥ ● ♥ See below
Changing sound	Selecting Sound Option Sound Type ⇒ ● ⇒ Sound2 ⇒ ● ● Available when multiple sounds are supported.
settings	Listening to Sub Language Sound Channel ⇒ ● > Sub ⇒ ●
	Listening to Main & Sub Languages Sound Channel $\Rightarrow \textcircled{O} \Rightarrow Main + Sub \Rightarrow \textcircled{O}$

Recording

Recording programs without Data Broadcasts	While watching TV, ☺ ⇒ SetBroadcastData ⇒ ● ⇒ Set Recording ⇒ ● ⇒ Image Only ⇒ ●
Saving Data Broadcast images to handset	While watching TV, ☺ → SetBroadcastData → ● → Image Location → ● → Phone Memory → ●
Disabling Time Shift recording automatic activation	● → TV → ● → Settings → ● → Set Call Time Shift → ● → Off → ●
Recording programs to handset	● → TV → ● → Settings → ● → Save Recording to → ● → Phone Memory → ●



Digital TV

Additional Functions

Recorded Programs

Playback

Splitting files by	During playback, $\textcircled{\baselinetwidth}$ \clubsuit Split File \Rightarrow $\textcircled{\baselinetwidth}$ \Rightarrow
specifying a time	Select Point 🔶 🖲 🔶 Specify point 🔶 🔵 🔶
point	Confirm 🗼 🖲
Playing files	●
repeatedly	Playback Pattern 🔶 🖲 🔶 Repeat 🔶 🖲
Playing split files	● <i>TV ⇒ ● → TV Player ⇒ ● ⇒</i> Select
Playing split mes	split file 🔶 🌝 🔶 Select file 🔶 🖲
	● → TV → ● → Recorder Contents → ● →
	Select file 🔶 🖲
Playing video files	• During playback, press (8.2) to switch sound channels
transferred from	[L (Main), R (Sub) or L + R (Main + Sub)]. (Available
	for programs supporting sub language.) For more
Blu-ray Disc	operations, see P.9-6 "Video Playback Operations."
recorders	• In Recorder Contents file list, press (2) to rename
	files, change playback mode (repeat, random, etc.),
	check memory status, open properties or delete files.
	•

Managing		
Checking memory status	● → TV → ● → TV Player → ● → ≅ → Memory Remaining → ●	
Renaming files	● → TV → ● → TV Player → ● → Select file → ◎ → Rename → ● → Enter name → ●	
	Start Here) ● → TV → ● → TV Player → ● → See below	
Deleting files	Single Files Select file $\Rightarrow @ \Rightarrow Delete \Rightarrow • • Yes \Rightarrow •$	
	All Files $\textcircled{\begin{array}{c} \blacksquare \end{array}} \blacksquare $	
Copying files to Memory Card	 ● ★ TV ◆ ● ★ TV Player ★ ● ★ ◎ ★ Change to Phone ★ ● ★ Select file ★ ◎ ★ Copy to Card ★ ● ★ Yes ★ ● File is moved from handset to Memory Card when the number of copies made exceeds the limit. 	
Moving files to Memory Card	 ♦ TV ♦ ● ♥ TV Player ♥ ● ♥ ◎ ♥ Change to Phone ♥ ● ♥ Select file ♥ ◎ ♥ Move to Card ♥ ● ♥ Yes ♥ ● Files moved to Memory Card cannot be moved back to handset. 	
Opening file properties	● → TV → ● → TV Player → ● → Select file → □ → Details → ●	



Additional Functions

Opening/editing/

deleting Timer

details

Editing Entries

content. **Deleting Entries**

Select entry $\Rightarrow \textcircled{\ } \Rightarrow \textit{Edit} \Rightarrow \textcircled{\ } \Rightarrow \textit{Edit} \Rightarrow \textcircled{\ } \Rightarrow$

• Some entries may not be edited depending on the

Select entry $\Rightarrow \boxdot \Rightarrow$ Delete $\Rightarrow \odot \Rightarrow$ Yes $\Rightarrow \odot$

Markers			Start Here While watching TV, (a) → Rec./TimeShift → (a) → Reservation List → (a) → (b) → See below
Playing files with Markers	Start Here During playback ⇒ See below Skipping between Markers	Opening/playing/ deleting Timer log records	Opening Timer Log Select record = •
	Image: Second system Image: Second system Moving to Specific Markers		Playing Recorded Programs Select record ⇒ ☺
	िः - ९िःः Start Here During playback, ♦ Set Marker ♦		Deleting Records Select record ⇒ ⊗ ⇒ Yes ⇒ ●
Using Marker List	● → Marker List → ● → See below Starting Playback Select number → ●	Customizing TV Alarm settings	Start Here While watching TV, ⇒ Rec./TimeShift ◆ ● ◆ Reservation List ◆ ● ◆ ⇒ TV Alarm ◆ ● > See below
	Deleting a Marker Select number ⇒ ☺ ⇒ Delete ⇒ ●		Changing TV Alarm Time Alarm Time ⇒ ● ⇒ Select time ⇒ ●
	Deleting All Markers (a) → Delete All → (●) → Yes → (●)		Disabling Tone/Vibration/Small Light Alarm, Vibration or Light $\Rightarrow \odot \Rightarrow Off \Rightarrow \odot$
TV Timer & TV Recording Timer			Changing Duration Duration ⇒ ● ⇒ Select time ⇒ ●
	Start Here While watching TV, ☺ ⇒ Rec./TimeShift ★ ● ★ Reservation List ★ ● ★ See below Opening Entries Select entry ★ ●	Prioritizing current operation over TV Timer/TV Recording Timer	● → TV → ● → Settings → ● → TV Reserve Prior → ● → Off → ●
Openina/editina/			

Digital TV

7-16

Troubleshooting

Watching

TV won't activate

· Battery may be low. Charge battery or install a charged battery.

Cannot watch TV

- Reception may be poor; change location to improve it. (TV signal strength is independent of handset signal strength.)
- · Handset may not have been used for a period of time; retrieve Network Information.
- TV is disabled upon subscription termination

Area setup does not complete correctly

• Perform Update All in Channel Update. Area setup may not complete correctly depending on the area or service availability.

Recording

Ringtone does not sound as set while recording

• When a Chaku-Uta® file, etc. is set as ringtone, default ringtone may sound for incoming transmissions while recording.

TV Recording Timer



Could not start recording. appeared as recording result

· Recording failed due to low battery/ memory, active function, etc.



Recording aborted. appeared as recording result

• Recording was interrupted due to low memory, Memory Card removal, etc.



3-2
3-2
3-3
3-5
3-5
3-8
11
14
16
16

Opening Files	8-18
Opening Saved Images via Album	
Opening Saved Files via Review	.8-21
Editing Images	8-22
Picture Editor	.8-22
Composite	.8-25
DPOF	8-26
Printing Images	.8-26
Additional Functions	8-27
Troubleshooting	8-33

Camera & Imaging

8



Getting Started

Capture still images or record video.

Detect Personal

Register faces; related information appears in Viewfinder upon face detection.

Continuous AF

Focus continuously adjusts as the framed subject's position changes.

Select Camera

944SH is loaded with preset camera modes tailored for various purposes/ occasions; select a camera mode to suit subject/shooting conditions.

Album

Sort saved images into up to 500 albums; create original albums as needed.

Important Mobile Camera Usage Notes

- Clean dust/smudges from lens cover with soft dry cloth before use.
- Mobile camera is a precision instrument, however, some pixels may appear brighter or darker.
- Shooting/saving images while handset is hot may affect the image quality.
- Exposing lens to direct sunlight may damage color filter and affect image color. Auto Shut-off
- Before image capture/recording, mobile camera shuts down after a period of inactivity and handset returns to Standby. Shutter Click
- Shutter click and Self-timer tone sound at fixed volume regardless of handset settings.



8-2

Photo Camera & Video Camera Overview

Focus modes and sizes shown below are defaults; those with ^{*} are fixed.

		Description	Focus Mode	Size	
	Easy Auto Camera	Capture nearby subjects easily (settings partially changeable)	Normal(Portrait) [*]	8M	
Standard Shooting	Pro Auto Camera	Capture nearby subjects easily (settings mostly changeable)	Normal(Portrait)	8M	
	Quick Camera	Capture distant scenery quickly	Manual Focus	ЗМ	
	Scene Cameras	Select one according to subject/shooting conditions	Normal(Portrait) [*]	8M	
Subject	Monochrome Camera	Capture black and white images	Normal(Portrait)	8M	
&	Sepia Camera	Capture sepia images	Normal(Portrait)	8M	
Conditions	Long Exposure Camera	Capture images in low light (fireworks, night scenes, etc.)	Normal(Portrait)	8M	
	Shot Memo Camera	Improve text readability in captured memos, tables, etc.	Center Auto Focus	ЗМ	
	Look Back Camera	Play whistle sound and release shutter automatically when subject turns face to camera	Normal(Portrait)*	8M	
Auto Shutter Release	Smile Camera	Release shutter automatically when subject smiles	Normal(Portrait)	8M	
	Self Timer Camera	Release shutter automatically after selected time elapses	Normal(Portrait)	8M	_



			Description	Focus Mode	Size
		Wallpaper Camera	Show mock Clock/Calendar in Viewfinder to capture image and set it as Wallpaper	Normal(Portrait)	Wallpaper⁺
		Sub-Wallpaper Camera	Capture images suited for Sub Display Wallpaper	Center Auto Focus	Sub-Display
	Specific Objectives	Auction Camera	Use guide to capture multiple images for posting on auction sites	Center Auto Focus	VGA
		Messaging Camera	Capture and send images via mail easily	Normal(Portrait)	VGA
8		Blog Camera	Capture and post images to blogs easily	Normal(Portrait)	VGA
Camera & Imaging		Rapid Shooting Camera	Capture up to 100 images consecutively	Normal(Portrait)/ Center Auto Focus	QVGA
a& Ir	Special Shooting	Panorama Camera	Capture panoramic images of scenery, etc.	Center Auto Focus	—
naging		Scanner Camera	Move handset to scan the area to capture	Center Auto Focus	Free
		Pretty Arrange Camera	Touch up faces in captured images	Normal(Portrait)	ЗМ
	Additional Cameras	Self Portrait Camera	Use guide to capture self portraits	Normal(Portrait)	ЗM
		Face Register Camera	Register name and note for faces	Normal(Portrait)	VGA ⁻
	Video Camera	Fine Video Camera	Record long high quality video	Auto Focus	Wide
0	Video Camera	Video Camera for Mail	Record short video easily to send it via mail	Auto Focus	QCIF
8-4	,				

Photo Camera

Capturing Still Images

Follow these steps to capture someone's image using Easy Auto Camera:

> Frame subject on **D**) Display



Photo Viewfinder

- Focus is locked on faces automatically for Easy Auto Camera, Pro Auto Camera, etc. (Portrait auto focus)
 - When multiple faces are detected, frame appears on each face; use 📀 to select one on which to lock focus.
 - Detection may fail depending on face angle, distance from subject or environment.







Captured Image Window

- Shutter clicks; captured image is saved.
- Open saved images via Review or Data Folder.



Viewfinder returns

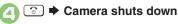

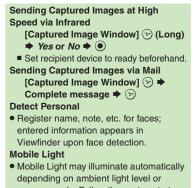

- camera mode. Follow these steps to turn setting off:
 - [Photo Viewfinder] (Photo Viewfinder] Light $\Rightarrow \bigcirc \Rightarrow Off \Rightarrow \bigcirc$

Advanced

Selecting Self-timer time/repeat interval Changing image size Changing focus frame design Changing shutter click sound Changing save location Changing Mobile Light mode (And more on P.8-27 - 8-28)



Photo Camera

Photo Viewfinder Indicators 2 9 3 4 5 6 7 12 13 14 īī Mobile Light 8 Remote Shutter 2 Memory Background Save 9 3 Save to Picture Quality 4 Picture Size TO Auto Save Continuous Type III Exposure 5 Long Exposure 12 Focus 13 6 Scene Shake Reducing ISO Sensitivity Shutter Mode 7 Self-timer White Balance

Showing Large Indicators

Press (in Photo Viewfinder to show large indicators along the edges of Display.



Press (to toggle indicator view (Icon On, Icon Off and Guidance).

Press • to toggle functions.

Pre-Image Capture Operations

Zoom In/Out	٥/٩
Toggle Mode	🕑 (Long)
Adjust Brightness	\odot/\odot
Change Image Size	4
Toggle Mobile Light Mode	(# së
Open Help	

Press (a) to open Options menu for more functions/settings.



Focus Lock

Lock focus on subject; camera continuously focuses on the subject even if it moves. Chase Focus tracks the subject's movement, and Continuous AF adjusts focus as the distance to the subject changes.

In Photo Viewfinder, frame subject in center of Display

2 🔊

Focus Lock is set.

BO

- Captured image appears.
- Press (•) to return to Viewfinder.

Canceling Focus Lock

• Press 🔊.

Chase Focus

 Camera distinguishes the subject by color; light-colored subjects or subjects having the same color as the background may not be tracked correctly.

Image Size & Usage

944SH Picture Size & Corresponding Usage:

8M	A4 prints
5M	B5 prints
3M	2L or postcard prints
Full HD	Full HD display wallpaper
Wallpaper	944SH Wallpaper
VGA	Blog posts, etc.
QVGA	Mail attachments, etc.

For image specifications, see **P.17-21** "Photo Camera."

Auto Resize Zoom

• At *8M*, Picture Size changes with zoom scale (print quality may be affected); check the size on indicator before image capture.



Selecting Camera by Use

Switching Cameras



In Photo Viewfinder, ☺ ➡ Switch Camera ➡ ●




 Alternatively, in Main Menu, Camera
 Various Cameras to select camera.

🕽 Select camera 븆 💽

- Selected camera activates.
- For subsequent operations, see "Using Selected Camera."

Using Selected Camera

Rapid Shooting Camera

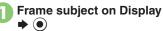

• After image capture, the first preview image appears.

🕽 🖲 (Long)

• For *Highest100Pics(QVGA)*, a confirmation appears. Choose *Yes*

and press), then press) again.

• All captured images are saved.

Saving Selected Images

After (1), (1) (select image) (1)

Look Back Camera

· Whistle sound plays.



Face detection activates and shutter releases; image appears

• Viewfinder returns

Smile Camera



Smile detection activates and shutter releases; image appears

Viewfinder returns.



0



Countdown starts.

Shutter releases after approximately ten seconds; image appears

• Viewfinder returns.

Wallpaper Camera

- Wallpaper preview appears.
- 29
 - Image is set as Wallpaper. (Viewfinder returns.)

Sub-Wallpaper Camera

• Wallpaper preview appears.

♦ Select panel ● ●



Select option 🕈 🖲

- Select *Cut* to specify image area or zoom in/out.
- 4

 \bigcirc

• Image is set as Sub Display Wallpaper. (Viewfinder returns.)

Auction Camera


- - First preview image appears.
 - Repeat 1 2 to capture two more images following onscreen instructions.
- 3) Yes 🕈 🖲

Messaging Camera

■ Frame subject on Display
● ●

2 🐑

 Mail Composition window opens. Complete and send message.

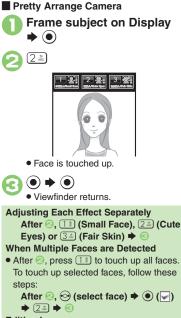

- Editing Images
 - After 🕕, 1 🗄
- For more, see P.8-22 "Picture Editor."

Advanced

Selecting Self-timer time/repeat interval (P.8-27)

Changing Clock/Calendar type for Wallpaper Camera (P.8-29)



Photo Camera

Panorama Camera

- Move handset slowly to keep + aligned with either of yellow lines
- 30
 - Captured image is saved.
 - Image is captured automatically when the bar (
- Self Portrait Camera
 - Turn handset around and look into the lens
 - Face detection activates, tones sound, and shutter releases; image appears

Viewfinder returns

- Shot Memo Camera ■ Frame subject on Display ● ●
- 💫 1 🗈 🗭 Correction starts 🕈 📀
 - Select preview image 🕈 💽
 - Captured image is corrected accordingly.
- **B** ()
 - Viewfinder returns.

Additional Cameras		
Scene Cameras	Frame subject on Display ◆ ●	
Monochrome Camera		
Sepia Camera		
Long Exposure Camera	 Frame subject on Display Shutter is left open for approximately 30 seconds before image capture. 	
Blog Camera	Frame subject on Display ◆ ● ◆ ☞ ◆ Proceed	

with blogging

capture 🗭 🔘

Scanner

Camera

Frame subject on Display

slowly to scan the area to

➡ ● ➡ Move handset

Advanced



Changing panorama/scanner settings Previewing panorama image Changing panorama image preview method Changing exposure time for Long Exposure Camera (P.8-29)

Camera & Imaging

Changing & Saving Camera Settings


Change settings according to purpose/shooting conditions; save frequently used settings as My Camera for future use.

- Some settings may be unavailable depending on camera mode (no corresponding indicators appear).
- For setting procedures, see P.8-27 8-28. In addition to these, there are settings unique to each tailored camera.

Major Items



O'

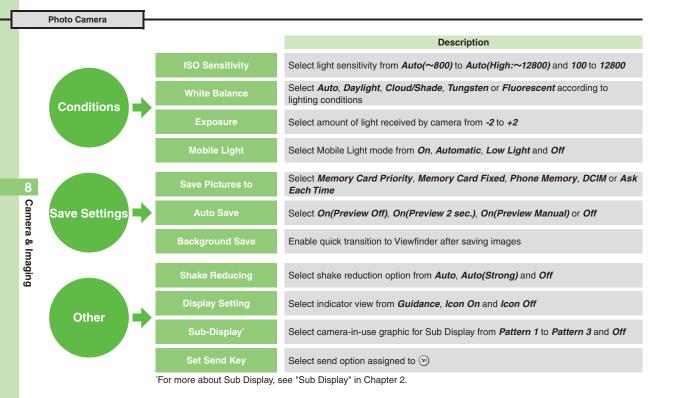

8-12

Changing Settings

Example: Picture Size



In Photo Viewfinder, 🖾



Picture Size ◆ ●
Select size ◆ ●
• Viewfinder returns.



After image capture, save changed settings with a name and captured image; load saved settings in the same manner as switching cameras.


May be unavailable depending on camera mode.



Specify image area



• The specified portion will be used as the camera's icon.

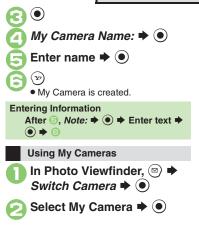



Deleting My Cameras Editing My Cameras (P.8-30)

Advanced

Photo Camera

Registering Faces (Detect Personal)


Register faces; related information appears in Viewfinder upon face detection, and captured images are sorted into albums (Portrait) when saved.

- Register name, note and priority for up to ten faces.
- When multiple registered faces are detected, focus is locked to one with highest priority.




Saving Entries



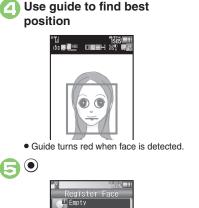



• Window shown above opens when face is recognized correctly; if not, repeat (2) - (5).

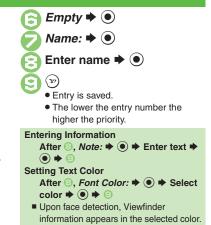



Camera & Imaging







Video Camera



Follow these steps to record short video using *Video Camera for Mail*:

● ♦ Camera ♦ ●

Video Camera for Mail 🕈 💽



❤ 00:00:00 0000KB/2000KB


Video Viewfinder (Video Camera for Mail)



Frame subject on Display

• Recording starts after a tone.

Save Save
 Send
 Save Save
 Send
 Video is saved. (Viewfinder returns.)
 Play saved video via Review, Data Folder or Media Player.

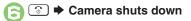

Playing Unsaved Video

- Incoming Calls
- If a call arrives before video is saved, recorded clip is temporarily saved. End the call to return.

If Battery Runs Low

• Recording stops. (Recorded clip is saved.)

Switching Video Cameras

▶)

Advanced



Adjusting focus quickly for close-up shots Changing image quality Activating Mobile Light Capturing images while recording video (still image capture) Changing recording size (And more on P.8-30)

Camera & Imaging

Video Viewfinder Indicators

		115i5: 11 12 12 12 12 12 13 12 12 13 12 12 12 12 12 12 12 12 12 12
Mobile Light	7	Save to
Video Quality	8	Exposure
Record Size	9	Focus

1 2 3

4

5

6

6			LIGH
		1-20	Cha
Mobile Light	7	Save to	Paus
Video Quality	8	Exposure	Reco
Record Size	9	Focus	Capt
Memory for still image capture	10	Shake Reducing	Cano (Star
Record Time	Π	Audio Encode	Oper
Self-timer	12	Video Encode	*Eino

Operations in Video Viewfinder

Zoom In/Outఄఄ/ູToggle Mode沙 (Long)Adjust BrightnessᡣCoggle Mobile Light ModeToggle QualityPause/Resume RecordingWhile Recording, Capture Still ImageWhile Recording, Cancel Recording (Start Over)Open Help		
Adjust Brightness O/O Toggle Mobile IIII Light Mode IIIII Change Quality IIIII Pause/Resume While Recording, \heartsuit Capture Still Image While Recording, \circledcirc Cancel Recording IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	Zoom In/Out	<u>ی/</u>
Toggle Mobile Light Mode Image: Change Quality Change Quality Image: Change Quality Pause/Resume Recording While Recording, Image: Change Quality Capture Still Image While Recording, Image: Change Quality Cancel Recording (Start Over) Image: Change Quality	Toggle Mode	🐨 (Long)
Light Mode Image Change Quality Mark Pause/Resume Recording While Recording, (P) Capture Still Image While Recording, (S) Cancel Recording (Start Over) Image	Adjust Brightness	\odot/\odot
Pause/Resume Recording While Recording, (*) Capture Still Image While Recording, (*) Cancel Recording (Start Over) (*)		
Recording While Recording, (*) Capture Still Image While Recording, (*) Cancel Recording (Start Over) (*)	Change Quality	(Xatik)
Cancel Recording (Start Over)		While Recording, \textcircled{P}^*
(Start Over)	Capture Still Image	While Recording, 🖾
Open Help	•	CE SAGES
	Open Help	

^{*}Fine Video Camera only. (May be unavailable depending on recording size.) Press ^(B) to open Options menu for more functions/settings.



Opening Files

Opening Saved Images via Album

Basics

Handset sorts saved images into up to 500 albums of the following preloaded categories automatically; create original albums as needed.

Portrait	Stores portraits sorted into albums by face registered via Detect Personal
Event	Stores images sorted into albums by period scheduled in Calendar
By Camera	Stores images sorted into albums by camera mode
By Date	Stores images sorted into albums by captured date

Album Images & Source Files

 Album stores only file locations. (Source files are saved in Data Folder.) Images disappear from Album if source files are deleted.



A single image can be sorted into multiple categories (e.g., a portrait captured using a specific camera is stored in **By Camera** and **Portrait**). In addition, a single image with multiple registered faces will be stored in each subject's album in **Portrait**.


Opening Albums
l 🕞 (Long)
A I bum Recommend Abum Nate: 2010/06/01 Usoiter: 2010/06/01 Isoos
Album Window
 Recommend shows a recently updated album. Popular Top 10 stores ten most frequently opened albums.
💫 Select category 🕈 💽
Album by Date




Album List

Albums within appear.



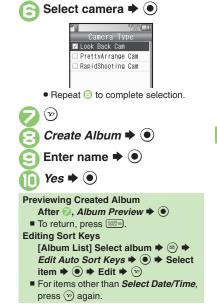

Select Camera type 🕈 💽

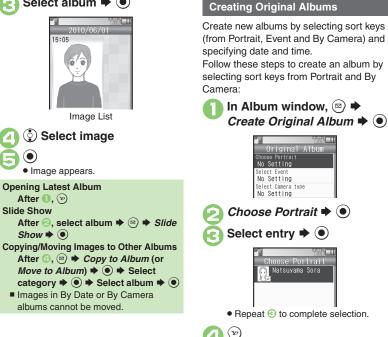


Select album

15:05

Image appears.

After 1, 💬 Slide Show

Show

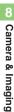



Opening Files

Editing Albums

Some albums may not be edited.

Renaming Albums





Enter name 🕈 💽

Adding Images

Not available for By Date or By Camera albums.

```
In album list, select album
```



Picture Folder

R	Select folder 🜩	$oldsymbol{ightarrow}$

- For *DCIM Folder*, select a folder and press ().
-] Select image 🕈 💽

Adding Images via Data Folder ● Data Folder ● ● Pictures or DCIM ● ● > Select image ● ◎ ● Save to Album ● ● > Select category ● ● > Select album ● ●

■ For *DCIM*, select a folder and press ●

Deleting Albums

Delete ➡ ● Yes ➡ ● • Entered text appears in image list.

Other Editing Options

 Album image handling is similar to that of Data Folder. For more information, see the chapter "Data Folder & Memory Card."





Changing album covers Sorting albums Unlocking Secret Data Folder temporarily Opening album properties Removing images from albums

Opening Saved Files via Review

Opening Last Saved File

Open/play last saved mobile camera file; access older files as needed.





Review Window

• To end Review, press 🕤.

Enlarging Images After (2), (1) Pausing/Resuming Video After (2), (1) (press to pause/resume) Opening Help [Review Window] (1) [Review Window] (1) [Photo Viewfinder] [Photo Viewfinder]/[Video Viewfinder] (1) (Long)



Accessing Older Files

Review File List

• File list appears.

• Press 🐨 to toggle lists.

Select file ⇒ ●
 File opens/plays.




Editing Images

Picture Editor

Picture Editor Options

The following options are available. Some images may not be editable depending on file type and size.

Resize	Select from preset sizes or crop image
Frame	Add Frame to images
Paste	Add text/dates to images
Retouch	Dress up images with preloaded visual effects
Stamp	Add stamps to images
Face Arrange	Make smiley, angry or sad faces
Correction	Correct images
Rotate	Rotate images
Mosaic	Apply mosaic effect to images
File Format	Convert file format and change file size

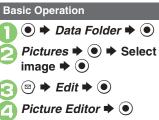



Picture Editor Menu





Changing Image Size

Select from preset sizes or crop image.



Resize to Preset Size





Resize Window





● If crop frame does not appear, omit ⓒ.



Editing is complete.

Zooming In/Out After ⓒ, ☺ ♦ ۞ ♦ ④





Move + to the lower right corner of the portion to crop



Editing is complete.

Specifying Image Area After ⓒ, ॐ ➡ ② Zooming In/Out After ⓒ, ➡ ۞ ➡ ②



Applying Visual Effects

Editing is complete.



Using additional editing options (P.8-31 - 8-32)

Advanced

Editing Images

Face Arrange

Make faces smiley, sad, etc.



In Picture Editor menu, Face Arrange $\Rightarrow \odot$



Face Arrange Menu

Select type 🗭 🖲

• Editing is complete.

 \mathbf{R}

Important Face Arrange Usage Note

 When using Face Arrange, take care not to create images that may embarrass or offend others. Always obtain permission before photographing others.

Adjusting Positions

Change the default positions and sizes of targets to fit the image.

- - A rectangle appears with + in the upper left corner.
- Move + to top left of face
 ★ <</p>
- Move + to bottom right of face







• Face line is set. Set the eyes and then mouth in the same way.



 Image is saved as a new entry with Face Arrange positions adjusted.
 Complete Face Arrange. Face Arrange is applied to the adjusted positions.



Composite

Composite Options


The following options are available. Some images may not be editable depending on file type and size.

Split Picture	Combine up to four reduced
	images into one
Merge	Combine two still images
Panorama	into one

Panorama Images

Panorama Image Effects:

Near View	Best suited for close-up shots
Document	Use for images with text
Standard	Apply to other images

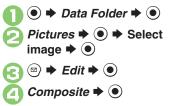



- File selected in ② is set as left image.
- *Empty>* ◆ ◆ Select
 image ◆ ●
 EFFECT ◆ ◆ Select
 effect ◆ ●



• Merged image appears.





Advanced

Printing Images

Digital Print Order Format (DPOF)

Select images from Memory Card and specify the number of copies to print on DPOF-compatible printers, or at digital printing services.

DPOF settings made on other devices are unusable; delete existing settings to create new ones on handset.

Camera & Imaging

 $\textcircled{\bullet} \Rightarrow Settings \Rightarrow \textcircled{\bullet} \Rightarrow \textcircled{\bullet} \\ Phone \blacksquare \\ Memory Card \Rightarrow \textcircled{\bullet} \Rightarrow \\ DPOF \Rightarrow \textcircled{\bullet}$

🛐 Number of Copies 븆 🖲

For Each Picture ♦ ● ♦ Select folder ♦ ●

Select image ➡ ☺		
	「Tages」 「mages	
	Set copies of selected images.	
	(00-99)	
	ООССору	

Enter a number of copies to print ♦ ●

• For more settings, repeat 🕞 - 🕞.




Applying a Number to All Images In (2), For All Pictures \Rightarrow (2) \Rightarrow Enter a number of copies to print \Rightarrow (2) Canceling Specified Number In (2), enter 00 \Rightarrow (2) Viewing Current Print Settings In (2), Check Settings \Rightarrow (2)

Using Printers

Connect handset to a Bluetooth[®]-compatible printer and print images in Pictures folder.

- Activate Bluetooth® on the printer.
- Some images may not be sent depending on file type and size.

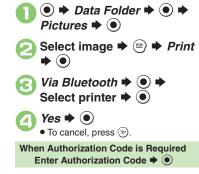



Advanced

Additional Functions

General

Changing function assigned to Camera Key (()) Select function () Camera Key ()

Photo Camera

Some functions may be unavailable or accessible via a different menu path depending on camera mode or settings.

<u> </u>	
Opening Help	In Photo Viewfinder, 🐵 🔶 Help 🔶 🖲
Releasing shutter	In Photo Viewfinder, press the corresponding button on Bluetooth [®] watch
remotely with a Bluetooth [®] watch	 Connect handset to a Bluetooth[®] watch and set Set Remote Shutter to <i>On</i> beforehand. For details, see the Bluetooth[®] watch guide.
Disabling remote shutter control via Bluetooth [®] watches	In Photo Viewfinder,

Photo Camera Settings (General)		
Selecting Self-timer time/ repeat interval	In Photo Viewfinder,	
Changing image size	In Photo Viewfinder, ⁽ ⁽ ⁽) ⁽ ⁽) ⁽ ⁽) ⁽⁾ ⁽	
Setting Center Auto Focus	In Photo Viewfinder, ☺ → Focus Setting → ● → Center Auto Focus → ●	
Specifying point of focus manually	 In Photo Viewfinder, ◆ Focus Setting ◆ ● Spot Auto Focus ◆ ● A frame appears on Display; use ◆ to move frame over target point of focus. 	
Adjusting focus quickly for close-up shots	In Photo Viewfinder, ⓐ ⇒ <i>Focus Setting</i> ⇒ ● ⇒ <i>Macro</i> ⇒ ●	
Adjusting focus manually	In Photo Viewfinder, → <i>Manual Focus</i> → → Adjust focus → • To readjust focus, press →.	
Canceling Continuous AF	In Photo Viewfinder,	
Canceling Chase Focus	In Photo Viewfinder, ⇒ <i>Focus Setting</i> → ● → <i>Chase Focus</i> → ● → <i>Off</i> → ●	
Changing focus frame design	In Photo Viewfinder,	



	-
Releasing shutter	In Photo Viewfinder, ☺ ⇒ Shutter Settings ⇒
when subject smiles	● ⇒ Shutter Mode ⇒ ● ⇒ Egao ⇒ ●
Adjusting smile detection level	In Photo Viewfinder, ⓐ → Shutter Settings → ● → Egao level → ● → Select level → ● • Lower the level when detection is slow.
Releasing shutter when subject turns face to camera	In Photo Viewfinder, ☺ ⇒ Shutter Settings ⇒ ● ⇒ Shutter Mode ⇒ ● ⇒ Furimuki ⇒ ●
Changing shutter click sound	 In Photo Viewfinder, (a) → Shutter Settings → (a) Shutter Sound → (a) → Select pattern → (a) Shutter click sounds for continuous shooting and panorama/scanner image capture are fixed.
Changing image	In Photo Viewfinder, ☺ → <i>Settings</i> → ● →
quality	<i>Picture Quality</i> → ● → Select quality → ●
Adjusting light	In Photo Viewfinder, ⓐ → Settings → ● →
sensitivity	ISO Sensitivity → ● → Select level → ●
Adjusting image color to lighting conditions	In Photo Viewfinder, ☺ ⇒ Settings ⇒ ● ⇒ White Balance ⇒ ● ⇒ Select mode ⇒ ●
Adjusting	In Photo Viewfinder, ☺ → <i>Settings</i> → ● →
brightness	<i>Exposure</i> → ● → Adjust level
Selecting shake	In Photo Viewfinder, (2) → Settings → (1) →
reduction option	Shake Reducing → (1) → Select option → (1)
Capturing images	In Photo Viewfinder, (2) → Settings → (1) →
in low light	Long Exposure → (1) → Select time → (1)
Switching	In Photo Viewfinder, ☺ → <i>Settings</i> → ● →
indicator view	<i>Display Setting</i> → ● → Select option → ●

Selecting send option assigned to 🕑	In Photo Viewfinder, (◎) → Settings → (●) → Set Send Key → (●) → Short press or Long press → (●) → Select option → (●) • Select send option separately for each key press method.	
Changing save location	In Photo Viewfinder,	
Selecting automatic save option	In Photo Viewfinder, [®] → Save Settings → ● → Auto Save → ● → Select option → ● • When Off, press ● after image capture to save.	
Disabling quick transition to Viewfinder after saving images	In Photo Viewfinder, ☺ ⇒ Save Settings ⇒ ● ⇒ Background Save ⇒ ● ⇒ Off ⇒ ●	
Changing Mobile Light mode	 In Photo Viewfinder, (2) → Mobile Light → (1) Select mode → (1) Mobile Light goes out automatically after three minutes. Reactivate mobile camera to re-illuminate it. Do not shine Mobile Light in eyes. 	
Photo Camera Settings (Selected Camera)		
Changing continuous shooting mode	In Rapid Shooting Camera Viewfinder, ☺ ᆃ <i>Continuous Type</i> ◆ ●	
Combining successive images	 After continuous shooting, (a) → Compose Strobe Photo → (a) → Yes → (a) → (a) → (a) May be unavailable depending on the number of captured images. 	
Changing Look Back Camera sound	In Look Back Camera Viewfinder, ⊚ → <i>Turn</i> Sound → ● → Select sound → ●	

8-28

Camera & Imaging

Changing Clock/ Calendar type for	In Wallpaper Camera Viewfinder, ☺ Clock/ Calendar • ● ◆ Select type ●		Start Here After image capture, Mosaic Editor ⇒ ● See below
Wallpaper Camera	Start Here In Panorama Camera or Scanner		Whole Face or Eyes Only 1: (Whole) or (2::) (Eyes) ⇒ ●
	Camera Viewfinder, (◎) ➡ See below		All Faces
Changing panorama/	Hiding Guides	Annhuinn measis	1 (Whole) or 2 (Eyes) → 1 → ● → ●
scanner settings	Assisting Lines 🔶 🖲 🔶 Off 🔶 🖲	Applying mosaic	Selected Faces
	Locking Display Brightness during Image Capture AE-Lock → ● → Enable → ●	effect	I (Whole) or $2 \stackrel{<}{\sim}$ (Eyes) $\stackrel{>}{\rightarrow} \stackrel{<}{\odot}$ Select face $\stackrel{>}{\rightarrow}$ () () $\stackrel{>}{\checkmark}$ () $\stackrel{>}{\rightarrow}$ () $\stackrel{>}{\rightarrow}$ () $\stackrel{>}{\rightarrow}$ ()
Previewing panorama image	After panorama image capture, <i>Preview</i> \Rightarrow •		Specific Area (Square or Round) ③륜 (Square) or ④종 (Round) ➡ Move ≁ to the
Changing panorama image preview method	After panorama image capture, Preview		upper left corner of the portion \Rightarrow (\bigcirc \rightarrow Move \neq to the lower right corner of the portion \Rightarrow (\bigcirc \Rightarrow \bigcirc \Rightarrow ($)$ ($>$ ($>$ ($>$ ($>$ ($>$ ($>$ ($>$ ($>$
Changing exposure time for Long Exposure Camera	In Long Exposure Camera Viewfinder, ☺ <i>Exposure Time</i> ● ● ● Select time ● ●	Improving text readability	After image capture, ⓐ ⇒ Shot Memo ⇒ ● ⇒ Correction starts ⇒ ↔ Select preview image ⇒ ● ⇒ ●
Correction & Preview		Seeking guidance	After image capture, ()

Correction & Preview

Correcting portrait auto focus images	Start Here After image capture, ● ▶ Correlate to Face ● ● See below ● Available when Auto Save is Off.
	Adjusting Face/Background Brightness Against sun → ● → ● → ●
	Blurring Out-of-Focus Portions Portrait ⇒ ● ⇒ ● ⇒ ●
Brightening backlit subjects (Dynamic Range Adjustment)	 After image capture,

Applying mosaic effect	Selected Faces 1 = (Whole) or 2 = (Eyes) ⇒ ● (♥) ⇒ 2 = ⇒ ● ★ ●
	Specific Area (Square or Round) ③ (Square) or ④ (Round) → Move + to the upper left corner of the portion → (B) → Move + to the lower right corner of the portion → (D) →
Improving text readability	After image capture, [©] ⇒ <i>Shot Memo</i> ⇒ ● ★ Correction starts ⇒ [⊙] Select preview image ⇒ ● ⇒ ●
Seeking guidance	After image capture, 🕮
for better shots	 Follow onscreen instructions.
for better shots	 May be unavailable depending on Auto Save setting.
	After image capture, 1 * - 🖓 🔅 (Long)
	• Available when Auto Save is Off or On(Preview Manual).
Checking image	 Use to see other portions enlarged. Press to enlarge further. Press to cancel.
details before	 Key Assignments:
saving	1 (Upper Left) 2 (Upper Center) 3 (Upper Right)
	(Center Left) 5 ≤ (Center) (Center Right)
	7. (Lower Left) 8. (Lower Center) 9. (Lower Right)
	 May be unavailable depending on image size, etc.



My Camera

Deleting My Cameras	In Photo Viewfinder, ⓐ → Switch Camera → ● → Select My Camera → ⓐ → Delete My Camera → ● → Yes → ●
Editing My Cameras	In Photo Viewfinder, (a) → Switch Camera → (a) → Select My Camera → (a) → Edit My Camera → (a) → My Camera Name: or Note: → (b) → Edit → (b) → (b)

Video Camera

Opening Help	 In Video Viewfinder, (2) → Help → ● Press ⊕ to toggle Help window for indicator descriptions and key assignments.
Selecting Self-timer time	In Video Viewfinder, ☺ <i>➡ Self-timer ➡</i> ● <i>➡</i> Select time <i>➡</i> ●
Adjusting brightness	In Video Viewfinder, ☺ → <i>Settings</i> → ● → <i>Exposure</i> → ● → Adjust level
Adjusting focus quickly for close-up shots	In Video Viewfinder, ☺ ⇒ Focus Setting ⇒ ● ⇒ Macro ⇒ ●
Adjusting focus manually	In Video Viewfinder,
Locking focus	 In Video Viewfinder, [•] Frame subject in center of Viewfinder first. To start over, press [•] again.
Changing image quality	In Video Viewfinder, ☺ ➡ <i>Settings</i> ➡ ● ➡ <i>Video Quality</i> ➡ ● ➡ Select quality ➡ ●

Activating automatic saving	In Video Viewfinder, ☺ ⇒ Save Settings ⇒ ● ⇒ Auto Save ⇒ ● ⇒ On ⇒ ●
Changing save location	In Video Viewfinder, (◎) → Save Settings → (●) → Save Videos to → (●) → Select option → (●)
Activating Mobile Light	 In Video Viewfinder,
Capturing images while recording video (still image capture)	 While recording, (a) Captured images are saved when saving recorded clip; open them via Review or Data Folder.
Changing recording size	In Video Viewfinder, ● ▶ Record Time/Size ▶ ● ▶ For Message or Extended Video ▶ ● ▶ Select size ▶ ● ● ▶ ● Selectable item depends on camera mode. ▶ ●
Enlarging Viewfinder size	In Video Viewfinder, ☺ ⇒ Display Size ⇒ ● ⇒ Enlarge ⇒ ●
Recording video without sound	In Video Viewfinder,
Changing video encoding	In Video Viewfinder, ☺ → Save Settings → ● → Video Encode or Audio Encode → ● Select option → ● • Selectable item depends on camera mode.
Disabling shake reduction	In Video Viewfinder, ⓐ ⇒ Shake Reducing ⇒ ● ⇒ Off ⇒ ●

Album

Changing album covers	Start Here • • Select album ◆ ③ ◆ Change a Cover ◆ ● ◆ See below • For By Date albums, only the latest images are available. Selecting from All Images Within Select Picture List ◆ ● ◆ Select image ◆ ● • • •
	Using Latest Image Latest Picture
Sorting albums	• Belect category • Select album album • ● • Sort option • ● • Select
Unlocking Secret Data Folder temporarily	 (Long) ⇒ (a) ⇒ Unlock Temporarily ⇒ (e) ⇒ Enter Handset Code ⇒ (e)
Opening album properties	$\textcircled{\begin{tabular}{lllllllllllllllllllllllllllllllllll$
Removing images from albums	 (Long) → Select category ◆ ● → Select album → ● → Select image → ∞ → Remove from Album → ● → The Album or All Album → ● → Yes → ● The Album does not appear for images under some categories.
Deleting images	• Belect category • Select album album • Select image • Delete Data • Yes • O • Source files in Data Folder will be deleted.

Editing Images

Picture Editor

	Start Here ● Data Folder ● > Pictures ● + Select file ● > > Picture Editor ● ● > See below
	Changing Text/Outline Color Paste ⇒ ● ⇒ ⊗ ⇒ Select text color ⇒ ● ⇒ ② ⇒ Select outline color ⇒ ● ⇒ ⊗
	Adding Text Paste ⇒ ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ● ●
Using additional	Adding Dates Paste \Rightarrow (1) \Rightarrow Date \Rightarrow (2) \Rightarrow (3) Move date \Rightarrow (1)
Using additional editing options	Adding Stamps Stamp ⇒ ● ⇒ Select stamp ⇒ ● ⇒ ♦ Move stamp ⇒ ●
	Correcting Image Parameters Correction (*) (*) Select type (*) (*) (*)
	Rotating Images Rotate ⇒ ● ⇒ Select type ⇒ ● ⇒ ●
	Applying Mosaic Effect $Mosaic \Rightarrow \textcircled{O} \Rightarrow$ Select shape $\Rightarrow \textcircled{O} \Rightarrow$ Move \neq to the upper left corner of the portion $\Rightarrow \textcircled{O} \Rightarrow$ Move \neq to the lower right corner of the portion $\Rightarrow \textcircled{O} \Rightarrow \textcircled{O}$



Using additional editing options	Start Here ● Data Folder ● Pictures ● ◆ Select file ● ● ● Edit ● ● Picture Editor ● ● ◆ See below	
	Converting File Format File Format ● File Format ● Select format ● • Changing file format may affect file size/image quality. • To return to Picture Editor menu, press	
	Changing File Size File Format → ● → File Size → ● → Select size → ● ● Changing file size may affect image quality. • To return to Picture Editor menu, press .	
Composite		
Combining reduced images	Start Here ● Data Folder ● Pictures ● > Select file ● ● > Edit ● Composite ● > See below Creating Split Picture 80x854 or SplitPicture 240x320 ● ● > Select file ● > When finished, ' > Select file ● > • Repeat from selecting Enter name > Save here • Repeat from selecting Save here	
	While creating Split Picture, ⓐ → <i>View</i> Composite → ●	
	Changing Images While creating Split Picture, select image ⇒ ● 	
	Deleting Images While creating Split Picture, select image ⇒ (a) ⇒ Remove ⇒ ● ⇒ Yes ⇒ ●	

DPOF		
	Start Here ● > Settings ● ● Phone/IPP Memory Card ● > DPOF ● > See below	
Changing print	Adding Dates to PrintsSettings \Rightarrow (1) \Rightarrow Add Date \Rightarrow (1) \Rightarrow On \Rightarrow (1)	
settings	Creating an Index PrintSettings \Rightarrow (1) \Rightarrow Index Print \Rightarrow (1) \Rightarrow On \Rightarrow (1)	
	Resetting Reset Settings ⇒ ● ⇒ Yes ⇒ ●	




Troubleshooting

Mobile Camera

2

Mobile camera won't activate/ shuts down automatically

- Battery may be low. Charge battery or install a charged battery.
- Leaving handset at high temperature may cause camera area to heat up, disabling mobile camera activation; wait a while and retry.
- Prolonged camera use may cause camera area to heat up, resulting in automatic shutdown; wait a while and retry.
- Cannot use Background Save or Auto Save
 - Background Save/Auto Save is not available when Save Pictures to is set to Ask Each Time.

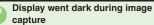

 944SH camera has built-in mechanical shutter and ND filter. Strong shocks to handset during image capture may close mechanical shutter for camera protection, resulting in blank Viewfinder. Reactivate mobile camera to reopen the shutter.

Image is dark or distorted

 Avoid capturing strong light sources (sun, lamps, etc.) in the background.



Captured image appears all white

• When Long Exposure is active, images captured in daylight or good light appear all white.

Editing Images



Cannot save/send edited images

• Edited images may be too large to save or send via mail.

DPOF



Cannot specify print settings properly

 If Memory Card image files have been deleted or renamed on PCs or other devices, reset print settings and start over with settings.



Photo Camera Terms



Center Auto Focus

• Camera automatically selects center of the framed image as point of focus (**P.8-27**).



 Focus continuously adjusts as focus-locked subject's position

changes (**P.8-7**, **P.8-27**).

Chase Focus

 Focus tracks focus-locked subject as it moves within framed image (P.8-7, P.8-27).

Self-timer

 Releases shutter automatically after selected time elapses (P.8-27).



Long Exposure

 Capture images in low light (fireworks, night scenes, etc.) (P.8-10). Stabilize handset to reduce camera shake.



Camera & Imaging

ISO Sensitivity

 Adjust light sensitivity (P.8-28). Higher ISO brightens low light images, but increases noise, making images grainy.

White Balance

• Select a mode (Daylight, Tungsten, Fluorescent, etc.) to adjust image color to lighting conditions (**P.8-28**).

Videos/Music	9-2
Accessing Webcasting Sites	
(Japanese)	9-2
Media Player	9-3
Media Player Basics	9-3
Music	9-5
Playing Music	9-5

Video	. 9-6
Playing Video	9-6
Playlists	. 9-7
Using Playlists	9-7
Additional Functions	. 9-8
Troubleshooting	9-12

9



Videos/Music

Accessing Webcasting Sites (Japanese)

Access Yahoo! Streaming and other webcasting sites.

- Subscription to Keitai Wi-Fi may be required to use some services/content.
- Read information on the source site.

● ♦ Videos/Music ♦ ●

If an update message appears, follow onscreen prompts.

Select item 🕈 🖲

• Follow onscreen instructions.

Menu Updates

Information window opens for Videos/ Music menu update notice. Follow these steps to open it:

In Information window, Menu Update Notif. ♦ ●

- 🄰 Yes 🕈 🖲
 - Follow onscreen instructions.

Suppressing Information Window for Menu Updates

- ♦ Settings ♦ ♦ 😔 Phone/😭
- ♦ Videos/Music Menu Updates ♦
- ♦ Notification Off ♦ ●

Streaming

Most media on webcasting sites are provided as streams; handset plays media while it downloads.





- · Playback starts.
- For playback window description, see
 P.9-6 "Video Playback Window
 Description."

Stopping Playback

During playback,

Playback Sound

• Streaming sound is heard from Speaker/ Headphones regardless of Sound Output setting in Media Player.


Video & Music



Media Player Basics

Use Media Player to play music/video on 944SH.

- Download media files from Mobile Internet sites via Media Player or transfer files from PCs or AQUOS Blu-ray Disc recorders (hereafter "Blu-ray Disc recorders").
- Transfer PC music files and save them on Memory Card.

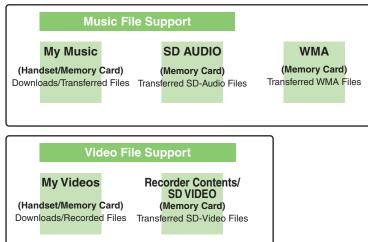

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming/progressive download).
 Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.

Compatibility

• Files transferred from PCs cannot be used as ringtones or System Sounds.



Media Player

Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

> ➡ Entertainment ➡ ● (•) 🔶 Media Player 🜩 🔘



Music or Videos 🌩 🖲 Download Music or Download Videos

(•)

Follow the links to download media

Saving Music Files from PCs

- Use software to convert music file format
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files

Saving AAC Files

Convert PC music files to 944SH-compatible format (P.17-22), then save to corresponding Memory Card folder (P.17-25) via Mass Storage. Install USB Cable driver beforehand.

Saving WMA Files

Follow these steps to save WMA files via compatible software:

(Copy protected files can only be played on the handset with which the files were transferred.)

Connect handset to a PC via **USB** Cable

USB Mode
Modem/Data
Mass Storage
Recorder Link
MTP Mode

MTP Mode 🗭 🖲 • Copy music from PC. Refer to the software's help menu for operational instructions.

(¥) 🗭 Yes 🗭 🔘 🇭

Connection ends

Disconnect USB Cable.


If Menu in 1 Does Not Appear

• Follow these steps:



- ♦ USB Mode ♦ From ②
- Operations on the PC may be required; if prompted, follow onscreen instructions.



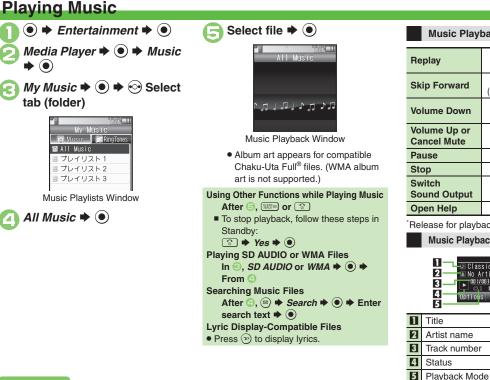

Music Playback Operations

De				
ne	eplay	(Long Press: Rewind [*])		
Sk	ip Forward	(Long F	⊙ Press: Fast Forward [*])	
Vo	lume Down	(Long Press: Mute)		
	lume Up or Incel Mute	٥		
Pa	use		۲	
St	ор	In	Pause, 📾	
	Switch Sound Output		(Long)	
Open Help				
*Release for playback.				
*Re				
*Re		sic music rtist Nam 003 0:00:21/	6	
*Re	Music Playb	sic music rtist Nam 003 0:00:21/	01 6.09:31 00 7 0 4 8 7 8	
	Music Playb	ack Win sic music rtist Nam 003 0:00:21/ s uman s uman s	01 6(19:3) (0) 0 4 7 8 9	
1	Music Playb	ack Win sic music rtist Nam 003 0:00:21/ s 0 6 7	01 6 6 7 7 8 9 Elapsed time	

Video & Music

Advanced

🅙
Resuming from stopped point
Specifying start point
Playing repeatedly or randomly
Changing Sound Effects (And more on P.9-8)

9-5






Video Playback Operations

For pause, volume up/down, sound output or help, see **P.9-5** "Music Playback Operations."

Replay	⊚ (Long Press: Rewind [*])
Skip Forward	⊙ (Long Press in Pause: Advance Frame, Long Press: Fast Forward')
Toggle Display Size	(<u>2</u>) ^(b)

Release for playback.

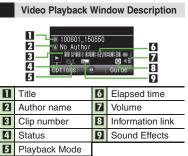


Advanced



Sesuming from stopped point Specifying start point Accessing linked information Switching audio output to wireless device Playing repeatedly or randomly Changing Sound Effects Changing playback size Setting Backlight status Hiding linked information (P.9-8)

Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.

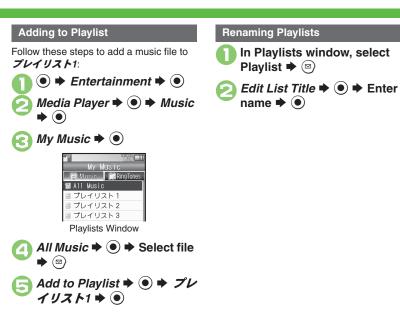

Advanced

Organizing Playlists Sorting files Opening properties Deleting/editing SD AUDIO files Deleting All WMA files Downloading Contents Keys (P.9-9 - 9-10)

Organizing Playlists Sorting files Downloading Contents Keys Opening properties Deleting SD VIDEO files Renaming files transferred from Blu-ray Disc recorders (And more on P.9-10 - 9-11)



Media Playback

Music & Video

Resuming from stopped point	 ● ➡ Entertainment ➡ ● ➡ Media Player ➡ ● ➡ Music or Videos ➡ ● ➡ Last Played Music or Last Played Video ➡ ●
Specifying start point	During playback, ☺ ➡ <i>Time Search</i> ➡ ● ➡ Enter time ➡ ●
Accessing linked information	During playback, ⓐ ⇒ Access Web Link ⇒ ● ⇒ Yes ⇒ ●
Switching audio output to wireless device	 Entertainment Media Player Music or Videos Sound Output Bluetooth Device
Music	
	Start Here During playback, ➡ Playback Mode

Video

Some functions may be unavailable depending on file.

Playing repeatedly or randomly	[Start Here]During playback, ☺ ➡ Settings ➡ ● ➡ Playback Mode ➡ ● ➡ See below
	Repeat One File Repeat
	Repeat All Files Repeat All ⇒ ●
	Play Randomly Random ⇒ ●
Changing Sound Effects	During playback, ☺ ⇒ Settings ⇒ ● ⇒ Sound Effects ⇒ ● ⇒ Select effect ⇒ ●
Changing playback size	During playback, ☺ <i>⇒ Settings ⇒</i> ● <i>⇒</i> <i>Display Size ⇒</i> ● <i>⇒</i> Select size <i>⇒</i> ●
Setting Backlight status	During playback, ● ◆ Backlight ◆ ● ◆ Select option ◆ ● ● Selecting Normal Settings applies Display Backlight settings.
Hiding linked information	During playback,

	Music	
	Playing repeatedly or randomly	Start Here During playback, ☺ ⇒ Playback Mode ⇒ • • See below
		Repeat One File Repeat ⇒ ●
		Repeat All Files Repeat All ⇒ ●
		Play Randomly Random ⇒ ●
		Repeat Randomly Random Repeat ⇒ ●
	Changing Sound Effects	During playback, ☺ → Sound Effects → ● → Select effect → ●



Managing Music Files			Start Here ● ⇒ Entertainment ⇒ ● ⇒ Media Player ⇒ ● ⇒ Music ⇒ ● ⇒ See below
Organizing Playlists	Start Here] ● Entertainment ● ● Media Player ● ● Music ● ● My Music ● ● ● - Select tab (folder) > See below	Opening properties	SD AUDIO Files SD AUDIO ♦ ● ♦ All Music ♦ ● ♦ Select file ♦ ⊕ ♦ Details ♦ ●
	Adding New Playlists (a) ⇒ Add New Playlist ⇒ (i) ⇒ Enter name ⇒ (ii) Deleting Playlists		Other Files My Music → ● → ⊕ Select tab (folder) → Select Playlist → ● → Select file → ⊕ → Details → ●
	Select Playlist ♦ ③ ♦ Delete Playlist ♦ ④ ♦ Yes ♦ ④ Deleting Playlist Files		Start Here ● ► Entertainment ● ● Media Player ● ► Music ● > SD AUDIO ● ◆ See below
	Select Playlist ⇒ ● ⇒ Select file ⇒ ⊚ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ● Changing File Order		Deleting Single Files All Music \Rightarrow (\bigcirc) \Rightarrow Select file \Rightarrow (\bigcirc) \Rightarrow Delete Track \Rightarrow (\bigcirc) \Rightarrow Yes \Rightarrow (\bigcirc)
	Select Playlist → ● → Select file → ◎ → <i>Change Order</i> → ● → Select target location → ●	Deleting/editing SD AUDIO files	Source files will be deleted. Deleting All Files All Music → (∞) → Delete All Tracks → (●) →
Sorting files	● ◆ Entertainment ◆ ● ◆ Media Player ◆ ● ◆ Music ◆ ● ◆ My Music ◆ ● ◆ ☉ Select tab (folder) ◆ All Music ◆ ● ◆ ◎ ◆		Yes → ● → Yes → ● • Source files will be deleted.
	Solution \bullet		Editing Title/Artist <i>All Music</i> → ● → Select file → ◎ → <i>Edit</i> → ● → Select item → ● → Enter title or name → ●



Deleting All WMA files	 Entertainment Music Settings Delete All WMA Yes Source files will be deleted.
Downloading Contents Keys	 ● Entertainment ● Media Player ● Music ● My Music ● ● Select tab (folder) ● Select Playlist ● ● Select file (with) ● ● Yes ● Follow onscreen instructions.

Managing Video Files

Organizing Playlists	Start Here ● ► Entertainment ● ● Media Player ● ♥ Videos ● My Videos ● ● ▶ Memory Card or Phone Memory ● ● > See below ● ● ● >
	Adding New Playlists (a) ⇒ Add New Playlist ⇒ (a) ⇒ Enter name (b) ●
	Deleting Playlists Select Playlist ⇒ ☺ ⇒ Delete Playlist ⇒ ◉ ⇒ Yes ⇒ ●
	Deleting Playlist Files Select Playlist ⇒ ● ⇒ Select file ⇒ ⊕ Delete ⇒ ● ★ Yes ⇒ ●
	Changing File Order Select Playlist ⇒ ● ⇒ Select file ⇒ ◎ ⇒ Change Order ⇒ ● ⇒ Select target location ⇒ ●

Sorting files	 Entertainment Media Player Videos My Videos Memory Card or Phone Memory All Videos Sort Select option
Downloading Contents Keys	 Entertainment Media Player Videos My Videos Multiple of the second sec
Opening properties	Start Here ● ► Entertainment ● ● Media Player ● ● Videos ● ● See below
	SD VIDEO Files SD VIDEO ⇒ ● ⇒ Select file ⇒ ◎ ⇒ Details ⇒ ●
	Files Transferred from Blu-ray Disc Recorders Recorder Contents → ● → Select file → ◎ → Details → ●
	Other Files My Videos ⇒ ● ⇒ Memory Card or Phone Memory ⇒ ● ⇒ Select Playlist ⇒ ● ⇒ Select file ⇒ © ⇒ Details ⇒ ●
Deleting SD VIDEO files	 Entertainment Media Player Videos SD VIDEO Select file Delete Yes Source files will be deleted.



Renaming files transferred from Blu-ray Disc recorders	 Entertainment Videos Recorder Contents Select file Rename Enter name
Checking Memory Card memory status	 ● ★ Entertainment ★ ● ★ Media Player ★ ● ★ Videos ★ ● ★ Recorder Contents ★ ● ★ Ø ★ Memory Remaining ★ ●
Deleting files	Start Here) Start Here
-	Player
Deleting files transferred from Blu-ray Disc recorders	Player ⇒ ● ⇒ Videos ⇒ ● ⇒ Recorder



Troubleshooting

Music

How do I delete files in All Music?

 Delete All Music files in My Music via Data Folder (Music or Ring Songs-Tones).

WMA files do not appear (WMA files are not transferable)

- Did you use 944SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform Delete All WMA and re-transfer the files.
- · Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)
- WMA files may be corrupted; perform Delete All WMA and retry.

Cannot play WMA files

· Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform Delete All WMA and retry.

Video



How do I delete files in All Videos?

 Delete All Videos files via Data Folder (Videos).



· Files created with PC software, etc. may not play.

& Music



S! Appli 10-2	
Using S! Applications 10-2	2
Mobile Widget10-3	6
Customizing Standby Display	
(Japanese) 10-3	3

Additional Functions	10-6
Troubleshooting1	0-10

S! Applications & Widgets



S! Appli

Using S! Applications

Try out the preloaded S! Applications or download and use 944SH-compatible

- S! Applications, including games.
- Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.
- Subscription to Keitai Wi-Fi is required to use S! Applications over Wi-Fi.

Remote Control (Familink Remote)

• Use 77\$17/11E37 for AQUOS S! Application (Japanese) to control a TV, VCR, etc. via infrared.

 ● ◆ S! Appli ◆ ● Exiting S! Applications S! Appli Library ◆ ● 	
S! Appli Library F S! Appli Library F Came 7-L S! Appli Library	
Select application \Rightarrow \bigcirc	Pausing S! Applications In Ø, Suspend
work S! Applications message appears indicating that ternet connection is required. Follow screen instructions. oming Calls coming calls automatically pause Application.	Resuming S! Applications ● ★ Resume ★ ● ■ Select Cancel to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.) ■ Select End to exit the S! Application.

Advanced



🕙 🕒 Downloading S! Applications 🔍 Adjusting S! Application sound volume 🔍 Canceling surround effect 🔍 Setting handset responses to incoming transmissions Setting S! Application to activate in Standby Setting Permissions Opening properties Moving S! Applications to Memory Card Changing S! Application settings Deleting S! Applications Restoring default S! Application settings Restoring default S! Appli Library Synchronizing Memory Card S! Applications with 944SH ●Opening Java[™] license information (P.10-6 - 10-7)

Netwo • A me Interr onscr Incomi Incon S! Ap

Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/ functions immediately from Standby.



-Widgets

-S! Quick News & S! Friend's Status Widget

Sub Display Widgets

Advanced

 944SH supports widgets designed for Sub Display; obtain and handle them like widgets for Standby display. For more information, see "Sub Display" in Chapter 2.

Saving Widgets to Standby

Save up to three widgets (excluding S!速報 ニュース/S!ともだち状況、歩数計 and 家計簿).





Paste Sticky No

Bookmarks

Standby Shortcut Tab -



Select widget
(
)

Widget Tab-

- Corresponding icon appears.
- Specify target location (\bullet)







Moving widgets Removing multiple widgets at once Locking widgets (And more on P.10-8)

Mobile Widget



Deleting Widgets In Mobile Widget menu, Widget Contents 🌩 💿 Widget or Widget(Sub-Display) ▶ (●) Select widget 🌩 🖾 ● S!速報ニュース/S!ともだち状況、歩数計 and 家計簿 cannot be deleted. Delete \Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc **Deleting All Widgets** In 2. Widget \Rightarrow \bigcirc \Rightarrow \bigcirc \Rightarrow Delete $A \parallel \Rightarrow \textcircled{O} \Rightarrow Y es \Rightarrow \textcircled{O}$ If there is a widget saved in Standby, a confirmation appears; follow onscreen prompt. **Deleting All Sub Display Widgets** In 2. Widget(Sub-Display) 🕈 🔘 🕈 Manage Items < O </p> $A \parallel \Rightarrow \textcircled{O} \Rightarrow Y es \Rightarrow \textcircled{O}$ If there is a widget saved on Sub Display. a confirmation appears: follow onscreen

prompt.

Advanced



Opening properties Saving widgets to Icon View Slowing pointer speed Changing automatic update interval Receiving updates automatically while outside Japan Hiding confirmation outside Japan Disabling cookies Deleting cookies (P.10-8 - 10-9)

S! Applications & Widgets

10-4

Using Function-Linked Widgets

944SH is preloaded with *S!速報ニーパS!と* もだち状況 (S! Quick News & S! Friend's Status widget), 歩数計 (Pedometer widget) and 家計簿 (Household Accounts widget).

> S! Quick News & S! Friend's Status Widget

Setting View Pattern



Settings ⇒ ● ⇒ Pattern Setting ⇒ ●

Select item $\Rightarrow \bigcirc (\square/\checkmark)$

Switching View

③ ➡ Select S! Quick News & S! Friend's Status widget ➡ ☺

Repeat the steps above to switch the view





- R

S! Applications & Widgets

	S! Applications			Start Here) ● ◆ S! Appli ◆ ● ◆ See below
CI Applications	Downloading S! Applications	S! Appli S! Appli S! Appli S! Appli Download S! Appli O	Setting S! Application to activate in Standby	Activating Screensaver Settings ⇒ ● ⇒ Screensaver ⇒ ● ⇒ Switch On/Off ⇒ ● ⇒ On ⇒ ●
	Adjusting S! Application sound volume	● ◆ S! Appli ◆ ● ◆ Settings ◆ ● ◆ Application Volume ◆ ● ◆ Adjust level ◆ ●		Setting Screensaver S! Appli Library ⇒ ● ⇒ Select application ⇒ (a) ⇒ As Screensaver ⇒ ● • As Screensaver appears for compatible S! Applications.
	Canceling surround effect	● S! Appli ● ● Settings ● ● Surround ● ● Off ● ●		 Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.
9 Wide		Start Here ● > S! Appli ● > Settings ● ◆ Calls & Alarms ● > See below Showing Calls ● ● ●		Changing Screensaver Activation Time Settings → ● → Screensaver → ● → Activation Time → ● → Enter time → ●
0	Setting handset responses to incoming	Select item		Disabling Automatic Screensaver Restart Settings ♦ ● ♦ Screensaver ♦ ● ♦ Stop Auto Start ♦ ● ♦ On ♦ ●
	transmissions	Showing Alarm Notice Alarm ♦ ● ♦ Alarm Notice ♦ ●	Setting Permissions	Start Here ● ◆ S! Appli ◆ ● ◆ Appli Library ● ● Select application ● ● ● ● Permission ● ● ● See below
		Showing S! Appli Notice Notification ⇒ ● ⇒ Start Notice ⇒ ●		Customizing Permissions for S! Appli Operations Select item \Rightarrow (\bigcirc \Rightarrow Select option \Rightarrow (\bigcirc
				Resetting Permission Settings

Opening properties

Reset Settings + • + Yes + •

● → S! Appli → ● → S! Appli Library → ● → Select application → ◎ → Details → ●



Moving S! Applications to Memory Card	 S! Appli S S! Appli Library S Select application S ([/w]) Complete selection S ([/w]) When an older version of the SI Application is saved, choose Yes or No and press S. Repeat application selection step, as needed, before pressing S. Some S! Applications may not be moved to Memory Card.
Changing S! Application settings	Start Here ● > Sl Appli ● > Settings ● > See below Setting Backlight Status Backlight ● ● Switch On/Off ● ● Select option ● ● ● Selecting Normal Settings applies Display Backlight settings.
	Disabling Backlight Flashing Backlight ★ ● ★ Blink ★ ● ★ Off ★ ● Disabling Vibration Vibration ★ ● ★ Off ★ ●
Deleting S! Applications	 Select appli → ● → SI Appli Library → ● Select application → ◎ → Delete → ● → Yes → ● Handset Code may be required. Cancel Screensaver to delete Screensaver S! Application.

Restoring default S! Application settings	● → S! Appli → ● → Settings → ● → Set to Default → ● → Yes → ●
Restoring default S! Appli Library	 S! Appli Settings Memory All Clear Yes Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai[®] service providers for details.) Memory All Clear deletes all downloaded S! Applications and Lifestyle-Applications.
Synchronizing Memory Card S! Applications with 944SH	● → S! Appli → ● → Settings → ● → Synchronization → ● → Yes → ●
Opening Java [™] license information	● ⇒ S! Appli ⇒ ● ⇒ Information ⇒ ●



Mobile Widget

Operations in Standby

Selecting widget display option	 (3) ◆ (2) ◆ Settings ◆ (2) ◆ Show Widget ◆ (4) ◆ Select option ◆ (2) (4) Always On: Widgets always appear. (7) Always On: Widgets always appear. (7) Always Off: Widgets always appear even when (3) is pressed. (Reconfigure via Show Widget in Standby Display menu.)
Moving widgets	 ③ ⇒ ③ Select widget ⇒ ◎ ⇒ Move ⇒ ● ⇒
Moving widgets to front/back	 (5) ⇒ (5) Select widget ⇒ (2) ⇒ Operation ⇒ (1) ⇒ To Front or To Back ⇒ (1)
Updating view	 ③ ⇒ ④ Select widget ⇒ ☺ ⇒ Operation ⇒ ● ⇒ Update View ⇒ ●
Removing multiple widgets at once	(S) ← (S) ← Operate from List ← (O) ← Remove ← (O) ← Select widget ← (O) ← Complete selection ← (V) ← Yes ← (O)
Locking widgets	(5) ★ (2) ★ Settings ★ (2) ★ Lock Settings ★ (2) ★ On ★ (2) • Handset Code is required to re-select Off.

Managing • Widget • • • Widget Contents • • ♦ Widget or Widget(Sub-Display) ♦ ● ♦ Select widget $\Rightarrow \textcircled{a} \Rightarrow Details \Rightarrow \textcircled{o}$ **Opening properties** • Select widget other than S!速報ニュース/S!ともだち状況, 步数計 or 家計簿. ● → Widget → ● → Widget Contents → ● Saving widgets to ♦ Widget ♦ ● ♦ Select widget ♦ ◎ ♦ Add to Icon View + • + Select page + • + Icon View Specify target location + • • Widget • • • Widget Contents • • Slowing pointer ♦ Widget ♦ ● ♦ Select widget ♦ ● ♦ ∞ ♦ Cursor Speed + • Slow + • + speed • May be unavailable for some widgets.

Settings

Changing automatic update interval	● → Widget → ● → Settings → ● → Auto Refresh → ● → Select interval → ●
Receiving updates automatically while outside Japan	● → Widget → ● → Settings → ● → AutoConnect Abroad → ● → On → ●
Hiding confirmation outside Japan	● → Widget → ● → Settings → ● → Set Use Abroad → ● → Off → ●
Disabling cookies	● → Widget → ● → Settings → ● → Cookies → ● → Disabled → ●
Deleting cookies	● → Widget → ● → Settings → ● → Delete Cookies → ● → Yes → ●

S! Quick News & S! Friend's Status Widget (S! Quick News)


Adding news items	 Select S! Quick News & S! Friend's Status widget ・ ・ ・
Changing news scroll speed	Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status widget Image: Solution of the second status
Showing unread news only	Select S! Quick News & S! Friend's Status widget ★ @ ★ Operation ★ ● ★ Content Menu ★ ● ★ News Display ★ ● ★ Target News ★ ● ★ Unread Only ★ ●

S! Quick News & S! Friend's Status Widget (S! Friend's Status)

Assigning members	 Select S! Quick News & SI Friend's Status widget ⇒ a → Operation ⇒ • Content Menu → • → Assign Member → • Select category → • Select entry/ member ⇒ • + (Empty) → •
Managing members	Start Here ③ ◆ Select S! Quick News & S! Friend's Status widget ● ◆ Select member ○ ◆ Operation ● ◆ Content Menu ● ◆ See below ● ● ●
	Deleting Members Delete ⇒ ● → Yes ⇒ ●
	Changing Member Order Move $\Rightarrow \textcircled{O} \Rightarrow \textcircled{O}$ (Up) or \textcircled{O} (Down) $\Rightarrow \textcircled{O}$
	Changing Member Icons Change Icon → ● → Select Pictogram → ●



Troubleshooting

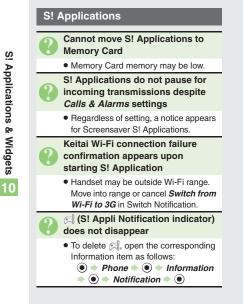



Calendar & Tasks 11-2
Calendar 11-2
Tasks 11-6
Alarms11-8
Using Alarms 11-8
Wakeup TV11-10
Using Wakeup TV 11-10
Relaxation Time 11-12
Playing Animation with Music &
Illumination 11-12
Household Accounts 11-13
Managing Household Expenses 11-13
Calculator 11-17
Using Calculator 11-17
Expenses Memo11-18
Adding Expenses 11-18
Osaifu-Keitai [®] 11-19
Osaifu-Keitai [®] (Japanese) 11-19
Locking IC Card 11-20
Simulated Call 11-23
Faking Incoming Calls 11-23
Stopwatch11-24
Using Stopwatch 11-24
Countdown Timer 11-25
Using Countdown Timer 11-25
World Clock 11-26
Opening World Clock 11-26
Hour Minder11-27
Using Hour Minder 11-27

Pedometer	11-28
Using Pedometer	11-28
Compass	11-30
Using Compass	11-30
S! GPS Navi	11-31
Using S! GPS Navi	11-31
Document Viewer	11-34
Opening PC Documents	11-34
Notepad	11-35
Saving Text	11-35
ASCII Art	11-36
Using ASCII Art	11-36
Voice Recorder	11-37
Recording/Playing Voice	11-37
Scan Barcode	11-38
Scanning Barcodes	11-38
Create QR Code	
Creating QR Codes	11-39
Scan Card	11-40
Scanning Business Cards	11-40
Scan Text	11-41
Scanning Text	
Kanji Grabber	11-42
Using Kanji Grabber	11-42
Additional Functions	11-43
Troubleshooting	11-56

11

Handy Extras



Calendar & Tasks

Calendar

Opening Calendar ● ◆ *Tools* ◆ ● ◆ In PIM/

Life menu, *Calendar* \Rightarrow \bigcirc



Calendar Window

• Press 🕑 to toggle Calendar view.

Key Assignme	nts
--------------	-----

All Views


Open Previous Page	$\mathbf{X}_{\mathrm{min}}^{\mathrm{+}\mathrm{c}}$
Open Next Page	
Open Help	

1Month/3Month View

<u> </u>	
Select Date	• • • • • • • • • • • • • • • • • • •
Go to Current Date	5 🐔
6Month View	
Go to Current Month	5 .*.
Select Month	
Week View	
Select Date	\odot
Select Time Block	٢

Spinguru Log Calendar (Spinguru Log)

Long Press () in Calendar window to switch to Spinguru Log Calendar (Spinguru Log); circle finger around Vector Pad for operation. Select a date and press () to save/check schedules, view operation history (mail records, call log, etc.), and more.

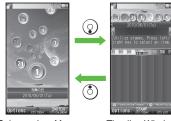

Spinguru Log Menu

Timeline Window

Opening Help

[Spinguru Log Menu]/[Timeline Window] ⓒ ➡ Explain Operation ➡ ● ■ To return, press ●. Returning to Calendar Window [Spinguru Log Menu] ⓒ (Long) Accessing Operation History, Etc. [Timeline Window] ⓒ (Long)

Advanced



Changing default view Jumping to specified date Changing date color Selecting task view option Adding stamps (1Month/3Month View)
Hiding schedules Saving additional holidays Hiding/showing holidays (P.11-43)

Handy Extras

Calendar & Tasks Enter subject **>** Alarm: 🗭 🔘 Saving Schedules *Alarm Time:* **♦ ● ♦** Select Follow these steps to save subject, time \Rightarrow (\bigcirc) \Rightarrow (\checkmark) Category, start/end date/time, Alarm and History Preset Definable ☺No Category schedule details: *Description:* **♦ ● ♦** Enter Private (Enter Subject or Description to save entry.) @Feast schedule details **▶** ● ♥Date In Calendar window, select ₩Travel date 🌩 🔘 🐨 🗭 Saved @Drive X Shopp i ng Selecting Category from History **N**Dinner & Hobby In (2), (2) History (2) Select Category ♦ <Add New Entry> @Sports ♦ ● ♦ From □ 宮写真の日 🕮 Viewing Selecting Custom Category In (2), (••) Definable (•) Select <Add New Entry> 🌩 🖲 Category 🕈 💽 🕈 From 🕞 • Preset
Select All-Day Schedule Category () In \bigcirc . \boxtimes \Rightarrow \bigcirc \Rightarrow From \bigcirc Custom Alarm Time In ⓒ, Alarm Time: ♥ ● ♥ Other ♥ ● ➡ Enter date/time ➡ ● ➡ ∞ ➡ New Entry From 🕤 Category: *Meeting Start: 10/06/01 16:00 10/06/01 16:00 End: • • • Enter end date/time 🌩 🗩

Advanced

Setting Location Creating Categories Saving repetitive schedules Editing entries Changing Alarm tone/video & duration Changing Alarm volume Selecting Vibration option (And more on P.11-44)



Handy Extras 1

Calendar & Tasks

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm to Return to Standby

While Alarm sounds/vibrates, press (),
 or ()

Stopping Alarm to Open Schedule

 While Alarm sounds/vibrates, press a key other than (), () or ().

When Another Function is Active

Alarm may not activate until handset returns to Standby.

Incoming Calls

• Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

Opening	Schedules/Tasks
	alendar window, select ♦ ●
	 < 10/06/01(Tu) ▷ → <add entry="" new=""></add>
	▲ YConference 16:00-17:00 ⑦写真の日
	Schedule List
Selection	ct schedule or task 🕈 🖲
3 8	Standby returns
Opening Ta In ⊘, se <i>Tasks</i> ∎	elect task 🕈 🖻 🕈 Go to
[Calenc Tempor	Secret Entries lar Window] ^(©) → Unlock rarily → (○) → Enter Handset
Code 🛢	\bullet \bullet

Opening Related Message

Open schedule-related messages saved from Messaging message list.



• Related message opens.

• To return to schedule window, press (MARCO).

Deleting Message from Schedule After (1), (●) → Related Mail: → (●) → Yes → (●) → (∞)

Advanced



Searching entries Checking memory status Deleting all entries Deleting entries by specifying week (Week View) Deleting entries by specifying month (1Month/3Month View) Deleting entries in six months (6Month View) (P.11-45)

11-4


Information Link

Set to show or hide the following information in Calendar.

Reservation	TV Timer and TV	
List	Depending Times entries	
LIST	Recording Timer entries	
	Birthdays entered in	
Birthday		
	Phone Book	
What is today?	Preset anniversaries,	
(Japanese)	commemorative days, etc.	
(uapanese)	commentorative days, etc.	
 In Calendar window, Calendar Settings ⇒ ● Data to Show ⇒ ● 		
Select item ♦ • (□/☑)		

Spinguru Log Information Link

• In Spinguru Log, operation history of various functions are also displayable.

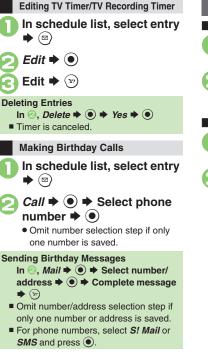

Deleting Schedules

One Entry





Tasks

Saving Tasks

Follow these steps to save subject, due date/time, Alarm and task details: (Enter Subject or Description to save entry.)

 \bigcirc \Rightarrow Tools \Rightarrow \bigcirc \Rightarrow In PIM/ Life menu, *Tasks* **•** •

Incomplete Completed ⇒ <Add New Entry> <Add New Entry> ▶ ● Enter subject 🗭 🖲 Due Date & Time 2010 / 06 / 01 15 : 05 No limit Check Accept

R

```
Enter due date/time > •
```

New Entry Subject: Birthday party Due Date: 10/06/01 18:00 No Alarm Priority: Normal

Alarm: 🗭 🔘 *Alarm Time:* **♦ ● ♦** Select time \Rightarrow \bigcirc \Rightarrow \bigcirc *Description:* **♦ ● ♦** Enter task details 🗭 🖲 (𝔄) ➡ Saved Task with No Due Date/Time In ②, 🖾 🕈 ● 🗭 From 🕗 **Custom Alarm Time** In ⓒ, Alarm Time: ♦ ④ ♦ Other ♦ ● ➡ Enter date/time ➡ ● ➡ 🐨 ➡ From 🕗

Advanced

11-6

Handy Extras

11

🕙 🕒 Hiding tasks 🔍 Editing tasks 🔍 Setting priority 🔍 Changing Alarm tone/video & duration 🔍 Changing Alarm volume 🔍 Selecting Vibration option Sounding Alarm tone even in Manner mode (P.11-45 - 11-46)

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm to Return to Standby

While Alarm sounds/vibrates, press (),
 or ()

Stopping Alarm to Open Task

• While Alarm sounds/vibrates, press a key other than (), (a) or ().

When Another Function is Active

• Alarm may not activate until handset returns to Standby.

Incoming Calls

Advanced

 Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

Opening Tasks		
● → <i>Tools</i> → ● → In PIM/ Life menu, <i>Tasks</i> → ●		
Tasks All incomplete ◆ cAdd New Entry> ● Birthday party 10/06/01 18:00		
Task List		
 Use is to open Completed or Incomplete task list. 		
Select task ➡ ●		
■ Task Birthday party 12010/06/01 18:00 ▲ 2010/06/01 17:55 ●Normal		
Standby returns		
Accessing Secret Entries After ●, ◎ → Unlock Temporarily ◆ ● → Enter Handset Code → ● Marking Tasks as Completed After ●, select task → ∞		

Deleting Tasks One Entry I In task list, select task ⇒ ⇒ Delete ⇒ ● This Task ⇒ ● Yes ⇒ ● All Completed Tasks I In task list, ⇒ Delete ⇒ ● All Comp. Tasks ⇒ ● + Yes ⇒ ●



Handy Extras

11

Using Alarms


Setting Alarm

Follow these steps to set Alarm to sound at a specific time on a specific day of the week: (Set Snooze--Alarm repeats at set interval--Alarm Volume and Duration.)







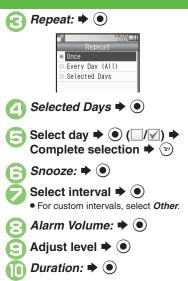



Advanced



Editing entries Saving entry name Changing Alarm tone/video Setting handset to vibrate at Alarm Time Sounding Alarm tone even in Manner mode Activating Alarm based on World Clock time (P.11-46)

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



Stopping Alarm

Press a key (except swith handset closed).

When Another Function is Active

• Alarm may not activate until handset returns to Standby.

Incoming Calls

• Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

When Snooze is Set

Alarm repeats at the set interval. Other Alarms do not activate while handset is Snoozing.

Canceling Snooze

- While Snoozing, $\bigcirc \Rightarrow$ Yes $\Rightarrow \bigcirc$
- Snooze is automatically canceled after a period of time.


Canceling Alarm

Switch Off 🕈 🖲

Reactivate entry to use the same settings.

Reactivating Entry

In 🕗, Switch On Þ 💽

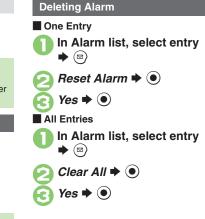



Wakeup TV

Using Wakeup TV

Setting Wakeup TV

Follow these steps to activate TV at a specific time on a specific day of the week:

- Complete TV Area setup beforehand.
- TV may not activate in poor signal conditions.

 \bullet **\bullet** Tools **\bullet** \bullet **\bullet** In PIM/ Life menu, Wakeup TV •







Activating TV Once or Daily In (2), Once or Every Day (All) \Rightarrow (0) ➡ From ☺ Selecting/Canceling All Days In 🕞, 🖾 🗭 Check All or Uncheck All •• **Excluding Holidays** In \bigcirc , select day \Rightarrow \bigcirc (\square/\square) \Rightarrow Complete selection
 Except Holidays $\Rightarrow \bigcirc (\checkmark) \Rightarrow \bigcirc \Rightarrow$ From \bigcirc **Canceling Alarm** Alarm activates at Wakeup TV time. To cancel Alarm, follow these steps: [Wakeup TV Menu] Alarm On/Off: ● **●** Off **●** ● From ⓒ **Adjusting Alarm Volume** [Wakeup TV Menu] Alarm Volume: ● ◆ Adjust level ◆ ● ◆ From 😔



11

11 - 10

At Wakeup TV Time

TV activates after Alarm.



Stopping Alarm Instantly

• While Alarm sounds/vibrates, press a key (except source).

When Another Function is Active

• TV may not activate depending on the function.

After TV is On for a Period of Time


• A confirmation appears. Choose *Yes* and press (•) to exit TV.

Canceling Wakeup TV
In Wakeup TV list, select entry ➡ ☺
 Wakeup TV Off • Reactivate entry to use the same settings.
Reactivating Entry In ⊘, <i>Wakeup TV On</i> ⇒
Deleting Wakeup TV
One Entry In Wakeup TV list, select entry entry @ <i>Reset Alarm</i> Yes All Entries In Wakeup TV list, select entry @
2 Clear All ቅ ◉ 3 Yes ቅ ◉



Relaxation Time

Playing Animation with Music & Illumination

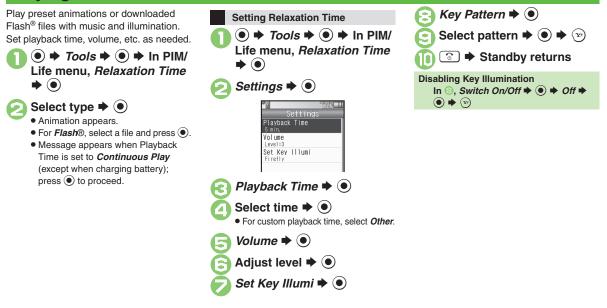

Managing Household Expenses


Scan receipts with mobile camera to manage expenses on handset.

Setup

Specify closing day, closing month and budget for the month.



Household Accounts Window

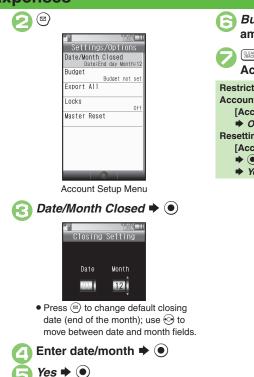

Budget ⇒ ● ⇒ Enter amount ⇒ ●
 Household Accounts window returns
 Restricting Access to Household Accounts by Handset Code [Account Setup Menu] Locks ⇒ ●
 On ⇒ ●
 Resetting Household Accounts [Account Setup Menu] Master Reset
 ● ⇒ Enter Handset Code ⇒ ●
 ★ Yes ⇒ ●



Handy Extras

Saving Entries



Scanning Receipts

Scan receipts with mobile camera to enter date, expense items, fees/prices and total amount automatically.

Scan may fail if receipt is too long, folded, faded, etc.; some formats are not supported.

In Household Accounts window, select scan receipt panel 🔘

Frame receipt on Display 62


° 1.1	2º 🗎
Keep lens approx.	10cm away.
2010年6,	月1日
1234547 タマネギ	¥150
1238941 ‡†∿´ヅ	¥140
1239415 J-t-	¥135
1232249 レイトウオカズ	¥ 248
1238656 ∃-7´ルト	¥120
合計	¥ 793

Scan Window

· Frame date, expense items and total amount. Align text parallel to reference lines



• To cancel, press 💬.

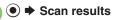

Scan results appear

	Receipt	ì
- 2	010/6/1(T	ue)
Shop 未登録店	Pai 現金	d 🔊
Category	Total	¥793
🖈 972	74	¥150
★ キャ/	עיא	¥140
🖈 🗆 – t	-	¥135
🖪 レイト	、ウオカズ	¥248
🖈 🗆 – ć	ブルト	¥120

• To add, delete or edit expense items, see P.11-15 "Entering Manually."



• Entry is saved.

Opening Operation Guide


[Scan Window] (>>)

Press
 to return to scan window.

Key Assignments in Scan Window

Toggle Focus Mode	3 *
Focus Lock	3 *)
Mobile Light On/Off	(#,š)
Adjust Brightness	\odot
Open Help	




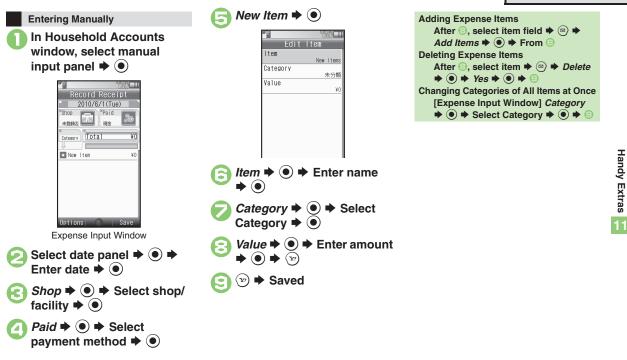

Advanced

Handy Extras

Benaming icon labels Exporting Household Accounts data (P.11-47)

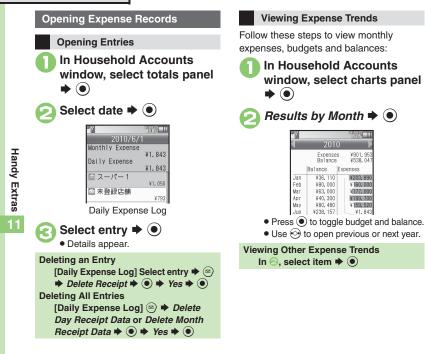



Using Calculator

Advanced

● **→** Tools **→** ● **→** In PIM/ Life menu, *Calculator* \Rightarrow \bigcirc



Calculator Window

Use Keypad to enter digits Calculate

Standby returns

Key Assignments	
+ (Add)	\odot
- (Subtract)	•
× (Multiply)	٢
÷ (Divide)	\bigcirc
= (Sum)	۲
C·CE (Clear)	CLEAR GO
CM (Clear Memory)	
RM (Recall Memory)	* .)
M+ (Add to Memory)	Ŷ
. (Decimal)	(¥ ^{±t}
+/- (Positive/Negative Value)	(#,s)
% (Percentage)	

Memory Calculation

- Clear Memory before starting new Memory calculations.
- Numbers saved in Memory remain until handset is powered off.

Incoming Calls

· Calculations are not affected. End the call to return to Calculator.

Using % Function

Use () to find definite percentage of a known value


Example: Calculate 30% of 800,000


- Enter 800,000 x 30 %
- 240,000 appears.



Handy Extras

Expenses Memo

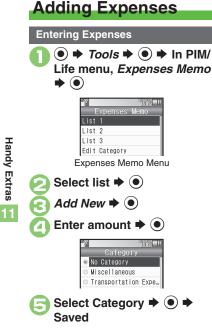

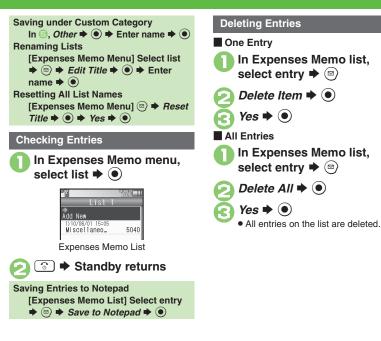



Changing Category of saved entry Changing amount Renaming Categories (P.11-47)

Handy Extras

11-18

Osaifu-Keitai[®] (Japanese)

Osaifu-Keitai[®] describes IC Card-equipped handsets that support e-money or credit functions/services. Osaifu-Keitai® encompasses a range of IC Card-based services on FeliCa-compatible SoftBank handsets. 944SH supports Osaifu-Keitai®. To use e-money, e-ticketing and reward points, etc., hold handset over a compatible reader/writer at shops, restaurants, and other retail outlets, etc.

Basics

Before using Osaifu-Keitai®, activate Lifestyle-Appli, complete registration, customize settings and charge accounts.

Starting Lifestyle-Appli

● **→** Tools **→** ● **→** In PIM/Life menu, Osaifu-Keitai ♦ ● ♦ Lifestyle-Appli ♦ ● ♦ Select application ♦ ●

Important Lifestyle-Appli Usage Notes


- Contact Osaifu-Keitai[®] service providers for Lifestyle-Appli registration and usage details
- Keep service passwords/customer service contact information, etc. in a separate place.

Using Osaifu-Keitai®

Follow these steps to conduct a transaction: Example: Making an electronic payment

- Lifestyle-Appli activation is not necessary.
- Transactions are possible even while handset is off (if battery is adequately charged).
- Calls/Internet transmissions do not affect transactions

Place $\overline{2}$ logo over reader/ writer Confirm scan results

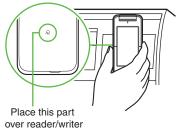

Align handset parallel to reader/writer.

Important Osaifu-Keitai® Usage Note

 SoftBank Mobile is not liable for damages resulting from accidental loss/alteration of IC Card data/settings.

When Placed Over Sensor

- If recognition is slow, move handset around slightly.
- Handset may respond automatically for some services.



Handy Extras

11

Advanced

🕙
Enabling to view e-money balances
Moving applications up/down Balance Info list
Removing applications from Balance Info list (P.11-48)


Osaifu-Keitai®

Locking IC Card

IC Card Lock

Restrict access to/prevent unauthorized use of Osaifu-Keitai[®] on handset.

 \bigcirc \Rightarrow Tools \Rightarrow \bigcirc \Rightarrow In PIM/ Life menu, *Osaifu-Keitai* **+** • Osaifu-Keitai 🔀 Lifestyle-Appli IC Card Settings IC Card Settings 🕈 🖲 1505 🔲 IC Card Settings IC Card Status IC Card Lock 0ff Remote Lock Interface Settings Balance Info 0ff Sub-Display On (Using) Set to Default

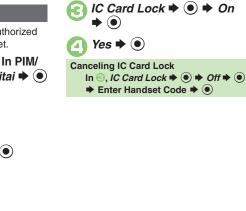

IC Card Settings Menu





Customizing handset response to reader/writer commands Opening IC Card properties Changing IC Card Lock notice recipient Changing required Missed Call count for Call Remote Lock Restoring default Osaifu-Keital® settings (P.11-48)

Handy Extras 11

Remote Lock

Disable Osaifu-Keitai[®] remotely by mail or phone.

Mail Remote	Send mail to activate
Lock	Remote Lock
Call Remote Lock	Call from a specified phone to activate Remote Lock



Preparation on Handset



- 🂫 IC Card Settings 븆 💽




Activating Remote Lock via Mail If handset cannot receive mail, IC Card Lock remains unset.

- Send S! Mail or e-mail to handset with password as subject
- After handset receives message, IC Card Lock is set and notice is sent as a reply.



Osaifu-Keitai®

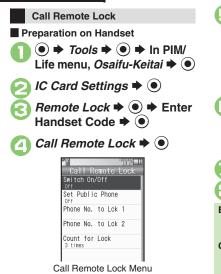

Activating Remote Lock via Phone If handset cannot receive calls, IC Card Lock remains unset.

Using one of the specified phones, call handset Send Caller ID.

Handset receives call End the call

• The call is recorded as a Missed Call.

Within three minutes, repeat 🚺 - 🕗 twice

• After the third Missed Call, IC Card Lock is set; a message announces Remote Lock activation. Confirm the message and end the call.

If Series is Interrupted by Another Call

 Missed Call count is reset. Start over from the beginning.

Handy Extras

Faking Incoming Calls


Handset rings to emulate an incoming call.

- Save name and phone number to show as Caller ID.
- Ringer may be muted by handset settings. To override Silent setting, see **P.11-49**.

Setting Simulated Call

● *Tools →*
 ● *→* In PIM/
 Life menu, Simulated Call
 →



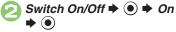

Set Caller

Set Caller

Handset rings with Caller ID "Withheld."
 Canceling Simulated Call

[Simulated Call Menu] Switch On/Off

🔶 🔿 🔶 Off 🔶 💽 🏓 🌚

Setting Wait Time

[Simulated Call Menu] Receive Timing

 $\bullet \odot \bullet$ Select time $\bullet \odot \bullet \odot$

Using Simulated Call



- Available regardless of handset position.
- Handset rings and incoming Voice Call window opens.
- Ringtone stops after a period of time.

In incoming Voice Call window, press 🔊

• Voice Call window opens. (Softkeys are dummies.)



Standby returns

When Receive Timing is Not Immediately

- Press 🕤 or 📰 during wait time to cancel Simulated Call activation.
- Simulated Call activation is canceled by incoming calls, Alarms, etc. during wait time.



Handy Extras

11


🕗 Starting via Simulated Call menu Clearing caller information Overriding Silent volume setting (P.11-48 - 11-49)


Advanced

Stopwatch

Using Stopwatch


Stopwatch stops if battery runs low.

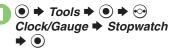

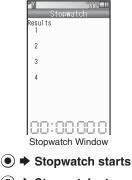

Stopwatch stops
 Press () to resume.

• Fless • to lesuille.

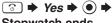



• Records are deleted when Stopwatch ends.



Handy Extras

11


Countdown Timer




Clock/Gauge ➡ Countdown




Timer Entry Window

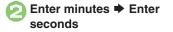

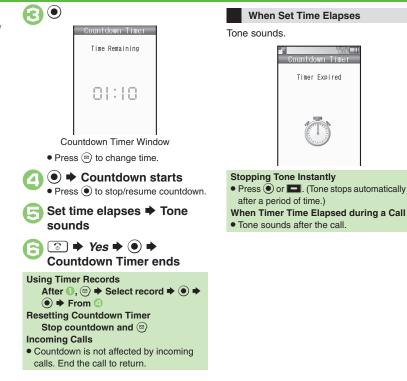



World Clock

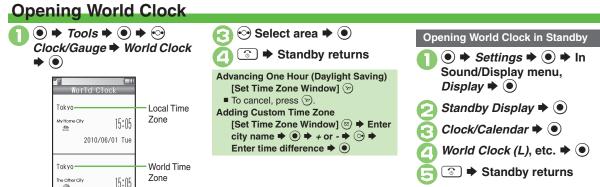

Handy Extras

 $\mathbf{2}\mathbf{0}$

Set Time Zone

2010/06/01 Tue

۲


Set Time Zone Window



Using Hour Minder

Setting Hour Minder


Follow these steps to activate the hourly time signal at selected hours:

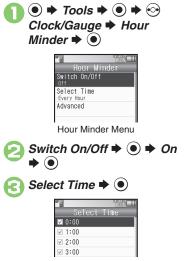



At Hour Minder Time

Hour Minder activates; sounds/vibrates by related settings.

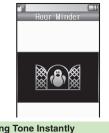

Handy Extras 11

Stopping Tone Instantly

Press a key.

When Another Function is Active

- Hour Minder does not activate. Incoming Calls
- Active Hour Minder stops for incoming calls.

Canceling Hour Minder

In Hour Minder menu. Switch On/Off **♦** ● **♦** Off >

Advanced

🕙 Changing Hour Minder tone/video 🔍 Setting handset to vibrate at Hour Minder Time 🔍 Sounding Hour Minder tone even in Manner mode 🔍 Activating Hour Minder based on World Clock time (P.11-49)



Pedometer

Using Pedometer


Getting Started

- Count based on a pace of approximately 100 steps per minute over even terrain.
- Accuracy may be affected by course, terrain, walking style, etc.
- Avoid holding the handset; use a body worn case or a strap, or place handset inside a pocket or bag.
 - Avoid sudden/erratic movements.
- Steps are not counted in the following cases:
 - While handset is off
 - For the first few steps
 - While handset vibrates
- Handset use may affect accuracy.
- Weight and pace entry required to view full Pedometer data.
- Use Pedometer only as a rough guide.

Adjusting Counter Sensitivity

seem undercounted

Tools
 Clock/Gauge
 Pedometer
 Etings
 Select option
 Select Low when steps seem overcounted; select High when they

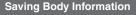

● 🕈 Tools 🕈 ● 🕈 📀 Clock/Gauge
Pedometer ▶ (●)




Pedometer Window

 If Pedometer is disabled, a confirmation appears. Choose Yes or No and press ().

Settings Body Info.



Body Info Menu

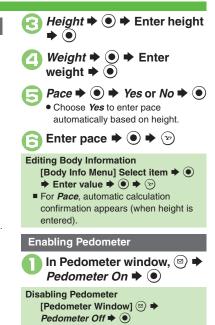



as 11

Viewing Step Count Records

In Pedometer window, 🖲



Steps Window

- Press 🐨 to toggle Daily/Hourly view.
- Press . or Kill to scroll down or up by one page.



Select time/date 🕈 🖲

• Hourly/daily step counts appear.

```
Pedometer window returns
```

```
      Pedometer Window Tabs

      Press ☺ to open Exercise and then Calories.

      Resetting Today's Step Count

      [Pedometer Window] ☺ ⇒ Reset

      Day's Data ⇒ ③ ⇒ Yes ⇒ ④

      Resetting Log


      [Steps Window] ☺ ⇒ Walk Data


      Reset ⇒ ④ ⇒ Yes ⇒ ④

      ■ Today's data is also reset.
```

Setting Targets

Information window opens, etc. when target is achieved for these items:

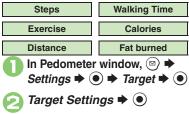


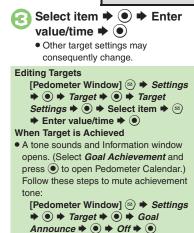

About Exercise (Ex)

 Ex and MET indicate amount and intensity of physical activity, respectively.
 Ex for walking is calculated by multiplying 3 METs by walking duration (hour).

Advanced

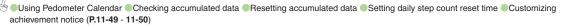



Handy Extras

11

Compass

Using Compass


Opening Compass





Compass Window

• Compass opens; use as a rough guide.

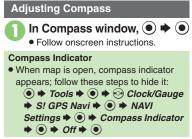

Using S! GPS Navi

Use this GPS navigation service to pinpoint current location, find routes to destinations, and more.

Provide current location to administrator upon request.

Precautions

- Location Information accuracy may be affected when GPS satellite/radio station signal reception is poor. Use S! GPS Navi under the open sky.
- SoftBank Mobile is not liable for any damages resulting from the provided Location Information.

Positioning

· Pinpoints current location using signals transmitted from GPS satellites.

Location Information Accuracy

- Probable distance from the actual position is classified into three accuracy levels, from level 1 (low) to 3 (high), indicated by the number of \Re s.
- A confirmation appears when accuracy level is 1 or 2; follow these steps: Yes or No

Starting Navi-Appli



- Ti
S! GPS Navi
Locate Me
Navi Appli
Location Navi
Location Mail
My Location List
S! GPS Navi Menu

Navi Appli 🕈 🖲 before 📀.

• To disable confirmation, press (

Yes 🌩 💿

Opening Navi Appli List

- [S! GPS Navi Menu] Navi Appli List
- To activate Navi Appli, select one and press ().

Selecting a Navi-Appli for S! GPS Navi

- [S! GPS Navi Menu] NAVI Settings +
- ♦ Select Navi Appli ♦ ♦
- Select application **+** •




Handy Extras

11

S! GPS Navi



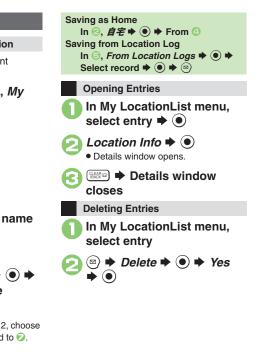

Advanced



Sending current location via mail Changing map source URL Disabling positioning Selecting Location Information transmission option Using My Location & Location Log Saving Location Log records to My Location Deleting Location Log records (P.11-50)

Handy Extras

Using Ichi Navi (Japanese)

Locate other S! GPS Navi-compatible handset users or lost handset.

- Ichi Navi requires a separate contract and initial settings.
- If Double Number is active, service uses Line A regardless of usage mode setting.
- For more about Ichi Navi, see SoftBank Mobile Website (P.17-24).

Advanced

• Handset connects to the Internet. Follow onscreen instructions.

Providing Location Information


Provide current location to administrator upon request.

- Location may be provided automatically upon administrator's request without confirmation.
- May be unavailable depending on subscription. For details, contact the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (P.17-43).

Location Information request arrives

Easy Position Rea. "Tanaka is searching for you." Do you accept Location Request?

 A confirmation appears. (Message shown above is for reference only.)

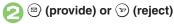

Information

Information window opens after your location is provided manually (by pressing (a)) upon Location Information request or automatically upon administrator's request. Select the item and press (a) to open log.



Document Viewer

Opening PC Documents

Supported File Formats:

PDF (.pdf)

Microsoft[®] Excel[®] (.xls)

Microsoft[®] Word (.doc)

Microsoft[®] PowerPoint[®] (.ppt)

- Some files may not appear correctly.
- Downloaded files are also supported.
- When transferring files from PCs, save to corresponding Memory Card folder (P.17-25).

● ◆ Tools ◆ ● ◆ Doc./Rec. ◆ Document Viewer ◆ ●

Select file 🕈 🖲

Zooming In/Out with Loupe (Magnifier) In open file, (≥) (Long) → Specify portion → (≥) → Zoom Out or Zoom In → (●)


Rey Assignments	
View Whole Page	۲
Scroll	٢
View Upper Left	18
Toggle Full Screen View On/Off	2 <u>*</u> /(???
View Upper Right	3
Zoom Out	4 tem / ►
Continuous Zoom Out	(Long)
Continuous 20011 Out	Long)
View Center	5.%
Zoom In	
Continuous Zoom In	(Long)
	Long)
View Lower Left	7 *se
Jump to Page	8 ***
View Lower Right	9 ⁶ wvz
Open Help	(Å*)
Next Page	(#,ij)
Previous Page	$\mathbf{X}_{\mathrm{min}}^{\mathrm{+}\mathrm{in}}$
Fit Width	<u>8</u> +)
Rotate 90 Degrees	(V)

Key Assignments



Saving Text



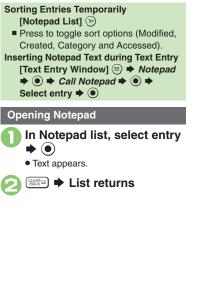




Delete All \Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc

Advanced

Decliting Notepad Searching text within all entries Inserting Notepad text into message text Sending entries via S! Mail Creating text files
Importing text files Checking memory status Opening properties (P.11-51)



ASCII Art

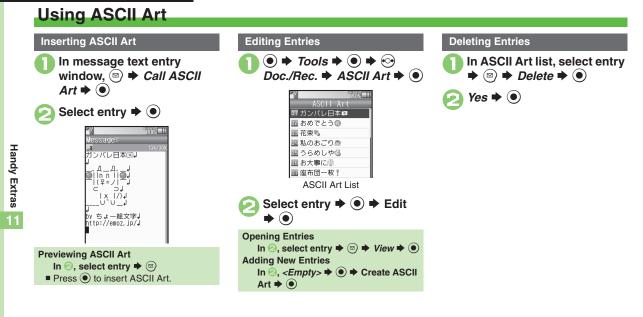



Voice Recorder

Recording/Playing Voice

Recording

- Recording stops if battery runs low while recording.
- Record conversations during calls via *Record Caller Voice*.

● ⇒ Tools ⇒ ● ⇒ ☺
 Doc./Rec. ⇒ Voice Recorder
 ●



 Recording starts
 Recording ends
 Voice Recorder Save Playback Save and Send
 For Extended Voice, recording is saved automatically.

 Save ⇒ ●
 Play Before Saving In ○, Playback ⇒ ● ⇒ Playback starts ⇒ □ ⇒ Playback stops
 Starting Over In ○, □ ⇒ From ⊘

In recording window, ☺ ➡ Ring Songs Tones ➡ ●
Select file ➡ ●
Playing Files via Data Folder ● ⇒ Data Folder ⇒ ● ⇒ Ring Songs Tones ⇒ ● ⇒ Select file ⇒ ●
Playback Operations
Volume Control
Pause/Resume
Stop



Advanced



🖑 Saving longer recordings Sending Voice files via S! Mail Switching storage media (P.11-51)

Scan Barcode

Scanning Barcodes


Scan UPC/JAN (1D barcodes) or QR Codes (2D barcodes).

- Membership file or password may be required when scanning barcodes.
- · Some barcodes may not be scanned.

● ◆ Tools ◆ ● ◆ ⊙ Doc./Rec. ◆ Barcode/Scan ◆ ●

_			'Scan	_
Scan	Barc	ode		
Open	Barc	ode		
Crea	te QR	Code)	
Scan	Card			
Scan	Rece	ipt		
Kanj	i Gra	bber		
Scan	Text			
Scan	ned R	esul ·	s	

🕽 Scan Barcode Þ 💽

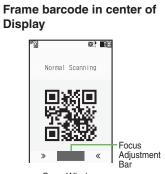

Scan Window

• Use Focus Adjustment Bar as a guide (better focus in darker blue).

● ◆ Scan starts

• If recognition takes time, slowly adjust the distance between handset and barcode.

• To cancel, press 💬.



Tone sounds → Scan results appear

- HI			1505	
	Scan	Res	ult	
EOp Lun Din ECo	Restaura en Hours ch: 11 a ner: 6 p ntact] b@xxx.xx] m -	3 pm 10 pm	

Split Data

- After scanning, a confirmation appears. Follow onscreen prompt(s).
- Scan results do not appear until all split data is scanned.

Starting Over

After \bigcirc , \heartsuit \blacklozenge Yes \blacklozenge \bigcirc \blacklozenge From \bigcirc

Key Assignments in Scan Window

Toggle Focus Mode	3 *
Switch to Photo Camera	7.5
Focus Lock	2 +)
Mobile Light On/Off	(#,š
Adjust Brightness	\odot
Open Help	

Advanced



Scanning during text entry Scanning continuously Reading saved barcode images Saving scan results Saving to Notepad Saving linked info to Phone Book Opening saved scan results Using linked info Using images as Wallpaper Saving images & melodies Copying text (And more on P.11-52 - 11-53)

Create QR Code

Creating QR Codes

Create QR Codes from these items on handset:

My Details
Ring Songs-Tones
Notepad

Large items are divided into multiple QR Codes.

Procedure

Follow these steps to create QR Codes from Data Folder files:



From Phone Book Entries In (3), Phone Book () Select entry 🗭 🔘 🗭 🕞 From My Details In e, My Details \Rightarrow o \Rightarrow e \Rightarrow oFrom Entered Text In ⓒ, Text Input ♦ ● ♦ Enter text ▶ (●) ▶ (∋ Switching Storage Media In \bigcirc , \boxdot \Rightarrow Save to \Rightarrow \bigcirc \Rightarrow Phone or *Memory* Card $\Rightarrow \bigcirc \Rightarrow \bigcirc$ Attaching to S! Mail In ⊚, ♥ ♦ Send As Message ♦ ● ➡ Complete message ➡ (∞) **Incoming Calls** • QR Code creation is not affected by incoming calls. End the call to return.



Scan Card

Scanning Business Cards

Scan business cards and save names, addresses, etc. to Phone Book.

- English business cards may not be scanned correctly.
- Some cards may not be scanned.


Scan Card 🌩 🖲

● ⇒ Tools ⇒ ● ⇒ ⊙
 Doc./Rec. ⇒ Barcode/Scan
 ●

11

Frame card on Display

Scan Window

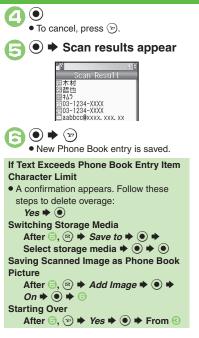

Key Assignments in Scan Window

Toggle Focus Mode	3 *
Switch to Photo Camera	7 #
Focus Lock	3 *)
Mobile Light On/Off	# ,ë
Adjust Brightness	••
Open Help	** ()



11-40

Scanning Text

Scan text and save it to Notepad, etc. Available Modes:

	Capture text in full screen and scan a selected line
Line	Capture a few lines of text and scan a selected line

- To toggle mode, press 🐨 in scan window.
- Some text may not be scanned.

● ⇒ Tools ⇒ ● ⇒ ⊙
 Doc./Rec. ⇒ Barcode/Scan
 ⇒ ●

Scan Text → ●
 To change mode, press ∞ in scan window.

Frame text in center of Display R9 🔲 •XX Co.. Ltd. •YY Co., Ltd. •ZZ Co.. Ltd. •** Co.. Ltd. •?? Co., Ltd. Scan Window (•) Scan starts • To cancel, press (). Select line **➡** ● **➡** Scan results appear $\bigcirc \bigcirc$ Scanned Text XX Co., Ltd. 🕨 Notepad Þ 💽 (⊠)

Correcting Text Type After \bigcirc , \textcircled{o} \Rightarrow Change Mode \Rightarrow \textcircled{o} \Rightarrow Select type \Rightarrow \textcircled{o} \Rightarrow From \bigcirc Editing Scanned Text After \bigcirc , \textcircled{o} \Rightarrow Select/Edit \Rightarrow \textcircled{o} \Rightarrow Select character \Rightarrow Select alternative from list or edit directly \Rightarrow From \bigcirc Starting Over $\ln \bigcirc$, \textcircled{o} \Rightarrow Yes \Rightarrow \textcircled{o} \Rightarrow From \bigcirc		
Key Assignments in Scan Window		
Toggle Focus Mode	3 *	
Switch to Photo Camera 7		
Focus Lock		
Mobile Light On/Off		
Adjust Brightness	\odot	
Open Help		

Handy Extras

Advanced

Scanning and pasting during text entry Scanning more text Saving scan results Saving linked info to Phone Book Opening saved scan results



Kanji Grabber

Using Kanji Grabber

Scan a word of up to ten kanji and look it up in dictionaries. Some kanji may not be scanned. \bigcirc \Rightarrow Tools \Rightarrow \bigcirc \Rightarrow \bigcirc Doc./Rec.
Barcode/Scan ▶) Kanji Grabber 🕈 🔘

Handy Extras

Frame kanji in Loupe



Scan Window



 \odot

0 **

	owneen to T hoto
lpe	Focus Lock
	Mobile Light On

Adjust Brightness

Open Help





Additional Functions

Calendar			$\underbrace{\text{Start Here}}_{\text{Calendar}} \bullet \bullet \bullet \text{Tools} \bullet \bullet \bullet \text{In PIM/Life menu,} \\ Calendar \bullet \bullet \bullet \bullet \circ \bullet \text{Calendar Settings} \bullet \bullet \bullet \\ \bullet \bullet \bullet \circ \bullet \bullet$
View Settings			 Set Holiday ⇒ ● ⇒ ∞ Private ⇒ See below
Changing default view	● → Tools → ● → In PIM/Life menu, Calendar → ● → ◎ → Calendar Settings → ● → Default View → ● → Select type → ●	Saving additional holidays	Adding Holidays <empty> ♦ ● ♦ Enter name ♦ ● ♦ Enter date ♦ ● ♦ Select frequency ♦ ● ♦ ♡</empty>
Jumping to specified date	● → Tools → ● → In PIM/Life menu, Calendar → ● → 8 → + Enter date → ●		Editing Added Holidays Select holiday → → Edit → ● → Name: →
	Start Here) ● → Tools → ● → In PIM/Life menu, Calendar → ● → See below		● → Enter name → ● → Date: → ● → Enter date → ● → Select frequency → ● → ♡
Changing date	By Days of the Week (a) → Calendar Settings → (a) → Set Color → (a) → By Week → (a) → Select day → (a) → Select color → (b)	Hiding/showing holidays	 ♦ Tools ♥ ● In PIM/Life menu, Calendar ♦ ● ○ ♥ Calendar Settings ♥ ● ♥ Set Holiday ♥ ● ♥ ○ Private or Public ♥ Select holiday ♥ ● (□/♥)
color	By Date Select date ⇒ (4≟) ⇒ Select color ⇒ (●) • Not available in 6Month View.		
	Resetting "By Date" Colors		
Selecting task view option	 ♦ Tools ♦ ● In PIM/Life menu, Calendar ♦ ● ♦ Calendar Settings ♦ ● ♥ Tasks View ♥ ● ♥ Select option ♥ ● 		
Adding stamps (1Month/3Month View)	● → Tools → ● → In PIM/Life menu, Calendar → ● → Select date → 22 → Select stamp → ●		
Hiding schedules	 Tools Tools In PIM/Life menu, Calendar Select date Select entry Secret: On Secret: 		



Saving/Editing Schedules				
Setting Location	 Tools → ● → In PIM/Life menu, Calendar → ● → Select date → ● → Select entry → ● → ● → Location: → ● → Enter location → ● → ♡ 			
	Start Here ● Tools ● In PIM/Life menu, Calendar ● ● ○ Calendar Settings ● > Set Category ● > See below			
Creating Categories	Renaming Categories Select Category ⇒ ● ⇒ Edit Category Name ● ● ⇒ Enter name ⇒ ●			
	Changing Icons Select Category ♦ ● ♦ Change Icon ♦ ● ♦ Select Pictogram ♦ ●			
	Resetting (a) → Reset Settings → (●) → Yes → (●)			
Saving repetitive schedules	 Tools Tools In PIM/Life menu, Calendar Select date Select entry Repeat: Select frequency Enter repeat time Yo Repeat time is not available for Every Year. 			
	Start Here \bullet \bullet \bullet In PIM/Life menu,Calendar \bullet \bullet \bullet Selectentry \bullet \bullet \bullet Selectentry \bullet \bullet \bullet SelectLink Setting: \bullet \bullet \bullet See below			
Saving S! Friend's Status information	Availability Answer Status: ● ⇒ Edit ⇒ ≫ ⇒ ≫ > ≫ >			
	Comment Comment: ● ● Set Category first.			

Editing entries	 Tools → ● In PIM/Life menu, Calendar → ● → Select date → ● → Select entry → ● → ● ⇒ Select item → ● → Edit in the same manner as saving schedules → ♡ 	
	$\begin{array}{c} \hline \texttt{Start Here} \textcircled{\bullet} & \neq \textit{Tools} \Rightarrow \textcircled{\bullet} \Rightarrow \texttt{In PIM/Life menu,} \\ \hline \textit{Calendar} \Rightarrow \textcircled{\bullet} \Rightarrow \texttt{Select date} \Rightarrow \textcircled{\bullet} \Rightarrow \texttt{Select} \\ \texttt{entry} \Rightarrow \textcircled{\bullet} \Rightarrow \textcircled{\bullet} \Rightarrow \textit{Alarm:} \Rightarrow \textcircled{\bullet} \Rightarrow \texttt{See below} \end{array}$	
Changing Alarm tone/video & duration	Alarm Tone/Video Assign Tone/Video: ● ● ● Select tone/file ● ● Select start point if required.	
	Duration Duration: ⇒ ● ⇒ Select time ⇒ ● ⇒ ∞ ⇒ ∞	
Changing Alarm volume	● ★ Tools ★ ● ★ In PIM/Life menu, Calendar ★ ● ★ ② ★ Alarm Settings ★ ● ★ Alarm Volume: ★ ● ★ Adjust level ★ ●	
Selecting Vibration option	\square Calendar \square $(\blacksquare) \square$ Alarm Settinds \square (\blacksquare)	
Sounding Alarm tone even in Manner mode	 ● ★ Tools ★ ● ★ In PIM/Life menu, Calendar ★ ● ★ ◎ ★ Alarm Settings ★ ● ★ For Manner Mode: ★ ● ★ Ring ★ ● ★ Yes ★ ● 	



Managing Schedules

Managing ochedules			
	$\underbrace{\text{Start Here}}_{\text{Calendar}} \textcircled{\bullet} \Rightarrow Tools \Rightarrow \textcircled{\bullet} \Rightarrow \text{In PIM/Life menu,} \\ Calendar \Rightarrow \textcircled{\bullet} \Rightarrow \text{See below}$		
Searching entries	By Part of Subject (6.≝) → Enter text → ●		
	By Category ি ⇒ Select Category ⇒ ●		
Checking memory status	(● → Tools → ● → In PIM/Life menu, Calendar → ● → Select date → ◎ → Memory Status → ●		
Deleting all entries	● → Tools → ● → In PIM/Life menu, Calendar → ● → © → Delete → ● → All Appointments → ● → Yes → ●		
	Start Here ● > Tools > In PIM/Life menu, Calendar ● > See below		
Deleting entries by specifying week (Week View)	Within One Week Select date ⇒ ☺ ⇒ Delete ⇒ ● ⇒ All This Week ⇒ ● ⇒ Yes ⇒ ●		
()	Up to the End of Previous Week Select date $\Rightarrow \textcircled{O} \Rightarrow Delete \Rightarrow \textcircled{O} \Rightarrow Up to LastWeek \Rightarrow \textcircled{O} \Rightarrow Yes \Rightarrow \textcircled{O}$		
	Start Here ● > Tools > In PIM/Life menu, Calendar ● > See below		
Deleting entries by specifying month (1Month/3Month	Within One MonthSelect date \Rightarrow (a) \Rightarrow Delete \Rightarrow (b) \Rightarrow All ThisMonth \Rightarrow (b) \Rightarrow Yes \Rightarrow (b)		
View)	Up to the End of Previous Month Select date \Rightarrow (a) \Rightarrow Delete \Rightarrow (b) \Rightarrow Up to Last Month \Rightarrow (c) \Rightarrow Yes \Rightarrow (c)		

Deleting entries in six months (6Month View)	● → Tools → ● → In PIM/Life menu, Calendar → ● → ◎ → Delete → ● → All This 6Months → ● → Yes → ●		
Tasks			
Task List			
Hiding tasks	 Tools → ● In PIM/Life menu, Tasks → Select task → ◎ → Edit → ● → Secret: → ● → On → ● → ♡ 		
Saving/Editing Tasks			
Editing tasks	 ● <i>Tools</i> ● ● In PIM/Life menu, <i>Tasks</i> ● ● Select task ● ◎ ● <i>Edit</i> ● ● ◆ Select item ● ● ◆ Edit in the same manner as saving tasks ● ♡ 		
Setting priority	● → Tools → ● → In PIM/Life menu, Tasks → ● → Select task → ◎ → Edit → ● → Priority: → ● → Select priority → ● → ♡		
	Start Here ● Tools ● In PIM/Life menu, Tasks ● > Select task ○ > Edit ● Alarm: ● > See below		
Changing Alarm tone/video & duration	Alarm Tone/Video Assign Tone/Video: ● ● ● Select tone/file ● ● Select tone/file ● ● Select start point if required.		
	DurationDuration:		
Changing Alarm volume			



Selecting Vibration option	 ● ★ Tools ◆ ● ★ In PIM/Life menu, Tasks ◆ ● ★ © ★ Alarm Settings ◆ ● ★ Vibration: ◆ ● ★ Select option ★ ● 	
Sounding Alarm	● <i>▶ Tools ▶</i> ● <i>▶</i> In PIM/Life menu, <i>Tasks ▶</i>	
tone even in	in $\textcircled{O} \Rightarrow \textcircled{O} \Rightarrow Alarm Settings \Rightarrow \textcircled{O} \Rightarrow For$	
Manner mode	Manner Mode: ♦ ● ♦ Ring ♦ ● ♦ Yes ♦ ●	

Managing Tasks

	Start Here ● ★ Tools ◆ ● In PIM/Life menu, Tasks ● ● ● Find ● ◆ See below		
Searching tasks	By Part of Subject By Subject ⇒ ● ⇒ Enter text ⇒ ●		
	By Due Date By Due Date ⇒ ● ⇒ Enter date ⇒ ●		
Sorting tasks by priority	● → Tools → ● → In PIM/Life menu, Tasks → ● → ◎ → Sort → ● → Priority → ●		
Checking memory status	● → Tools → ● → In PIM/Life menu, Tasks → ● → ◎ → Memory Status → ●		
Deleting all tasks	 ● Tools ● ● In PIM/Life menu, Tasks ● ● ● ○ ● Delete ● ● ▲ All Tasks ● ● Yes ● ● 		

Alarms • *Tools* • • • In PIM/Life menu, *Alarms* \Rightarrow \bigcirc \Rightarrow Select entry \Rightarrow \bigcirc \Rightarrow Select item \Rightarrow \bigcirc **Editing entries** Edit in the same manner as saving entries • 🔊 • *Tools* • • • In PIM/Life menu, *Alarms* ♦ ● ♦ Select entry ♦ ● ♦ Subject: ♦ ● ♦ Saving entry name Enter name 🔶 🔍 💌 Start Here) > Tools > • In PIM/Life menu, Alarms Alarms Assign Tone/Video: See below **Changing Alarm** Using Preset Tone or Data Folder File tone/video Select folder \Rightarrow (\bullet) \Rightarrow Select tone/file \Rightarrow (\bullet) \Rightarrow (\mathbf{v}) • Select start point if required. Using Customized Screen Tone/Video Customized Screen \Rightarrow \bigcirc \Rightarrow \bigcirc • + Tools + • + In PIM/Life menu, Alarms Setting handset to \bullet \bullet \bullet Select entry \bullet \bullet \bullet *Vibration:* \bullet \bullet vibrate at Alarm \Rightarrow On or Link to Sound \Rightarrow \bigcirc \Rightarrow \bigcirc · Select Link to Sound to allow compatible SMAF Time files to control vibration. Sounding Alarm • *Tools* • • • In PIM/Life menu, *Alarms* tone even in ♦ ● ♦ Settings ♦ ● ♦ For Manner Mode ♦ Manner mode • *Tools* • • • In PIM/Life menu. *Alarms* **Activating Alarm** ♦ ● ♦ Settings ♦ ● ♦ Link to World Clk ♦ based on World Clock time ● **→** On **→** ●



Wakeup TV

Editing entries	● → Tools → ● → In PIWLife menu, Wakeup TV → ● → Select entry → ● → Select item → ● → Edit in the same manner as saving entries → ♡	
	Start Here ● Tools ● In PIM/Life menu, Wakeup TV ● ● Select entry ● ● Assign Tone/Video: ● ● See below	
Changing Alarm tone/video	Using Preset Tone or Data Folder File Select folder ⇒ ● ⇒ Select tone/file ⇒ ● ⇒ ⊙ • Select start point if required.	
	Using Customized Screen Tone/Video Customized Screen ⇒ ● ⇒ ∞	
Sounding Alarm	● → Tools → ● → In PIM/Life menu, Wakeup	
tone even in	<i>TV</i> → ● → <i>For Manner Mode</i> → ● → <i>Ring</i> →	
Manner mode	● <i>♦ Yes ♦</i> ●	

Household Accounts

	Start Here ● Tools ● In PIM/Life menu, Household Accounts ● ● Select manual input panel ● ● See below	
Renaming icon	Shops Shop ⇒ ● Select icon ⇒ ⊕ ●	
labels	Payment Methods Paid ⇒ ● Select icon ⇒ ⊕ ●	
	Categories Category ⇒ ● ⇒ Select icon ⇒ ⊕ ⇒ Enter name ⇒ ●	

		● <i>▶ Tools </i> ♦ ● <i>▶</i> In PIM/Life menu,
	Exporting Household Accounts data	Household Accounts \Rightarrow \textcircled{O} \Rightarrow \textcircled{O} \Rightarrow Export All
		♦ ● ♦ Yes ♦ ●
		• Data is exported as a CSV file and saved to handset
	Accounts data	Data Folder (Other Documents).
		 Files are saved to Memory Card, if inserted.

Calculator

Copying calculation results	While result appears, $\textcircled{\baselinetwidth{\otimes}}$ \blacklozenge Copy \blacklozenge $\textcircled{\baselinetwidth{\otimes}}$
Changing exchange rate for currency conversion	 ● ★ Tools ★ ● ★ In PIM/Life menu, Calculator ★ ● ★ B ★ Money Converter ★ ● ★ Exchange Rate ★ ● ★ Domestic or Foreign ★ ● ★ Enter rate ★ ●
Converting currencies	 ● ★ Tools ★ ● ★ In PIM/Life menu, Calculator ★ ● ★ Enter amount of money ★ ◎ ★ Money Converter ★ ● ★ To Domestic or To Foreign ★ ● • Set Exchange Rate first.

Expenses Memo

Changing Category of saved entry	● → Tools → ● → In PIM/Life menu, Expenses Memo → ● → Select list → ● → Select entry → ● → Select Category → ●	
Changing amount	(● → Tools → ● → In PIM/Life menu, Expenses Memo → ● → Select list → ● → Select entry → ◎ → Change Amount → ● → Edit → ●	
Renaming Categories	 ● ★ Tools ★ ● ★ In PIM/Life menu, Expenses Memo ★ ● ★ Edit Category ★ ● ★ Select Category ★ ● ★ Enter name ★ ● 	

11-47

	Osaifu-Keitai [®]			Start Here ● > Tools ● In PIM/Life menu, Osaifu-Keitai ● > IC Card Settings ● >
Handy Extras 1	Enabling to view e-money balances	 Tools Tools In PIM/Life menu, Osaifu-Keitai IC Card Settings Balance Info IC Card Settings Emptys Emptys Select application For use with compatible Lifestyle-Applications. Start Lifestyle-Appli once before adding it to Balance Info list. 	Changing IC Card Lock notice recipient	Remote Lock * • + Enter Handset Code * • * Mail Remote Lock * • + Notice Settings * • Send Notice * • + See below Changing Recipient To Set Recipient * • + Set Recipient + • • Select method * • + Select/enter number/address * • + * * * * • Omit step of pressing ** when selecting Phone
	Moving applications up/down Balance Info list	 ● <i>Tools</i> ● ● In PIM/Life menu, Osaifu-Keitai ● ● <i>IC Card Settings</i> ● ● Balance Info ● ● ● Select application ● ○ Move ● ● ● Select target location ● ● 		 Book as setting method. After selecting Set Recipient and pressing (), phone number or mail address appears if a specific recipient has already been set; edit or delete as needed.
	Removing applications from Balance Info list	 Tools Tools In PIM/Life menu, Osaifu-Keitai IC Card Settings Balance Info Select application Delete 	Changing required	Disabling Notice Off ◆ ● ◆ ◆ ♡ ● ◆ Tools ◆ ● ◆ In PIM/Life menu, Osaifu-Keitai ◆ ● ◆ IC Card Settings ◆ ● ◆
	Customizing handset response to reader/writer		Missed Call count for Call Remote Lock	Remote Lock ⇒ ● ★ Enter Handset Code ★ ● ★ Call Remote Lock ⇒ ● ★ Count for Lock ● ★ Enter Missed Call count ★ ● ★ ⑦
	commands Opening IC Card properties	 Off ⇒ ● Tools ⇒ ● In PIM/Life menu, Osaifu-Keitai ⇒ ● ⇒ IC Card Settings ⇒ ● IC Card Status ⇒ ● 	Restoring default Osaifu-Keitai [®] settings	 Tools Tools In PIM/Life menu, Osaifu-Keitai IC Card Settings Set to Default Enter Handset Code Yes

Simulated Call

Starting via Simulated Call ● Peceive Simulated Call Simulated Call menu • ● Yes ● Simulated Call starts immediately regardless of Receive Timing setting. • ● Settings remain even after starting Simulated Call during setup.

Handy Extras

11-48

Clearing caller information	 ● ★ Tools ★ ● ★ In PIM/Life menu, Simulated Call ★ ● ★ Set Caller ★ ● ★ ◎ ★ Yes ★ ● ★ ♥ ★ ♥
Overriding Silent volume setting	● ★ Tools ★ ● ★ In PIM/Life menu, Simulated Call ★ ● ★ For Silent Mode ★ ● ★ Ring ★ ● ★ Yes ★ ● ★ ♡

Hour Minder

Changing Hour Minder tone/video	 Tools → O Clock/Gauge → Hour Minder → O → Advanced → O → Assign Tone/Video: → O → Select folder → O → Select tone/file → O → ♡ → ♡ Select start point if required.
Setting handset to vibrate at Hour Minder Time	 Tools Tools Clock/Gauge Hour Minder Advanced Vibration: On or Link to Sound Output Output
Sounding Hour Minder tone even in Manner mode	 Tools → ● → ○ Clock/Gauge → Hour Minder → ● → Advanced → ● → For Manner Mode: → ● → Ring → ● → Yes → ● → ♡ → ♡
Activating Hour Minder based on World Clock time	● ★ Tools ★ ● ★ ↔ Clock/Gauge ★ Hour Minder ★ ● ★ Advanced ★ ● ★ Link to World Clk: ★ ● ★ On ★ ● ★ ↔ ≫

Using Pedometer Calendar	 Tools Tools Clock/Gauge Pedometer P > Select date Oegree of achievement appears. Press Y = or #== to view previous or next month.
Checking accumulated data	 ● ★ Tools ★ ● ★ ↔ Clock/Gauge ★ Pedometer ★ ● ★ ⊕ ★ Accumulated Data ★ ● • Change in body information is reflected in the data.
Resetting accumulated data	 Tools Tools Clock/Gauge Pedometer Pedometer
Setting daily step count reset time	● → Tools → ● → ⊖ Clock/Gauge → Pedometer → ● → ◎ → Settings → ● → Count Reset Time → ● → Enter time → ● → Yes → ●

Pedometer



	Start Here ● Tools ● O Clock/Gauge ● Pedometer ● ● Settings ● Target ● ● Goal Announce ● ● On ● ● See below ● ● ● ● ●	Disabling positioning	 Tools Tools Olock/Gauge S! GPS Navi NAVI Settings Tositioning Lock On Handset Code is required to re-select Off.
Customizina	Changing Tone <i>Goal Sound</i> ⇒ ● ⇒ Select pattern ⇒ ●	Selecting Location Information	● ★ Tools ★ ● ★ ۞ Clock/Gauge ★ S! GPS Navi ★ ● ★ NAVI Settings ★ ● ★ Send Location Info ★ ● ★ Select option ★ ●
achievement notice	Changing Tone Volume Goal Volume → ● → Adjust level → ● Selecting Vibration Option Vibration → ● → Select option → ● Other Department		Start Here ● ● Select Option ● Start Here ● > Oclock/Gauge ● S GPS Navi ● > My Location List or Location Logs ● > See below > > See below
	Changing Duration Duration ● ● Select time ● ● For custom Duration, select Other and press ●.		Opening Map (∞) → Yes → ●
S! GPS Navi		Using My Location & Location Log	Showing Routes via Navi Appli (□) → Go to → (●) → Yes → (●) ● Follow onscreen instructions.
Sending current location via mail	Navi → ● → Location Mail → ● → Positioning complete → ● → Complete message → ♡		Inserting into Message Text ☺ → As Msg. Text → ● → Complete message → ♡
	after positioning, then complete message. Start Here ● Tools ● Ols Ols ● Ols ● Ols Ols Ols ● Ols Ols Ols Ols ● Ols Ols <td></td> <td>Saving to Phone Book (a) ⇒ Save to Ph.Book ⇒ (a) ⇒ As New Entry (a) ⇒ Complete other fields ⇒ (b) • To add to an existing entry, select As New Detail.</td>		Saving to Phone Book (a) ⇒ Save to Ph.Book ⇒ (a) ⇒ As New Entry (a) ⇒ Complete other fields ⇒ (b) • To add to an existing entry, select As New Detail.
Changing map source URL	Adding URLs <not set=""> ♦ ● ►nter URL ♦ ●</not>	Saving Location Log records to My Location	● ★ Tools ★ ● ★ ۞ Clock/Gauge ★ SI GPS Navi ★ ● ★ Location Logs ★ ● ★ Select record ★ ◎ ★ Set as My Location ★ ● ★ Name ★ ● ★ Enter name ★ ● ★ ◎
	Setting Destination URL Select URL	Deleting Location Log records	$\begin{array}{c} \hline \textbf{Name} & \bullet & \bullet & \bullet & \bullet & \bullet & \bullet \\ \hline \bullet & \textbf{Tools} & \bullet & \bullet & \bullet & \bullet & \bullet & \bullet \\ \hline \textbf{Navi} & \bullet & \bullet & \textbf{Location Logs} & \bullet & \bullet & \bullet & \bullet \\ \hline \textbf{Record} & \bullet & \bullet & \textbf{Delete All} & \bullet & \bullet & \bullet \\ \hline \textbf{Yes} & \bullet & \bullet & \bullet \\ \hline \textbf{Omit record selection step when deleting all records.} \end{array}$
	S! GPS Navi Sending current location via mail	* Pedometer * • * • * * * * * * * * * * * * * * *	Customizing achievement notice Pedometer * • • * • * Settings * • * On * • • On * • • * On * • • * On * • • * See below Changing Tone Goal Sound * • * Select pattern * • • Changing Tone Goal Sound * • * * Select pattern * • • Changing Tone Goal Sound * • * * * * * * * * * • * • • * • • * • * • * • * • * • • * • • * • • * • • * • • * • • * • • * • • * • • * • • * • • * • • * • • * •



Handy Extras 11

Suppressing	
Information window	● ★ Tools ★ ● ★ ۞ Clock/Gauge ★ SI GPS Navi ★ ● ★ NAVI Settings ★ ● ★ Inform Location ★ ● ★ Do not Show ★ ●
after sending	Navi 🗼 🖲 🔶 NAVI Settings 🔶 💽 🔶 Inform
Location Information	Location 🔶 🔍 🗭 Do not Show 🔶 🖲
automatically	

Notepad

Editing Notepad	Start Here ● Tools ● ⊕ Doc./Rec. ● Notepad ● ● Select entry ⊕ ● See below Editing Text Edit ● ● Edit ●
	Changing Category Change Category ⇒ ● ⇒ Select Category ⇒ ●
Searching text within all entries	● → Tools → ● → ⊖ Doc./Rec. → Notepad → ● → Select entry → ⊕ → Search → ● → Enter text → ●
Inserting Notepad text into message text	 Tools → ⊕ ⇔ ⇔ Doc./Rec. → Notepad Select entry → ⊕ → Sel → ⊕ → As Message Text → ⊕ → S! Mail or SMS → ⊕ → Complete message → ⊕ S! Mail Composition window opens automatically depending on character count.
Sending entries via S! Mail	 ♦ Tools ♦ ● ♦ ♀ Doc./Rec. ♦ Notepad ♦ ♦ Select entry ♦ ◎ ♦ Send ♦ ● ♥ Via Message ♦ ● ♥ Complete message ♥ ♥
Creating text files	 Tools → O Doc./Rec. → Notepad Select entry → O Setting/Manage Create Text File → O Enter name Save here → O

Importing text files	 Tools Tools Select entry Select entry Select file Import Text File
Checking memory status	● ★ Tools ★ ● ★ ↔ Doc./Rec. ★ Notepad ★ ● ★ Select entry ★ ◎ ★ Setting/Manage ★ ● ★ Memory Status ★ ●
Opening properties	 ● → Tools → ● → ⊙ Doc./Rec. → Notepad → ● → Select entry → ◎ → Details → ●

Voice Recorder

Saving longer recordings	● ★ Tools ★ ● ★ ☆ Doc./Rec. ★ Voice Recorder ★ ● ★ ◎ ★ Record Time ★ ● ★ Extended Voice ★ ● ★ ● ★ Recording starts ★ ● ★ Recording ends • Insert Memory Card to record in Extended Voice mode. (Recording is saved automatically.)
Sending Voice files via S! Mail	 Tools ⇒ (●) ⇒ (⊙) Doc./Rec. ⇒ Voice Recorder ⇒ (●) ⇒ (●) ⇒ Recording starts ⇒ (●) ⇒ Recording ends ⇒ Save and Send ⇒ (●) ⇒ Complete message ⇒ (⊙) Available in For Message mode.
Switching storage media	 Tools Tools Doc./Rec. Voice Recorder Select option Select option Available in For Message mode. Set to Ask Each Time to select media after every recording.



Scan Barcode

Scanning during text entry	Start Here In a text entry window, ● ◆ Scan ◆ ● ◆ Scan Code ◆ ● ◆ Frame barcode in center of Display ◆ ● ◆ See below Pasting All Scan Results ● ● ● ● ● ●
	Pasting a Part of Scan Results (a) → Select first character → ● → Highlight text range → ●
Scanning continuously	 Tools Tools Continuous Scan Barcode Continuous Scan Barcode Scan Barcode
Reading saved barcode images	● ★ Tools ★ ● ★ ۞ Doc./Rec. ★ Barcode/ Scan ★ ● ★ Open Barcode ★ ● ★ Select file ★ ●
Saving scan results	 ● ★ Tools ★ ● ★ O Doc./Rec. ★ Barcode/ Scan ★ ● ★ Scan Barcode ★ ● ★ Frame barcode in center of Display ★ ● ★ ◎ ★ Save ★ ●
Saving to Notepad	● ★ Tools ★ ● ★ ⓒ Doc./Rec. ★ Barcode/ Scan ★ ● ★ Scan Barcode ★ ● ★ Frame barcode in center of Display ★ ● ★ @ ★ Notepad ★ ●

Saving linked info o Phone Book	 Tools ⇒ ⊙ Doc./Rec. ⇒ Barcode/ Scan ⇒ ⊙ Scan Barcode ⇒ ⊙ ⇒ Frame barcode in center of Display ⇒ ⊙ ⇒ Select number or mail address ⇒ ⊙ ⇒ Save to Ph.Book ⇒ ⊙ ⇒ As New Entry ⇒ ⊙ ⇒ Complete other fields ⇒ ⊙ To add to an existing entry, select As New Detail. When MEMORY: appears in scan results, press ⊙ to enter the items underlined with a dotted line automatically in Phone Book entry window.
Opening saved acan results	 Tools > Ooc./Rec. Barcode/ Scan > Scanned Results > Ooc./Rec. Select file > Select file > Select file > Select file > Select a file and press > to rename files, open properties or delete files. Some files may not open.
	Start Here ● Tools ● Ooc/Rec. Barcode/Scan ● ● Scan Barcode ● Frame barcode in center of Display ● ● See below ● ● ●
	Dialing Numbers Select phone number ⇒ ● ▶ ♪
Ising linked info	Sending Messages Select mail address ♦ (●) ♦ Complete
	 message ⇒ When MAILTO: appears in scan results along with SUBJECT: or BODY:, press ● to enter the items underlined with a dotted line automatically in Mail Composition window. Accessing Internet Sites



Copy Telephone, Copy Address or Copy URL

Using images as Wallpaper Saving images & melodies Opening or playing files	 Tools Scan Barcode Frame barcode in center of Display Select image Set as Wallpaper Select inages smaller or larger than Display. Wallpaper Display options appear; follow onscreen prompts. Tools Scan Barcode Frame barcode in center of Display Select file Tools Scan Barcode Frame barcode in center of Display Select file Tools Scan Barcode Frame barcode in center of Display Select file Tools Scan Barcode Frame barcode in center of Display Select file Scan Scan Barcode Frame barcode in center of Display Select file Scan Scan Barcode Frame barcode in center of Display Select file Scan Scan Barcode Frame barcode in center of Display Select file 	Pasting to message text	Start Here Tools Scan Barcode Frame barcode in center of Display Frame barcode in center of Display Send Message See below All Text SI Mail or SMS See below All Text SI Mail or SMS Complete message Selected Text Selected first character Highlight text range S! Mail Composition window opens automatically depending on character count. Selected Text S! Mail Composition window opens automatically depending on character count. Select first character Highlight text range S! Mail cor SMS Select first character Mail Composition window opens automatically depending on character count. 	Handy
Using images for System Graphics	 Tools Scan Barcode Frame Scan Barcode Frame barcode in center of Display Select Select item Specify image area Some images may be usable without specifying image area. 	Copying text	depending on character count. Start Here ● → Tools → ● → ⊙ Doc./Rec. → Barcode/Scan → ● → Scan Barcode → ● → Frame barcode in center of Display → ● → See below Text ◎ → Copy → ● → Select first character → ● → Highlight text range → ● Number, Address or URL Select number, mail address or URL → ◎ →	Extras 11



Scan Card		So
Saving to Notepad	● ★ Tools ★ ● ★ ⊖ Doc./Rec. ★ Barcode/ Scan ★ ● ★ Scan Card ★ ● ★ Frame card in center of Display ★ ● ★ ● ★ ◎ ★ Notepad ★ ●	Sca pas ent
Pasting to message text	Start Here ● Tools ● > Doc./Rec. Barcode/Scan ● ● Scan Card ● ● Frame card in center of Display ● ● ● ● © ◆ Send Message ● ◆ ● ●	Sca text
	All Text ● ⇒ S! Mail or SMS ⇒ ● ⇒ Complete message ⇒ ♡ • S! Mail Composition window opens automatically depending on character count.	Sav
	Selected Text (a) → Select first character → ● → Highlight text range → ● → S! Mail or SMS → ● → Complete message → ⊕ • S! Mail Composition window opens automatically depending on character count.	Sav to I
Copying text	 Tools → O ⇒ O Doc./Rec. → Barcode/ Scan → O → Scan Card → O → Frame card in center of Display → O → O → O → Copy → O → Select first character → O → Highlight text range → O 	Op

Scan Text

Scanning and pasting during text entry	In a text entry window, ⓐ → <i>Scan</i> → ④ → <i>Scan Text</i> → ● → Frame text in center of Display → ● → Select line → ● → ●
Scanning more text	 Tools → O Doc./Rec. → Barcode/ Scan → O Scan Text → O → Frame text in center of Display → O → Select line → O → O → O → Continue Part or Scan More → O Select Continue Part to enter additional text or Scan More to enter text after a line break.
Saving scan results	 ● Tools ● ● ◆ Obc./Rec. ● Barcode/ Scan ● ● Scan Text ● ● → Frame text in center of Display ● ● Select line ● ● ● ● ◎ ● Save ● ●
Saving linked info to Phone Book	 Tools Tools Scan Fext Scan Text Frame text in center of Display Select line Select number or mail address Save to Ph.Book As New Entry Complete other fields To add to an existing entry, select As New Detail.
Opening saved scan results	 Tools Tools Construction Construction Construction Scane description Select a file and press to rename files, open properties or delete files. Some files may not open.



Using linked info	Start Here ● Tools ● > Doc./Rec. Barcode/Scan ● > Scan Text ● > Frame text in center of Display ● > Select > > line ● ● > See below > > Select phone number Select phone number ● ● > > > > > Select mail address ● > Complete > > Accessing Internet Sites Select URL ● ●	Copying text	Start Here ● Tools + ● Doc./Rec. + Barcode/Scan + ● > Scan Text + ● Frame text in center of Display + ● > Select line + ● ● > See below Text ● > Select first character + ● Highlight text range + ● Number, Address or URL Select number, mail address or URL + ● Copy Telephone, Copy Address or Copy URL ● ● ●
	Start Here \blacklozenge \blacklozenge \circlearrowright \circlearrowright \circlearrowright \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \circlearrowright <th colspan="2">Kanji Grabber Scanning and pasting during text In a text entry window, (a) → Scan → (a) → Kanji Grabber → (c) → Frame kanji in Loupe →</th>	Kanji Grabber Scanning and pasting during text In a text entry window, (a) → Scan → (a) → Kanji Grabber → (c) → Frame kanji in Loupe →	
Pasting to message text	 See below All Text S! Mail or SMS 	entry	(●) I Scan results appear I ●



Handy Extras 1

Troubleshooting



- Scanning over 35 characters at one time may yield poor results.
- Adjust to frame text in []. Letters at the ends may be distorted.



specified one.

S! Quick News	12-2
Receiving Content Updates	
(Japanese)	12-2
S! Information Channel	12-3
S! Information Channel & Weather	
Indicator (Japanese)	12-3
Content Downloads	12-4
Downloading Content (Japanese)	12-4
e-Books	12-5
Reading e-Books (Japanese)	12-5

S! Friend's Status	12-6
Using S! Friend's Status	12-6
S! Circle Talk	12-9
Using S! Circle Talk	12-9
Blog Tool	12-11
Blogging	12-11
Additional Functions	12-13
Troubleshooting	12-17

12

Entertainment



S! Quick News

Receiving Content Updates (Japanese)

View content updates or breaking news. Packet transmission fees apply (except when downloading via Wi-Fi).


Registering S! Quick News Items







• Handset connects to the Internet.

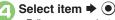

Follow onscreen instructions.



Opening Information

- Information appears.
- Press (a) to return to title list, or (b) to open next title.

Updating Items Manually

[S! Quick News List] Select item 🗭

Indicators

_			
6	Unread Special	_	Unread General
	news		news
Q.	Read Special		Read General
	news		news
	Unread News		Auto update
-8	Flash		disabled
	Read News		
	Flash		

Advanced



Setting S! Quick News automatic update Checking update schedule Deleting S! Quick News items Resetting S! Quick News List Changing background image Accessing source sites Disabling image download (P.12-13)

Entertainment 12

S! Information Channel

S! Information Channel & Weather Indicator (Japanese)

Subscribe to Japanese mobile periodicals that download to handset automatically; use Weather Indicator as needed. Packet transmission fees apply.

Service Registration & Content Subscription

 ● ► Entertainment ► ●
 ◆ S! Information Channel/ Weather ► ●



S! Information Channel Menu



• Handset connects to the Internet. Follow onscreen instructions.

New Received Information

Information window opens for new S! Information Channel info delivery.

While Information window appears, *S! Info. Channel* ◆ ●

- S! Information Channel page opens. Follow onscreen instructions.
- S! Information Channel page handling is similar to that of Yahoo! Keitai.

💿 🕈 Standby returns

Opening Unread Latest Issue [S! Information Channel Menu] What's New ♥ ● Opening Back Issues [S! Information Channel Menu] Back Issue ♥ ● ♥ Select date ♥ ●

Using Weather Indicator

After S! Information Channel registration, local area weather indicator appears in Standby.

Manual Update

[S! Information Channel Menu] Weather Indicator ➡ ● ➡ Manual Update ➡ ● ➡ Yes ➡ ●



Suppressing Information window for new received info Changing Display Size Changing scroll unit Copying text Hiding Weather Indicator in Standby Canceling Weather Indicator automatic updates Suppressing Information window for weather updates (And more on P.12-13 - 12-14)



Content Downloads

Downloading Content (Japanese)

Download media content via Yahoo! Keitai.

Via Free Content Providers


Download free Graphic Mail templates, e-Books, games, etc.

Content downloads are free, however, they require Internet connection incurring packet transmission fees (except when downloading via Wi-Fi).



Entertainment
👮 S! Information Chan…
🔍 S! Quick News
📨 Free Contents
🛒 S! Contents Store
🖘 Media Player
🖽 S! Friend's Status
🗑 S! Circle Talk
📓 Blog Tool
🖺 Digital Media Viewer
🛤 BookSurfing
📫 e-Book Viewer

Entertainment Menu

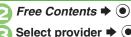

- Select provider
- Handset connects to the Internet. Follow onscreen instructions.

Via S! Contents Store



In Entertainment menu, S! Contents Store 🕈 🖲

 Handset connects to the Internet. Follow onscreen instructions.

Reading e-Books (Japanese)

Entertainment 🌩 🔘

Downloading e-Books

- Entertainment Entertainment \$\$ \$! Information Chan... \$\$ \$! Ouick News \$\$ Free Contents
- S! Contents Store
- ⇒ Media Player

Entertainment Menu

2



- Handset connects to the Internet. Follow onscreen instructions.
- Downloaded e-Books are saved to Data Folder (Books).

Note

 Alternatively, go to SH-web Mobile Internet site (ジャーブ・メーガーザイトSH-web in Bookmarks; see P.6-8) for e-Books.

Downloading Free e-Books

- In ⊘, Free Contents ♦ ♦ Tada-Hon or Tada-Komi ♦ ●
- Follow onscreen instructions.

e-Book Viewer

Read XMDF books and dictionary files. Some files may not be supported.

In Entertainment menu, e-Book Viewer ➡ ●

 e-Book Viewer starts. Refer to the e-Book Viewer help menu for operational instructions.

Digital Media Viewer

Read digital magazines and newspapers. Some files may not be supported.

In Entertainment menu, Digital Media Viewer ➡ ●

• Digital Media Viewer starts. Refer to the Digital Media Viewer help menu for operational instructions.

BookSurfing[®]

Download Contents Keys and read CCF files. Some files may not be supported.



In Entertainment menu, BookSurfing ➡ ●

• BookSurfing[®] S! Application starts. Refer to the BookSurfing[®] help menu for operational instructions.

Moving CCF Files via Memory Card

• When purchasing a new handset, move CCF files and retrieve Contents Keys to open the files. Some files may need to be re-downloaded.



Advanced

S! Friend's Status


Using S! Friend's Status

Exchange current usage status, mood, etc. with compatible handsets.

- Save and organize members in Groups.
- S! Friend's Status requires a separate contract and basic monthly fee.
- Set IP Service Setting to On.
- Set Connection status to Online.

First S! Friend's Status Use

Follow these steps to register a number saved in Phone Book; Status, Availability and Comment are sent to the members.

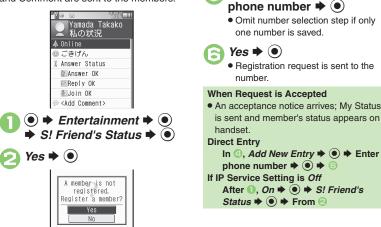

Yes 🌩 💿

Phone Book 🕈 💿


Select entry **▶** ● **▶** Select

R





Adding members Deleting members Moving members Renaming Groups Rejecting requests Updating manually Opening notices
Sending My Details image (And more on P.12-15 - 12-16)

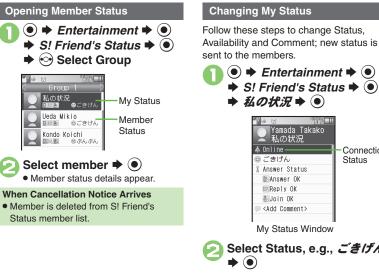

- 40/1/1/	
	1
Yamada Takako	
▲ 私の状況	
▲ 0nline	Connection
◎ ごきげん	Status
X Answer Status	
Answer OK	
Reply OK	
🔠 Join OK	
⊜ <add comment=""></add>	
My Status Windov Select Status, e.g.	

Status Template Window





Receiving Request from Unsaved Numbers

When a registration request arrives, a confirmation appears.



Yes → ●
Acceptance notice is sent; the number is registered.

Rejecting

- In (), $No \Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc$
- Rejection notice is sent; the number cannot be registered for 24 hours.
- For ConfirmLater, Information window opens.

Creating Status Templates

NBA

6

6

Save custom combinations of Status Icon and Status Label to each template.

*** 00 *******************************	L
聞ひまー ふあそぼー	
In Status Template window, ☺ ♦ New Entry ♦ ●	
• • •	
Enter name Þ 🖲	
<未定> ➡ ●	
Status Icon ♦ ● ♦ Select Pictogram ♦ ●	
Status Label ♦ ● ► Enter text ► ● ► 🕫	
Repeat € - 🕞 🔶 🔊 🕈 Saved	

Saving to Data Folder [Status Template Window] ⓒ Select template ♠ @ ♠ Save to DF ♠ ● ♠ Save here ♠ ● Loading Templates via Data Folder [Status Template Window] @ ♠ Add Template ♠ ● ♠ Select template ♠ ● Renaming Templates [Status Template Window] ⓒ Select template ♠ @ ♠ Edit Temp. Name ♠ ● ♠ Enter name ♠ ●



Advanced

Using S! Circle Talk

Use handset like a walkie-talkie to speak to multiple parties simultaneously.

- A subscription to S! Friend's Status is required.
- Packet transmission fees apply during S! Circle Talk.
- Set IP Service Setting to On.

Registering Members

Follow these steps to register a number saved in Phone Book:


- ⇒ Entertainment ⇒ ●
 ⇒ S! Circle Talk ⇒
 - When registering a member for the first time, member registration confirmation appears. Choose Yes and press ●, then skip ahead to ☉.

2	<add new<="" th=""><th>Entry> 🔶</th><th>$oldsymbol{ightarrow}$</th></add>	Entry> 🔶	$oldsymbol{ightarrow}$
	- TrNew	isos 💷	

Individual Group



- Omit number selection step if only one number is saved.
- Repeat (2) (3) to add members.

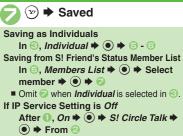



Advanced

S! Circle Talk

Initiating S! Circle Talk

Follow these steps to send S! Circle Talk requests to members:

(First, set Connection status to Online (P.12-7).)

➡ Entertainment ➡ ● (•) ♦ S! Circle Talk ♦ ●

> S! C/T Member List ⇒ <Add New Entry> ₩ Friend 🖗 Natsuyama Sora

Select member or Group

Transmission starts

ю • S! Circle Talk starts when request is accepted by a receiver. Loudspeaker activates automatically.

Direct Entry

Enter phone number $\Rightarrow \bigcirc \Rightarrow Call$ S! Circle Talk $\Rightarrow \bigcirc \Rightarrow \bigcirc$

S! Circle Talk Operations Speaking

- Press and hold (*) when Press and Hold **N** appears
- You have the floor



• Turn appears when you have the floor

- Keep holding **I** to speak Release Release released
 - Warning tone sounds before time limit.

Incoming Calls during S! Circle Talk

 Incoming calls are rejected. Set handset to exit S! Circle Talk to answer incoming calls as needed.

Canceling Loudspeaker

During S! Circle Talk,

- To reactivate, follow these steps:
- \bullet \bullet While message appears, \bullet

Exiting S! Circle Talk



 S! Circle Talk ends automatically when there is only one participant left, including yourself.


Rejoining S! Circle Talk

- Select most recent S! Circle Talk record
 Talk record Talk 🗭 🖲
- Not available when S! Circle Talk has ended or maximum number of participants are already engaged.

Accepting S! Circle Talk Request

- While handset is ringing/ vibrating, (•) • S! Circle **Talk starts**
- Alternatively, press .
- S! Circle Talk Operations: left

Advanced

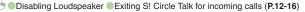

12-10

1....

Blogging

Save blog details to view or update blogs easily on handset.

Saving Blog Details

Setup for Posting via Mail

Follow these steps to save blog name and address for posting:





Entertainment



Advanced

Refer/Send by Yahoo! _

Refer/Send by PCSite/_____



Blog Tool

Posting to Blogs

Complete setup for posting via mail/ Internet beforehand.



Posting via Mail

In Blog Tool window, select entry



Blog by send Mail

- S! Mail Composition window opens with address entered.
- Omit 2 if no URL is saved for posting.



Posting via the Internet

In Blog Tool window, select entry

Blog by send Browser **+** •

- Page of URL saved in Blog's URL opens.
- Omit 🕗 if no address is saved for postina.
- If PC Site Browser message appears, follow onscreen prompts.

When UBLs for Yahoo! Keitai & PC Sites are Saved

After ②, select browser **>** •

Opening Blog Page

In Blog Tool window, select entry 🗭 🐨

- Page of URL saved in *Refer Blog's* URL opens.
- If PC Site Browser message appears, follow onscreen prompts.

When URLs for Yahoo! Keitai & PC Sites are Saved

After 1, select browser +



S! Quick News

Opening/Updating Items

Setting S! Quick News automatic update	 Entertainment Settings Automatic Update Select item Select update Select item Select update If a message appears, press If a message appears of <i>On</i>, items are updated every four hours. When General is set to <i>On</i>, items are updated once a day. 		
	Updating items may incur high packet transmission fees.Only available in Japan.		
Checking update schedule	● → Entertainment → ● → S! Quick News → ● → Settings → ● → Check Schedule → ●		
Deleting SI Quick News items	Start Here ● ⇒ Entertainment ● ⇒ S! Quick News ● ⇒ S! Quick News List ● ⇒ Select item ○ ⇒ See below		
	One Entry $-\# \Rightarrow \odot \Rightarrow Yes \Rightarrow \odot$		
	All Entries $\pounds \# \Rightarrow \textcircled{O} \Rightarrow Yes \Rightarrow \textcircled{O}$		
Resetting S! Quick	● → Entertainment → ● → S! Quick News → ● → Settings → ● → Delete S! Quick News		
News List	$Lists \Rightarrow \textcircled{\bullet} \Rightarrow Yes \Rightarrow \textcircled{\bullet}$		
	Not available during automatic updates.		

Other

Changing background image	 ● Entertainment ◆ ● ◆ S! Quick News ◆ ● ◆ Settings ◆ ● ◆ Change Skin ◆ ● ◆ Select pattern ◆ ●
Accessing source sites	 ● Entertainment ◆ ● ◆ S! Quick News ◆ ● ◆ S! Quick News List ◆ ● ◆ Select item ◆ ● ◆ Select title ◆ ● ◆ Select linked title ◆ ◆ Yes ◆ ●
Disabling image download	 ● ★ Entertainment ★ ● ★ S! Quick News ★ ● ★ Settings ★ ● ★ Show Image ★ ● ★ Off ★ ●

S! Information Channel

Receiving Information

Suppressing Information window for new received info	● → Entertainment → ● → S! Information Channel/Weather → ● → Notification → ● → Off → ●
Requesting re-delivery	 ● ★ Entertainment ◆ ● ★ S! Information Channel/Weather ◆ ● ★ Get Latest Contents ◆ ● ★ Yes ◆ ●

Information Pages

	On a page, ☺ ⇒ Settings ⇒ ● ⇒ Display Size ⇒ ● ⇒ Select size ⇒ ●
Changing scroll	On a page, ☺ ⇒ Settings ⇒ ● ⇒ Scroll Unit
unit	⇒ ● ⇒ Select unit ⇒ ●



Information window

for weather updates

Off 🔶 💿

	-
Copying text	On a page, ☺ ⇒ <i>Copy Text</i> ⇒ ● ⇒ Select first character ⇒ ● ⇒ Highlight text range ⇒ ●
Saving files to Data Folder	On a page, (a) → Save Items → (● → Select file → (● → Save → (● → Enter name → (● → Save here → (●) • Some files are saved automatically.
Opening page properties	On a page, ☺ <i>➡ Details ➡</i> ●
Weather Indicat	ors
Checking weather forecast	 ● ★ Entertainment ★ ● ★ SI Information Channel/Weather ★ ● ★ Weather Indicator ★ ● ★ Weather ★ ●
Changing weather forecast page font size	On a page, ☺ ⇒ Settings ⇒ ● ⇒ Font Size ⇒ ● ⇒ Select size ⇒ ●
Hiding Weather Indicator in Standby	 Entertainment Fattertainment Settings Standby Setting Off
Canceling Weather Indicator automatic updates	 ● ★ Entertainment ★ ● ★ SI Information Channel/Weather ★ ● ★ Weather Indicator ★ ● ★ Settings ★ ● ★ Icon Update ★ ● ★ Off ★ ●
Suppressing	Entertainment S S! Information Channel/Weather Weather Indicator

• Settings • • Weather Notif. • •

e-Books In open page, 🐨 🔶 文字列を北・- 🔶 🌢 Copying text range 🔶 🖲 🖲 🔶 Entertainment 🔶 🗩 e-Book Viewer 🔶 Opening non-944SH e-Books (Library) · Some files may not open. Start Here) Start Here Viewer See below Adding Folders $\textcircled{\begin{tmatrix} \hline \end{tmatrix} \bullet \end{tma$ Switching Folders $(\square) \Rightarrow$ Switch Folders \Rightarrow $(\bigcirc) \Rightarrow$ Select folder \Rightarrow (\bigcirc) **Renaming Folders/Files** Select folder/file + (a) + Rename + (b) + Using Library Enter name 🔶 🖲 **Moving Files** Select file $\Rightarrow \textcircled{a} \Rightarrow Move \Rightarrow \textcircled{b} \Rightarrow$ Select folder ♦ ● ♦ Move here ♦ ● **Deleting Folders/Files** Select folder/file $\Rightarrow (a) \Rightarrow Delete \Rightarrow (b) \Rightarrow Yes$ •• **Opening File Properties** Select file $\Rightarrow \boxdot$ \Rightarrow *Details* $\Rightarrow \odot$



Entertainment

S! Friend's Status

Members & Groups

Adding members	 ● <i>Entertainment ● ● S! Friend's Status</i> <i>● → ⊙</i> Select Group <i>● ⊙ → Add Member</i> <i>● →</i> Select method <i>● ● →</i> Select entry or enter phone number <i>→ ● → Yes → ●</i> 	
Deleting members	 ♦ Entertainment ♦ ● > S! Friend's Status > ● > Select Group > Select member > ◎ > Registration Release > ● > Yes > ● > Yes > ● Cancellation notice is sent; deleted members cannot be re-registered for 24 hours. 	
Moving members	● ◆ Entertainment ◆ ● ◆ S! Friend's Status ◆ ● ◆ ◇ Select Group ◆ Select member ◆ ◎ ◆ Change Group ◆ ● ◆ Select target Group ◆ ●	
Renaming Groups	● ★ Entertainment ★ ● ★ S! Friend's Status ★ ● ★ ↔ Select Group ★ ◎ ★ Edit Group Name ★ ● ★ Enter name ★ ●	
Rejecting requests	Start Here ● ► Entertainment ● ● > Start Here > Start Here Start Here > Start Here Start Here > Start Here Sta	
	Rejecting Requests from Unsaved Numbers Confirm if Registered Image: Confirm of the second sec	
	Rejecting All Requests Always Ignore ● ● Rejection notice is sent to all requesters automatically.	

Status & Availability

Saving custom Availability	Entertainment Settings Settings Status Settings Settings Setect
combinations	type ⇒ ● ⇒ Select Availability ⇒ ● ⇒ ⊗
	● → Entertainment → ● → S! Friend's
Changing Status	Status 🔶 🖲 🔶 📨 Settings 🔶 🕘 🔶 Status
Icon Pictogram or	Setting 🔶 💿 🔶 Select template 🔶 Select
Status Label	Status 🔶 🔍 🔶 Status Icon 🔶 🔍 Select
description	Pictogram 🔶 🔿 🔶 Status Label 🔶 🔍 🗭 Enter
	text ⇒ ● ⇒ ∞

Status Templates

Resetting templates	[Start Here] ● ◆ Entertainment ◆ ● ◆ S! Friend's Status ◆ ● ◆ 私の状況 ◆ ● ◆ Select Status ◆ ● ◆ See below	
	One Template ⓒ Select template ⇒ ☺ ⇒ <i>Reset</i> ⇒ ● ★ Yes ⇒ ●	
	All Templates	
Member Status & Notices		
Updating manually	● ◆ Entertainment ◆ ● ◆ S! Friend's Status ◆ ● ◆ ◎ ◆ Settings ◆ ● ◆ Status Update ◆ ●	
Opening notices	 ● ★ Entertainment ★ ● ★ S! Friend's Status ★ ● ★ ◎ ★ Status Notif. List ★ ● ★ Select notice ★ ● 	



Additional Functions	
My Details	•

Sending My Details image	● ◆ Entertainment ◆ ● ◆ S! Friend's Status ◆ ● ◆ ↔ Select Group ◆ Select member ◆ ⊜ ◆ Send Image ◆ ● ◆ Yes ◆ ●
	Available when your handset number is saved in Phone Book on member's handset.

S! Circle Talk

Member List

Editing individual members	Start Here ● ★ Entertainment ● ♦ S! Circle Talk ● ● Select member ○ ♦ See below
	Replacing Members Edit ⇒ ● ⇒ ● ⇒ Select method ⇒ ● ⇒ Select entry ⇒ ●
	Deleting Members Delete ⇒ ● ⇒ Yes ⇒ ●
Editing Groups	Start Here ● ★ Entertainment ★ ● ★ S! Circle Talk ★ ● ★ Select Group ★ ○ ★ See below
	Editing Group Name/Members Edit ⇒ ● ⇒ Select target ⇒ ● ⇒ Edit/enter ⇒ ● ⇒ ♡
	Deleting Group Members Edit ◆ ● ◆ Select member ◆ ◎ ◆ Delete ◆ ● ◆ Yes ◆ ● ◆ ♡
	Deleting Groups Delete ⇒ ● → Yes ⇒ ●

Settings

Disabling	● → Entertainment → ● → S! Circle Talk →
Loudspeaker	$\textcircled{\bullet} \Rightarrow \textcircled{\bullet} \text{Loudspeaker} \Rightarrow \textcircled{\bullet} \text{Off} \Rightarrow \textcircled{\bullet}$
Exiting S! Circle	● ◆ Entertainment ◆ ● ◆ S! Circle Talk ◆ ● ◆ ◎ ◆ Incoming Calls ◆ ● ◆ Voice Calls or Video Calls ◆ ● ◆ Accept Calls ◆ ●
Talk for incoming	● → 🐵 → Incoming Calls → ● → Voice Calls
calls	or Video Calls 🔶 🖲 🔶 Accept Calls 🔶 🖲

Blog Tool

Editing entries	 ♦ Entertainment ♦ Blog Tool ♦ Select entry ♥ Edit ● Select item ● Edit/enter ● ♥ Edit ♥ ♥ ● For Blog Title, omit step of pressing 100 after editing. 	
Deleting entries	● → Entertainment → ● → Blog Tool → ● → Select entry → ◎ → Delete → ● → Yes → ●	

Entertainment

Troubleshooting

S! Quick News Cannot receive content updates Update may fail out-of-range or in poor signal conditions. Automatic Update does not affect S! Quick News List News Flash update items overnight. • USIM Card replacement cancels Automatic Update. S! Friend's Status Cannot use S! Friend's Status • Set IP Service Setting to On. Handset rejected a registration request automatically Rejection notice is sent automatically when 30 members are already registered or handset fails to respond

within two hours.

Registration request arrived from a deleted member

• Registration request arrives when a member fails to receive cancellation notice within 24 hours.

Registration request was sent to a member automatically

 Registration request is sent automatically when handset fails to receive rejection/ cancellation notice within 24 hours.

Cannot create Status Templates

• Three templates may already be added; reset one and retry.

S! Circle Talk



Cannot use S! Circle Talk

• Set IP Service Setting to On.



S! Circle Talk starts automatically

• Check My Status; handset accepts S! Circle Talk requests automatically if S! Circle Talk Availability is set to *Auto Join*.



Cannot accept S! Circle Talk requests

• Check My Status; handset rejects S! Circle Talk requests automatically if S! Circle Talk Availability is set to *Join NG*.



Handset Security	. 13-2
Operations Security	. 13-2
Information Security	. 13-3

Function Control	13-4
Using Function Control	.13-4
Additional Functions	13-5

13

Handset Security



Handset Security

Operations Security

Function Lock

Restrict access to handset functions.

Auto	Lock when Display turns off or handset is closed
Once	Lock immediately; setting is canceled once handset is unlocked
At Power On	Lock when handset is powered on; Handset Code entry window opens

Locks		
PIN Entry Off		
Function Lock Off		
IP Service Setting Off		
Function Control		
Application Lock		
Locks Menu		
nction Lock 🕈 🖲		
lect option 🕈 🖲		

Unlocking Temporarily While handset is locked, enter Handset Code ► ●

Fu

Se

Available Operations while Function Lock is Active

• Power handset on/off, answer calls, place callers on hold, end calls, etc.

PIN Entry

Activate PIN Entry to require PIN entry each time handset is powered on.




Lock a lost handset remotely via PC or another handset. Secure Remote Lock disables all operations except powering handset on, and activates IC Card Lock. For more about Secure Remote Lock, see SoftBank Mobile Website (**P.17-24**) or contact SoftBank Mobile Customer Center, General Information (**P.17-43**).



Information Security

Application Lock

Restrict access to these functions:

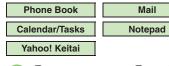





Locks Menu



Application Lock Select item \Rightarrow (\checkmark)

For Phone Book, select No Refer (to hide entry names in message lists, Call Log, etc.) or *Refer* and press ().



Enter Handset Code

Temporary Access to Functions · When accessing functions, enter Handset Code and press .

History Lock

Restrict access to Call Log and sent/ received mail records.

In Locks menu, *History* Lock 🌩 🔘

Select item \Rightarrow \bigcirc (\checkmark)

Enter Handset Code (¥?) (\bullet)

Temporary Access to Records

 When accessing records, enter Handset Code and press ().

Show Secret Data

Activate Show Secret Data to access Secret entries.



In Locks menu, Show Secret



 $On \Rightarrow \odot \Rightarrow$ Enter Handset Code 🗭 💿

Activating Temporarily with Motion Control

- Enter Handset Code 🜩 Shake handset left or right ▶ (●)
- Handset Security 13

 Show Secret Data is canceled when handset is closed or Display goes dark in Standby.

Function Control

Using Function Control

Restrict access to the following functions remotely. (Available for administrators.)

Camera	Attach File
Infrared	Wi-Fi
Bluetooth	Yahoo! Keitai
Memory Card	PC Site Browser
USB	IP Service
Digital TV	S! Appli
Messaging	Osaifu-Keitai
Voice Call (placing)	PC Mail
Video Call (placing)	Streaming
USIM (writing)	Flash®
S! Mail	Mobile Widget

When Accessing Restricted Functions A message (example shown below) appears; the function is inaccessible.



Message may not appear for some functions.

Checking Restriction Status



• Restriction status appears for each function.

- A message appears while Function Control is in progress.
- May be unavailable depending on subscription.
 For details, contact the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (P.17-43).



PIN Entry

Changing PIN	 Settings Settings Pin Entry Change PIN Enter current PIN Enter new PIN Re-enter new PIN Settings
	Activate PIN Entry first.

Secure Remote Lock

	Start Here] ● > Settings ● > Phone/ ● Locks ● > Set Lock Message ● > See below ● > > > > >
Setting Secure Remote Lock activation message	Saving Message Message ⇒ ● ⇒ Enter message ⇒ ● ⇒ Yes ⇒ ●
activation message	Checking Message Check Message ⇒ ●
	Suppressing Message Display Setting ⇒ ● → Don't Show ⇒ ●



Data Folder	14-2
Opening Files	14-3
Managing Files & Folders	14-4

14-5
14-5
14-7
14-10

Data Folder & Memory Card



Data Folder

Data Folder

Handset files are organized in folders by file format.

Preset Folders

	Contents	
Pictures	Still images	
DCIM	Still images on Memory Card (images captured with save location set to DCIM)	
Ring Songs. Tones	Downloaded melodies and other sound files	
S! Appli	S! Applications	
Widget	Widgets	
Music	Downloaded Chaku-Uta Full® files	
Videos [*]	Video images	
Lifestyle-Appli [*]	Lifestyle-Appli required to use Osaifu-Keitai®	
Books	Downloaded e-Books, etc.	
Customized Screen*	Downloaded Customized Screen files	
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status	
Flash®	Downloaded Flash® (animation) files	
Other Documents	Other files (Dictionary files, etc.)	

*Contains corresponding Yahoo! Keitai menu shortcut.

Checking Memory Status

- Data Folder ● Memory Status ● Phone Memory or Memory Card ● ●
- The category *Others:* includes Data Folder management files, Saved Pages, etc.
- Delete messages/files when memory is low. Handset performance may be affected when memory is full.



Opening Files

] 🖲 🕈 Data Folder 🕈 🖲



- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press (>).

2

Select folder 🕈 🥑

To open a sub folder, select it and press $\textcircled{\bullet}.$



File List





- The content plays or appears.
 To return to file list, press (MARCO).
- To return to file list, press

Handling Open Images

 Press ● to enlarge, or press (#.is)/☉ or (★.is)/☉ to open next or previous image. Press ∞ to rotate 90 degrees clockwise.

Attaching to Mail

After \bigcirc , select file $\Rightarrow \boxdot \Rightarrow$ Send/ Blog $\Rightarrow \odot \Rightarrow$ As Message $\Rightarrow \odot$

If a confirmation appears, follow onscreen instructions.

Copy Protected Files (I or 1/2)

• Some functions may be unavailable.



Available for Pictures or DCIM folder.



● ◆ Slide Show stops

Changing Interval

- After \bigcirc , \boxdot \Rightarrow Speed \Rightarrow \bigcirc \Rightarrow Select speed \Rightarrow \bigcirc
- When Speed is set to *Manual*, press)/
 (#...) or X to advance or reverse frame.

Note

 Backlight stays on during Slide Show; exit to save battery power.

Advanced

Switching file list view Changing image quality Changing Slide Show settings Using files as Wallpaper Using files as ringtones Using files as ringtones Using files as ringtones (And more on P.14-7 - 14-8)



Managing Files & Folders


Adding Folders

May be unavailable for some folders.







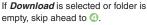



(⊠)

Moving/Copying Files

Some files may not be moved/copied.

- In file list, select file \Rightarrow
- *Move* or *Copy* \Rightarrow \bigcirc \Rightarrow Phone or Memory Card Dec 🔿
- · For still images, select a destination folder (Pictures. Mail Art. etc.) and press •.

Select folder **>**

Move here or Copy here ♦ (●)

Selecting Multiple Files



Select file ()

• Repeat 2 as needed. (To uncheck, select a file with \bigtriangledown and press O.)

Hiding Folders

Restrict access to created folders. Only handset folders can be hidden.





Manage Items *Create Folder* \Rightarrow \bigcirc \Rightarrow Enter name 🌩 (•)



Renaming folders Opening file properties Renaming files Sorting files Deleting files & created folders Handling SVG files (P.14-8 - 14-9)

Using Memory Card

Use microSD/microSDHC Memory Card (hereafter "Memory Card") to save and organize files for use on 944SH.

- Use recommended Memory Cards only. For details, see P.17-24 "microSD Memory Card Compatibility."
- If inserted, captured images, downloads and other files save to Memory Card. (My Pictograms and Graphic Mail templates save to handset.)

Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never power handset off or remove battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

Inserting & Removing

First, power handset off.







- With terminal side down, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.

Insert battery, then close cover



If 🛐 Appears after Power On

• Memory Card may not be inserted properly; reinsert the card.

Removing Memory Card

 Gently push in card and release it; card pops out. Pull card straight out gently.





Memory Card

Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.

● ◆ Settings ◆ ● ◆ ○
 Phone/♀ ◆ Memory Card
 ● ●

 Offline Mode is set. Handset transmissions are suspended until format is complete.

```
🔁 Yes 🕈 🖲
```

Advanced

• To cancel, choose *No* and press ④.

Precaution

 Never remove Memory Card or battery while formatting; may cause damage.

Opening Memory Card Files

Follow these steps to open files via Data Folder:

(Memory Card Data Folder opens first.)



Data Folder
 Memory Card Data Folder opens.

Select folder 🕈 🖲

To open a sub folder, select it and press O.

Select file 🕈 🖲

Opening Handset Data Folder Files After ①, ② ➡ Change to Phone ➡ ④ ➡ From ⊘

14



Additional Functions

File/Folder View Settings			Start Here ● > Data Folder ● > Select folder ● ● > Select file ● > Slide Show ●
Switching file list view	Image Image <td< td=""><td></td></td<>		
Changing image quality			Select pattern → ● → ∞ Disabling Key Illumination Illumination → ● → Switch On/Off → ● → Off → ● → ∞
Changing transition effect when using ^(C)	 Data Folder Select folder Select file Select file Select effect 	Show settings	Hiding Softkeys SW Guide Display ⇒ ● → Off ⇒ ●
when using 🥹	Start Here ● Data Folder ● ● Select folder ● ● ● Select file ● ● Slide Show ● ● ● ● Select file ● ● Select file ● ● ● ● Select file ● ● ● ● ● ● ● Select file ● ● ● ● ● ● ● Select file ● ● ● ●		Setting Backlight to Turn Off after a Period of Time Always Backlight ◆ ● ◆ Off ◆ ● • Choosing Off applies Display Backlight settings. (Display remains on during Slide Show regardless of Display Saving setting.)
Changing Slide	Playing Once <i>Repeat</i> ⇒ ● → <i>Off</i> ⇒ ● Playing Music		Changing Image Transition Effect Switch
Show settings	BGM Settings → ● → Switch On/Off → ● → On → ●	Showing Softkeys in image view	Data Folder Select folder Select file Select
	Changing Music BGM Settings ⇒ ● ⇒ Play Ring Tones ⇒ ● ⇒ Select folder ⇒ ● ⇒ Select file ⇒ ●		



Using Files/Folders

Using files as Wallpaper	 Data Folder Select folder Select file Set as Wallpaper For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts. 	
Using files as Sub Display Wallpaper	 Data Folder Select file Select file Select panel Select option Select Cut to specify image area or zoom in/out. 	
Using files as ringtones	 Data Folder Select file Select file Select file Select item If prompted, enter ring time and press If a confirmation appears, follow onscreen instructions. 	
Using files as ringvideos	 ◆ Data Folder ◆ ③ ◆ Videos ◆ ④ ◆ Select file ◆ ◎ ◆ Set as Ring Video ◆ ④ ◆ Select item ◆ ④ If prompted, enter ring time and press ●. 	
Saving Phone Book entries	 Data Folder Data Folder Select folder Select file Save to Phone Book As New Entry Complete other fields Y To add to an existing entry, select As New Detail. 	
Activating mobile camera, etc. in corresponding folders	● → Data Folder → ● → Select folder → ● → ⊕ → Take Picture, Record Video or Record Voice → ●	

Managing Files/Folders

Renaming folders	 Data Folder Select folder Manage Items Rename Enter name Assign different names to folders within a layer.
Opening file properties	 ● → Data Folder → ● → Select folder → ● → Select file → ◎ → Details → ●
Renaming files	 Data Folder Belect folder Select file Manage Items Rename Enter name Select file
Sorting files	● → Data Folder → ● → Select folder → ● → ◎ → Manage Items → ● → Sort → ● → Select method → ●
	Start Here ● > Data Folder ● > Select folder ● ● See below
Deleting files & created folders	Single Files Select file ⇒ ⊚ ⇒ Delete ⇒ ● ⇒ Yes ⇒ ●
	Folder & Files WithinSelect folder \Rightarrow (a) \Rightarrow Delete \Rightarrow (b) \Rightarrow Yes \Rightarrow (c)



	Start Here ● → Data Folder → ● → Other Documents → ● → Select file → ● → See below
	Line Scroll
	Page Scroll [2초] (Up), 용초] (Down), 6초] (Right), 4초] (Left)
Handling SVG files	Zoom ፲ ਃ (Zoom out), ③ ♪ (Zoom in)
	Rotate
	Key Action Mode (িম্ট
	Default View
Memory Card	
Using HTML files on Memory Card	● → Settings → ● → ⊖ Phone/ → Memory Card → ● → SD Local Contents →

● → Select title → ●



Troubleshooting

Managing Files/Folders



Cannot copy files

· Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)




Copied/moved files cannot be used on PCs, etc.

• Some files may not be usable on other SoftBank handsets or PCs, etc.



Cannot sort files properly

 Check the number of files/folders in the folder. Files/folders in folders containing 961 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.

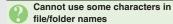

- Single-byte Symbols *¥*, *I*, *:*, *;*, *.*, *<*, *>*, *I*,
 - ?, #and " are not supported.



Wi-Fi
Wi-Fi (Wireless LAN) 15-2
Registering Private Access Points 15-3
Using Public Wireless LAN Services 15-6
Infrared15-7
Transferring Files via Infrared 15-8
Exchanging Contact Information 15-10
IC Transmission 15-11
Transferring Files via IC Transmission
Bluetooth [®] 15-13
Transferring Files via Bluetooth [®] 15-14

External Device Connection 15-17	
Connecting PC or Blu-ray Disc	
Recorder	15-17
Backup	. 15-18
Basics	15-18
Backup & Restore	15-19
S! Addressbook Back-up (SAB).	15-20
About SAB	15-20
Using Sync Commands	15-22
Additional Functions	. 15-23
Troubleshooting	. 15-27


15 Connectivity & File Backup




Wi-Fi (Wireless LAN)

944SH supports wireless LAN (hereafter "Wi-Fi") that enables Internet connection via private Wi-Fi network, public wireless LAN service, etc. Handset connects to the Internet via Wi-Fi automatically whenever possible, allowing high-speed communication without switching networks.

Subscription to Keitai Wi-Fi is required to use Wi-Fi.

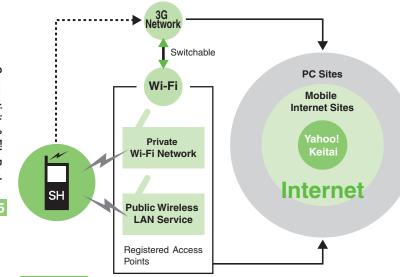

Service Usage Outline

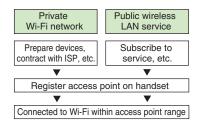

Registering Access Points

- Save access point information to handset to use Wi-Fi.
 - Handset connects to registered access points automatically.
- Access point search may take some time depending on the number of registered access points.

Important Wi-Fi Usage Note

 Depending on signal conditions, connection may automatically switch from Wi-Fi to 3G incurring packet transmission fees; set confirmation to appear as needed.

Advanced

Subscribing to Keitai Wi-Fi (Japanese) Disabling Wi-Fi Showing confirmation when switching networks Protecting access point information by Handset Code Specifying channel range Opening access point properties Opening Wi-Fi-related handset properties Opening Keitai Wi-Fi information (Japanese) (P.15-23)

Connectivity & File Backup

15 - 2

Registering Private Access Points

- Broadband connection, ISP subscription and Wi-Fi access point are required.
- To connect to corporate access points, consult the system administrator for settings.
- Configure settings on Wi-Fi access points beforehand. (For details, see the access point guide.)
- Access point information (SSID, authentication method, encryption method, security key, etc.) is unique to each access point. Check it beforehand.

Using AOSS[™] or WPS

AOSS[™] and WPS are systems/standards for easy access point registration and security configuration; available on compatible Wi-Fi access points.



Create Profile

Connectivity & File Backup



Advanced

Wi-Fi

Using WPS

Example: Push Button Configuration (PBC) method

In Create Profile menu, Create by WPS ➡ ●

Follow onscreen instructions.

- To cancel, press 💬.
- Handset connects to Wi-Fi upon completion of registration (Switch On/Off: *On*).

Using PIN Method

- Enter an eight-digit number (PIN) generated by handset into the access point.
 - After $(\mathbf{0}, \mathbf{v}) \neq PIN entry \neq \mathbf{0} \neq \mathbf{0}$
 - ➡ Enter number on Display into access point ➡ ●



Connectivity & File Backup

Advanced

Setting IP address Setting DNS server addresses (P.15-23 - 15-24)

<u>15-4</u>

Registering Access Points Manually

Check access point information beforehand.

Major Items

Access Point Profile

Profile Name	Enter a name	
SSID	Enter the same SSID as the access point	
Security		
Authentication Method	Supported authentication methods vary by access point; set accordingly	
Encryption Method	Supported encryption methods vary by authentication method; set according to access point	
Security Key	Enter the security key (also called "encryption key," "network key" or "passphrase") set on the access point	

Entering Information

Example: Authentication Method is WPA/ WPA2-PSK Auto.

- In Create Profile menu, Manual 🗭 🖲
- *Profile Name* **♦ ● ♦** Enter name Þ 🖲
- $SSID \Rightarrow \textcircled{\bullet} \Rightarrow Enter SSID$

uthentication Method Encryption Method Security Key Security Menu Authentication Method

ëne.

Select method Encryption Method $\Rightarrow \bigcirc \Rightarrow$ Select method \Rightarrow \bigcirc

Security Key

Enter

security key 🕈 🔘

Security

(lacksquare

• 🔊 Yes 🌩 💿 Handset connects to Wi-Fi (Switch) On/Off: On). If Authentication Method is Open System & Encryption Method is No Authentication • Omit security key entry. If Encryption Method is WEP

(¥?)

In ②, <*Empty*> ♦ ● ♦ Enter WEP kev $\Rightarrow \bigcirc \Rightarrow \bigtriangledown \Rightarrow$ From \bigcirc



Using Public Wireless LAN Services

- Subscription with the corresponding service provider, etc. is required.
- Access point information (SSID, authentication method, encryption method, security key, etc.) is unique to each access point. Check it beforehand.
- Subscription to Keitai Wi-Fi provides access to BB mobilepoint service. For more about BB mobilepoint, see SOFTBANK TELECOM Website (P.17-24).



Using Other Public Wireless LAN Services

- Check public wireless LAN service information beforehand.
- Connection to some public wireless LAN services may not be possible.
 - In Create Profile menu, Manual ● ●
 - Complete fields
 - For details, see **P.15-5** "Entering Information."
 - Output: Advanced Settings ⇒ ⇒
 WISPr Settings ⇒ ●
 - 🚹 User ID 🕈 💽 🕈 Enter ID 🅈 💽
 - *Password* ≠ ≠ Enter password ≠ ●
- $\bigcirc Switch On/Off \Rightarrow \odot \Rightarrow On \\ \Rightarrow \odot$



 Handset connects to Wi-Fi (Switch On/Off: On).



Infrared

Wirelessly transfer files between 944SH and compatible devices.

944SH supports IrSimple[™] high-speed wireless communications protocol; exchange large image files instantly with compatible mobile phones, printers, etc.

Transferable Files



- Copy/forward protected files are not transferable.
- Some files may not be transferable; some settings may be lost, or files may not be saved properly. For details, see
 - "Troubleshooting" at the end of this chapter.

Getting Started

Infrared Precautions

Align Infrared Ports of both devices.

• Handset cannot receive connection requests during Software Update.



- Do not place objects between devices.
- Keep Infrared Ports aligned during transfer.
- Do not look into Infrared Port during infrared transmissions. Eyesight may be affected.
- 944SH complies with IrMC 1.1, however, some files may not transfer properly.

Transfer Options

One File Transfer	Transfer single files	
All File Transfer	Transfer all files by function	
IrSS Transfer	Exchange single JPEG image files with compatible devices at high speed	

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

Authorization Code

 Four-digit code required for Infrared transfers. All File Transfers possible when codes match. (Authorization Code is changeable for each transfer.)



Transferring Files via Infrared

Receiving Files

- ◆ Tools ◆ ◆ · Connectivity ◆ Infrared ◆ ●
- Switch $On/Off \Rightarrow \odot \Rightarrow$ $On(3 min.) \Rightarrow \odot$




- Infrared is activated.
- Handset receives files if sent within three minutes.
- Handset must be in Standby to accept connection requests.

Connection request arrives



Request Window

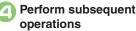

- To cancel transfer, press 🐑.
- Advanced
 - Disabling image size reduction for IrSS Transfer (P.15-24)


- Subsequent Operations
- One File Transfer
 - $Yes \blacklozenge \textcircled{\bullet} \blacklozenge \blacklozenge Yes \blacklozenge \textcircled{\bullet}$
- If storage media confirmation appears, select media and press •.
- All File Transfer (Adding Files) Yes ⇒ ● ⇒ Enter Authorization
 - Code $\Rightarrow \odot \Rightarrow$ As New Items $\Rightarrow \odot$
- All File Transfer (Overwriting Existing Files)
 - *Yes* \Rightarrow \bigcirc \Rightarrow Enter Authorization
 - Code ♦ ♦ Delete All & Save ♦
 - **♦** Yes **♦** ●
 - For Phone Book, My Details except handset phone number is overwritten as well.
- IrSS Transfer


Yes Þ 🖲

• Files are saved to Data Folder (Pictures).

15-8



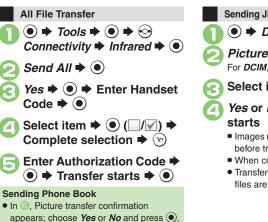

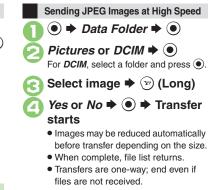




15-<mark>9</mark>

Infrared

Exchanging Contact Information

Exchange name, phone numbers, mail addresses, and other contact info with other compatible handsets via infrared. Read **P.15-7** "Infrared Precautions" beforehand.

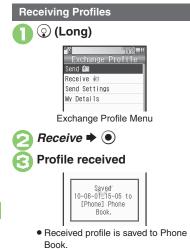

Sending Profiles

 In Exchange Profile menu, Send ⇒ ● ⇒ Transfer starts
 Changing Profile Items to Send [Exchange Profile Menu] Send Settings ⇒ ● ⇒ Select item ⇒ ● (□/☑) ⇒ Complete selection ⇒ ∞
 Opening My Details [Exchange Profile Menu] My Details ⇒ ●

Connectivity & File Backup

15

IC Transmission

IC Transmission


Wirelessly transfer files between 944SH and compatible devices.

- For transferable files, see P.15-7.
- Cancel IC Card Lock beforehand.
- Disconnect Headphones, USB Cable and AC Charger beforehand.

Getting Started

IC Transmission Precautions

Align $\overline{\nearrow}$ logos of both devices.

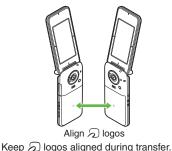

Transfer Options

One File Transfer	Transfer single files
All File Transfer	Transfer all files by function

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

Authorization Code

• Four-digit code required for IC transfers. All File Transfers possible when codes match. (Authorization Code is changeable for each transfer.)



Advanced

Disabling one file reception (P.15-24)

15-11

Transferring Files via IC Transmission

Receiving Files



Connection request arrives



Request Window

• Handset must be in Standby to accept connection requests.

Perform subsequent operations

• To cancel transfer, press 📎.

Subsequent Operations

■ One File Transfer Yes ◆ ④ ◆ Yes ◆ ④

• If storage media confirmation appears, select media and press •.

All File Transfer (Adding Files) Yes ⇒ ● ⇒ Enter Authorization Code ⇒ ● ⇒ As New Items ⇒ ●

- All File Transfer (Overwriting Existing Files)
 - *Yes* \Rightarrow \bigcirc \Rightarrow Enter Authorization
 - Code ♦ *Delete All & Save* ♦
 - $\textcircled{\bullet} \neq \textit{Yes} \neq \textcircled{\bullet}$
 - For Phone Book, My Details except handset phone number is overwritten as well.

Sending Files

R




Example: Phone Book entry

♀ ➡ Select entry ➡ ☺ ➡
 Send Entry ➡ ●

🕽 Via IC Transmission 🕈 💽

Yes ♦ • Transfer starts

• When complete, entry search window returns.

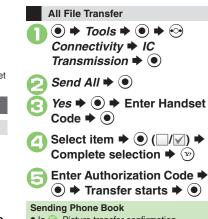

In G, Picture transfer confirmation appears; choose Yes or No and press O.



15 - 12

Bluetooth[®]

Wirelessly transfer files/data between 944SH and compatible devices (watches, handsfree devices, etc.).

- For transferable files, see P.15-7.
- 944SH supports simultaneous connection with two devices. (May be unavailable depending on the device type.)
- Bluetooth[®] connection may not be possible with some Bluetooth[®] devices.
 - Handset shall be connected to certified Bluetooth[®] devices that meet the specification standards developed by the Bluetooth SIG.
 - Data transfers may fail depending on characteristics or specifications of the certified Bluetooth[®] devices.
 - Noise may interfere with wireless or handsfree conversations.
- TV audio is supported only on SCMS-T DRM scheme compliant Bluetooth[®] devices.

Getting Started

Bluetooth[®] Precautions


Check transmission range of your Bluetooth[®] device to use with handset properly. Maximum transmission range for transfers between 944SH handsets is ten meters. (Bluetooth[®] connection/transfer rate may vary depending on conditions.)

Important Handsfree Device Usage Note

- Handle call operations on the device in use. Bluetooth[®] Watches
- Compatible Bluetooth[®] watches support these functions:
 - Clock sync
 Alarm notice
 - News notice
 Mail notice
 - Remote Shutter Mode Settings

Caller ID notice

- Quick Silent
- Hold calls
 Show Operator Name
- For details about functions/operations, see the Bluetooth[®] watch guide.

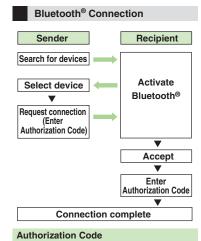

- 4 to 16-digit code required for Bluetooth[®] connections. Pairing possible when codes match.
- For handsfree devices, enter specified Authorization Code.
- Authorization Code entry may not be required depending on the other device.

Advanced

Cloaking handset to avoid connection requests Setting idle time after which Bluetooth[®] is canceled Switching audio output to wireless device Changing Bluetooth[®] name for handset Opening Bluetooth[®]-related handset properties (And more on P.15-24 - 15-25)

Synchronizing Bluetooth[®] watch with handset Clock Enabling/disabling Bluetooth[®] watch responses (**P.15-25**)

िय 15-13

Bluetooth®

Transferring Files via Bluetooth[®]

Activating Bluetooth®

• (Long)



- Bluetooth[®] is activated.
- Handset must be in Standby to accept connection requests from unpaired handsfree devices, etc.
- To cancel Bluetooth[®], Long Press •.

Connecting Bluetooth® Devices

Device Search & Pairing

First, activate Bluetooth® on devices to be paired with.

● **→** Tools **→** ● **→** • • • Connectivity
Bluetooth





 Found devices are listed after search. • To cancel search, press ().



If a confirmation appears, choose Yes and press ().

- Enter the same Authorization Code for handset and the other device \Rightarrow \bigcirc \Rightarrow Pairing complete
 - On the other device, complete code entry within 30 seconds.
 - Authorization Codes are not necessary for paired devices.

Connecting Bluetooth® Specification Ver. 2.1 Compliant Devices

- In , Yes > Pairing complete
- If the other device is a keyboard, follow onscreen instructions

Advanced



Activating Bluetooth® via Main Menu Editing Paired Device list Disconnecting handsfree devices, etc. Connecting devices supporting handsfree telephony and audio output by service Specifying a preferred device for wireless connection (P.15-25)



Connecting Paired Handsfree Devices, Etc.



In Bluetooth menu, Paired Devices




Paired Device List



Select device 🌩 💌

If handset is already connected to another device, disconnection confirmation may appear; choose Yes and press ().

 The device is connected and (preferred) appears.

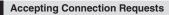


Follow these steps to accept connection requests from unpaired devices:



Add	XXXXX to my devices?	and the second
	Yes	
	No	

Yes 🌩 💿 Enter passkev Enter the same number as the target device.

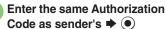

· Complete code entry within 30 seconds.

Connecting Bluetooth® Specification Ver. 2.1 Compliant Devices

- In ⓒ, *Yes* **♦** ●
- If the other device is a keyboard, follow onscreen instructions.




Bluetooth®

Transferring Files

Follow the steps below to exchange files with paired devices.


- For transferable files, see P.15-7.
- When requested, enter Authorization Code.

Receiving Files

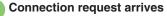



Request Window

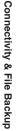

15

- Perform subsequent operations
- \bullet To cancel transfer, press $\textcircled{\sc b}.$





15-**1**6

Connecting PC or Blu-ray Disc Recorder

Connecting PC

Accessing Memory Card

Connect handset to a PC via USB Cable to access Memory Card from the PC without removing card from handset. USB Cable may be purchased separately.

Connect handset to a PC via **USB** Cable





Image: A marked with a mar **Connection ends**

Disconnect USB Cable.

If Menu in 1 Does Not Appear

- Follow these steps:
 - → Tools → → → Connectivity
 - ♦ USB Mode ♦ From ②
 - Operations on the PC may be required; if prompted, follow onscreen instructions.

Utility Software (Japanese)

For more PC-related operations, download Utility Software (including USB Cable driver) from the following URL. Utility Software

http://k-tai.sharp.co.jp/download/tools/utility/

Mobile Data Communication Fees

 Using the Internet by connecting handset to PC/PDA via USB Cable or Bluetooth® may incur high charges as large-volume packet transmissions tend to occur in a short period of time.

Connecting Blu-ray Disc Recorder

Connect handset to a Blu-ray Disc recorder via USB Cable to transfer recorded programs to Memory Card without removing card from handset.

- Compatible only with SHARP Blu-ray Disc recorders. For details, see P.17-24 "Compatible Blu-ray Disc Recorders."
- USB Cable may be purchased separately.



Connect handset to a Blu-ray Disc recorder via **USB** Cable

USB Mode
Modem/Data
Mass Storage
Recorder Link
MTP Mode

Recorder Link 🌩 🔘

 Transfer files from Blu-ray Disc recorder to Memory Card.

🐨 🗭 Yes 🗭 🖲 🗭 **Connection ends**

• Open transferred files via Recorder Contents in TV menu or Media Player menu (Videos).

If Menu in 1 Does Not Appear

• Follow these steps:

● ➡ Tools ➡ ● ➡ 😔 Connectivity ♦ USB Mode ♦ ● From

15



Basics

Back up information to Memory Card, and restore to handset as needed.

Supported Items

Select items to back up, or transfer all at once. Items with ^{*} are selectable at once via *Check Selection* in Options menu.

Phone Book	Sent Messages
Calendar	Drafts [*]
Tasks	Templates (Messaging)
Bookmarks	Contents Keys
Notepad	Data Folder
Mail Groups [*]	User Dictionary
Received Msg.*	Used Log

Precautions

- Not available if battery is low.
- Some items may not be transferable; some settings may be lost, or files may not transfer properly. For details, see
 "Troubleshooting" at the end of this chapter.

Transferring All Items

- Use blank Memory Card for Backup All Items. Do not use the card to save other files after Backup All Items; backed up content may not be restored properly.
 Contents Keys
- Moving Keys to Memory Card creates a special file. Performing Backup again on the same Memory Card overwrites that file. Perform Restore beforehand.

Connectivity & File Backup

Backup & Restore

Handset to Memory Card

Follow these steps to back up selected items at once:

● ◆ Settings ◆ ● ◆ ↔ Phone/♀ ◆ Backup/ Restore ◆ ●


> Backup/Restore Backup All Items Backup Selected Items Restore All Items Restore Selected Items Settings/Manage

Backup/Restore Menu

引 Yes 🕈 🖲

Select item $\Rightarrow \bigcirc (\square/\square) \Rightarrow$ Complete selection

• For *Phone Book*, a confirmation appears. Choose *Yes* or *No* and press ().

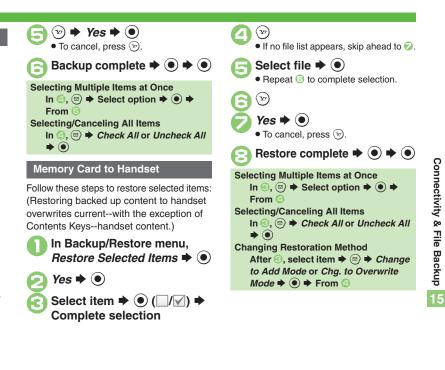


Advanced



About SAB

Back up Phone Book content in SAB; add Phone Book changes to SAB anytime. Edit SAB online via PC; add SAB changes to Phone Book anytime. Restore lost or altered Phone Book content from SAB.

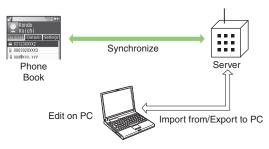

- SAB requires a separate contract and basic monthly fee.
- Use SAB to add Phone Book content to a new compatible SoftBank handset; some conditions apply (P.15-21).
- Use a PC to edit SAB online.
- For more about SAB, see SoftBank Mobile Website (P.17-24).
- Synchronization incurs packet transmission fees.

Auto Synchronization

- When subscribed to SAB, Network Information retrieval activates auto synchronization (Auto Sync Settings: *On*, Set Frequency: *After Editing Ph.Book(10 min.)*, Sync Mode Setting: *Normal*); Phone Book changes are added to SAB automatically.
- Cancel auto synchronization as needed. However, it reactivates after Network Information retrieval.

SAB Sync Commands & Features

	Normal	Synchronize Phone Book and SAB ¹
	Sync from Client	Add Phone Book changes to SAB ²
Synchronization	Backup	Export Phone Book content to SAB ³
	Sync from Server	Add SAB changes to Phone Book ⁴
	Restore	Import SAB content to Phone Book ⁵
	Import from PC	Upload PC address book info to SAB
Edit on PC	Export to PC	Export SAB content to PC address book
	Sync Lock	Prevent synchronization from handset
	Birthday Notification	SAB sends reminders via SMS to handset
Send Notice ⁶	Email Address Notification ⁷	Send new handset mail address to specified addresses
Nouce	"Disaster Message Board" Message Notification ⁸	Send emergency message board update to specified addresses
Spam Filter	Tomodachi Email Filter ⁹	Always accept messages from mail addresses saved in SAB

¹If the same entry item is edited in Phone Book and SAB, SAB content is referenced.

²Unrelated SAB changes remain.

³Any existing SAB content is deleted.

⁴Unrelated Phone Book changes remain.

⁵Any existing Phone Book content is deleted.

⁶Access this function via handset (My SoftBank; Japanese) or a PC.

⁷Backup resets notification setting; handset address is sent to all addresses.

⁸Backup resets notification setting; updates are not sent to any address.

⁹Export Phone Book content to SAB beforehand.



Service Usage Outline

Complete Contract

Visit a SoftBank Shop, dial 157 from a SoftBank handset for SoftBank Mobile Customer Center, General Information or access My SoftBank (Japanese).

Receive User ID & Password

After subscription, user ID and password arrive via SMS.

User ID and password are required to use SAB via a PC.

Use SAB

Export Phone Book content to SAB.

Precautions

Unsynchronizable Items

These Phone Book settings are lost:

- Picture, Tone, Vibration, Light
- Unintentional Phone Book or SAB Content Deletion
- When no Phone Book content exists, performing synchronization via *Normal, Sync from Client* or *Backup* deletes all SAB content.
- When no SAB content exists, performing synchronization via Normal, Sync from Server or Restore deletes all Phone Book content.

■ Phone Book ⇔ SAB Content Capacity Disparities

When the number of savable items varies between Phone Book and SAB entries, synchronization reflects lower limit.

Contract Termination

SAB content is deleted upon contract termination.

SAB Transfers to New Handsets

- SAB-Compatible 3G Handsets SAB remains as last saved and is fully accessible.
- Other SoftBank 3G Handsets SAB remains as last saved and is accessible via PC.
- V8 Series

Service contract is terminated and SAB content is deleted.

When Double Number is Active

Regardless of usage mode setting, all Phone Book content is backed up.



Advanced

Using Sync Commands

Normal (Start Sync)

Synchronize Phone Book and SAB via Normal.

S! Addressbook Back-up ()



 Synchronization starts: when complete, details appear.

● **◆** Synchronization complete

Canceling Synchronization (𝔄) ➡ Yes ➡ ●

Other Sync Commands

Available Commands:

Sync from Client	Add Phone Book changes to SAB
Backup	Export Phone Book content to SAB; any existing SAB content is deleted
Sync from Server	Add SAB changes to Phone Book
Restore	Import SAB content to Phone Book; any existing Phone Book content is deleted

If this is your first use of SAB (new handset), synchronization is performed via Normal regardless of selection.

n	In S! Addressbook menu,
	Details 🕈 🖲



Backup/Restore



Select command

 Synchronization starts; when complete, details appear.

Synchronization complete

Canceling Synchronization (𝔄) ➡ Yes ➡ ●





Additional Functions

Wi-Fi

General

General	
Subscribing to Keitai Wi-Fi (Japanese)	 ● <i>Tools</i> ● ● <i>Oconnectivity</i> ● <i>Wi-Fi</i> ● <i>Application</i> ● ● Follow onscreen instructions.
Disabling Wi-Fi	 Tools Tools Switch On/Off Off Set to Off when not using Wi-Fi to extend Battery Time.
Showing confirmation when switching networks	 Tools → O Connectivity → Wi-Fi Common Settings → O Switch Notification → O Switch from 3G to Wi-Fi or Switch from Wi-Fi to 3G → O
Protecting access point information by Handset Code	 Tools Tools Connectivity Wi-Fi Ormon Settings Handset Code Lock Setting On Handset Code is required to re-select Off.
Specifying channel range	 Tools Tools Connectivity Wi-Fi Wi-Fi Common Settings Channel Range Select range In some countries, there are restrictions on available channels. Select channel range accordingly while outside Japan.
Opening access point properties	● → Tools → ● → ☺ Connectivity → Wi-Fi → ● → Connect Information → ●
Opening Wi-Fi-related handset properties	● → Tools → ● → ⊖ Connectivity → Wi-Fi → ● → Show MAC Address → ●

Opening Keitai	● 🔶 Tools 🔶 ● 🔶 Connectivity 🔶 Wi-Fi
Wi-Fi information	What's Keitai Wi-Fi?
(Japanese)	 Follow onscreen instructions.


Managing Access Points

	$\begin{array}{c} \hline \\ \hline $
Managing registered access points	Changing Priority Change Priority → ● → Select target location → ●
	Editing Edit ⇒ ● ⇒ Complete fields ⇒ ∞
	$\begin{array}{c} \text{Deleting} \\ \text{Delete} \Rightarrow \textcircled{\bullet} \Rightarrow \text{Yes} \Rightarrow \textcircled{\bullet} \end{array}$

Advanced Settings

When finished with Advanced Settings, complete other fields to register an access point.

	$\begin{array}{c} \hline \\ \hline $
Setting IP address	Entering IP Address IP Address → ● → Enter numbers → ● → ∞
	Entering Subnet Mask Subnet Mask ⇒ ● ⇒ Enter numbers ⇒ ● ⇒ ∞
	Entering Default Gateway Default Gateway ⇒ ● ⇒ Enter numbers ⇒ ● ⇒ ⊗

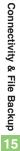



Setting DNS server addresses	Start Here ● Tools ● Ocnnectivity Wi-Fi ● > Create Profile ● > Manual ● ● Advanced Settings ● > IP Settings ● > DNS Server Address ● > Manual ● > See below > >
	Entering Primary DNS Primary DNS ♦ ● ♦ Enter numbers ♦ ● ♥ ♥
	Entering Secondary DNS Secondary DNS ⇒ ● ≠ Enter numbers ⇒ ● ⇒ ⊗

Infrared

Sending My Details	● → □ → ≅ → Send My Card → ● → Via Infrared → ● → Yes → ● → Transfer starts
Sending non-Phone Book files	In file list, select file ⇒ ⊚ ⇒ Send (or Send/ Blog) ⇒ ● ⇒ Via Infrared ⇒ ● ⇒ Yes ⇒ ● ⇒ Transfer starts
Disabling image size reduction for IrSS Transfer	● → Tools → ● → ⓒ Connectivity → Infrared → ● → IrSS Key Setting → ● → Send via IrSS → ●

IC Transmission

Disabling one file reception	● ◆ Tools ◆ ● ◆ ⊙ Connectivity ◆ IC Transmission ◆ ● ◆ 1 File Reception ◆ ● ◆ Off(Disabled) ◆ ●
Sending My Details	● ◆ ○ □ → ◎ → Send My Card → ● → Via IC Transmission → ● → Yes → ● → Transfer starts
Sending non-Phone Book files	In file list, select file

Bluetooth®

General


Cloaking handset to	● ★ Tools ★ ● ★ ⓒ Connectivity ★
avoid connection	Bluetooth ★ ● ★ My Device Settings ★ ● ★
requests	Visibility ★ ● ★ Hide My Phone ★ ●
Setting idle time after	● ★ Tools ★ ● ★ ۞ Connectivity ★
which Bluetooth [®] is	Bluetooth ★ ● ★ My Device Settings ★ ● ★
canceled	Bluetooth Timeout ★ ● ★ Select time ★ ●
Switching audio output to wireless device	 Tools My Device Settings My Device Settings Sound Output Bluetooth Device Bluetooth Device is set automatically when connection is made from wireless Headphones.
Changing	● ◆ Tools ◆ ● ◆ ⓒ Connectivity ◆
Bluetooth [®] name	Bluetooth ◆ ● ◆ My Device Settings ◆ ● ◆
for handset	Device Name ◆ ● ◆ Enter name ◆ ●
Using handsfree device as primary means of conversation	● → Tools → ● → ⊙ Connectivity → Bluetooth → ● → My Device Settings → ● → Handsfree Setting → ● → Handsfree Mode → ●



Additional Functions

Avoiding connection requests from Bluetooth [®] -compatible S! Applications in Standby, etc.	● → Tools → ● → ⊖ Connectivity → Bluetooth → ● → My Device Settings → ● → S! Appli Request → ● → Off → ●	
Receiving connection requests while connected to a device	 Tools ⇒ ⊕ ⇒ ☺ Connectivity ⇒ Bluetooth ⇒ ● ⇒ My Device Settings ⇒ ● ⇒ Plural Connect Standby ⇒ ● ⇒ On ⇒ ● 	
Opening Bluetooth [®] -related handset properties	 ● Tools ● ● ◆ O Connectivity ● Bluetooth ● ● ◆ My Device Details ● ● ● Press ⑨ to view service details. 	
Activating Bluetooth [®] via Main Menu	● → Tools → ● → ⊖ Connectivity → Bluetooth → ● → Switch On/Off → ● → On → ●	
Bluetooth [®] Watches		
Synchronizing Bluetooth [®] watch with handset Clock	 Tools → ⊙ → ⊙ Connectivity → Bluetooth → ⊙ → Setting Watch → ⊙ → Set BT-Watch Time → ⊙ → Yes → ⊙ Connect handset to a Bluetooth[®] watch beforehand. 	
Enabling/disabling Bluetooth [®] watch responses	 Tools Tools Setting Watch Setting Watch Notification Select item Permit or Prohibit Register a Bluetooth® watch beforehand. 	

Paired Devices	
Editing Paired Device list	$ \hline \texttt{Start Here} \textcircled{\bullet} \Rightarrow \texttt{Tools} \Rightarrow \textcircled{\bullet} \Rightarrow \textcircled{\bullet} \texttt{Connectivity} \Rightarrow \\ \hline Bluetooth \Rightarrow \textcircled{\bullet} \Rightarrow Paired Devices \Rightarrow \textcircled{\bullet} \Rightarrow \\ \texttt{Select device} \Rightarrow \textcircled{\bullet} \Rightarrow \texttt{See below} $
	Renaming Paired Devices <i>Change Name</i> ⇒ ● ⇒ Enter name ⇒ ●
	Deleting Paired Devices Delete ⇒ ● ⇒ Yes ⇒ ● • To delete a device connected to handset, choose Yes and press ●.
Disconnecting handsfree devices, etc.	● → Tools → ● → ۞ Connectivity → Bluetooth → ● → Paired Devices → ● → Select connected device → ●
Connecting devices supporting handsfree telephony and audio output by service	● ★ Tools ★ ● ★ ⓒ Connectivity ★ Bluetooth ★ ● ★ Paired Devices ★ ● ★ Select device ★ ⊜ ★ Select Service ★ ● ★ Handsfree function or Audio function ★ ●
Specifying a preferred device for wireless connection	Start Here \bullet
	 For Handsfree Telephony Handsfree On ● ● For Handsfree On, specified device reconnects to handset when placing/receiving calls.
	For Audio Output Audio On ⇒ ● ● For Audio On, Media Player/TV audio output is redirected to specified device automatically when

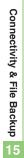



Additional Functions

Sending Files

Sending My Details	● ◆ ○ □ → ○ → Send My Card → ● → Via Bluetooth → ● → Select device → ● → Yes → ● → Transfer starts	
Sending non-Phone Book files	In file list, select file $\Rightarrow \textcircled{e} \Rightarrow Send$ (or Send/ Blog) $\Rightarrow \textcircled{e} \Rightarrow Via Bluetooth \Rightarrow \textcircled{e} \Rightarrow Selectdevice \Rightarrow \textcircled{e} \Rightarrow Yes \Rightarrow \textcircled{e} \Rightarrow Transfer starts$	

Backup

Backup & Restore

Backing up all items	 Settings Settings Backup/Restore Backup All Items Enter Handset Code Yes Backup complete Setup All Items
Encoding data for backup	 Settings Settings Settings/Manage Encode Settings Select item On Available for Phone Book, Messaging folders, Calendar and Tasks.
Restoring all items	 Settings → O → O Phone/ → Backup/Restore → O → Restore All Items → Yes → O → Yes → O → Restore complete → O → O
Backup Files	·

Deleting backup iles	 Settings Settings Select file ()/) Complete select file Select file ()/) Complete selection Yes

S! Addressbook Back-up

Canceling auto synchronization	 Phone S! Addressbook Back-up Details Auto Sync Settings Set On/Off Off Off
Changing auto synchronization settings	Start Here ● ◆ S! Addressbook Back-up ● ◆ Details ● ◆ Auto Sync Settings ● ◆ See below • Set Set On/Off to On beforehand.
	Changing Auto Sync Frequency Set Frequency ● Enter/select date/time/day of the week ● ♥ ● ♥ ● ● For After Editing Ph.Book(10 min.), omit steps for date, time, etc.
	Changing Auto Sync Command Sync Mode Setting ⇒ ● ⇒ Select command ● ● ⇒ ☺
Confirming password	 (𝔅) ⇒ 𝒴𝒶𝒶𝒶𝑘𝔄𝑘 (𝔅) ⇒ 𝑘𝑘𝔄𝑘𝑘 (𝑘) ⇒ 𝑘𝑘𝑘𝑘 (𝑘) ⇒ 𝑘𝑘𝑘𝑘𝑘 (𝑘) ⇒ 𝑘𝑘𝑘𝑘 (𝑘) ⇒ 𝑘𝑘𝑘 (𝑘) ⇒ 𝑘𝑘 (𝑘) ⇒ 𝑘 (𝑘) ⇒ 𝑘
Opening log	● ◆ Phone ◆ ● ◆ S! Addressbook Back-up ◆ ● ◆ Details ◆ ● ◆ Sync Log ◆ ● ◆ Select record ◆ ●
Deleting log records	Start Here ● > Phone ● > S! Addressbook Back-up ● > Details ● > Sync Log > ● > See below
	One Record Select record $\Rightarrow \textcircled{O} \Rightarrow Delete \Rightarrow \textcircled{O} \Rightarrow Yes \Rightarrow \textcircled{O}$
	$\textcircled{O} \Rightarrow \textit{Delete All} \Rightarrow \textcircled{O} \Rightarrow \textit{Yes} \Rightarrow \textcircled{O}$



Troubleshooting

Wi-Fi

2) v

Wi-Fi disconnects

 Connection is interrupted automatically if Display goes dark after a period of inactivity; restored when Display reactivates.

2

Cannot connect to Wi-Fi

- Depending on access point settings, handset may not connect to Wi-Fi when powered on outside 3G range. In this case, pass through the 3G service area carrying the handset and retry.
- Login page opens when using public wireless LAN service
- Some public wireless LAN services require authentication via Direct Browser. Enter corresponding user ID/ password.

File Transfer

Some files are not received

 If storage limit is reached during transfers, remaining files will not be received.



Cannot receive/accept connection requests even when Infrared/ Bluetooth[®] is *On*

- Handset may not be in Standby.
- Keypad Lock/Function Lock may be active.
- Software Update may be in progress.

Phone Book settings are lost

- One file transfer resets these settings:
 - Category, Tone, Light, Vibration, Secret
- Picture setting may be lost depending on image; send the image separately and reassign it.

Calendar/Tasks settings are lost

- One file transfer resets these settings:
 - Alarm tone/video, Secret, S! Friend's Status

Bookmarks are not saved properly

- Large Bookmarks may not be received correctly.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

Messages are not saved properly on handset

- Messages may not be received depending on the size.
- Messages received via One File Transfer are saved to Data Folder (Other Documents) and cannot be used as messages.
- Sky Mail may be received as S! Mail when transferred from other SoftBank handsets via All File Transfer.
- In All File Transfers, overwriting messaging folders deletes sort keys.

Messages are not saved properly on recipient devices

- Mail Notices are saved as messages, invalidating complete message retrieval.
- When sending messages to other handset models via All File Transfer, Spam Folder messages may be saved to the incoming message folder.
- When sending messages in Drafts to other handset models via All File Transfer, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

Cannot find files in DCIM folder

• Received files in DCIM folder are saved to Pictures folder.



Troubleshooting

Infrared

Infrared transfer fails

- Infrared Port may be obstructed by dust, etc.; clean with soft cloth.
- Transfers may fail in direct sunlight. under fluorescent lighting or near infrared equipment.

Backup & Restore



Backup fails

 Check handset/Memory Card memory; backup may fail if the memory is low.

Some files are not restored

 If storage limit is reached during Restore, remaining files will not be restored

Cannot use backup files on other SoftBank handsets or PCs

• Some backup files may not be usable on other SoftBank handsets or PCs.



Cannot open backup files

· Some backup files may open only after being restored to handset.

Phone Book settings are lost

· Picture setting may be lost depending on image; send the image separately and reassion it.

Messages are not saved properly

- Transfer may delete sort keys.
- Mail Notices are restored as messages. invalidating complete message retrieval.

Bookmarks are not saved properly

- Yahoo! Keitai. Streaming and PC Site Browser/Direct Browser Bookmarks are all backed up as a single file.
- · Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

Exporting Backed Up Data to Other SoftBank Handsets



Messages are not saved properly

- · If spam filter is available on recipient handset, Spam Folder messages are saved in spam folder regardless of the setting. (If unavailable, they are saved as normal received messages.)
- When restoring draft messages, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

Importing Data Backed Up on Other SoftBank Handsets



Messages are not saved properly

- · Messages may not be restored depending on the size.
- Sky Mail may be restored as S! Mail.



Connectivity & File Backup

Date & Time	.16-2
Display & Illumination	.16-3
Language	. 16-3
Image & Text	. 16-3
Display & Backlight	. 16-3
Standby Display	. 16-4
Key Backlight	. 16-4
Key Illumination	. 16-4
Incoming Transmissions	.16-5
Handset Response	. 16-5

Sounds	. 16-6
System Sounds	16-6
Additional Sound Settings	16-6
Connectivity	. 16-7
Network	16-7
IP Service	16-7
Reset	. 16-8
Restoring Default Settings	16-8

Handset Customization



Date & Time

Date & Time	Start Here) ● ◆ Settings ◆ ● ◆ In Sound/Display menu, Date & Time ◆ ●
Setting the date and time	Set Date/Time ♦ ● ♦ Enter the year ♦ Enter the month ♦ Enter the day ♦ Enter the time ♦ ● ♦ Yes ♦ ●
Correcting Clock manually	Time Correction $\Rightarrow \bigcirc \Rightarrow$ Manual $\Rightarrow \bigcirc \Rightarrow$ Yes $\Rightarrow \bigcirc \Rightarrow$ Yes $\Rightarrow \bigcirc$
Disabling auto Clock correction	Time Correction ♦ ● ♦ Auto Corr. Setting ♦ ● ♦ Off ♦ ●
Setting auto Clock correction timing	Time Correction••Auto Corr. Setting••••Select item••• <th< td=""></th<>
Activating Daylight Saving	Daylight Saving ♥ ● ♥ On ♥ ●
Changing Time Zone	Set Time Zone ♦ ● ♦ 😔 Select area ♦ ●
Adding custom time zone	Set Time Zone ♦ ● ♦ ◎ ♦ Enter city name ♦ ● ♦ ② + or - ♦ ⊙ ♦ Enter time difference ♦ ●
Changing time format to 12 hour	Time Format ♥ ● ♥ 12 Hour ♥ ●
Changing date format	Date Format ♦ ● ♦ Select option ♦ ●
Starting the Calendar week on Monday	Calendar Format ♦ ● ♦ Monday-Sunday ♦ ●



Display & Illumination

Language Start Here	● 🕈 Settings 🕈 ● 🕈 Sound/Display menu	
Switching interface between Japanese and English Language or 言語選択 ◆ ● ◆ English or 日本語 ◆ ●		
Image & Text Start Here	● ✦ <i>Settings</i> ✦ ● ✦ In Sound/Display menu, <i>Display</i> ✦ ●	
Showing preloaded images for incoming calls, etc.	System Graphics ♦ ④ ♦ Select item ♦ ④ ♦ Preset Animation (or Pattern 1 to Pattern 3) ♥ ⑥	
Showing Data Folder images for incoming calls, etc.	System Graphics → ● → Select item → ● → Select folder → ● → Select image → ● → Specify image area → ● • Some images may be usable without specifying image area.	
Showing Customized Screen for incoming calls, etc.	System Graphics ♦ ● ♦ Select item ♦ ● ♦ Customized Screen ♦ ● ♦ ● • Not available for Power On or Power Off.	
Selecting image enhancement option for Standby and video playback	<i>Vivid Mode</i> \Rightarrow (e) \Rightarrow Select option \Rightarrow (e)	
Changing font of numbers entered in Standby	Dial Number ♦ ● ♦ Select pattern ♦ ●	
Showing a message each time handset is powered on	Greeting Message → ● → Edit Message → ● → Enter message → ● → Switch On/Off → ● → On → ●	
Display & Backlight Start Here	●	
Disabling display transition effects	Display Effects ♦ ● ♦ Off ♦ ●	
Changing Display/key Backlight illumination time	Backlight → ● → Time Out → ● → Select time → ● • For custom illumination time, select Other.	
Changing Display Brightness	Backlight ♦ ● ♦ Brightness ♦ ● ♦ Adjust level ♦ ●	
Canceling/activating Light Sensor	$Backlight \Rightarrow \bigcirc \Rightarrow Brightness \Rightarrow \bigcirc \Rightarrow \boxdot (\Box / \checkmark) \Rightarrow \bigcirc$	
Changing inactivity time after which Display turns off	Display Saving ♦ ● ♦ Select time ♦ ●	



Display & Illumination

Standby Display Start Her	▣ ● ♦ Settings ♦ ● ♦ In Sound/Display menu, Display ♦ ● ♦ Standby Display ♦ (
Changing Clock/Calendar	Clock/Calendar ♦ ● ♦ Select type ♦ ●
Selecting Mobile Widget display option	Show Widget ➡ ● ➡ Select option ➡ ●
Hiding indicators in Standby	Display Status Icon ♦ ● ♦ Off ♦ ●
Showing Network service provider name in Standby	Show Operator Name ♦ ● ♦ On ♦ ●
Key Backlight Start Her	e ● ♦ Settings ♦ ● ♦ ↔ Phone/₽
Disabling key Backlight illumination	Set Key Light ♦ ● ♦ Off ♦ ●
	Set Key Light ♦ ● ♦ Off ♦ ●



X Incoming Transmission Settings-

Handset Response Start Here	● ♦ Settings ♦ ● ♦ In Sound/Display menu, Sounds & Alerts ♦ ●
Changing ringtone volume	Volume ♦ ● ♦ Select item ♦ ● ♦ Adjust level ♦ ●
Selecting illumination option	Event Light $\Rightarrow \textcircled{O} \Rightarrow$ Select item $\Rightarrow \textcircled{O} \Rightarrow$ Switch On/Off $\Rightarrow \textcircled{O} \Rightarrow$ On, Link to Sound or Off $\Rightarrow \textcircled{O}$
Setting illumination color	<i>Event Light</i> \Rightarrow \bigcirc \Rightarrow Select item \Rightarrow \bigcirc \Rightarrow <i>Light Color</i> \Rightarrow \bigcirc \Rightarrow Select color \Rightarrow \bigcirc
Changing Key Illumination patterns	 Event Light ★ ● ★ Select item ★ ● ★ Key Pattern ★ ● ★ Select pattern ★ ● Regardless of Key Pattern setting, ringtones control illumination when Switch On/ Off is set to Link to Sound.
Enabling/disabling illumination for missed transmissions	Status Light $\Rightarrow \odot \Rightarrow$ Select item $\Rightarrow \odot \Rightarrow$ Switch On/Off $\Rightarrow \odot \Rightarrow$ On or Off $\Rightarrow \odot$
Setting illumination color for missed transmissions	Status Light ♦ ● ♦ Select item ♦ ● ♦ Light Color ♦ ● ♦ Select color ♦ ●
Answering calls with other keys	Any Key Answer ◆ ● ◆ On ◆ ● ● Use ①:: - ♡::::, ¥.:::, #:::::::::::::::::::::::::::::::::
Muting ringer with other keys	Any Key Answer → ● → Only Mute → ● ● Use ○ □ - ♡ □, ★, ★, (#), (#), (***), (**



┎ X Sound Settings-

System Sounds Start Here ● > Settings ◆ ● In Sound/Display menu, Sounds & Alerts ◆ ●		
Enabling Keypad Tones	System Sounds \Rightarrow () \Rightarrow Keypad Tones \Rightarrow () \Rightarrow Select tone \Rightarrow ()	
Changing S! Circle Talk tone	System Sounds ♦ ● ♦ S! Circle Talk ♦ ● ♦ Select tone ♦ ●	
Changing other System Sounds	System Sounds ⇒ (i) ⇒ Select item ⇒ (i) ⇒ Tone or Sound ⇒ (ii) ⇒ Select folder ⇒ (ii) ⇒ Select tone/file ⇒ (iii) • For files with limited usage period, choose Yes and press (iii).	
Disabling System Sounds	System Sounds ◆ ● ◆ Select item ◆ ● ◆ Tone or Sound ◆ ● ◆ Off ◆ ● • Not available for S! Circle Talk. • For Keypad Tones, omit Tone or Sound selection step.	
Changing System Sound duration	System Sounds ★ ● ★ Select item ★ ● ★ Duration ★ ● ★ Select/enter time ★ ● • Not available for Keypad Tones or S! Circle Talk.	
Changing System Sound volume	Volume ♦ ● ♦ General Volume ♦ ● ♦ Adjust level ♦ ●	
Additional Sound Settings	Here) ● → Settings → ● → Sound/Display menu	
Disabling Speaker when using Headphones	Ringer Output 🕈 🖲 🕈 Earphone 🕈 🖲	
Activating Speaker surround	Sounds & Alerts ➡ ● ➡ Surround ➡ ● ➡ On ➡ ●	



X Connectivity S	Settings —
------------------	------------

Network Start Here ● ◆ Settings ◆ ● ◆ ⊗ Network		
Selecting a Network manually	Select Network ♦ ● ♦ Manual ♦ ● ♦ Select Network ♦ ●	
Adding preferred Networks	Select Network $\Rightarrow \odot \Rightarrow$ Set Preferred $\Rightarrow \odot \Rightarrow$ Select target location $\Rightarrow \odot \Rightarrow$ Insert $\Rightarrow \odot \Rightarrow$ Select Network $\Rightarrow \odot$	
Adding preferred Networks to the end	Select Network ♦ ● ♦ Set Preferred ♦ ● ♦ ● ♦ Add to End ♦ ● ♦ Select Network ♥ ●	
Deleting preferred Networks	Select Network ♦ ● ♦ Set Preferred ♥ ● ♥ Select Network ♥ ● ♥ Delete ♥ ●	
Adding Networks	 Select Network ◆ ● → Add New Network ◆ ● → Add ◆ ● → Enter country code → ● → Enter Network code → ● → Enter name → ● → Select NW Type → ● → Select type → ● After selecting Add New Network and pressing ●, Network list appears if Network has already been added. To add more, press ● again and proceed. 	
Editing Networks	Select Network ◆ ● ◆ Add New Network ◆ ● ◆ Select Network ◆ ● ◆ Change ◆ ● ◆ Edit in the same manner as adding Networks ◆ ●	
Deleting Networks	Select Network ♦ ● ♦ Add New Network ♦ ● ♦ Select Network ♥ ● ♥ Delete ♥ ●	
Switching Network service between 3G and GSM manually	Select Service ➡	
Refreshing Network connection	Re-search Signal 🗭 🖲	
Retrieving Network Information	Retrieve NW Info ♦ ● ♦ Yes ♦ ● ♦ ●	
Checking Network status	Network Info 🌩 🖲	
Editing connection names for mobile data communication	External Device ♦ ● ♦ Select name ♦ ● ♦ Edit ♦ ●	
Clearing connection names for mobile data communication	External Device ♦ ● ♦ 🐵 ♦ Reset ♦ ● ♦ Yes ♦ ●	
IP Service $\texttt{Start Here} \bullet \texttt{Start Here} \bullet \texttt$		
Enabling IP Service	<i>IP Service Setting</i> → ● → <i>On</i> → ● • Enable IP Service to use SI Friend's Status and SI Circle Talk.	



X Reset Settings -

Restoring Default Settings Start Here Start Here Start Here Phone/SP Master Reset ⇒ Image: Start Here		
Restoring default handset settings	Reset Settings \Rightarrow \bigcirc \Rightarrow Enter Administrator Code \Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc \Rightarrow Yes \Rightarrow \bigcirc \Rightarrow Some default settings may not be restored.	
Clearing all Phone Book entries, Data Folder files, etc.	 Reset All ★ ● ★ Enter Administrator Code ★ ● ★ Yes ★ ● ★ Yes ★ ● Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai[®] service providers for details.) Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications. Handset Code and Administrator Code return to the default state (unset). 	

• A confirmation may appear before entering Administrator Code; end the current function to proceed.

• When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.



USIM Card	17-2
About USIM Card	17-2
USIM Card Installation	17-3
Battery	17-4
Battery Installation	
Software Update	17-5
Cleaning Handset	17-6
Troubleshooting	17-7
Text Entry Key Assignments	17-9
Pager Codes	17-11
Pager Code List	17-11
Character Codes	17-12
Character Code List	17-12

Weather Indicators	17-18
Weather Indicator List	17-18
Specifications	. 17-19
Memory Card Structure & Contents .	17-25
Menu List	17-26
Index	17-34
Warranty & Service	17-42
Customer Service	. 17-43

17 Appendix


> **Q** 17-1

USIM Card

About USIM Card

USIM Card is an IC card containing customer and authentication information, including the handset number. USIM Card must be inserted to use this handset. Save Phone Book entries on USIM Card Phone Book to use them on other SoftBank handsets. Depending on the USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

Precautions

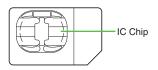

- Do not insert USIM Card into any other IC card device. SoftBank Mobile is not liable for resulting damages.
- Keep the USIM Card IC chip clean; malfunction may result. Clean with soft dry cloth.
- Do not attach labels to USIM Card. Malfunction may result.

Important

- USIM Card is the property of SoftBank Mobile.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to SoftBank Mobile upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Back up USIM Card files. SoftBank Mobile is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P.17-43).

USIM PIN

Four- to eight-digit code (**9999** by default); activate PIN Entry to restrict handset use.

PIN Lock

 Entering incorrect PIN three consecutive times activates PIN Lock, limiting handset use.

Canceling PIN Lock

- Contact SoftBank Mobile Customer Center, General Information (P.17-43) for your Personal Unblocking Key (PUK Code) and follow these steps:
 - Enter PUK Code $\Rightarrow \textcircled{o} \Rightarrow$ Enter new PIN $\Rightarrow \textcircled{o} \Rightarrow$ Re-enter new PIN $\Rightarrow \textcircled{o}$
 - Write down PUK code.

PUK Lock

 Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. Contact SoftBank Mobile Customer Center, General Information (P.17-43) for recovery.





Appendix

17

USIM Card Installation

- Do not apply excessive force to insert/remove USIM Card.
- USIM Card must be inserted to use this handset.

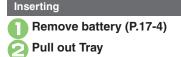

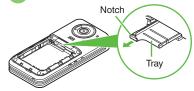

• Use Notch to pull out Tray.


Slide in USIM Card with IC chip facing up



• Reinstall battery (P.17-4).

Push in Tray fully

Removing

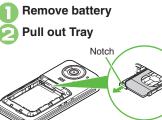

• Use Notch to pull out Tray.

Lift and slide out USIM Card as shown



- Reinstall battery.
- Take care not to lose removed USIM Card.

After Repairs, USIM Card Replacement or Handset Upgrade/Replacement

 Some downloaded files may be inaccessible. In addition, S! Applications and BookSurfing[®] may be disabled after USIM Card replacement.



Battery Installation

About Battery

- Charge battery at least once every six months; an uncharged battery may become unusable or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with a dry cotton swab.
- To maintain water/dust resistance, close Battery Cover properly.
- Battery is not waterproofed or dustproofed.

Lithium-ion Battery

- This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.
 - To recycle a used Li-ion00 lithium-ion battery, take it to any shop displaying the symbol shown above.
 - To avoid fire or electric shock, do not short-circuit or disassemble battery.

Inserting & Removing



• Use Notch to open cover, then lift as shown.




Insert battery



• With logo side up, fit tabs into battery cavity slots.



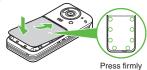

along edges

- Fit cover top into slot, then press down firmly.
- Close cover firmly. Debris trapped between cover and base may expose handset to liquid/dust.

Removing

• Power handset off and lift battery as shown.





Software Update

Check for firmware updates and download as required.

Precautions

- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Update failure may disable handset. To reduce failure risk, make sure signal is strong and stable, and charge battery beforehand.
- Update will not start if other functions are in use. Before updating software (or before scheduled update time), end all active functions/applications.
- Disconnect USB Cable beforehand to reduce failure risk.
- Always back up important information. SoftBank Mobile cannot be held liable for damages from lost information, etc.

Updating Software

Packet transmission fees do not apply to updates (including checking, downloading and rewriting).

● ⇒ Settings ⇒ ● ⇒ ☺
 Phone/♀ ⇒ Software
 Update ⇒ ●

Software Update 🕈 🖲



Follow onscreen instructions.

Update Result

In 🕗, Update Result 🕈 💽

Scheduled Update (Japanese)

SoftBank Mobile sends update notice via SMS; read and change preset update schedule as needed. A confirmation appears at scheduled update time. Press (•) or wait a while for update to start.

When Updated

Update success notification appears and handset reboots.

After reboot, completion message appears and Information window opens.

Update Result

While Information window appears, *Update Result* ➡ ●

Reboot Failure

 If handset does not return to Standby after update, power handset off, reinsert battery, then restart it. If it still does not restart, contact SoftBank Mobile Customer Center, Customer Assistance (P.17-43).



Cleaning Handset

Washing Handset

Wipe off dirt, sand, beverage, etc., gently with cloth. Then with Battery Cover closed, hold handset approximately 10 cm below faucet or shower head and wash with low-pressure tap water (6 liters/min. or lower) at normal temperature (5°C - 35°C). Wash with your hands, taking care not to open the covers; do not use a brush or sponge. Dry handset before use.

- Before washing handset, make sure that Battery Cover and Port Cover are closed firmly.
- Do not use a washing machine or ultrasonic cleaner.
- Do not place handset in a microwave oven to dry it. Battery/handset may leak, burst, overheat or ignite; may cause malfunction, accident or injury.
- Do not dry handset by exposing it to extreme heat (e.g., hot air from dryers, etc.); may cause warping, discoloration or damage.


Drying Handset

Dry these parts/areas after washing handset:

Hinge Earpiece Microphone Speaker


- Wipe handset surface with dry cloth
- Holding hinge firmly by its sides, shake handset about 20 times



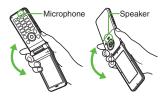



Pat against dry cloth to remove moisture from grooves

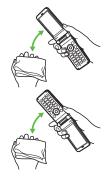

Leave handset on dry cloth for approximately 2 - 3 hours at room temperature

Do Not Use Wet Handset

- Voice quality may be affected, or moisture may transfer to clothes, bag, etc.
- Moisture may short-circuit External Device Port.
- Exposure to cold may freeze moisture causing malfunction.



Troubleshooting

General

Problem	Possible Cause	Solution
	Was 🕤 pressed long enough?	Press 🕤 longer.
Handset won't power on	Battery may need to be charged or replaced.	Charge battery or install a charged battery.
	Battery may not be properly installed.	Install battery properly (P.17-4).
Operation is restricted after power on	Is Switch On/Off in PIN Entry On ?	If On , PIN is required. Enter PIN according to onscreen prompt.
Insert USIM Card	USIM Card may not be properly inserted.	Power handset off and check that USIM Card is properly inserted, then restart handset. If the message still appears, USIM may be damaged.
appears	The correct USIM Card may not be inserted.	Make sure the correct USIM Card is inserted. The inserted USIM Card may not be valid.
	There may be debris on IC chip/terminals.	Clean relevant parts with dry cloth and re-insert.
REFRESH appears and handset returns to Standby	Handset may have been dropped or subjected to shocks.	Handset failed to recognize USIM Card temporarily. This is not a malfunction.
Operation is	Keypad Lock may be active.	Cancel Keypad Lock (P.2-24).
restricted	Function Lock may be active.	Cancel Function Lock (P.13-2).

Problem	Possible Cause	Solution
Battery strength indicator flashes when not charging	Ambient temperature may be outside 5°C to 35°C.	Use within an ambient temperature of 5°C - 35°C.
Saved entry/folder does not appear on handset	Entry/folder may be set to Secret.	Activate Show Secret Data (P.13-3).
	Handset/AC Charger may warm while charging.	Unless handset/AC Charger is
Handset/AC Charger feels warm	Handset may warm during extended periods of use.	too hot to touch, warmth is considered normal. Always avoid prolonged skin contact to
	Handset may warm during Video Calls.	prevent burn injuries.
Cannot access Memory Card files	Memory Card may not be properly formatted.	Use 944SH-formatted Memory Cards.
Clock settings are lost	Did you leave handset without battery?	Clock settings remain even when removing battery for replacement, etc. However, if handset is left with no battery or an exhausted one for an extended period of time (approximately one hour), Clock will need to be reset.



Troubleshooting

Charger/Battery

Problem	Possible Cause	Solution
	Remaining charge shortens charging time.	This is normal.
Battery charges quickly	Battery may be terminally exhausted or defective. (Small Light flashes red.)	Replace battery with a new one.
Battery charges	Charging slows during Video Calls.	End the call to charge faster.
slowly	Battery may be charging via USB.	Use AC Charger.
	AC Charger may not be properly connected to Desktop Holder or handset.	Make sure connector is securely inserted and retry.
	AC Charger may not be firmly plugged in to AC outlet.	Remove plug from outlet, re-insert and retry.
Battery won't charge	Battery may not be properly installed.	Install battery properly (P.17-4).
	Battery, AC Charger, or Charging Terminals, or Device Port may be obstructed by dust, etc.	Clean terminals, connector and Port with a dry cotton swab and retry.
	Charger, etc. may not be supported.	Use specified AC Charger, etc. only; others may damage battery.

Problem	Possible Cause	Solution
Battery Time	High power consuming operations are in use.	Keep handset closed in Standby; reduce TV, S! Application, Media Player and camera use, and limit transmissions/external connections.
seems shorter than usual	Using handset in poor conditions may shorten Battery Time.	Avoid prolonged use of handset out-of-range or in poor signal conditions.
	Power hungry settings may be active.	Lower Brightness, select shorter Display Saving/ Backlight time, etc.



Text Entry Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
	あいうえお ぁぃぅぇぉ	アイウエオ アイウエオ	@./1 [] (space)	1	1
2*	かきくけこ	カキクケコ	ABCabc2	2	2
3 *	さしすせそ	サシスセソ	DEFdef3	3	3
4	たちつてとっ	タチツテトッ	GHIghi4	4	4
5	なにぬねの	ナニヌネノ	JKLjkI5	5	5
6 .#	はひふへほ	ハヒフヘホ	MNOmno6	6	6
7.5	まみむめも	マミムメモ	PQRSpqrs7	7	7
8	やゆよゃゅょ	ヤユヨャュョ	TUVtuv8	8	8
9 45 WWW	らりるれろ	ラリルレロ	WXYZwxyz9	9	9
() **	わをんー	ワヲンー	0	0	0
(V .**)	* •	* ° _1		X + P (pause)? - ²	
¥ ^{+‡}		Log, Pictogram List (do	uble-byte), Symbol List ³		
(#, <u>;</u>)	👡 🍕 (line breal	<) ? ! 🗌 (space)	,. ∉ (line break) ?! [] (space)	#	

¹- is available only in Single-byte Katakana mode.

²Available for phone number entry; some characters may not be enterable in some windows. ³May not be enterable in some windows.



Text Entry Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
٢	Conversion ⁴	Cursor	up/down; 🦸 (line break) wh	ien \textcircled{O} is pressed at the end	d of text
(Long)	Correction Conversion ⁵				
\odot			Cursor left/right		
B		Switch en	try modes (except during co	onversion)	
(1) (1)	Search Word ⁵				
(Long)	Toggle Personal Mode ⁵		Toggle Personal Mode ^{5,6}		
	Тод	gle case (for some charact	ers)		
			Toggle mode (upper/ lower and lower case)		
CLEAR G			Delete one character		
104.4	Cancel conversion		Cancel conversion ⁶		Delete code
(Long)		I	Delete before or after curso	r	
3 ,)		Reco	over characters deleted with	C. FAR	
<u>a</u> , .	Re-convert ⁷		Re-convert ^{6, 7}		
۲			Confirm/Done		
	Non-Predictive suggestions ⁵				
(Y)	Hiragana to Katakana/ Alphanumeric Conversion⁵				
ি (Long)	Single Kanji Conversion ⁵				

⁴Cursor moves up/down except during conversion. ⁵Available during conversion.

⁶Available only in Single-byte Alphanumerics mode.
⁷Press ^(a) immediately after inserting characters to re-convert them.



Pager Code List

Gray background indicates upper and lower case available. Press (B) to switch immediately after character entry.

Double-byte Upper Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
		1	2	3	4	5	6	7	8	9	0
	1	あ	こ	う	え	お	А	В	С	D	Е
First)	2	か	も	<	け	۱J	F	G	Н	-	J
	3	さ	し	す	せ	そ	Κ	L	М	Ν	0
(Press	4	た	ち	0	て	Ł	Ρ	Q	R	S	Т
Pre	5	な	に	む	ね	の	U	V	W	Х	Υ
it (6	は	ひ	ふ	~	ほ	Ζ	?	!		/
Digit	7	ま	み	む	Ø	も	¥	&			*1
	8	や	(ø)	よ	X	#	Space		*2
First	9	6	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	h	*	٥	6	7	8	9	0

Double-byte Lower Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
		1	2	3	4	5	6	7	8	9	0
	1	あ	い	う	え	お	а	b	С	d	е
rst)	2						f	g	h	i	j
ιĒ	3						k	-	m	n	0
SS	4			0			р	q	r	s	t
Pre	5						u	V	w	х	У
E E	6						z				
Dig	7										*1
1 1 1	8	や		кþ		よ					*2
First Digit (Press First)	9										
	0				、	0					

¹Press (∑=)(O™) to insert ∉ (line break) in mail message text, Notepad, etc. ²Press (8=)(O™) to toggle upper and lower case modes.

Single-byte Upper Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
		1	2	3	4	5	6	7	8	9	0
	1	7	1	Ċ	I	1	Α	В	С	D	Е
First)	2	h	+	ク	ታ	П	F	G	н	-	J
ίĒ	3	Ħ	ý	λ	セ	У	К	L	М	Ν	0
(Press	4	g	£	Ÿ	Ŧ	1	Р	Q	R	S	Т
Pre	5	ナ	П	R	À	1	U	V	W	Х	Υ
it (6	٨	Ł	7	٨	*	Ζ	?	!	-	/
Digit	7	र	""	٨	×	ŧ	¥	&			*1
	8	Þ	(1)	Ξ	X	#	Space		*2
First	9	Ī	IJ	ŀ	V	П	1	2	3	4	5
	0	7	7	7	*	٥	6	7	8	9	0

Single-byte Lower Case

				Se	cond	Digit	(Pre	ss Ne	ext)		
		1	2	3	4	5	6	7	8	9	0
	1	7	1	ņ	I	1	а	b	с	d	е
First)	2						f	g	h	i	j
	3						k	1	m	n	0
SS	4			ÿ			р	q	r	s	t
Pre	5						u	v	w	х	У
it (6						z				
Dig	7										*1
st	8	Þ		ı		Э					*2
First Digit (Press	9										
	0										



Character Code List

First Three	Last Digit					First Three				La	ist I	Dig	it	_			First Three			L	ast	Dig	git			First Three	e			Last	Dig	it			٦					
Digits	0	1	2	3	4	5	6	7	8	9	Digits	0	1	2	3	4	5	6	7	8	9	Digits	0	1 2	2 3	3 4	5	6	5 7	89		0	1	2	3 4	5	6	7	8 9	3
010		Spac		0	2	:.	:	:	;	?	043		た			ぢ	2	2	づ		で										171	迂			鎢 窺			臼	渦り	虚
011	!!	*	0							\sim	044		ピ									080	-	- 1	[_	L			172		き 欝 、		漫 妓	凯	浦	瓜	閏	箏
012	N	7	7.		숫	- <i>P</i>	X	0) —	-	045		び								I.E	081	<u> </u>	<u>+</u> -	- !	ſ	- 7				173	Ţ	運	雲						
013	-	<i>_</i> ,,	\sum	$\hat{}$	·	Ų.	••••			,	046	IE	ぽ	ま	み	む	め	ŧ			Þ	082		÷ †	-			-	- +					_		え-			-	
014			()	[J	L	1	ł	ł	047						3	れ	3	わ	わ	083		тţ	-						173				生創				影	
015	(\rangle	«	>>		Г	ſ	1	l	1	048	ゐ	え	を	h																174		1 栄						頴	ē
016	+	-	<u>+</u>	×		· =	: <i>≠</i>	<														130		1)(2)	00	3)(4)(5)(6		089			j詠		夜疫				謁走	戉
017	-	\sim		ð			Ĺ			¥	050					1	Ċ	ウ	I	I	オ	131	000	1) (12	2) ([3) (14	DE		00	0181		閲			円屋				延約	
018		¢			#		*	0	3	公	051	オ	力				2	2	ケ	ケ		132	20			I IV	/	V	I V	V)	(177		援					燕	狼絲	豙
019	 ★	Ċ		~			_	_		_	052					ジ						133	X	≥ ₁ 10/ ±1	u ti	ロチ	ンメート	14	2 F.	ンルター		豐	9苑	園」			塩			
020		•	٠Ļ				∇		×	T	053		タ					ッ			てい	134						F JE)	ルジ	mm cr			- 7	-	_	お-	-	-1-6	- 	
021	∣→	• ←	· T	↓	Ξ				_	_	054		۲								끘	135	km r	ng ko							178							於	汚り	别
022		_					e	∋	\subseteq	2	055			Ľ		ブ					. 朩	136	-	- a	刑					<. TEL (±		쁘	1央						Arta A	
023	P		U						_		056	말	术	\leq	2	4	~	t	7	Þ		137								治症啼		DE			黄図					
024			\wedge	V	-	⇒	¢	· \			057		Ξ						Ш	7	2	138 139	≒ :	= 1 N U	5	2	: √	1	- 2	í L z	1 181 182				中初			(息 音	臆材	刊
026				2	∇	_		/		_	058	-++	ľ	7	/	9	Л	Τ				139	•		J						182	11	tΖ	1111		、) か-	梞	日		
020		_	• •		Ň		-	-	//	4	060		Δ	в	г	^	E	Z	ш	0	1						あ·				182		- 1			/J· –			- 下亻	4
027	Г°	100			5 #		Ь	÷	*	e	061	K	Å			Ξ				Σ		160	7	亜吨	Б <i>†</i> =			<i>.</i>	3 t <i>i</i>	全 姶 译		1E	ī何·	伽ィ	π /±	: ho	P	嘉	下了夏朔	
028			A	/0	° #		•	1	*		062		φ			$\overline{\Omega}$	0		F	2	1	161	葵												田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田				夏 % 火日	
023					\cup	/					063	1	Ψ				x	8	ç	Y	η	162	突降				呈加呈加									、木		1.5	大学	~
031							0	1	2	3	064	A	ι	v								163								音案層						, _马 1		蚊	半之代	た我
032	4	5	6	7	8	g		11	~	0	065		τ						0	10	μ	164	鞍		< 11		< /14	5 1 2	K HD		187	我		面目			留		餓蒼	2
033	'	0	0	Á		C		Е	F	G	0000	ľ	Ŭ	0	Ψ	λ	Ψ	w				101	+7				ι			_	188				回塊				怪作	
034	Ιн	1	J							0	070		Α	Б	В	Г	Л	F	Ë	ж	3	164		D	人付	日代	7 依	信	⊉ 用	目夷き		恢	~ 懐				~=	~	1.1.1	7
035		s			V					4	071	И	Й		Л	M				P		165	威		をĔ							07			元海		界	뱜	絵さ	₹
036	[``	Ŭ		ľ			b		_	е	072					Ц				Ъ	~	166	移着		「目目		き衣					邂	~		目間				害闻	
037	f	a	h	l i	i	k			n		073		Э			_			_			167	并言		北首		了磯						乱概					- C. Y	_	ŧ
038			r	s	ť		v				074		Ľ.								а	168	福							員因如			*蛙:						各層	
039	Z									Ĺ	075	б	в	Г	Д	е	ë	ж	3	И	Й	169		飲沼					1		194				玄剋			1010	覚角	· •
040		ぁ	あ	U	11	Ъ	5	え	え	お	076	к	л	М	Н	0		р	С	Т	v	170		院隆				t			195	赪	棘較	郭	閣 隔			岳	楽	湏
041	お				ぎ					Ē	077	ф	х	Ц				Ъ	Ы	Ь	Э			_			う.			_	196	咢	[掛]	笠材	堅椙	梶	鰍	潟	割口	晑
042			ざ			; j		ťť		そ	078		я									170						右	宇	三鳥羽	197	恰	括		易滑			轄	且魚	堅

Q 17-12

First Three	Last Digit						
Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9
198	叶椛樺鞄株兜竃蒲釜鎌	230	掘 窟 沓 靴 轡 窪 熊 隈 粂			294	夙宿淑祝縮粛塾熟出術
199	噛 鴨 栢 茅 萱	231	栗 繰 桑 鍬 勲 君 薫 訓 群 軍	261	些	295	述俊峻春瞬竣舜駿准循
200	粥刈苅瓦乾侃冠寒刊	232	郡		佐叉唆嵯左差查沙瑳砂	296	旬楯殉淳準潤盾純巡遵
201	勘勧巻喚堪姦完官寛干		け	263	詐鎖裟坐座挫債催再最	297	醇順処初所暑曙渚庶緒
202	幹患感慣憾換敢柑桓棺	232	卦 袈 祁 係 傾 刑 兄 啓 圭	264	哉塞妻宰彩才採栽歳済	298	署書薯藷諸助叙女序徐
203	款歓汗漢澗潅環甘監看		珪型契形径恵慶慧憩掲	265	災采犀砕砦祭斎細菜裁	299	恕 鋤 除 傷 償
204	竿管簡緩缶翰肝艦莞観	234	携敬景桂渓畦稽系経継	266	載際剤在材罪財冴坂阪	300	勝匠升召哨商唱嘗奨
205	諌貫還鑑間閑関陥韓館	235	繫罫茎荊蛍計詣警軽頚	267	堺榊肴咲崎埼碕鷺作削	301	妾娼宵将小少尚庄床廠
206	舘丸含岸巌玩癌眼岩翫		鶏芸迎鯨劇戟撃激隙桁		咋搾昨朔柵窄策索錯桜	302	彰承抄招掌捷昇昌昭晶
207	贋雁頑顏願		傑欠決潔穴結血訣月件	269	鮭 笹 匙 冊 刷	303	松梢樟樵沼消渉湘焼焦
	き		俟倦健兼券剣喧圏堅嫌	270	察拶撮擦札殺薩雑皐	304	照症省硝礁祥称章笑粧
207	企伎危喜器	239	建憲懸拳捲		鯖捌 錆 鮫 皿 晒 三 傘 参 山	305	紹肖菖 蒋蕉 衝 裳 訟 証 詔
208	基奇嬉寄岐希幾忌揮机	240	検権牽犬献研硯絹県		惨撒散栈燦珊産算纂蚕	306	詳象賞醤鉦鍾鐘障鞘上
209	旗既期棋棄		肩見謙賢軒遣鍵険顕験	273	讃 賛 酸 餐 斬 暫 残	307	丈 丞 乗 冗 剰 城 場 壌 嬢 常
210	機帰毅気汽畿祈季稀		鹸 元 原 厳 幻 弦 減 源 玄 現		——U——	308	情擾条杖浄状畳穣蒸譲
211	紀徽規記貴起軌輝飢騎	243	絃 舷 言 諺 限	273	仕仔伺	309	醸錠嘱埴飾
212	鬼亀偽儀妓宜戯技擬欺		Z		使刺司史嗣四士始姉姿	310	拭 植 殖 燭 織 職 色 触 食
213	犠疑 祇 義 蟻 誼 議 掬 菊 鞠	243	乎 個 古 呼 固		子屍市師志思指支孜斯	311	蝕辱尻伸信侵唇娠寝審
214	吉吃喫桔橘詰砧杵黍却		姑孤己庫弧戸故枯湖狐		施旨枝止死氏獅祉私糸	312	心慎振新晋森榛浸深申
215	客脚虐逆丘久仇休及吸		糊袴股胡菰虎誇跨鈷雇		紙紫肢脂至視詞詩試誌	313	疹真神秦紳臣芯薪親診
216	宮弓急救朽求汲泣灸球		顧鼓五互伍午呉吾娯後		諮資賜雌飼歯事似侍児	314	身辛進針震人仁刃塵壬
217	究窮笈級糾給旧牛去居		御悟梧檎瑚碁語誤護醐	279	字寺慈持時	315	尋甚尽腎訊迅陣靭
218	巨拒拠挙渠虚許距鋸漁		乞鯉交佼侯候倖光公功	280	次滋治爾璽痔磁示而		す
219	禦魚亨享京	249	効 勾 厚 口 向	281	耳自蒔辞汐鹿式識鴫竺	315	笥諏
220	供侠僑兇競共凶協匡	250	后喉坑垢好孔孝宏工		軸宍雫七叱執失嫉室悉	316	須酢図厨逗吹垂帥推水
221	卿叫喬境峡強彊怯恐恭		巧巷幸広庚康弘恒慌抗		湿漆疾質実蔀篠偲柴芝	317	炊睡粋翠衰遂酔錐錘随
222	挟教橋況狂狭矯胸脅興		拘控攻昂晃更杭校梗構	284	屡蕊縞舎写射捨赦斜煮	318	瑞髄崇嵩数枢趨雛据杉
223	蕎鄉鏡響饗驚仰凝尭暁		江洪浩港溝甲皇硬稿糠		社紗者謝車遮蛇邪借勺	319	椙 菅 頗 雀 裾
224	業局曲極玉桐粁僅勤均		紅紘絞綱耕考肯肱腔膏	286	尺杓灼爵酌釈錫若寂弱	320	澄摺寸
225	巾錦斤欣欽琴禁禽筋緊		航荒行衡講貢購郊酵鉱	287	惹主取守手朱殊狩珠種		t
226	芹菌衿襟謹近金吟銀		砿鋼閣降項香高鴻剛劫		腫趣酒首儒受呪寿授樹	320	世瀬畝是凄制
	<	257	号合壕拷濠豪轟麹克刻	289	綬需囚収周	321	勢姓征性成政整星睛棲
226	九		告国穀酷鵠黒獄漉腰甑	290	宗就州修愁拾洲秀秋	322	栖正清牲生盛精聖声製
227	俱句区狗玖矩苦躯駆駈	259	忽惚骨狛込		終線習臭舟蒐衆襲讐蹴	323	西誠誓請逝醒青静斉税
228	駒具愚虞喰空偶寓遇隅	260	此頃今困坤墾婚恨懇		輯週酋酬集醜什住充十	324	脆隻席惜戚斥昔析石積
229	串櫛釧屑屈	261	昏昆根梱混痕紺艮魂	293	従戎柔汁渋獣縦重銃叔	325	籍績脊責赤跡蹟碩切拙

First Three	Last Digit	First Three	Last Digit	First Three	Last Digit	First Three	
Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9
	接摂折設窃節説雪絶舌	357	中仲宙忠抽昼柱注虫衷		な	413	評豹廟描病秒苗錨鋲蒜
	蝉仙先千占宣専尖川戦	358	註酎鋳駐樗瀦猪苧著貯	386	奈那内乍凪薙	414	蛭鰭品彬斌浜瀕貧竇頻
328	扇撰栓栴泉浅洗染潜煎	359	丁兆凋喋寵		謎灘捺鍋楢馴縄畷南楠	415	敏 瓶
	煽旋穿箭線	360	帖帳庁弔張彫徴懲挑	388	軟難汝		
330	繊羨腺舛船薦詮賎践		暢朝潮牒町眺聴脹腸蝶		IC	415	不付埠夫婦富冨布
	選遷銭銑閃鮮前善漸然	362	調課超跳銚長頂鳥勅捗	388	二尼弐迩匂賑肉	416	府怖扶敷斧普浮父符腐
332	全禅繕膳糎	363	直朕沈珍賃鎮陳		虹廿日乳入	417	膚 芙 譜 負 賦 赴 阜 附 侮 撫
	そ			390	如尿韮任妊忍認	418	武舞葡蕪部封楓風葺蕗
332	噌 塑 岨 措 曾	363	津 墜 椎		ぬ~の	419	伏副復幅服
333	曽楚狙疏疎礎祖租粗素	364	槌追鎚痛通塚栂掴槻佃	390	濡禰	420	福腹複覆淵弗払沸仏
	組蘇訴阻遡鼠僧創双叢	365	漬柘辻蔦綴鍔椿潰坪壷		袮 寧 葱 猫 熱 年 念 捻 撚 燃	421	物鮒分吻噴墳憤扮焚奮
	倉喪壮奏爽宋層匝惣想	366	嬬 紬 爪 吊 釣 鶴		粘乃廼之埜嚢悩濃納能	422	粉糞紛雰文聞
336	搜掃挿掻操早曹巣槍槽		τ	393	脳膿農覗蚤		
	漕燥争痩相窓糟総綜聡	366	亭低停偵		は	422	丙併兵塀
	草荘葬蒼藻装走送遭鎗	367	剃 貞 呈 堤 定 帝 底 庭 廷 弟	393	巴把播覇杷	423	幣平弊柄並蔽閉陛米頁
	霜騒像増憎		悌抵挺提梯汀碇禎程締		波派琶破婆罵芭馬俳廃	424	僻壁癖碧別瞥蔑箆偏変
340	臓 蔵 贈 造 促 側 則 即 息		艇訂諦蹄逓		拝排敗杯盃牌背肺輩配	425	片篇編辺返遍便勉娩弁
	捉束測足速俗属賊族続	370	邸鄭釘鼎泥摘擢敵滴		倍培媒梅煤煤狽買売賠	426	鞭
342	卒袖其揃存孫尊損村遜		的笛適鏑溺哲徹撤轍迭	397	陪這蝿秤矧萩伯剥博拍		ほ
	た		鉄典填天展店添纏甜貼	398	柏泊白箔粕舶薄迫曝漠	426	保舗鋪圃捕歩甫補輔
343	他多太汰詑唾堕妥惰打	373	転顛点伝殿澱田電		爆縛莫駁麦	427	穂募墓慕戊暮母簿菩倣
	柁 舵 楕 陀 駄 騨 体 堆 対 耐		E	400	函箱硲箸肇筈櫨幡肌	428	俸包呆報奉宝峰峯崩庖
	岱帯待怠態戴替泰滞胎	373	見 見 見 見 見 見 見 見 見 見 見 見 見 見 見 見 見 見 見		畑畠八鉢溌発醗髪伐罰	429	抱捧放方朋
	腿苔袋貸退逮隊黛鯛代		堵塗妬屠徒斗杜渡登菟		抜 筏 閥 鳩 噺 塙 蛤 隼 伴 判	430	法泡烹砲縫胞芳萌蓬
	台大第醍題鷹滝瀧卓啄		賭途都 鍍砥 砺 努 度 土 奴	403	半反叛帆搬斑板氾汎版	431	蜂褒訪豊邦鋒飽鳳鵬乏
	宅托択拓沢濯琢託鐸濁		怒倒党冬凍刀唐塔塘套		犯班畔繁般藩販範釆煩	432	亡傍剖坊妨帽忘忙房暴
	諾茸凧蛸只	377	宕島嶋悼投搭東桃梼棟	405	頒飯挽晩番盤磐蕃蛮	433	望某棒冒紡肪膨謀貌貿
350	叩但達辰奪脱巽竪辿	378	盗淘湯涛灯燈当痘祷等		U	434	鉾防吠頬北僕卜墨撲朴
	棚谷狸鱈樽誰丹単嘆坦		答筒糖統到	405	匪	435	牧睦穆釦勃没殆堀幌奔
	担探旦歎淡湛炭短端箪	380	董蕩藤討膳豆踏逃透		卑否妃庇彼悲扉批披斐	436	本翻凡盆
	綻耽胆蛋誕鍛団壇弾断	381	鐙陶頭騰闘働動同堂導		比泌疲皮碑秘緋罷肥被		ま
354	暖檀段男談	382	憧撞洞瞳童胴萄道銅峠	408	誹費避非飛樋簸備尾微	436	摩磨魔麻埋妹
	ち	383	鴇匿得徳涜特督禿篤毒		枇 毘 琵 眉 美	437	昧枚毎哩槙幕膜枕鮪柾
354	值知地弛恥	384	独読栃橡凸突椴届鳶苫	410	鼻柊稗匹疋髭彦膝菱	438	鱒桝亦俣又抹末沫迄侭
	智池痴稚置致蜘遅馳築	385	寅酉瀞噸屯惇敦沌豚遁		肘弼必畢筆逼桧姫媛紐	439	繭麿万慢満
356	畜竹筑蓄逐秩窒茶嫡着	386	頓吞曇鈍	412	百謬俵彪標氷漂瓢票表	440	漫蔓

Q 17-14

First Three	Last Digit	First Three	Last Digit	First Three	Last Digit	First Three	Last Digit
Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3 4 5 6 7 8 9
	み	459	履李梨理璃	490	僉 僊 傳 僂 僖 僞 僥 僭 僣	526	壗 壙 壘 壥 壜 壤 壟 壯 壺 壹
440	味未魅巳箕岬密	460	痢 裏 裡 里 離 陸 律 率 立	491	僮價僵儉儁儂儖儕儔儚	527	壻壺壽攵攵敻夛梦夥夬
441	蜜湊蓑稔脈妙粍民眠		葎 掠 略 劉 流 溜 琉 留 硫 粒	492	儡儺儷儼儻儿兀兒兌兔	528	夭夲夸夾竒奕奐奎奚奘
	む		隆竜龍侶慮旅虜了亮僚		兢競兩兪兮冀冂囘册冉	529	奢奠奧獎奩
441	務		両凌寮料梁涼猟療瞭稜	494	冏 冑 冓 冕 冖 冤 冦 冢 冩 冪	530	好 妁 妝 佞 侫 妣 妲 姆 姨
442	夢 無 牟 矛 霧 鵡 椋 婿 娘		糧良諒遼量陵領力緑倫	495	> 决 冱 冲 冰 况 冽 凅 凉 凛	531	姜妍姙姚娥娟娑娜娉娚
	&	465	厘林淋燐琳臨輪隣鱗麟		几處凩凭凰凵凾刄刋刔	532	婀婬婉娵娶婢婪媚媼媾
442	凤		る~れ		刎刧刪刮刳刹剏剄剋剌	533	嫋嫂媽嫣嫗嫦嫩嫖嫺嫻
443	名命明盟迷銘鳴姪牝滅		瑠塁涙累類令伶例冷励		剞剔剪剴剩剳剿剽劍劔	534	嬌嬋嬖嬲嫐嬪嬶嬾嬢孅
444	免棉綿緬面麺	467	嶺怜玲礼苓鈴隷零霊麗		劒剱劈劑辨	535	孀 子 孕 孚 孛 孥 孩 孰 孳 孵
	t		齡 暦 歴 列 劣 烈 裂 廉 恋 憐	500	辦 劬 劭 劼 劵 勁 勍 勗 勞	536	學斈孺宀它宦宸寃寇寉
444	摸模茂妄		漣 煉 簾 練 聯		勣勦飭勠勳勵勸勹匆囟	537	寔寐寤實寢寞寥寫寰寶
445	孟毛猛盲網耗蒙儲木黙	470	蓮連錬		甸匍匐匏匕匚匣匯匱匳	538	寳尅將專對尓尠尢尨尸
446	目 杢 勿 餅 尤 戻 籾 貰 問 悶		ろ	503	C區卆卅丗卉卍凖卞□	539	尹屁屆屎屓
447	紋門匁	470	呂魯櫓炉賂路		卮夘卻卷厂厖厠厦厥厮	540	展屏孱屬屮乢屶屹岌
	や		露労婁廊弄朗楼榔浪漏		厰ム參簒雙叟曼燮叮叨	541	岑岔妛岫岻岶岼岷峅岾
447	也冶夜爺耶野弥		牢狼篭老聾蝋郎六麓禄		叭叺吁吽呀听吭吼吮吶	542	峇峙峩峽峺峭嶌峪崋崕
448	矢 厄 役 約 薬 訳 躍 靖 柳 薮	473	肋録論		吩吝呎咏呵咎呟呱呷呰	543	崗嵜崟崛崑崔崢崚崙崘
449	巅置		わ		咒呻咀呶咄咐咆哇咢咸	544	嵌嵒嵎嵋嵬嵳嵶嶇嶄嶂
	kh	473	倭和話歪賄脇惑		咥 咬 哄 哈 咨	545	嶢嶝嶬嶮嶽薩嶷嶼巉巍
449	偷愈油癒		枠鷲亙亘鰐詫藁蕨椀湾	510	咫哂咤咾咼哘哥哦唏	546	巓巒巖巛 巫已 巵 帋 帚 帙
450	諭輸唯佑優勇友宥幽		碗腕		唔 哽 哮 哭 哺 哢 唹 啀 啣 啌	547	帑 帛 帶 帷 幄 幃 幀 幎 幗 幔
451	悠憂揖有柚湧涌猶猷由	476		512	售啜啅啖啗唸唳啝喙喀	548	幟幢幣幇幵并幺麼广庠
452	祐裕誘遊邑郵雄融夕	477			咯喊喟啻啾喘唧單啼喃	549	廁 廂 廈 廐 廏
	よ	478			喻喇喨嗚嗅嗟嗄嗜嗤嗔	550	廖廣廝廚廛廢廡廨廩
452	予	479			嘔嗷嘖嗾嗽嘛嗹噎噐營	551	廬 廱 廳 廰 廴 廸 廾 弃 弉 彝
	余与誉輿預傭幼妖容庸	480	弌丐丕个丱、丼丿乂		嘴嘶嘲嘸噫噤嘯噬噪嚆	552	彜 弋 弑 弖 弩 弭 弸 彁 彈 彌
454	揚摇擁曜楊樣洋溶熔用		乖乘亂」豫爭舒弎于亞	0.17	嚀嚊嚠嚔嚏嚥嚮嚶嚴囂	553	彎弯彑彖彗彙彡彭彳彷
455	窯羊耀葉蓉要謡踊遥陽		亟亠亢亰亳亶从仍仄仆		嚼囁囃囀囈囎囑囓囗囮	554	件 徂 彿 徊 很 徑 徇 從 徙 徘
456	養慾抑欲沃浴翌翼淀	483	仂 仗 仞 仭 仟 价 伉 佚 估 佛	519	囹 圀 囿 圄 圉	555	徠徨徭徼忖忻忤忸忱忝
	—— 6 ——	484	向佗佇佶侈侏侘佻佩佰	520	圏 國 圉 圓 團 圖 嗇 圜 圦	556	息忿怡恠怙怐怩怎怱怛
456	羅		侑 佯 來 侖 儘 俔 俟 俎 俘 俛		圷 圸 坎 圻 址 坏 坩 埀 垈 坡	557	怕怫怦怏惊恚恁恪恷恟
457	螺裸来莱頼雷洛絡落酪	486	俑俚俐俤俥倚倨倔倪倥	522	坿 垉 垓 垠 垳 垤 垪 垰 埃 埆	558	協恆恍恣恃恤恂恬恫恙
458	乱卵嵐欄濫藍蘭覧	487	倅 伜 俶 倡 倩 倬 俾 俯 們 倆		埔埒埓堊埖埣堋堙堝塲	559	悁 悍 惧 悃 悚
	b		偃假會偕偐偈做偖偬偸		堡塢塋塰毀塒堽塹墅墹	560	悄悛悖悗悒悧悋惡悸
458	利吏	489	傀 傚 傅 傴 傲	525	墟墫墺壞墙墸墮壅壓壑	561	惠惓悴忰悽惆悵惘慍愕

Q 17-**1**5

First Three	Last Digit	First Three	Lá	ast Digi	t		First Three		Last	Digit		First Three	La	st Digit	
Digits	0 1 2 3 4 5 6 7 8 9	Digits	0 1 2 3	4 5	6 7	89	Digits	0 1 2	3 4	56	578	9 Digits	0 1 2 3	4 5 6	789
562	愆惶惷愀惴惺愃惚惻惱	598	梵梠梺椏	梍桾	椁棊	椒棘	634	瀏濾濾	和湖湖	皆瀝湯	盧瀟 瀰	瀾 670	磧磚磽	磴礇뎫	義礑 礙 礬
563	愍愎慇愾愨愧慊愿愼愬	599	椢 椦 棡 椌	棍			635	瀲灑灣	家炒	り炯ヵ	冏炬炸	炳 671	礫祀祠祗		
564	愴愽慂慄慳慷慘慙慚慫	600	樁 棧 棕	椶椒	接棗	憂 棣 椥		炮烟然			夆 焜 焙	煥 672	禊禝禧齋	禪禮禳	€ 禹 禹 秉
565	慴 慯 慥 慱 慟 慝 慓 慵 憙 憖	601	棹棠棯椨	椪椚	椣 桎	榆楹	637	熙熙煦	2 榮 煌	11 煖 ㎏	易熏燻	熄 673	 秕 秧 秬 秡	秣稈稚	1 稘 稙 稠
566	憇憬憔憚憊憑憫憮懌懊	602	楷楜楸楫	楔楾	楮椹	植楴椽	638	熕熨熬	、燗熹	風熾 り	堯燉 燔	燎 674	稟禀稱稻	稾稷稻	腎穗 穉 穡
567	應懷懈懃懆憺懋罹懍懦		楙椰榆楞				639	燠燬燧				675	穢穩龝穰		
568	懣懶懺懴懿懽懼懾戀戈		榿槁槓榾				640				墨爭爬		窖窩竈窰		
569	戉戍戌戔戛		榧樮榑榠					爲爻爼					竊计竏竕		
570			樛槿權槹					犂犁犇					竦竭竰笂		5 笳 笘 笙
571	扞扣扛扠扨扼抂抉找抒		樔槫樊樒					狆 狄 狎					答 笵 笨 笶		
572	抓抖拔抃抔拗拑抻拏拿	608	樶 橸 橇 橢	橙橦	橈様			猗猊猜			耑猩 猥	猾 680			5筵筥筴
573	拆擔拈拜拌拊拂拇抛拉	609	檍檠檄檢					獎獏默			寧獣 獵		筧筰筱筬		
	格 拮 拱 挧 挂 挈 拯 拵 捐 挾	610	檗蘗檻	櫃櫂	檸檳	፪ 檬 櫞		獺 珈 玳					箚箋箒箏	筝箙篋	1997 - 2017 - 20
575	捍 搜 捏 掖 掎 掀 掫 捶 掣 掏		櫑櫟檪櫚			霍櫺欒		琅瑯琥					箴篆篝篩		
	掉掟掵捫捩掾揩揀揆揣		欖鬱欟欸					瑁瑜瑩			部瑾璋		簇簓篳篷		
	揉插揶揄搖搴搆搓搦搶		歉 歐 歙 歔				649	璧瓊瓏				685	簟簷簫簽		
	攝搗搨搏摧摯摶摎攪撕		殀殄殃殍				650				芭 瓰 瓱		籘籟籤籖		
	撓 撥 撩 撈 撼		殯殲殱殳					瓷甄蝵					給 粢 粫 粡		
580	據擒擅擇撻擘擂擱擧	616	毬毫毳毯	麾氈	氓气	「氛氤		甦甬甼					粽糀糅糂		钅糢 鬻 糯
581	舉擠擡抬擣擯攬擶擴擲		氣汞汕汢					畩 畤 畧					糲 糴 糶 糺		
582	擺攀擽攘攜攅攤攣攫攴		汾汨汳沒		決況	いい いちんし いちんしん しんしょう しんしん しんしんしん しんしんしん しんしんしん しんしんしん しんしんしん しんしんしん しんしんしん しんしんしん しんしん はんしん しんしん しん	654	疊疊看	行孩	瓦疝死	齐疣 痂	疳 690			达 紮 紲 紿
583			泅泝沮沱					痃疵症					紵 絆 絳 絖		
584	敞敝敲數斂斃變斛斟斫	620	沺 泛 泯					痣痞痾					經綉絛綏		
585	斷旃旆旁旄旌旒旛旙无		<u> 治 洸 洙</u> 洵					瘋瘍檺					緇綽綫總		
586	无旱杲吴昃旻杳昵昶昴		浚浹浙涎					瘰瘻癇			寬癡 癢		緘緝緤緞		
587	易晏晄晉晁晞晝晤晧晨		涵淇淦涸					癩癪癧				695	縡縒縱縟		
588	晟哲晰暃暈暎暉暄暘暝		淅淺淙淤				660	癲癶	癸發	と包り	1 皈 皋	皎 696		縲縺繧	
589	曁 暹 曉 暾 暼		渙湲 湟 渾					皖皓晳					繙繚繹繪		
590	曄瞭曖矇矌昿曦曩曰		湃渺湎渤					盍盖盒			富盪蘯		辮繿纈纉		į 纓 纔 纖
591	曵 曷 朏 朖 朞 朦 朧 霸 朮 朿		滉溷滓溽					眈眇眄					纎纛纜缸		
592	朶杁朸朷杆杞杠杙杣杤		溥 滂 溟 潁		滬沼	F滾漿		眸睇睚					罅罌罍		
593	枉杰枩杼杪枌枋枦枡枅		滲漱滯漲					瞎瞋瞑						槑 罸 羂	
594	枷柯枴柬枳柩枸柤柞柝	630	漾漓滷					瞽 瞻 晴					羇羌羔羞		
595	低 柮 枹 柎 柆 柧 檜 栞 框 栩		潛潛潭澂					砌砒礦					羹羶羸譱		
596	桀榜栲桎梳栫桙档桷桿	632	澳澣澡澤	澹濆	澪源	濕溶		碚碌碣			豈磆磋		翦翩翳翹		
597	梟梏梭梔條梛梃檮梹桴	633	濔濘濱濮	濛瀉	瀋滟	& 瀑 瀁	669	碾碼磅	語聲	- Nor		705	耙耜耡耨	耿耻聊	即聆聒聘

Q 17-16

First Three			First Three		Last				First Three				st Dig				First Three				st Dig			
Digits	01234567		Digits	0 1 2				89	Digits	0		3					Digits				4 5			
706	聚智聢聨聳聲聰聶		742	蟯蟲蛹							迹证			逍	逞	狄 逋								駮駱
707	聿肄肆肅肛肓肚朋		743	蠑蠖螺	蠢蠡	蟲	5 蠹	蠧蠻	779		逶逵						815				騏騅			鶱騒
708	胛 胥 胙 胝 冑 胚 胖 崩	k 胯 胱	744	衄衂袨					780		遏退	建建	酋 遲	Ī遉	逾	薗 遘	816	驅騎	参嘉	驃驃	騾縣	퉒驍	驛馬	驗驟
709	脛脩脣脯腋		745	衵衽衽							遨遯						817	驢퇵	冀騎	夏驩	驫騅	1	骰骨	挌 髀
710	隋 腆 脾 腓 腑 胼 膼		746	袍袤暴	と 社 袱	裃衫	行 裔	裘裙	782	邊	邊邏	1 邨	都 印	3 邵	郢衫	邹 扈	818					彩髢	髣	髦髯
711	腦腴膃膈膊膀臀膠		747	裝裹褚	裼 裴	裨补	兩褄	褌褊	783	郛	鄂劉	3 鄙 1	鄲 亃	了酊	酖	段酣	819	髫髮						
712	膣腟腸膩膰膵膾膸		748	褓褎袑	褥 褪	褫衫	強襄	褻褶	784		酩酯						820				鬚鬟			鬥鬧
713	臂膺臉臍臑臙臘腹	葛臚臓	749	褸 襌 禉							醵醴						821							魄魍
714	鬱臧臺臻臾舁春舅	與舊	750		i 襭 襪				786	釟	釜釛] 釼]	釵 鈯]鈞	釿	眇 鈬	822							鮗鮟
715	舍舐舖舩舫舸舳艄		751	覈覊覓					787	鈕	鈑鉞	幼甜	距鈁	氢鉤	鉈	洟 鈿	823				鯊鮹			鯑鯒
716	艝艚艟艤艢艨艪艫		752	覺覽賣					788	鉋	鉐徸	j銖	詮 銛	銅	鋏	透銷	824							鯰鰕
717	艷艸艾芍芒芫芟芻	3芬苡	753	訃訖訂				訪詛			錏 鈁										鰆鯕			鰄鰮
718	苣苟苒苴苳苺莓范	荷苹	754	治 舐 詈					790		錙釤						826	鰛魚	罷 鮹	「鰡	鰰鯛	鬣鰲	鱆魚	驃鱚
719	苞茆苜茉苙		755	誨誡謎	語誦	誚	胚諄	諍諂	791		鍮鑓													鳫 鳫
720	茵茴茗茲茱荀茹		756	諚 諫 諙	「諧諤	諱言	谑 諠	諢諷	792		鏥銟											踢鴟	鵄鳥	鸵 鴒
721	茯茫茗荔莅莚莪蓍		757	諞諛靜	J 謇 謚	諡	覆 謐	謗謠	793		鐃鏥							鵁刣						
722	莫莎莇莊茶莵荳荵	蒸薪莉	758	謳鞫謦			華譌	譏譎			鑄鎇						830							鶮 鶇
723	莨菴萓菫菎菽苹菘		759	證諧諸							鑽鋒					閇 閊								鷁 鶻
724	幕萇菠菲萍萢萠莽		760	課譬	譯譴	譽言	竇 讌	讎讒	796		閑閘					閼 閻					鷂鴽			鷦 鷭
725	菻葭萪萼萼蒄葷葫		761	讓讖讙	讀谺	豁到	谿 豈	豌豎	797	閹	閾腱	間濶	<u> 関</u> 関	闌	闕	闔閭	833				鸞鹵			麁 麈
726	蒂葩葆萬葯葹萵蓊		762	豐豕豢	猪豸	豺	貂 貉	貅貊	798		闡闥			阮	耻	波陌		麋鹭						麸麪
727	蒿 蒟 蓙 蓍 蒻 蓚 蓐 蓁	₫ 蓆 蓖	763	貍 貎 貂							陋陷										黏鄰			點黝
728	蒡蔡蓿蓴蔗蔘蔬游	蔕 蔔	764	貳貮貶							陝関										黴 黶			黻 黼
729	蓼棘蕣蕘蕈		765	賻贄髾							隧隠													齊齒
730	蕁蘂蕋蕕薀薤薈	畜薑薊	766	賍贔賿							雉雍											國醫	齬茝	捉 齷
731	薨蕭薔薛藪薇薜蕷	貢蕾 薐	767	趾 趺 助	1跚跖	跌日	波跋	跪跫	803	霈	霓霋	露	罪 霖	要要	雷	霻 霰		齲齒						
732	藉薺藏薹藐藕藝藥		768	跟跣踞			果 踞	踐踟			霽霸						840	Ŧ	毛梢	〔遙	瑤凜	熙		
733	蘊蘓蘋藾藺蘆蘢蔛		769	蹂踵踊					805		靦螷													
734	虍乕虔號虧虱蚓 蚣		770		蹌蹐						鞆鞘													
735	蚋蚌蚶蚯蛄蛆蚰蛴		771	蹣蹕顕							韃韃													
736	蛔蛞蛩蛬蛟蛛蛯蛟		772	躊躓蹊							韵邟			ī 頡	頷	 								
737	蜀蜃蛻蜑蜉蜍蛹蜥	刂蜴蜿	773	躲躾躮							顋顫													
738	蜷蜻蜥蜩蜚蝠蝟蝸	引 蝌 蝎	774	軾輊輎							顱顴													
739	蝴蝗蝨蝮蝙		775	輌輦轉							飩餌													
740	蝓蝣蝪蠅螢螟蜋		776	轆轎甎							餤餠													
741	螽蟀蟐雖螫蟄螳蟇	蘡螻	777	辭辯シ	迚迥	迢ì	由 逊	邇迴	813	饐	饋餞	能饒	巽 誓	馗	馘	腹馭								



Weather Indicator List

Basic Stat	us
*	Clear skies (day)
S	Clear skies (night)
9	Cloudy
Ţ	Rain
8	Snow
4	Thunder showers
0%	Chance of rain: 0%
0 10%	Chance of rain: 10%
0 20%	Chance of rain: 20%
0 30%	Chance of rain: 30%
0 40%	Chance of rain: 40%
50%	Chance of rain: 50%
0 60%	Chance of rain: 60%
0 70%	Chance of rain: 70%
0 80%	Chance of rain: 80%
0 90%	Chance of rain: 90%
0 100%	Chance of rain: 100%
\triangleright	Then
/	Partly/chance of

Pollen Count

Arvin Control of Contr	Low
Control Contro	Moderate
	High
	Extreme

Cherry Blossom

 Image: Second system
 Flowering

 Image: Second system
 Almost full bloom

 Image: Second system
 Full bloom

 Image: Second system
 Beginning of petal fall

Fall Foliage

×	No color change
×	Colors appearing
×	Peak
×	Defoliating

Ultraviolet

O	Low
×	Moderate
۲	High
*	Extreme

Typhoon

<u>s</u>	Forming
	Approaching
%	Caution necessary

Other

æ	Heavy rain
X	Gale
٩	Notification

SoftBank 944SH

Weight	123 g (139 g with battery)
Continuous Talk	200 minutes (3G)
Time [*]	200 minutes (GSM)
Continuous	310 hours (3G)
	270 hours (GSM)
Standby Time*	(handset closed)
Continuous TV Reception Time	4 hours and 45 minutes
Charging Time	AC Charger: 140 minutes
(power off)*	In-Car Charger: 140 minutes
Dimensions	51 x 110 x 17.5 mm
	(handset closed, without
(W x H x D) [*]	protruding parts)
Marilana Ordered	0.25 W (3G)
Maximum Output	2.0 W (GSM)

*Approximate value.

- Above values calculated with Backlight Brightness set to *Level:2*.
- Continuous Talk Time is an average measured with a new, fully charged battery, in strong signal conditions without moving handset.
- Continuous Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in strong signal conditions without moving handset. In Japan (3G service area), the value is calculated with IP Service Setting and Mobile Widget Auto Refresh set to *Off.*

- Continuous TV Reception Time is measured with a new, fully charged battery, with AV Mode (default: *Link to Genre*) set to *Standard* (Brightness: 2, Tone: *Normal*) and Smooth Mode (default: *On*) set to *Off* in landscape position with Headphones connected to External Device Port, until battery runs low (10% of capacity).
- Talk Time/Standby Time/TV Reception Time may vary with environment, status, settings, etc.
- Display employs precision technology, however, some pixels may appear brighter/darker.

Handset Materials

Parts	Materials/Finishing
Housing (Display side, Keypad side, battery side)	Nylon resin/Acrylic UV painting
Housing (side belt)	ABS resin/Deposition/ Acrylic UV painting
Battery Cover	Base: PC resin & ABS resin/Acrylic UV painting
Ballery Cover	Gasket (back): PC resin & silicone
Mobile Light cover, lens cover	Acrylic resin
Sub Display window, hinge ornament, Display window	PC resin & acrylic resin

Dauta	Materiala / Eistalaises
Parts	Materials/Finishing
Camera ornament	PC resin & acrylic resin/UV curing resin
Multi Selector (Cursor Keys)	Aluminum/Anodized aluminum
Key ornament sheets (Keypad side)	PET/UV curing resin
Center Key, Mail Key, Shortcuts & A/a Key, Yahoo! Keitai Key, TV & Text Key, Power On/Off & End Key, Clear/Back Key, Start Key, Keypad, X Key, # Key, Dictionary Key, Multi Job & Manner Key, Camera Key	PC resin
Side Keys (Volume Up Key, Volume Down Key, Shutter Key)	PC resin/Acrylic UV painting
Infrared Port	PC resin & acrylic resin (back: infrared permeable printing)/ UV curing resin
External Device Port Cover	PC resin & elastomeric resin/Acrylic UV painting
Charging Terminals	SUS/Gold plating (sealer: nickel)
Battery contact pins	Copper alloy/Gold plating (sealer: nickel)
USIM Tray	SUS/PAI (polyamide- imide) resin coating & LCP (liquid crystal polymer) resin
Screws	SUS410
Battery	PC & ABS resin

Accessories

Battery

Voltage	3.7V
Battery Type	Lithium-ion
Capacity	770 mAh
	35.4 x 46.3 x 4.6 mm (without protruding parts)

*Approximate value.

Desktop Holder

Input Voltage/Current	DC 5.4V/700 mA
Output Voltage/Current	DC 5.4V/700 mA
Charging Temperature	5°C to 35°C
Dimensions (W x H x D)	131 x 31 x 45 mm
A manufactor and a sector of	

Approximate value.

Basic Operations

Standby Shortcut

Standby	16 (shared with widgets)*
Icon View	100 (16 per page including widgets)

*Excluding S! Quick News & S! Friend's Status, Pedometer and Household Accounts.

Universal Operations, Etc.

Text Entry

A D P

Jser Dictionary	250 entries (5 per reading) Word: 30 characters Reading: 8 hiragana	
Acquire Dictionary	5 dictionaries	
Paste List	10 text strings	
Recoverable Deleted Characters	30,720 single-byte characters	
Dictionary	Meikyo Japanese Dictionary: Approximately 47,100 words/phrases Genius English-Japanese Dictionary: Approximately 45,700 words/phrases Genius Japanese-English Dictionary: Approximately 55,800 words/phrases	

Phone Book

Entry	1,000 entries	
Name/Reading	Last/First: 32 characters each	
Phone Number	5 numbers (32 digits each)	
Mail Address	5 addresses (128 characters each)	
Category	16 Categories	
Address	Postal Code: 20 characters Country: 32 characters Others: 64 characters each	
Office	Office Name/Division/Post: 32 characters each	
Homepage	1,024 bytes	
Note	256 characters	
Mail Groups	20 Groups (20 members each) Group name: 16 characters	

Calling		
Call Log Records	Dialed: 30 Dialed Ranking: 10 Received: 30	
Answer Phone/ Record Caller Voice	20 messages or 90 seconds	
Auto Answer List	10 numbers	
Speed Dial/Mail	100 numbers/addresses	
Rakutomo Link	10 numbers/addresses	

Messaging

	Received Msg.	10 MB or 3,000 messages	
emory	Drafts	5 MB (or	
	Sent Messages	1,000 messages between Drafts,	
	Unsent Messages	Sent Messages and Unsent Messages)	
	Templates	104 MB (shared with Data Folder and S! Appli Library)	

PC Mail/S! Mail Subject	512 single-byte characters		
PC Mail/S! Mail Message	Approximately 30,000 single-byte characters		
SMS Message	160 single-byte	e alphanumerics	
Auto Resend	2 times		
Attachment	20 files or 2 M	B [*]	
Send Reservation	10 messages		
Recipient	20 numbers/addresses		
Folder	20 folders (20 sort keys each)		
Chat Folder	Memory	300 messages per folder	
	Folder	10 folders (20 members each)	
Graphic Mail	1 sound or Flash [®] file, or 40 images/My Pictograms (with 1 sound or Flash [®] file)		
Auto Reply	20 numbers/addresses Reply Message: 256 single-byte characters per mode		
Sort Spam	Individual	20 entries	
Mail	Permitted List	20 entries	

*Limit may be lower depending on message text, etc.

PC Mail Settings

PC Mail	Account	3 accounts
Account	Account Name	20 characters
Set Receiving	User Name	128 characters
	Password	40 characters
	ReceivingServer	128 characters
	Port Number	1 to 65535
Set Sending	Sender Name	20 characters
Set Sending	Mail Address	128 characters
PC Mail DL	Individual Address	20 addresses



Internet

Download	500 KB per page		
(Yahoo! Keitai)	10 MB (100 MB via Keitai Wi-Fi) for progressive downloads		
(Tanoo: Kenal)			
Download	JPEG Images	3 MB	
(PC Site	Flash [®] Files	2 MB	
Browser) ¹			
Download	JPEG Images	5,000 KB	
(Direct	Flash [®] Files	2 MB	
Browser) ¹	ThaoIT Theo	2 1110	
	300 pages for Yahoo! Keitai		
History		300 pages between PC Site	
	Browser and Direct Browser		
URL Entry Log	10 URLs		
Bookmarks ² &	100 pages for Yahoo! Keitai 100 pages between PC Site Browser and Direct Browser		
Saved Pages			
Saveu Fages			
Tab	5 tabs at one time		
Input Memory	20 entries		
Streaming			
History	20 URLs		
RSS Feeds	30 entries (60 KB per entry)		

¹ 1 MB each for files other than JPEG images and Flash[®] files. (Some media files are playable beyond 1 MB.)
² Folders are counted as pages.

Digital TV

Recorded File	ISDB-T mobile Video profile (SD-Video standard)	
Recording	Handset	Approximately 30 minutes
Time (example)	Memory Card	Approximately 80 minutes on 256 MB Memory Card
Marker	99 Markers (10 per file)	
Split File	99 portions per file	
Time Shift Recording	30 minutes	
Reservation List	5 entries (24 hours each on 1 GB or larger Memory Card)	

Camera & Imaging

Mobile Camera

Effective Pixels	8 Megapixels
Auto Shut-off Time	Approximately 3 minutes

Photo Camera

Zoom	1x - 20.4x		
	8M	2448 x 3264	
	5M	1944 x 2592	
Disture Circ	ЗM	1536 x 2048	
Picture Size (W x H dots)	Full HD	1080 x 1920	
(w x m dots)	Wallpaper	480 x 854	
	VGA	480 x 640	
	QVGA	240 x 320	
Scanner Image	Free, 1200 x	: 640, 480 x 1488,	
Size (W x H dots)	1280 x 960		
File Format	JPEG		
	Approximately 37 files (at 8M,		
Memory		High Quality) on handset	
	with no other files		

File Name	yymmdd_hhmmss
Shooting Distance	Macro: 10 cm
Background Save	3 files
Portrait Auto Focus	VGA or larger

Video Camera

Zoom	1x - 5.1x	
	Extended	864 x 480 (Wide)
		640 x 480 (VGA)
Record Size	Video	320 x 240 (QVGA)
(W x H dots)		176 x 144 (QCIF)
	For Message	320 x 240 (QVGA)
	I OI Message	176 x 144 (QCIF)
File Format	3GP	
Recording	Extended Video	Approximately
Capacity per		30 minutes [*] on
Shot		Memory Card
	For Message	2 MB or 295 KB
File Name	yymmdd_hhmmss	
Recording Distance	1.5 m in good light	
Still Image Capture	3 images	
	-	
Recording	QVGA or larger (Extended Video sizes only)	
Supported		

*Varies with handset usage, location or settings.



Editing Images

Picture Editor	Resize (W x H dots)	Wallpaper (480 x 854) Power On/Off (480 x 854) Incoming Call (320 x 320) Alarm (480 x 208) Mail Art (96 x 96) Sub Display (240 x 456) VGA (480 x 640) QVGA (240 x 320) Cut
	Retouch	52 x 52 dots or larger JPEG/PNG images
	Paste	16 characters
	Correction	52 x 52 dots or larger JPEG/PNG images
Composite	Merge Panorama	JPEG images between W 48 x H 64 dots and 240 x 320 dots

Video & Music

Supported Formats	WMA (.wma), AAC (.mp4/.3gp/.m4a), Secure AAC (SD-Audio standard) (Some files may not play depending on sampling frequency and bit rate)		
All Music List	Music Chaku-Uta® WMA	Shows up to 350 files each	
	SD AUDIO	Shows up to 999 files	

S! Applications & Widgets

S! Applications



100 items or 104 MB (shared		
with Messaging Templates folder		
with Messaging Templates folder and other folders in Data Folder)		
Approximately 5 m		

Mobile Widget			
Standby	6 widgets (S! Quick News & S! Friend's Status: 1, Pedometer: 1, Household Accounts: 1, others: 3)		
Icon View (40 pages)	Handset widgets: 100 Memory Card widgets: 100 (16 per page including Standby Shortcuts)		
Handy Extras			
PIM/Lif	е		
Calendar ¹ / Tasks		Schedule: 1,000 entries Tasks: 300 entries Subject: 32 characters Description: 128 characters Location: 16 characters Set Holiday: 10 holidays	
Alarms		5 entries, Subject: 9 characters	
Wakeup TV	,	Auto Shut-off Approximately 30 minutes	
Household Accounts		3,285 entries ² (9,999,999 yen each)	
Calculator		999,999,999,999	
Expenses Memo		50 entries (999,999.99 yen each) per list x 3 lists	
Osaifu-Keit	ai®	Remote Lock password: 5 - 16 single-byte alphanumerics	
¹ Preset holidays are based on Japanese calendar			

²Limit may be lower depending on the number of items in each entry.

Clock/Gauge

Stopwatch	23 hours 59 minutes 59.9 seconds in 0.1-second increments Lap time: 4 records
Countdown Timer	99 minutes 59 seconds in 1-second increments
World Clock	City name: 16 characters

		Steps: 99,999
		Walking Time: 23 hours
		59 minutes 59 seconds
	Today's Data	Exercise: 71.9 Ex
		Calories: 9,999.9 kcal
		Distance: 179.9 km
		Fat Burned: 999.9 g
		2 years
		Hourly view:
	Log	9,999 steps per hour
		Daily view:
Pedometer		99,999 steps per day
	Accumulated Data	All Days: 999 days
		Steps: 99,999,999
		Time: 99,999 hours
		59 minutes 59 seconds
		Exercise: 99,999.9 Ex
		Calories:
		9,999,999.9 kcal
		Distance: 999,999.9 km
		Fat burned: 999,999.9 g
		Steps: 99,999
		Time: 23 hours
		59 minutes 59 seconds
	Average	Exercise: 71.9 Ex
	_	Calories: 9,999.9 kcal
		Distance: 179.9 km
		Fat burned: 999.9 g
S! GPS Navi	My Location	50 entries

Doc./Rec.

Document Viewer	Supported Formats	PDF (.pdf) Microsoft [®] Excel [®] (.xls) Microsoft [®] Word (.doc) Microsoft [®] PowerPoint [®] (.ppt)
	File Size	10 MB
Notepad	500 entries	(8,192 characters each)
Voice Recorder	For Message	Approximately 20 minutes (message size limit: 2 MB) or 3 minutes (message size limit: 300 KB) per file
	Extended Voice	99 hours 59 minutes 59 seconds
Scan Barcode	UPC/JAN	50 codes
(Continuous Mode)	QR Code 16 codes	
Create QR Code	Equivalent of 513 digits, 311 alphanumerics or 131 kanji	
Scan Text	256 characters	

Entertainment

S! Quick News

Savable	1 item for Special
Items	5 items between News Flash and General

e-Books

Text Copy 20 characters	Text Copy 20 cha	autorore
-------------------------	------------------	----------

S! Friend's Status

Member	30 members		
My Status	Name: 7 characters Comment: 15 characters Status Label: 4 characters		
Status Templates	Template name: 12 characters		

S! Circle Talk

Participant	11 members
Speak Time 30 seconds each	
Member List	30 entries (10 members per Group)

Blog Tool

U				
Blog Details	5 entries			
Blog Title	16 characters			
	Email Address	128 characters		
	Title	32 characters		
Blog Settings	Text	128 characters		
(Mail)	Picture Size	S (320 x 320) M (640 x 640) L (1024 x 1024) Send		
Blog Settings (Yahoo! Keitai,	URL for Posting	1,024 characters		
PC Site Browser & Direct Browser)	URL for Viewing	1,024 characters		

Data Folder

Memory	104 MB (shared with Messaging
wentory	Templates folder and S! Appli Library)

Memory Card

Backup File Name yymmddXX^{*} (XX: 2 digits/letters)

*yymmdd for Contents Keys.

Connectivity & File Backup

Wi-Fi

Profile	10 entries				
Authentication Method	Open System, Shared Key, WPA-PSK, WPA2-PSK, WPA/ WPA2-PSK Auto				
Encryption Method	No Authentication, WEP, TKIP, AES, TKIP/AES Auto				
WEP Key	4 keys				

Infrared

Infrared	IrMC 1.1			
Transfer	Range Within 20 cm			
IrSS Transfer	Receive 2,500 KB or less; send			
(JPEG images)	5,000 KB or less (after resizing)			

Bluetooth[®]

Communication System	Bluetooth [®] specification Ver. 2.1		
Supported Profiles	Headset Profile Hands-Free Profile Dial-Up Networking Profile Object Push Profile File Transfer Profile Basic Imaging Profile Advanced Audio Distribution Profile Audio/Video Remote Control Profile		
Output	Bluetooth [®] Power Class 2		
Range	Within 10 m		
Device Search	16 devices		
Pairing	32 devices		
Device Name	16 characters		
Printing	JPEG/PNG images		

S! Addressbook Back-up

10 synchronization records

Network

Log

	5 Networks
Add Network	Country/Network code: 3 digits
	Name: 25 single-byte characters



Reference URLs

SOFTBANK MOBILE Corp. http://mb.softbank.jp/en/

S! Addressbook Back-up

http://mb.softbank.jp/en/price_plans/basic_option.html

Messaging Basics

http://mb.softbank.jp/en/customer_support/mail.html

Custom Handset Address

https://www.email.softbank.ne.jp/help/e/address.html

Yahoo! Keitai

http://mb.softbank.jp/en/customer_support/web.html

Ichi Navi

http://mb.softbank.jp/en/price_plans/basic_option.html

Secure Remote Lock

http://mb.softbank.jp/en/price_plans/basic_option.html

microSD Memory Card Compatibility

From PC (Japanese) http://k-tai.sharp.co.jp/peripherals/sd_support.html From Handset (Japanese) http://shweb.sharp.co.jp/

Compatible Blu-ray Disc Recorders

From PC (Japanese) http://www.sharp.co.jp/support/av/dvd/doc/info_cellular.html

SVG-T

From Handset (Japanese) http://shweb.sharp.co.jp/svgt/index_pdc.html

Association for Promotion of Digital Broadcasting From PC http://www.dpa.or.jp/english/ From Handset (Japanese) http://www.dpa.or.jp/1seg/k/ SOFTBANK TELECOM Corp. (BB

mobilepoint) From PC

http://tm.softbank.jp/english/consumer/wlan/index.html



Appendix

17

Memory Card Structure & Contents

Memory Card Structure		ire	Contents (Location when Viewed on Handset)	
DCIM	XXXSHARP			Still images in DCIM
		Local Content	S	SD Local Contents
		Mail		Messaging folder backups (Received Msg., Sent Messages and Drafts)
			Book	e-Book files in Data Folder (Books)
			Bookmarks	Yahoo! Keitai Bookmarks
			Character	PNG files in Data Folder (Character)
			Custom Screens	Customized Screen files in Data Folder (Customized Screen)
			Flash(R)	Flash [®] Wallpaper files in Data Folder (Flash®)
			Flash(R) Ringtones	Flash [®] ringtones in Data Folder (Flash® Ringtones)
			Games and More	S! Applications
			Hot Status Template	Template files in Data Folder (Status Templates)
MYFOLDER My Iter		Mail Art	Files in Data Folder (Mail Art)	
PRIVATE	TE MITFOLDER My items	wy items	Message Templates	Graphic Mail templates in Templates folder
			Music	Music files in Data Folder (Music)
		Other Documents	Other files in Data Folder (Other Documents)	
		Pictograms	GIF files in Data Folder (My Pictograms)	
			Pictures	Still images in Data Folder (Pictures)
			Sounds & Ringtones	Melodies and other sound files in Data Folder (Ring Songs-Tones)
			Videos	Video files in Data Folder (Videos)
			Widget	Widget files in Data Folder (Widget)
			WMAudio	WMA files for Media Player (WMA)
		SH_Folder		Application management files
		Utility		Backup files (Phone Book), etc.
	SHARP	MOBILE		Backup files (User Dictionary), etc.
SD_AUDIO				SD-Audio files for Media Player (SD AUDIO)



Menu List

Messaging

	Refer to	
Received Msg	P.5-16	
Create Messa	ge	P.5-4
Retrieve New	P.5-28	
Drafts	P.5-34	
Templates	P.5-9	
Sent Message	P.5-16	
Unsent Messa	P.5-34	
Chat Folder	P.5-19	
	Mail List	P.5-28
Server Mail Box	Retrieve All	P.5-28
	Delete All	P.5-32
	Mailbox Volume	P.5-35
Create New SMS		P.5-11
	Address Settings	P.5-3
	View Settings	P.5-35
	Receive Settings	P.5-15
Cattings	Create/Send Settings	P.5-12
Settings	PC Mail Settings	P.5-22
	SMS Settings	P.5-40
	Speed Dial/Mail	P.5-24
	Mail Groups	P.5-20
Memory Statu	S	P.5-31

Settings: View Settings

Function	Refer to
Received Msg. View	P.5-35
Sent Msg. View	P.5-35
Message List View	P.5-35
Scroll Unit	P.5-35
Auto Play Attached Sound	P.5-35
Picture Appearance	P.5-35
Animation View	P.5-35
Address View	P.5-35

Settings: Receive Settings

Function		Refer to
Message	DL Size Limit	P.5-36
	Auto Settings	P.5-15
Download	Condition(Auto)	P.5-36
Auto Delete Received Msg.		P.5-36
Other Than Standby Screen	Incoming Display Setting	P.5-36
	View Setting	P.5-36
	Alert Sound	P.5-36
Secret Folder		P.5-36
Link to Feeling	Standby Screen Info.	P.5-36
	Light	P.5-36
	Vibration Pattern	P.5-37
	Ringtone	P.5-37
Spam Mail Settings	Sort Spam Mail	P.5-18
	Report Spam	P.5-37

Settings: Create/Send Settings

•		-
Function		Refer to
Create Msg. Size		P.5-37
Picture Auto Resize		P.5-37
Sending Status		P.5-37
Auto Resend		P.5-37
Auto Delete Sent Msg.		P.5-37
Cand Ontion	Delivery Report	P.5-37
Send Option	Reply to Settings	P.5-38
	Reply With Text	P.5-38
Reply Settings	Auto Reply	P.5-31
	Set Quick Reply	P.5-30
	Viewing on Sub-Display	P.2-31
Send File Settings		P.5-38
Restrictions Setting		P.5-12

Settings: PC Mail Settings

Function	Refer to
PC Mail Account	P.5-22
PC Mail DL	P.5-38
Check New Mail	P.5-38
Word wrap	P.5-39

Settings: SMS Settings

Function	Refer to
Expiry Time	P.5-40
Message Center	P.5-40
Char-code	P.5-40



Menu List

Yahoo!

Function	Refer to
Yahoo! Keitai	P.6-3
Menu List	P.6-3
Bookmarks	P.6-8
Saved Pages	P.6-8
Web Search	P.6-11
Enter URL	P.6-4
History	P.6-4
PC Site Browser	P.6-5
Direct Browser	P.6-5
Browser Settings	P.6-12

PC Site Browser

Function	Refer to
Homepage	P.6-5
Bookmarks	P.6-8
Saved Pages	P.6-8
Web Search	P.6-11
Enter URL	P.6-5
History	P.6-5
RSS Feed	P.6-9
Yahoo! Keitai	P.6-3
Direct Browser	P.6-5

	Function	Refer to
PC Site Browser Settings	Font Size	P.6-12
	Scroll Settings	P.6-13
	Cursor Settings	P.6-12
	Downloads	P.6-12
	Memory Operation	P.6-10
	Security Settings	P.6-17
	Download to	P.6-12
	Picture Appearance	P.6-12
	Initialized Browser	P.6-17
	Reset Settings	P.6-17
	Warning Message	P.6-13
	Zoom Factor	P.6-12
	Softkey Area	P.6-12

Direct Browser

Function	Refer to
Homepage	P.6-5
Bookmarks	P.6-8
Saved Pages	P.6-8
Web Search	P.6-11
Enter URL	P.6-5
History	P.6-5
RSS Feed	P.6-9
Yahoo! Keitai	P.6-3
PC Site Browser	P.6-5

Function		Refer to
	Font Size	P.6-12
	Scroll Settings	P.6-13
	Cursor Settings	P.6-12
	Downloads	P.6-12
	Memory Operation	P.6-10
	Security Settings	P.6-17
Set Direct Browser	Download to	P.6-12
	Picture Appearance	P.6-12
	Initialized Browser	P.6-17
	Reset Settings	P.6-17
	Zoom Factor	P.6-12
	Softkey Area	P.6-12
	Direct Browser Lock	P.6-13
	Proxy Setting	P.6-13
	Homepage Setting	P.6-13
	Search Page	P.6-13

Browser Settings

Function	Refer to
Font Size	P.6-12
Scroll Unit	P.6-13
Cursor Settings	P.6-12
Downloads	P.6-12
Memory Operation	P.6-10
Security Settings	P.6-17
Download to	P.6-12
Page Settings	P.6-12
Initialized Browser	P.6-17
Reset Settings	P.6-17



S! Appli

Function		Refer to
S! Appli Library		P.10-2
Osaifu-Keitai		P.11-19
Settings		P.10-7
Information		P.10-7
Settings		
	Function	Refer to
Application Volume		P.10-6
Backlight		P.10-7
Vibration		P.10-7
Synchronization		P.10-7
Calls & Alarms		P.10-6
	Switch On/Off	P.10-6
Screensaver	Activation Time	P.10-6
	Stop Auto Start	P.10-6
Surround		P.10-6
Set to Default		P.10-7
Memory All Clear		P.10-7

Entertainment

-		1
Function		Refer to
	What's New	P.12-3
	Back Issue	P.12-3
S! Information Channel/	Registration/Cancel	P.12-3
Weather	Get Latest Contents	P.12-13
mouthor	Notification	P.12-13
	Weather Indicator	P.12-3
S! Quick News	s	P.12-2
Free Contents	3	P.12-4
S! Contents S	tore	P.12-4
	Music	P.9-5
Media Diever	Videos	P.9-6
Media Player	Streaming	P.6-4
	MTP Mode	P.9-4
S! Friend's Sta	S! Friend's Status	
S! Circle Talk		P.12-9
Blog Tool		P.12-11
Digital Media Viewer		P.12-5
BookSurfing		P.12-5
e-Book Viewer		P.12-5

S! Information Channel/Weather: Weather Indicator

Function		Refer to
Weather		P.12-14
Manual Update		P.12-3
Settings	Standby Setting	P.12-14
	Weather Notif.	P.12-14
	Icon Update	P.12-14

S! Quick News

Function		Refer to
S! Quick News List		P.12-2
	Automatic Update	P.12-13
	Show Image	P.12-13
Settings	Check Schedule	P.12-13
Settings	Change Skin	P.12-13
	Delete S! Quick News Lists	P.12-13

Media Player: Music

Function		Refer to
Last Played M	lusic	P.9-8
My Music		P.9-5
SD AUDIO		P.9-5
WMA		P.9-5
Download Music		P.9-4
	Sound Effects	P.9-8
	Playback Mode	P.9-8
Settings	Sub Pattern Setting	P.2-31
	Sound Output	P.9-8
	Delete All WMA	P.9-10



Media Player: Videos

Function		Refer to
Last Played Video		P.9-8
My Videos		P.9-6
Recorder Con	itents	P.9-6
SD VIDEO		P.9-6
Download Vid	leos	P.9-4
	Playback Mode	P.9-8
	Backlight	P.9-8
Settings	Display Size	P.9-8
Settings	Sound Effects	P.9-8
	Web Link Setting	P.9-8
	Sound Output	P.9-8
Camera		
	Function	Refer to
Easy Auto Camera		P.8-5
Pro Auto Camera		P.8-3
Quick Camera		P.8-3
Rapid Shooting Camera		P.8-8
Pretty Arrange Camera		P.8-9
Fine Video Camera		P.8-4
Video Camera	a for Mail	P.8-16
Sub-Wallpape	er Camera	P.8-29
Various Came	eras	P.8-8
Album		P.8-18
Scan Receipt		P.11-14
Scan Barcode		P.11-38
Scan Card		P.11-40
Kanji Grabber		P.11-42
Review		P.8-21
Set Camera Key		P.8-27

Photo Camera (Example: Pro Auto Camera)

Function	Refer to
Switch Camera	
al	P.8-14
	P.8-27
	P.8-27
	P.8-27
Egao level	P.8-28
Shutter Mode	P.8-28
Shutter Sound	P.8-28
Set Remote Shutter	P.8-27
Picture Quality	P.8-28
ISO Sensitivity	P.8-28
White Balance	P.8-28
Exposure	P.8-28
Shake Reducing	P.8-28
Long Exposure	P.8-28
Display Setting	P.8-28
Sub-Display	P.2-31
Set Send Key	P.8-28
	P.8-18
Save Pictures to	P.8-28
Auto Save	P.8-28
Background Save	P.8-28
Scene	
Help	
Mobile Light	
	al Egao level Shutter Mode Shutter Sound Set Remote Shutter Picture Quality ISO Sensitivity White Balance Exposure Shake Reducing Long Exposure Display Setting Sub-Display Set Send Key Save Pictures to Auto Save

Video Camera

Function		Refer to
Switch Came	ra	P.8-8
Simple Settin	g	P.8-16
Self-timer		P.8-30
Record Time/	Size	P.8-30
Focus Setting	1	P.8-30
Shake Reduc	ing	P.8-30
	Video Quality	P.8-30
Cattings	Exposure	P.8-30
Settings	Microphone	P.8-30
	Sub-Display	P.2-31
Review		P.8-21
	Save Videos to	P.8-30
Save Settings	Auto Save	P.8-30
	Video Encode	P.8-30
	Audio Encode	P.8-30
Display Size		P.8-30
Help		P.8-30
Mobile Light		P.8-30
-		

Videos/Music

-

Function	Refer to
Videos/Music	P.9-2



Tools

PIM/Life

	Function	Refer to
Calendar		P.11-2
Exchange Pro	ofile	P.15-10
Alarms		P.11-8
Wakeup TV		P.11-10
Relaxation Ti	me	P.11-12
Tasks		P.11-6
Household A	ccounts	P.11-13
Calculator		P.11-17
Expenses Memo		P.11-18
Osaifu-Keitai		P.11-19
	Receive Simulated Call	P.11-48
	Switch On/Off	P.11-23
Simulated Call	Set Caller	P.11-23
Call	Assign Tone	P.11-23
	Receive Timing	P.11-23
	For Silent Mode	P.11-49

PIM/Life: Osaifu-Keitai

Function		Refer to
Lifestyle-Ap	opli	P.11-19
	IC Card Status	P.11-48
IC Card Settings	IC Card Lock	P.11-20
	Remote Lock	P.11-21
	Interface Settings	P.11-48
	Balance Info	P.11-48
	Sub-Display	P.2-31
	Set to Default	P.11-48

Clock/Gauge

Function	Refer to
Stopwatch	P.11-24
Countdown Timer	P.11-25
World Clock	P.11-26
Hour Minder	P.11-27
Pedometer	P.11-28
Compass	P.11-30
S! GPS Navi	P.11-31
Battery Meter	P.2-24

Doc./Rec.

	Function	Refer to
Dictionary		P.3-12
Search		P.3-15
Document Vi	ewer	P.11-34
Notepad		P.11-35
Scratch Pad		P.3-16
ASCII Art		P.11-36
	Record Time	P.11-51
Voice Recorder	Ring Songs Tones	P.11-37
Hecoluei	Save Recording to	P.11-51
	Scan Barcode	P.11-38
	Open Barcode	P.11-52
	Create QR Code	P.11-39
Barcode/ Scan	Scan Card	P.11-40
	Scan Receipt	P.11-14
	Kanji Grabber	P.11-42
	Scan Text	P.11-41
	Scanned Results	P.11-52
Phone Help		P.2-24

Connectivity

Function		Refer to
Wi-Fi		P.15-2
Bluetooth		P.15-13
	Switch On/Off	P.15-8
Infrared	Send All	P.15-9
	IrSS Key Setting	P.15-24
IC Transmission	1 File Reception	P.15-24
IC Transmission	Send All	P.15-12
	Mass Storage	P.15-17
USB Mode	Recorder Link	P.15-17
	MTP Mode	P.9-4
USB Charge		P.1-5
Memory Card		P.14-6
Backup/Restore		P.15-19

Connectivity: Wi-Fi

Function	Refer to
Switch On/Off	P.15-23
Create Profile	P.15-3
Profile List	P.15-23
Common Settings	P.15-23
Connect Information	P.15-23
Show MAC Address	P.15-23
Application	P.15-23
What's Keitai Wi-Fi?	P.15-23

Connectivity: Bluetooth

Function	Refer to
Switch On/Off	P.15-25
Add Device	P.15-14
Paired Devices	P.15-15
Send All	P.15-16
Setting Watch	P.15-25



Function	Refer to
My Device Settings	P.15-24
My Device Details	P.15-25
Data Folder	
Function	Refer to
Pictures	P.8-22
DCIM	P.14-2
Ring Songs-Tones	P.11-37
S! Appli	P.10-2
Widget	P.10-3
Music	P.14-2
Videos	P.14-2
Lifestyle-Appli	P.11-19
Books	P.14-2
Customized Screen	P.3-4
Status Templates	P.14-2
Flash®	P.14-2
Other Documents	P.14-2
Memory Status	P.14-2

Widget

Function		Refer to
Widget Store		P.10-4
Widget	Widget	P.10-4
Contents	Widget(Sub-Display)	P.10-4
Settings	Remove Contents	P.10-4
	Auto Refresh	P.10-9
	AutoConnect Abroad	P.10-9
	Set Use Abroad	P.10-9
	Cookies	P.10-9
	Delete Cookies	P.10-9

ΤV

Function	Refer to
Digital TV	P.7-4
TV Player	P.7-8
TV-Image Folder	P.7-5
TV Link	P.7-13
TV Listing	P.7-6
Familink Remote	P.1-3
Reservation List	P.7-9
Recorder Contents	P.7-15
Settings	P.7-12

	Function	Refer to
TV Alarm		P.7-16
	Set Recording	P.7-14
	Image Location	P.7-14
Broadcast	Notify Connection	P.7-13
Data	Location	P.7-13
	Manufacture Number	P.7-13
	Delete StationData	P.7-13
Screen Size		P.7-11
	Display Icon	P.7-12
Set	Magnify Area	P.7-12
Landscape	Key Direction	P.7-12
Sound Output		P.7-12
Sound Outp	out	P.7-12
Set Call Time Shift		P.7-14
Calls & Alarms		P.7-13
TV Reserve Prior		P.7-16
Save Recording to		P.7-14

Function Refer to		
Auto Exit	Auto Exit Time	P.7-12
	Close Action	P.7-12
Smooth Mode)	P.7-11
Phone		
	Function	Refer to
Phone Book		P.3-17
Add New Entr	у	P.3-17
Information		P.1-7
Call Log		P.4-8
Play Messages		P.4-4
Call Voicemail		P.4-13
S! Addressbook Back-up		P.15-20
My Details		P.2-24
Set Category		P.3-18
Mail Groups		P.5-20
Rakutomo Link		P.4-7
Speed Dial/Mail		P.4-6
Touch-Tone Signal List		P.4-19
	Ph.Book Settings	P.3-19
Settings/	Call Log Setting	P.4-17
Manage	Manage Entries	P.3-24



Settings

Sound/Display

Function	Refer to
Mode Settings	P.2-31
Display	P.16-3
Sub-Display	P.2-20
Customized Screen	P.3-4
Sounds & Alerts	P.3-5
Date & Time	P.16-2
言語選択 (Language)	P.16-3
Ringer Output	P.16-6
Earpiece Volume	P.4-15
Change Menu	P.2-5

Sound/Display: Display

Function		Refer to
Wallpaper		P.3-3
System Graphics		P.16-3
VeilView		P.2-32
Display Effect	s	P.16-3
Font Settings		P.3-2
	Clock/Calendar	P.16-4
Standby	Show Widget	P.16-4
Display	Display Status Icon	P.16-4
	Show Operator Name	P.16-4
Vivid Mode		P.16-3
Mini Battery		P.2-32
Greeting Message		P.16-3
Backlight		P.16-3
Display Saving		P.16-3
Dial Number		P.16-3

Sound/Display: Sub-Display

Function	Refer to
Home Panel	P.2-29
System Graphics	P.2-30
Desk Clock Mode	P.2-30
Open View	P.2-30
Display Direction	P.2-30
Caller Display	P.2-30
Category Display	P.2-30
Show Indicators	P.2-30

Sound/Display: Sounds & Alerts

Function	Refer to
Volume	P.16-5
Ringtone/videos	P.3-5
Machi-Uta	P.3-20
System Sounds	P.16-6
Vibration	P.3-5
Event Light	P.16-5
Set Key Illumi	P.16-4
Status Light	P.16-5
Any Key Answer	P.16-5
Surround	P.16-6

Sound/Display: Date & Time

Function	Refer to
Set Date/Time	P.16-2
Time Correction	P.16-2
Daylight Saving	P.16-2
Set Time Zone	P.16-2
Clock/Calendar	P.16-4
World Clock	P.11-26
Alarms	P.11-8
Set Holiday	P.11-43

Function	Refer to
Time Format	P.16-2
Date Format	P.16-2
Calendar Format	P.16-2

Phone/ 🔛

Function		Refer to	
User Dictionary		P.3-11	
Set Key Shortcut		P.2-9	
Motion Control		P.2-23	
Vector Pad Settings	Scroll Speed	P.2-28	
	Launch Spinguru Menu by	P.2-28	
	Jog Speed	P.2-28	
	Correct Vector Pad	P.2-28	
Touch Panel	Touch Reaction	P.2-30	
(Sub-Display)	Correct Touch Panel	P.2-30	
Set Key Light		P.16-4	
	Switch On/Off	P.2-25	
	Double Mode	P.2-27	
	Mode Name	P.2-32	
Double Number	Reject By Line	P.2-32	
Number	Show Missed	P.2-32	
	Packet Warning	P.2-32	
	Send Priority	P.2-32	
Videos/Music	Menu Updates	P.9-2	
Memory Card		P.14-6	
	Backup All Items	P.15-26	
	Backup Selected Items	P.15-19	
Backup/ Bestore	Restore All Items	P.15-26	
Restore	Restore Selected Items	P.15-19	
	Settings/Manage	P.15-26	



	Function	Refer to
Locks		P.13-2
Software Update		P.17-5
Master	Reset Settings	P.16-8
Reset	Reset All	P.16-8
Phone/ 🛱 : Memory Card		
Function Re		Refer to
	Number of Copies	P.8-26
DPOF	Settings	P.8-32
DPOF	Check Settings	P.8-26
	Reset Settings	P.8-32
SD Local Con	tents	P.14-9
Format Card		P.14-6
Memory Statu	IS	P.14-2
Phone/ 🛱 : Locks		
	Function	Refer to
PIN Entry		P.13-2
Function Lock		P.13-2
IP Service Set	tting	P.16-7
Function Con	trol	P.13-4
Application L	ock	P.13-3
History Lock		P.13-3
Show Secret Data		P.13-3
Set Lock Message		P.13-5
Handset	Need/UnNeed Setting	P.1-12
Code Setting	Save Handset Code	P.1-11
Administrator Setting		P.1-12

Call		
	Function	Refer to
Call Time/ Data Counter	Call Timers	P.4-9
	Data Counter	P.4-17
	Call Time Counter	P.4-17
	Minute Minder	P.4-17
	Switch On/Off	P.4-4
Answer	Answer Time	P.4-14
Phone	Outgoing Message	P.4-14
	Volume	P.4-14
	Voicemail	P.4-13
Voicemail/	Diverts	P.4-12
Divert	Cancel All	P.4-13
	Status	P.4-18
	Camera Picture	P.4-20
	Incoming Picture	P.4-20
	Outgoing Picture	P.4-20
Video Call	Hold Guidance Pict	P.4-20
Video Call	Backlight	P.4-20
	Loudspeaker	P.4-20
	Mute Microphone	P.4-20
	Remote Monitor	P.4-14
Show My Num	nber	P.4-19
out Missed Ca	ills	P.4-13
	Int'l Prefix	P.4-15
Int'l Calling	Country Codes	P.4-15
Int i Calling	Roaming Dial Assistant	P.4-15
	Bar Outgoing Calls	P.4-19
	Restrict Destinations	P.4-10
Call Barring	Bar Incoming Calls	P.4-19
	Reject Numbers	P.4-18
Auto Answer		P.4-19
Call Waiting		P.4-18

Network

Function	Refer to
Select Network	P.16-7
Select Service	P.16-7
Re-search Signal	P.16-7
Offline Mode	P.2-21
Retrieve NW Info	P.16-7
Network Info	P.16-7
Wi-Fi	P.15-3
External Device	P.16-7



Α

AC Charger	
Accessing Functions	
Accessories	v
Administrator Code	1-11
After-Sales Services	17-42
Alarms	11-8
Canceling	11-9
Deleting	
Editing entries	11-46
For Manner Mode	11-46
Link to World Clk	11-46
Album	8-18
Animation View	5-13
Answer Phone	4-4, 4-14
Any Key Answer	
AOSS [™]	
Application Lock	13-3
ASCII Art	11-36
Auto Art	
Auto Reply	5-14, 5-31
Auto Resend	
Auto Retry Function	

В

Backlight	
Backup	15-18, 15-26
Bar Incoming Calls	
Bar Outgoing Calls	
Battery	
Battery Cover	
Battery Meter	
Blog Tool	12-11, 12-16
Bluetooth [®]	
Blu-ray Disc recorders7-1	5, 9-6, 9-11, 15-17
Bookmarks	

BookSurfing [®]	12-5
С	
Calculator11	
Calendar	
Calendar Settings	
Editing schedules	
Call Barring	
Call Forwarding	4-12
Call Log	4-8, 4-16
Call Time Counter	
Call Waiting	.4-12, 4-18
Call Waiting (answering Line 2)	4-18
Caller ID	.4-12, 4-19
Camera	
Album	
Capturing Still Images	
Changing/saving camera settings	
Detect Personal	
Photo Camera settings	
Recording Video	
Review	
Center Access Code	
Change PIN	
Character Code List	
Charging	
Charging Terminals	
Chat Folder	
Cleaning (handset)	
Clock/Calendar	
Compass	
Composite	
Countdown Timer	
Create QR Code	
Customer Service	
Customized Screen (Japanese)	3-4

D

Data Broadcast (Japanese)7-5
Change View (Data)7-13
Returning to initial window
Set Recording7-14
Data Counter
Data Folder 14-2
Files (attaching)5-5, 14-3
Files (moving/copying)14-4
Files (opening)14-3
Files (renaming)14-8
Folders (adding)14-4
Selecting Multiple Files14-4
Set Secret (folders)14-4
Slide Show14-3
Date & Time 16-2
Daylight Saving11-26, 16-2
Decoration Signature 5-10
Delivery Report5-13, 5-25, 5-37
Dialing from Call Log records
Dictionary3-12
Dictionary
Dictionary3-12 Digital Media Viewer
Dictionary
Dictionary 3-12 Digital Media Viewer 12-5 Digital TV (→ TV) 7-2 Adding Reception Areas 7-3 Area Setup 7-3 Avto Exit 7-11 Calls & Alarms 7-13 Change Area 7-11 Program Info. Search 7-11 Screen Size 7-11 Set Channels 7-3
Dictionary 3-12 Digital Media Viewer 12-5 Digital TV (→ TV) 7-2 Adding Reception Areas 7-3 Area Setup 7-3 Auto Exit 7-12 AV Settings 7-11 Change Area 7-11 Program Info. Search 7-11 Set Channels 7-3, 7-11 Smoth Mode 7-11
Dictionary
Dictionary
Dictionary

Appendix 17

Q 17-34

Display (settings)	
Display Effects	
Display Saving	
Document Viewer	11-34
Double Number	2-25, 2-32
Download Dictionary	3-11
DPOF	8-26
Add Date	8-32
Check Settings	8-26
For All Pictures	8-26
Index Print	8-32
Dual Mode	2-27

Ε

Earpiece	1-2
Earpiece Volume	4-15
e-Book Library	12-14
e-Book Viewer	12-5
e-Books (Japanese)	. 12-5, 12-14
Emergency Calls	4-2
English	
Exchange Profile	15-10
Expenses Memo	11-18
External Device Connection	15-17
External Device Port	1-2

F

Face Arrange	
Feeling Mail (receiving)	
Feeling Mail (sending)	5-6
Focus (locking)	8-7
Focus Setting	8-27, 8-30
Font Size	3-2
Format Card	14-6
Function Control	13-4
Function Lock	13-2
G	

General	Notes	xii
Graphic	: Mail	5-7

Group	Calling 4-1	2, 4-18
Group	Calling (opening another line)	4-18
Guide	Usage Notes	ii

н

Handset Closed	1-2
Handset Code	1-11
Handset Keys	1-3
Handset mail address	
Handset Parts	1-2
Handset Positions	1-2
Handset Power On/Off	
Handset Open	
Handset responses	
Headphones (answering calls).	
History Lock	
Hold	
Hour Minder	
Assign Tone/Video	11-49
For Manner Mode	
Link to World Clk	11-49
Vibration	11-49
Household Accounts	
Household Accounts	11-13

Т

IC Card Lock	11-20
IC Card Settings	11-20
IC Transmission	15-11
Ichi Navi	11-33
Icon View	2-12
Indicators	1-9
Camera (Viewfinder)	. 8-6, 8-17
Display	1-9
Messaging (message list)	5-14
Music Playback Window	9-5
S! Quick News	
Video Playback Window	9-6
Information window	1-7
Infrared	15-7
Receiving files	15-8

Sending files	
Infrared Port	1-2
Internal Antenna	
International calls	4-3, 4-15
Internet	6-2
Accessing	6-3, 6-5
Basic Operations	6-6
Browser Settings	
Enter URL	
History	
Saving Bookmarks/pages	
Int'l Call.	
IP Service Setting	16-7
IrSS Transfer	
К	

Kanji Grabber Keypad Lock	
L	

Language..... 16-3 Large Font Menu...... 3-2 Light Sensor 1-2, 16-3 Link to Feeling 5-36 Link to World Clk 11-46, 11-49 Locks 1-11, 13-2 Loudspeaker 4-15, 4-20, 12-16

Μ

Machi-Uta®	3-5
Mail Groups	5-20
Changing members	5-34
Deleting	5-34
Edit Name	5-34
Main Menu	2-4
Manner mode	2-21
Mass Storage	
Master Reset	16-8
Format Card	14-6
Reset All	16-8

Reset Settings	16-8
Media Player	
Delete All WMA	
Playlists9-7, 9-	9, 9-10
Memory All Clear (S! Applications)	10-7
Memory Card	14-5
Format Card	14-6
Opening files	14-6
Memory Card Structure & Contents	17-25
Menu List	
Camera	17-29
Data Folder	17-31
Entertainment	
Messaging	
Phone	
S! Appli	17-28
Settings	17-32
Tools	
TV	17-31
Videos/Music	
Widget	
Yahoo!	
Menu Operations	
Message List View	5-35
Messages (creating/sending) 5-4, 5-1	
Attachments	
Graphic Mail	
Messaging Settings	
Preview Message	
Recipient status	
Recipients (editing)	
Save to Drafts	
Send Reservation	
Sending from Drafts	
Sending unsent messages	5-34
Set Auto Play File	
Set Sent Cancel	
Signature	5-1(
	F 0
Speed Dial/Mail Templates	

Using sent messages		5-34
Messages (deleting)	5-23,	5-32
Auto Delete Received Msg		5-36
Auto Delete Sent Msg.		
Messages (forwarding)	5-34,	5-35
Messages (protecting)		
Messages (receiving/checking)		5-13
Accessing new mail out of Standby		5-28
DL Size Limit		
Mail List		
Message List		
Message Window		5-29
Retrieving complete S! Mail message	ges	
manually		5-15
Retrieving PC Mail	5-23,	5-39
Save to Data Folder		
Messages (sorting)		
Messaging (→ SMS, S! Mail, PC Ma		
Create/Send Settings		
PC Mail Settings		
Receive Settings		5-15
SMS Settings		5-40
View Settings		5-35
Microphone		1-2
Minute Minder		
Missed Call Notification		4-13
Mobile Light		1-2
Mobile Widget		10-3
Mode Settings		2-31
Motion Control		2-22
MTP Mode		9-4
Multi Job		2-10
Music (deleting)		
Music (downloading)		9-4
Music (playing)	9-5	, 9-8
My Details		2-24
Sending via Bluetooth [®]	1	5-26
Sending via IC Transmission	1	5-24
Sending via Infrared	1	5-24

Ν

Navi Appli Need/UnNeed Setting	
Notepad	
Change Category	
Edit Text	11-51
0	

offline Mode Optional Services Optional Services (checking status) .	4-12
saifu-Keitai [®] (Japanese)	11-19
Balance Info	11-48
IC Card Settings	11-20
Locking	11-20
Set to Default	11-48

Ρ

Pager Code List	
PC (connecting handset)	15-17
PC Mail	5-2, 5-21
PC Mail (sending)	
PC Site Browser	
Pedometer	
Pen Light	
Personal Mode	
Phone Book (deleting)	
Phone Book (editing)	
Phone Book (saving)	
Phone Book (using)	
Phone Book search	
Phone Help	
Picture Editor	
PIN	
PIN Entry	
PIN End y PIN Lock	
Playlists	
Pressure Vent	
Printing	8-26

Appendix 17



Printing (Bluetooth [®]) Public wireless LAN services	
Q	
Quick Operations Quick Silent	
R	
Rakutomo Link	5-35 4-16 9-6 15-17 17-24 4-14 11-22 11-21 11-22 11-48 11-21 11-24
Remote Monitor	, 5-30
Auto Reply. Opening received message for reference Set Quick Reply Reply Assist Dictionary Reset (→ Master Reset) Reset All Reset Settings. Retrieve NW Info. Retrieving Network Information Review RSS Feeds.	e 5-30 3-11 16-8 16-8 16-8 16-7 1-6 8-21

S

S! Addressbook Back-up	
Auto Sync Settings	15-26
Confirming password	

Sync Log	15-26
S! Applications	
5! Circle Talk	
Accepting requests	12-10
Initiating	
IP Service Setting	
Registering Members	12-9
S! Contents Store	12-4
S! FeliCa (→ Osaifu-Keitai®)	11-19
5! Friend's Status	
IP Service Setting	
Opening Member Status	12-7
S! GPS Navi	11-31
S! Information Channel (Japanes	e)
	12-3, 12-13
Weather Indicator	12-3
5! Mail	
Attaching Files	5-5
Create Msg. Size	5-26, 5-37
Feeling Mail	
Graphic Mail	
5! Mail (sending)	
5! Quick News (Japanese)	
Automatic Update	12-13
Deleting items	
Safety Precautions	
SAR	
Saved Pages	
Scan Barcode	
Open Barcode	
Scanning during text entry	
Using scan results	
Scan Card	
Using scan results	
Scan Text	
Scanning and pasting during text e	
Using scan results	
Scanning Receipts	
Schedules (→ Calendar)	
Scratch Pad	3-16

SD Local Contents 14-9
Search 3-15
Security Codes 1-11
Sent Msg. View 5-35
Set as Wallpaper 14-8
Set Date/Time 16-2
Set Key Light 16-4
Set Key Shortcut 2-9
Set Quick Reply 5-30
Set Sent Cancel 5-25
Set Time Zone 11-26, 16-2
Set to Default (S! Applications) 10-7
Shortcuts 2-9
Show My Number 4-19
Show Secret Data 13-3
Side Keys 1-3
Side Light 2-14
Signature 5-10
Simple Menu 2-5
Simulated Call 11-23
Slide W paper 3-3
Small Light 1-2
SMS
SMS Settings 5-40
SMS (sending) 5-11
Snooze 11-8, 11-9
Softkeys 1-8
Software Update 17-5
Sort Spam Mail 5-18, 5-33
Sounds & Alerts
Speaker 1-2
Specifications 17-19
Specifications (by function) 17-20
Basic Operations 17-20
Calling 17-20
Camera & Imaging 17-21
Connectivity & File Backup 17-23
Data Folder 17-23
Digital TV 17-21
Entertainment 17-23

Appendix 17

Q

17-37

Handy Extras	17-22
Internet	17-21
Memory Card	17-23
Messaging	17-20
Network	17-23
S! Applications & Widgets	17-22
Universal Operations, Etc	17-20
Video & Music	17-22
Speed Dial/Mail	. 4-6, 5-24
Spinguru Menu	
Standby	1-6
Standby Shortcuts	2-11
Status Icon List	
Status Templates	
Still images (capturing)	
Easy Auto Camera	
ISO Sensitivity	
Long Exposure	
Picture Size	
Pro Auto Camera	
Quick Camera	
Shake Reducing	
Shutter Sound	
White Balance	
Still images (capturing & sending).	
Still images (editing)	
Additional editing options	
Changing sizes	
Face Arrange	
Merge Panorama	
Stopwatch	
Strap Eyelet	
Streaming	
Sub Display	
Swap Calls	
System Graphics	
System Sounds	16-6
T	

Editing tasks 11-45 Opening Tasks...... 11-7 Correction Conversion 3-8 Hiragana to Katakana/Alphanumeric Inserting line breaks 3-20 Inserting Phone Book entry items 3-20 Inserting spaces 3-20 Mail & Web Extensions...... 3-9 One-Hiragana Conversion 3-8 Pictograms & Symbols 3-8 Reset Log 3-20 Switching Entry Modes...... 3-6 Undo conversion or recover deleted Using Character Codes 3-20 When Target Word is Not Listed 3-7 Text Entry Key Assignments...... 17-9 Time Correction......16-2 Time Shift......7-10 Touch-Tone Signal List 4-19 Troubleshooting 17-7 Channels (saving).....7-11 Table of Contents iii

Tasks 11-6 Deleting Tasks 11-7

Program Info	7-6
TV Listing (Japanese)	7-6
Using wireless Headphones	7-12
TV Player	
TV programs (recording/playing)7	-7, 7-8
Details	
Marker List	7-16
Markers	7-16
Memory Remaining	7-15
Playback Pattern	
Playing split files	
Recorded programs (deleting)	
Recorded programs (renaming)	
Set Call Time Shift	
Split File	
TV Timers (watching/recording)	
Setting Timer via Program Info	
Timer entries (opening/editing/deleting)	7-16
Timer log records (opening/playing/del	
	7-16
TV Alarm	7-16
TV Reserve Prior	
Wakeup TV	11-10

U

USB Charge	
User Dictionary	
Deleting entries	
USIM Card	
USIM PIN (→ PIN)	
Utility Software	

V

Vector Pad	
Vector Pad Settings	
VeilView	
Vibration	
Video (deleting)	
Video (downloading)	
Video (playing)	

Appendix 17



Video (recording)	0 16
Display Size	
Microphone	8-30
Record Time/Size	8-30
Shake Reducing	8-30
Video Calling	4-5
Remote Monitor	
Video Calls (answering)	
Video Calls (placing)	
Voice Calling	
Voice Calls (answering)	
Voice Calls (placing)	
Voice Calls (placing while abroad).	
Voice Recorder	
Record Time	11-51
Save and Send	
Save Recording to	11-51
Voicemail	
Volume (ringtones)	
(U 17	

Wakeup TV	11-10
Wallpaper	3-3
Slide W paper	3-3
Warranty	17-42
Weather Indicator	12-3
Icon Update	12-14
Manual Update	12-3
Weather	12-14
Weather Indicator List	17-18
Widgets	
Wi-Fi	15-2
World Clock	11-26
WPS	15-3
Y	

Yahoo! Keitai6-3
Objectives

Accessing Secret Files/Entries

Data Folder14-4	
Messaging folders5-17	
Phone Book3-18	
Schedules/tasks11-4	
Accessing the Internet	
Direct Browser6-5	
From message text5-29	
From scan results 11-52, 11-55	
Media Player9-4	
PC Site Browser6-5	
RSS Feeds6-9	
Yahoo! Keitai6-3	
Browsing/Viewing	
Album8-18	
Blog Tool12-12	
Digital Media Viewer12-5	
Direct Browser6-5	
Document Viewer11-34	
e-Books12-5	
PC Site Browser6-5	
S! Information Channel12-3	
S! Quick News12-2	
Yahoo! Keitai6-3	
Calculating	
Calculator11-17	
Expenses Memo11-18	
Household Accounts11-13	
Canceling/Removing	
Alarm	
Answer Phone	
Call Barring restrictions4-19	
Call Forwarding4-13	
Customized Screen	
Download Dictionary	
Function Lock	
Hour Minder	
IC Card Lock	
Keypad Lock2-24	
Large Font Menu	
Manner mode2-21	

Offline Mode 2-21
PIN Lock 17-2
S! Information Channel 12-3
Secret folders 5-33, 14-4
Simple Menu
Speed Dial entries
VeilView2-24
Voicemail 4-13
Wakeup TV 11-11
Changing
Font Size 3-2
Font Weight
Handset mail address
Key Shortcut
PIN 13-5
Changing Ringtones
Phone Book 3-18
Ringtone/videos 3-5
Via Data Folder 14-8
Composing/Sending Messages
Feeling Mail 5-6
From Call Log records 4-16
From Internet pages 6-11
From message text
From Phone Book
From received messages 5-14
From scan results 11-52, 11-55
From Scratch Pad 3-16
From sent messages 5-34
Graphic Mail 5-7, 5-27
Inserting ASCII Art 11-36
PC Mail 5-23
S! Mail 5-4
SMS 5-11
Copying
Calculation results
Data Folder files 14-4
Data Folder files
Data Folder files 14-4

Appendix 17



Text (Internet pages)	6-11
Text (Messaging)	5-30
Text (S! Information Channel pages)	. 12-14
Downloading	
Content	12-4
Customized Screen	
e-Books	12-5
Free content	12-4
Music	9-4
S! Applications	
Video	
Widgets	10-4
Exchanging Files	
Bluetooth [®]	
Exchange Profile	
IC Transmission	
Infrared	
Mass Storage	
MTP Mode	9-4
Hiding Files/Entries	
Data Folder	14-4
Messaging folders	
Phone Book	
Schedules/tasks 11-43	, 11-45
Inserting/Removing	
Battery	17-4
Memory Card	
USIM Card	17-3
Locking/Restricting	
Application Lock	
Call Log	
Direct Browser	
Function Control	
Function Lock	
Incoming/outgoing calls	
Keypad Lock	2-24
Mail records	13-3
Osaifu-Keitai [®]	
PIN Entry	
Secure Remote Lock	13-2

Managing Schedules
Calendar 11-2
Tasks 11-6
Measuring Time
Countdown Timer 11-25
Stopwatch11-24
Notifying Phone Number
Opening My Details 2-24
Via Exchange Profile 15-10
Via IC Transmission 15-24
Via Infrared 15-24
Placing Calls
By entering phone numbers 4-3
From Call Log records 4-16
From Internet pages
From message text
From Phone Book
From scan results 11-52. 11-55
International calls 4-3
Speed Dial
Video Calls
While abroad
Playing
Answer Phone messages/caller voice 4-4
Files (Scan Barcode) 11-53
Music
Recorded TV programs
Recorded TV programs from Timer log 7-16
Split files (TV)
Split files (1V)
Video
recorders)
Voice files
Voicemail messages 4-13
Rejecting
Calls from public phones 4-11
Calls from specified numbers 4-11
Calls from unsaved numbers 4-11
Undisplayable Caller ID 4-11

Withheld Caller ID	4-11
Resetting/Formatting	
All settings	16-8
Handset	
Memory Card	
Saving	
Attachments within Graphic Mail	5-30
Backup	
Captured still images 8-5, 8-8, 8	3-9. 8-10
Draft messages	
Edited still images	
Files (Internet)	
Files (S! Information Channel pages)	12-14
Graphic Mail templates	
Mail attachments	
My Pictograms	5-30
Notepad entries	11-35
Phone Book entries	3-17
Recorded video	8-16
TV channels	7-11
Saving Phone Book Entries	
Add New Entry	
Data Folder files	14-8
During a call	4-16
During a call From Call Log records	4-16 4-16
During a call From Call Log records From message window	4-16 4-16 5-29
During a call From Call Log records From message window From scan results11-5	4-16 4-16 5-29
During a call From Call Log records From message window From scan results	4-16 4-16 5-29 2, 11-54
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42 11-38
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42 11-38 11-14
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42 11-38 11-14
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42 11-38 11-14 11-41
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42 11-38 11-14 11-41 11-41
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42 11-38 11-14 11-41 15-4 15-14
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42 11-38 11-14 11-44 15-44 15-14 15, 5-17
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42 11-38 11-14 15-14 15-14 15, 5-17 9-4
During a call From Call Log records From message window From scan results	4-16 5-29 2, 11-54 11-40 11-42 11-38 11-14 15-4 15-14 15, 5-17 9-4

Q 17-40

Phone Book	3-19
Text (Internet pages)	6-11
TV program information	
Video to download	
Video to play	
Web Search	
Sending via Mail	
Data Folder files	5-5, 14-3
Notepad entries	11-51
QR Codes	
Scan results 11-53, 11-	
Still images	. 8-5, 8-9
URLs	
Voice files	
Setting Wallpaper	
From attached files	5-29
From scan results	11-53
From Sound/Display menu	3-3
Via Data Folder	
Via mobile camera	8-9
Showing in Standby	
Clock/Calendar	16-4
Mobile Widgets	
S! Applications	
Standby Shortcuts	2-11
Wallpaper	3-3
World Clock	11-26
Using as Alarm Clock	
Alarms	
Hour Minder	
Wakeup TV	11-10
Using Away from Home	
Alarms	
Camera	8-2
Compass	11-30
Digital TV	7-2
Hour Minder	11-27
Osaifu-Keitai®	
Pedometer	
Pen Light	2-24

Public wireless LAN services	15-6
Scratch Pad	3-16
Search	3-15
S! GPS Navi	11-31
Voice Recorder	11-37



Warranty & Service

Warranty & Service

Warranty

Warranty is provided when you purchase handset.

- Check the name of distributor and date of purchase.
- Read contents and keep in a safe place.
- The warranty term is described in the warranty.

After-Sales Services

See **P.17-7** "Troubleshooting" before contacting SoftBank Mobile for service or repairs.

If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (**P.17-43**) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, possible repairs are performed upon request at subscriber expense.

For other services, contact the distributor, the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (P.17-43).

Replacement parts are available for 6 years after termination of production.

- SoftBank Mobile is not liable for any damages resulting from use of this product.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of handset data. Keep a copy of Phone Book entries, etc. in a separate place.
- Disassembling or modifying handset may violate the Radio Law. Modified handset will not be repaired.



Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at **157** for General Information or **113** for Customer Assistance

SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491 (International charges apply.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo,	General Information	@0088-240-157
Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	Customer Assistance	@0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	@0088-241-157
	Customer Assistance	©0088-240-157 ©0088-240-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	(b)0088-240-113 (b)0088-241-157 (b)0088-242-157 (b)0088-242-157 (c)0088-242-113 (c)0088-242-113 (c)0088-250-157
Osana, myogo, nyoto, ivara, Oniga, wanayama	Customer Assistance	@0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime,	General Information	@0088-250-157
Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	Customer Assistance	Customer Assistance @0088-250-113



SoftBank 944SH User Guide

August 2010, First Edition **SOFTBANK MOBILE Corp.**

For additional information, please visit a SoftBank Shop.

Model: SoftBank 944SH Manufacturer: SHARP CORPORATION



Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- Handsets, batteries and chargers submitted for recycling cannot be returned.
- Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.

