


Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Power On/Off	1-6
Handset Power On/Off	1-6

Display & Indicators	1-7
Display	1-7
Indicators	1-9
Security Codes	1-11

1

Getting Started

Parts & Functions

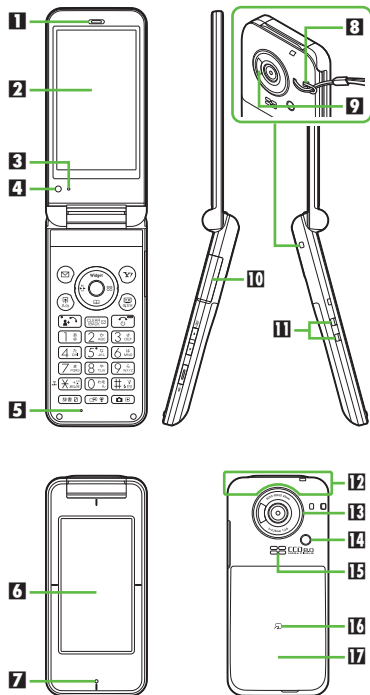


- 1** Earpiece
- 2** Display
- 3** Pressure Vent
- 4** Light Sensor
- 5** Microphone
- 6** Sub Display
- 7** Small Light
- 8** Strap Eyelet
- 9** Infrared Port
- 10** External Device Port (with Port Cover)
- 11** Charging Terminals
- 12** Internal Antenna Location
- 13** Camera (lens cover)
- 14** Mobile Light
- 15** Speaker
- 16** Logo
- 17** Battery Cover

- Do not cover or place stickers, etc. over Pressure Vent, Light Sensor or Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Handset Positions

 Handset Closed




Keep handset closed when not in use.


Handset Open









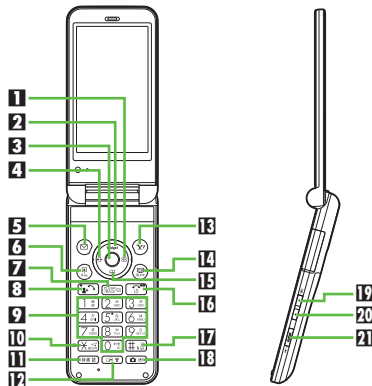









Open handset to place or answer calls, enter text, etc.



Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with  via Set Key Shortcut as needed.





- 1 Multi Selector (right)**  Open Icon View. Long Press to access last opened Icon View page.
- 2 Multi Selector (up)**  Open Mobile Widget window. Long Press to open PC Site Browser menu.
- 3 Center Key**  Open Main Menu. Long Press to activate/cancel Keypad Lock.
- 4 Multi Selector (left)**  Open Call Log (All). Long Press to activate/cancel Bluetooth®.

- 5 Mail Key**  Open Messaging menu. Long Press to open S! Mail Composition window.
- 6 Shortcuts & A/a Key**  Open Shortcuts menu. Long Press to show active indicators (Status Icon List).
- 7 Clear/Back Key**  Play Answer Phone messages. Long Press to activate/cancel Answer Phone.
- 8 Start Key**  Open Rakutomo Link window. Long Press to open Double Number Mode menu.
- 9 Keypad**  Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- 10 * Key**  Enter *, +, R, ? and -. Long Press to activate/cancel Wi-Fi.
- 11 Dictionary Key**  Open Dictionary. Long Press to activate/cancel VeilView.
- 12 Multi Job & Manner Key**  Select handset mode. Long Press to activate/cancel Manner mode.
- 13 Yahoo! Keitai Key**  Open Yahoo! Keitai portal. Long Press to activate Familink Remote.
- 14 TV & Text Key**  Activate TV. Long Press to open Change Menu window.
- 15 Multi Selector (down)**  Open Phone Book. Long Press to open Exchange Profile menu.
- 16 Power On/Off & End Key**  Long Press to power handset off.















- 17 # Key**  Enter #. Long Press to activate/cancel Manner mode.
- 18 Camera Key**  Activate mobile camera. Long Press to open Album.

Side Keys

- 19 Volume Up Key**  **Open:** Long Press to switch to Sub Display. **Closed:** Toggle Side Light on/off.
- 20 Volume Down Key**  **Open:** Show/hide Softkeys. **Closed:** Toggle Home Panels.
- 21 Shutter Key**  Long Press to illuminate Mobile Light. **Closed:** Enable/disable Touch Panel.

Multi Selector & Side Keys

- In this guide, Multi Selector and Side Key operations are indicated as follows:

Press  or 	
Press  or 	
Press  ,  ,  or 	
Press  or 	

Vector Pad

- Multi Selector touch sensor area. Adjust finger pressure to control scroll speed, or make circular motion for Spinguru Menu.

1 Charging Battery

Battery must be inserted in handset to charge it.

Charging Battery Outside Japan

- SoftBank Mobile is not liable for problems resulting from charging battery abroad.

Desktop Holder

Together with Desktop Holder, use specified AC Charger ZTDAA1 (sold separately) only.


- In this guide, ZTDAA1 is referred to as "AC Charger."
- **AC Charger and Desktop Holder are not waterproofed or dustproofed. Do not charge battery while handset is wet.**
- Handset and AC Charger may warm while charging.

Important AC Charger Usage Note

- Fold back blades after charging. Do not pull, bend or twist the cord.

Important Desktop Holder Usage Notes


- Do not subject to force/pressure.
- Do not attempt to open handset.

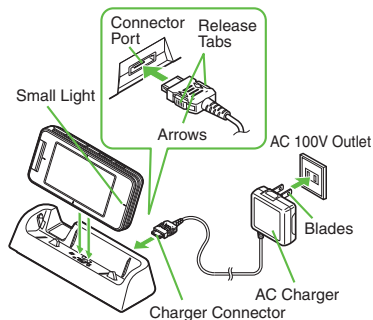

1 Insert Charger Connector into Desktop Holder

- With arrows up, insert connector until it clicks.

 2 Extend blades and plug AC Charger into AC outlet



3 Place handset onto Desktop Holder

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

4 Disconnect 944SH from Desktop Holder

5 Unplug AC Charger

- Squeeze Charger Connector release tabs and pull straight out to remove.

When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.


Desktop Holder Materials

- Desktop Holder includes a part containing plant-derived resin, a new eco-friendly material which is expected to reduce CO₂ emissions and oil usage in the entire product life cycle compared to conventional petroleum resin.

Charging with AC Charger Only

Insert Charger Connector into External Device Port.

Using Desktop Holder helps secure External Device Port waterproofing and dustproofing.

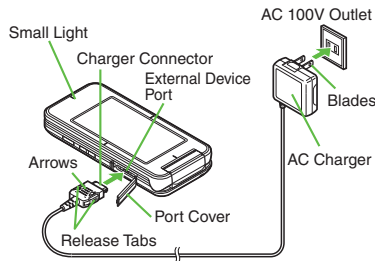

USB Charge

Connect handset (with power on) to PC via USB Cable to charge battery.

- Download and install USB Cable driver beforehand.
- Handset must be on to charge battery.
- Battery may not charge if handset is connected through a USB hub.


Disabling USB Charge



In-Car Charger

In-Car Charger may be purchased separately.

Cigarette Lighter Socket

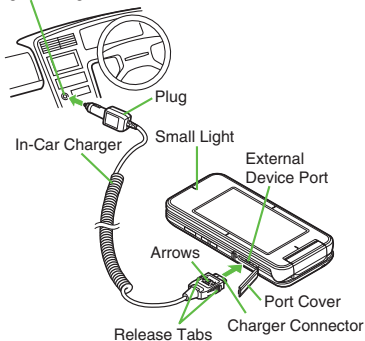

1 Open Port Cover

2 Insert Charger Connector

- With arrows up, insert connector until it clicks.

3 Plug Charger into cigarette lighter socket

4 Start car engine

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

5 Unplug Charger

6 Disconnect handset

- Squeeze Charger Connector release tabs and pull straight out to remove.

7 Replace Port Cover

Important In-Car Charger Usage Notes

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

Handset Power On/Off

Power On

Follow these steps when powering on 944SH for the first time:

1 (Long)

- Waterproofing/dustproofing guidance appears following Power On Graphic; follow the steps below.

→ **設定**
 → **Language** → **English**
 → **(Long)** → **(Long)** →
 Change Menu window opens

2 Select option →

Guide descriptions are based on Standard Menu.



- After Change Menu guidance, My Details setup starts.

3 Enter last name → Enter first name →

- Change Menu display option confirmation appears.

4 Yes or No →



Standby


- Choose **No** to enter Standby immediately after powering on.

When USIM Card is Not Installed

- Insert USIM Card** appears; insert the card to use handset.

Retrieving Network Information

Handset initiates Network Information retrieval when , , or is pressed for the first time.

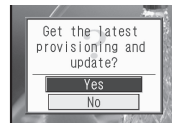

Follow these steps to retrieve Network Information to use Network-related services and TV; retrieval automatically sets Clock:

1 Yes → Retrieval starts

2

- When subscribed to Keitai Wi-Fi, BB mobilepoint setup menu opens; follow onscreen instructions.


Power Off

1 (Long)

- After Power Off Graphic, handset shuts down.

Display

Standby

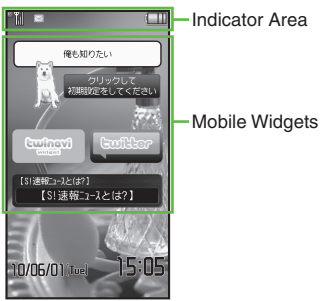


Hereafter, most screenshots omit Mobile Widgets and other icons.

Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)


1 (Long)

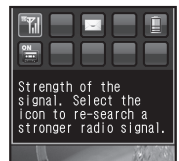

- Active indicators are enlarged; description for selected indicator appears.
- Use to select indicators to view their descriptions.
- Press to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

Information

Information window opens at the bottom for Missed Calls, new mail, etc.

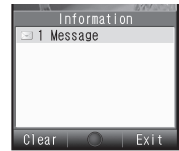




Information Window

Information label (e.g., **Message**, etc.) and count appear in Information window. Select an item and press to open it.

Opening Information List Manually
 → → → →


Clearing Information List
 → → → → → → →

Softkeys

 
 
Functions/operations assigned to ,  and  appear at the bottom of Display.



Display Saving

Display goes dark after Display Saving time elapses. Press any key (except ) during a call) to activate it.

Backlight


- Backlight turns off after Time Out time elapses. Press  -  to illuminate it (key press may affect active function).
- Display goes dark during a call. (Backlight does not turn off first.)

Indicators

Display Indicators

In Dual Mode, line type appears bottom right of some indicators.

Basic Status




1		Within 3G range
		Within GSM range
		International roaming in progress
2		Signal strength ¹
3		Battery strength ²

¹The more bars the better.

²Battery strength % (appears when Display activates, etc.) is an approximation.

 
Function Status



1		Active S! Application [*]
		Paused S! Application [*]
		Music playback in progress
		TV recording in progress (handset)
		TV recording in progress (Memory Card)
2		Memory Card inserted
		Accessing Memory Card
		Reading Memory Card
3		Formatting Memory Card
		TV Timer/TV Recording Timer set
4		Compass Indicator
5		Music playback in progress (via Bluetooth [®])
5		Multiple functions (Multi Job) active


^{*}Appears gold for some S! Applications.

 Notifications




1		Unread mail
		Unread Delivery Report
2		Answer Phone active & message recorded
		Answer Phone canceled & message recorded
3		New Voicemail
4		Missed Call or new mail on idle line
5		S! Appli Notification
6		Contents Key received
7		Unread S! Information Channel info
		Software Update result
8		Unread S! Quick News info
		Unread S! Friend's Status notification

Warnings



1		Mail memory low
2		Message delivery failure
3		Memory Card unusable/misinserted

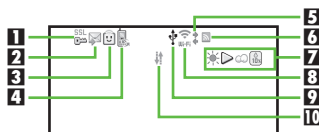Transmissions


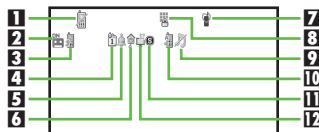
1		SSL browsing in progress ¹
2		Packet transmission protocol ready
3		Receiving mail
		Sending mail
3		S! Friend's Status online
		Positioning in progress ²
4		Software Update in progress
5		Wi-Fi transmission in progress
		Keitai Wi-Fi available
6		RSS-compatible site
7		Weather Indicator
8		Connected to Wi-Fi network ³

		USB Cable connected
		USB transmission in progress
		Infrared transmission in progress
		Infrared file transfer in progress
		Bluetooth® transmission ready
		Bluetooth® transmission in progress (Ⓜ appears for multiple connections)
		Bluetooth® talk in progress
		IC Transmission in progress
		S! Addressbook Back-up transmission in progress
		PC Site Browser in use
		Direct Browser in use
10		Infrared transmission ready

¹Hidden while Mobile Widget is in use.

²Flashes while positioning.

³The more blue bars the stronger the connection.

Settings


1		Offline Mode active
2		Answer Phone active
3		Call Forwarding or Voicemail active (forwarding condition: Always) [*]

4		Schedule/Task (Alarm set)
		Schedule/Task (Alarm unset)
5		Alarm set
6		Hour Minder active
		Manner mode active
		Drive mode active
7		Original mode active
		VeilView active
8		Keypad Lock active
		IC Card Lock active
		Ringtone (Silent)
9		Ringtone (Increasing Volume)
		Vibration for incoming Voice/Video Calls active
10		Auto Answer or Remote Monitor active
11		Show Secret Data active
		Function Lock (Once) active
12		Wakeup TV set

^{*}Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

Security Codes

These codes are required for handset use. (Set Handset Code and Administrator Code beforehand.)

- Guide descriptions are based on the assumption that Handset Code and Administrator Code are set.
- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

Handset Code*	Use or change some functions
Administrator Code*	Required for Reset Settings and Reset All
Center Access Code (Network Password)	Four-digit code selected at contract; access Optional Services via landlines, change service options, or set call restrictions

*Setable on handset.

If Security Code is Unset


- Code setup message/window appears whenever Security Code is required.

Incorrect Code Entry

- Message appears for incorrect code entries; retry.
- Incoming/outgoing call restriction settings will be locked if incorrect code is entered three times consecutively during the setting. To resolve, Center Access Code (Network Password) must be changed.
 - If you have previously changed Network Password on a SoftBank handset, enter the latest code.

Saving Handset Code

Enter four to eight digits.

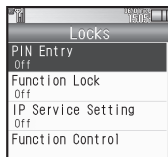

Locks Menu



Changing Handset Code

After 3, enter current Handset Code →



Saving Administrator Code

Enter four to eight digits.

- 1 In Locks menu, **Administrator Setting** ➔ ●
- 2 **Register Administrator Code** ➔ ●
- 3 Enter Administrator Code ➔ ●
- 4 Re-enter Administrator Code ➔ ●

Changing Administrator Code

After 2, enter current Administrator Code
 ➔ ● ➔ Enter new Administrator Code
 ➔ ● ➔ Re-enter new Administrator Code ➔ ●

Need/UnNeed Setting

Once Handset Code is set, code entry is omitted for some operations by default. For enhanced security, change Need/UnNeed Setting to require Handset Code entry whenever possible; follow these steps:

- 1 In Locks menu, **Handset Code Setting** ➔ ●
- 2 **Need/UnNeed Setting** ➔ ●
- 3 **Need** ➔ ● ➔ Enter Handset Code ➔ ●