

S! Appli	10-2
Using S! Applications.....	10-2
Mobile Widget	10-3
Customizing Standby Display (Japanese).....	10-3

Additional Functions	10-6
Troubleshooting	10-10

10

S! Applications & Widgets



Using S! Applications

Try out the preloaded S! Applications or download and use 944SH-compatible S! Applications, including games.

- Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.
- Subscription to Keitai Wi-Fi is required to use S! Applications over Wi-Fi.

Remote Control (Familink Remote)

- Use *ファミリンクリモコン* for *AQUOS* S! Application (Japanese) to control a TV, VCR, etc. via infrared.

- 1 → **S! Appli** →
- 2 **S! Appli Library** →



S! Appli Library

- 3 **Select application** →

Network S! Applications

 
- A message appears indicating that Internet connection is required. Follow onscreen instructions.

Incoming Calls

- Incoming calls automatically pause S! Application.

Exiting S! Applications

- 1

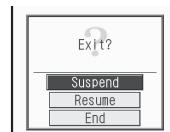

- 2 **End** →

Pausing S! Applications

In , **Suspend** →

Resuming S! Applications

→ **Resume** →

- Select **Cancel** to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.)
- Select **End** to exit the S! Application.

Advanced

- Downloading S! Applications ● Adjusting S! Application sound volume ● Canceling surround effect ● Setting handset responses to incoming transmissions ● Setting S! Application to activate in Standby ● Setting Permissions ● Opening properties ● Moving S! Applications to Memory Card
- Changing S! Application settings ● Deleting S! Applications ● Restoring default S! Application settings ● Restoring default S! Appli Library
- Synchronizing Memory Card S! Applications with 944SH ● Opening Java™ license information (P.10-6 - 10-7)



Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/ functions immediately from Standby.



Widgets

S! Quick News &
S! Friend's Status Widget

Sub Display Widgets

- 944SH supports widgets designed for Sub Display; obtain and handle them like widgets for Standby display. For more information, see "Sub Display" in Chapter 2.

Saving Widgets to Standby

Save up to three widgets (excluding S!速報ニュース/S!ともだち状況、歩数計 and 家計簿).

1 → → → **Paste Icon** →

Widget Tab

Standby Shortcut Tab



2

3 **Select widget** →

- Corresponding icon appears.

4 **Specify target location**
→

Using Widgets

1 → **Select widget** →



- Widget activates; follow onscreen instructions.

Unlocking Temporarily

→ → → **Enter Handset Code** →

 
Advanced

- Moving widgets ● Removing multiple widgets at once ● Locking widgets (And more on P.10-8)



Removing Widgets from Standby

1  →  Select widget → 

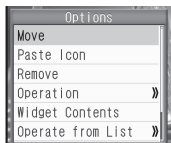

2 Remove → 

Obtaining Widgets

1  → **Widget** → 



 

 
 

Mobile Widget Menu

2 **Widget Store** → 

 


- Follow onscreen instructions.

Installing Widgets

- Some widgets may need to be installed manually; follow these steps:

[Mobile Widget Menu] **Widget Contents** →  → **Widget or Widget(Sub-Display)** →  → **Select widget** →  → **Install** →  → **Yes** → 

Activating Widgets Not Saved in Standby

[Mobile Widget Menu] **Widget Contents** →  → **Widget or Widget(Sub-Display)** →  → **Select widget** → 

Deleting Widgets

1 In Mobile Widget menu, **Widget Contents** → 

2 **Widget or Widget(Sub-Display)** → 

3 **Select widget** → 

- *SI速報ニュース!*と*もだち状況、歩数計* and *家計簿* cannot be deleted.




 


4 **Delete** →  → **Yes** → 

Deleting All Widgets

In  **Widget** →  →  → **Delete All** →  → **Yes** → 









- If there is a widget saved in Standby, a confirmation appears; follow onscreen prompt.

Deleting All Sub Display Widgets

In  **Widget(Sub-Display)** →  →  → **Manage Items** →  → **Delete All** →  → **Yes** → 

- If there is a widget saved on Sub Display, a confirmation appears; follow onscreen prompt.

Advanced








-  Opening properties
-  Saving widgets to Icon View
-  Slowing pointer speed
-  Changing automatic update interval
-  Receiving updates automatically while outside Japan
-  Hiding confirmation outside Japan
-  Disabling cookies
-  Deleting cookies (P.10-8 - 10-9)

Using Function-Linked Widgets






944SH is preloaded with *S!*速報ニュース!*S!*と
もだち状況 (*S!* Quick News & *S!* Friend's
Status widget), 歩数計 (Pedometer widget)
and 家計簿 (Household Accounts widget).

S! Quick News & S! Friend's Status Widget

■ Setting View Pattern

- 1  ➔  Select S! Quick News & S! Friend's Status widget ➔ 
- 2 *Settings* ➔  ➔ *Pattern Setting* ➔ 
- 3 Select item ➔  (/) ➔ 







■ Switching View

- 1  ➔  Select S! Quick News & S! Friend's Status widget ➔ 
- 2 *Operation* ➔  ➔ *Switch Pattern* ➔ 
 - Repeat the steps above to switch the view.

Pedometer Widget

First, save 歩数計 to Standby.

■ Saving Body Information

- 1  ➔  Select Pedometer widget ➔ 
- 2 *Settings* ➔  ➔ *Body Info Settings* ➔ 
- 3 Complete information entry ➔ 

■ Household Accounts Widget

First, save 家計簿 to Standby.

■ Opening Household Accounts Window

- 1  ➔  Select Household Accounts widget ➔ 

Advanced

-  ● Adding news items ● Changing news scroll speed ● Showing unread news only ● Assigning members ● Managing members (P.10-9)



S! Applications	
Downloading S! Applications	<ul style="list-style-type: none"> Start Here → S! Appli → S! Appli Library → Download S! Appli Follow onscreen instructions.
Adjusting S! Application sound volume	<ul style="list-style-type: none"> S! Appli → Settings → Application Volume → Adjust level
Canceling surround effect	<ul style="list-style-type: none"> S! Appli → Settings → Surround → Off
Setting handset responses to incoming transmissions	<ul style="list-style-type: none"> Start Here → S! Appli → Settings → Calls & Alarms → See below
	<p>Showing Calls</p> <ul style="list-style-type: none"> Select item → Show Call Notice
	<p>Pausing S! Application for Incoming Mail</p> <ul style="list-style-type: none"> Incoming Message → Message Priority
	<p>Showing Alarm Notice</p> <ul style="list-style-type: none"> Alarm → Alarm Notice <p>Showing S! Appli Notice</p> <ul style="list-style-type: none"> Notification → Start Notice

Setting S! Application to activate in Standby	<ul style="list-style-type: none"> Start Here → S! Appli → See below <p>Activating Screensaver</p> <ul style="list-style-type: none"> Settings → Screensaver → Switch On/Off → On <p>Setting Screensaver</p> <ul style="list-style-type: none"> S! Appli Library → Select application → As Screensaver <ul style="list-style-type: none"> As Screensaver appears for compatible S! Applications. Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.
	<p>Changing Screensaver Activation Time</p> <ul style="list-style-type: none"> Settings → Screensaver → Activation Time → Enter time
	<p>Disabling Automatic Screensaver Restart</p> <ul style="list-style-type: none"> Settings → Screensaver → Stop Auto Start → On
	Setting Permissions
Opening properties	<ul style="list-style-type: none"> S! Appli → S! Appli Library → Select application → Details



<p>Moving S! Applications to Memory Card</p>	<p> → S! Appli → → S! Appli Library → → → Select application → → → Complete selection → → Move to Card → </p> <ul style="list-style-type: none"> When an older version of the S! Application is saved, choose Yes or No and press . Repeat application selection step, as needed, before pressing . Some S! Applications may not be moved to Memory Card.
<p>Changing S! Application settings</p>	<p> → S! Appli → → Settings → → See below </p> <p>Setting Backlight Status</p> <p>Backlight → → Switch On/Off → → Select option → </p> <ul style="list-style-type: none"> Selecting Normal Settings applies Display Backlight settings. <p>Disabling Backlight Flashing</p> <p>Backlight → → Blink → → Off → </p> <p>Disabling Vibration</p> <p>Vibration → → Off → </p>
<p>Deleting S! Applications</p>	<p> → S! Appli → → S! Appli Library → → Select application → → Delete → → Yes → </p> <ul style="list-style-type: none"> Handset Code may be required. Cancel Screensaver to delete Screensaver S! Application.

<p>Restoring default S! Application settings</p>	<p> → S! Appli → → Settings → → Set to Default → → Yes → </p>
<p>Restoring default S! Appli Library</p>	<p> → S! Appli → → Settings → → Memory All Clear → → Yes → </p> <ul style="list-style-type: none"> Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keita[®] service providers for details.) Memory All Clear deletes all downloaded S! Applications and Lifestyle-Applications.
<p>Synchronizing Memory Card S! Applications with 944SH</p>	<p> → S! Appli → → Settings → → Synchronization → → Yes → </p>
<p>Opening Java™ license information</p>	<p> → S! Appli → → Information → </p>



Mobile Widget

Operations in Standby

Selecting widget display option	<p>☰ → ⌂ → Settings → ● → Show Widget → ● → Select option → ●</p> <ul style="list-style-type: none"> • Always On: Widgets always appear. • On/Off: Press to show/hide widgets. • Off in Standby: Press to show widgets. • Always Off: Widgets do not appear even when is pressed. (Reconfigure via Show Widget in Standby Display menu.)
Moving widgets	<p>☰ → ⌂ → Select widget → ☑ → Move → ● → Specify target location → ●</p>
Moving widgets to front/back	<p>☰ → ⌂ → Select widget → ☑ → Operation → ● → To Front or To Back → ●</p>
Updating view	<p>☰ → ⌂ → Select widget → ☑ → Operation → ● → Update View → ●</p>
Removing multiple widgets at once	<p>☰ → ⌂ → Operate from List → ● → Remove → ● → Select widget → ● (☑) → Complete selection → ⏴ → Yes → ●</p>
Locking widgets	<p>☰ → ⌂ → Settings → ● → Lock Settings → ● → On → ●</p> <ul style="list-style-type: none"> • Handset Code is required to re-select Off.

Managing

Opening properties	<p>● → Widget → ● → Widget Contents → ● → Widget or Widget(Sub-Display) → ● → Select widget → ☑ → Details → ●</p> <ul style="list-style-type: none"> • Select widget other than <i>S:速報ニュース/S!ともだち状況/歩数計</i> or <i>家計簿</i>.
Saving widgets to Icon View	<p>● → Widget → ● → Widget Contents → ● → Widget → ● → Select widget → ☑ → Add to Icon View → ● → Select page → ● → Specify target location → ●</p>
Slowing pointer speed	<p>● → Widget → ● → Widget Contents → ● → Widget → ● → Select widget → ● → → Cursor Speed → ● → Slow → ● → → ●</p> <ul style="list-style-type: none"> • May be unavailable for some widgets.



■ Settings

Changing automatic update interval	⌚ → <i>Widget</i> → ⌚ → <i>Settings</i> → ⌚ → <i>Auto Refresh</i> → ⌚ → <i>Select interval</i> → ⌚
Receiving updates automatically while outside Japan	⌚ → <i>Widget</i> → ⌚ → <i>Settings</i> → ⌚ → <i>AutoConnect Abroad</i> → ⌚ → <i>On</i> → ⌚
Hiding confirmation outside Japan	⌚ → <i>Widget</i> → ⌚ → <i>Settings</i> → ⌚ → <i>Set Use Abroad</i> → ⌚ → <i>Off</i> → ⌚
Disabling cookies	⌚ → <i>Widget</i> → ⌚ → <i>Settings</i> → ⌚ → <i>Cookies</i> → ⌚ → <i>Disabled</i> → ⌚
Deleting cookies	⌚ → <i>Widget</i> → ⌚ → <i>Settings</i> → ⌚ → <i>Delete Cookies</i> → ⌚ → <i>Yes</i> → ⌚

■ S! Quick News & S! Friend's Status Widget (S! Quick News)

Adding news items	⌚ → Select S! Quick News & S! Friend's Status widget → ⌚ → <i>Operation</i> → ⌚ → <i>Content Menu</i> → ⌚ → <i>Add News</i> → ⌚ → <i>S! Quick News List</i> → ⌚ → <i>登録はこちら</i> → ⌚ → <i>Yes</i> → ⌚ → <i>Select genre</i> → ⌚ → <i>Select item</i> → ⌚ <ul style="list-style-type: none"> Follow onscreen instructions.
Changing news scroll speed	⌚ → Select S! Quick News & S! Friend's Status widget → ⌚ → <i>Operation</i> → ⌚ → <i>Content Menu</i> → ⌚ → <i>News Display</i> → ⌚ → <i>News Speed</i> → ⌚ → <i>Select speed</i> → ⌚
Showing unread news only	⌚ → Select S! Quick News & S! Friend's Status widget → ⌚ → <i>Operation</i> → ⌚ → <i>Content Menu</i> → ⌚ → <i>News Display</i> → ⌚ → <i>Target News</i> → ⌚ → <i>Unread Only</i> → ⌚

■ S! Quick News & S! Friend's Status Widget (S! Friend's Status)

Assigning members	⌚ → Select S! Quick News & S! Friend's Status widget → ⌚ → <i>Operation</i> → ⌚ → <i>Content Menu</i> → ⌚ → <i>Assign Member</i> → ⌚ → <i>Select category</i> → ⌚ → <i>Select entry/member</i> → ⌚ → <i>(Empty)</i> → ⌚
Managing members	<i>Start Here</i> ⌚ → Select S! Quick News & S! Friend's Status widget → ⌚ → <i>Select member</i> → ⌚ → <i>Operation</i> → ⌚ → <i>Content Menu</i> → ⌚ → See below Deleting Members <i>Delete</i> → ⌚ → <i>Yes</i> → ⌚ Changing Member Order <i>Move</i> → ⌚ → ⌚ (Up) or ⌚ (Down) → ⌚ Changing Member Icons <i>Change Icon</i> → ⌚ → <i>Select Pictogram</i> → ⌚



S! Applications

? Cannot move S! Applications to Memory Card

- Memory Card memory may be low.


? S! Applications do not pause for incoming transmissions despite Calls & Alarms settings

- Regardless of setting, a notice appears for Screensaver S! Applications.

? Keitai Wi-Fi connection failure confirmation appears upon starting S! Application

- Handset may be outside Wi-Fi range. Move into range or cancel **Switch from Wi-Fi to 3G** in Switch Notification.

? (S! Appli Notification indicator) does not disappear

- To delete , open the corresponding Information item as follows:

