

Date & Time	16-2
Display & Illumination	16-3
Language.....	16-3
Image & Text.....	16-3
Display & Backlight	16-3
Standby Display	16-4
Key Backlight	16-4
Key Illumination	16-4
Incoming Transmissions	16-5
Handset Response	16-5

Sounds	16-6
System Sounds	16-6
Additional Sound Settings	16-6
Connectivity	16-7
Network	16-7
IP Service	16-7
Reset	16-8
Restoring Default Settings.....	16-8

16

Handset Customization



🔧 Date & Time Settings

Date & Time

[Start Here](#) ⓪ ➔ *Settings* ➔ ⓪ ➔ In Sound/Display menu, *Date & Time* ➔ ⓪

Setting the date and time	<i>Set Date/Time</i> ➔ ⓪ ➔ Enter the year ➔ Enter the month ➔ Enter the day ➔ Enter the time ➔ ⓪ ➔ Yes ➔ ⓪
Correcting Clock manually	<i>Time Correction</i> ➔ ⓪ ➔ <i>Manual</i> ➔ ⓪ ➔ Yes ➔ ⓪ ➔ Yes ➔ ⓪
Disabling auto Clock correction	<i>Time Correction</i> ➔ ⓪ ➔ <i>Auto Corr. Setting</i> ➔ ⓪ ➔ Off ➔ ⓪
Setting auto Clock correction timing	<i>Time Correction</i> ➔ ⓪ ➔ <i>Auto Corr. Setting</i> ➔ ⓪ ➔ On ➔ ⓪ ➔ Select item ➔ ⓪ (☐/☑) ➔ Yr ➔ <input type="text"/>
Activating Daylight Saving	<i>Daylight Saving</i> ➔ ⓪ ➔ On ➔ ⓪
Changing Time Zone	<i>Set Time Zone</i> ➔ ⓪ ➔ Select area ➔ ⓪
Adding custom time zone	<i>Set Time Zone</i> ➔ ⓪ ➔ Enter city name ➔ ⓪ ➔ + or - ➔ ⓪ ➔ Enter time difference ➔ ⓪
Changing time format to 12 hour	<i>Time Format</i> ➔ ⓪ ➔ 12 Hour ➔ ⓪
Changing date format	<i>Date Format</i> ➔ ⓪ ➔ Select option ➔ ⓪
Starting the Calendar week on Monday	<i>Calendar Format</i> ➔ ⓪ ➔ Monday-Sunday ➔ ⓪



Y Display & Illumination Settings 1

Language

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ Sound/Display menu

Switching interface between Japanese and English

Language or 言語選択 ➔ ● ➔ **English** or 日本語 ➔ ●

Image & Text

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Display** ➔ ●

Showing preloaded images for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Preset Animation (or Pattern 1 to Pattern 3)** ➔ ●

Showing Data Folder images for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Select folder** ➔ ● ➔ **Select image** ➔ ● ➔ **Specify image area** ➔ ●
 ● Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

System Graphics ➔ ● ➔ **Select item** ➔ ● ➔ **Customized Screen** ➔ ● ➔ ●
 ● Not available for **Power On** or **Power Off**.

Selecting image enhancement option for Standby and video playback

Vivid Mode ➔ ● ➔ **Select option** ➔ ●

Changing font of numbers entered in Standby

Dial Number ➔ ● ➔ **Select pattern** ➔ ●

Showing a message each time handset is powered on

Greeting Message ➔ ● ➔ **Edit Message** ➔ ● ➔ **Enter message** ➔ ● ➔ **Switch On/Off** ➔ ● ➔ **On** ➔ ●

Display & Backlight

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Display** ➔ ●

Disabling display transition effects

Display Effects ➔ ● ➔ **Off** ➔ ●

Changing Display/key Backlight illumination time

Backlight ➔ ● ➔ **Time Out** ➔ ● ➔ **Select time** ➔ ●
 ● For custom illumination time, select **Other**.

Changing Display Brightness

Backlight ➔ ● ➔ **Brightness** ➔ ● ➔ **Adjust level** ➔ ●

Canceling/activating Light Sensor

Backlight ➔ ● ➔ **Brightness** ➔ ● ➔  (/) ➔ ●

Changing inactivity time after which Display turns off

Display Saving ➔ ● ➔ **Select time** ➔ ●



🔧 Display & Illumination Settings 2

Standby Display

Start Here → Settings → In Sound/Display menu, *Display* → Standby Display →

Changing Clock/Calendar	<i>Clock/Calendar</i> → Select type →
Selecting Mobile Widget display option	<i>Show Widget</i> → Select option →
Hiding indicators in Standby	<i>Display Status Icon</i> → Off →
Showing Network service provider name in Standby	<i>Show Operator Name</i> → On →

Key Backlight

Start Here → Settings → Phone/

Disabling key Backlight illumination	<i>Set Key Light</i> → Off →
--------------------------------------	------------------------------

Key Illumination

Start Here → Settings → In Sound/Display menu, *Sounds & Alerts* →

Setting Key Illumination pattern by action	<i>Set Key Illumi</i> → Select action → <i>Key Pattern</i> → Select pattern →
Disabling Key Illumination by action	<i>Set Key Illumi</i> → Select action → <i>Switch On/Off</i> → Off →



✧ Incoming Transmission Settings

Handset Response

[Start Here](#) → Settings → In Sound/Display menu, *Sounds & Alerts* →

Changing ringtone volume	Volume → Select item → Adjust level →
Selecting illumination option	Event Light → Select item → Switch On/Off → On, Link to Sound or Off →
Setting illumination color	Event Light → Select item → Light Color → Select color →
Changing Key Illumination patterns	Event Light → Select item → Key Pattern → Select pattern → <ul style="list-style-type: none"> Regardless of Key Pattern setting, ringtones control illumination when Switch On/Off is set to Link to Sound.
Enabling/disabling illumination for missed transmissions	Status Light → Select item → Switch On/Off → On or Off →
Setting illumination color for missed transmissions	Status Light → Select item → Light Color → Select color →
Answering calls with other keys	Any Key Answer → On → <ul style="list-style-type: none"> Use [0-9*] - [*,#], [X], [1-9], [000], [*,#], [0-9], [000] or [000] in addition to [0-9*].
Muting ringer with other keys	Any Key Answer → Only Mute → <ul style="list-style-type: none"> Use [0-9*] - [*,#], [X], [1-9], [000], [*,#], [0-9], [000], [000] or [000] in addition to [0-9*].



Sound Settings

System Sounds

Start Here → Settings → In Sound/Display menu, *Sounds & Alerts*

Enabling Keypad Tones	<i>System Sounds</i> → Keypad Tones → Select tone
Changing S! Circle Talk tone	<i>System Sounds</i> → S! Circle Talk → Select tone
Changing other System Sounds	<i>System Sounds</i> → Select item → Tone or Sound → Select folder → Select tone/file <ul style="list-style-type: none"> For files with limited usage period, choose Yes and press.
Disabling System Sounds	<i>System Sounds</i> → Select item → Tone or Sound → Off <ul style="list-style-type: none"> Not available for <i>S! Circle Talk</i>. For <i>Keypad Tones</i>, omit <i>Tone</i> or <i>Sound</i> selection step.
Changing System Sound duration	<i>System Sounds</i> → Select item → Duration → Select/enter time <ul style="list-style-type: none"> Not available for <i>Keypad Tones</i> or <i>S! Circle Talk</i>.
Changing System Sound volume	<i>Volume</i> → General Volume → Adjust level

Additional Sound Settings

Start Here → Settings → Sound/Display menu

Disabling Speaker when using Headphones	<i>Ringer Output</i> → Earphone
Activating Speaker surround	<i>Sounds & Alerts</i> → Surround → On



Connectivity Settings

Network	
	Start Here → Settings → Network
Selecting a Network manually	Select Network → Manual → Select Network
Adding preferred Networks	Select Network → Set Preferred → Select target location → Select Network
Adding preferred Networks to the end	Select Network → Set Preferred → Add to End → Select Network
Deleting preferred Networks	Select Network → Set Preferred → Select Network → Delete
Adding Networks	Select Network → Add New Network → Add → Enter country code → Enter Network code → Enter name → Select NW Type → Select type <ul style="list-style-type: none"> After selecting Add New Network and pressing Add, Network list appears if Network has already been added. To add more, press Add again and proceed.
Editing Networks	Select Network → Add New Network → Select Network → Change → Edit in the same manner as adding Networks
Deleting Networks	Select Network → Add New Network → Select Network → Delete
Switching Network service between 3G and GSM manually	Select Service → Manual → Select service
Refreshing Network connection	Re-search Signal
Retrieving Network Information	Retrieve NW Info → Yes
Checking Network status	Network Info
Editing connection names for mobile data communication	External Device → Select name → Edit
Clearing connection names for mobile data communication	External Device → Reset → Yes

IP Service

[Start Here](#) → Settings → Phone/ → Locks

Enabling IP Service	IP Service Setting → On <ul style="list-style-type: none"> Enable IP Service to use S! Friend's Status and S! Circle Talk.
---------------------	--



Reset Settings

Restoring Default Settings

[Start Here](#) → Settings → Phone/Phone → Master Reset

Restoring default handset settings	<p>Reset Settings → Enter Administrator Code → Yes → Yes</p> <ul style="list-style-type: none"> Some default settings may not be restored.
Clearing all Phone Book entries, Data Folder files, etc.	<p>Reset All → Enter Administrator Code → Yes → Yes</p> <ul style="list-style-type: none"> Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications. Handset Code and Administrator Code return to the default state (unset).

- A confirmation may appear before entering Administrator Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

