

<b>Digital TV .....</b>	<b>7-2</b>
Basics .....	7-2
Area Setup.....	7-3
Watching TV .....	7-4
Obtaining Program Information.....	7-7
<b>Recording/Playing.....</b>	<b>7-8</b>
Recording Programs.....	7-8
Playing Recorded Programs.....	7-9

<b>TV Timer .....</b>	<b>7-10</b>
TV Timer & TV Recording Timer.....	7-10
<b>Time Shift .....</b>	<b>7-11</b>
Time Shift Recording & Playback...	7-11
<b>Additional Functions .....</b>	<b>7-12</b>
<b>Troubleshooting.....</b>	<b>7-18</b>

# 7

## Digital TV



## Basics

945SH supports One Seg terrestrial digital television broadcast services developed for mobile devices in Japan.

### Watch Live Television

Set up a channel list for your service area to access available programming. Capture screenshots while watching TV.

### Multi Job

Watch TV in one half of Display using the other to access messaging functions, browse the Internet or open Phone Book, etc.

### TV Listing (EPG) & Program Info

Find program channels and times, or open program details via current channel's schedule.

### View Data Broadcasts

In addition to audio and visuals, enjoy text, program-related information and interactive services.

### Record Shows/Time Shift

Record current program for later viewing; if interrupted by incoming calls while watching TV, record it temporarily for delayed playback.

### Reserve TV Programs

Record a show or activate TV at a specified time; enter dates & times manually or reference TV Listing electronic program guide.

### Important Digital TV Usage Notes


- 945SH TV is exclusively for use in Japan.
- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- When using TV while charging battery, separate AC Charger and Antenna to avoid interference.
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programs may not be viewable or record properly when:
  - Too far from or too close to broadcasting stations
  - In mountainous areas or near tall buildings
  - Aboard trains or in moving vehicles
  - Near high-voltage lines, neon lights or wireless base stations
  - Near railroad tracks or highways
  - Anywhere a jamming signal is broadcast/reception is unstable



## Area Setup


When activating TV for the first time, follow these steps to set up channels by area:

1 

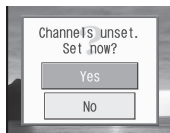

- Setup confirmation appears.

2 Yes  

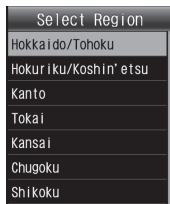

3 Select region  


4 Select prefecture    
Select locality  



- After setup, channel list appears.

5 




- To watch TV, select **Digital TV** and press .

### Watching TV without Completing Area Setup

In  **No Preference**  


### Adding Reception Areas

         
Change Area        
                    

### Digital TV Antenna

Pulling Antenna by its top, extend it fully.

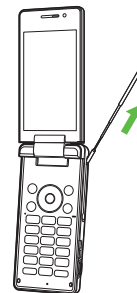

- Adjust angle to find best reception. (Unless transmission source is near, extend it for better reception.)
- After use, gently retract Antenna. Do not carry handset with Antenna extended; damage may result.



7

Digital TV

## Advanced


-  ● Switching reception Areas ● Renaming Areas ● Changing/disabling  function ● Editing channels ● Deleting all channels in Area ● Adding new channels to Area ● Updating all channels in the Area (P.7-12)



## Watching TV


First, complete Area setup (P.7-3).

1 

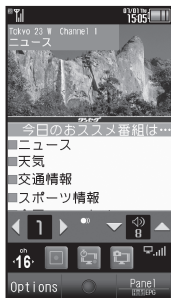


TV Window

2 Use Keypad to select a channel

- Use  to switch channels one by one; Long Press to find channel with stable signal automatically.

3  ➔ Yes ➔  ➔ TV ends


### Incoming Calls

- Press  to answer calls.

### When Answering Voice Calls with Memory Card Inserted

- Current program is temporarily recorded; start playback after the call. (Time Shift)

### Incoming Messages

- Double beep sounds and New Message notice appears. Long Press  to access messages.

## Watching TV in Widescreen

### Viewer Position

1 In TV window, rotate Display to Viewer position

2 Hold handset in landscape



- TV window rotates with handset orientation.

3 Drag left or right across TV image ➔ Tap channel

- Alternatively, tap channel key then drag left or right to select channels.

### Activating TV from Standby in Viewer Position

Tap MENU ➔ Tap TV ➔ Tap Digital TV

## Advanced

- Opening Help
- Searching for current program on the Internet
- Selecting an audiovisual mode
- Changing panel pattern in portrait orientation
- Changing handset responses to incoming transmissions (And more on P.7-12 - 7-13)
- Changing subtitle settings
- Changing sound settings (P.7-15)



## Clamshell Open

First, in Motion Control menu, set Display Change to **Manual at Open(press $\frac{1}{2}$ )** or **Manual(press $\frac{1}{2}$ )**.

### 1 In TV window,







- TV window rotates 90 degrees clockwise.

### 2 Use Keypad to select a channel

- Multi Selector response changes with TV orientation.

## Major TV Window Operations

### Handset Keys

Toggle Panel On/Off	
Change Area	
Volume Control	
Toggle Display Size (portrait)	

### Touch Panel

Switch Channel	Drag left or right across TV image ➔ Tap channel
Volume Control	Drag up or down across TV image
Toggle View	Tap TV image
Change Display Size	Pinch or spread across TV image <sup>1</sup>
Change Data Broadcast View	Pinch or spread across Data Broadcast area <sup>1</sup>
Change Area	Tap Area name ➔ Tap Area <sup>2</sup>


<sup>1</sup>Available in portrait orientation.

<sup>2</sup>Available in landscape orientation.

### Using Options Menu via Touch Panel

- Tap **Options**, then tap menu items to proceed.

## Panel & Channel Area Descriptions

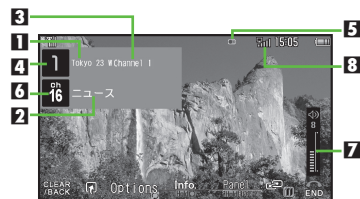



1 Area name	5 Sound Channel
2 Program name	6 Channel
3 Station name	7 Volume
4 Channel key	8 Signal strength <sup>*</sup>


<sup>\*</sup>The more bars the better.

Indicator position varies with display size.



## Data Broadcast (Japanese)

In portrait orientation, Data Broadcast appears below TV image. Use  to select an item and press  to access program-related information and interactive services.

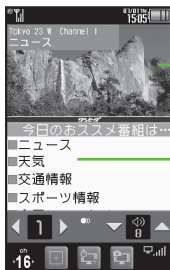

TV Image

Data Broadcast

Data Broadcast Window

### Data Broadcast Fees

- Data Broadcast information viewing is free, however, using data links/related services incurs Internet connection fees.
- A confirmation appears the first time a fee-based Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed.

## Still Image Capture

Capture screenshots while watching TV.

- May be unavailable if TV was activated by TV Timer, etc.
- Saved images cannot be forwarded, edited, set as Wallpaper or attached to messages.


1 In TV window, 

2 

- Image is saved.

### In Viewer Position

Tap *Options* ➔ Tap *Useful* ➔ Tap *Capture* ➔ Tap *Assign*

- In portrait orientation, tap , then tap *Assign*.

### Opening Saved Images

- While Watching TV


[TV Window]  ➔ *Useful Func.* ➔

 ➔ *TV-Image Folder* ➔  ➔






Select image ➔ 

- From Standby

 ➔ *TV* ➔  ➔ *TV-Image Folder*

➔  ➔ Select image ➔ 

## Advanced

-  Changing view
-  Returning to initial window
-  Deleting information saved from Data Broadcasts
-  Suppressing Network connection confirmation
-  Saving links to Data Broadcasts or related information (And more on P.7-14)



## Obtaining Program Information

Find program channels and times, or open program details via current channel's schedule.

<b>TV Listing</b>	Start EPG S! Application to find program channels and times for specified area
<b>Program Info</b>	Open program details via current channel's schedule; set Reservations to record shows or activate TV

### TV Listing (Japanese)

#### 1 In TV window, (Y) (Long)

- EPG application starts; refer to the application's help menu for operational instructions.
- When using EPG application for the first time, a confirmation appears. Follow onscreen instructions.

#### In Viewer Position

Long Touch **Hold EPG**

### Program Info

#### 1 In TV window, (M) ➡ OperateProgram ➡ (C)

#### 2 Program Info. ➡ (C)



Program Info Window

#### 3 Select program ➡ (C)

- To return to TV window, press (CLEAR BACK) twice.

### Setting Recording Timer via Program Info [Program Info Window] Select program ➡ (Y)

- Timer entries set via Program Info are updated with program changes automatically. Program cancellations cancel corresponding Timer entries. (Poor signal conditions may inhibit updates or cancellations.)

### Setting TV Timer via Program Info [Program Info Window] Select program ➡ (M) ➡ Watching ➡ (C)



## Recording Programs

Clip is saved to handset (or Memory Card, if inserted).

### Precautions

- Saved files cannot be forwarded or attached to messages.
- 945SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank Mobile is not liable for any damages resulting from accidental loss or alteration of recorded content.

### Dubbing 10

- 945SH supports Dubbing 10 copy protection scheme that allows recordings to be copied from handset to Memory Card. Open file properties for remaining copy count.

## 1 In TV window, (Long) ➔ Recording starts



Recording Window

- Changing volume, etc. does not affect recordings.
- When Small Lights flash yellow, reception is poor; change location to improve it: Small Lights illuminate green for moderate, or blue for strong reception.

## 2 (Long) ➔ Recording ends

### Recording Programs in Landscape

[TV Window] (Long)

- To stop, Long Press (Long) while recording.

### In Viewer Position

- Tap (Long) to start recording. To stop, tap (Long).
- In landscape orientation, Long Touch (Long) (To stop, Long Touch (Long)).

### Chase Play (Playing while Recording)

- Watch a program from the beginning while recording it on Memory Card.

[Recording Window] (Long) ➔

Playback starts ➔ (Long) ➔

Playback stops

- To start playback in Viewer position, tap **Options** ➔ **Rec/Play** ➔ **Play**. Long Touch (Long) to stop playback.

### Memory/Battery Runs Low or Video

### Call/S! Circle Talk Request is Accepted

- Recording stops. (Recorded clip is saved.)

### Saving Files via the Internet while Recording

- While recording programs to handset, be sure there is enough free memory before saving files.

### Advanced

- Recording programs without Data Broadcasts
- Saving Data Broadcast images to handset
- Recording programs to handset (P.7-15)





# Playing Recorded Programs

- 1 In TV window, ➔ **TV Player** ➔



Video List

- indicates the file is unplayable.

- 2 Select file ➔



Playback Window

- Playback starts. (The last played file plays from where it stopped.)

- 3 (Long) ➔ **Playback stops**

## Switching Video Lists

After , ➔ **Change to Phone** or **Change to MemoryCard** ➔

## Major Playback Operations

Adjust volume or change display size following the same operations used while watching TV.

## Handset Keys

<b>Rewind/Fast Forward</b>	1, 2 /  1
<b>Skip (Forward/Backward)</b>	/
<b>Pause</b> <sup>3</sup>	(● in landscape)
<b>Marker</b>	<sup>4</sup>
<b>Toggle Panel On/Off</b>	( in landscape)

<sup>1</sup>Each press increases speed. To resume normal playback, press (● in landscape).

<sup>2</sup>Long Press to replay. (Available when no Marker is saved.)

<sup>3</sup>In pause, use to reverse/advance frame.

<sup>4</sup>Not available during Time Shift playback. Long Press to split file.

## Touch Panel

<b>Rewind</b>	Drag left across TV image <sup>1</sup>
<b>Fast Forward</b>	Drag right across TV image <sup>1</sup>
<b>Pause</b>	Tap <b>Pause</b> or <sup>2</sup>
<b>Stop Playback</b>	Long Touch <b>Hold</b>
<b>Skip to Any Point</b>	Drag slider
<b>Toggle View</b>	Tap TV image
<b>Change Display Size</b>	Pinch or spread across TV image <sup>3</sup>
<b>Change Data Broadcast View</b>	Pinch or spread across Data Broadcast area <sup>3</sup>

<sup>1</sup>Release to resume normal playback.

<sup>2</sup>In pause, drag left/right across TV image to reverse/advance frame.













<sup>3</sup>Available in portrait orientation.

## Advanced

- Splitting files by specifying a time point ● Playing files repeatedly ● Playing split files ● Playing video files transferred from Blu-ray Disc recorders
- Checking memory status ● Renaming files ● Deleting files ● Copying files to Memory Card ● Opening file properties ● Using Marker List (And more on P.7-15 - 7-16)



## TV Timer & TV Recording Timer

- 1 In TV window,  ➔ **Rec./TimeShift** ➔ 
- 2 **Reservation List** ➔  ➔ 
- 3 **New Entry** ➔ 
- 4 **Manual** ➔  ➔ **Watching or Recording** ➔ 
- 5 Enter start date/time ➔  ➔ Enter end date/time ➔ 
- 6 **Channel:** ➔  ➔ **Select channel** ➔  ➔ 

### Setting Timer via EPG

In 4, **From TV Listing** ➔ 

- Refer to the application's help menu for operational instructions.

### Timer Recording Precautions

Confirm target channel reception.

- End the current operations.
- Be sure battery is adequately charged and there is enough free memory.

### At Timer Time (TV Alarm Time)

TV and Alarm activate.




Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.

### While Using Another Function

- TV activates via Multi Job and target program/recording starts. However, if Multi Job cannot activate in the current state, TV may remain off, or the current function may end automatically (unsaved images, messages, Phone Book entries, etc. may be deleted). End all active functions/applications before Timer time.

### Advanced

-  ● Opening/editing/deleting Timer details ● Opening/playing/deleting Timer log records ● Customizing TV Alarm settings ● Prioritizing current operation over TV Timer/TV Recording Timer (P.7-17)



## Time Shift Recording & Playback

Record current program temporarily for delayed playback.

- Recorded content is deleted after playback.
- First, insert Memory Card.

### 1 While watching TV, (Long) ➔ Recording starts



Recording in progress

### 2 While recording, (Long) ➔ Playback starts

- Playback starts from where recording was started.
- Recording and playback stop when Time Shift playback has caught up to the real-time program.

#### Recording in Viewer Position

Tap **Options** ➔ Tap **Rec/** ➔ Tap **Rec**

- To start playback while recording, tap **Options** ➔ **Rec/** ➔ **Start**.
- In portrait orientation, tap .

#### Major Playback Operations

##### Handset Keys

Fast Forward	
Skip Forward	
Skip Backward	

\*Press to resume normal Time Shift playback.

##### Touch Panel

Fast Forward	Drag right across TV image*
--------------	-----------------------------

\*Release to resume normal Time Shift playback.

#### Time Shift Recording Automatic Activation

When a Voice Call is answered while watching TV with Memory Card inserted, Time Shift recording starts automatically; Long Press after the call for playback.

#### Advanced

- Disabling Time Shift recording automatic activation (P.7-15)



Area & Channel	
Switching reception Areas	While watching TV,  ➔ <b>Select Area</b> ➔
Renaming Areas	While watching TV,  ➔ <b>Set Channels</b> ➔  ➔ <b>Change Area</b> ➔  ➔ <b>Select Area</b> ➔  ➔ <b>Change Area Name</b> ➔  ➔ <b>Enter name</b> ➔
Changing/disabling function	<small>(Start Here)</small> While watching TV,  ➔ <b>Set Channels</b> ➔  ➔ <b>Channel Key Setting</b> ➔  ➔ See below
	<b>Toggle All Receivable Channels By Manual</b> ➔
	<b>Disabling</b> <b>Disable</b> ➔
Editing channels	<small>(Start Here)</small> While watching TV,  ➔ <b>Set Channels</b> ➔  ➔ <b>CH Switch</b> ➔  ➔ <b>Select channel</b> ➔  ➔ See below
	<b>Switching Channel Positions</b> <b>Flip</b> ➔  ➔ <b>Select target key</b> ➔
	<b>Deleting Channels</b> <b>Delete</b> ➔  ➔ <b>Yes</b> ➔
Deleting all channels in Area	While watching TV,  ➔ <b>Set Channels</b> ➔  ➔ <b>Change Area</b> ➔  ➔ <b>Select Area</b> ➔  ➔ <b>Reset Settings</b> ➔  ➔ <b>Yes</b> ➔
Adding new channels to Area	While watching TV,  ➔ <b>Set Channels</b> ➔  ➔ <b>Change Area</b> ➔  ➔ <b>Select Area</b> ➔  ➔ <b>Channel Update</b> ➔  ➔ <b>Update Further</b> ➔
Updating all channels in the Area	While watching TV,  ➔ <b>Set Channels</b> ➔  ➔ <b>Change Area</b> ➔  ➔ <b>Select Area</b> ➔  ➔ <b>Channel Update</b> ➔  ➔ <b>Update All</b> ➔  ➔ <b>Yes</b> ➔

Watching	
Opening Help	While watching TV,  ➔ <b>Help</b> ➔ • Also available while recording or playing programs.
Searching for current program on the Internet	While watching TV,  ➔ <b>Operate Program</b> ➔  ➔ <b>Program Info. Search</b> ➔  ➔ <b>Search</b> ➔ • Follow onscreen instructions.
Enlarging image portion in landscape	With TV in landscape, <b>Long Touch</b> portion • Drag enlarged portion to enlarge other areas. • To return, tap Display.
Enlarging display size for portrait orientation	With TV in portrait,  ➔ <b>AV Settings</b> ➔  ➔ <b>Screen Size</b> ➔  ➔ <b>Enlarge</b> ➔
Canceling image smoothing	While watching TV,  ➔ <b>AV Settings</b> ➔  ➔ <b>Smooth Mode</b> ➔  ➔ <b>Off</b> ➔
Saving current channel	While watching TV,  ➔ <b>Set Channels</b> ➔  ➔ <b>Save Channel</b> ➔  ➔ <b>Select key</b> ➔ • To overwrite a saved channel, choose <b>Yes</b> and press .
Selecting an audiovisual mode	While watching TV,  ➔ <b>AV Settings</b> ➔  ➔ <b>AV Mode</b> ➔  ➔ <b>Select mode</b> ➔ • TV reception time may shorten depending on the mode.



Adjusting current AV Mode parameters	<p><b>Start Here</b> While watching TV,  ➔ <b>AV Settings</b> ➔  ➔ <b>See below</b></p> <ul style="list-style-type: none"> <li>Change AV Mode (select mode other than <b>Link to Genre</b>) first.</li> </ul>
	<p><b>Brightness</b>  <b>Image</b> ➔  ➔ <b>Brightness</b> ➔  ➔ <b>Adjust level</b> ➔ </p>
	<p><b>Disabling Brightness Adjustment via Light Sensor</b>  <b>Image</b> ➔  ➔ <b>Brightness</b> ➔  ➔  ➔ </p>
	<p><b>Adjusting Brightness Automatically by Scene</b>  <b>Image</b> ➔  ➔ <b>Control by Scene</b> ➔  ➔ <b>On(Light) or On</b> ➔ </p>
	<p><b>Other Image-Related Parameters</b>  <b>Image</b> ➔  ➔ <b>Select item</b> ➔  ➔ <b>Adjust level</b> ➔ </p> <ul style="list-style-type: none"> <li>Adjust <b>Contrast</b>, <b>Blackness</b> (black level), <b>Color</b> (color density), <b>Tint</b> (skin color tone) and <b>Sharpness</b>.</li> </ul>
	<p><b>Restoring Default Image Settings</b>  <b>Image</b> ➔  ➔ <b>Reset</b> ➔  ➔ <b>Yes</b> ➔ </p>
Changing panel pattern in portrait orientation	<p><b>Selecting Sound Option</b>  <b>Tone</b> ➔  ➔ <b>Select option</b> ➔ </p>
	<p>With TV in portrait,  ➔ <b>Advanced</b> ➔  ➔ <b>Panel Type</b> ➔  ➔ <b>Select pattern</b> ➔ </p>
Setting indicators to always appear in landscape orientation	<p>With TV in landscape,  ➔ <b>Advanced</b> ➔  ➔ <b>Display Icon</b> ➔  ➔ <b>On</b> ➔ </p>

Switching One Seg services	<p>While watching TV,  ➔ <b>Set Channels</b> ➔  ➔ <b>Select Serv. Station</b> ➔  ➔ <b>Select service</b> ➔ </p> <ul style="list-style-type: none"> <li>Available for programs with multiple services.</li> </ul>
Listening to audio from Speaker	<p>While watching TV,  ➔ <b>Advanced</b> ➔  ➔ <b>Sound Output</b> ➔  ➔ <b>Loudspeaker</b> ➔ </p>
Switching audio output to wireless device	<p> ➔ <b>TV</b> ➔  ➔ <b>Settings</b> ➔  ➔ <b>Sound Output</b> ➔  ➔ <b>Bluetooth Device</b> ➔ </p>
Using wireless Headphones	<p>While watching TV,  (Long)</p> <ul style="list-style-type: none"> <li>Pair SCMS-T DRM scheme compliant Bluetooth® headphones beforehand.</li> </ul>
Setting TV to end automatically after a period of time	<p>While watching TV,  ➔ <b>Advanced</b> ➔  ➔ <b>Auto Exit</b> ➔  ➔ <b>Auto Exit Time</b> ➔  ➔ <b>Select time</b> ➔ </p>
Disabling auto shut-off when handset is closed	<p>While watching TV,  ➔ <b>Advanced</b> ➔  ➔ <b>Auto Exit</b> ➔  ➔ <b>Close Action</b> ➔  ➔ <b>Watch TV</b> ➔ </p>
Changing handset responses to incoming transmissions	<p><b>Start Here</b>  ➔ <b>TV</b> ➔  ➔ <b>Settings</b> ➔  ➔ <b>Calls &amp; Alarms</b> ➔  ➔ <b>See below</b></p>
	<p><b>Showing Alarm Notice</b>  <b>Alarm</b> ➔  ➔ <b>Alarm Notice</b> ➔ </p>
	<p><b>Showing Voice Calls, Etc.</b>  <b>Select item</b> ➔  ➔ <b>Notice a Call</b> ➔ </p>
	<p><b>Showing New Message Window</b>  <b>Incoming Message</b> ➔  ➔ <b>Calls &amp; Alarms</b> ➔ </p>



## Data Broadcast

Changing view	With Data Broadcast in portrait,  ➔ <b>SetBroadcastData</b> ➔  ➔ <b>Change View (Data)</b> ➔ • To return to TV window, press .
Returning to initial window	With Data Broadcast in portrait,  ➔ <b>SetBroadcastData</b> ➔  ➔ <b>Back to Top</b> ➔
Deleting information saved from Data Broadcasts	<b>[Start Here]</b> While watching TV,  ➔ <b>SetBroadcastData</b> ➔  ➔ <b>Delete StationData</b> ➔  ➔ See below <b>Deleting by Station</b> Select station ➔  ➔ <b>Delete</b> ➔  ➔ <b>Yes</b> ➔ <b>Deleting All</b> ➔ <b>Delete All</b> ➔  ➔ <b>Yes</b> ➔
Suppressing Network connection confirmation	While watching TV,  ➔ <b>SetBroadcastData</b> ➔  ➔ <b>Notify Connection</b> ➔  ➔ <b>Off</b> ➔
Sending/hiding Location Information	<b>[Start Here]</b> While watching TV,  ➔ <b>SetBroadcastData</b> ➔  ➔ <b>Location</b> ➔  ➔ See below <b>Sending Always</b> <b>On</b> ➔ <b>Hiding Always</b> <b>Off</b> ➔
Hiding manufacture number and other information	While watching TV,  ➔ <b>SetBroadcastData</b> ➔  ➔ <b>Manufacture Number</b> ➔  ➔ <b>Off</b> ➔

## TV Link (Japanese)

Saving links to Data Broadcasts or related information	While viewing Data Broadcast, select link source ➔ • Link navigation varies by program. Follow onscreen instructions to save links.
Using TV links	<b>[Start Here]</b> ➔ <b>TV</b> ➔  ➔ <b>TV Link</b> ➔  ➔ See below <b>Opening TV Links</b> Select link ➔ • Connection fees may apply. <b>Opening Properties</b> Select link ➔  ➔ <b>Details</b> ➔
Deleting TV links	<b>[Start Here]</b> ➔ <b>TV</b> ➔  ➔ <b>TV Link</b> ➔  ➔ See below <b>One Entry</b> Select link ➔  ➔ <b>Delete</b> ➔  ➔ <b>Yes</b> ➔ <b>All Entries</b> ➔ <b>Delete All</b> ➔  ➔ <b>Yes</b> ➔



## Subtitle &amp; Sound

Changing subtitle settings	<p><b>[Start Here]</b> While watching TV,  ➔ <b>Subtitle/Sound</b> ➔  ➔ See below</p> <ul style="list-style-type: none"> <li>May be unavailable depending on program content or viewing style (TV orientation, etc.).</li> </ul>
	<p><b>Showing Subtitles Always</b></p> <p><b>Display Subtitle</b> ➔  ➔ <b>On</b> ➔ </p>
	<p><b>Hiding Subtitles Always</b></p> <p><b>Display Subtitle</b> ➔  ➔ <b>Off</b> ➔ </p>
	<p><b>Changing Subtitle Language</b></p> <p><b>Subtitle Language</b> ➔  ➔ <b>Language 2</b> ➔ </p>
	<p><b>Showing Subtitle Area Always</b></p> <p><b>Auto Subtitle Off</b> ➔  ➔ <b>Off</b> ➔ </p>
	<p><b>Showing Subtitles at the Top</b></p> <p><b>Subtitle Position</b> ➔  ➔ <b>Upper</b> ➔ </p>
	<p><b>Increasing Subtitle Lines</b></p> <p><b>Subtitle ScrollMode</b> ➔  ➔ <b>On</b> ➔ </p>
Changing sound settings	<p><b>[Start Here]</b> While watching TV,  ➔ <b>Subtitle/Sound</b> ➔  ➔ See below</p>
	<p><b>Selecting Sound Option</b></p> <p><b>Sound Type</b> ➔  ➔ <b>Sound2</b> ➔ </p> <ul style="list-style-type: none"> <li>Available when multiple sounds are supported.</li> </ul>
	<p><b>Listening to Sub Language</b></p> <p><b>Sound Channel</b> ➔  ➔ <b>Sub</b> ➔ </p>
	<p><b>Listening to Main &amp; Sub Languages</b></p> <p><b>Sound Channel</b> ➔  ➔ <b>Main + Sub</b> ➔ </p>

## Recording

Recording programs without Data Broadcasts	While watching TV,  ➔ <b>SetBroadcastData</b> ➔  ➔ <b>Set Recording</b> ➔  ➔ <b>Image Only</b> ➔
Saving Data Broadcast images to handset	While watching TV,  ➔ <b>SetBroadcastData</b> ➔  ➔ <b>Image Location</b> ➔  ➔ <b>Phone Memory</b> ➔
Disabling Time Shift recording automatic activation	➔ <b>TV</b> ➔  ➔ <b>Settings</b> ➔  ➔ <b>Set Call Time Shift</b> ➔  ➔ <b>Off</b> ➔
Recording programs to handset	➔ <b>TV</b> ➔  ➔ <b>Settings</b> ➔  ➔ <b>Save</b> ➔  ➔ <b>Recording to</b> ➔  ➔ <b>Phone Memory</b> ➔

## Recorded Programs

## ■ Playback

Splitting files by specifying a time point	During playback,  ➔ <b>Split File</b> ➔  ➔ <b>Select Point</b> ➔  ➔ <b>Specify point</b> ➔  ➔ <b>Confirm</b> ➔
Playing files repeatedly	➔ <b>TV</b> ➔  ➔ <b>TV Player</b> ➔  ➔ <b>Repeat</b> ➔
Playing split files	➔ <b>TV</b> ➔  ➔ <b>TV Player</b> ➔  ➔ <b>Select split file</b> ➔  ➔ <b>Select file</b> ➔



Playing video files transferred from Blu-ray Disc recorders	<p>● ➔ TV ➔ ● ➔ Recorder Contents ➔ ● ➔ Select file ➔ ●</p> <ul style="list-style-type: none"> <li>During playback, press (8) to switch sound channels [L (Main), R (Sub) or L + R (Main + Sub)]. (Available for programs supporting sub language.) For more operations, see P.9-6 "Video Playback Operations."</li> <li>In Recorder Contents file list, press (⏮) to rename files, change playback mode (repeat, random, etc.), check memory status, open properties or delete files.</li> </ul>
---	---

## Managing

Selecting multiple files	<p>Start Here ● ➔ TV ➔ ● ➔ TV Player ➔ ● ➔ (Y)</p> <p>➔ See below</p> <p>Selecting</p> <p>Select file ➔ ● (☑)</p> <ul style="list-style-type: none"> <li>To uncheck, press ● again.</li> </ul>
	<p>Selecting/Unchecking All</p> <p>(⏮) ➔ Check All or Uncheck All ➔ ●</p>
Checking memory status	<p>● ➔ TV ➔ ● ➔ TV Player ➔ ● ➔ (⏮) ➔ Memory Remaining ➔ ●</p>
Renaming files	<p>● ➔ TV ➔ ● ➔ TV Player ➔ ● ➔ Select file ➔ (⏮) ➔ Rename ➔ ● ➔ Enter name ➔ ●</p>
Deleting files	<p>Start Here ● ➔ TV ➔ ● ➔ TV Player ➔ ● ➔ See below</p> <p>Single Files</p> <p>Select file ➔ (⏮) ➔ Delete ➔ ● ➔ Yes ➔ ●</p>
	<p>All Files</p> <p>(⏮) ➔ Delete All ➔ ● ➔ Yes ➔ ●</p>

Copying files to Memory Card	<p>● ➔ TV ➔ ● ➔ TV Player ➔ ● ➔ (⏮) ➔ Change to Phone ➔ ● ➔ Select file ➔ (⏮) ➔ Copy to Card ➔ ● ➔ Yes ➔ ●</p> <ul style="list-style-type: none"> <li>Available for compatible files.</li> </ul>
Moving files to Memory Card	<p>● ➔ TV ➔ ● ➔ TV Player ➔ ● ➔ (⏮) ➔ Change to Phone ➔ ● ➔ Select file ➔ (⏮) ➔ Move to Card ➔ ● ➔ Yes ➔ ●</p> <ul style="list-style-type: none"> <li>Files moved to Memory Card cannot be moved back to handset.</li> </ul>
Sorting files	<p>● ➔ TV ➔ ● ➔ TV Player ➔ ● ➔ (⏮) ➔ Sort ➔ ● ➔ Select option ➔ ●</p>
Opening file properties	<p>● ➔ TV ➔ ● ➔ TV Player ➔ ● ➔ Select file ➔ (⏮) ➔ Details ➔ ●</p>

## Markers

Playing files with Markers	<p>Start Here During playback ➔ See below</p> <p>Skipping between Markers</p> <p>(⏮) (Long) or (⏭) (Long)</p> <p>Moving to Specific Markers</p> <p>(0) - (9)</p>
	<p>Start Here During playback, (⏮) ➔ Set Marker ➔ ● ➔ Marker List ➔ ● ➔ See below</p> <p>Starting Playback</p> <p>Select number ➔ ●</p> <p>Deleting a Marker</p> <p>Select number ➔ (⏮) ➔ Delete ➔ ●</p> <p>Deleting All Markers</p> <p>(⏮) ➔ Delete All ➔ ● ➔ Yes ➔ ●</p>





## TV Timer &amp; TV Recording Timer

Opening/editing/ deleting Timer details	<p><b>Start Here</b> While watching TV,   <b>Rec./TimeShift</b>  <b>Reservation List</b> <b>See below</b></p> <p><b>Opening Entries</b>  <b>Select entry</b> </p> <p><b>Editing Entries</b>  <b>Select entry</b> <b>Edit</b> <b>Edit</b> </p> <ul style="list-style-type: none"> <li>Some entries may not be edited depending on the content.</li> </ul> <p><b>Deleting Entries</b>  <b>Select entry</b> <b>Delete</b> <b>Yes</b> </p>
	<p><b>Start Here</b> While watching TV,   <b>Rec./TimeShift</b>  <b>Reservation List</b> <b>See below</b></p> <p><b>Opening Timer Log</b>  <b>Select record</b> </p> <p><b>Playing Recorded Programs</b>  <b>Select record</b> </p> <p><b>Deleting Records</b>  <b>Select record</b> <b>Yes</b> </p>

Customizing TV  
Alarm settings

**Start Here** While watching TV, **Rec./TimeShift**  
**Reservation List** **TV**  
**Alarm** **See below**

## Changing TV Alarm Time

**Alarm Time** **Select time**

## Disabling Tone/Vibration

**Alarm or Vibration** **Off**

## Changing Illumination Pattern

**Effect Illumination** **Pattern/Color**

**Select pattern** **Select color**

- Light color is unselectable for some patterns.

## Changing Key Illumination Pattern

**Effect Illumination** **Key Pattern**

**Select pattern**

## Disabling Illumination

**Effect Illumination** **Switch On/Off**

**Off**

## Changing Duration

**Duration** **Select time**

Prioritizing current  
operation over TV  
Timer/TV  
Recording Timer

**TV** **TV Reserve**

**Prior** **Off**



## Watching

### ? TV won't activate

- Battery may be low. Charge battery or install a charged battery.

### ? Cannot watch TV

- Reception may be poor; change location to improve it. (TV signal strength is independent of handset signal strength.)
- Handset may not have been used for a period of time; retrieve Network Information.
- TV is disabled upon subscription termination.

### ? Area setup does not complete correctly

- Perform **Update All** in Channel Update. Area setup may not complete correctly depending on the area or service availability.

## Recording

### ? Ringtone does not sound as set while recording

- When a Chaku-Uta<sup>®</sup> file, etc. is set as ringtone, default ringtone may sound for incoming transmissions while recording.

## TV Recording Timer

### ? Could not start recording. appeared as recording result

- Recording failed due to low battery/memory, active function, etc.

### ? Recording aborted. appeared as recording result

- Recording was interrupted due to low memory, Memory Card removal, etc.

