

# Support

## SoftBank 825SH First Step Guide

### Customer Service

Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113

### More Information


**Handset User Support**  
Via Yahoo! Keitai Main Menu:  
From above the search field,  
select **メニューリスト** →  
**English** → **User Support**

**Online English Manual**  
See SOFTBANK MOBILE Corp.  
Website (<http://www.softbank.jp>).  
May be unavailable at purchase.  
Call Customer Service or try later.

### Emergency Numbers

- Police ..... 110
- Fire & Ambulance ..... 119
- Maritime Safety Agency.. 118

Printed in China  
TINSEA168EFZZ  
08F DS MK ①

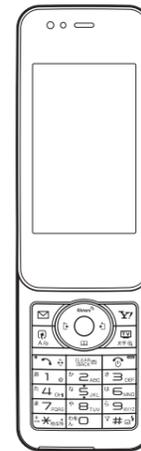

Emergency Numbers

Customer Service

More Information

Use English Interface

Place International Calls

Customize Handset Address

And more...

# Safety Precautions

- Use specified items (battery, Charger, etc.) only.  
Non-specified equipment use may cause malfunction, or battery to leak, overheat, burst or ignite, leading to fire, burn injuries or electric shock.
- Do not short-circuit power/charging terminals.  
May cause fire, electric shock or malfunction; battery may leak, overheat, burst or ignite. Keep conductive material (wire, metal jewelry, pencil lead, etc.) away from Charger or External Device Port terminals.
- Do not open, modify or disassemble handset and related hardware.  
May cause malfunction, or battery may leak, overheat, burst or ignite. Fire, injury or electric shock may also result. Contact SoftBank Customer Center, Customer Assistance for repairs.
- Do not expose handset or accessories to liquids.  
May cause malfunction, overheating, fire or electric shock. Avoid exposure to water, pet urine, etc.

- Do not expose handset/accessories to extreme heat/direct sunlight (e.g., inside vehicles, etc.).  
May cause malfunction/warping; battery may leak, overheat, burst or ignite. Handset or battery may become hot to the touch, leading to burn injuries.
- Do not dispose of battery in fire.  
May leak, overheat, burst or ignite.
- Do not apply strong shocks or excessive force.  
Do not drop/throw handset/accessories. May cause damage or malfunction. Battery may leak, overheat, burst or ignite, resulting in fire, shock or injury. Stop using battery if damaged or warped. Do not sit on or place heavy objects on handset/accessories (e.g., in back pants pockets or inside handbags, packs, etc.).
- Keep handset, battery or Charger away from humidity, dust or extreme temperatures.  
Malfunction may result.
- If battery fluid gets in eyes, do not rub; rinse with water and consult a doctor immediately.  
Eyes may be severely damaged.


- Do not force battery into handset.  
Battery may leak, overheat, burst or ignite; make sure the direction and install properly.
- Do not place handset or accessories in ovens, microwave ovens or other cooking appliances.  
Battery or other parts may leak, burst, overheat or ignite; may cause malfunction, accident or injury.
- Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk. Handset use near petrochemicals or other flammables may cause fire/explosion; turn handset off before using Osaifu-Keitai® at gas stations (cancel IC Card Lock beforehand).
- Do not use Mobile Light near people's faces.  
May temporarily affect sight leading to accidents.
- Never use handset (including TV) while driving.  
Accidents may result. Park beforehand. Phone use while driving is prohibited by the Road Traffic Law.

- If an abnormality occurs:  
If there is abnormal odor, excessive heat, discoloration or distortion, unplug Charger, turn off handset and remove battery immediately; may cause overheating, bursting, fire or battery leakage.
  - If battery does not charge properly, stop trying.  
Battery may leak, overheat, burst or ignite.
  - At signs of a battery leak, avoid fire sources.  
Battery may catch fire or burst.
- For more information, see Online English Manual.


# Before Using Handset

### Accessories

- Battery (SHBBW1)

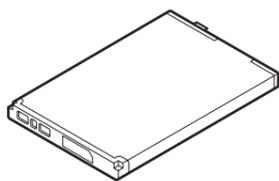

- Utility Software (Japanese)\*

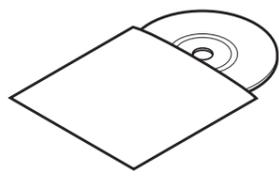


\* Complimentary sample.

### USIM Card Installation

- 1 Slide in USIM Card with IC chip facing down
- 2 Insert battery (right)

- First power off handset and remove battery.
- Do not force USIM Card into/out of handset.
- USIM Card must be inserted to use handset.

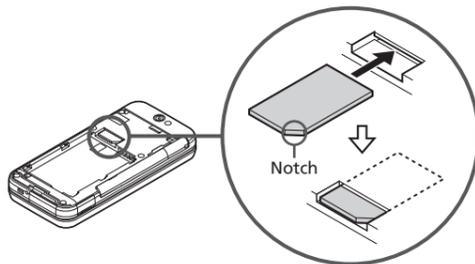




### Manner Mode

- Minding Mobile Manners  
Please use handset responsibly. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using handset. Adjust handset use according to your surroundings.

Activating/Canceling Manner Mode  
■ \*#\*# (Long)

### Battery Installation

- 1 Remove cover
- 2 Insert battery
- 3 Close cover

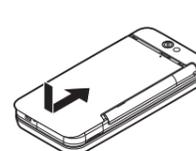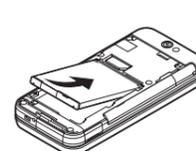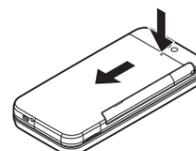

• Press and slide as shown.

### USIM PINs


- PIN1  
4-digit code; activate PIN Entry to restrict usage.
- PIN2  
Required to clear Call Costs and to set Max Cost.  
PIN1 and PIN2, 9999 by default, are changeable.

- PIN Lock & Cancellation (PUK Code\*)  
Entering incorrect PIN1 or PIN2 three consecutive times locks USIM Card, disabling handset. Enter PUK Code to unlock. For details, contact SoftBank Customer Center, General Information.  
\* USIM Personal Unblocking Key (PUK Code) unblocks a USIM Card blocked after the wrong PIN has been entered three consecutive times. Each USIM Card has a unique PUK Code. Do not disclose it to unauthorized persons.

### Charging

Use specified AC Charger ZTDAA1 (sold separately) only.

- 1 Open Port Cover to connect AC Charger
- 2 Plug AC Charger into AC outlet
  - Small Light illuminates red while charging.
  - Small Light goes out when battery is full.
- 3 After charging, unplug AC Charger, then disconnect handset

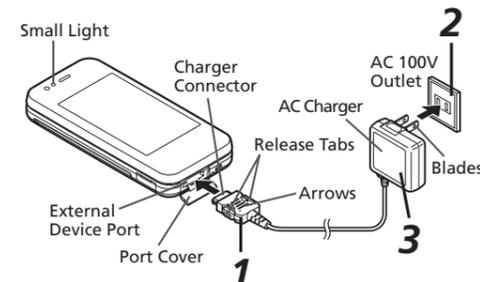

### Security Codes

- Handset Code  
9999 by default; use or change some functions.
- Center Access Code  
4-digit code selected at contract; access Optional Services via landlines or change contract details.
- Network Password  
4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring).

- Message appears for incorrect code entries; retry.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed. For details, contact SoftBank Customer Center, General Information.

### Specifications

#### SoftBank 825SH

Weight	Approximately 109 g
Continuous Talk Time	Approximately 240 minutes (3G) Approximately 210 minutes (GSM)
Continuous Standby Time (Slider closed)	Approximately 330 hours (3G) Approximately 310 hours (GSM)
Charging Time (power off)	AC Charger: Approximately 140 minutes In-Car Charger: Approximately 140 minutes

Dimensions (W x H x D)	Approximately 48 x 102.9 x 14.9 mm (Slider closed, without protruding parts)
Maximum Output	0.25 W (3G) 2.0 W (GSM)

• Values calculated with battery installed.

