


# Text Entry

<b>Text Entry</b> .....	<b>3-2</b>
<b>Entering Text</b> .....	<b>3-2</b>
Entering Characters .....	3-2
Pictographs & Symbols .....	3-3
Additional Features.....	3-4
<b>Conversion Methods (Japanese)</b> .....	<b>3-5</b>
Predictive Conversion .....	3-5
Converting Hiragana to Katakana/Alphanumerics.....	3-7
Narrowing Down Predictive Candidates by Number of Characters .....	3-7
<b>Editing Text</b> .....	<b>3-8</b>
Deleting & Replacing .....	3-8
Copy/Cut & Paste .....	3-8
<b>User's Dictionary</b> .....	<b>3-9</b>
Saving User's Dictionary Entries .....	3-9
<b>Download Dictionary</b> .....	<b>3-9</b>
Activating Downloaded Dictionaries.....	3-9

## Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

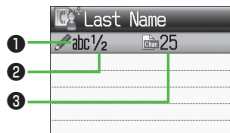

① Input Modes	Operation
漢: Kanji (Hiragana) か: Katakana abc: Alphanumerics 123: Numbers	
② Double-byte/Single-byte	Operation
1/1: Double-byte 1/2: Single-byte	Press and hold
③ Character/Byte Count	
Remaining number of enterable characters appears, regardless of input mode.	
Remaining number of enterable byte appears.	
Note	
<ul style="list-style-type: none"> <li>Follow the steps below to toggle input modes and single-/double-byte at the same time.</li> </ul>	
[Menu] → <b>Input Options</b> → <b>Change Input Mode</b>	

### Help

Help describes text entry operations.

> In text entry window, [Menu] → **Help** → Select an item

## Entering Text

### Entering Characters


Example: Enter 鈴木

- In alphanumerics mode, twice to switch to kanji (hiragana) mode  
す: three time  
ず: \* → three times →   
き: twice







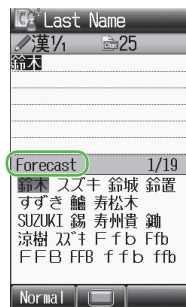






\*When the next character is on the same key, press first to move cursor.

- to enter Forecast List
  - To change word before converting, press .
  - There are four types of word suggestion list: **Forecast**, **Normal**, **E-1-Kana** and **Prediction** ( P.3-5)
- to select 鈴木




## Other Input Functions


Enter katakana/ alphanumerics	 several times to select an input mode → Enter characters
Enter small kana ( <b>ッ</b> , <b>ヴ</b> , etc.)	Enter a character →  ● Alternatively, press a key repeatedly to enter an assigned small kana.
Enter upper case characters	Enter a character →  ● Alternatively, press a key repeatedly to enter an assigned upper case character.
Add ` or °	Enter a character →  for ` or  twice for ° ● In single-byte katakana mode, ` and ° are entered as a single-byte character.
Insert line break	 to insert line breaks in text
Insert space at end of text	
Insert space within text	 repeatedly until single-byte space appears*, or use symbol list for double-byte or single-byte space (  Right)
Toggle characters in reverse order	 Example: From c, press  to toggle as follows. c → b → a → 2...

\* Space cannot be entered within text in number mode by following the steps above.

## Pictographs & Symbols

- Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail addresses.
- Symbol List:  P.16-13

### 1 Open Pictograph List

In text entry window, 



### Open Symbol List

In text entry window, press and hold 

or

 in pictograph list

List Log opens first when entered pictographs/symbols/My Pictograms exist.

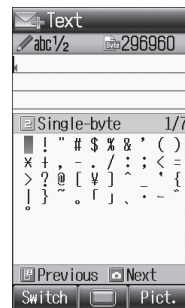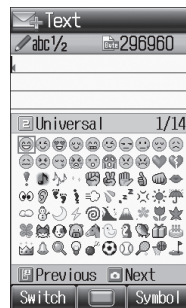


### 2 to select a pictograph or symbol

## Pictograph/Symbol List

- In Symbol Log, single-byte symbols appear in upper half of window; double-byte symbols in lower half.
- In List Log, pictographs appear in upper half of window; My Pictograms in lower half (only in S! Mail text entry window).

### Pictogram Type

- Universal (Cross-carrier) Pictographs
- All Pictographs
- My Pictograms

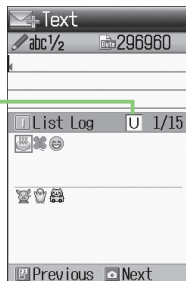

## Functions Available in Pictograph/Symbol List

<b>Toggle pictograph types</b>	In pictograph list,  [Switch] <ul style="list-style-type: none"> <li>● Toggle as follows: (List Log → ) Universal<sup>1</sup> → Full List → My Pictogram<sup>2</sup></li> <li>● Alternatively, press (1) to (4).</li> </ul>
<b>Toggle Symbol types</b>	In symbol list,  [Switch] <ul style="list-style-type: none"> <li>● Toggle as follows: (Symbol Log → ) Single-byte → double-byte</li> <li>● Alternatively, press (1) to (3).</li> </ul>
<b>Jump to next page</b>	In pictograph/symbol list,
<b>Jump to previous page</b>	In pictograph/symbol list,
<b>Toggle pictograph/symbol list</b>	In pictograph list,  /  [Symbol] In symbol list,  /  [Pict.]
<b>Close list</b>	

<sup>1</sup> In S! Mail Subject field and S! Mail/SMS Text field only

<sup>2</sup> In S! Mail Text field only

## Note

- Alternatively, follow the steps below to access pictograph or symbol:  
 [Menu] → *Pictograph* or *Symbol*

## Additional Features

### Emoticons

- > In text entry window, [Menu] → *Emotions* → Select an emoticon

### Use Info from Phone Book/Account Details/Notepad/String Templates

- > In text entry window, [Menu] → *Insert* → Select an item (See below)

Item	Operation/Description
<b>Phone Book Data*</b>	> Select an entry → Select an item
<b>Account Details*</b>	> Select an item
<b>Notepad</b>	> Highlight a note →  [Set] <ul style="list-style-type: none"> <li>● Alternatively, in kanji (hiragana), katakana and alphanumerics (double-/single-byte) mode, press and hold  → Highlight a note →  [Set].</li> </ul>
<b>String Templates</b>	Insert web and mail extensions > Select an extension

\* Available Items: Last Name/First Name, Reading, Phone Number, Email Address, Address or Note.

### Enter Kuten Code

- > In text entry window, [Menu] → *Input Options* → *Kuten Code* → Enter a character code (4 digits) (👉 P.16-14)

## Tip

- Change Input Font Size (👉 P.15-12)

# Conversion Methods (Japanese)

## Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

Before Entering Text*	Forecast (Pre-text Predict)	Suggests salutations/opening words Example: こんにちは, お疲れさま, etc.
While Entering Text	Forecast	Lists likely conversions and matching conversions. Likely Conversions: わ → 私, わたし, etc. Matching Conversions: わ → 和, 輪, etc.
	Normal	Suggests only matching conversions Example: わ → 和, 輪, etc.
	E-1-Kana	Lists alphanumerics/katakana assigned to key (☞ P.3-7)
After a Word is Fixed	Prediction	Suggests words likely to follow Example: 私 is fixed → です, の, は, etc.

\* Available when you open Message Text window or cursor is at top of Text window. Note that handset Language must be set to **日本語**.

- Predictions change with each letter entered.
- Press ☞[Forecast]/[Normal] to toggle Forecast List and Normal List.

### Predictive Candidates

- Time Season Predict function suggests words appropriate for current season and time.
- Set word suggestions for formal or informal words. (☞ P.15-13)

### Note









- 840P learns entered characters and suggests them for future conversions.



### Tip



#### Settings


- Disable Learning (Kana Conversions) ● Reset Learned Words
- Change Candidate Font Size ● Hide Predictive Candidates
- Hide Context Forecast List ● Fix Entered Characters Automatically (☞ P.15-12)
- Deactivate Pre-text Predict ● Deactivate Time Season Predict
- Activate Text Expression (☞ P.15-13)


**Example: Enter 私の鼻**

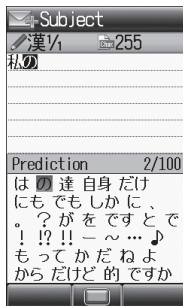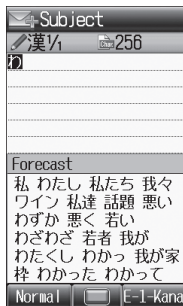- 1 In kanji (hiragana) mode,  わ is entered and Forecast List appears.
- 2  to move to Forecast List →  to select 私  
私 is entered and Prediction List appears.
- 3  to move to Prediction List →  to select の  
の is entered and Prediction List appears.
- 4  →   
はな is entered and Forecast List appears.
- 5  [Normal]  
Normal List appears.



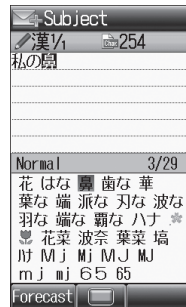

- 6  to move to Normal List  
→  to select 鼻

**If the Word is Not Listed**

Press  to return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

- ① Move cursor to る, then convert はる to 春 → 
- ② Convert か to 香 → 

**Using Previously Entered Words**

Enter the first one or two hiragana to access previously entered words in the list.

## Converting Hiragana to Katakana/ Alphanumerics

Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

Example 1: Enter OK

Step	1	2	3	4
Key	(3 times)	(twice)	[E-1-Kana]	
Display	ふ	ふに	E-1-Kana List	OK

- Highlight OK and press .

Example 2: Enter 10:30 or 10/30

Step	1	2	3
Key		[E-1-Kana]	
Display	あわさわ	E-1-Kana List	10/30 10:30 10月30日 etc.


- Highlight a suggestion and press .

## Narrowing Down Predictive Candidates by Number of Characters

In kanji (hiragana) mode, narrow down Predictive Candidates by specifying minimum number of characters.

Example: Suggest words with a minimum of seven characters, starting with かさ


1 Enter かさ →

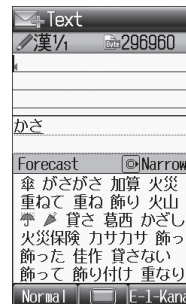

2 (five times)

Word suggestions of seven or more characters appear.

- Press to change number of characters.
- To show word suggestions of only seven characters: [Switch]

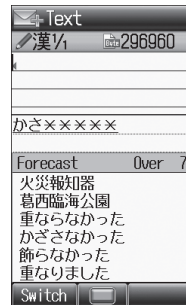

## Editing Text

### Deleting & Replacing

#### 1 Delete Characters within Lines

Place cursor before a character → 

A character after cursor is deleted.

- Press and hold  to delete all characters after cursor.

#### Delete Characters from the End of Text

Place cursor at the end of text → 

A character before cursor is deleted.

- Press and hold  to delete all characters before cursor.

#### 2 Enter another character


### Copy/Cut & Paste

- Up to seven copied/cut entries are stored; six text entries and one Graphic Mail entry.

1 In text entry window,  [Menu] → *Copy* or *Cut*

#### 2 Select Text to Copy/Cut

Place cursor before (or after) text to select → 

Place cursor after (or before) text → 


#### Select All

 [All] → 

#### 3 Paste Text

Place cursor at target location → Press and hold 

#### Paste Previously Copied/Cut Text

Place cursor at target location →  [Menu] → *Paste*  
→ Select text data

#### Note




- Turning off power deletes stored text data.
- Graphic Mail entry is deleted when S! Mail text entry window is closed.



## User's Dictionary

Save frequently used words/phrases (up to 100 entries).  
Saved words/phrases appear among word suggestions.

### Saving User's Dictionary Entries





- 1 In text entry window,  [Menu] → *Input Options* → *User's Dictionary*
- 2  [Create]
  - When saved items exist:  [Menu] → *Create*
- 3 Enter a word → Enter reading

### Edit User's Dictionary Entries

> After Step 1, highlight a word →  [Menu] → *Edit* → Edit word → Edit reading

### Delete User's Dictionary Entries

> After Step 1,  [Menu] → *Delete* → Select an item (See below)

Item	Operation/Description
One	> 
Selected Words	> Check entries →  [OK] → 
All	>  [YES] → Enter Phone Password

#### Note

- Alternatively, **Main Menu** ▶ **Settings** ▶ **Phone Settings** ▶ **Dictionaries** ▶ **User's Dictionary**.

## Download Dictionary

Download dictionaries from P-egg, a download site for 840P users (see below). Activate downloaded dictionaries to add character conversions to conversion suggestions (Japanese).


- P-egg (as of November 2009)  
**Main Menu** ▶ **Yahoo!** ▶ **Bookmarks** ▶ **Panasonic Site (P-egg)**

### Activating Downloaded Dictionaries

**Main Menu** ▶ **Settings** ▶ **Phone Settings** ▶ **Dictionaries** ▶ **Download Dictionary**

- 1 Select a dictionary → *ON*
  - To cancel, select *OFF*.


### Change Title





> In Step 1, highlight a dictionary →  [Menu] → *Rename* → Edit

### View Details

> In Step 1, highlight a dictionary →  [Menu] → *Property*

### Delete Dictionaries

> In Step 1, (highlight a dictionary →)  [Menu] → *Delete* → Select an item (See below)

Item	Operation/Description
One	> 
Selected Files	> Check dictionaries →  [Delete] →  [YES]
All	>  [YES] → Enter Phone Password

