

# Text Entry

<b>Text Entry</b> .....	<b>3-2</b>
<b>Entering Text</b> .....	<b>3-3</b>
Entering Characters .....	3-3
Pictographs & Symbols .....	3-4
Templates.....	3-5
Additional Features.....	3-5
<b>Conversion Methods (Japanese)</b> .....	<b>3-6</b>
Predictive Conversion .....	3-6
Converting Hiragana to Katakana/Alphanumerics.....	3-7
Conversion .....	3-8
<b>Editing Text</b> .....	<b>3-9</b>
Deleting & Replacing .....	3-9
Copy/Cut/Paste.....	3-9
<b>User's Dictionary</b> .....	<b>3-10</b>
Saving User's Dictionary Entries .....	3-10

## Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

- Three types of character input methods are available: Mode 1 (5-touch), Mode 2 (2-touch), Mode 3 (NIKO-touch)

In this manual, examples are described in Mode 1 (5-touch).

### Mode 2 (2-touch)/Mode 3 (NIKO-touch)

Press two numeric keys to enter a character.

- List of Key Assignments (P.19-14 to 16)

### Help


Help describes text entry operations.

In a text entry window,  [Menu] → **Help** → Select an item

### 1 Character Input Methods

Press and hold  to toggle input methods

**2**: Mode 2 (2-touch)

: Mode 3 (NIKO-touch)

- No icon appears for Mode 1 (5-touch).

### 2 Input Modes

 [Mode] to toggle input modes

abc: Alphanumerics

123: Numbers

漢: Kanji (hiragana)

か: Katakana

- In Mode 3 (NIKO-touch), only kanji (hiragana) and numbers are available.

### 3 Double-byte/Single-byte

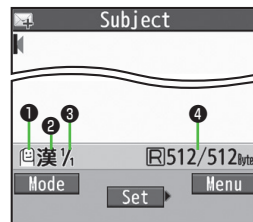
 [Menu] → **2 byte character** (1 byte character)

1/1: Double-byte

1/2: Single-byte

### 4 Remaining/Maximum Bytes in Message

- Depending on functions, number of entered characters may appear.

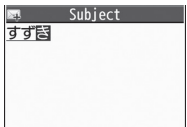


# Entering Text

## Entering Characters

Example: Enter 鈴木

- In alphanumeric mode, two times to switch to kanji (hiragana) mode  
 す: three time  
 す: \* → three times → \*  
 木: twice  
 \* When the next character is on the same key, press first to move cursor.



- to enter Predictive Candidates List
  - To change word before converting, press .
  - There are four types of word suggestion lists: **Predictive Candidates**, **Conversion Candidates**, **Context Forecast** and **abc/123/Kana Candidates** (㊦P.3-6)



- to select 鈴木

## Other Input Functions


Enter katakana/alphumerics	Press  [Mode] several times to select an input mode → Enter characters
Enter small kana (つ, っ, etc.)	Enter a character →  to convert to small character ● Alternatively, press a key repeatedly to enter an assigned small kana.
Enter upper case characters	Enter a character → ● Press a key repeatedly to show an upper case character after lower case.
Add ° or °	Enter a character to add ° or ° →  for ° or  twice for ° ● Single-byte ° or ° are entered in Single-byte katakana mode
Insert line break	[Line FD] to insert line breaks in text
Insert space at end of text	
Insert space within text	Press  repeatedly until single-byte space appears*, or  [Menu] → <b>Pictograms/symbols</b> → <b>Space</b> to enter a space (Double-byte (single-byte) space is entered in 2 bytes (1 byte) input mode.)
Toggle characters in reverse order	[Rev] Example: From c, press to toggle as follows: c → b → a → 2...
Move cursor to beginning/end of sentence	[Menu] → <b>Jump</b> → <b>To beginning</b> or <b>To end</b>
Undo	[Undo]

\* Space cannot be entered within text in number mode.

## Pictographs & Symbols

- Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail.

### 1 Pictographs

In kanji (hiragana)/katakana/alphanumeric mode,  SoftBank pictograph list appears.


### Symbols

Press and hold  Single-byte symbol list appears.



### 2 to select a pictograph or symbol

- Symbol List:  P.19-17










#### Note

- Alternatively, follow the steps to access pictograph or symbol:  
 [Menu] → *Pictograms/symbols*
- Logs may appear first.

### Entering Cross-carrier Pictographs

Press  or  to toggle lists (Universal pictograph list, Log, Full pictograph lists and My Pictogram list).

## Functions Available in Pictograph/Symbol List

Enter same pictograph or symbol again	 [Cont.]
Toggle pictograph/symbol list	 [Pict./Symbol]
Jump to previous/next page	
Toggle full screen/standard screen	
Toggle double/single-byte symbol and log [symbol list only]	 [Full/Half/Log] ●  to toggle in reverse
Toggle pictograph lists [pictograph list only]	 [Univrsl.*1/Full/ My Pict.*2/Log] ●  to toggle in reverse
Close list	


\*1 In S! Mail Subject/Text/Signature field or Subject field for Auto-sort Setting only

\*2 In S! Mail Text field only


## Templates

Insert templates (greetings, URLs, pictographs) or edit preinstalled templates.

### Inserting Templates


- 1 In a text entry window, press and hold 
  - Not available in number mode.
- 2 Select a category → Select a template

#### Note


- Alternatively, in a text entry window,  [Menu] → *Input assistance* → *Templates* to enter a template.

### Editing Templates

Main Menu ► Tools ► Templates/Users Dic. ► Templates

- 1 Select a category
- 2 Highlight a template, and press  [Edit] → Edit template

#### Resetting Edited Templates

After Step 1, (highlight a template,)  [Menu] → *Reset this* or *Reset all* (→ For *Reset all*, enter Phone Password) → *YES*


### Managing Template Folders



In Step 1, highlight a category, and press  [Menu] →

*Edit folder name* → Edit folder name

- To reset folder name,  [Menu] → *Reset name* → *YES*

### Additional Features

- 1 In a text entry window,  [Menu] → *Input assistance*
- 2 Select an item (See below)

Item	Operation/Description
<b>Kuten Code</b>	Enter a character code (☞P.19-18) > Enter a character code (4 digits)
<b>Input date/time</b>	Select a style to enter date/time > Select a display style → Enter date/time
<b>Quote phone book</b>	Quote Phone Book entry detail > Select an entry → Check item(s) to quote →  [Finish]
<b>Quote acct detls</b>	Quote Account Details > Enter Phone Password → Check item(s) to quote →  [Finish]
<b>Bar code reader</b>	Activate Bar Code Reader to insert scanned result (☞P.12-11)

## Conversion Methods (Japanese)

### Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

While Entering Text	Predictive Candidates	Lists likely conversions (Predictive Candidates) and matching conversions (Conversion Candidates) Predictions: わ → 私, わたし, etc. Conversions: わ → 和, 輪, etc.
	Conversion Candidates	Suggests matching conversions Example: わ → 和, 輪, etc.
	abc/123/Kana Candidates	Lists alphanumerics/katakana assigned to key (☞P.3-7)
After a Word is Fixed	Context Forecast	Suggests words likely to follow. Example: 私 is fixed → です, の, は, etc.

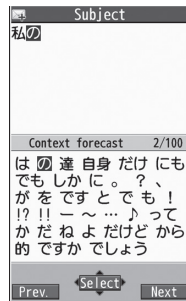
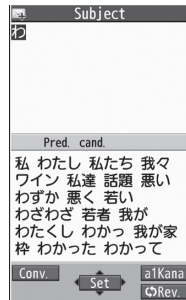
- Predictions change with each letter entered.
- Press [Pred.]/[Conv.] to toggle Predictive Candidates List and Conversion Candidates List.



#### Note

- 930P learns entered characters and suggests them for future conversions. (☞P.3-8).

Example: Enter 私の鼻


- 1 In kanji (hiragana) mode, 0  
わ is entered and Predictive Candidates List appears.
- 2 to move to Predictive Candidates List → to select 私  
私 is entered and Context Forecast List appears.
- 3 to move to Context Forecast List → to select の  
の is entered and Context Forecast List appears.
- 4 6 → 5  
はな is entered and Predictive Candidates List appears.
- 5 [Conv.]  
Conversion Candidates List appears.





- 6  to move to Conversion Candidates List →  to select  
鼻



### If the Word is Not Listed

Press  to return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

- ① Move cursor to る, then convert はる to 春 → 
- ② Convert か to 香 → 





### Using Previously Entered Words

Enter the first one or two hiragana to access previously entered words in the list.

## Converting Hiragana to Katakana/Alphanumerics







Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

### Example 1: Enter OK

Step	1	2	3	4
Key	 (3 times)	 (twice)	 [a1Kana]	
Display	ふ	ふに	abc/123/Kana Candidates	OK

- Press  after highlighting OK.


### Example 2: Enter 10:30 or 10/30

Step	1	2	3
Key	   	 [a1Kana]	
Display	あわさわ	abc/123/Kana Candidates	10:30 or 10/30

- Press  after highlighting 10:30 or 10/30.

## Conversion

### Viewing Learned Words

- 1 In a text entry window,  [Menu] → *Text entry setting* → *Learned words*
- 2 Select a row → Select a log

### Deleting Learned Words

In Step 2, (highlight a log,)  [Menu] → *Delete this* or *Delete all*  
(→ For *Delete all*, enter Phone Password) → *YES*


### Tip

#### Settings

- Delete All Learned Words (P.18-10)

## Activating/Canceling Prediction List

<Default> ON

- 1 In a text entry window,  [Menu] → *Text entry setting*
- 2 Select an item (See below)


Item	Operation/Description
Predict	Activate/cancel Predictive Candidates and Context Forecast lists.
Candidate display	Activate/cancel Context Forecast list.
2/NIKO-touch guide	Activate/cancel Conversion Candidates guidance for 2/NIKO-touch input method.

### 3 ON or OFF

## Fixing Entered Characters Automatically

<Default> ON

Fix character in Mode 1 (5-touch) automatically after specified time elapses.

- 1 In a text entry window,  [Menu] → *Text entry setting*
- 2 *Character set time* → Select a speed



# Editing Text

## Deleting & Replacing

### 1 Delete Characters within Lines

Place cursor before a character → 

A character after cursor is deleted.

- Press and hold  to delete all characters after cursor.

### Delete Characters from the End of Text

Place cursor at the end of text → 


A character before cursor is deleted.

- Press and hold  to delete all characters before cursor.

### 2 Enter another character

## Copy/Cut/Paste

Copy/cut text (up to 5000 double-byte/10000 single-byte) and paste to another place.

1 In a text entry window,  [Menu] → *Copy* or *Cut*

### 2 Select Text to Copy/Cut


Place cursor before (or after) text to select →

 [Start] → Place cursor after (or before) text →

 [End]

### Select All


 [Select All] →  [End]

3 Place cursor at target location →  [Menu] → *Paste*


## User's Dictionary

Save frequently used words/phrases (up to 100 entries).  
Saved words/phrases appear among word suggestions.


### Saving User's Dictionary Entries

- 1 In a text entry window,  [Menu] → *Text entry setting* → *User's Dictionary*
- 2 <New>
- 3 Enter a word → Enter reading

### Editing User's Dictionary Entries

After Step 1, highlight a word and press  [Edit] → Edit word → Edit reading

### Deleting User's Dictionary Entries

After Step 1,  [Menu] → *Delete* → *Delete this* or *Delete all*  
(→ For *Delete all*, enter Phone Password) → *YES*

#### Note

- Alternatively, **Main Menu** ► **Tools** ► **Templates/Users Dic.** ► **User's Dictionary**