

<b>Emergency Calls</b> .....	<b>3-2</b>
<b>Voice Calling</b> .....	<b>3-3</b>
<b>Video Calling</b> .....	<b>3-5</b>
<b>Speed Dial &amp; Rakutomo Link</b> .....	<b>3-6</b>
Placing Calls Easily .....	3-6
<b>Call Log</b> .....	<b>3-8</b>
<b>Call Time</b> .....	<b>3-9</b>

<b>Call Barring</b> .....	<b>3-10</b>
Restrict Destinations .....	3-10
Reject Numbers .....	3-11
<b>Optional Services</b> .....	<b>3-12</b>
<b>Additional Functions</b> .....	<b>3-14</b>
<b>Troubleshooting</b> .....	<b>3-21</b>

# 3

## Calling



## Emergency Calls

3

Calling

Your location is automatically reported to the corresponding agency (police, etc.) when you place emergency calls (110, 119 or 118) with SoftBank 3G handsets. (Emergency Location Report)

841SH s reports Location Information based on positioning signals from radio stations.

- Registration/transmission fees do not apply.
- Positioning accuracy is affected by location/signal conditions. Always provide your location and purpose on the phone.
- Location Information is not reported when emergency calls are placed without Caller ID (such as when the number is prefixed with **184**). However, the corresponding agency may obtain your Location Information in a life threatening situation.
- Location Information is not reported during international roaming.

### Handset Restrictions & Emergency Calls

Emergency calls are possible even while some handset restrictions are active.

Active Restriction	Emergency Calls
Function Lock	Possible
Bar Outgoing	
Offline Mode	Restricted
Keypad Lock	
PIN Entry	



# Voice Calling

## Answering a Voice Call

Incoming Call window opens for a call.




Incoming Voice Call Window

### 1 to accept the call

- Call connects.

### 2 ➔ Call ends


#### Muting Ringer Temporarily

When a call arrives,  マナー

#### Earpiece Volume




During a call,  (or  / )

#### After Calls to/from Unsaved Numbers

- Save to Phone Book confirmation appears. Select **New Entry** or **New Detail** and press  to save number; Phone Book entry window or entry search window opens, respectively.

## Placing a Voice Call

### 1 Enter phone number with area code

- To correct entry, use  to place cursor under the digit and press . To delete the digits above and after the cursor, Long Press .



### 2

- Wait for receiver to accept the call.



### 3 ➔ Call ends

#### Specifying Line in Dual Mode

- After 1,  ➔ **Select Line(Voice)** ➔  ➔ Select line ➔ 

## Placing an International Call

### 1 Enter phone number with area code ➔

### 2 Int'l Call ➔

### 3 Select country ➔ ➔

- Handset dials the number.

### 4 ➔ Call ends










#### Calling Unlisted Countries

- In , Enter Code ➔  ➔ Enter country code ➔  ➔ 

3

Calling

## Advanced

-   Rejecting calls
-  Placing calls on hold
-  Answering with Headphones
-  Adjusting Earpiece Volume
-  Sending/blocking Caller ID
-  Muting Microphone
-  Recording caller voice (And more on P.3-14 - 3-16)
-  Answering calls automatically when using Headphones (And more on P.3-20)



## Placing Calls from Outside Japan

See below to place a call to Japan from abroad. Apply for Global Roaming beforehand. See SoftBank Mobile Website for details: [http://mb.softbank.jp/en/global\\_services/](http://mb.softbank.jp/en/global_services/) Access roaming area/rate information or print it out to carry with you while traveling abroad.

**1** Enter phone number with area code ➔  ➔ **Int'l Call**  
➔ 

**2** **日本(JPN)** ➔  ➔ 

- Handset dials the number.
- To call other countries, select the target country instead of **日本(JPN)**.


**3**  ➔ **Call ends**

### Calling SoftBank Handsets

- In **2**, always select **日本(JPN)**.

### Calling Landlines & Mobiles within the Same Country

Enter phone number with area code

➔  ➔ **Dial to Your Stay** ➔ 

### Calls Overseas


- Calling may not be possible outside Japan. Connections depend on available network, signal strength, and handset settings.

## Answer Phone

Caller messages are recorded on handset. Answer Phone cannot be used while handset is off or out-of-range. Use Voicemail to record caller messages when Answer Phone is not available.

**1**  **(Long)**  
• Answer Phone is set.

### Canceling Answer Phone

 **(Long)**

### Answering Calls while Recording



- No message will be recorded.

## Playing Messages

**1** 

**2** **Select record** ➔ 










- Playback stops automatically at the end of message.

### Deleting All Records

After **1**,  ➔ **Delete All** ➔ 

Enter Handset Code ➔  ➔ **Yes** ➔ 

### Playback Operations

Volume Control	 (or  /  )
Replay/Skip Backward	
Stop	
Skip Forward	
Delete	 ➔ <b>Yes</b> ➔ 
Loudspeaker On/Off	

## Advanced


- Recording caller messages ● Changing ring time ● Sampling outgoing message ● Muting Earpiece (P.3-14)
- Placing calls by entering country code directly ● Using Roaming Dial Assistant to place international calls while outside Japan (And more on P.3-15)



## Video Calling

View the other party's image or send an Outgoing Image to compatible handsets. Handle Video Calls like Voice Calls. This page describes functions/operations unique to Video Call.

### Window Description

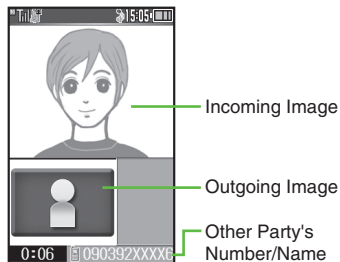

### Important Video Call Usage Notes

- If both parties are using handset models without internal cameras, Video Call cannot be used as intended.
- If both parties are not using the same Video Call system, call may be interrupted. (Video Call charges apply.)

### Advanced

- 👉 ● Answering Video Calls automatically (And more on P.3-14)
- Adjusting Outgoing Image brightness ● Disabling touch tone sending (P.3-16)
- Sending camera image when initiating Video Calls ● Disabling Loudspeaker for Video Calls ● Muting Microphone when initiating Video Calls (And more on P.3-20)

### Answering a Video Call

Incoming Call window opens for a call.



Incoming Video Call Window

- 1 to accept the call
  - Alternative Image is sent. (Video Call charges apply to the caller.)
- 2 ➔ Call ends

### Answering with Camera Image


[Incoming Video Call Window] ● ➔  
No ➔ ●

### Engaged Video Call Operations

Toggle View	
Toggle Outgoing Image	
Open Help	➔ Help ➔ ●

### Placing a Video Call

- 1 Enter phone number ➔ ●
- 2 Video Call ➔ ●

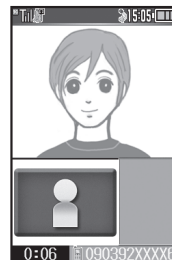

- Image appears when call is accepted.

- 3 ➔ Call ends

### Specifying Line in Dual Mode

After 1, Select Line(Video) ➔ ● ➔  
Select line ➔ ●



## Placing Calls Easily

Save phone numbers to Speed Dial/Mail list or Rakutomo Link for easy dialing.

### Using Speed Dial

#### Saving Entries

- 1 → *Phone* →
- 2 *Speed Dial/Mail* →
- 3 *<Empty>* → → *Select entry* →

#### 4 Select phone number →



- Select mail address prompt appears. To save mail address for easy messaging, select one and press . (Omit .)

#### 5 *Do not Assign* →

#### 6 → *Saved*

- To save additional entries, repeat - .

#### Using Headphones for Speed Dial

- Save a phone number to .

#### Removing Speed Dial Entries

- In , select entry → → *Remove Selected or Remove All* → → *Yes* →

- Omit entry selection step when removing all entries.

#### Opening Help

- In ,

#### Placing a Call

#### 1 - - (entry number)

#### 2

#### Placing Video Calls

- In , → *Speed Video* →

#### Using Headphones

- In Standby, Long Press Call Button until a double beep sounds; handset dials the number saved in . To end the call, Long Press Call Button until a beep sounds.




## Using Rakutomo Link

## Saving Entries

Follow these steps to save entries from Phone Book:

Entries saved to Rakutomo Link are saved to Speed Dial list as well.

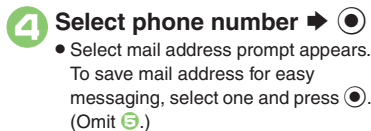

## Saving Entries Directly

In , *Direct Entry* Complete fields From

## Saving Note

After , *<Note Empty>* Enter text

## Editing Entries (Phone Number)

Select entry *Change Registered Contents* *Change the use address* Select phone number Select new phone number

## Placing a Call



## Placing Video Calls

In 2, Select entry *Video Call*

## Deleting Note

Select entry *Delete the Note* *Yes*

## Removing Rakutomo Link Entries

Select entry *Remove* *Yes*



# Call Log

Open recent dialed/received call records.

3 Calling

## 1 (Dial) or (Receive)



## 2 Select record →

### When the Same Number is Dialed More than Once Using the Same Call Option

- Only the last record appears. (All records appear for S! Circle Talk.)

### Hiding Dialed Ranking

In **(Dial) or (Dial) (Ranking)**

→ **Hide Dialed Ranking** →

- To show Dialed Ranking again, follow these steps:

In **(Dial) or (Dial)** →

**Show Dialed Ranking** →

**Enter Handset Code** →







## Advanced


● Dialing from records (And more on P.3-17)





## Call Time

Check estimated time of the most recent call and all calls.

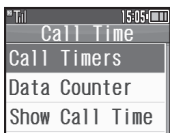- 1  ➔ **Settings** ➔  ➔  ➔ **Call**
- 2 **Call Time/Data Counter** ➔ 



- 3 **Call Timers** ➔ 
- 4 **Dialed Calls or Received Calls** ➔ 





### Resetting Dialed or Received Call Timer

After 4,  ➔ Enter Handset Code  
➔  ➔ **Yes** ➔ 

### Call Time Count

- Ring time for incoming or outgoing calls is not counted. (On hold time is counted.)

### Advanced

-   Setting handset to beep during Voice Calls  Checking accumulated data transmission volume  Resetting Data Counter (And more on P.3-17)




## Restrict Destinations

Allow calls to numbers saved in Phone Book or Permitted List only.

3 Calling

### Limiting to Phone Book

- 1 → **Settings** → → → **Call** → **Call Barring** →
- 2 **Restrict Destinations** → → **Enter Handset Code** →

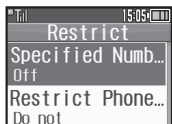

Restrict Destinations Menu

- 3 **Restrict Phonebook** → → **Do** →

#### When Restrict Phonebook is Do

- Handset Code is required to add/edit Phone Book entries.

### Limiting to Permitted List

#### Specifying Numbers

- 1 In Restrict Destinations menu, **Specified Numbers** →



Specified Numbers Menu

- 2 **Permitted List** →
- 3 **<Empty>** →
- 4 **Enter phone number** →
  - Repeat - to add phone numbers.

#### Activating Permitted List

- 1 In Specified Numbers menu, **Switch On/Off** →
- 2 **On** →



### Advanced

- Designating Permitted List numbers from saved information
- Editing Permitted List (P.3-18)


## Reject Numbers

Reject calls from specified/unsaved numbers or calls without Caller ID.

### Rejecting Specified Numbers


#### Specifying Numbers

- 1 → **Settings** → → → **Call** → **Call Barring** →
- 2 **Reject Numbers** → → **Enter Handset Code** →

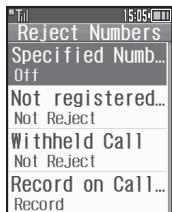

Reject Numbers Menu

### 3 **Specified Numbers** →



Specified Numbers Menu

- 4 **Numbers List** →
- 5 **<Empty>** →
- 6 **Enter phone number** →
  - Repeat **5** - **6** to add phone numbers.

#### Activating Rejection

- 1 **In Specified Numbers menu, Switch On/Off** →
- 2 **On** →

### Rejecting Unsaved Numbers

- 1 **In Reject Numbers menu, Not registered Numbers** →

- 2 **Reject** →

#### Saved Numbers Containing P (Pause)

- Calls from the number before **P** are rejected.

### Rejecting Withheld Caller ID

Calls from public phones or with undisplayable Caller ID are also rejected.

- 1 **In Reject Numbers menu, Withheld Call** →

- 2 **Reject** →

### Advanced

- Designating numbers to reject from saved information Editing Numbers List Excluding rejected calls from Call Log (P.3-18)



## Optional Services

Call Forwarding and Voicemail can only be set simultaneously when Call Forwarding is set to Video Calls.

<b>Call Forwarding</b>	Automatically divert all or all unanswered incoming calls to another preset phone number
<b>Voicemail</b>	Redirect all or unanswered calls to Voicemail Center; access messages from handset/touch tone phones
<b>Call Waiting*</b>	Answer incoming calls or open another line during a call
<b>Group Calling*</b>	Switch between open lines or connect multiple lines at once for teleconferencing
<b>Caller ID</b>	Show or hide your own number when placing calls
<b>Call Barring</b>	Restrict incoming/outgoing calls depending on conditions


\*A separate contract is required.

### Initiating Call Forwarding

Follow these steps to divert calls to a phone number saved in Phone Book after selected ring time (**No Answer** set): (Numbers starting with **1, 00, 0120** or **0990** cannot be saved.)

1 → **Settings** → →

2 **Voicemail** →



Voicemail Menu

3 **Diverts** →

4 **Select call type** →

5 **No Answer** →

6 **Phone Book** → → **Select entry** →

7 **Select phone number** →   
• Omit 7 if only one number is saved.

8

9 **Select ring time** →

Diverting Calls without Handset Response

In , **Always** → → -

Entering Forwarding Number Directly  
In , **Enter Number** → → **Enter phone number** → → **Select ring time** →



### Advanced

Checking service status (P.3-19)

## Initiating Voicemail

Follow these steps to divert calls to Voicemail Center after selected ring time (**No Answer** set):

- 1 In Voicemail menu, **Voicemail** → ● → **Activate** → ●
- 2 **No Answer** → ● → **Select ring time** → ●

Diverting Calls without Handset Response  
In ●, **Always** → ●

## Missed Call Notification

Activate this function for records of calls missed while handset is off/out-of-range and Voicemail is active.

- 1 ● → **Settings** → ● → ● → **Call**
  - 2 **Missed Calls** → ● → ●
- Follow the voice guidance for further operations.

## Playing Messages

- 1 In Voicemail menu, **Voicemail** → ●
- 2 **Call Voicemail** → ●
  - Follow the voice guidance for further operations.

Deleting New Voicemail Message Indicator  
In ●, **Delete Icon** → ● → **Yes** → ●

## Canceling Call Forwarding/Voicemail

- 1 In Voicemail menu, **Cancel All** → ●
- 2 **Yes** → ●

## Advanced

- Activating Call Waiting ● Talking on multiple lines simultaneously ● Setting/canceling outgoing call restriction ● Setting/canceling incoming call restriction (And more on P.3-19)



## Receiving a Call

### Handling Incoming Calls

Rejecting calls	<b>Voice Call</b> When a call arrives, <b>Reject</b>
	<b>Video Call</b> When a call arrives,
Placing calls on hold	When a call arrives, • Press  to answer the call on hold.
Answering with Headphones	When a call arrives, <b>Long Press Call Button</b> • To end the call, Long Press Call Button.

### Answer Phone

Recording caller messages	When a Voice Call arrives, <b>Record Message</b>
Changing ring time	<b>Settings</b> <b>Call</b> <b>Answer Phone</b> <b>Answer Time</b> <b>Enter time</b>
Sampling outgoing message	<b>Settings</b> <b>Call</b> <b>Answer Phone</b> <b>Guidance Msg</b> • Press  to stop playback.
Muting Earpiece	<b>Settings</b> <b>Call</b> <b>Answer Phone</b> <b>Volume</b> <b>Silent</b>

## Remote Monitor (Video Call)

Answering Video Calls automatically	<b>Start Here</b> <b>Settings</b> <b>Call</b> <b>Video Call</b> <b>Remote Monitor</b> <b>Enter Handset Code</b> <b>See below</b>
	<b>Saving Numbers from Phone Book</b> <b>Auto Answer List</b> <b>&lt;Empty&gt;</b> <b>Change</b> <b>From Phone Book</b> <b>Select entry</b> <b>Select phone number</b> • To enter a phone number directly, select <b>&lt;Empty&gt;</b> and press .
	<b>Saving Numbers from Call Log</b> <b>Auto Answer List</b> <b>&lt;Empty&gt;</b> <b>Change</b> <b>From Call Log</b> <b>Select record</b>
Editing Auto Answer List	<b>Activating Remote Monitor</b> <b>Switch On/Off</b> <b>On</b> • When Remote Monitor is active, auto answer tone sounds even in Manner mode; cancel afterward. • Calls cannot be answered automatically with handset closed.
	<b>Start Here</b> <b>Settings</b> <b>Call</b> <b>Video Call</b> <b>Remote Monitor</b> <b>Enter Handset Code</b> <b>Auto Answer List</b> <b>See below</b>
Changing ring time	<b>Editing Numbers</b> <b>Select entry</b> <b>Edit</b>
	<b>Deleting Entries</b> <b>Select entry</b> <b>Delete</b> <b>Yes</b>



## Placing a Call

## Basic Operations

Adjusting Earpiece Volume	● → Settings → ● → In Sound/Display menu, <i>Earpiece Volume</i> → ● → Adjust level → ●
Sending/blocking Caller ID	After phone number entry, ☎ → Hide My ID or Show My ID → ●

## International Calls

Placing calls by entering country code directly	☎☎ (+ appears) → Enter country code → Enter phone number with area code → ☎ <ul style="list-style-type: none"> <li>• Omit the first 0 of the area code except when calling Italy or some other countries.</li> <li>• Pressing ☎☎ during a call does not enter +.</li> </ul>
Using Roaming Dial Assistant to place international calls while outside Japan	<b>Start Here</b> Enter phone number with area code → ☎ → See below <ul style="list-style-type: none"> <li>• Prompts do not appear for numbers with country codes.</li> <li>• To disable Roaming Dial Assistant automatically after a call, press ☎ to check box next to <i>Don't use this tool again..</i></li> </ul> <p><b>Calling Japan (Landlines &amp; Mobiles)</b>  <i>Dial to Japan</i> → ● → ☎</p> <p><b>Calling Other Countries (Landlines &amp; Mobiles)</b>  <i>Dial to Other Country</i> → ● → Select country → ● → ☎</p>

## Disabling Roaming Dial Assistant

● → Settings → ● → ☎ Call → Int'l Calling → ● → Roaming Dial Assistant → ● → Off → ●

- When *Off*, handset dials the entered phone number as-is even while outside Japan.

## Saving frequently used international prefix

● → Settings → ● → ☎ Call → Int'l Calling → ● → Int'l Prefix → ● → Enter Handset Code → ● → Enter prefix → ●

## Adding/changing/deleting country codes

**Start Here** ● → Settings → ● → ☎ Call → Int'l Calling → ● → Country Codes → ● → See below

## Adding

<Empty> → ● → Enter name → ● → Enter country code → ●

## Changing

Select country → ● → Change → ● → Enter name → ● → Enter country code → ●

## Deleting

Select country → ● → Delete → ● → Yes → ●



## During a Call

## Voice Call &amp; Video Call

Muting Microphone	<b>Voice Call</b> During a call,  (press again to cancel)
	<b>Video Call</b> During a call,  → <b>Mute</b> → • To cancel, select <b>Unmute</b> .
Activating/canceling Loudspeaker	<b>Activating Loudspeaker for Voice Call</b> During a call,  → While message appears, • To cancel, press .
	<b>Canceling Loudspeaker for Video Call</b> During a call,  (press again to activate)
Switching sound output	During a call,  → <b>Transfer Audio</b> →  → <b>To Phone</b> or <b>To Bluetooth</b> → • For <b>To Bluetooth</b> , select a device and press .
Opening Phone Book	During a call,  → <b>Phone Book</b> →  → <b>Select entry</b> → • Press  twice to return to call window.
Saving Phone Book entries	During a call,  → <b>Phone Book</b> →  → <b>Add New Entry</b> →  → <b>Complete fields</b> →  → • Press  to return to call window.
Placing calls on hold	During a call,  → <b>Hold</b> → • Subscription to Call Waiting or Group Calling is required to place Voice Calls on hold. • To resume Voice Calls, press , select <b>Retrieve</b> and press .• To resume Video Calls, press .

## Voice Call Only

Recording caller voice	During a call,  → <b>Rec Caller Voice</b> →  → Recording starts →  → Recording ends • To play recorded messages, see P.3-4 "Playing Messages."
Opening messages	During a call,  → <b>Messaging</b> →  → <b>Select Messaging folder</b> →  → <b>Select folder</b> → → <b>Select message</b> → • Press  three times to return to call window.
Creating messages	During a call,  → <b>Messaging</b> →  → <b>Create Message</b> or <b>Create New SMS</b> →  → <b>Complete message</b> →
Sending saved touch tones	During a call,  → <b>Touch-Tone Signal List</b> →  → <b>Select number</b> →
Sending touch tones via Phone Book	During a call,  → <b>Phone Book</b> →  → <b>Select entry</b> →  → <b>Send Push Tone</b> →  → <b>Select phone number</b> →

## Video Call Only

Adjusting Outgoing Image brightness	During a call,  → <b>Exposure</b> →  → <b>Adjust level</b> → • Alternative Image brightness is fixed.
Disabling touch tone sending	During a call,  → <b>Disable DTMF</b> →





Call Log	
Dialing from records	<b>Calling Dialed Numbers (Redial)</b> Ⓞ → Select record → Ⓞ • To place Video Calls, press Ⓞ instead of Ⓞ, then select <b>Video Call</b> and press Ⓞ.
	<b>Calling from Received Call Records</b> Ⓞ → Select record → Ⓞ • To place Video Calls, press Ⓞ instead of Ⓞ, then select <b>Video Call</b> and press Ⓞ.
Sending messages from records	Ⓞ or Ⓞ → Select record → Ⓞ → <b>Create Message</b> → Ⓞ → <b>S! Mail or SMS</b> → Ⓞ → <b>Complete message</b> → Ⓞ
Saving Phone Book entries from records	Ⓞ or Ⓞ → Select record → Ⓞ → <b>Save to Ph.Book</b> → Ⓞ → <b>As New Entry</b> → Ⓞ → <b>Complete other fields</b> → Ⓞ • To add to an existing entry, select <b>As New Detail</b> .
Opening Phone Book entries from records	Ⓞ or Ⓞ → Select record → Ⓞ → <b>Display Ph. Book</b> → Ⓞ • Available when selected record (phone number) is saved in Phone Book.
Initiating S! Circle Talk from records	Ⓞ or Ⓞ → Select record → Ⓞ → <b>Call Circle Talk</b> → Ⓞ → Ⓞ • Set Connection status to <b>Online</b> first.
Deleting log records	<b>One Record</b> Ⓞ or Ⓞ → Select record → Ⓞ → <b>Delete</b> → Ⓞ → <b>Yes</b> → Ⓞ
	<b>All Records</b> Ⓞ or Ⓞ → Ⓞ → <b>Delete All</b> → Ⓞ → Enter Handset Code → Ⓞ → <b>Yes</b> → Ⓞ
Hiding Dialed Ranking	Ⓞ → <b>Phone</b> → Ⓞ → <b>Settings/Manage</b> → Ⓞ → <b>Call Log Setting</b> → Ⓞ → <b>Hide Dialed Ranking</b> → Ⓞ • Handset Code is required to re-select <b>Show Dialed Ranking</b> .

## Call Time &amp; Data Communication

## Call Time

Setting handset to beep during Voice Calls	Ⓞ → <b>Settings</b> → Ⓞ → Ⓞ → <b>Call</b> → <b>Call Time/Data Counter</b> → Ⓞ → <b>Minute Minder</b> → Ⓞ → <b>On</b> → Ⓞ
Hiding Call Time during calls	Ⓞ → <b>Settings</b> → Ⓞ → Ⓞ → <b>Call</b> → <b>Call Time/Data Counter</b> → Ⓞ → <b>Show Call Time</b> → Ⓞ → <b>Off</b> → Ⓞ
Resetting Call Timers	Ⓞ → <b>Settings</b> → Ⓞ → Ⓞ → <b>Call</b> → <b>Call Time/Data Counter</b> → Ⓞ → <b>Call Timers</b> → Ⓞ → <b>Clear Timers</b> → Ⓞ → <b>Enter Handset Code</b> → Ⓞ → <b>Yes</b> → Ⓞ

## Data Communication

Checking accumulated data transmission volume	Ⓞ → <b>Settings</b> → Ⓞ → Ⓞ → <b>Call</b> → <b>Call Time/Data Counter</b> → Ⓞ → <b>Data Counter</b> → Ⓞ → <b>All Data</b> → Ⓞ
Resetting Data Counter	Ⓞ → <b>Settings</b> → Ⓞ → Ⓞ → <b>Call</b> → <b>Call Time/Data Counter</b> → Ⓞ → <b>Data Counter</b> → Ⓞ → <b>Clear Counter</b> → Ⓞ → <b>Yes</b> → Ⓞ



## Restrict Destinations

Designating Permitted List numbers from saved information	<p><b>Start Here</b> → Settings → Call → Call Barring → Restrict Destinations → Enter Handset Code → Specified Numbers → Permitted List → &lt;Empty&gt; → See below</p>
	<p><b>From Phone Book</b> Ph.Book List → Select entry → Select phone number</p>
	<p><b>From Call Log Records</b> From Call Log → Select record</p>
Editing Permitted List	<p><b>Start Here</b> → Settings → Call → Call Barring → Restrict Destinations → Enter Handset Code → Specified Numbers → Permitted List → See below</p>
	<p><b>Editing Numbers</b> Select number/name → Edit</p>
	<p><b>Deleting Numbers</b> Select number/name → Delete → Yes</p>

## Reject Numbers

Designating numbers to reject from saved information	<p><b>Start Here</b> → Settings → Call → Call Barring → Reject Numbers → Enter Handset Code → Specified Numbers → Numbers List → &lt;Empty&gt; → See below</p>
	<p><b>From Phone Book</b> Ph.Book List → Select entry → Select phone number</p>
	<p><b>From Call Log Records</b> From Call Log → Select record</p>
Editing Numbers List	<p><b>Start Here</b> → Settings → Call → Call Barring → Reject Numbers → Enter Handset Code → Specified Numbers → Numbers List → See below</p>
	<p><b>Editing Numbers</b> Select number/name → Edit</p>
	<p><b>Deleting Numbers</b> Select number/name → Delete → Yes</p>
Excluding rejected calls from Call Log	<p>Settings → Call → Call Barring → Reject Numbers → Enter Handset Code → Record on Call Log → Do not Record</p>



## Optional Services

## ■ All Services

Checking service status	<p>● → <b>Settings</b> → ● → ☺ <b>Call</b> → Select service → ● → <b>Status</b> → ●</p> <ul style="list-style-type: none"> <li>Available for <b>Voicemail</b>, <b>Show My Number</b>, <b>Call Barring</b> and <b>Call Waiting</b>.</li> <li>For <b>Call Barring</b>, select restriction and press ●.</li> </ul>
-------------------------	---

## ■ Call Waiting (Contract Required)

Activating Call Waiting	<p>● → <b>Settings</b> → ● → ☺ <b>Call</b> → <b>Call Waiting</b> → ● → <b>On</b> → ●</p>
Placing Line 1 on hold to answer Line 2	<p><b>A tone sounds during a Voice Call</b> → ☺</p> <ul style="list-style-type: none"> <li>Press ☺ to switch between lines.</li> <li>Press ☺ to end active line and re-engage the party on hold.</li> </ul>

## ■ Group Calling (Contract Required)

Opening another line during a call	<p><b>During a Voice Call, enter phone number</b> → ☺</p> <ul style="list-style-type: none"> <li>Long Press ☺ to dial via Rakutomo Link.</li> </ul>
Switching between open lines (Swap Calls)	<p><b>During a Voice Call</b>, ☺</p> <ul style="list-style-type: none"> <li>Press ☺ to switch between lines.</li> </ul>
Talking on multiple lines simultaneously	<p><b>While switching between lines</b>, ☺ → <b>Group Calling</b> → ● → <b>Conference All</b> → ●</p>
Switching to private conversation	<p><b>During Group Calling, select number/name</b> → ● → <b>Private</b> → ●</p>

## ■ Call Barring

Setting/canceling outgoing call restriction	<p><b>Start Here</b> ● → <b>Settings</b> → ● → ☺ <b>Call</b> → <b>Call Barring</b> → ● → <b>Bar Outgoing</b> → ● → See below</p>
	<p><b>Setting Restriction</b></p> <p><b>Select restriction</b> → ● → <b>On</b> → ● → <b>Enter Center Access Code</b> → ●</p> <ul style="list-style-type: none"> <li><b>Outgoing SMS messages are also restricted.</b></li> <li>Outgoing S! Circle Talk requests are not affected.</li> <li>Following restrictions are available: <ul style="list-style-type: none"> <li>All Out. Calls: Restrict all non-emergency calls</li> <li>Bar Int'l Call: Restrict all international calls</li> <li>Local&amp;Home Only: Restrict all international calls except to Japan</li> </ul> </li> </ul>
Setting/canceling incoming call restriction	<p><b>Start Here</b> ● → <b>Settings</b> → ● → ☺ <b>Call</b> → <b>Call Barring</b> → ● → <b>Bar Incoming</b> → ● → See below</p>
	<p><b>Setting Restriction</b></p> <p><b>Select restriction</b> → ● → <b>On</b> → ● → <b>Enter Center Access Code</b> → ●</p> <ul style="list-style-type: none"> <li><b>Incoming SMS messages are also restricted.</b></li> <li>Incoming S! Circle Talk requests are not affected.</li> <li>Following restrictions are available: <ul style="list-style-type: none"> <li>All In. Calls: Reject all calls</li> <li>Bar if Abroad: Reject calls when outside Japan</li> </ul> </li> </ul>
	<p><b>Canceling All Restrictions</b></p> <p><b>Cancel All</b> → ● → <b>Enter Center Access Code</b> → ●</p>

## ■ Caller ID

Showing/hiding Caller ID	<p>● → <b>Settings</b> → ● → ☺ <b>Call</b> → <b>Show My Number</b> → ● → <b>On</b> or <b>Off</b> → ●</p>
--------------------------	--



## Settings

## Voice Call

Answering calls automatically when using Headphones	<p><b>Start Here</b> → Settings → Call → Auto Answer → Enter Handset Code → See below</p> <p><b>Activating Auto Answer</b> Switch On/Off → On</p> <ul style="list-style-type: none"> <li>When Auto Answer is active, Auto Answer tone sounds after ringtone even in Manner mode; cancel afterward.</li> </ul> <p><b>Changing Ring Time</b> Answer Time → Enter time</p>
	<p>Phone → Touch-Tone Signal List → Select number → Enter name → Enter digits</p> <ul style="list-style-type: none"> <li>Send saved tones from Voice Call window via Options menu.</li> </ul>
	<p>Phone → Touch-Tone Signal List → Change to White Office Tone</p> <ul style="list-style-type: none"> <li>Touch tones for White Office are saved to 1 - 5.</li> <li>When touch tones are already saved in 1 - 5, choose <b>Yes</b> and press.</li> </ul>
Deleting touch tones	<p><b>Start Here</b> → Phone → Touch-Tone Signal List → See below</p> <p><b>One Entry</b> Select number → Delete → Yes</p> <p><b>All Entries</b> Reset → Enter Handset Code → Yes</p>

## Video Call

Sending camera image when initiating Video Calls	<p>Settings → Call → Video Call → Camera Picture → Default Image → External Camera</p>
Disabling Loudspeaker for Video Calls	<p>Settings → Call → Video Call → Loudspeaker → Off</p>
Muting Microphone when initiating Video Calls	<p>Settings → Call → Video Call → Mute Mic. → On</p>
Changing Alternative Image that is sent when initiating Video Calls	<p>Settings → Call → Video Call → Camera Picture → Alt. Image → Select folder → Select file</p>
Changing Incoming/Outgoing Image quality	<p>Settings → Call → Video Call → In Pict. Qlty or Out Pict. Qlty → Select option</p>
Setting image that is sent while call is on hold	<p>Settings → Call → Video Call → Hold Pict. → Select folder → Select file</p> <ul style="list-style-type: none"> <li>Omit file selection step when using Customized Screen image.</li> </ul>
Setting Backlight status	<p>Settings → Call → Video Call → Backlight → Select option</p> <ul style="list-style-type: none"> <li>Selecting <b>Norm. Setting</b> applies Display Backlight settings.</li> </ul>



#### Receiving a Call

##### ? Cannot use Answer Phone or Record Caller Voice

- Answer Phone and Record Caller Voice are disabled when less than 12 seconds of recording capacity remain or 20 messages are recorded. Delete messages.
- Answer Phone and Record Caller Voice are not available for Video Calls.

#### Placing a Call

##### ? Cannot place call via Speed Dial

- Speed Dial is not available when Phone Book access is restricted by Application Lock.

##### ? Cannot place call

- Cancel Keypad Lock, Function Lock and Offline Mode, if active.

##### ? Call won't connect

- Did you include the area code or the first 0? Dial the number including the area code or 0.
- Handset may be out-of-range (*out* appears). Move to a place where signal is strong and retry.

#### During a Call

##### ? Outgoing Image is distorted during Video Calls

- Rapid motion can make images appear choppy or distorted.

##### ? Camera image switches to Alternative Image during Video Calls

- Prolonged camera use may cause camera area to heat up, resulting in automatic shutdown; wait a while and retry.

##### ? Conversation is hampered

- Conversations may be hampered by ambient noise.
- Check Earpiece Volume when using Loudspeaker. Increasing Earpiece Volume may cause feedback/interference.

##### ? Call is choppy or cut off

- Network signal may be weak. Move to a place where signal is strong and retry.
- Battery may need to be charged or replaced. Charge battery or install a charged battery.

##### ? Clicking noise is heard during call

- Handset may be moving into another service area. Noise is heard when Network signal switches. This is normal.

##### ? Cannot hear other party's voice

- Earpiece Volume may be low. Increase Earpiece Volume (P.3-3).
- Sound output may be set to use handsfree device. Set Transfer Audio (P.3-16) to *To Phone*.

