

Making/Answering Voice Calls 2-2

Making Voice Calls	2-2
Outgoing Call Functions	2-3
Emergency Calls (110, 119, 118)	2-4
Answering Voice Calls.....	2-5
Incoming Call Functions.....	2-5
Making Voice Clear (Shikkari Talk).....	2-5

Making/Answering Video Calls..... 2-6

Note	2-6
Video Call Window	2-6
Making Video Calls.....	2-7
Answering Video Calls.....	2-8
Remote Monitoring	2-8

International Calls..... 2-9

Calling Abroad from Japan.....	2-9
Calling while Abroad	2-10
International Call Functions	2-10

Engaged Call Functions 2-12

Operations Available during a Voice Call	2-12
Operations Available during a Video Call.....	2-12

Call Log..... 2-13

Viewing Call Logs.....	2-14
Making Calls from Call Log.....	2-14
Functions Available from Call Log	2-15

Answer Phone..... 2-15

Activating/Canceling Answer Phone	2-15
Playing Messages.....	2-16
Answer Phone Functions	2-16

Optional Services 2-17

Overview.....	2-17
Call Forwarding.....	2-17
Voice Mail	2-18
Call Waiting.....	2-20
Call Barring.....	2-20
Caller ID.....	2-21

Making/Answering Voice Calls

Making Voice Calls

Before Calling

- Confirm signal strength (☞P.1-9)
- If any of these indicators appear:



→Calls cannot be made (☞P.1-9, P.1-10, P.19-11)

1 Enter a phone number

- Include area code for all numbers.

090XXXXXXXXX

2 Confirm the number, then

- To adjust volume:  or 

3 to end call

Call Time appears.

Correcting Misentries

Use  to place cursor at digit to delete, then .

Press and hold  to delete the digit and all digits to the right of cursor.

Note

- Do not cover internal antenna area (☞P.1-4) with hand or sticker; may weaken signal strength and cause calls/transmissions to be unavailable.
- Calls cannot be made in Horizontal Open Position except when earphone/microphone is connected.

Tip

- Operations Available during a Voice Call (☞P.2-12)
 - Making Calls from Call Log (☞P.2-14)
 - Saving Entered Numbers to Phone Book (☞P.4-5)
 - Making Calls from Phone Book (☞P.4-6)
- Settings**
- Set Handset Response when Closed during Call (☞P.18-9)
 - Call Time & Call Cost (☞P.18-8)

Outgoing Call Functions

Showing/Hiding Caller ID

Enter number, and press [Menu] → *Notify caller ID* → *OFF* or *ON*

- Setting Caller ID on/off (Caller ID: P.2-21)

Adding Prefix to Phone Number

■ Save Prefix

Main Menu ► **Settings** ► **Call Settings** ► **Prefix**

- Highlight <Not Recorded>, and press [Edit] ► Enter a name
- Enter a prefix number

- Up to seven entries can be saved.
- To check entries: Select a saved prefix.
- To delete entries: Highlight a prefix, and press [Menu] → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

■ Make Calls Using Prefix

Enter a number → [Menu] → *Prefix numbers* → Select an entry → Voice Calls: / Video Calls: [V.Call]

- Alternatively, in detail window of Phone Book, Redial, Outgoing Call Logs or Incoming Call Logs, [Menu] → *Prefix numbers* → Select an entry → Voice Calls: / Video Calls: [V.Call]

Example: Save "186" and "184" as prefixes, and add them to phone numbers to show/hide your caller ID when making calls.

Sending Touch-tone Signals

Send touch-tone signals for services such as reserving tickets, checking bank balance, etc. Save number strings to be sent as a touch-tone signal. Use P (pause) to separate numbers when saving.

■ Save Pause Dial

Main Menu ► **Settings** ► **Phone Settings** ► **Pause Dial** ► [Edit]

→ Enter a number string

- To enter a pause (p): Press and hold
- To delete: In Pause Dial window, [Menu] → *Delete* → *YES*

■ Send Pause Dial

Main Menu ► **Settings** ► **Phone Settings** ► **Pause Dial**

► [Send] → Enter a phone number → / [Dial] → Once line is connected, press [Send]

- Number string is sent each time [Send] is pressed.
- To send all number strings at one time: Once line is connected, press and hold → *Send at one time*

Emergency Calls (110, 119, 118)

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

Calls cannot be Made in Following Cases:

- When **Set Max Cost Limit** is **ON** and charge limit is reached
- In PIN/PIN2, PUK/PUK2 entry window

Emergency Positioning Request

When an emergency call is made from a mobile phone, location is reported to first response agencies such as the police.

- Location information may be inaccurate due to location or signal conditions. Describe location or nearby landmarks.
- Base Station Positioning System is accurate within 100 meters to 10 kilometers. Location information from distant base stations may be inaccurate.
- Function available where first response agencies have completed system installation.
- Dialing 184 before 110, 118 or 119, cancels location report. However, first responders may obtain location information for immediate and serious threats to life.
- Not available for international roaming.
- Requires no separate subscription or communication fees.


Note

- Emergency numbers may not be dialable outside Japan depending on the network available or handset settings.

Answering Voice Calls

When a Call Arrives...

930P rings; Notification Light flashes.

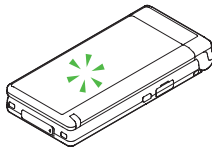

If Caller ID is sent, number appears in Internal Display and External Display; if saved in Phone Book, caller's name appears.

When an International call arrives,  appears at upper left of caller's phone number in Internal Display.


1 to talk

- To adjust volume:  or 

2 to end call

Call Time appears.

Adjusting Ringer Volume

While 930P is ringing, 

- Volume adjustment is disabled in following cases:
 - During **Manner Mode** (↗P.1-17)
 - While **Ringer Volume** is set to **Escalating Tone** (↗P.18-2)
 - Before Ring Starting Time specified for **Ring Time Settings** (↗P.11-9)

Note






- When Caller ID is not sent, **Withheld** appears.
- Calls cannot be received in Horizontal Open Position except when earphone/microphone is connected.

Tip

- Operations Available during a Voice Call (↗P.2-12)
 - Reject Calls from Unknown Numbers
 - Reject Calls without Caller ID (↗P.11-10)
- Settings** ● Answer Calls by Opening Handset ● Change Answer Setting (↗P.18-7)

Incoming Call Functions

Following operations are available for incoming calls.

Place Calls on Hold	> 
Answer Phone	>  / 
Call Rejection	>  [Menu] → Call Rejection <ul style="list-style-type: none"> ● Reject Calls from Unknown Numbers/Reject Calls without Caller ID (↗P.11-10)
Call Forwarding	>  [Menu] → Call Forwarding <ul style="list-style-type: none"> ● Activate Call Forwarding (↗P.2-17) beforehand to forward incoming calls to a preset number. If Call Forwarding is not active, call is rejected.

Making Voice Clear (Shikkari Talk)

<Default> ON

Make other party's voice clear according to surrounding noise.

Main Menu ▶ Settings ▶ Call Settings ▶ Shikkari Talk

1 ON or OFF

Making/Answering Video Calls

Exchange video/sound with video call-compatible mobiles.

- Send Alternative Picture (still image) or video Image via Outside Camera.

Tip


- Remote Monitoring (P.2-8)

Note

- Only available within 3G network coverage.
- 930P is 3G-324M compliant; calls connected via different systems may be disconnected (charges apply).
- Increasing Speaker volume may cause interference. Decrease volume or use earphone.
- Handset may become warm during Video Call. This is not malfunction.
- When incoming/outgoing sound or image fails, try calling again.

Video Call Window

Example: Outgoing Video Call by Default

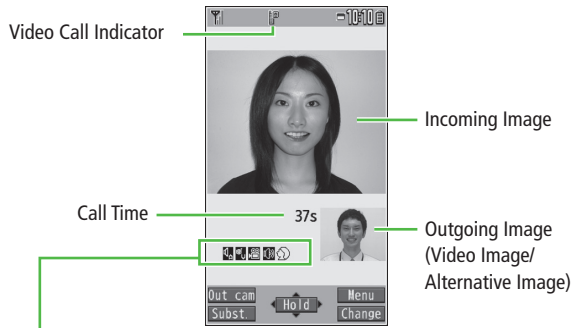

Indicators

- | | |
|------------------------------------|------------------------------------|
| : Incoming/Outgoing Sound OK | : Speaker ON |
| (Gray): Incoming/Outgoing Sound NG | : AV output |
| (Gray): Incoming/Outgoing Image OK | : During Bluetooth® handsfree call |
| (Gray): Incoming/Outgoing Image NG | : Portrait |
| : Video ON | : Close-up |
| : Alternative Image ON | : Landscape |
| | : Night mode |

- Image display changes depending on settings.

Making Video Calls

Before Calling

- Confirm signal strength (☞P.1-9)
- If any of these indicators appear:



→ Video Calls cannot be made (☞P.1-9, P.1-10, P.19-11)

1 Enter a phone number

090XXXXXXXXX

2 Confirm the number, then [V. Call]

When answered, outgoing and incoming images appear; other party's voice sounds via Speaker.

- To adjust volume:  or 

3 to end call

Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (☞P.2-12).

Tip


- Outgoing Call Functions (☞P.2-3)
 - Operations Available during a Video Call (☞P.2-12)
 - Making Calls from Call Log (☞P.2-14)
 - Other Ways to Add New Entries (☞P.4-5)
 - Making Calls from Phone Book (☞P.4-6)
- Settings**
- Change Outgoing Image
 - Switch to Voice Call when Video Call Fails (☞P.18-11)


Answering Video Calls

When a Video Call Arrives...

930P rings; Notification Light flashes.

Caller's phone number or name appears in Internal/External Display.

When an International call arrives,  appears at upper left of caller's phone number in Internal Display.

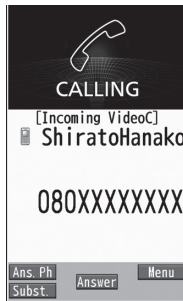


1



Inside Camera Image is sent.

- To send Alternative Image:

 [Subst.]

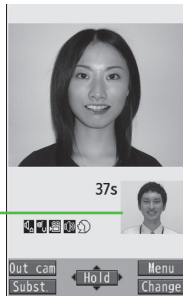

2



to end call

Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (P.2-12).

Tip


- Adjusting Ringer Volume (P.2-5)
- Operations Available during a Video Call (P.2-12)

Remote Monitoring

Use 930P as a monitoring camera to observe a remote place from a phone with 3G-324M compliant Video Call functions. Remote Monitoring starts when 930P receives a Video Call from preset phone number.

Saving Numbers to Activate Remote Monitoring

Main Menu ▶ Settings ▶ Video Call ▶ Remote Monitoring


- 1 Enter Phone Password → **Other ID**
- 2 <**Not Recorded**> → Enter a phone number → 
- 3 **Ring Tone Duration** → Enter time (sec)
- 4 **Setting** → **ON**
 - Setting cannot be set to **ON** in Manner Mode.

Selecting Numbers from Phone Book/Call Log

In Step 2, highlight <Not Recorded>, and press  [Menu]

→ **Refer to** → Select an item → Select a number

Deleting Numbers


After Step 1, (highlight a number,)  [Menu] → **Delete this** or **Delete all** → **YES**

Using Remote Monitoring

- 1 Make a Video Call to 930P from a preset phone number

After ring time elapses, Remote Monitoring starts.


- A Video Call starts if 930P answers before auto answer activates.

- 2 To quit Remote Monitoring,  (caller or recipient side)

International Calls

Calling Abroad from Japan

- Application not required. For details, go to:
http://mb.softbank.jp/mb/en/global_service/

- 1 Enter a phone number
- 2  [Menu] → **Int'l dial assist**
Country/region code list appears.

- 3 Select a country/region



- 4 **Voice Call**



Video Call



Entering Country/Region Code Directly

 → Press and hold  to display "+ (IDD Prefix)" → Enter a country/region code → Enter a number (omit first "0")

→ Voice Calls:  / Video Calls:  [V. Call]

- Do not omit leading **0** to call to Italy (country/region code: 39).


Calling while Abroad

- Application to Global Roaming Service may be required. Details and applications are available online:
http://mb.softbank.jp/mb/en/global_service/


Example: Calling Japan from Another Country/Region

- **Auto Assist** (☞Right) is set to **ON** and **Japan (+81)** by default.
- Only number starting with "0" is valid.

1 Voice Calls

Enter a phone number → 

Video Calls

Enter a phone number →  [V.Call]

2 Dial

First "0" is replaced by "+81."

- To call a number just as saved in Phone Book: **Dial with orig.No.**

Calling Other Countries/Regions Using Country/Region Code

Follow the same steps as calling abroad from Japan (☞P.2-9).

Calling within the Same Country/Region

Follow the same steps as making a Voice Call within Japan (☞P.2-2).

International Call Functions

From ▶ **Main Menu** ▶ **Settings** ▶ **International Call**

International Call Settings

Int'l Dial Assist → Select an item (See below)

Item	Operation/Description
Auto Assist	Replace IDD Prefix with "+" > ON or OFF (→ For ON , select a country/region)
Country/ Area Code	Save up to 27 country/region codes > Highlight <Not Recorded>, and press  [Edit] → Enter a country/region name → Enter a country/region code <ul style="list-style-type: none"> ● To view an entry: Select a saved country/region name ● To delete: Highlight a country/region name, and press  [Menu] → Delete this or Delete all (→ For Delete all, enter Phone Password) → YES
IDD Prefix	Edit IDD Prefix. IDD Prefix is set to 0046010 by default >  [Menu] → Edit → Edit IDD Prefix

Network Mode

<Default> Automatically

Select Network → Select an item (See below)

Item	Operation/Description
Automatically	3G/GSM service area in Japan or abroad 930P selects 3G network in Japan or an available network automatically using area (network condition) abroad.
Manually: 3G/GSM	3G/GSM service area in Japan or abroad 930P selects an available network using area (network condition).
Manually: 3G	3G service area in Japan or abroad
Manually: GSM	GSM service area abroad. Unavailable in Japan

- **Automatically** is recommended for ordinary use.

Select Operator

<Default> Auto

Select Operator → Select an item (See below)

Item	Operation/Description
Auto	Select an operator automatically
Manual	Select an operator manually > Select an operator ● Operators with "X" are not available. ● To show operator list: [Finish] [Update]
Network Re-search	Search available networks ● When Auto is set, 930P selects an available operator automatically. When Manual is set, operator list appears.

Operator Priority for Automatic Search

PLMN Setting → [Menu] → Select an item (See below)

Item	Operation/Description
Add your network	Save currently connected operator > [Finish] → YES
Add from list	> Select an operator → [Set] → Select a network type → [Finish] → YES ● To search operators by country/region: [Search] → Select a country/region (To search again in country/region list: [Search] → Enter a country/region name)
Direct input	Save unlisted operators by entering country/region code and operator code > Enter country/region code (3 digits) and operator code (2 to 3 digits) → Select a network type → [Finish] → YES
Change priority	> Select a priority → [Finish] → YES
Delete this/ Delete all	> YES → [Finish] → YES

View Operator Name in Standby

<Default> OFF

Operator Name → ON or OFF

- When **ON** is set, Clock Position is set to **Pattern 1** even when **Pattern 2 - Pattern 12** is set (P.18-4).

Engaged Call Functions

Operations Available during a Voice Call

Earpiece Volume	<p>> / </p> <ul style="list-style-type: none"> ● Adjust volume within two seconds. ● Adjusted volume is retained even after calls end or handset is turned off.
Place Call on Hold	<p>> [Hold]</p> <ul style="list-style-type: none"> ● To resume call: *2
Speaker ON/OFF*1	<p>Toggle Speaker or Earpiece</p> <p>> </p>
Record Conversation	<p>Record for about three minutes per call</p> <p>> Press and hold or [Rec]</p> <ul style="list-style-type: none"> ● To end recording: [Stop], or press and hold ● To play back recorded data: P.2-16
Manner Mode ON/OFF	<p>> Press and hold [#]</p>
Toggle Handset/Bluetooth®	<p>Toggle handset or Bluetooth® device</p> <p>> Press and hold *2</p>

*1 Normal Position only

*2 Function may not be available or call may be placed on hold in Horizontal Open Position.

Operations Available during a Video Call

Earpiece Volume	<p>> / </p> <ul style="list-style-type: none"> ● Adjust volume within two seconds. ● Adjusted volume is retained even after calls end or handset is turned off.
Place Call on Hold	<p>> [Hold]</p> <ul style="list-style-type: none"> ● To resume call: *2 ● To send Alternative Image: [Subst.]
Speaker ON/OFF*1	<p>Toggle Speaker or Earpiece</p> <p>> </p>
Record Conversation	<p>Record up to five calls for about 20 seconds each</p> <p>> Press and hold </p> <ul style="list-style-type: none"> ● To end recording: [Stop] or press and hold ● To play back recorded data: P.2-16
Inside Camera/Outside Camera	<p>> [In cam/Out cam]</p>
Camera/Alternative Image	<p>Toggle Camera Image and Alternative Image</p> <p>> [Image/Subst.]</p>
Incoming/Outgoing Image	<p>Toggle Incoming Image and Outgoing Image</p> <p>> [Change]</p>
Zoom	<p>> (zoom in) or (zoom out)</p>
Toggle Manner Mode	<p>> Press and hold [#]</p>

Toggle Phone/Bluetooth®	Toggle handset or Bluetooth® device > [Menu] → <i>Talk on BT/Phone</i> → <i>Bluetooth</i> or <i>Phone</i>
Backlight Setting	> [Menu] → <i>Back light</i> → <i>Constant light</i> or <i>15 seconds light</i>
Video Call Setting	> [Menu] → <i>V. Call settings</i> → Follow the steps for selected item (☞P.18-11)
LCD AI	Activate/deactivate auto image compensation > [Menu] → <i>LCD AI</i> → <i>ON</i> or <i>OFF</i>
Account Details	> [Menu] → <i>Account details</i>
Key Guide	> [Menu] → <i>Key guide</i>

*1 Normal Position only

*2 Function may not be available or call may be placed on hold in Horizontal Open Position.

Call Log

Incoming and outgoing call records appear here. Use these records to call back.

Redial	Up to 30 records of dialed Voice Calls and Video Calls are saved. Older records of same number are deleted.
Outgoing Call Logs	Up to 30 records of dialed Voice Calls and Video Calls, and up to 30 records of 64K data and packet communication are saved. Older records of same number are also retained.
Incoming Call Logs	Up to 30 records of received Voice Calls and Video Calls, and up to 30 records of 64K data communication are saved. Older records of same number are also retained.

Indicators for Redial/Outgoing Call Logs/Incoming Call Logs

	Dialed/received Voice Calls		Received Remote Monitoring calls
*	Missed Voice Calls		Dialed calls of 64K data communication
	Dialed/received Video Calls		Received calls of 64K data communication
*	Missed Video Calls	*	Missed calls of 64K data communication
	New messages recorded on Answer Phone		Dialed calls of packet communication
	Dialed/received international Voice Calls		Received calls of 64K data/packet communication when no external device is connected
*	Missed international Voice Calls		
	Dialed/received international Video Calls		
*	Missed international Video Calls		
*	Calls received while handset is off, out-of-range, engaged, etc. (☞P.2-19)		

* Unchecked calls are highlighted.

Viewing Call Logs

1 Redial



Outgoing Call Logs



→ **Phone Book** → **Call Log**
→ **Outgoing Call Logs**

Incoming Call Logs



Records appear.



Redial

Viewing Missed Calls

Main Menu ► **Phone Book** ► **Call Log** ► **Incoming Call Logs**

► **Missed Calls**

- **Unknown Calls** appears in Call Log for unchecked calls.

Note

- Newest record appears at top of list. Names appear if saved in Phone Book.
- Call Log records remain even if 930P is turned off.
- When the maximum number of records are saved, oldest is deleted first.
- Incoming Call Logs can also be opened from **Main Menu**
► **Phone Book** ► **Call Log** ► **Incoming Call Logs** ► **All Calls**

Making Calls from Call Log

1 Open Call Logs (☞Left)

2 Voice Calls


Highlight a phone number or name, and press 

Video Calls

Highlight a phone number or name, and press



International Calls

Select a phone number or name →  **[Menu]** →

Int'l dial assist → Select a country/region →



Functions Available from Call Log

Highlight a call record and press [Menu].

- Available functions vary by selected log/record.

Item	Operation/Description
Notify caller ID	Notify or withhold your Caller ID (P.2-3)
Prefix numbers	Add a prefix to phone number before dialing > Select an entry →
Int'l dial assist	Add international dialing prefix > Select a country/region →
Character size	Toggle font size
Add to Phone Book	Save number to Phone Book (P.4-5)
Ring time* ¹	Show ring time (missed calls)
Add shortcut icon	Create a shortcut (P.1-19)
Compose S! Mail	Create S! Mail (From Step 4 on P.13-4)
Compose SMS* ²	Create SMS (From Step 4 on P.13-7)
Received address/Sent address	Show Received/Sent address log
Delete this/Delete selected/Delete all	> Delete record(s) in selected list

*1 Available only for Incoming Call Logs

*2 Message can be sent to SoftBank handsets only

Answer Phone

Record up to five voice messages for Voice Calls or up to two for Video Calls (up to 20 seconds per message) on 930P.


- When Answer Phone is active, - (Voice Call) or - (Video Call) appears in Standby.
- Unavailable when: handset is off or in Emission OFF Mode; appears. Use Voice Mail (P.2-18).

Activating/Canceling Answer Phone

<Default> OFF

1 Press and hold

- To cancel: Press and hold again.



Redirecting a Call to Answer Phone

Press [Ans. Ph] or to activate Answer Phone.

Note

- Alternatively, activate/cancel from **Main Menu** ► **Tools** ► **Sound Recorders** ► **Answer Phone Setting** ► **ON** or **OFF**
- When full, new messages cannot be recorded even if Answer Phone is activated. Delete old messages.

Playing Messages

When a new message is recorded, Event Indicator appears (P.1-18) in Standby.



- 1 Select indicator
- 2 Select a message

Playback starts.

After playback ends, indicator disappears.

Note

- Alternatively, in Standby, press **[MESSAGE]** (for Voice Call messages) or **Main Menu ▶ Tools ▶ Sound Recorders ▶ Voice Call Data** or **Video Call Data ▶** Select a message.

Answer Phone Functions

From ▶ Main Menu ▶ Tools ▶ Sound Recorders

Select Outgoing Message/Set Ring Time

Answer Phone Setting → ON → Select a message → Enter ring time

- When Answer Phone and Voice Mail or Call Forwarding are both active, function with shorter ring time takes priority.

For example, if Answer Phone ring time is 18 seconds and Optional Service is 20 seconds, Answer Phone responds first. (Priority may change due to signal conditions.)

Delete Recorded Call Data

Voice Call Data or **Video Call Data** → **[Y?][Menu]** →

Erase this, Erase rec. msg., Erase Call Data* or **Erase all** → **YES**

* **Video Call Data** only

Optional Services

Overview

- For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Call Forwarding (☎P.2-17)	Forward unanswerable calls to a preset number when 930P is off, out-of-range, etc.
Voice Mail (☎P.2-18)	Unanswered calls are forwarded to Voice Mail Center as set or when 930P is off, out-of-range, engaged, etc. <ul style="list-style-type: none"> Missed Call Notification (☎P.2-19)
Call Waiting* (☎P.2-20)	Place the current call on hold and answer a second, or alternate between calls.
Call Barring (☎P.2-20)	Restrict calls by condition. <ul style="list-style-type: none"> While Call Forwarding or Voice Mail Service is active, Bar All Outgoing and Bar All Incoming are not available. (Call Forwarding or Voice Mail Service is prioritized.)
Caller ID (☎P.2-21)	Show or hide your number when calling.


* Separate subscription required

Call Forwarding

- Voice Mail and Call Forwarding cannot be set simultaneously.
- When forwarding Video Calls, set a destination phone that supports 3G-324M standard video calls. If not, Video Calls are not forwarded.

Activating Call Forwarding

Main Menu ► Settings ► Call Settings
► Voice Mail/Call Fwding ► Call Forwarding ON

- Select a type
- Enter a destination phone number
 -  to select number from Phone Book.
- Select an item (See below)

Item	Operation/Description
Ringer ON	Forward missed calls > Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating > YES



Checking Call Forwarding Status

Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Get Status

Canceling Call Forwarding

Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Deactivate All ► YES

Note

- Toll free numbers and international call numbers cannot be saved as a destination number.
- When using Call Forwarding together with Answer Phone, the function with shorter ring time takes priority. (Priority may change due to signal conditions.)
- When **Ringer ON** is set, press  to answer calls while 930P is ringing/vibrating (within ring time). To forward calls immediately while 930P is ringing/vibrating, press  [Menu] → *Call Forwarding*.

Voice Mail

- Calls are forwarded to Voice Mail Center via Call Forwarding function; Voice Mail and Call Forwarding cannot be set simultaneously.
- Voice Mail is not available for Video Calls.

Activating Voice Mail

Main Menu ► Settings ► Call Settings
► Voice Mail/Call Fwding ► Voice Mail ON

- 1 Select an item (See below)

Item	Operation/Description
Ringer ON	Forward missed calls > Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating > YES



Checking Voice Mail Status

Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Get Status



Canceling Voice Mail

Main Menu ► Settings ► Call Settings ► Voice Mail/Call Fwding
► Deactivate All ► YES

Note

- When using Voice Mail together with Answer Phone, the function with shorter ring time takes priority. (Priority may change due to signal conditions.)
- When **Ringer ON** is set, press  to answer calls while 930P is ringing/vibrating (within ring time). To forward calls immediately while 930P is ringing/vibrating, press  [Menu] → **Call Forwarding**.

Checking Voice Mail Messages

Event Indicator ( P.1-18) and  appear in Standby when new messages are recorded.

1  → Select indicator → **YES**

- Follow voice guidance.
Indicator and  disappear after messages are checked.



Viewing Details

View callers' phone numbers and date/time Voice Mail messages were left before playing messages.

- Activate **Missed Call Notification** beforehand.

 → **Voice Mail Notif.** →  

Deleting Indicator

Main Menu ▶ **Settings** ▶ **Call Settings** ▶ **Voice Mail/Call Fwding**
▶ **Delete Voice Mail Icon**

Note

- Alternatively, follow these steps to check Voice Mail:

Main Menu ▶ **Settings** ▶ **Call Settings**
▶ **Voice Mail/Call Fwding** ▶ **Listen to Voice Mail**

Missed Call Notification

When Missed Call Notification function is active, Event Indicator appears for calls missed while 930P was off, out-of-range, engaged etc.

- Available only when Voice Mail is active.

Main Menu ▶ **Settings** ▶ **Call Settings** ▶ **MissedCall Notifi.**


1 **YES**

930P connects to the Network.

- Follow voice guidance.

When Calls are Received while Missed Call Notification is Active...

Event Indicator appears for missed calls when 930P is turned on or comes into range. Select indicator to view Missed Incoming Call Logs.

- **Voice mail** indicator appears when Voice Mail messages are recorded ( Left).



Call Waiting

Activating/Canceling Call Waiting

Main Menu ► Settings ► Call Settings ► Call Waiting

1 **Activate** or **Deactivate** → YES




Current status appears.

Checking Call Waiting Status

Main Menu ► Settings ► Call Settings ► Call Waiting
► Get Status

Answering Second Call

1 When tone sounds,

-  to alternate between calls.
-  to disconnect active call.
- When the party hangs up, active call ends.
-  to re-engage the party on hold.
- When a second call comes in while first call is on hold, hold status is canceled and first call resumes.

Rejecting Second Call

When tone sounds,  [Menu] → **Call Rejection**

Note

- When Voice Mail or Call Forwarding is set to **Ringer ON** while Call Waiting is active, unanswered calls are transferred to Voice Mail Center or the forwarding number.
- When Voice Mail or Call Forwarding is set to **Ringer Off**, Call Waiting is disabled.

Call Barring

- Security Code is required (☎P.1-26).

Activating/Deactivating Call Barring

Main Menu ► Settings ► Call Settings ► Call Barring

1 Select an item (See below)

Item	Operation/Description
Bar All Outgoing	Restrict all non-emergency calls
Bar All Int'l	Allow only domestic calls
Bar Int'l	Restrict all international calls except to Japan
Bar All Incoming	Reject all calls
Bar All Roaming	Reject calls when outside Japan

2 **Activate** or **Deactivate** → YES

3 Enter Security Code

Checking Call Barring Status

After Step 1, *Get Status*

Canceling All Call Barring

In Step 1, *Cancel All Barring* → Enter Security Code

Changing Security Code

In Step 1, *Set Security Code* → Enter current Security Code → Enter new Security Code → Reenter Security Code

Note

- Emergency numbers (110, 119, 118) are dialable even while Call Barring for outgoing calls is active.
- If call is attempted when Call Barring is active, warning message appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.

Caller ID

<Default> Network Set

Main Menu ► Settings ► Call Settings
► Show My Number ► Activate

1 ON, OFF or Network Set

- *Network Set* Caller ID setting varies by subscription.

Checking Caller ID Status

Main Menu ► Settings ► Call Settings ► Show My Number
► Check Setting

Note

- Alternatively, enter these numbers/symbols before the phone number to show or hide Caller ID:

Show: or

Hide: or

