

Calling



Voice Call	3-2
Placing a Voice Call.....	3-2
Receiving a Voice Call.....	3-2
In-Call Operations.....	3-3
Video Call	3-4
Placing a Video Call.....	3-4
Receiving a Video Call.....	3-4
Favorites	3-5
Saving Numbers as Favorites.....	3-5
Using Favorites.....	3-5
Sending Messages.....	3-5
Emergency Numbers	3-6
Answering Machine	3-6
Activating & Canceling.....	3-6
Using Answering Machine.....	3-7
Deleting Messages.....	3-7
Black List	3-7
Rejecting Incoming Call.....	3-7
Calls from Specified Numbers.....	3-7
Calls from Unknown ID Numbers.....	3-7
Calls from Withheld ID Numbers.....	3-8
Calls from Public Pay Phones.....	3-8
Calls from Unavailable ID Numbers.....	3-8
Call Log Records	3-8
Viewing Call Log Records.....	3-8
Viewing Ranking.....	3-9
Calling Call Log Records.....	3-9
Deleting Call Log Records.....	3-9
Resetting Ranking.....	3-9


Checking Call Time/Cost	3-10
International Calling	3-10
Global Roaming	3-10
Changing Network Mode.....	3-10
Setting Network.....	3-11
Calling Outside Japan.....	3-11
Optional Services	3-12
Voicemail.....	3-13
Call Forwarding.....	3-14
Call Waiting.....	3-15
Conference Call.....	3-15
Call Barring.....	3-16
Caller ID.....	3-17
Advanced Settings	3-18
Voice Call.....	3-18
Video Call.....	3-19
Call Log Records/Ranking.....	3-20
Conference Call.....	3-20


Voice Call

Placing a Voice Call



Directly enter phone number to call.

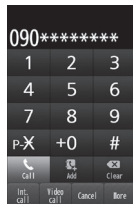

To place a call from Phone Book, see "Calling from Phone Book" (P.2-17).



- 1  (1 + seconds)/Tap **Phone** and **Dial** → Enter phone number including area code



Phone Number Entry Window

- 2  or **Call**
- 3 To end the call → 


- To correct entered digit, tap **Clear** or press . Touch and hold **Clear** or press  for 1 + seconds to delete all.
- To enter P (pause), tap **P-X** twice. To enter + (International Code), touch and hold **+0**.




- When the line is busy, press  to end the call and try again later. If **Auto redial** (P.14-5) is **On**, number is automatically redialed. Tap **Cancel** or press  to cancel redialing.
- When Stereo Earphone Microphone (optional) is connected and **Earphone call** is set to **On**, press Stereo Earphone Microphone switch for 1 + seconds to call specified phone number. Press it again for 1 + seconds to end the call.
- To input numbers for automatic voice service guidance, tap **Dial** for Keypad and tap numbers.

Receiving a Voice Call

- 1 Voice Call window appears, 



- 2 To end the call → 

- To put caller on hold, press . To connect the call, tap **Answer** or press .
- To adjust ringer volume, press .
- If Stereo Earphone Microphone (optional) is connected, press Stereo Earphone Microphone switch for 1 + seconds to accept Voice Calls. Press it again for 1 + seconds to end the call.

- **Missed Call Window**
Missed call window appears for unanswered calls. Tap notification to view incoming calls (P.3-8).
- **Ringtone**
Specify Ringtones by Phone Book entry or Category (P.2-20, P.2-22). If they are not set, they will ring according to the activated mode (P.15-8). If **Security** → **Secret mode** is set to **Hide** when a call from a secret entry is received, the handset will ring according to the activated mode.
- **Incoming Call Window**
If a caller sends Caller ID, phone number appears. If saved in Phone Book, name also appears. If caller hides Caller ID, **Withheld** appears. If incoming image has been saved in Phone Book or for the group, the image also appears (P.2-20, P.2-22). If **Security** → **Secret mode** is set to **Hide** when a call from a secret entry is received, only number appears.
- When you cannot answer a call
Use Call Forwarding or Voicemail to handle calls. While handset rings/vibrates, tap **Forward** to forward the call to Voicemail or designated number immediately (P.3-13, P.3-14). Alternatively, tap **Answering machine** to record caller message on handset (P.3-6).

In-Call Operations

Adjusting Volume

1 During a call, /

- Adjust Earpiece or Earphone (optional) volume. Setting remains even after powered off.

Holding Incoming Call


Place call on hold and reconnect.

1 During a call, **Hold**



- When a call is put on hold, the party on hold hears a hold tone and neither party can hear the other's voice.
- To reconnect call, tap **Hold**.
- To put a current call on hold, separate subscription is required to use either Call Waiting (P.3-15) or Conference Call (P.3-15). No liability is assumed for any damage associated with SSL/TLS use.

Recording a Call

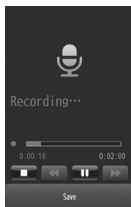1 During a call, **Record**



2 End recording →

- Record voice for up to two minutes during a call.
- To pause recording, tap . Tap  to resume recording. Tap **Save** to save recording up to paused point.
- Recorded sound file is saved to Ring songs · tones in Data Folder.
- If Call Waiting is subscribed to, recording is stopped when there is another incoming call, and Incoming call window appears.
- If the call is terminated while being recorded, recording is automatically shut off, and the voice file is saved.

Text Memo

- 1 During a call, tap **More** → **Notepad** → **Tap Add new**
- 2 Enter text memo → **Select Category field** → **Select category** → **Tap Save**

Advanced

 **Advanced Settings** (P.3-18)

- Sending New Message to Entered Number
- Showing/Hiding Your Number for a Call

 **Settings**

- Set Handset to Automatically Redial Busy Numbers (P.14-7)


Video Call

Exchange voice/video with compatible 3G handsets.

- You may experience a problem with sound quality when using Speakerphone (P.3-19) at a raised volume. Lower volume or using Stereo Earphone Microphone (optional) is recommended.
- Ambient noise may hamper voice quality. Use Stereo Earphone Microphone (optional).
- Using Speakerphone in public may disturb others; please mind your mobile manners.

Note

- Video Calls to incompatible handsets may be disconnected; fees apply.**

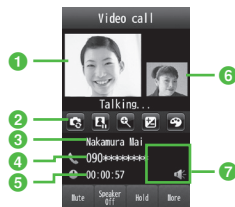

- Large Image (normally, incoming image)
Tap here to switch to small image.
- Video Call menu icons
 - :Toggle sub camera/external camera
 - :Stop or resume sending My Image
 - :Zoom

- :Brightness
- :Effect

- The other party's name
- Phone number
- Call duration
- Small Image (normally, outgoing image)
Tap here to switch to Large Image.
- Status icon
 - :Transfer to headset
 - :Mute my voice
 - :Speaker Off/On

Placing a Video Call

Enter phone number directly. To use Phone Book, see "Calling from Phone Book" (P.2-17).

- (1+ seconds)/Tap Phone and Dial → Enter a number including area code
- Tap Video call
- To end the call →

- If Video Call does not connect
At prompt, select **Retry** → **Voice call** or **Create message**; **Add to phonebook** to save number. Select **Video call** to dial the same number again.

Receiving a Video Call

- Video Call window appears,**
 - Send My Image confirmation appears. Choose **Yes/No**.
- To end the call →

- To put an incoming Video Call on hold without answering it, tap Hold Answer or press . To release the hold and answer the Video Call, tap Answer or press while holding it.
- Press / to adjust ringer volume while handset rings.
- If Stereo Earphone Microphone (optional) is connected, press Stereo Earphone Microphone switch for 1 + seconds to answer Video Call. Press it again to end call.
- To disconnect an incoming Video Call without answering it, tap Forward or tap Reject.
- After pressing in 1, My Image appears, but is not sent. Confirmation appears, choose **Yes** to send My Image, or **No** to send Alternative picture. When Video Call connects, My Image or Alternative picture appears in Small Image.
- To adjust volume, press / .

Advanced

Advanced Settings (P.3-19)

- Showing/Hiding Caller ID

Settings

- Set Preset Picture as Outgoing Image (P.14-5)
- Set Alternative Picture as Outgoing Image (P.14-6)
- Adjust Incoming Video Quality (P.14-6)
- Adjust Outgoing Video Quality (P.14-6)
- Set Preset Picture to Appear When Video Call is on Hold (P.14-6)
- Set Hold Settings (P.14-6)
- Set Preset Picture to Appear When Video Call is on Hold without Answering (P.14-6)
- Set Hold Answer Settings (P.14-6)
- Activate/Cancel Mute for Video Call (P.14-6)
- Activate/Cancel Speakerphone during Video Call (P.14-6)
- Set Backlight (P.14-6)
- Set Handset Response When Video Call Cannot Be Connected (P.14-6)
- Answer Video Call from Specified Party Automatically (P.14-6)
- Create Auto Answer List (P.14-6)
- Show/Hide Your Own Image for Video Calls (P.14-6)
- Set Handset to Automatically Redial Busy Numbers (P.14-7)
- Activate/Cancel Automatic Ringer Reduction (P.14-7)
- Enable/Disable Calling via Stereo Earphone Microphone (P.14-7)
- Adjust Earpiece Volume (P.14-7)
- Set Answering Mode (P.14-24)

Favorites

Save phone number and mail address as Favorites for quick calling.

Saving Numbers as Favorites

Save up to 20 frequently used phone numbers and 20 frequently used addresses.

1 Tap Phone → Favorites



3 Tap Add

4 Search and select Phone Book entry (P.2-16)

- If more than one address/phone number is saved in one entry, select address/phone number.

- To remove saved phone number and mail address, tap Phone → Favorites → Phone / Mail → Tap Remove → Check entries → Tap Remove.
- Secret entry phone numbers cannot be saved as Favorites.
- Setting phone number saved as Favorites to secret entry cancels Favorites setting automatically.

Using Favorites

1 Tap Phone → Favorites



3 Tap Phone beside the designated number

- Alternatively, after 1, select number to view log records.
- Alternatively, after 1, select number → Tap Call/Mail/Photo (0)/Phonebook.
- Alternatively, swipe screen downward to view Favorites.

Sending Messages

1 Tap Phone → Favorites



3 Tap Mail beside the designated number

- Alternatively, after 2, select mail address to view log records.
- Alternatively, after 2, select number → Tap Call/Mail/Photo (0)/Phonebook.
- Alternatively, swipe screen downward to view Favorites.

Emergency Numbers

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Maritime Safety Agency). These numbers can be dialed even when certain Call Barring settings are active. See details below.

9415C Status	Emergency Numbers
Offline Mode activated (☎P.1-14)	N/A
Phone Lock activated (☎P.11-3)	N/A
Password Lock activated (☎P.11-4)	Applicable
Required PIN not entered (☎P.11-4)	N/A
USIM Card cannot be authenticated (☎P.11-4)	N/A
Outgoing Call Barring activated (☎P.3-17)	Applicable

Note

- **Emergency calls may not be possible outside Japan depending on available network, signal conditions or handset settings.**

Emergency Location Report

When calls are placed to Police or other emergency agencies from handset, handset location information is automatically sent to the corresponding agency. Handset transmits location based on base station positioning information.


- Location accuracy may vary by geography or signal conditions. Always verify your location with address or nearby landmark.
- Base station positioning accuracy ranges from several hundred meters to ten kilometers. This information may differ from actual location due to distance of the closest base station location.
- This function is only available if the agency receiving an emergency call has implemented the infrastructure for receiving location information.
- If you hide Caller ID by dialing 184 before calling an emergency number, your location information is not sent. However, authorities may access this information when necessary.
- No subscription/Communication charges required.

Answering Machine

Handset records up to three 15-second messages.

Activating & Canceling

- 1 Tap Menu → *Settings* → *Call settings* → *Answering machine*
- 2 Under *On/Off*, *On* or *Off*

- If Answering machine is on,  appears in Standby.
- Calls appear in Call Log records.

Note




- **If handset is off, out-of-range, or in Offline Mode, Answering Machine is unavailable. Use Voicemail to handle incoming calls (☎P.3-13).**
- **Answering Machine requires at least 600 KB of unused handset memory.**

Using Answering Machine

Use Answering Machine to record caller messages (P.3-6).

1 Tap Menu → *Phone Func.* → *Play answering machine*

2 Select a message

- After Answering Machine records a message,  appears in Standby.
- Alternatively, in Standby, press  for 1 + seconds to play Answering Machine messages.
- Alternatively, in Standby,  → Tap Answering machine.
- Alternatively, tap Menu → *Settings* → *Call settings* → *Answering machine* → *Play answering machine*.
- Alternatively, tap Phone → *Answering machine*.

Deleting Messages

1 Tap Menu → *Phone Func.* → *Play answering machine* → Tap Delete

2 Check messages → Tap Delete → *Yes*

- Message is deleted; Missed voice call appears in Call Log.

Black List

Reject incoming calls. Alternatively, reject calls from specified or unknown numbers.

Rejecting Incoming Call

1 While handset rings, tap Reject

- Rejected calls appear in Call Log records.
- If Call Forwarding or Voicemail is unset, while handset rings, tap Forward to reject the call. *Call is unavailable due to the reasons of the called party* message appears on caller's handset before call is disconnected. If handset is incompatible, call is simply disconnected.

Calls from Specified Numbers

1 Tap Menu → *Settings* → *Call settings* → *Reject incoming calls*

2 Set reject number → Under *On/Off, On*

- For calls from Black list, caller hears a busy tone and call is not connected. Missed Call Notification appears in Standby. Select notification to check missed call.
- Choose *Off* to allow calls from specified numbers.

3 Black list

4 Tap Add → *Select an item* → *Add an entry*

- To delete saved numbers after **3**, tap Delete → Check numbers → Tap Delete → *Yes*.

Calls from Unknown ID Numbers

1 Tap Menu → *Settings* → *Call settings* → *Reject incoming calls*

2 Under *Unknown, On*

- Choose *Off* to allow calls from unknown numbers.

Calls from Withheld ID Numbers

1 Tap Menu → *Settings* → *Call settings* → *Reject incoming calls*

2 Under *Withheld, On*

- Choose **Off** to allow calls from withheld ID numbers.

Calls from Public Pay Phones

1 Tap Menu → *Settings* → *Call settings* → *Reject incoming calls*

2 Under *Payphone, On*

- Choose **Off** to allow calls from pay phones.

Calls from Unavailable ID Numbers

1 Tap Menu → *Settings* → *Call settings* → *Reject incoming calls*

2 Under *Unavailable, On*

- Choose **Off** to allow calls from unavailable ID numbers.

Call Log Records

Choose from Received, Dialed, All, or Ranking to view Call Log. Ranking for outgoing call appears in Ranking. Confirm call type, number, or time. Call Log holds a combined total of 1000 calls, 500 incoming calls, 500 outgoing calls and top ten rankings.

Viewing Call Log Records












1  / Tap Phone and *Call log*







Call Log
(Incoming Calls)

2 Select record

• Call Log Record Icons

-  : Outgoing Voice Call
-  : Outgoing Video Call
-  : Incoming Voice Call
-  : Incoming Video Call
-  : Missed Voice Call
-  : Missed Video Call
-  : Rejected Voice Call
-  : Rejected Video Call
-  : Voicemail Notification
-  : Incoming Call Notification
-  : Answering Machine

- If **Security** → **Secret mode** is set to **Hide**, names do not appear in Call Log for secret entries.
- Alternatively, in Standby, tap Menu → **Phone Func.** → **Call log** →  /  /  /  to confirm Call Log.


Viewing Ranking

1 / Tap phone and *Call log*



Call Log
(Ranking)


2 Select ranking


- If *Security* → *Secret mode* is set to *Hide*, numbers set as *Secret mode - On* will not appear in Call Log.
- Alternatively, in Standby, tap Menu → *Phone Func.* → *Call log* → .

Calling Call Log Records

1 → / / / → Select a log/ranking →

2 Place a call

- To Place a Voice Call
Voice call
- To Place a Video Call
Video call
- To Place an International Call
International call → Select country/*Enter Code* and enter country code → Confirm phone number →  / *Call* / Tap Video call
- To Call after Editing the Call Number
Copy to dial → Edit number → *Call* / Tap Int. call (P.3-10) / Video call

- Alternatively, tap  beside the designated log to place a Voice Call.

Deleting Call Log Records

1 → / /

2 Tap Delete → Check records → Tap Delete → *Yes*

- To confirm and delete records one by one, after 1, select record → Confirm and tap Delete → *Yes*.
- To delete the entire Call Log, after 1, tap Delete → *Mark all* → Tap Delete → Enter Phone Password → Tap OK → *Yes*.

Resetting Ranking

1 →

2 Tap Reset ranking → Check ranking → Tap Reset → *Yes*

- To reset the entire ranking, after 1, tap Reset ranking → *Mark all* → Tap Reset → Enter Phone Password → Tap OK → *Yes*.

Advanced

Advanced Settings (P.3-20)

- Viewing Phone Book Entry Details via Call Log
- Adding Call Log Record Numbers to Phone Book
- Adding Call Log Record Numbers to Black List

Checking Call Time/Cost

Show charge after call may not be available depending on your contract conditions.

Call settings menu includes items below.


Menu Item	Action
All calls	Confirm or reset approximate total call time/cost.
Last call	Confirm or reset approximate call time/cost of the previous call.
Data counter	Confirm or reset approximate incoming/outgoing data volume.
Show charge after call	Set whether to show call time/cost after ending a call.
Set currency	Set or change currency.

1 Tap Menu → *Settings* → *Call settings* → *Call time & cost*

2 Select item

- To reset item, tap Reset.


International Calling

1  (1 + seconds)/Tap Phone and *Dial* → Enter a phone number including area code

2 Tap Int. call → Select a country/ *Enter Code* and enter country number

3 Confirm number → *Call*

- Country code entry is not required to call SoftBank handsets outside of Japan, regardless of country.

- Alternatively, after tapping Int. call, tap  to call.

Global Roaming

Apply for Global Roaming Service beforehand. For information, see SoftBank Mobile Website: (http://mb.softbank.jp/en/global_services/)

Changing Network Mode

Select from available Networks (3G or GSM). Default: Network mode is set automatically.

1 Tap Menu → *Settings* → *Call settings* → *International call* → *Select network*

2 Select Network mode

- To Activate Automatically
Automatic
- To Activate Manually
Manual → *3G/GSM, 3G, or GSM*

- Network Mode Setting

Automatic

Mode changes with network availability.

3G

Use in 3G/UMTS service areas anywhere.

GSM

Use in GSM service areas outside Japan.

- Default: *Automatic*

Setting Network

Use SoftBank Mobile 3G network or GSM networks commonly available outside of Japan.

Selecting a Network

Select network (service provider) for the area where handset is used. Manual selection is also available.

- 1 Tap Menu → *Settings* → *Call settings* → *International call* → *Select operator* → *Select Auto/Manual*

2 Select Network mode

- **To Set Automatically**
Automatic
- **To Specify Operator**
Manual → Select an item

Setting Preferred Network

Edit Network list preferentially selected when *Automatic* is set.

- 1 Tap Menu → *Settings* → *Call settings* → *International call* → *Select operator* → *Set priority*

2 Edit Preferred Network list

■ To Select & Add from Network List

Tap Add → *Network list* → Select a network to insert from Network list



■ To Add Network

Tap Add → *New Network* → Tap Country code field → Enter country code → Tap Network code field → Enter Network code → Tap Network name field → Enter name → Tap Network type field → *GSM* or *3G* → Tap Add

- Added network appears at top of Network list.
- After ①, tap Change order to change the preferred order. Touch and hold a network → Drag it to desired location → Tap OK.
- After ①, tap Delete → Select network → *Yes* to delete network.
- Items to set in *New Network* are as follows.
Country code: Up to three digits
Network code: Up to three digits
Network name: Up to 20 words
Network type: Select from GSM/3G

Calling Outside Japan

Emergency calls may not be possible outside of Japan depending on network, signal conditions, or handset settings (☎P.3-6).

- 1  (1 + seconds)/Tap *Phone and Dial* → Enter a phone number including area code → 

2 Place a call

■ To Place a Call to Japan *To Japan*


■ To Place a Call to Visiting Country *Visiting country*

■ To Place a Call to a Country Other than Japan

Other country → Select country

■ To Place a Call by Entering Number *Call this number*

- If *Never show this* is checked or *Roaming dial assistant* is *Off*, operation above is not required.

- To place a call by directly entering country number, touch and hold **+0** to enter *+*. Enter country number, phone number excluding the first *0* → Press  to dial. To place a call to Italy, include the first *0* if there is one.
- If *+* and country code is included at beginning of phone number, ② is not required.

Advanced

Settings

- Save International Code (☎ P.14-7)
- Add/Change/Delete Country Number (☎ P.14-7)
- Set Roaming Dial Assistant (☎ P.14-7)
- Retrieve Network Information Manually (☎ P.14-25)
- Seek the Most Prioritized Network (☎ P.14-25)

Optional Services

Available optional services are as follows:

Service	Description
Voicemail	Divert all or all unanswered calls to Voicemail Center; access caller messages via handset from within the service area or via a touchtone phone anywhere. · Set Missed Call Notification to notify missed calls by notification when handset is off or out-of-range (☎ P.3-14).
Call Forwarding	When you know you will be unable to answer calls, automatically divert calls to a specified number.
Call Waiting	Put the line on hold to answer another line or alternate between lines. Or toggle lines among multiple lines simultaneously.
Conference Call	Open another line while one is engaged; toggle lines or talk with up to six parties simultaneously.
Call Barring	Restrict incoming or outgoing calls by condition.
Caller ID	Show or hide your own number when placing calls.

Note

- Call Waiting and Conference Call require separate subscription.
- If *Out* appears, services are unavailable. For landline operation or service details, see SoftBank Mobile Website (<http://www.softbank.jp>).

Voicemail

Handset forwards Voice Calls to Voicemail Center according to the following conditions:

Forwarding Condition	Description
Always	Handset does not ring/vibrate for incoming calls; calls are diverted automatically. Missed Call Notification does not appear.
No reply	Unanswered calls are diverted after the specified ring time, or when the line is busy or handset is outside service area.

Note

- Voicemail and Call Forwarding cannot be active at the same time.
- Activating Voicemail cancels Call Forwarding.

Activating Voicemail

- 1 Tap **Menu** → **Settings** → **Call settings** → **Optional services** → **Voice mail/Call forwarding** → **Voice mail On**
- 2 Select an item
 - To Transfer Immediately
Always (0 sec.)
 - To Set Ring Time before Transfer
No reply (5 to 30 sec.)

- If *No reply (5 to 30 sec.)* is set, answer call within set ring time to cancel forwarding, or tap Forward to Voicemail Center to forward immediately.

Canceling Voicemail


- 1 Tap **Menu** → **Settings** → **Call settings** → **Optional services** → **Voice mail/Call forwarding** → **Deactivate all** → **Yes**

Note

- *Deactivate all* also cancels Call Forwarding.


Listening to Voicemail Message

When a caller saves a Voicemail message, notification appears in Standby and  appears at top of Display.

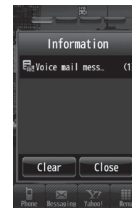






Indicated by Icons and Messages

■ When Notification Appears

- Tap notification →  beside the log
- Tap notification → Select record.
- **Close** to clear the notification without playing the message.



■ When Notification Does Not Appear

- Tap Menu → **Phone Func.** → **Call voice mail** → Tap Call or 
- Or
-  (1+seconds) → Enter 1416
- 

- To enter numbers, press  to show Keypad.
- If you delete a message you played,  disappears.

Activating Missed Call Notification

Notification appears for missed calls while handset is off or outside service area; or when caller saves message at Voicemail Center while the line is engaged.



1  (1 + seconds) → Enter 1414
→ 

2 Follow guidance


- To enter numbers following guidance, tap Dial to show Keypad.
- Alternatively, tap Menu → *Settings* → *Call settings* → *Optional services* → *Missed call notif.* to activate Missed Call Notification.
- Notification is saved as Call Log record.
- Missed Call Notification is complimentary.

Advanced

Settings

- Confirm Current Voicemail/Call Forwarding Settings ( P.14-5)
- Listen to Voicemail Message ( P.14-5)

Call Forwarding

Forward incoming calls to a specified number in accordance with the predefined forwarding condition which you can set by call type (Voice Call or Video Call) ( P.3-13).

Note

- Call Forwarding and Voicemail cannot be used at the same time.
- Activating Call Forwarding cancels Voicemail.

Activating/Canceling Call Forwarding

Specify a forwarding number beforehand. Specify forwarding number in *Voice/Video call*, *Voice call*, or *Video call*.

- 1 Tap Menu → *Settings* → *Call settings* → *Optional services* → *Voice mail/Call forwarding* → *Call forwarding On/Deactivate all*
 - If Call Forwarding is canceled, confirmation appears. Choose **Yes** to end operation.


Note

- Voicemail is also canceled.

- 2 *Voice/Video call*, *Voice call*, or *Video call*

- 3 *Always (0 sec.)* or *No reply (5 to 30 sec.)*

4 Set forwarding number

- **To Use Previous Forwarding Number**
Last number → Select number
- **To Enter from Phone Book**
Phonebook → Search and select entry ( P.2-16) → Select number
- **To Enter Number Directly**
Enter number → Enter phone number

- If *No reply (5 to 30 sec.)* is set, answer call within set ring time to cancel forwarding, or tap Forward to forward immediately.

Advanced

Settings

- Confirm Current Voicemail/Call Forwarding Settings ( P.14-5)

Call Waiting

Separate subscription is required to use this service. For use with Voice Calls only.

Activating/Canceling Call Waiting

1 Tap Menu → *Settings* → *Call settings* → *Optional services* → *Call waiting*

2 On/Off


- For current status, select *Get status* after **2**.

Accepting a Second Call

If a call arrives during a call, interrupt tone sounds and notice appears. Put first call on hold to answer.

1 After interrupt tone sounds, hold Press & Hold to unlock

2 Tap Answer (Hold call)/Answer (End call)

- Alternatively, press .
- To put current call on hold to answer second call, tap Answer (Hold call).
- To end current call to answer second call, tap Answer (End call).

3 To switch parties, tap Group call func

4 Switch party

■ **To Switch to Group Call**

Change to group call

■ **To Switch Party**

Change to private call

■ **To End Selected Call**

End each call →  beside the other party to finish talking with

■ **To End All Calls**

End all calls

- If one party ends a call with another on hold, tap **Hold** to talk with party on hold again.
- If Call Forwarding or Voicemail is set and second call is not answered, it is forwarded to a forwarding number or Voicemail Center.
- If forwarding condition is set to *Always*, Call Waiting is unavailable.


Conference Call

Talk with up to six parties simultaneously. This service requires separate subscription.

Placing New Call During a Call

Connecting a second call places first one on hold.

1 During a call, tap Dial → **Enter phone number**

- To select from Phone Book, tap Phonebook → Search and select entry (☎P.2-16) → Select phone number.
- To select from Favorites, tap More → *Favorites* → Select  to call.

2  / *Call*

- Calling a third party is only possible with Conference Call (not available if a party is on hold).


Switching Party

1 While connected with multiple parties, tap Group call func
→ *Switch*

- If connected party ends call in Conference Call, party on hold remains on-hold. To talk with party on hold, tap **Hold** to cancel hold.

Talking with All Parties

1 While connected with multiple parties, tap Group call func → *Change to group call*

- To talk with one party again, tap Group call func → *Change to private call* → 

- To end all calls, tap Group call func → Select **End all calls**.
- When one party ends the call during Conference Call, continue talking with remaining parties.

Advanced

 **Advanced Settings**  P.3-20

- Ending Selected Call

Call Barring

Bar outgoing/incoming Voice Calls, Video Calls or SMS by conditions listed below.

Item	Description
Outgoing call	
Bar all outgoing calls	Disables calling or sending SMS to all but emergency numbers.
Bar all international calls	Disables outgoing international calls and SMS.
Bar international calls	Disables calling or sending SMS to numbers outside of Japan and the country where you are.
Incoming call	
Bar all incoming calls	Blocks all incoming calls and SMS.
Bar all roaming calls	Blocks all incoming international calls and SMS.

- Setting Call Barring requires Network Password (four-digit number specified at subscription).
- If a call is placed while Call Barring is active, a message appears indicating that Call Barring is active. The message may appear after a while depending on service area.

Note

- If incorrect Network Password is entered three consecutive times, Call Barring is disabled. In this case, change Network Password and Center Access Code (Network Password). For details, contact SoftBank Mobile Customer Center, General Information (☎P.15-31).
- If Call Forwarding or Voicemail is active, **Bar all outgoing calls** and **Bar All incoming calls** cannot be set (Optional Services override Call Barring settings).

Restricting Outgoing/Incoming Calls

Bar outgoing/incoming calls/transmissions by type (Voice Calls, Video Calls, SMS).

- 1 Tap Menu → *Settings* → *Call settings* → *Optional services* → *Call barring*
- 2 Select a restriction type
 - For Outgoing Calls
Outgoing call → *Bar all outgoing calls*, *Bar all international calls*, or *Bar international calls*
 - For Incoming Calls
Incoming call → *Bar all incoming calls* or *Bar all roaming calls*
- 3 *On or Off*
- 4 Enter Network Password → Tap OK

Canceling All Barring

Cancel all barring for outgoing or incoming calls.

- 1 Tap Menu → *Settings* → *Call settings* → *Optional services* → *Call barring*
- 2 *Cancel all barring*
- 3 Enter Network Password → Tap OK → *Yes*

Checking Call Barring Status

- 1 Tap Menu → *Settings* → *Call settings* → *Optional services* → *Call barring*
- 2 *Get status* → *All outgoing calls*, *All international calls*, *International calls*, *All incoming calls*, or *All roaming calls*

Caller ID

Show or hide your own phone number.

Showing & Hiding Caller ID


- 1 Tap Menu → *Settings* → *Call settings* → *Show my number*
- 2 *On or Off*

- After 1, select *Get status* to confirm current setting.
- Regardless of *Show my number* setting, you can show/hide your phone number every time you place a call (➔P.3-18).


Advanced Settings

Voice Call

Saving Entered Phone Number to Phone Book

 (1 + seconds) → Enter a phone number including area code → **Add** → (📞P.2-21 Entering & Saving Phone Number)

Showing/Hiding Your Number for a Call



 (1 + seconds) → Enter a phone number including area code → Tap More

■ To Hide Your Own Number

Hide my ID → 

■ To Show Your Own Number

Show my ID → 

- Otherwise, **Show my number** setting applies.
- Alternatively, press  (1 + seconds) → Enter **184, 186** → Enter phone number →  to show/hide your number.

Sending New Message to Entered Number

 (1 + seconds) → Enter a phone number → Tap More → **Create message** → **S! Mail** or **SMS** → (📞P.4-4 S! Mail , P.4-6 SMS )

Switching to Speakerphone

During a call, **Speaker** → **Yes**

- To cancel Speakerphone, tap Speaker again during a call.

Setting Mute

During a call, **Mute**

- During a call, tap **Mute** to switch to a normal call.

Switching Headset/Phone

During a call, **Headset**


- Appears when Bluetooth®-compatible headset is in use.
- To talk without headset, during a call, tap **Headset**.

Talking in Low Voice

During a call, **Whisper**

- With Whisper, your voice is amplified on other party's phone.
- During a call, tap **Whisper** again for normal call.

Searching Phone Book during Call

During a call, tap Phonebook → (📞P.2-16 Entry Search )

Cutting Off Noise

During a call, tap Clear talk → **On** or **Off**

Using Functions during Call

During call, tap More

■ To Send Push Tones

Send DTMF → Enter digits → Tap Send

■ To View Favorites

Favorites → (📞P.3-5)

■ To View Call Log Records/Ranking

Call log → (📞P.3-8)

■ To View Account Details

Account Details → (📞P.1-12)

■ To View Calendar

Calendar → (📞P.10-4)

■ To View Memo

Notepad → (📞P.10-11)

■ To View Message Menu

Messaging → (📞P.4-1)

■ To View Menu in Yahoo! Keitai

Yahoo! Keitai → (📞P.5-3)

■ To View Menu in PC Site Browser

PC site browser → (📞P.5-4)

■ To View Alarm

Alarms → (📞P.10-3)

■ To Calculate with Calculator

Calculator → (📞P.10-11)

■ To Convert Currency/Units


Converter → (📞P.10-14)

■ To Add Words/Phrases to User's Dictionary

Dictionary → (📞P.10-17)

Video Call

Showing/Hiding Caller ID


 (1 + seconds) → Enter a phone number including area code → Tap More

■ To Hide Phone Number

Hide my ID → Tap Video call

■ To Show Phone Number

Show my ID → Tap Video call

- Alternatively, press  (1 + seconds) → Enter **184, 186** → Enter phone number → Tap Video call to show/hide your number.

Setting Outgoing/Incoming Images

■ To Toggle Sub Camera/External Camera

During Video Call, 

■ To Toggle My Image Pause/Play

During Video Call,  / 

■ To Enlarge/Reduce My Image

During Video Call,  → Adjust size

■ To Adjust Outgoing Image Brightness

During Video Call,  → Adjust brightness

■ To Adjust Outgoing Image Color

During Video Call,  → Select an item

■ To Toggle My Image

During Video Call, tap More → *My image* → *Camera/Alternative picture/Send picture*

- If select *Send picture*, select *Pictures/Digital camera* → Select image → Tap OK.

■ To Toggle My Image/Incoming Image Position

During Video Call, tap More → *Switch screen*

■ To Toggle Incoming Image Pause/Play

During Video Call, tap More → *Pause incoming image/Play incoming image*

■ To Set Alternative Image

During Video Call, tap More → *Settings* → *Alternative picture* → *Preset picture/Pictures/Digital camera*

- To set preset, *Preset picture* → Tap Set.
- To select image from Data Folder, *Pictures/Digital camera* → Select image → Tap Set.

■ To Adjust Incoming/Outgoing Video Quality

During Video Call, tap More → *Settings* → *Incoming video quality/Outgoing video quality* → Select an item

■ To Set Hold Picture

During Video Call, tap More → *Settings* → *Hold settings* → *Hold during call/Hold answer* → *Preset picture/Pictures/Digital camera*

- To set preset, *Preset picture* → Tap Set.
- To select image from Data Folder, *Pictures/Digital camera* → Select image → Tap Set.

■ To Set Weather to Show My Image

During Video Call, tap More → *Settings* → Under *Show my image, On or Off*

- Setting is not applied to current Video Call.

Setting Mute

During Video Call, tap Mute/Unmute

- Alternatively, during Video Call, tap More → *Settings* → Under *Mute my voice, On or Off*

Switching to Speakerphone

During Video Call, tap Speaker On → *Yes/Tap Speaker Off*

- Alternatively, during Video Call, tap More → *Settings* → Under *Speaker, On* → *Yes/Off*.

Putting a Video Call on Hold

During Video Call, tap Hold

- Image set in *Hold during call* is sent while on hold and neither party can hear the other's voice.
- To reconnect the call, tap Retrieve.

Transferring Headset/Handset Earpiece

During Video Call, tap More *Transfer to headset/Transfer to phone*

- Appears when Bluetooth®-compatible headset is in use.

Adjusting Video Call Backlight Setting

During Video Call, tap More → *Settings* → Under *Backlight, On or Off*

- Set Backlight during Video Call. When *Off* is set, Display becomes dim.

Adjusting Call Retry Setting

During Video Call, tap More → *Settings* → *Retry with* → Select an item

Setting Auto Answer





During Video Call, tap More → **Settings** → **Auto answer**

■ To Activate/Cancel Auto Answer

Under **On/Off, On** or **Off**

■ To Specify Parties to Set Auto Answer

Auto answer list → Tap Add → **Phonebook/Call log/Direct input**

- If select **Phonebook**, enter Phone Password → Tap OK → Search and select entry (ⓅP.2-16)
- If select **Call log**, enter Phone Password → Tap OK →  /  /  /  → Select a log
- If select **Direct input**, enter Phone Password → Tap OK → Enter phone number

■ To Delete Entry in Auto Answer List

Auto answer list → Tap Delete → Check phone number → Tap Delete → **Yes**

Operating Each Function during a Call

During Video Call, tap More

■ To Send Push Tones

Send DTMF → Enter digits → Tap Send

- To search Phone Book, select **Send DTMF** → Tap Phone book → Search and select entry (ⓅP.2-16) → Tap Send.

■ To Create & Save Text Memo in Video Call

Notepad → **Add new** → Enter text → Tap Category field → Select category → Tap Save

■ To Search Phone Book Entry

Phonebook → (ⓅP.2-16 Entry Search **3**)

■ To Send Message

Create message → **S! Mail** or **SMS** → (ⓅP.4-4 S! Mail **2**, P.4-6 SMS **2**)

Call Log Records/Ranking






Messaging from Call Log Records

 →  /  /  /  → Select a record →  → **S! Mail** or **SMS** → (ⓅP.4-4 S! Mail **5**, P.4-6 SMS **5**)

Viewing Phone Book Entry Details via Call Log

 →  /  /  /  → Select a record → Tap View phonebook

Adding Call Log Record Numbers to Phone Book

 →  /  /  /  → Tap Add to phonebook → (ⓅP.2-16 Saving Entries from Call Log Records **4**)

Adding Call Log Record Numbers to Black List

 →  /  /  /  → Select a record → Tap Add to black list → **Yes**

Conference Call

Putting All Calls on Hold

During Conference Call, tap Group call func → **Hold all**

- To cancel on-hold, tap Group call func and select **Retrieve**.

Ending Selected Call

During Conference Call, tap Group call func → **End each call** →  to disconnect