

Making/Answering Voice Calls2-2

Making Voice Calls	2-2
Outgoing Call Functions	2-3
Emergency Calls (110, 119, 118)	2-4
Answering Voice Calls	2-5
Incoming Call Functions	2-5
Making Voice Clear (Shikkari Talk)	2-5

Making/Answering Video Calls2-6

Note	2-6
Video Call Window	2-6
Making Video Calls	2-7
Answering Video Calls	2-8

International Calls2-9

Calling Abroad from Japan	2-9
Calling while Abroad	2-9
Global Roaming Settings	2-10

Engaged Call Functions2-11

Operations Available during a Voice Call	2-11
Operations Available during a Video Call	2-12

Call Log2-13

Viewing Call Logs	2-13
Calling from Call Log	2-14
Call Log Operations	2-14

Answer Phone2-15

Using Answer Phone	2-15
Recording Calls/Playing Recordings	2-16
Additional Settings	2-16

Optional Services2-17

Overview	2-17
Call Forwarding	2-17
Voice Mail	2-18
Call Waiting	2-20
Call Barring	2-20
Caller ID	2-21

Making/Answering Voice Calls

Making Voice Calls

Before Calling

- Confirm signal strength (👉 P.1-10)
- If any of these indicators appear:
 OUT 📶 📶 📶 📶 📶
 → Calls cannot be made (👉 P.1-10, P.1-11, P.19-12)

1 Enter a phone number

- Include area code for all numbers.

080XXXXXXXXX

2 Confirm the number, then

- To adjust volume: 

3 to end call

Call Time appears.

Correcting Misentries

Use  to place cursor at digit to delete, then .

Press and hold  to delete the digit and all digits to the right of cursor.

Note

- Do not cover antenna area (👉 P.1-7) with hand or sticker; may weaken signal strength and cause calls/transmissions to be unavailable.
- Calls cannot be made in Viewer Position except when Earphone Microphone is connected.

Tip

- Operations Available during a Voice Call (👉 P.2-11)
 - Calling from Call Log (👉 P.2-14)
 - Saving Entered Numbers to Phone Book (👉 P.4-5)
 - Making Calls from Phone Book (👉 P.4-6)
- #### Settings
- Call Time & Call Cost (👉 P.18-9)
 - Set Handset Response when Closed during Call (👉 P.18-10)

Outgoing Call Functions

Showing/Hiding Caller ID

- > Enter number → [Menu] → *Notify caller ID* → OFF or ON
- To cancel setting: [Menu] → *Notify caller ID* → *Cancel prefix*
- Setting Caller ID on/off (Caller ID: P.2-21)

Adding Prefix to Phone Number

■ Save Prefix

- > **Main Menu** ► **Settings** ► **Call Settings** ► **Prefix**
 - Highlight *<Not Recorded>* ► [Edit] ► Enter a name
 - Enter a prefix number
- Up to seven entries can be saved.
- To check entries: Select a saved prefix.
- To delete entries: Highlight a prefix → [Menu] → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → YES

■ Make Calls Using Prefix

- > Enter number → [Menu] → *Prefix numbers* → Select an entry → Voice Calls: / Video Calls: [V. Call]
 - Alternatively, in detail window of Phone Book, Redial, Outgoing Call Logs or Incoming Call Logs, [Menu] → *Prefix numbers* → Select an entry → Voice Calls: / Video Calls: [V. Call]
- Example: Save "186" and "184" as prefixes, and add them to phone numbers to show/hide your caller ID when making calls.

Sending Touch-tone Signals

Send touch-tone signals for services such as reserving tickets, checking bank balance, etc. Save number strings to be sent as a touch-tone signal. Use P (pause) to separate numbers when saving.

■ Save Pause Dial

- > **Main Menu** ► **Settings** ► **Phone Settings** ► **Pause Dial**
 - [Edit] → Enter a number string
- To enter a pause (p): Press and hold
- To delete: In Pause Dial window, [Menu] → *Delete* → YES

■ Send Pause Dial

- > **Main Menu** ► **Settings** ► **Phone Settings** ► **Pause Dial**
 - [Send] ► Enter a phone number ► ► Once line is connected, press [Send]
- Number string is sent each time [Send] is pressed.
- To send all number strings at one time: Once line is connected, press and hold → *Send at one time*

Emergency Calls (110, 119, 118)

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Coast Guard) even when some handset restrictions are active.

Calls Cannot be Made in Following Cases:

- When **Set Max Cost Limit** is **ON** and charge limit is reached
- In PIN/PIN2, PUK/PUK2 entry window

Emergency Positioning Request


When an emergency call is made from a mobile phone, location is reported to first response agencies such as the police.

- Location information may be inaccurate due to location or signal conditions. Describe location or nearby landmarks.
- Base Station Positioning System is accurate within 100 meters to 10 kilometers. Location information from distant base stations may be inaccurate.
- Function available where first response agencies have completed system installation.
- Dialing 184 before 110, 119 or 118, cancels location report. However, first responders may obtain location information for immediate and serious threats to life.
- Not available for international roaming.
- Requires no separate subscription or transmission fees.

Answering Voice Calls

When a Call Arrives...

Handset rings; Notification Light flashes.

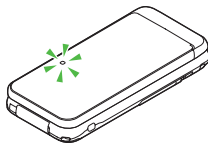

If Caller ID is sent, number appears in Display; if saved in Phone Book, caller's name appears.

When an International call arrives,  appears at upper left of caller's phone number.

1 to talk



- To adjust volume: 

2 to end call

Call Time appears.

Adjust Ringer Volume




> While handset is ringing, 

- Volume adjustment is disabled in following cases:
 - When Manner Mode is active ( P.1-17)
 - While Ringer Volume is set to **Escalating Tone** ( P.18-2)

Note







- When Caller ID is not sent, **Withheld** appears.
- Calls cannot be received in Viewer Position except when Earphone Microphone is connected.

Tip

- Operations Available during a Voice Call ( P.2-11)
- Rejecting Unknown Callers ● Rejecting Calls without Caller ID ( P.12-13)
- Settings** ● Change Answer Setting ● Answer Calls by Opening Handset ( P.18-8)

Incoming Call Functions

Following operations are available for incoming calls.

Place Call on Hold	> 
Answer Phone	> 
Call Rejection	>  [Menu] → Call Rejection <ul style="list-style-type: none"> ● Rejecting Unknown Callers/Rejecting Calls without Caller ID ( P.12-13)
Call Forwarding	>  [Menu] → Call Forwarding <ul style="list-style-type: none"> ● Activate Call Forwarding ( P.2-17) beforehand to forward incoming calls to a preset number. If Call Forwarding is not active, call is rejected.

Making Voice Clear (Shikkari Talk)

<Default> ON

Shikkari Talk adjusts earpiece sound according to surrounding noise.

Main Menu ▶ Settings ▶ Call Settings ▶ Shikkari Talk

1 ON or OFF

Making/Answering Video Calls

Exchange video/sound with video call-compatible mobiles.


- Send Alternative Image (still image) or Video Image via Camera. By default, Outgoing Image is set to Alternative Image.

Note

- Only available within 3G network coverage.
- 942P is 3G-324M compliant; calls connected via different systems may be disconnected (charges apply).
- Increasing Speaker volume may cause interference. Decrease volume or use Earphone Microphone.
- Handset may become warm during Video Call. This is not malfunction.
- When incoming/outgoing sound or image fails, try calling again.
- When handset is warm, switching to Video Image may be disabled or Video Image may switch to Alternative Image.

Video Call Window

Example: Outgoing Video Call by Default

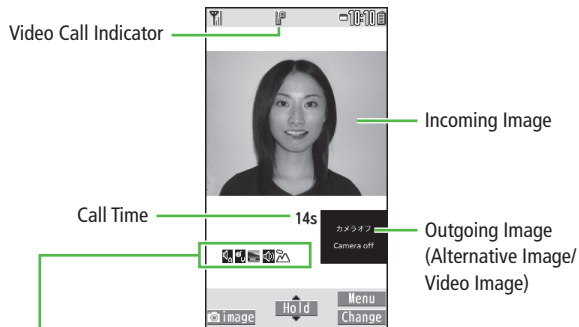

Indicators

- | | |
|------------------------------------|------------------------------------|
| : Incoming/Outgoing Sound OK | : Speaker ON |
| (Gray): Incoming/Outgoing Sound NA | : AV output |
| : Incoming/Outgoing Image OK | : During Bluetooth® handsfree call |
| (Gray): Incoming/Outgoing Image NA | : Close-up |
| : Video ON | : Landscape |
| : Alternative Image ON | : Night mode |

- Display appearance may vary by settings/conditions.

Making Video Calls

Before Calling

- Confirm signal strength (👉 P.1-10)
- If any of these indicators appear:

OUT 📶 🔒 📶 Ⓜ


→ Video Calls cannot be made (👉 P.1-10, P.1-11, P.19-12)

1 Enter a phone number

080XXXXXXXXX

2 Confirm the number, then [V. Call]

When answered, outgoing and incoming images appear; other party's voice sounds via Speaker.

- To adjust volume: 

3 to end call

Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker (👉 P.2-12).

Tip


- Outgoing Call Functions (👉 P.2-3)
 - Operations Available during a Video Call (👉 P.2-12)
 - Calling from Call Log (👉 P.2-14)
 - Other Ways to Add New Entries (👉 P.4-5)
 - Making Calls from Phone Book (👉 P.4-6)
- Settings**
- Outgoing Image
 - Switch to Voice Call when Video Call Fails (👉 P.18-12)


Answering Video Calls

When a Video Call Arrives...

Handset rings; Notification Light flashes.

If Caller ID is sent, number appears in Display; if saved in Phone Book, caller's name appears.

When an International call arrives,  appears at upper left of caller's phone number.

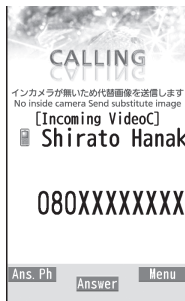


1 

Alternative Image is sent.


- To send Video Image:

 [image]

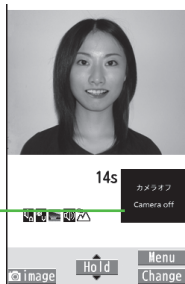

2  to end call

Note

- Other party's voice sounds via Earpiece in Manner Mode; activate Speaker ( P.2-12).


Tip

- Adjust Ringer Volume ● Incoming Call Functions ( P.2-5)
- Operations Available during a Video Call ( P.2-12)

International Calls

Calling Abroad from Japan

- Application not required. For details, go to:
http://mb.softbank.jp/en/global_services/call/

- 1 Enter a phone number
- 2  [Menu] → *Int'l dial assist*
Country/region code list appears.

- 3 Select a country/region





4 Voice Calls



Video Calls




■ Enter Country/Region Code Directly

- >  → Press and hold  to display + (IDD Prefix) → Enter a country/region code → Enter a number (omit first 0)
→ Voice Calls:  / Video Calls:  [V. Call]
- Do not omit leading 0 to call Italy (country code: 39).

Calling while Abroad

- May require application to Global Roaming Service. For details, go to:
http://mb.softbank.jp/en/global_services/global_roaming/

Example: When Roaming Dial Assistant is ON

- Roaming Dial Assistant ( P.2-10) is set to **ON** and **Japan** by default.

1 Voice Calls

Enter a phone number → 

Video Calls

Enter a phone number →  [V. Call]

- 2 Select an item (See below)

Item	Operation/Description
Call to Japan*	Call Japan
Call to set code*	Call a country/region set for <i>Roaming Dial Assistant</i>
As is Call	Manually enter number to call Select when calling within the country/region

* First 0 is replaced by IDD Prefix and country/region code (e.g. +81). (When calling Italy, +39 is added before first 0.)

- Confirmation window appears for the first time. Select **NO** to set Roaming Dial Assistant to **OFF**.

Note

- IDD Prefix and country/region code can be manually entered in Step 1. Alternatively, save IDD Prefix and country/region code in Phone Book entries.

Global Roaming Settings

From ► Main Menu ► Settings ► International Call

International Call Settings

> **Int'l Dial Assist** → Select an item (See below)

Item	Operation/Description
Roaming Dial Assistant	Automatically inserts prefixes (IDD Prefix and country code) > ON or OFF (→ For ON , select a country/region)
Country/Area Code	Save up to 27 country/region codes > Highlight <Not Recorded> → [Edit] → Enter a country/region name → Enter a country/region code ● To view an entry: Select a saved country/region ● To delete: Highlight a country/region → [Menu] → Delete this or Delete all (→ For Delete all , enter Phone Password) → YES
IDD Prefix	Edit IDD Prefix. IDD Prefix is set to 0046010 by default > [Menu] → Edit → Edit IDD Prefix

Network Mode

<Default> Automatically

> **Select Network** → Select an item (See below)

Item	Operation/Description
Automatically	Handset automatically selects 3G network in Japan, and available network (3G or GSM) when abroad.
Manually	> Select an item <ul style="list-style-type: none"> · 3G/GSM: 3G/GSM service area in Japan or abroad. Handset selects an available network automatically. · 3G: 3G service area in Japan or abroad. · GSM: GSM service area abroad. Unavailable in Japan.

● **Automatically** is recommended.

Select Operator

<Default> Auto

> **Select Operator** → Select an item (See below)

Item	Operation/Description
Auto	Select an operator automatically
Manual	Select an operator manually > Select an operator <ul style="list-style-type: none"> ● Operators with X are not available. ● To show operator list: [Update]
Network Re-search	Search available networks <ul style="list-style-type: none"> ● When Auto is set, handset selects an available operator automatically. When Manual is set, operator list appears.

■ Operator Priority for Automatic Search

> **PLMN Setting** → [Menu] → Select an item (See below)

Item	Operation/Description
Add your network	Save currently connected operator > [Finish] → YES
Add from list	> Select an operator → [Set] → Select a network type → [Finish] → YES ● To search operators by country/region: [Search] → Select a country/region (To search again in country/region list: [Search] → Enter a country/region name)
Direct input	Save unlisted operators by entering country/region code and operator code > Enter country/region code (3 digits) and operator code (2 to 3 digits) → Select a network type → [Finish] → YES
Change priority	> Select a priority → [Finish] → YES
Delete this/ Delete all	> YES → [Finish] → YES

■ View Operator Name in Standby

<Default> OFF

> **Operator Name** → ON or OFF















- When **ON** is set, Clock Position is set to **Pattern 1** (P.18-5).







Engaged Call Functions

Operations Available during a Voice Call

Adjust Volume	> ● Adjust volume within two seconds. ● Adjusted volume is retained even after calls end or handset is turned off.
Place Call on Hold	> [Hold] ● To resume call:
Speaker ON/OFF	Toggle Speaker or Earpiece ●
Record Conversation	Record for about three minutes per call > [Rec] ● To end recording: [Stop]/ ● To play back recorded data: P.2-16
Toggle Manner Mode	> Press and hold #
Toggle Handset/ Bluetooth®	Toggle handset or Bluetooth® device > Press and hold

Operations Available during a Video Call

Adjust Volume	<p>> </p> <ul style="list-style-type: none"> ● Adjust volume within two seconds. ● Adjusted volume is retained even after calls end or handset is turned off.
Place Call on Hold	<p>>  [Hold]</p> <ul style="list-style-type: none"> ● To resume call: 
Speaker ON/OFF	<p>Toggle Speaker or Earpiece</p> <p>> </p>
Record Conversation	<p>Record up to five calls for about 20 seconds each</p> <p>>  [Menu] → V. Call recording</p> <ul style="list-style-type: none"> ● To end recording:  [Stop] ● To play back recorded data:  P.2-16
Video/ Alternative Image	<p>Toggle Video Image and Alternative Image</p> <p>>  [image]/[Subst.]</p>
Toggle Image Sizes	<p>>  [Change]</p>
Zoom	<p>Adjust zoom level for Video Image to be sent</p> <p>>  (zoom in) or  (zoom out)</p>
Use Photo Light	<p>Illuminate Photo Light while sending Video Image</p> <p>>  [Menu] → Photo light → ON or OFF</p>
Toggle Manner Mode	<p>> Press and hold </p>
Toggle Handset/ Bluetooth®	<p>Toggle handset or Bluetooth® device</p> <p>>  [Menu] → Talk on BT/Phone → Bluetooth or Phone</p>

Backlight Setting	<p>>  [Menu] → Back light → Constant light or 15 seconds light</p>
Video Call Setting	<p>>  [Menu] → V. Call settings → Follow the steps for selected item ( P.18-13)</p>
LCD AI	<p>Activate/deactivate auto image compensation</p> <p>>  [Menu] → LCD AI → ON or OFF</p>
Account Details	<p>>  [Menu] → Account details</p>
Key Guide	<p>>  [Menu] → Key guide</p>

Call Log

Incoming and outgoing call records appear here. Use these records to call back.

Redial	Up to 30 outgoing call records (Voice and Video) are saved. Older records of same number are deleted.
Outgoing Call Logs	Up to 30 outgoing call records (Voice and Video) and up to 30 outgoing transmission records (64K data and packet transmission) are saved. Older records of same number are also retained.
Incoming Call Logs	Up to 30 incoming call records (Voice and Video) and up to 30 incoming transmission records (64K data transmission) are saved. Older records of same number are also retained.

Indicators for Redial/Outgoing Call Logs/Incoming Call Logs

Dialed/received Voice Calls	Dialed calls of 64K data transmission
* Missed Voice Calls	Received calls of 64K data transmission
Dialed/received Video Calls	* Missed calls of 64K data transmission
* Missed Video Calls	Dialed calls of packet transmission
New messages recorded on Answer Phone	Received calls of 64K data/packet transmission when no external device is connected
Dialed/received international Voice Calls	
* Missed international Voice Calls	
Dialed/received international Video Calls	
* Missed international Video Calls	
* Calls received while handset is off, out-of-range, engaged, etc. (P.2-19)	


* Unchecked calls are highlighted.

Viewing Call Logs

1 Redial



Outgoing Call Logs



Outgoing Call Logs

Incoming Call Logs



Records appear.

- To show Received/Sent address logs:



	Redial
1	7/24 10:24 PHONE
	Aoki Taro
2	7/24 10:20 PHONE
	Suzuki Goro
3	7/24 10:10 PHONE
	Shirato Hanako

V. Call | Select | Menu
Change

Redial

View Missed Calls

> Main Menu ▶ Phone ▶ Call Log ▶ Incoming Call Logs

▶ Missed Calls

- **Unknown Calls** appears in Call Log for unchecked calls.

Note

- Newest record appears at top of list. Names appear if saved in Phone Book.
- Call Log records remain even if handset is turned off.
- When the maximum number of records are saved, oldest is deleted first.
- Alternatively, view Incoming Call Logs from **Main Menu**
▶ Phone ▶ Call Log ▶ Incoming Call Logs ▶ All Calls


Calling from Call Log

1 Open Call Logs (☞ P.2-13)

2 Voice Calls

Highlight a phone number or name → 

Video Calls

Highlight a phone number or name →  [V. Call]

International Calls

Select a phone number or name →  [Menu] →



Int'l dial assist → Select a country/region →

Voice Calls: /Video Calls:  [V. Call]

Call Log Operations

Highlight a call record and press  [Menu].

- Available functions vary by selected log/record.

Item	Operation/Description
Notify caller ID	Notify or withhold your Caller ID (☞ P.2-3)
Prefix numbers	Add a prefix to phone number before dialing > Select an entry → 
Int'l dial assist	Add international dialing prefix > Select a country/region → 
Character size	Toggle font sizes
Add to Phone Book	Save number to Phone Book (☞ P.4-5)
Ring time¹	Show ring time (missed calls)
Add shortcut icon	Create a shortcut (☞ P.1-21)
Compose message	Create a message (☞ From Step 4 on P.14-5)
Compose SMS²	Create SMS (☞ From Step 4 on P.14-8)
Received address/Sent address	Show Received/Sent address log
Delete this/ Delete selected/ Delete all	> Delete record(s) in selected list

¹ Available only for Incoming Call Logs

² Message can be sent to SoftBank handsets only

Answer Phone


Using Answer Phone

Record up to five voice messages or up to two video messages (up to 20 seconds per message) on handset.

- When Answer Phone is active, - (Voice Call) or - (Video Call) appears in Standby (Voice Calls are prioritized).
- Unavailable when: handset is off or in Offline Mode; OOT appears. Use Voice Mail (P.2-18).
- Change outgoing message and ring time: P.2-16

Activating/Canceling Answer Phone

- 1 Press and hold
 - To toggle settings, repeat operation.

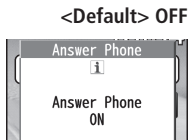


- Redirect a Call to Answer Phone
- > [Ans. Ph]

Note

- Alternatively, activate/cancel from **Main Menu** ▶ **Tools** ▶ **Sound Recorders** ▶ **Answer Phone Setting** ▶ **ON** or **OFF**
- When full, new messages cannot be recorded even if Answer Phone is activated. Delete old messages (Below, P.2-16).
- While Manner Mode (set for User Mode) is active, Answer Phone setting for User Mode (P.18-7) is prioritized.

Playing Messages from Information Window

When a new message is recorded, Information window (P.1-20) opens in Standby.

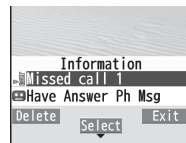

- 1 Select an item
- 2 Select a message
Playback starts.
After playback ends, Information window disappears.




Note

- Alternatively, press in Standby (for Voice Call messages) or **Main Menu** ▶ **Tools** ▶ **Sound Recorders** ▶ **Voice Call Data** or **Video Call Data** ▶ Select a recording
- To delete a message during playback, press [Erase] → YES.

Recording Calls/Playing Recordings

- Record one Voice Call (up to three minutes).
- Record up to five Video Calls (up to 20 seconds per message).

Recording Voice Calls

- 1 During a call,  [Rec]
Recording starts.
- 2 To end recording,  [Stop] or 

Recording Video Calls

- 1 During a call,  [Menu] → *V. Call recording*
Recording starts.
- 2 To end recording,  [Stop]

Playing Recordings (Call Data)

Main Menu ► Tools ► Sound Recorders

- 1 **Voice Calls**
Voice Call Data → *Call Data*
- Video Calls**
Video Call Data → Select a recording
Playback starts.


Additional Settings

From ► Main Menu ► Tools ► Sound Recorders

Select Outgoing Message/Set Ring Time

- > *Answer Phone Setting* → *ON* → Select an outgoing message → Enter ring time
- When Answer Phone and an Optional Service (Voice Mail or Call Forwarding) are both active, function with shorter ring time takes priority. For example, if Answer Phone ring time is 18 seconds and Optional Service is 20 seconds, Answer Phone responds first. (Priority may change due to signal conditions.)
- Regardless of priority setting, Call Forwarding or Voice Mail takes priority when Answer Phone has reached maximum number of messages.

Delete Messages/Recordings

- > *Voice Call Data* or *Video Call Data* → (Highlight a recording →  [Menu] → *Erase this, Erase rec. msg., Erase Call Data** or *Erase all* → *YES*

* *Video Call Data* only

Optional Services

Overview

- For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Call Forwarding (☞ Right)	Forward unanswerable calls to a preset number when handset is off, out-of-range, etc.
Voice Mail (☞ P.2-18)	Unanswered calls are forwarded to Voice Mail Center as set or when handset is off, out-of-range, engaged, etc. <ul style="list-style-type: none"> Missed Call Notification (☞ P.2-19)
Call Waiting* (☞ P.2-20)	Place the current call on hold and answer a second, or alternate between calls.
Call Barring (☞ P.2-20)	Restrict incoming/outgoing Voice Calls/Video Calls and SMS messages.
Caller ID (☞ P.2-21)	Show or hide your number when calling.


* Separate subscription required.

Call Forwarding

- Call Forwarding and Voice Mail cannot be set simultaneously.
- When forwarding Video Calls, set a destination phone that supports 3G-324M standard video calls. If not, Video Calls are not forwarded.

Activating Call Forwarding

Main Menu ▶ **Settings** ▶ **Call Settings**
▶ **Voice Mail/Call Fwding** ▶ **Call Forwarding ON**

- Select a type
- Enter a destination phone number
 -  to select number from Phone Book.
- Select an item (See below)



Item	Operation/Description
Ringer ON	Forward missed calls > Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating > YES

■ **Check Call Forwarding Status**
> **Main Menu** ▶ **Settings** ▶ **Call Settings**
▶ **Voice Mail/Call Fwding** ▶ **Get Status**

■ Cancel Call Forwarding

- > **Main Menu** ▶ **Settings** ▶ **Call Settings**
 ▶ **Voice Mail/Call Fwding** ▶ **Deactivate All** ▶ **YES**

Note

- Toll free numbers and international call numbers cannot be saved as a destination number.
- When using Call Forwarding together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal condition).
- When **Ringer ON** is set, following operations are available while handset is ringing (within ring time):
 - To answer call: 
 - To forward call:  [Menu] → **Call Forwarding**

Voice Mail

- Calls are forwarded to Voice Mail Center via Call Forwarding function; Call Forwarding and Voice Mail cannot be set simultaneously.
- Voice Mail is not available for Video Calls.

Activating Voice Mail

- Main Menu** ▶ **Settings** ▶ **Call Settings**
 ▶ **Voice Mail/Call Fwding** ▶ **Voice Mail ON**

- 1 Select an item (See below)

Item	Operation/Description
Ringer ON	Forward missed calls > Select a ring time → YES
Ringer OFF	Forward all calls without ringing/vibrating > YES



■ Check Voice Mail Status

- > **Main Menu** ▶ **Settings** ▶ **Call Settings**
 ▶ **Voice Mail/Call Fwding** ▶ **Get Status**


■ Cancel Voice Mail

- > **Main Menu** ▶ **Settings** ▶ **Call Settings**
 ▶ **Voice Mail/Call Fwding** ▶ **Deactivate All** ▶ **YES**


Note

- When using Voice Mail together with Answer Phone, the function with shorter ring time takes priority (Priority may change due to signal condition).
- When **Ringer ON** is set, following operations are available while handset is ringing (within ring time):
 - To answer call: 
 - To forward call:  [Menu] → **Call Forwarding**

Checking Voice Mail Messages

Information window ( P.1-20) and  appear in Standby when new messages are recorded.

1 Select an item → **YES**

Follow voice guidance.
Information window and  disappear after messages are checked.



■ View Details

View callers' phone numbers and date/time Voice Mail messages were left before playing messages.

- Activate Missed Call Notification beforehand ( Right).
- >  → **Voice Mail Notif.** →  []

■ Delete Indicator

- > **Main Menu** ▶ **Settings** ▶ **Call Settings**
▶ **Voice Mail/Call Fwding** ▶ **Delete Voice Mail Icon** ▶ **YES**

Note

- Alternatively, check Voice Mail:
Main Menu ▶ **Settings** ▶ **Call Settings**
▶ **Voice Mail/Call Fwding** ▶ **Listen to Voice Mail** ▶ **YES**

Missed Call Notification

When Missed Call Notification function is active, Information window appears for calls missed while handset was off, out-of range, engaged etc.

- Available only when Voice Mail is active.


- Main Menu** ▶ **Settings** ▶ **Call Settings**
▶ **Missed Call Notifi.**


1 **YES**

Handset connects to the Network.
Follow voice guidance.

When Calls are Received while Missed Call Notification is Active...

Information window appears for missed calls when handset is turned on or comes into range.
Select information to view Missed Calls.

- **Had incoming call(s)** appears when Voice Mail messages are recorded ( Left).

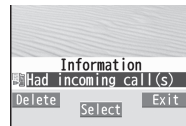

Call Waiting

Activating/Canceling Call Waiting

Main Menu ► Settings ► Call Settings ► Call Waiting

1 **Activate** or **Deactivate** → YES




Current status appears.

■ Check Call Waiting Status

> Main Menu ► Settings ► Call Settings ► Call Waiting
► Get Status

Answering Second Call

1 When tone sounds,

- Press  to alternate between calls.
- Press  to disconnect active call.
- When the party hangs up, active call ends.
- Press  to re-engage the party on hold.
- When a second call comes in while first call is on hold, hold status is canceled and first call resumes.


■ Reject Second Call

> When tone sounds,  [Menu] → Call Rejection

Note

- When Voice Mail or Call Forwarding is set to **Ringer ON** while Call Waiting is active, unanswered calls are transferred to Voice Mail Center or the forwarding number.
- When Voice Mail or Call Forwarding is set to **Ringer OFF**, Call Waiting is disabled.

Call Barring

- **Bar All Outgoing** and **Bar All Incoming** are not available when Call Forwarding or Voice Mail is active (Call Forwarding or Voice Mail takes priority).
- Security Code is required ( P.1-28).

Activating/Deactivating Call Barring

Main Menu ► Settings ► Call Settings ► Call Barring

1 Select an item (See below)

Item	Operation/Description
Bar All Outgoing	Restrict all non-emergency calls
Bar All Int'l	Allow only domestic calls
Bar Int'l	Restrict all international calls except to Japan
Bar All Incoming	Reject all calls
Bar All Roaming	Reject calls when outside Japan

2 **Activate** or **Deactivate** → **YES**

3 Enter Security Code

■ **Check Call Barring Status**

> After Step 1, **Get Status**

■ **Cancel All Call Barring**

> In Step 1, **Cancel All Barring** → Enter Security Code

■ **Change Security Code**

> In Step 1, **Set Security Code** → Enter current Security Code → Enter new Security Code → Reenter Security Code

Note

- Emergency numbers (110, 119, 118) are dialable even while Call Barring for outgoing calls is active.
- If call is attempted when Call Barring is active, warning message appears. It may take longer to appear in some areas. Check Call Barring settings if the message does not appear.

Caller ID

<Default> Network Set

Main Menu ► Settings ► Call Settings

► Show My Number ► Activate

1 **ON, OFF** or **Network Set**

- **Network Set** Caller ID setting varies by subscription.

■ **Check Caller ID Status**

> Main Menu ► Settings ► Call Settings ► Show My Number
► Check Setting

Note

- Alternatively, enter these numbers/symbols before the phone number to show or hide Caller ID:

Show: (1) (8) (6) or (*) (3) (1) (#)

Hide: (1) (8) (4) or (#) (3) (1) (#)

