

<b>Calendar</b> .....	<b>13-2</b>
Opening Calendar .....	13-2
Creating Calendar Events .....	13-2
Saving Holidays/Memorial Days .....	13-3
Viewing/Editing Calendar Event Details .....	13-4
Calendar Functions .....	13-4
<b>Tasks</b> .....	<b>13-5</b>
Saving a Task .....	13-5
Using Tasks .....	13-6
<b>Alarms</b> .....	<b>13-6</b>
Alarm Tone .....	13-6
Setting Alarm .....	13-7
<b>Calculator</b> .....	<b>13-8</b>
<b>Notepad</b> .....	<b>13-8</b>
Saving a Note .....	13-8
Notepad Functions .....	13-9
<b>Osaifu Keitai®</b> .....	<b>13-9</b>
Downloading Lifestyle-Appli .....	13-10
Activating Lifestyle-Appli .....	13-10
Reader/Writer Transactions .....	13-11
IC Card Lock .....	13-12
<b>Dictionary (Japanese)</b> .....	<b>13-13</b>

<b>Sound Recorders</b> .....	<b>13-14</b>
Voice Recorder .....	13-14
Voice Announce .....	13-14
<b>Bar Code Reader</b> .....	<b>13-15</b>
Scanning Barcodes .....	13-15
Viewing/Editing Scanned Data .....	13-16
Using Scanned Data .....	13-16
<b>Pedometer</b> .....	<b>13-17</b>
Activating/Deactivating Pedometer .....	13-17
Pedometer Functions .....	13-18

# Calendar

View by day, week or month; set Alarms for events.

## Opening Calendar

Main Menu ► Tools ► Calendar

Current month appears.

- When a date with Calendar events is selected, number of AM and PM events and up to three contents appear.
- Press [Prev.] or [Next] to show previous/next month calendar.
- To switch Month/Week view: P.13-4




Month View

## Creating Calendar Events

Save up to 1000 entries.

Main Menu ► Tools ► Calendar

- 1 to highlight a date → [New] → *Schedule*

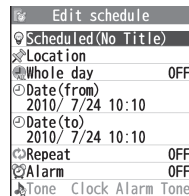

- 2 Select an item (See below)

Item	Operation/Description
Select icon/ Edit summary	> Select an icon → Edit subject
Edit location	> Enter location
Whole day setting	> <b>OFF</b> or <b>ON</b> ● When <b>ON</b> is set, Alarm goes off at 0:00 a.m.
Date (from)	> Enter start date and time
Date (to)	> Enter end date and time
Repeat	> Select a repeat type → (For <b>Select day</b> , check days →  [Finish])
Alarm	> Select an Alarm type (→ For <b>ON/Set time</b> , enter time) ● Alarm Tone:  P.13-6
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Contents	> Enter event description

### 3 [Finish]

#### Calendar Event Indicators

Following indicators appear in Calendar Window.

- (Blue): Morning event
- (Orange): Afternoon event
- (Underscore): Event that lasts for two days or longer
- Following indicators appear on Display.
  - : Alarm
  - : Monthly
  - : Daily
  - : Yearly
  - : Weekly

#### Note

- Calendar events between 00:00 on 2000/01/01 and 23:59 on 2037/12/31 can be saved on handset.
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set ( P.12-6).

## Saving Holidays/Memorial Days

Save up to 100 entries (one entry a day) each for Holidays or Memorial days.

Main Menu ► Tools ► Calendar

- 1 (Highlight a date →) [New] → *Holidays* or *Memorial days*
- 2 Select an item (See below)

Item	Operation/Description
Date setting	> Enter a date
Repeat	> Select a repeat type <ul style="list-style-type: none"><li>● <b>1 time</b> does not repeat Holidays/Memorial days events.</li></ul>
Edit holiday/anniversary	> Enter description

### 3 [Finish]

#### Indicators

Holidays appear in red.

Memorial days are marked with a red circle.

- Following indicators appear in Calendar/Calendar Event List Window:
  - : Holidays
  - : Memorial days
  - : Yearly repeat

## Viewing/Editing Calendar Event Details

Main Menu ► Tools ► Calendar

1  to select a date

2010/ 7/24(Sat)	
1	11:35~11:35 Scheduled
2	11:40~12:00 Shopping
3	12:30~13:00 Meal

Calendar Event List

2 Select an event

Detailed schedule appears.

- To edit:  [Edit] → Edit selected item (Schedule:  From Step 2 on P.13-2/ Holiday, Anniversary:  From Step 2 on P.13-3)

Schedule	
Summary	Scheduled
Whole day	OFF
Date (from)	2010/ 7/24(Sat) 11:35
Date (to)	2010/ 7/24(Sat) 11:35
Repeat	OFF
Alarm	OFF
Contents	Scheduled

Calendar Event Details




## Calendar Functions

From ► Main Menu ► Tools ► Calendar


### Functions Available in Calendar Window




> Highlight a date →  [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry (  P.13-2, P.13-3)

Item	Operation/Description
Weekly display/ 1 Month	Toggle Month/Week view
Icon display	Entries in category of selected icon appear > Select an icon
No. of schedules	Display number of saved Schedule, Holiday or Anniversary entries
Add shortcut icon	Create a shortcut (  P.1-21)
Send all Ir data	(  P.11-3)
AllIC transmission	(  P.11-5)
Delete past	Delete past entries/items, prior to highlighted date > Select a category to delete → <b>YES</b>
Delete all	> Enter Phone Password → Select an item → <b>YES</b>
Reset holidays	Restore deleted Holidays > <b>YES</b>

### Functions Available in Calendar Events List/Details

> Select a date (→ Select a Schedule, Holiday or Anniversary) →  [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry (  P.13-2, P.13-3)
Edit	Edit selected item (  Left)
Copy	Copy an entry to another day > Enter date and time to copy an entry to →  [Finish]
Handwriting Diary	Activate Handwriting Diary

Item	Operation/Description
Calendar display	Switch from Icon display to Calendar display
Icon display	Entries in category of selected icon appear > Select an icon
Set secret mode/ Release secret	Activate/deactivate Secret Mode > <b>YES</b> (→ For <b>Set secret mode</b> , enter Phone Password) ● Secret entries appear only in <b>Secret Mode</b> or <b>Secret Data Only</b> (↗ P.12-10).
Compose message	Insert event date and details to message text (↗ From Step 2 on P.14-4)
Send Ir data	(↗ P.11-3)
Send all Ir data	(↗ P.11-3)
IC transmission	(↗ P.11-5)
AllIC transmission	(↗ P.11-5)
Copy to microSD	Copy an entry to microSD Card > <b>YES</b> ● To display data on microSD Card: ↗ P.10-20
Delete this	> <b>YES</b>
Delete past	Delete past entries/items, prior to highlighted date > Select a category to delete → <b>YES</b>
Delete select	> Check entries to delete → [New] → <b>YES</b>

## Tasks

Make quick notes of task to manage in Task list.

### Saving a Task

Main Menu ▶ Tools ▶ Tasks

- [New] → Select an item (See below)
  - To check saved Tasks, select a Task. To edit, press [Edit] in detail window.

Item	Operation/Description
Edit Tasks	> Enter content
Due date	> Select how to enter due date → Enter due date ● Select <b>No date</b> to enter none.
Priority	> Select a priority level
Category	> Select a category
Alarm	> Select an Alarm type (→ For <b>ON/Set time</b> , enter time) ● Alarm Tone: ↗ P.13-6
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone










- [Finish]
  - When content is not entered, Tasks cannot be saved.

#### Note

- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (↗ P.12-6).

## Using Tasks


In Tasks window, press  [Menu] for following operations.

Item	Operation/Description
<b>New</b>	Create a new entry (  P.13-5)
<b>Edit</b>	Edit an entry (  P.13-5)
<b>Change status</b>	Change status indicator shown in Tasks list > Select a status (→ For <b>Completion</b> , select an item → Enter Completion date) ● Overdue status indicator turns red.
<b>Show by category</b>	> Select a category
<b>Sort/Filter</b>	Sort list by due date, entry order, status, etc.; show only specified tasks > Select a condition
<b>Add shortcut icon</b>	Create a shortcut (  P.1-21)
<b>Send Ir data</b>	(  P.11-3)
<b>Send all Ir data</b>	(  P.11-3)
<b>IC transmission</b>	(  P.11-5)
<b>AllIC transmission</b>	(  P.11-5)
<b>Copy to microSD</b>	Copy a Task to microSD Card > <b>YES</b> ● To display data on microSD Card:  P.10-20
<b>Delete this</b>	> <b>YES</b>
<b>Delete select</b>	> Check entries →  [Finish] → <b>YES</b>
<b>Delete completed</b>	Delete an entry in <b>Completion</b> status > <b>YES</b>
<b>Delete all</b>	> Enter Phone Password → <b>YES</b>

## Alarms

### Alarm Tone

When scheduled time arrives, alarm tone sounds for approximately five minutes and Notification Light illuminates.

- For Calendar events and Tasks, alarm message and animation corresponding to selected icon appear on Display.
- Alarm duration can be changed ( P.13-7)


### To Stop Alarm Tone for Calendar Events, Tasks or Alarm

Press any key.

### Missed Alarm

"Missed alarm" Information appears in Standby for alarms missed during Privacy Key Lock, Personal Data Lock or Infrared transmission once locks are canceled or transmission ends. Select Information to view content.

#### Note

- When one or more Alarms are set to the same time, alarm sounds in the order of : "Alarm" → "Timer Recording" → "Tasks" → "Calendar" → "Timer Watching"  
 For Tasks and Calendar, "Missed alarm" Information appears.
- If alarms are set for more than one Calendar event, press  [Next] when alarm sounds to toggle Calendar event entries.


## Setting Alarm

Set up to 12 alarms. Alarm tone sounds at the specified time once, everyday or weekly as set.

- appears in Standby when Alarm is set.

### Main Menu ▶ Tools ▶ Alarms

1 Highlight an Alarm → [Edit]

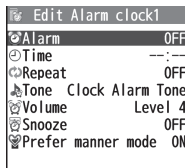

2 Select an item (See below)

Item	Operation/Description
Alarm	Activate or cancel Alarm > <b>ON</b> or <b>OFF</b>
Time	> Set Alarm time
Repeat	> Select a repeat type (→ For <b>Select day</b> , check days →  [Finish])
Tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Volume	>  to set Alarm tone volume
Snooze	When Snooze is set to <b>ON</b> , Alarm tone sounds for 60 seconds, repeating at specified intervals. > <b>ON</b> → Enter number of time Alarm goes off → Enter interval time ● To change ring time or cancel Snooze: <b>OFF</b> → Enter alarm duration

### Item Operation/Description

Prefer manner mode > Set Manner Mode or Alarm priority.  
> **ON** or **OFF**

3 [Finish]

#### Alarm Indicators

- Following indicators appear:

: Repeats daily    : Repeats weekly

#### Cancel & Reactivate Alarm

> In Step 1 (highlight an Alarm), [Menu] → **set this, set all, Release this** or **Release all** → **YES**

- Cancel or reactivate an alarm entry as required.
- Highlight an entry → to reactivate/cancel Alarm.

#### Snooze Function

If **ON**, press any key; Snooze window appears. To cancel Alarm, press .

- In Viewer Position, tap **Stop** to cancel Alarm; Snooze window appears. To cancel Snooze function, tap **End** or press (or ). (While Snooze function is active, backlight does not change to Power Saver mode.)

#### Note


- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (➔ P.12-6).

## Calculator

- Calculates up to 10 digits.

Main Menu ► Tools ► Calculator


Operation	Assigned key
Number (0 - 9)	-
+	
-	
x	
÷	
=	
Decimal point	
%	
Clear	

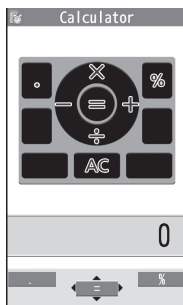

### 13 Tools

#### Example:

-17+28.5=11.5



#### Note

- In Viewer Position, up to three calculation histories appear. Copy and paste calculated results.

## Notepad

Save up to 20 notes.

### Saving a Note


Main Menu ► Tools ► Notepad

#### 1 <Not Recorded>

- Select a saved note to view content.  
 [Edit] to edit.

#### 2 Enter text

- Up to 256 double-byte or 512 single-byte characters can be entered.

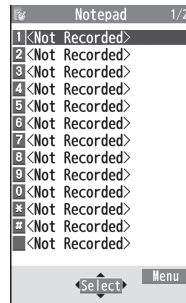










Notepads Window



## Notepad Functions

In Notepad list window, press  [Menu] for following operations.

Item	Operation/Description
<b>Edit</b>	Edit a saved note
<b>Compose message</b>	Insert Notepad text to message (  From Step 2 on P.14-4)
<b>Edit schedule</b>	Copy a note to Schedule to create a Calendar event > <b>Schedule</b> → Save a new note (  From Step 2 on P.13-2)
<b>Add shortcut icon</b>	Create a shortcut (  P.1-21)
<b>Send Ir data</b>	(  P.11-3)
<b>Send all Ir data</b>	(  P.11-3)
<b>IC transmission</b>	(  P.11-5)
<b>AllIC transmission</b>	(  P.11-5)
<b>Copy to microSD</b>	Copy a note to microSD Card > <b>YES</b> ● To display data on microSD Card:  P.10-20
<b>Notepad Info</b>	Display entry date, latest modified date and category of note
<b>Category</b>	> Select a category ● When no category applies, select <b>None</b> .
<b>Delete this</b>	> <b>YES</b>
<b>Delete selected</b>	> Check notes →  [Finish] → <b>YES</b>
<b>Delete all</b>	> Enter Phone Password → <b>YES</b>

## Osaifu-Keitai®

"Osaifu-Keitai®" is a range of IC Card-based services used by Osaifu-Keitai® compatible handsets. Make purchases using e-money or e-ticketing. Hold handset up to a reader/writer to pay for your purchase.

### ■ Osaifu-Keitai® Terms

<b>Osaifu-Keitai®</b>	A contactless IC Card technology to read/write data by holding an IC card up to a reader/writer
<b>IC Card</b>	An IC chip embedded in Osaifu-Keitai®-compatible handsets
<b>Lifestyle-Appli</b>	Applications to use Osaifu-Keitai®. Some applications are preinstalled.

### Precautions

- Data saved in IC Card vary by service content and usage history. Procedures to delete IC Card data vary by Lifestyle-Appli. Contact Osaifu-Keitai® service providers for details.
- SoftBank is not liable for damages from accidental loss or alteration of IC Card data or settings.
- IC Card data can be misused if your Osaifu-Keitai® compatible handset is lost or stolen. SoftBank is not liable for any resulting damages.
- Downloading Lifestyle-Appli and using applications may incur high packet transmission charges.

## Getting Started

### Downloading Lifestyle-Appli

Download Lifestyle-Appli via Internet website.

### Registration/Settings

Activate Lifestyle-Appli to complete registration or customize settings.

- Make deposit into account, check payment records or balance, etc.

#### Note

- Keep a copy of service passwords/customer service contact, etc. in a separate place.

## Downloading Lifestyle-Appli

Main Menu ► Tools ► Osaifu-Keitai ► Lifestyle-Appli

1 **Download** → YES

2 Select a Lifestyle-Appli

- Lifestyle-Appli is saved to Data Folder.

#### Note

- Alternatively, **Main Menu ► S! Appli ► Osaifu-Keitai ► Lifestyle-Appli ► Download ► YES**  
or **Main Menu ► Data Folder ► Lifestyle-Appli ► Download ► YES**

## Activating Lifestyle-Appli

- Lifestyle-Appli cannot be activated during a call or while another S! Appli is active.

Main Menu ► Tools ► Osaifu-Keitai ► Lifestyle-Appli

1 Select a Lifestyle-Appli

2 To exit,  → **Stopped**


#### Note


- Alternatively, **Main Menu ► S! Appli ► Osaifu-Keitai ► Lifestyle-Appli ► Select a Lifestyle-Appli**  
or **Main Menu ► Data Folder ► Lifestyle-Appli ► Select a Lifestyle-Appli**

## Reader/Writer Transactions



- Complete registration/settings and charge your account beforehand.
- There is no need to activate a Lifestyle-Appli during transaction.

### 1 Hold logo up to reader/writer

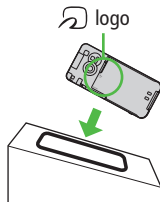- When IC Card Notification Light ( P.18-10) is **ON**, Notification Light illuminates.
- Hold handset parallel to reader/writer.  
Try moving handset around if recognition is slow.
- Check scan result on reader/writer display.
- Osaifu-Keitai<sup>®</sup> can be used during a call or Internet transmission. (May require extra time.)



### Note


- Data may be unreadable if a metal object, etc. is between  logo and reader/writer.
- Even though Osaifu-Keitai<sup>®</sup> is available while handset is off, Lifestyle-Appli does not activate. However, if battery is left uncharged after warning tone sounds, Osaifu-Keitai<sup>®</sup> may become disabled. Charge battery beforehand.
- When handset is held up to reader/writer, handset may show a message or vibrate depending on service. S! Appli, Messaging or Internet may also activate automatically. To avoid such cases, set the functions not to activate during transactions ( P.18-25).

## IC Card Lock

### Activating IC Card Lock

<Default> OFF

- While set,  appears in Standby.

1 Press and hold  → Enter Phone Password

- To unlock, repeat operation.

#### Note

- Alternatively, **Main Menu** ▶ **Tools** ▶ **Osaifu-Keitai**  
▶ **IC Card Settings** ▶ **IC Card Lock**  
or **Main Menu** ▶ **Settings** ▶ **Security** ▶ **IC Card Lock**

## Remote Lock



<Default> OFF

- Save up to three phone numbers to enable Remote Lock.

**Main Menu** ▶ **Tools** ▶ **Osaifu-Keitai** ▶ **IC Card Settings**  
▶ **Remote Lock**

1 Enter Phone Password → **ON**

2 Select an item (See below)

Item	Operation/Description
<b>Numbers to Permit</b>	Save numbers to activate Remote Lock > <Not Recorded> → Enter phone numbers →  [Return] • To save numbers from Phone Book/Incoming Call Logs or to use a payphone number:  [Menu] → <b>Refer to</b> or <b>Payphone</b>
<b># of Incoming Call</b>	Specify the number of incoming calls for activating IC Card Lock > Enter a number

3 [Set]

#### Note

- Alternatively, **Main Menu** ▶ **S! Appli** ▶ **Osaifu-Keitai**  
▶ **IC Card Settings** ▶ **Remote Lock**

## Activating Remote Lock

- ① Call 942P from one of the specified numbers (Send Caller ID)
- ② Hang up after 942P receives the call
- ③ Repeat ①-② until specified number of incoming calls is reached (within three minutes)
  - After specified number of incoming calls, IC Card Lock is set and a message informs you IC Card Lock is activated.

### Note

- When setting IC Card Lock, call 942P from the same specified phone number. Incoming calls from different phone numbers cannot be counted.
- Specified incoming calls may not be counted when Call Forwarding is active.
- Remote Lock is not available when ring time for Answer Phone is set to 0 or Driving Mode is active.
- When Answer Phone activates, counted number of incoming calls are reset.

## Dictionary (Japanese)

Use ケータイTOOL<辞書> to access dictionaries (学研 辞スバ英和・和英辞書 and 学研 国語辞書).

- ケータイTOOL<辞書> is an S! Appli.

### Main Menu ▶ Tools ▶ Dictionary



#### 1 Read 免責 (disclaimer) → OK

ケータイTOOL<辞書> activates.

- To disable 免責:  
Uncheck アプリ起動時に常に表示する。(Always show disclaimer when accessing dictionaries)

#### 2 → Enter a word

Search results appear.



- To scroll pages: 
- To switch dictionaries: (1)/(3)
- To search again: [戻る]

#### 3 Select a word

Definition appears.

#### 4 To end, → Stopped

### Note

- While Dictionary application is active, press [メニュー] for useful functions.
- Word search is available while composing messages or viewing sent/received messages or website contents ( P.14-9, P14-24, P.15-14).

# Sound Recorders

## Voice Recorder

Set recorded sounds for ringtones.

- Record for about 60 seconds each.

Main Menu ► Tools ► Sound Recorders ► Voice Recorder

### 1 **YES**

Recording starts.

### 2 [Stop] / / (→ **OK**) to stop recording

Recorded sounds are saved in Ring Songs&Tones folder.

## Voice Announce

Set recorded sound for on hold tone/holding tone, Alarm, Calendar event alarm, Tasks alarm, ringtones, Answer Phone message, Timer Watching (Digital TV), Ring Songs&Tones Play List.

- Record only one item for about 15 seconds.
- Select **Voice Announce** in individual window to set Voice Announce as specific tone.

Main Menu ► Tools ► Sound Recorders ► Voice Announce

### 1 **Record**

Recording starts.

Tone beeps five seconds before recording ends.

### 2 [Stop] to end recording

Tone beeps twice and previous screen returns.

- To play back: **Play**
- To delete: **Erase** → **YES**

## Bar Code Reader

Scan barcodes (JAN) or QR Codes with built-in camera.  
Access websites, send messages, etc. from QR Codes.

### JAN Codes

JAN Code is a one-dimensional bar code denoting numerals with bars and spaces of different widths.

### QR Codes

QR Code is a two-dimensional bar code containing information.

Example: SoftBank mobile phones



## Scanning Barcodes

- Up to five items can be saved.
- For split data, up to 16 QR Codes can be scanned at a time and saved as one item.

Main Menu ► Tools ► Bar Code Reader ► Scan Barcodes

- 1 Frame barcode in the center of Display
  - To adjust Display brightness: [Menu] → **Brightness** → Adjust to -3 (dark) - +3 (light)
  - To zoom:
  - To use Focus Lock:

### 2 [Start]

Scanning starts, and scanned results appear when completed.

- For split data, **OK** → Repeat Step 1 and 2
- To use scanned data: Step 2 on P.13-16

### 3 [Menu] → **Save result** → **OK**

- To start over: → **YES**

#### Note

- Handset cannot read barcodes or two-dimensional codes other than JAN/QR Codes.
- Some barcodes may be unreadable.
- Barcode recognition may be slow. Hold handset steady while scanning.
- Barcodes may not be correctly read owing to scratch, dirt, damage, quality of printed material, light reflection, or QR code version.

## Viewing/Editing Scanned Data

Main Menu ► Tools ► Bar Code Reader  
► Saved Data List

### 1 View

Select an item

### Edit Title

Highlight an item → [Menu] → **Edit title** → Edit

### Delete Saved Data

> In Step 1, (highlight an item → [Menu] → **Delete** → **Delete this** or **Delete all** (→ For **Delete all**, enter Phone Password) → **YES**

## Using Scanned Data

Main Menu ► Tools ► Bar Code Reader  
► Saved Data List

### 1 Select an item

### 2 [Menu] → Select an item (See below)

Item	Operation/Description
<b>Save result</b>	Save scanned results
<b>Display list</b>	Display Saved Data List
<b>Internet</b>	Access website > <b>Yahoo! Keitai</b> or <b>PC Site Browser</b> → <b>YES</b> ● Alternatively, select the URL.
<b>Compose message</b>	Insert address to message recipient field ( From Step 4 on P.14-5) ● Alternatively, select the address.
<b>Dialing</b>	Call selected phone number > Select a dialing method → <b>Dial</b> ● Alternatively, select phone number.
<b>Add to Phone Book</b>	Save scanned results to Phone Book ( From Step 2 on P.4-5)
<b>Add bookmark</b>	Save URL to Bookmark > <b>YES</b> →  [OK]
<b>Copy</b>	Copy selected characters to another place ( From Step 2 on P.3-9)



# Pedometer

Use Pedometer to track distance walked or calories/fat burned.

## Notes

- Set Date and Time to use Pedometer.
- Place handset in a pocket or compartment when carrying in a bag.

## Using Pedometer

- Accurate results are obtained when steps are counted based on a fixed pace (100 to 120 steps per minute).
- Accuracy may be affected by walking style or other factors. Use Pedometer only as a rough indication.
- Steps are not counted for first few steps or after walking pace is changed. Pedometer starts counting after 10 steps or more.
- Steps are not counted while handset is off or software is being updated.
- Steps are not counted:
  - when bag swings against you, resulting in handset hitting your leg/waist; or any other irregular swinging movements (handset dangling from bag or pocket).
  - when walking slowly or dragging feet
  - during sports activities or jogging

## Activating/Deactivating Pedometer

<Default> OFF

### Main Menu ► Tools

#### 1 Pedometer


Pedometer window appears.

#### 2 [Σ?][Menu] →

**Pedometer setting → ON**

Counting starts.

- To stop: **OFF**

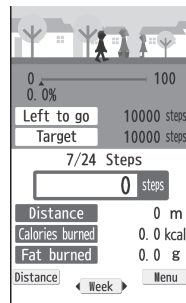

Pedometer Window


### Operations in Pedometer Window


Show Previous/Next Day	● View previous week/month or next week/month data while week/month view is open.
Toggle Daily/Weekly/Monthly	● Toggle: Day → Week → Month
Toggle Information	● Toggle: Steps → Distance → Calories → Fat
Toggle Views	● In week/month view, toggle: Text → List → Graph

**Note**

- Data is updated each time Pedometer window opens. While Pedometer window remains open, data is not updated.
- Pedometer record is saved every 15 minutes.
- Steps taken between 0:00 and 23:59 are recorded as that day's record. Handset saves up to 92 records.
- Pedometer record cannot be reset even when Pedometer setting is set to **OFF**. Set to **ON** to resume counting.

## Pedometer Functions

In Pedometer window, press  [Menu] for following operations:

Item	Operation/Description
<b>Pedometer setting</b>	Activate/deactivate Pedometer > <b>ON</b> or <b>OFF</b>
<b>User setting</b>	Set weight and stride length. User information is used to calculate distance walked and calories/fat burned. > Enter weight → Enter stride length
<b>Target steps</b>	Set target steps per day > Enter target steps
<b>Delete all records</b>	> Enter Phone Password → <b>YES</b>
<b>Add shortcut icon</b>	Add shortcut to Standby (  P.1-21)

**Note**

- Entering target steps will automatically calculate other target values.